
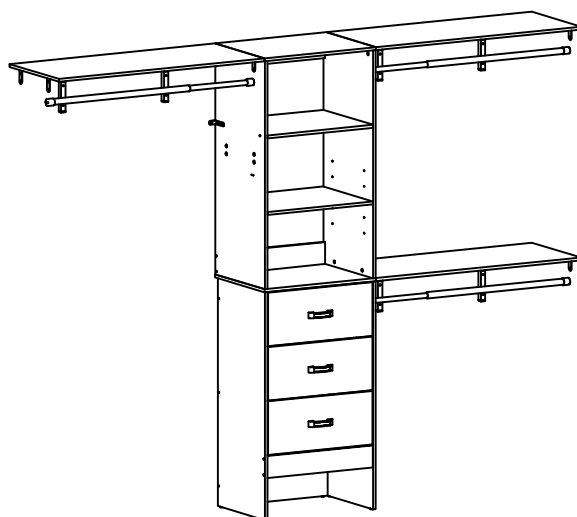


CLOSET SYSTEM


Assembly Instructions

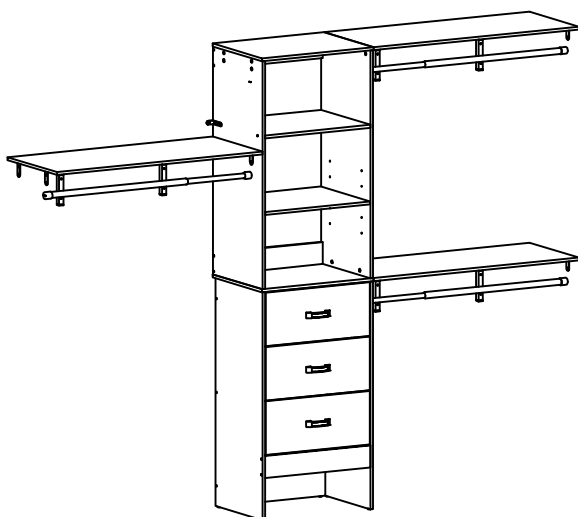










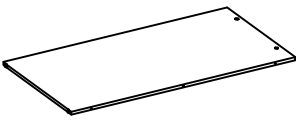


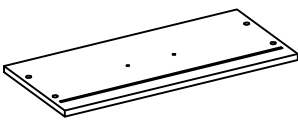




Attention: Please ensure you have all parts before commencing assembly.
Please read all the instructions before commencing.

Have problems when installing or missing parts?

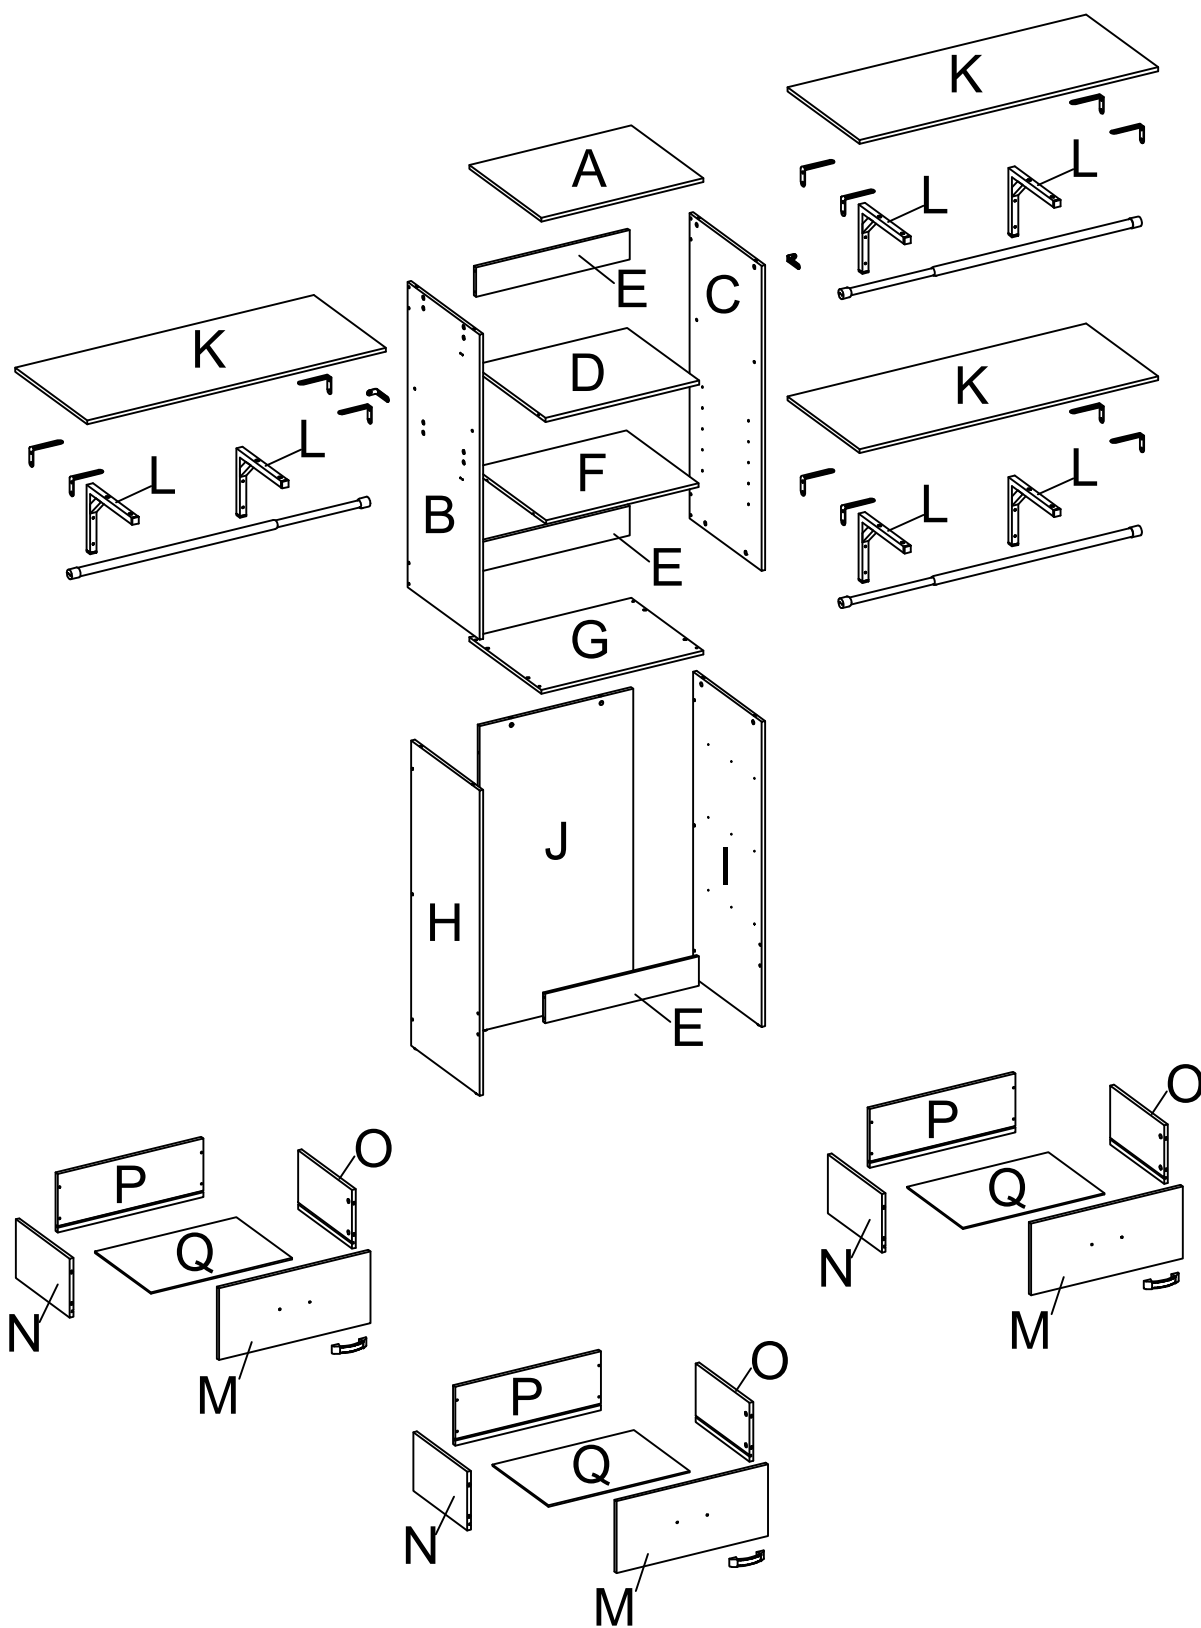


















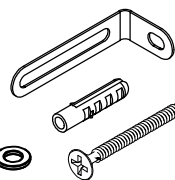







PART LIST



PART LIST

A x 1pc 	B x 1pc 	C x 1pc 	D x 1pc 
E x 3pcs 	F x 1pc 	G x 1pc 	H x 1pc 
I x 1pc 	J x 1pc 	K x 3pcs 	L x 6pcs 
M x 3pcs 	N x 3pcs 	O x 3pcs 	P x 3pcs 
Q x 3pcs 			

HARDWARE LIST


<p>①</p>  <p>M6x28 26 pcs</p>	<p>②</p>  <p>Ø12 26 pcs</p>	<p>③</p>  <p>M6x40 22 pcs</p>	<p>④</p>  <p>M4x30 12 pcs</p>
<p>⑤</p>  <p>M6x30 4 pcs</p>	<p>⑥</p>  <p>M3x12 36 pcs</p>	<p>⑦</p>  <p>Ø6x20 4 pcs</p>	<p>⑧</p>  <p>M4x16 6 pcs</p>
<p>⑨</p>  <p>3 pcs</p>	<p>⑩</p>  <p>M6x27 12 pcs</p>	<p>⑪</p>  <p>1 pc</p>	<p>⑫</p>  <p>M6x10 12 pcs</p>
<p>⑬</p>  <p>12 pcs</p>	<p>⑭</p>  <p>M4x12 24 pcs</p>	<p>⑮</p>  <p>3 pcs</p>	<p>⑯</p>  <p>3 pcs</p>
<p>⑰</p>  <p>3 pcs</p>	<p>⑱</p>  <p>M4x40 12 pcs</p>	<p>⑲</p>  <p>M4x60 12 pcs</p>	<p>⑳</p>  <p>M4x40 2 pcs</p>
<p>㉑</p>  <p>3 pcs</p>	<p>㉒</p>  <p>3 pcs</p>	<p>㉓</p>  <p>3 pcs</p>	<p>㉔</p>  <p>3 pcs</p>
<p>㉕</p>  <p>M4x40 6 pcs</p>	<p>㉖</p>  <p>M4x12 6 pcs</p>	<p>㉗</p>  <p>M4 1 pc</p>	

Please count and verify all parts before assembly .

How to install Camlocks


Connect the male camlock as directed in the assembly instructions with a screwdriver.

1 DO NOT OVER TIGHTEN

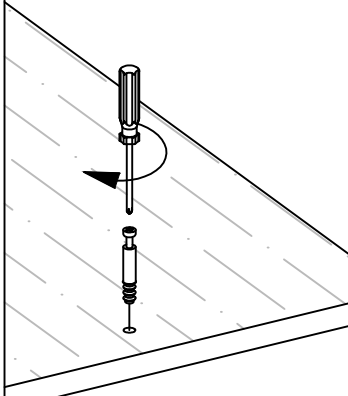

Put the male camlock into the entry hole.


2

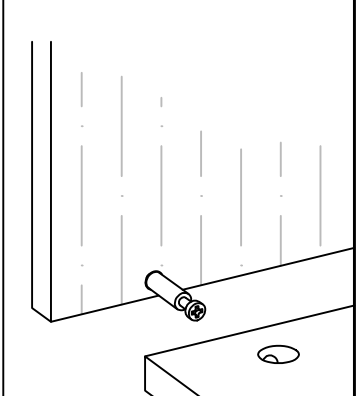

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

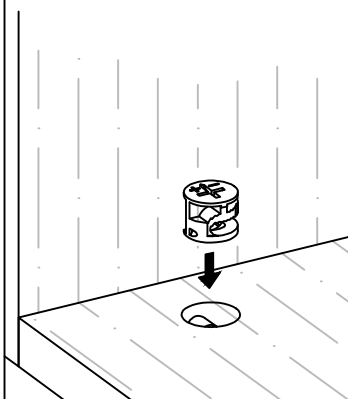


Screw the female camlock clockwise with a screwdriver.




You will feel a click when the camlock is locked in place.

The camlock is now completed.



4

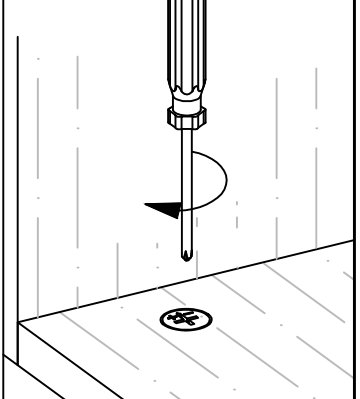

STEP 1

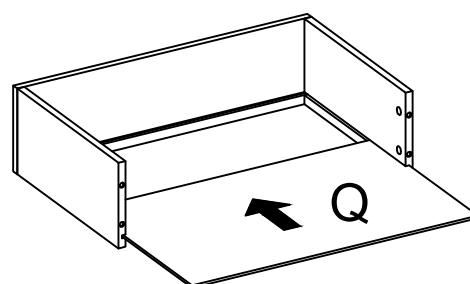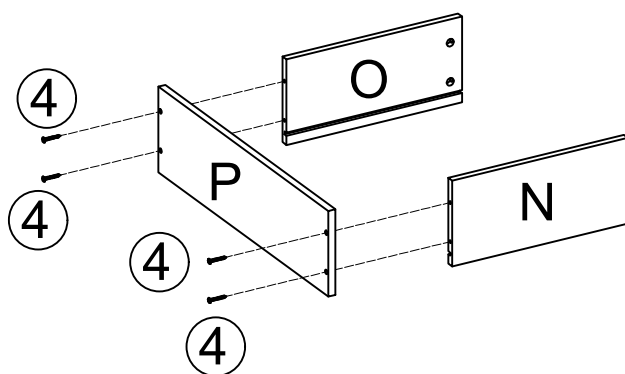

STEP 2

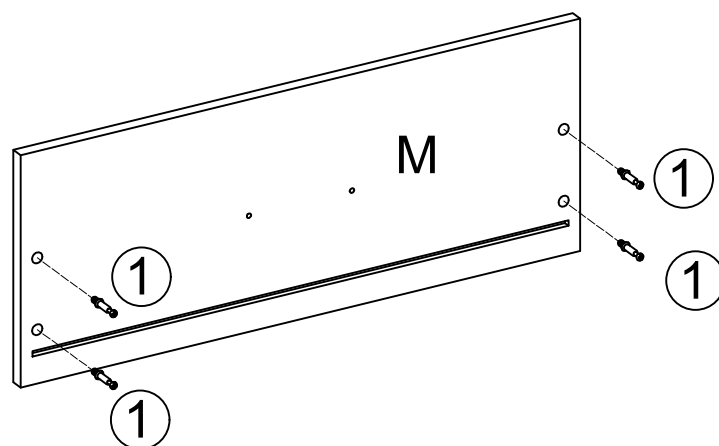


STEP 3

2



x4

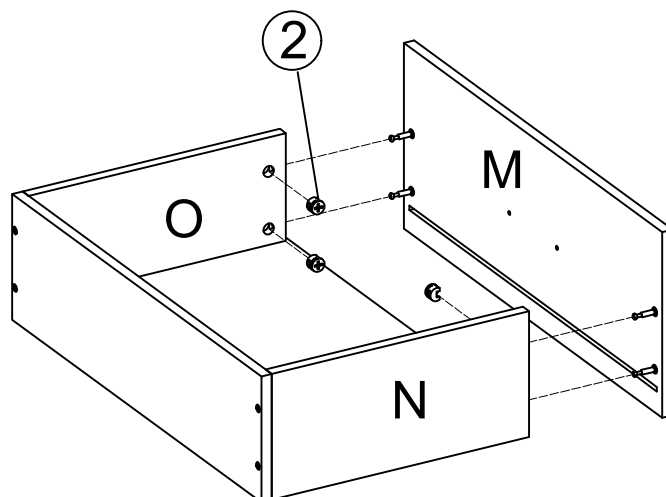

STEP 4

6



x6

22





x1


24



x1

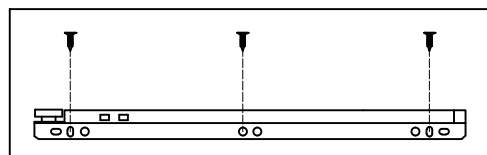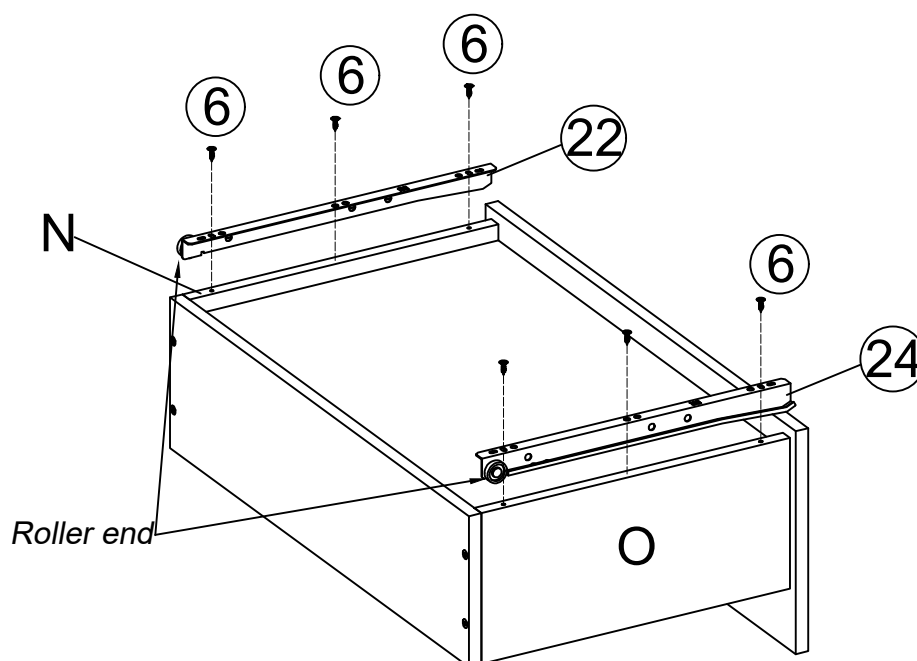

STEP 5

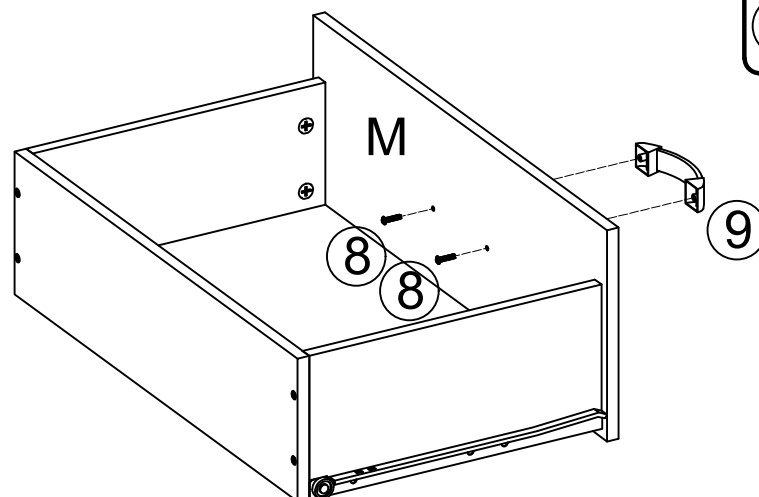


8 x2

9 x1

NOTICE:

The installation for all the three drawers is base on the five steps above.


STEP 6

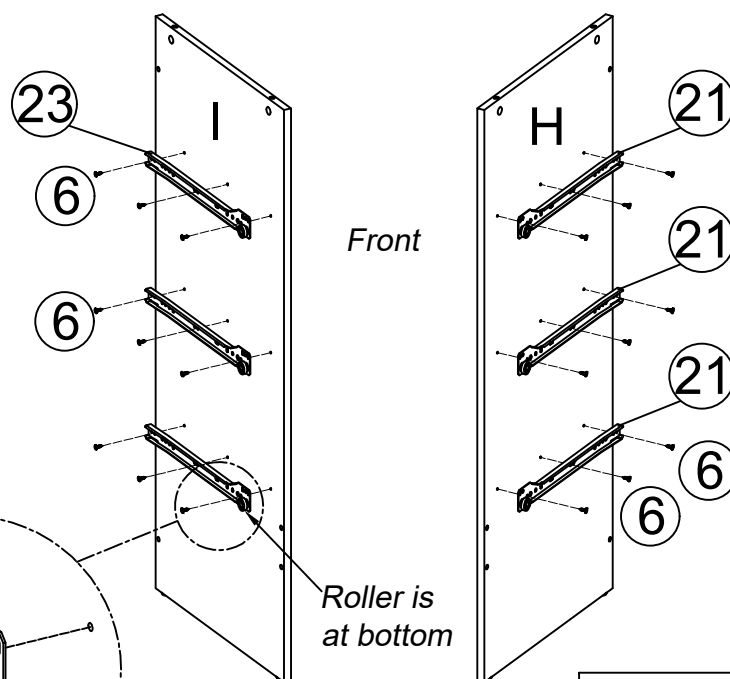

6 x18


21 x3

23 x3

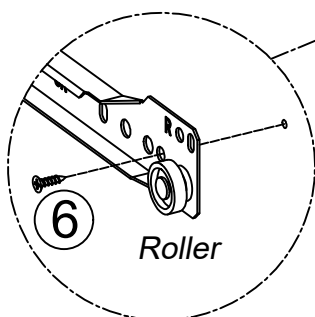


Roller

Roller is at bottom

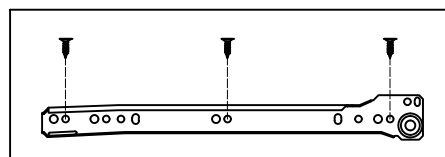


STEP 7

③  x10

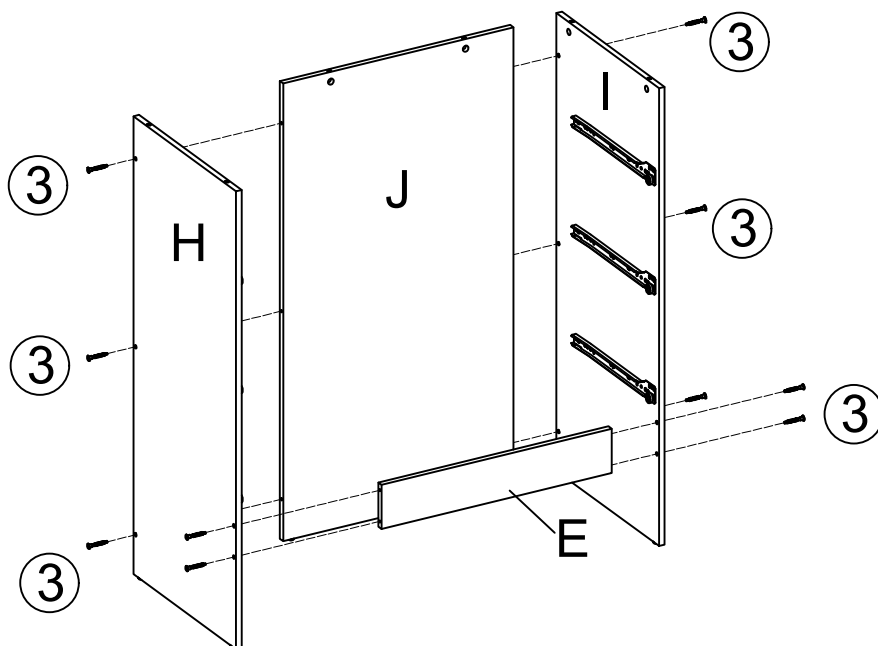

STEP 8

①  x6

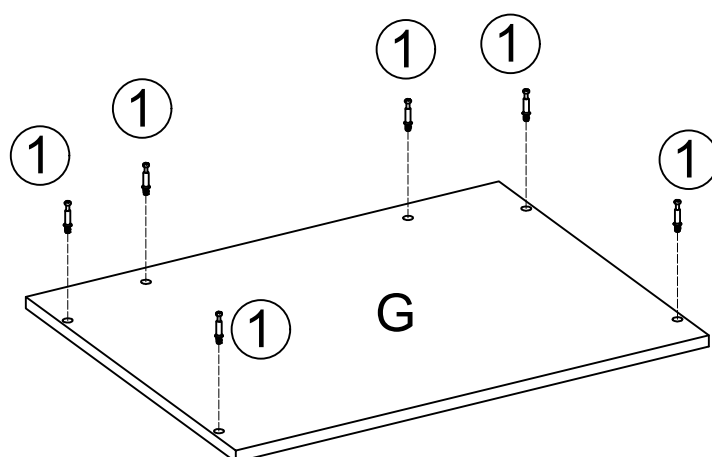


STEP 9

②



x6

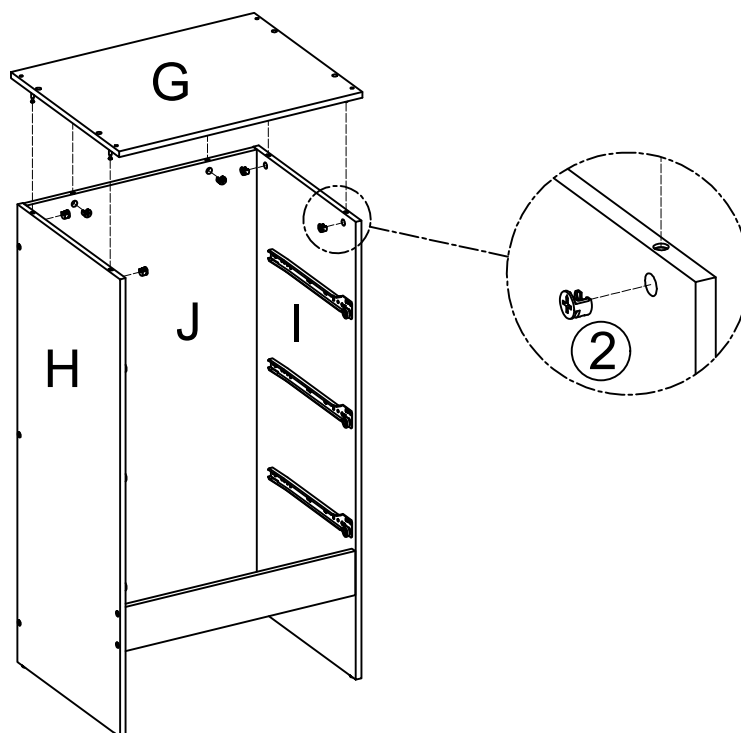


STEP 10



③





x12

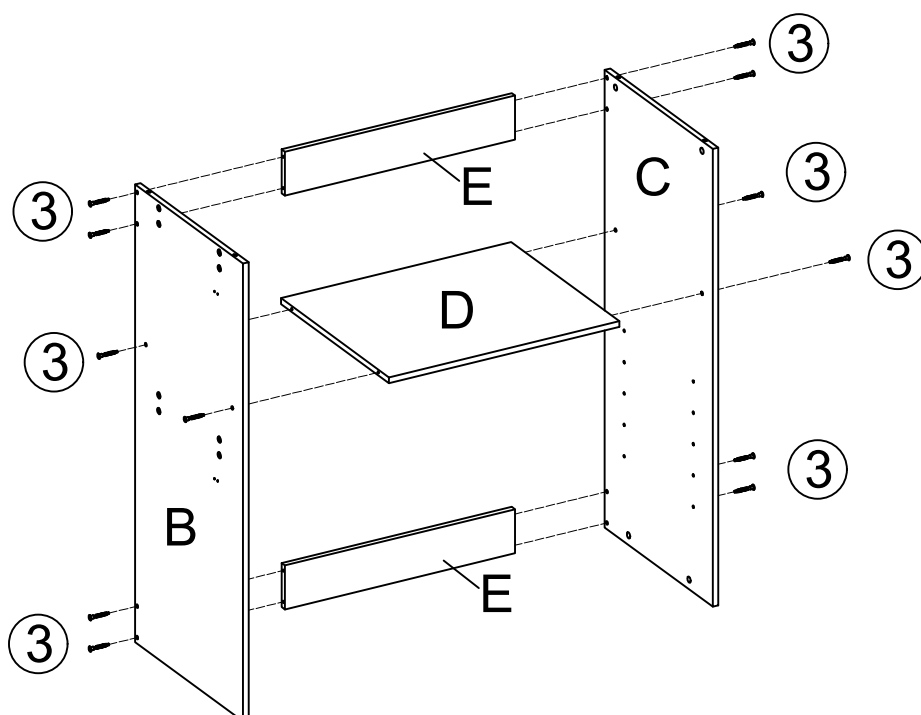



STEP 11

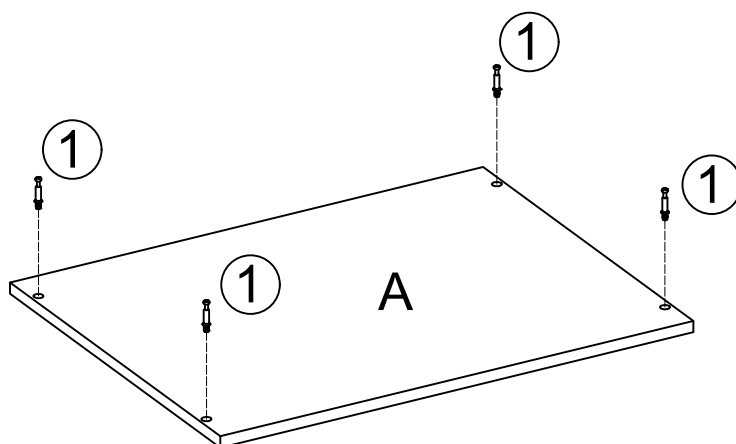




STEP 12

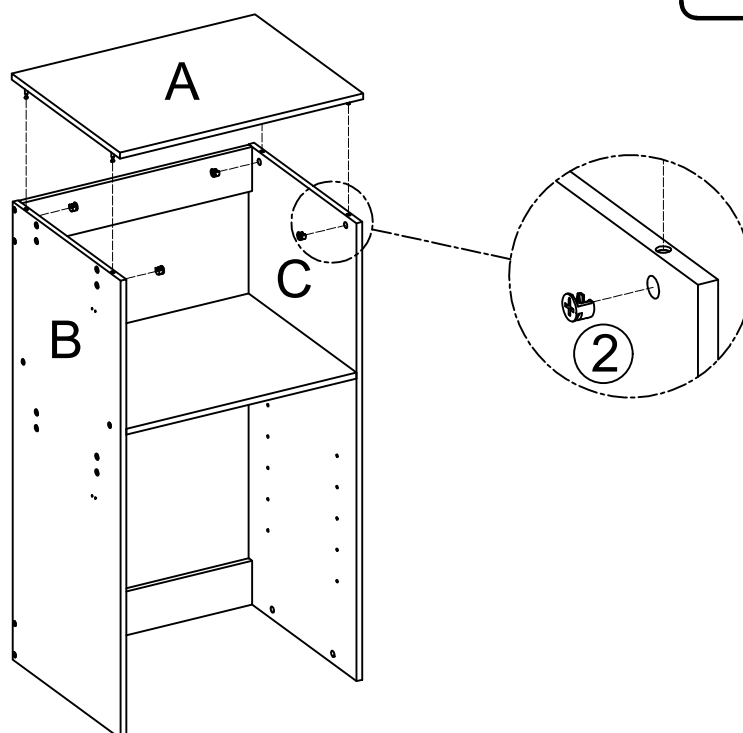


STEP 13

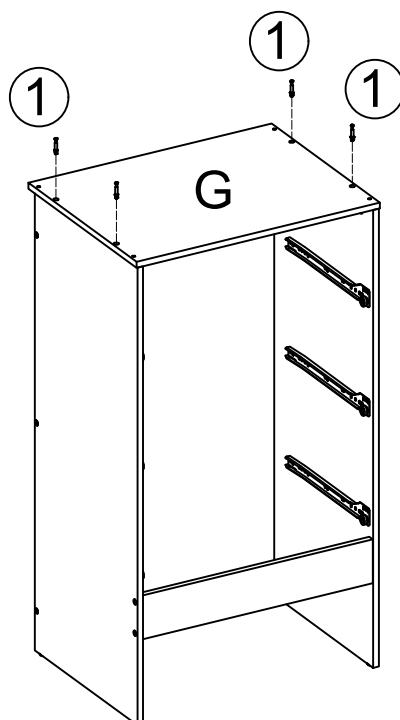


STEP 14

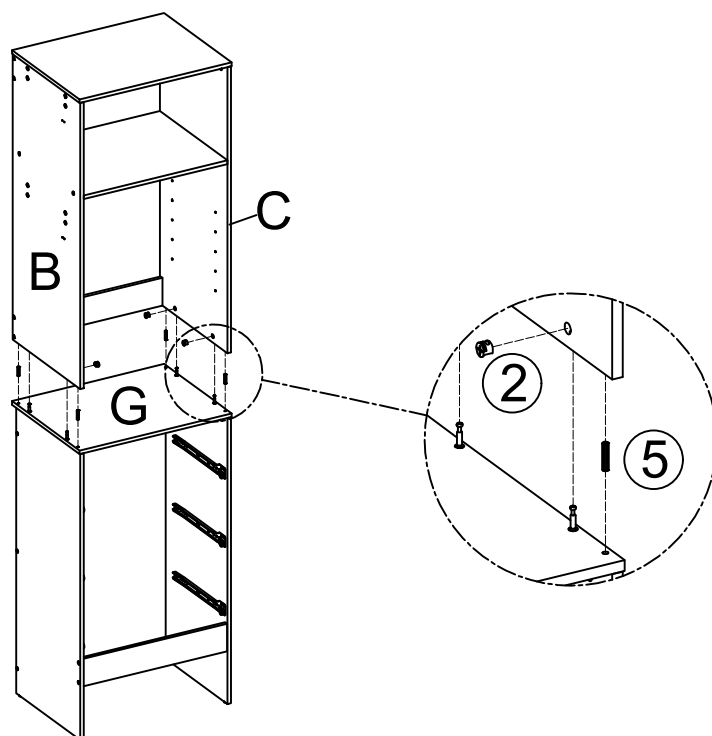


STEP 15




There are 5 heights for the shelf to be adjusted as you need.

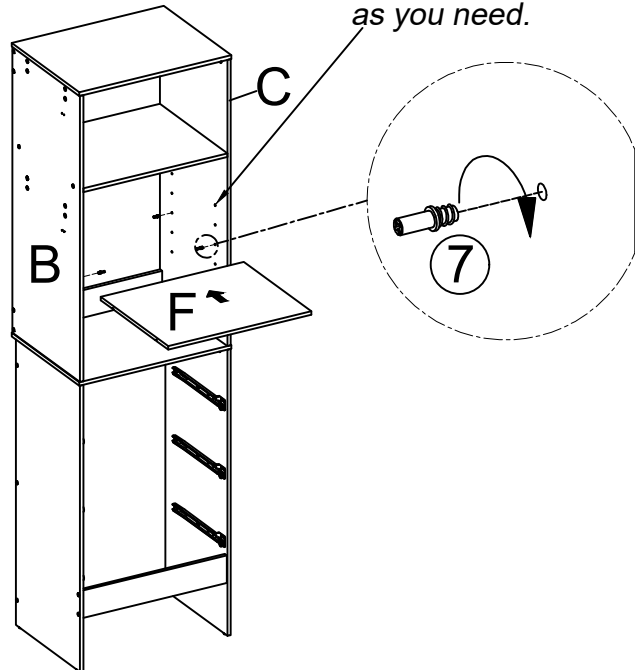

STEP 16

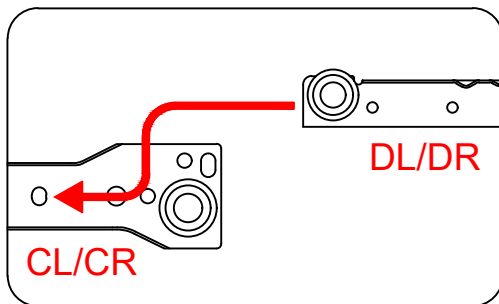


Please put the wheels align with the slots as the instruction shows, then slide into them

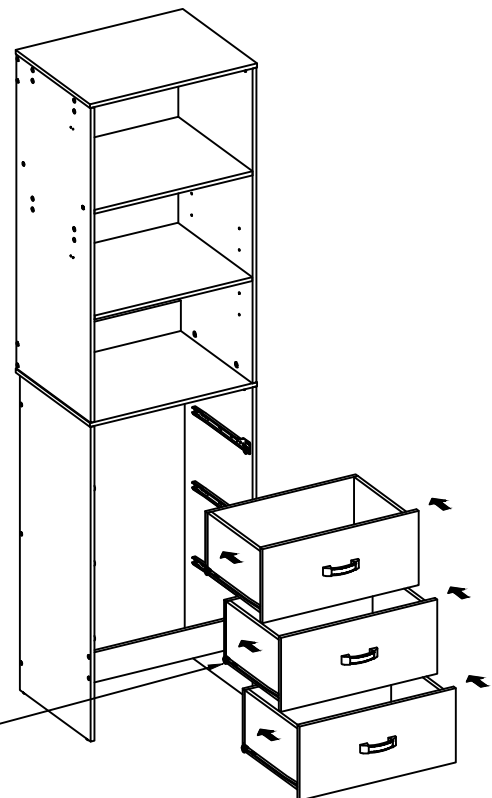


STEP 17

Long Shelf Installation




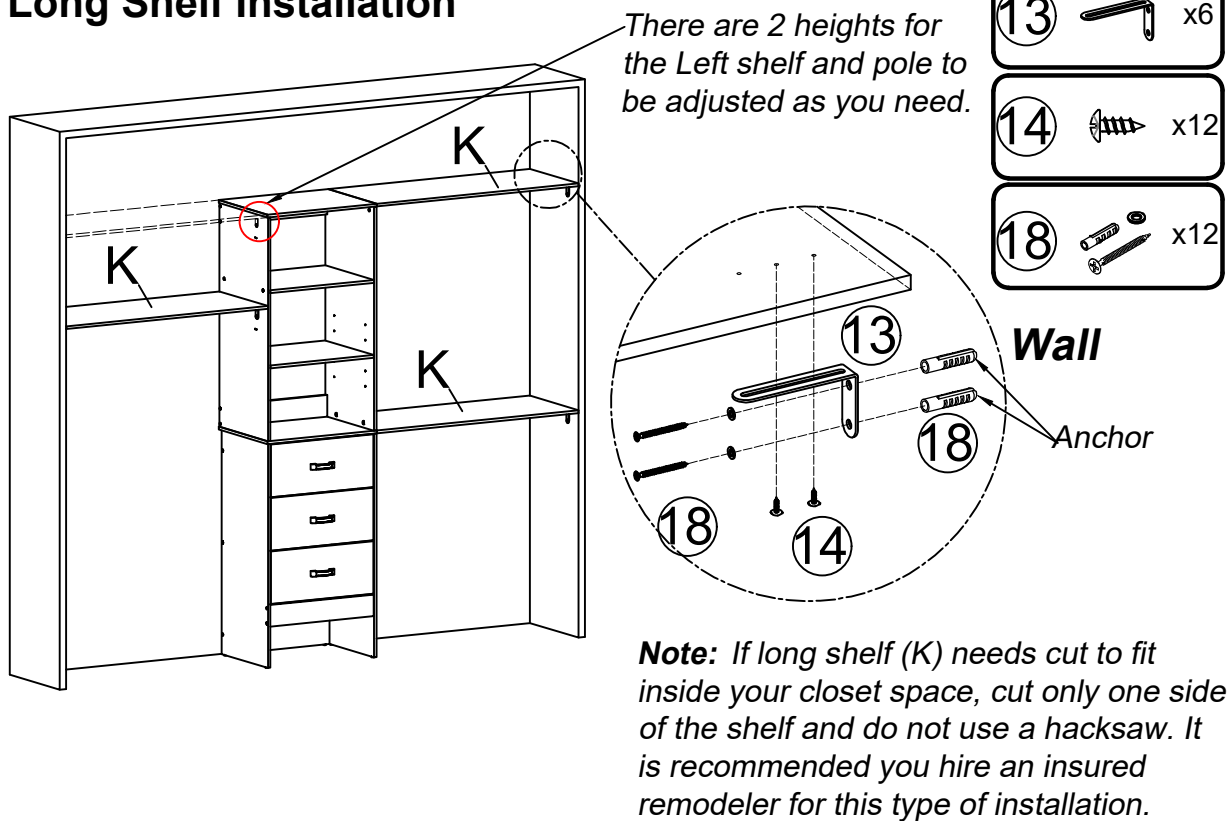


STEP 18

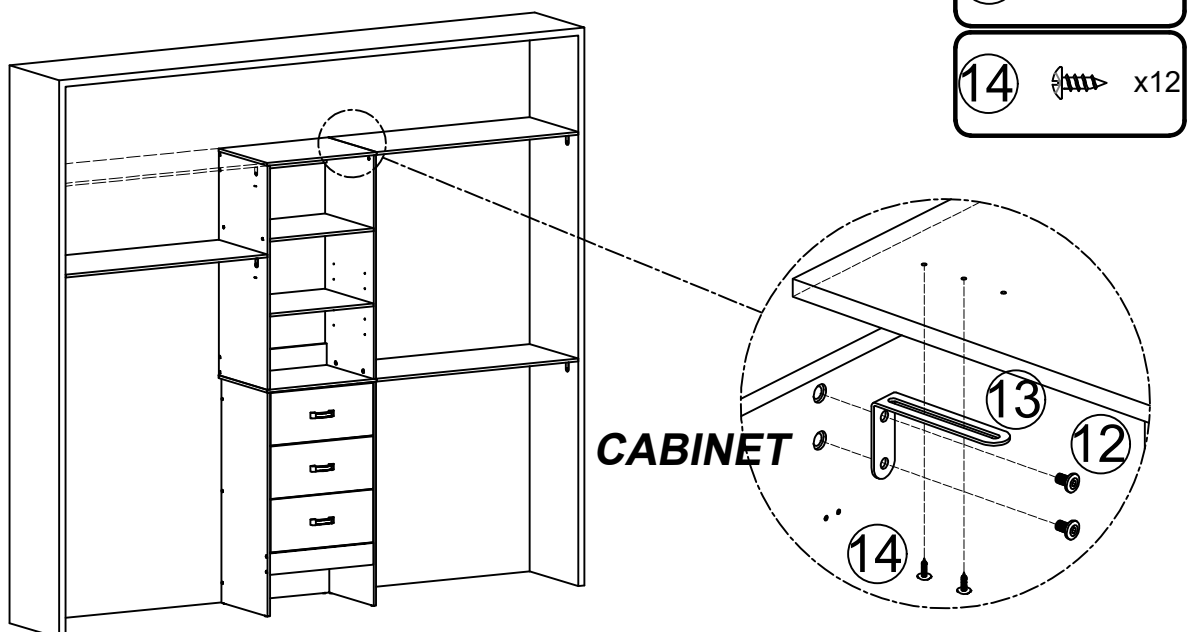


STEP 19

Shelf Support Installation

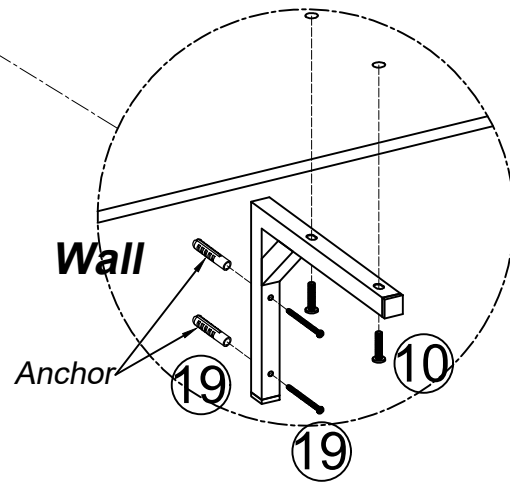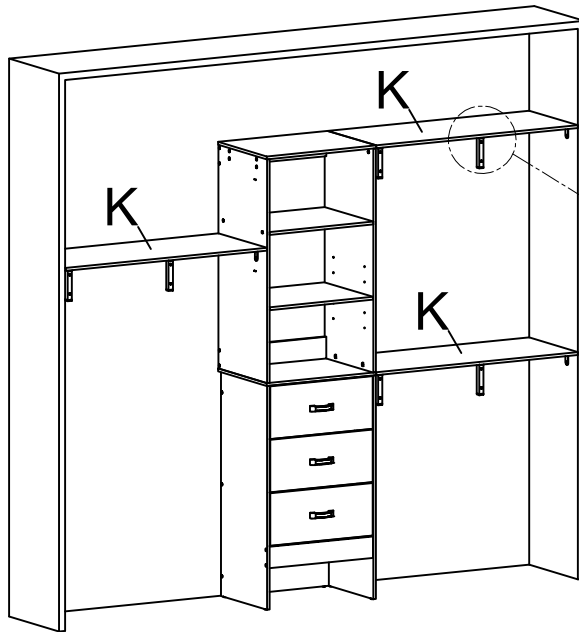


OR

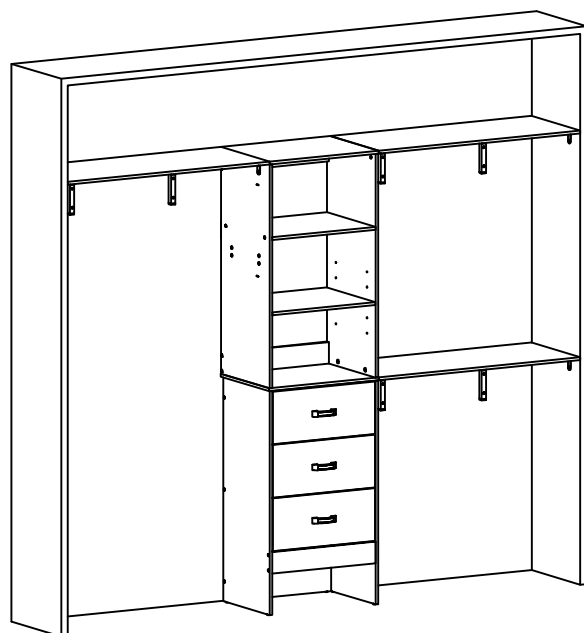


STEP 20

Pole Installation

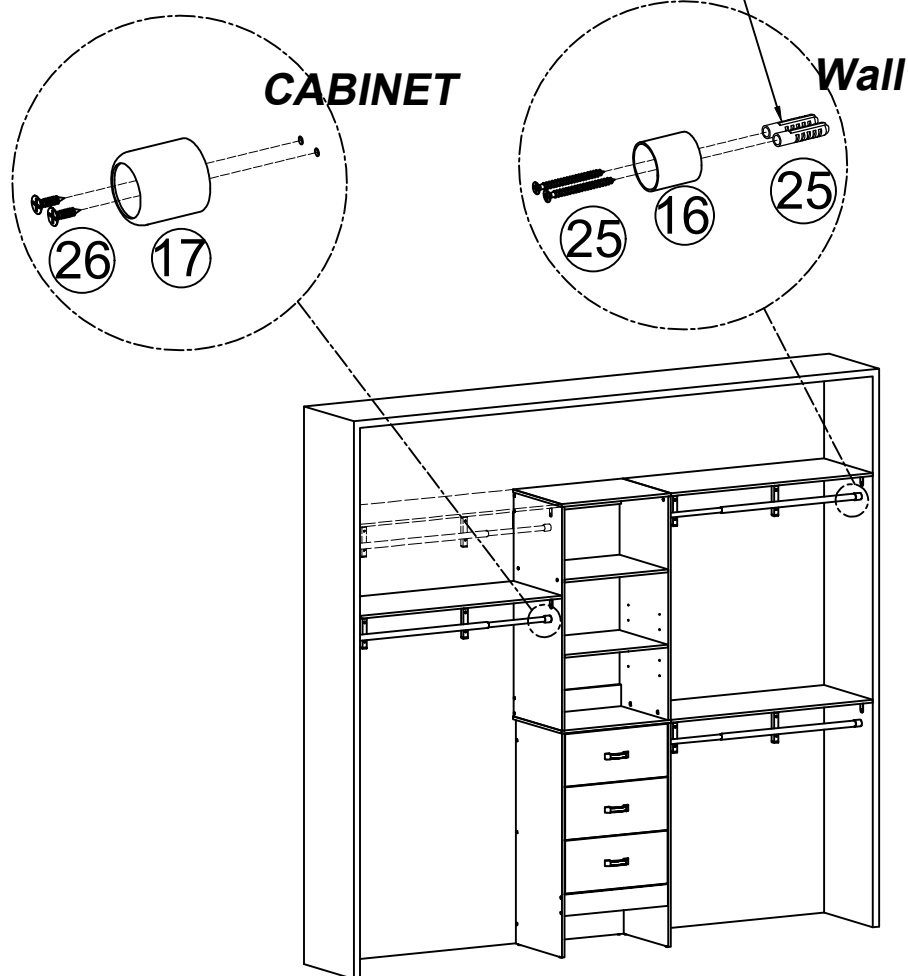


- 15** — x3
- 16** — x3
- 17** — x3
- 25** — x6
- 26** — x6

Note: The Expandable pole can be completely detached as shown.

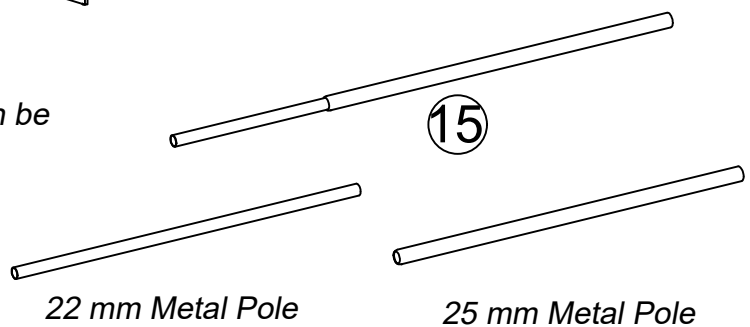


Note: Twist the expandable pole clockwise to tighten. anticlockwise to loosen.

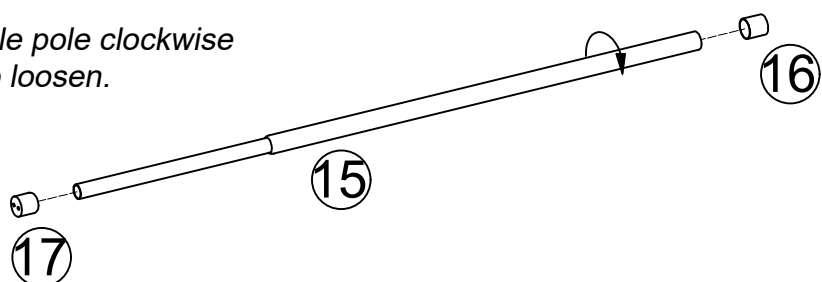

STEP 21

TIPPING RESTRAINT HARDWARE



Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

