


ASSEMBLY INSTRUCTION

SLATBACK CHAIR - PU SEAT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below.

No	Parts List		Qty
A		Chair Back	1
B		Upholstered Seat with Frame	1
C		Left Front Leg	1
D		Right Front Leg	1
E		Left Side Stretcher	1
F		Right Side Stretcher	1


No	Hardware List			Qty
1		Short Allen Bolts	5/16" x 45mm	6
2		Long Allen Bolts	5/16" x 75mm	4
3		Lock Washers	5/16"	10
4		Flat Washers	Ø19/Ø8 x 2mm	10
5		Allen Key	M5 x 65mm	1
6		Wood Screws	Ø8 x 2"	4
7		Glue		1
Tools Required (Not Included)				1
		Phillips Head Screwdriver		

Important Note
Do not use power tool for assembly.
All Bolts must fasten either by wrench or Allen Key




STEP 1 Do not fully tighten the bolts

Lay the chair on the floor on a soft/padded surface. Secure seat frame to the chair back using parts provided in diagram.

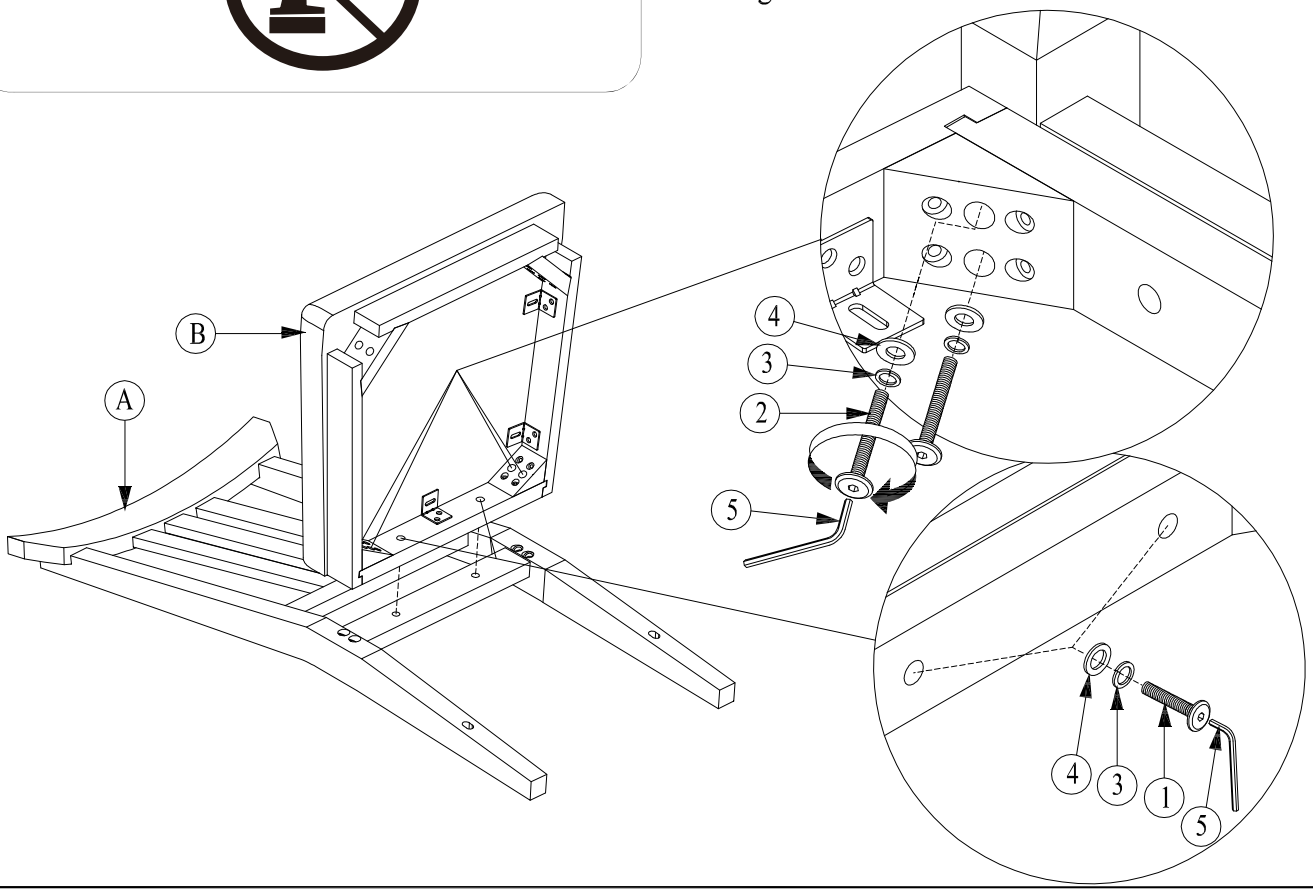


Made in Indonesia


STEP 2: Apply small amount of glue to hole in chair leg.

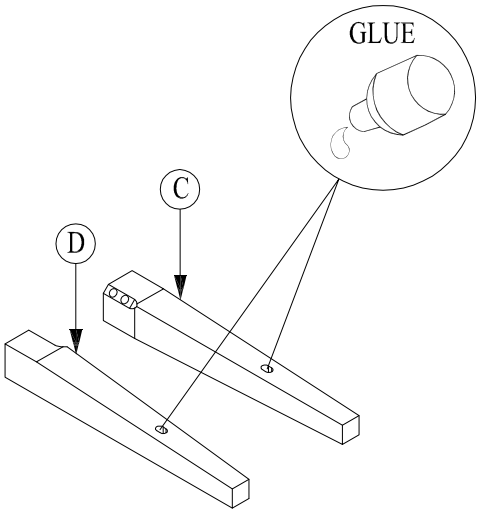


STEP 3: Apply small amount of glue to hole in chair back legs. Insert correct stretcher with holes on underside.

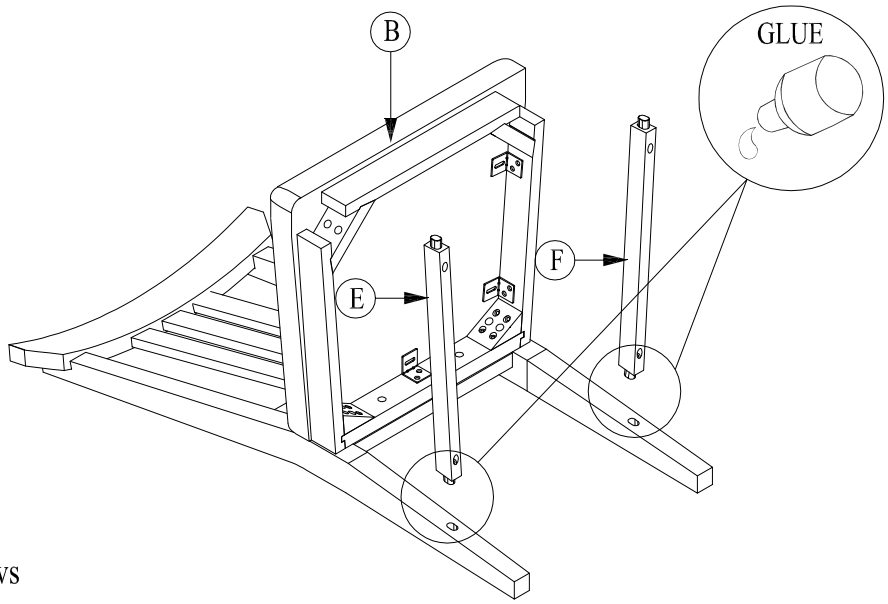



STEP 4: Align front legs and correct to stretcher and chair. Insert bolts and screws per diagram.

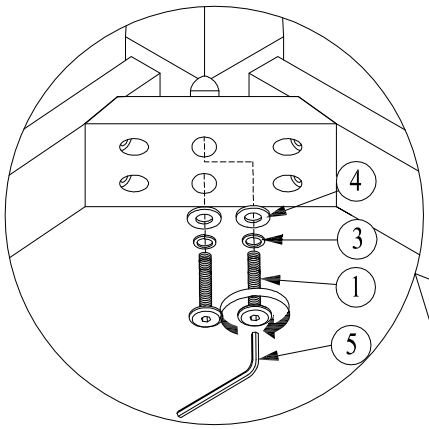

STEP 5: Screw in screws in stretcher bar

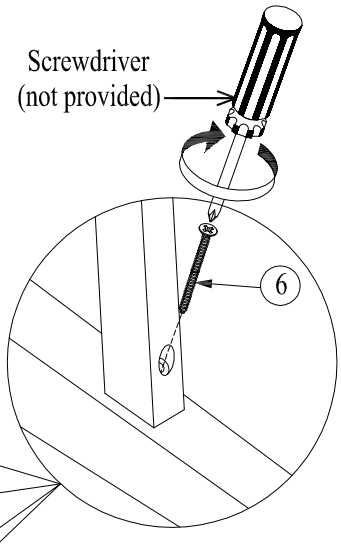

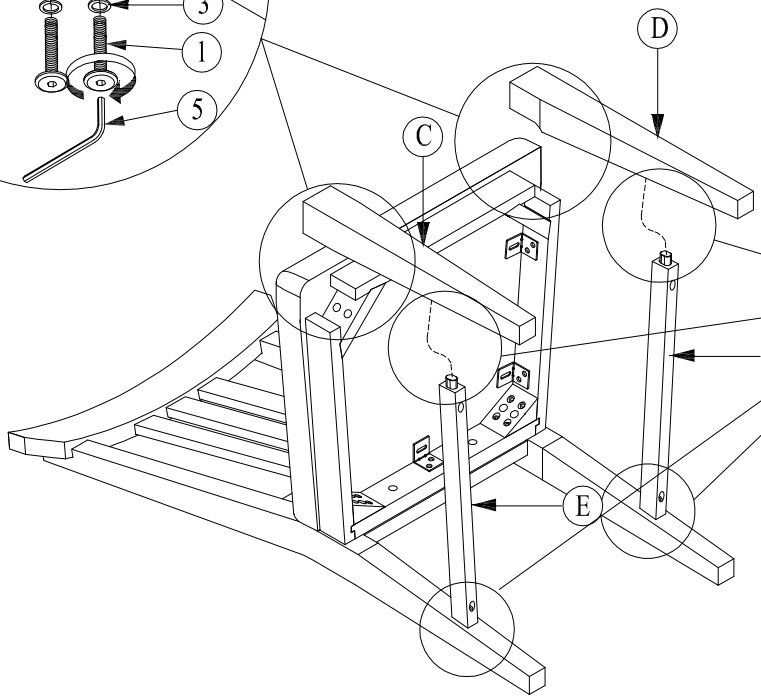

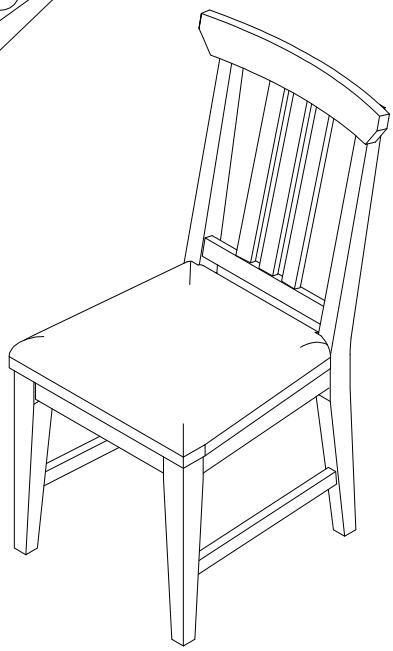

Levelling solution: Loosen each bolt in the seat box (front legs, back corner blocks and back apron) to the point where it can be turned with our fingers. Place the Chair upright on the floor and make sure Chair/Stool back and seat frame are well connected. Sit in the Chair/Stool, but do not lean against the Chair/Stool back. Gently sway back and forth, left and right. Carefully turn the Chair/ Stool upside down, and tighten each bolt. The Chair/Stool will now be levelled.

Made in Indonesia