


10 x 14 FT

□ □ □ □ □ □ □ □ □ XWG337BN □ □ □ □ □ □ □ □ □

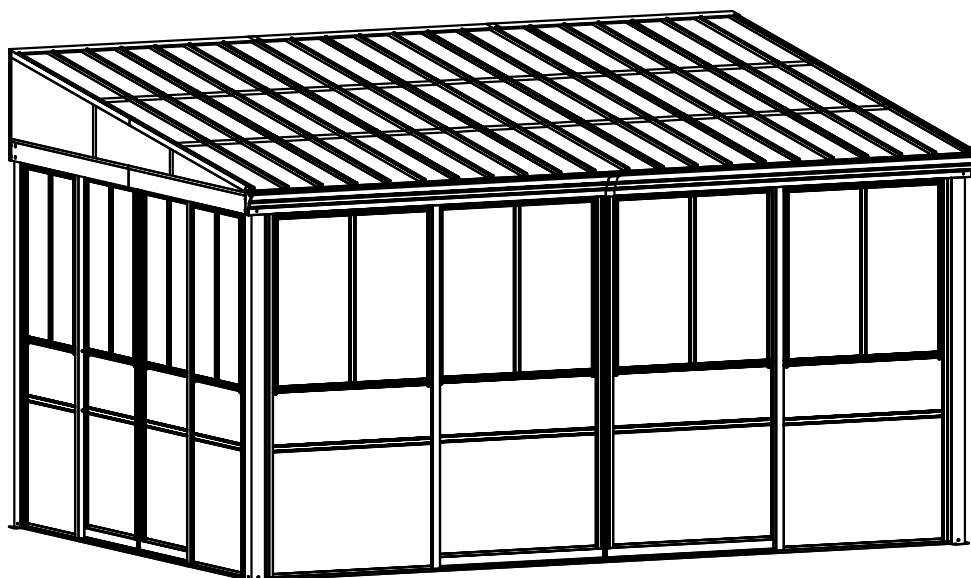


Note: The gazebo needs to be installed in cooperation with five people.
The following tools are not included and needed for assembly:



Pistol Drill



Tape Measure




Hammer




Screwdriver






Ladder



scissor

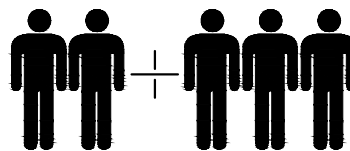

5 people

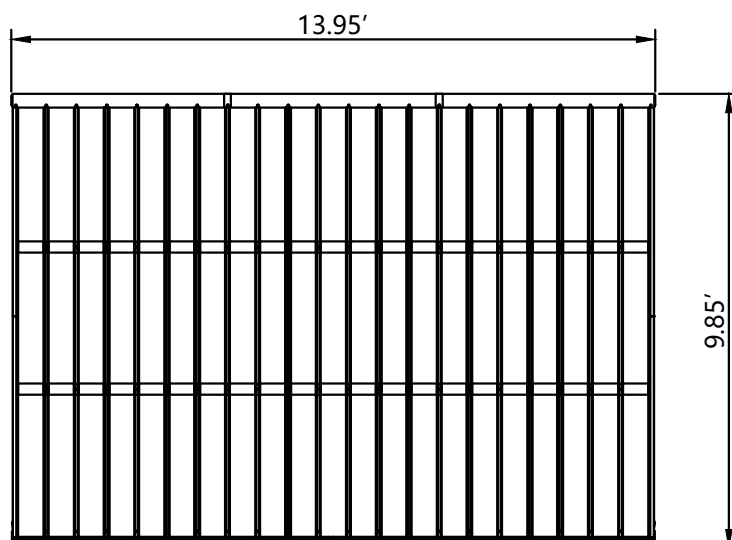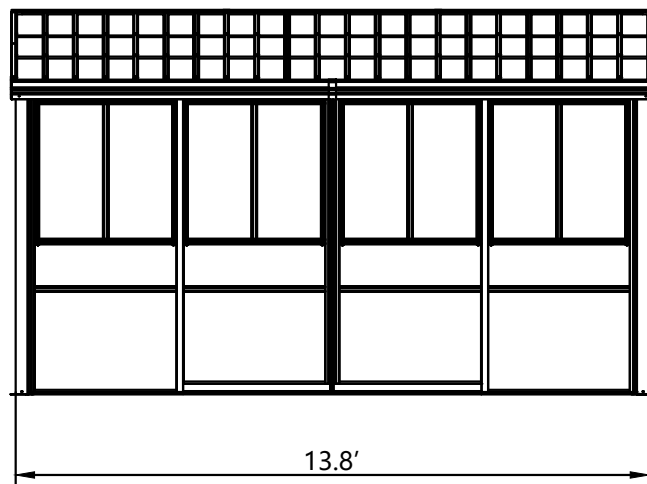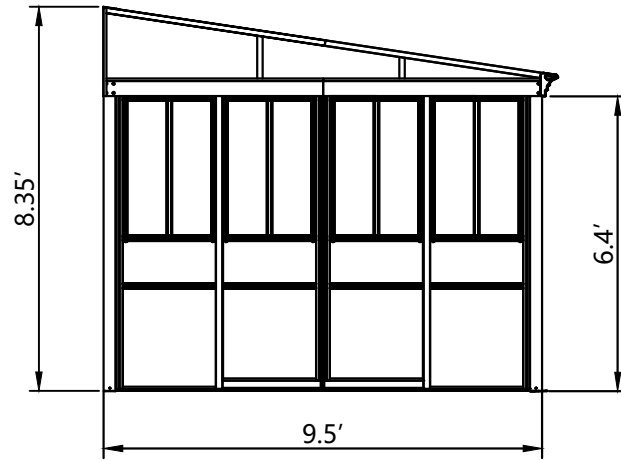



Box A		(F2)	2	(N2)	1																								
Part #	Qty	(1A)	3	(D1)	48																								
(R)	21	(2A)	3	(D2)	96																								
(M1)	1	(B4)	1	(D3)	24																								
(M1-1)	1	(L1)	3	(D4)	12																								
(M2)	1	(I)	2	(D5)	12																								
(M2-1)	1			(2)	14																								
(M3)	1	Box C		(3)	14																								
(M3-1)	1	Part #	Qty	(4)	12																								
(1E)	24	(B7)	2	(24)	1																								
(1G)	12	(B7-1)	2	(Q4)	2																								
(4G)	8	(B8)	1	(Q4-1)	2																								
		(B8-1)	1	(G1)	2																								
Box B		(B4-1)	1	(2P)	4																								
Part #	Qty	(B5)	1	(Y)	80																								
(A1)	1	(B5-1)	1	(20)	80																								
(A1-1)	1	(A3)	1	(5)	1																								
(A2)	1	(A3-1)	1	6.7.8.9.10.11.12 13.14.15.16.17.18 19.21.22.23.25																									
(A2-1)	1	(P)	1	<table><tr><td>AB</td><td>AB</td><td>AC</td><td>BA</td><td>BA</td><td>CA</td></tr><tr><td>AD</td><td>AD</td><td>AE</td><td>DA</td><td>DA</td><td>EA</td></tr><tr><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td></tr><tr><td>AF</td><td>AF</td><td>AG</td><td>AG</td><td>AG</td><td>AG</td></tr></table>		AB	AB	AC	BA	BA	CA	AD	AD	AE	DA	DA	EA	AF	AF	AF	AF	AF	AF	AF	AF	AG	AG	AG	AG
AB	AB	AC	BA			BA	CA																						
AD	AD	AE	DA			DA	EA																						
AF	AF	AF	AF			AF	AF																						
AF	AF	AG	AG	AG	AG																								
(B6)	1	(P2)	4																										
(B6-1)	1	(P1)	5																										
(2J)	2	(G2)	2																										
(E1)	2	(J)	2																										
(E2)	2	(J1)	2																										
(1F)	3	(K)	1																										
(3N)	1	(Q1)	1																										
(2N)	2	(Q1-1)	1																										
(F1)	1	(Q2)	22																										
(F1-1)	1	(Q3)	2																										
3	(3J)	(Q5)	3																										
	(C3)	(Q5-1)	3																										
	(C4)	(N1)	1																										

Box D	
Part #	Qty
U1	8
U2	4
U3	2
U4	2
S1	16
S2	8
S3	4
S4	4
1S	8
3S	4
1R	24
3R	16
4R	8


Box E	
Part #	Qty
1B	3
2B	3
3B	3
4B	3
1D	3
2D	3
1C	3
2C	3
2H	4
3H	2
2K	4
3K	2
3P	2
2M	4
3M	2
2L	16
3L	8
3G	16

Take out the plastic (packing material) blocks at both ends of the profiles numbered 1E, 1G, 3G, 4G, 2L and 3L

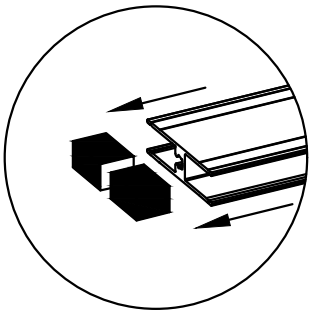





(A1) 1x




(A1-1) 1x




(A2) 1x



(A2-1) 1x



(A3) 1x




(A3-1) 1x




(B6) 1x



(B6-1) 1x




(B7) 2x




(B7-1) 2x




(B8) 1x



(B8-1) 1x



(B4) 1x



(B4-1) 1x




















(B5) 1x







































(B5-1) 1x
















(C3) 4x

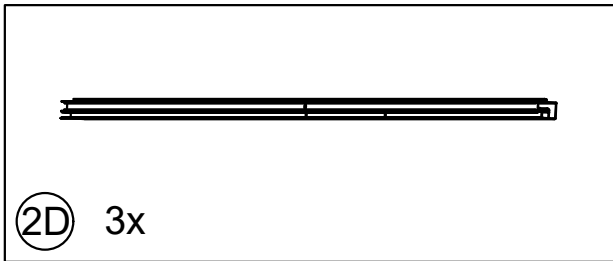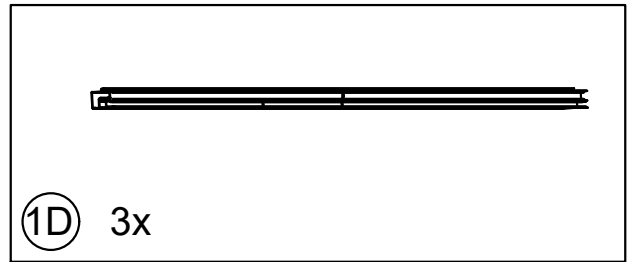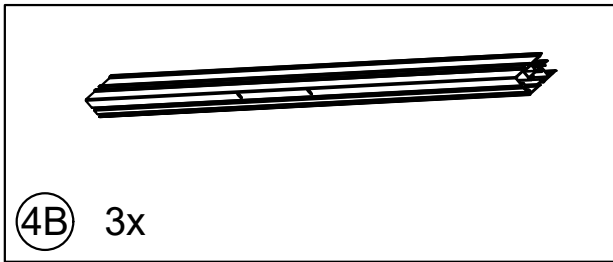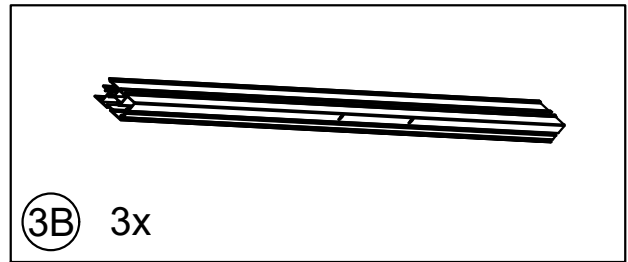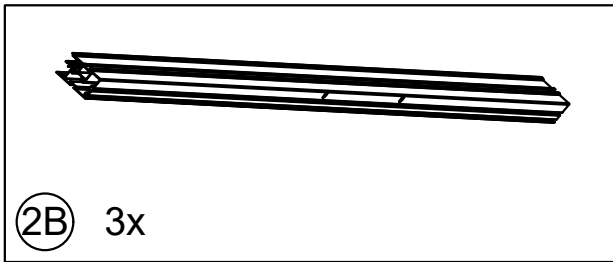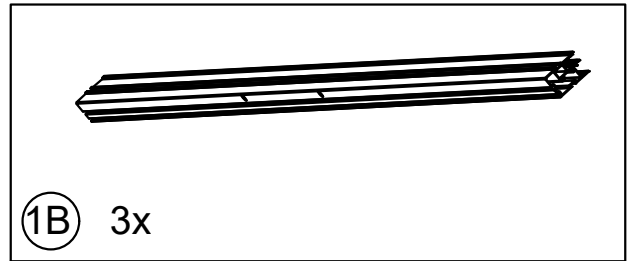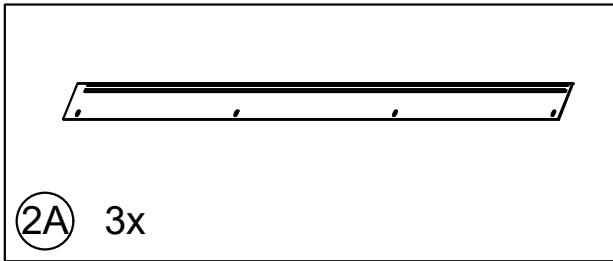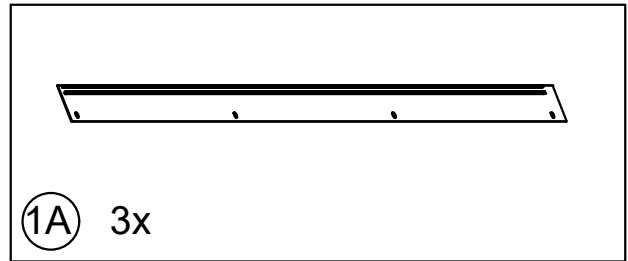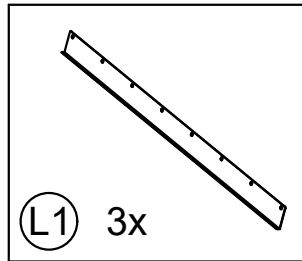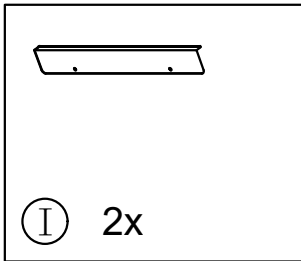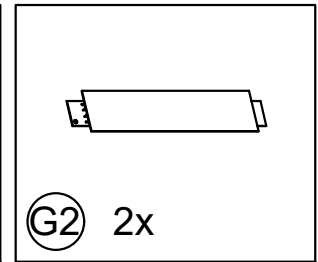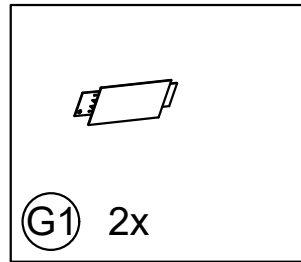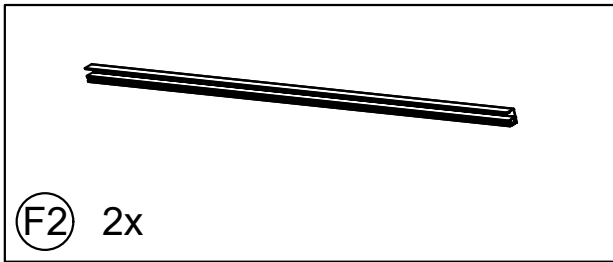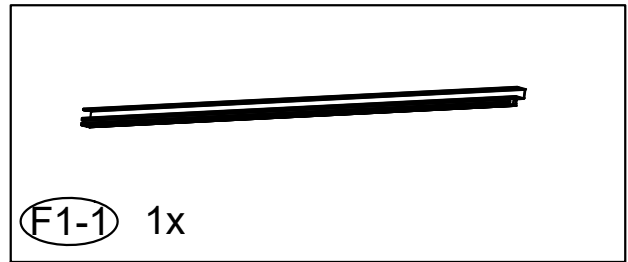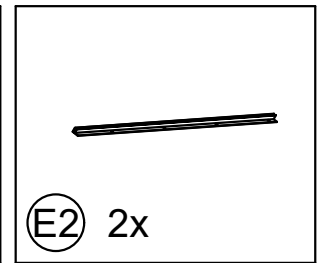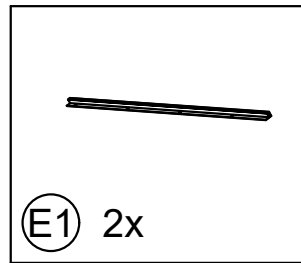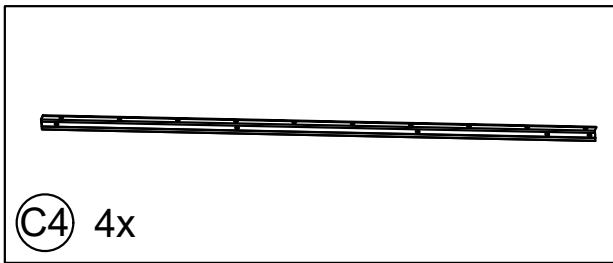

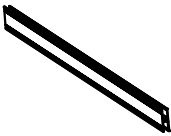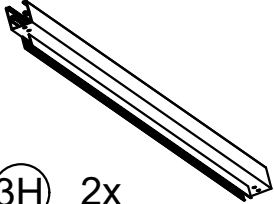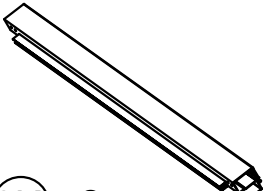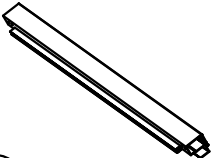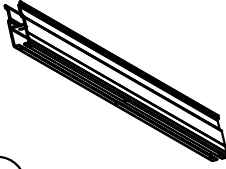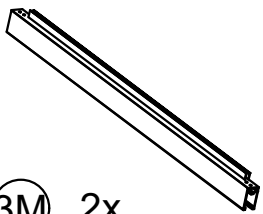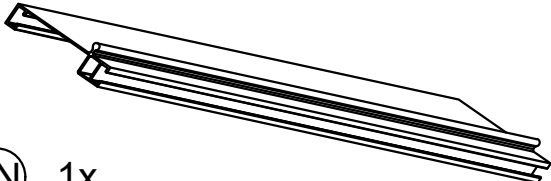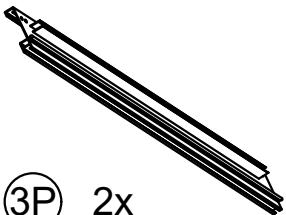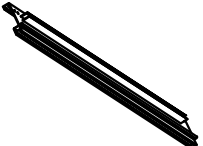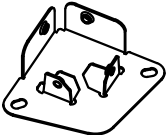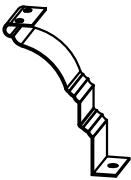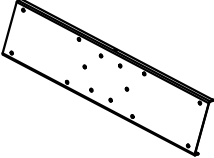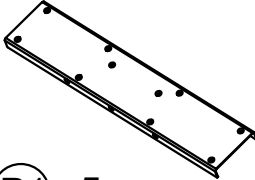	 2C 3x		 1F 3x	
	 1E 24x	 1G 12x	 4G 8x	 3G 16x
	 3H 2x	 2H 4x	 3J 1x	
	 2J 2x		 3K 2x	 2K 4x
	 3L 8x	 2L 16x	 3M 2x	 2M 4x
	 3N 1x		 2N 2x	
	 3P 2x	 2P 4x	 J 2x	 J1 2x
	 K 1x	 P 1x	 P1 5x	 P2 4x

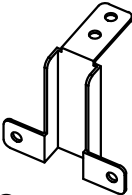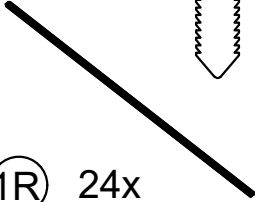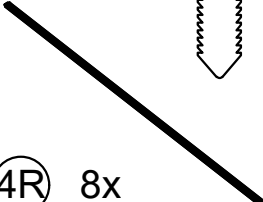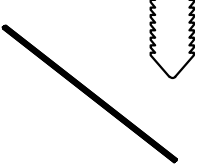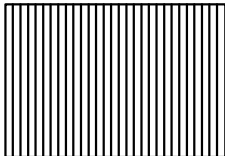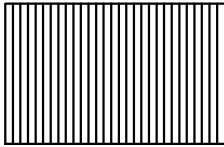
			
Q1 1x	Q1-1 1x	Q2 22x	Q3 2x
			
Q4 2x	Q4-1 2x	Q5 3x	Q5-1 3x
			
R 21x	N1 1x	N2 1x	D1 48x
			
D2 96x	D3 24x	D4 12x	D5 12x
			
Y 80x	1R 24x	4R 8x	3R 16x
			
M1 1x	M1-1 1x	M2 1x	M2-1 1x
			
M3 1x	M3-1 1x	U1 8x	U2 4x
			
U3 2x	U4 2x	S1 16x	S2 8x

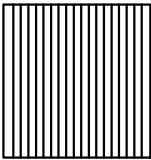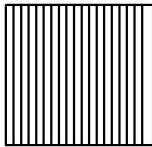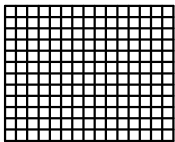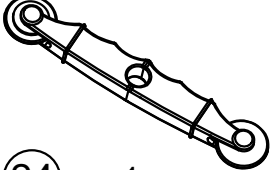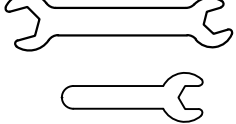 S3 4x	 S4 4x	 1S 8x	 3S 4x
 6.2*11*20 2 14x	 6.2*11*15 3 14x	 4 12x	 5 1x
 M6 6 12x	 ST 4.8x12 7 14x	 M4x20 8 120x	 M4x35 9 84x
 M4x50 10 48x	 M6x15 11 257x	 M6x28 12 80x	 M6 13 80x
 M6x35 14 18x	 15 20x	 M5x6 16 80x	 M5 17 44x
 M5x12 18 44x	 M6 19 80x	 Rubber Gasket 20 80x	 21 10x
 4mm 22 1x	 2.5mm 23 1x	 24 1x	 25 1x


AB	AB	AC	BA	BA	CA
AD	AD	AE	DA	DA	EA
AF	AF	AF	AF	AF	AF
AF	AF	AG	AG	AG	AG
letter sticker 1x					

<1>

(A1) 1x



(A1-1) 1x




(A2) 1x




(A2-1) 1x



(J) 2x

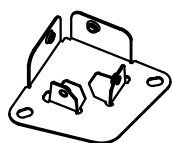

(J1) 2x




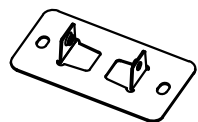


(11) 8x




M6x15

10

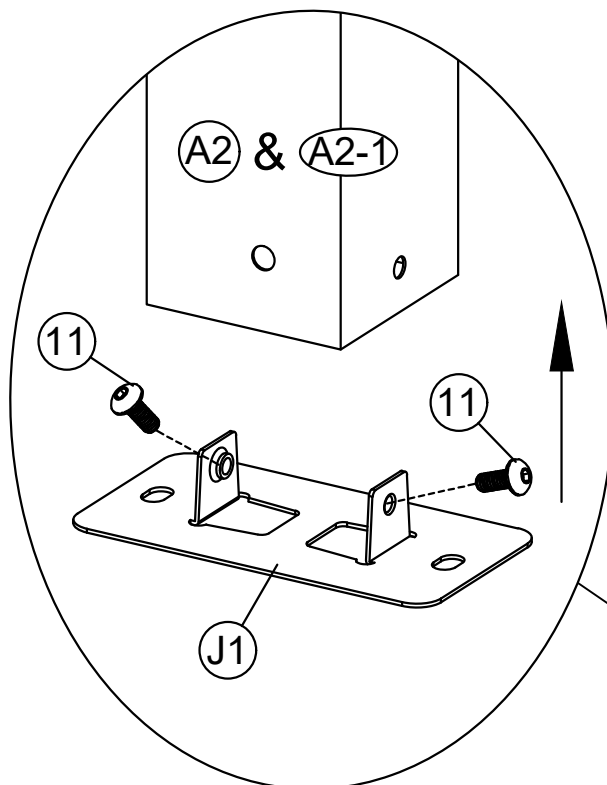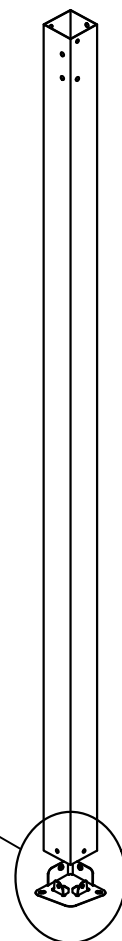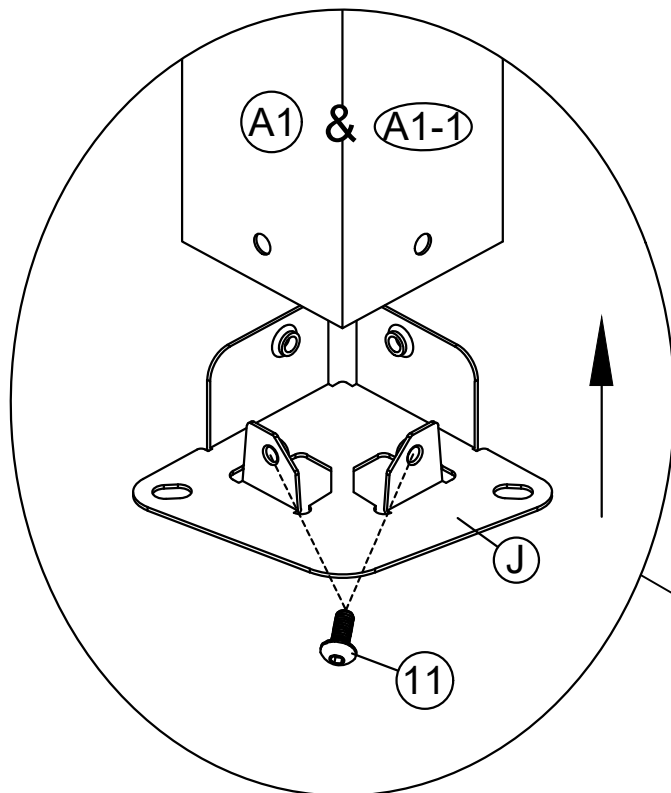

<2>


Pay attention to the placement
of A2 and A3 column holes



(A3) 1x



(A3-1) 1x

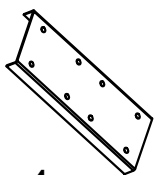


(P2) 4x




M6x15


(11) 24x

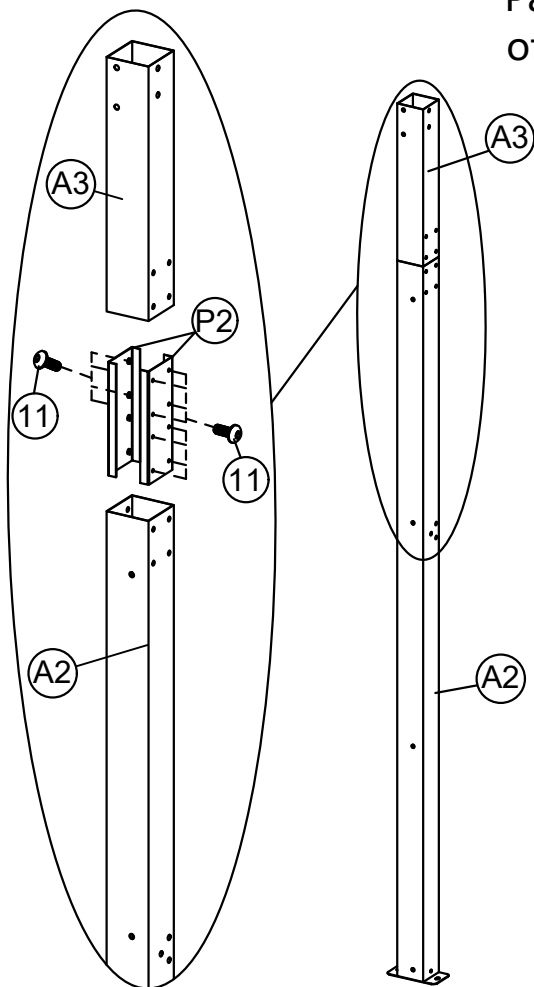


Pay attention to the placement
of A2-1 and A3-1 column holes

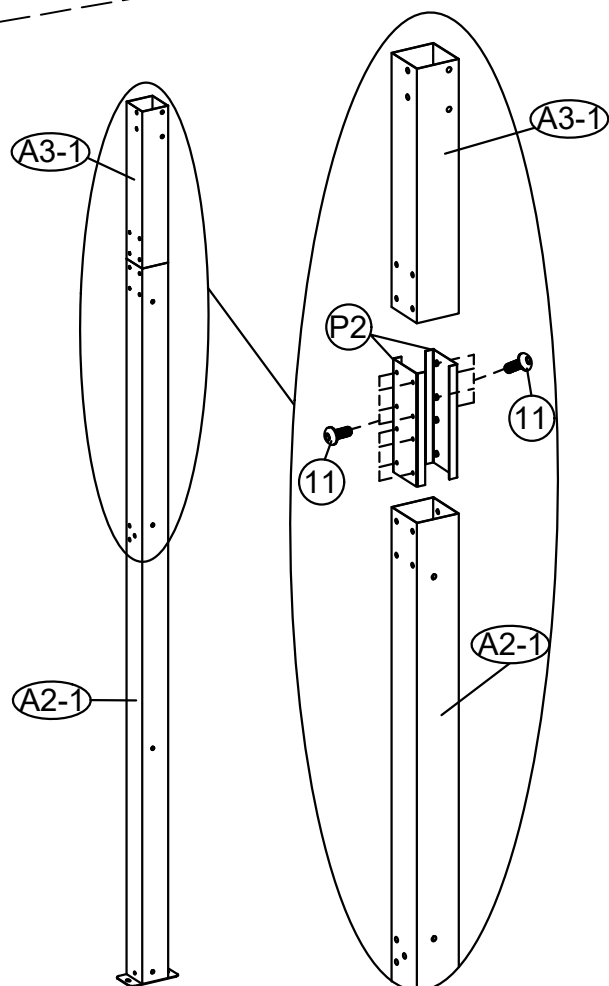


<3>

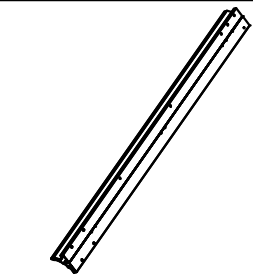


(B6) 1x

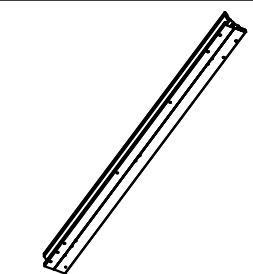


(B6-1) 1x

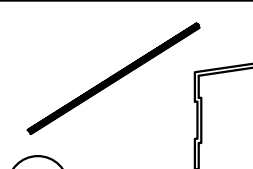


(C3) 1x

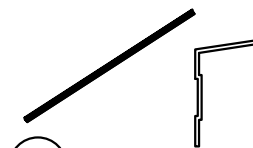

(C4) 1x

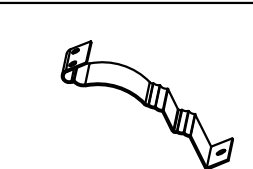

(K) 1x

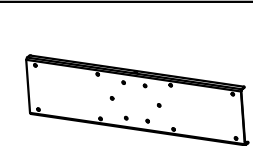


(P) 1x



ST 4.8x12



(7) 2x



M6x15


(11) 15x

12

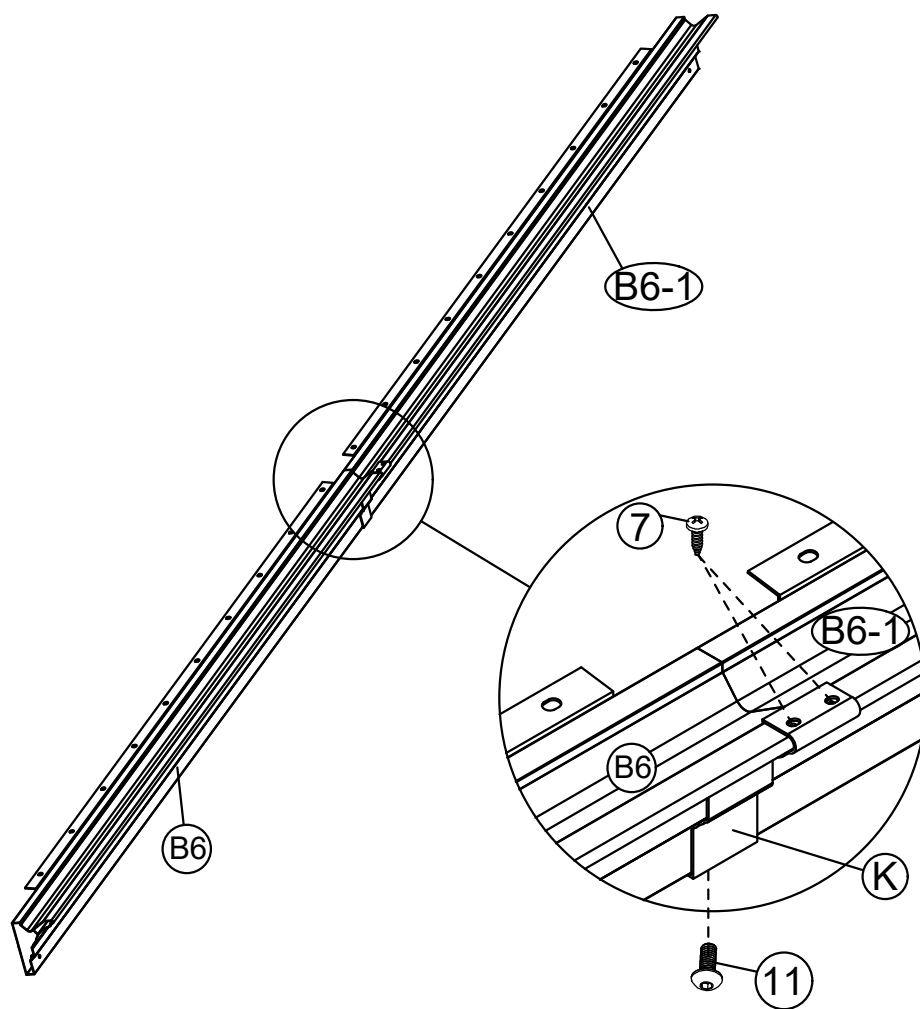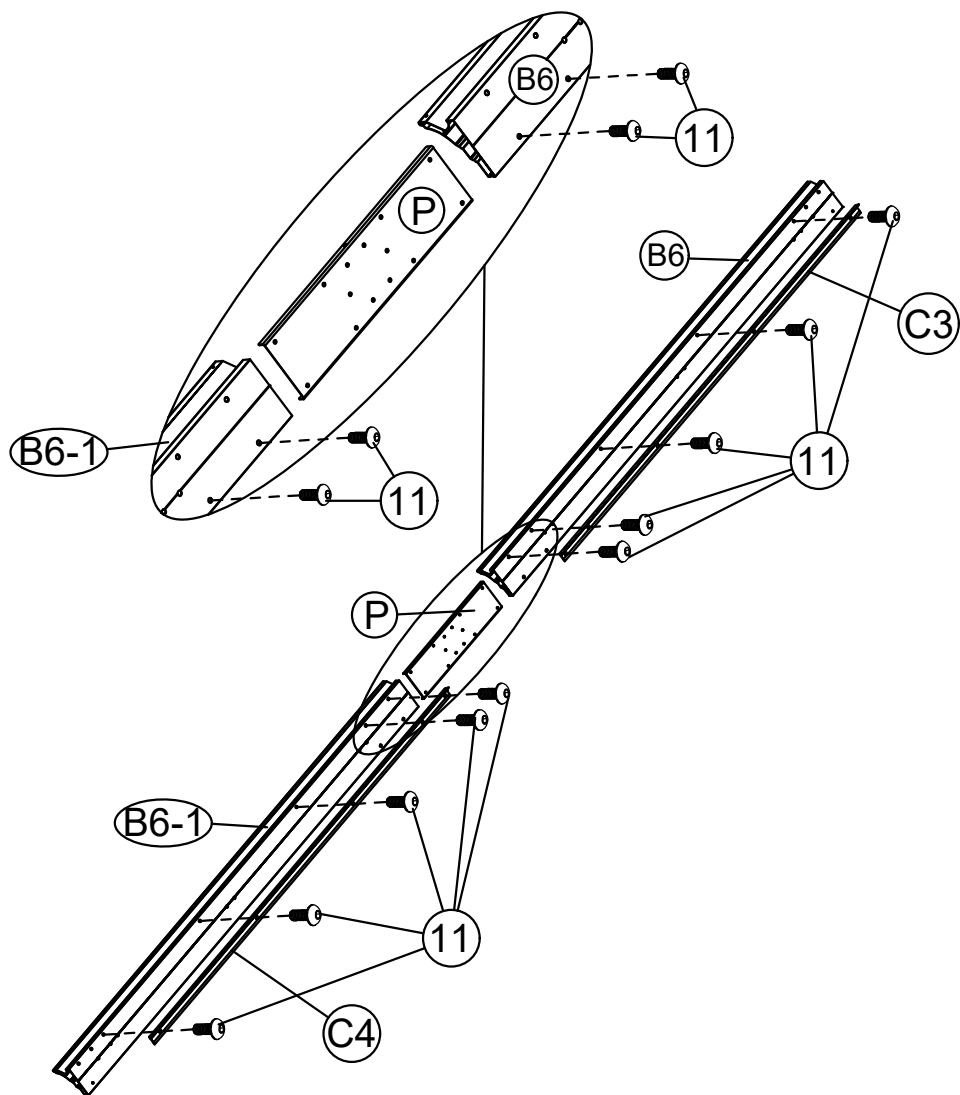


<4>


X2

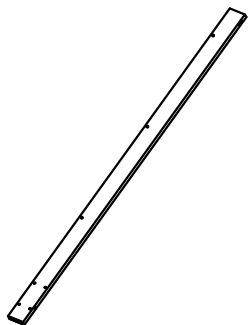


(B7) 2x

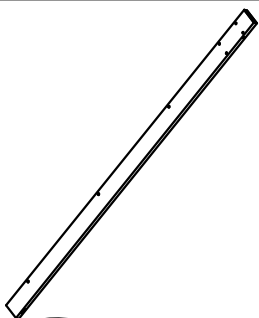


(B7-1) 2x

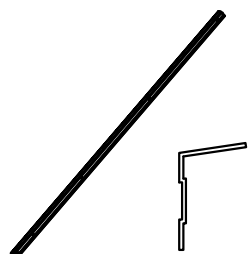

(C3) 3x

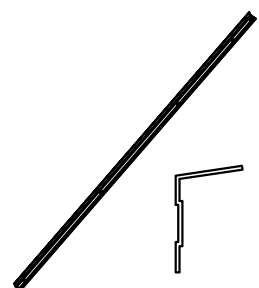

(C4) 3x



(P1) 3x



M6x15


(11) 48x

13









(B8) 1x






(B8-1) 1x

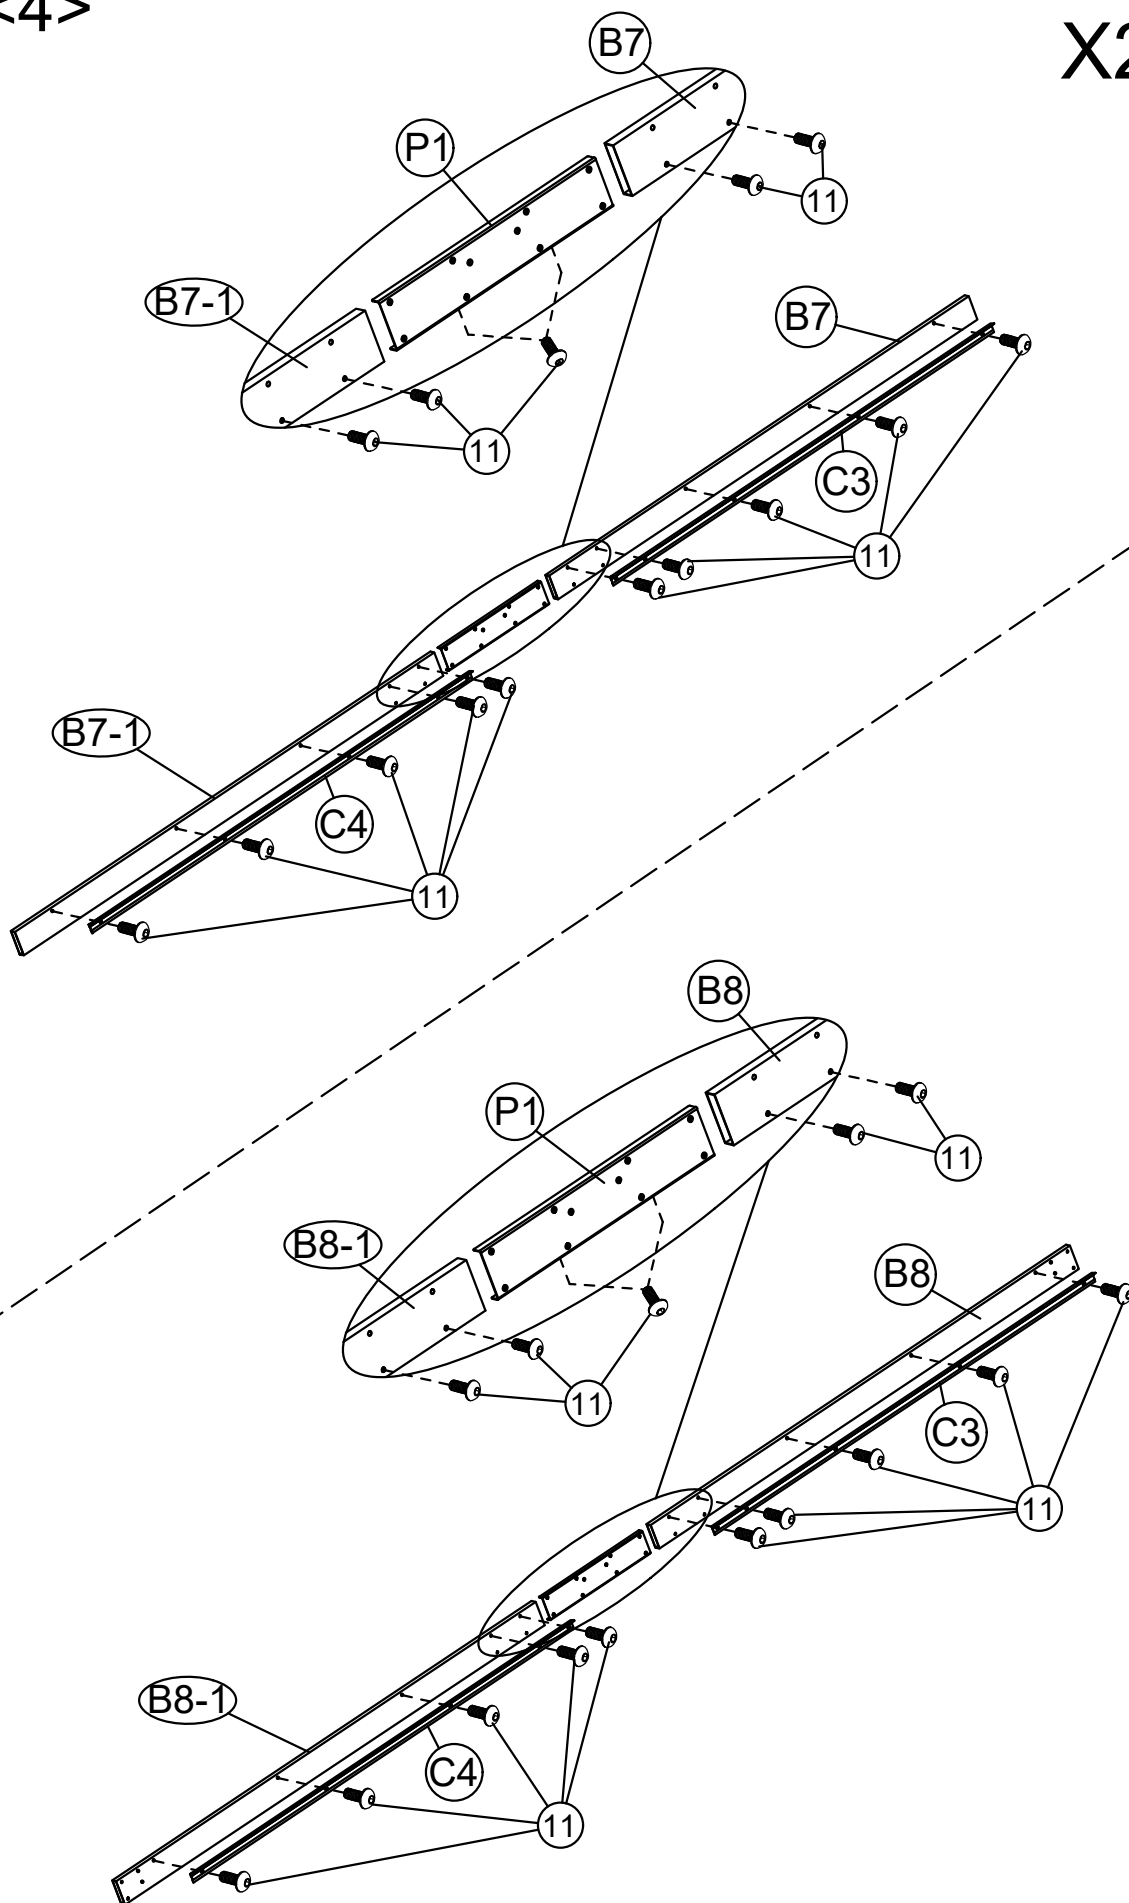


<5>

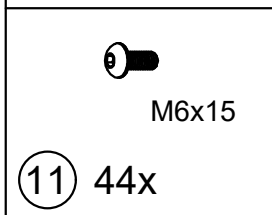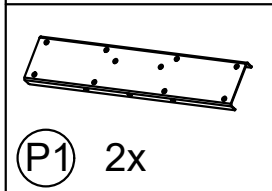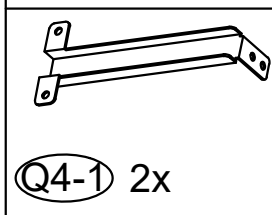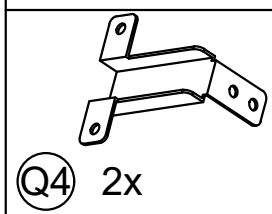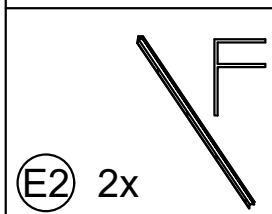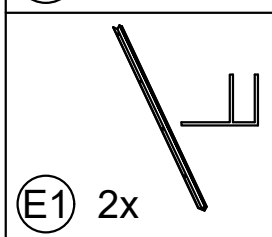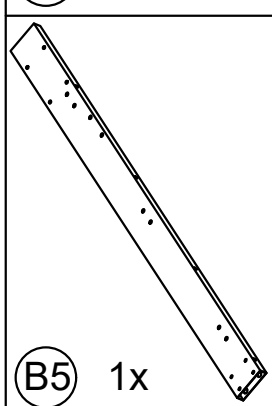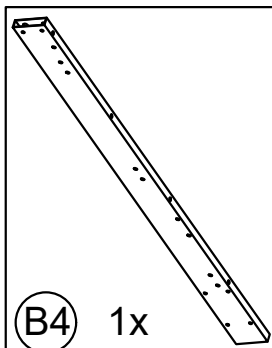

14

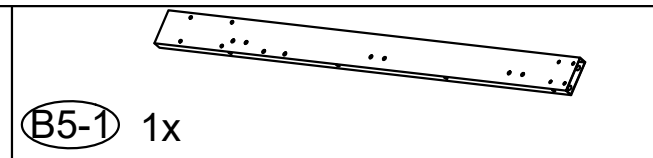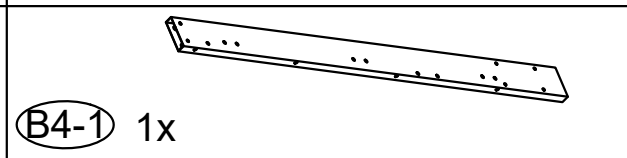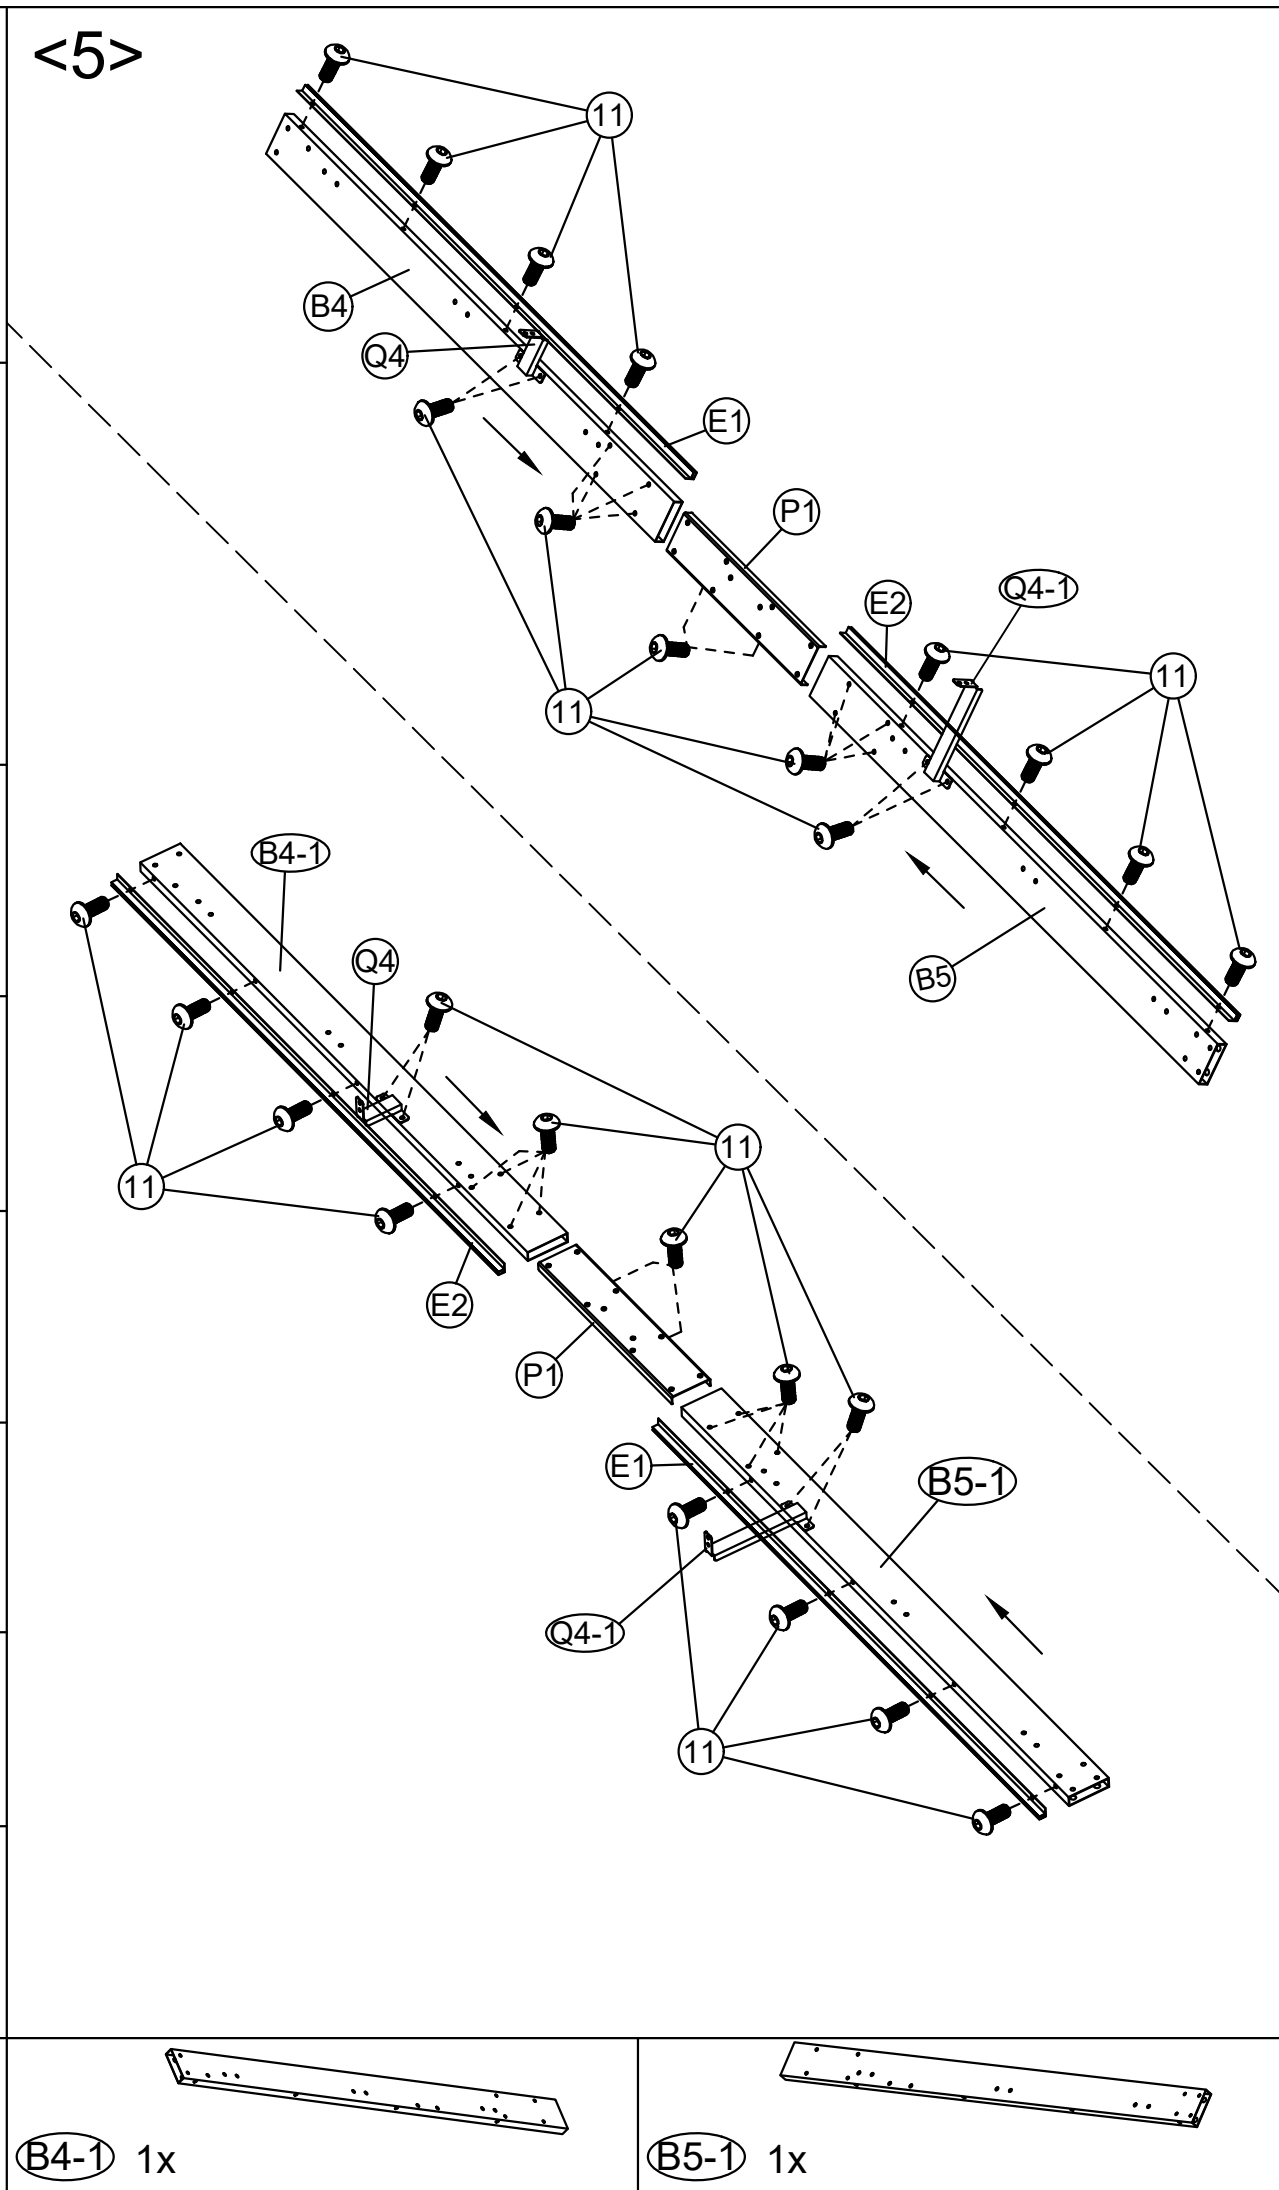

<6>

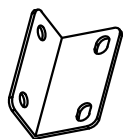


Q2 2x



M6x15

11 10x




6.2*11*15


3 2x




M6x35

14 2x

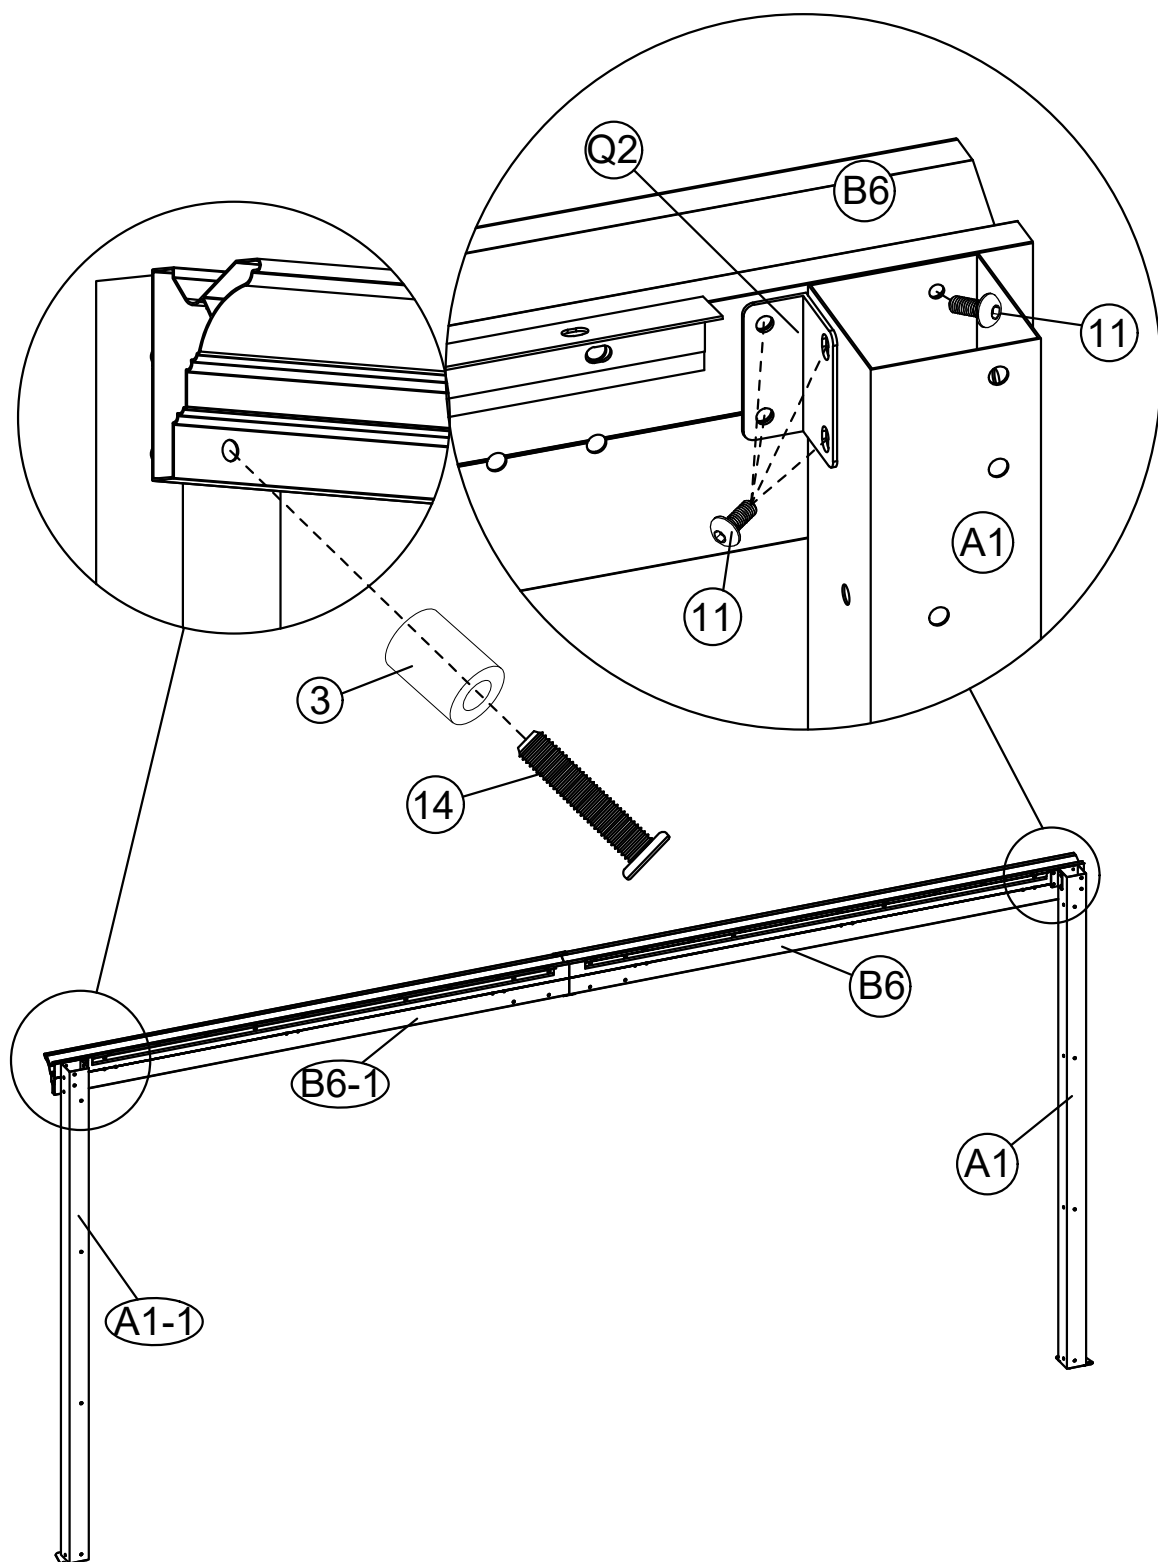


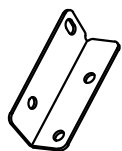

Q1-1 1x

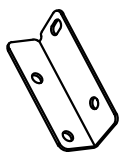

Q1 1x



6.2*11*20

2 4x



M6x35






14 4x




M6x15

11 6x

<7>

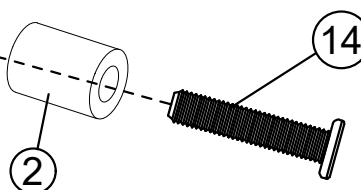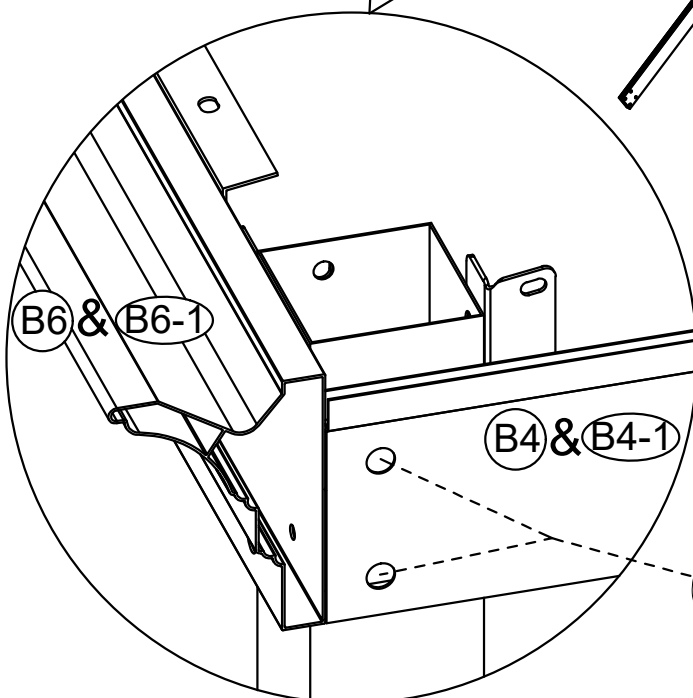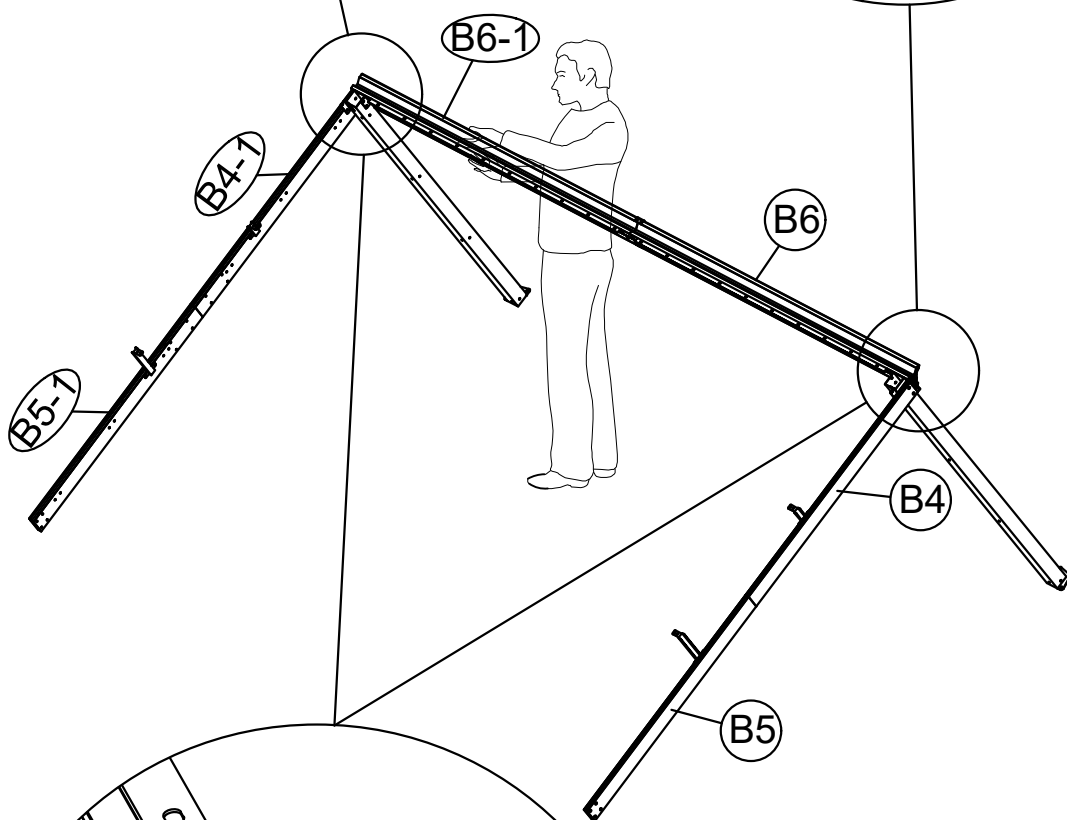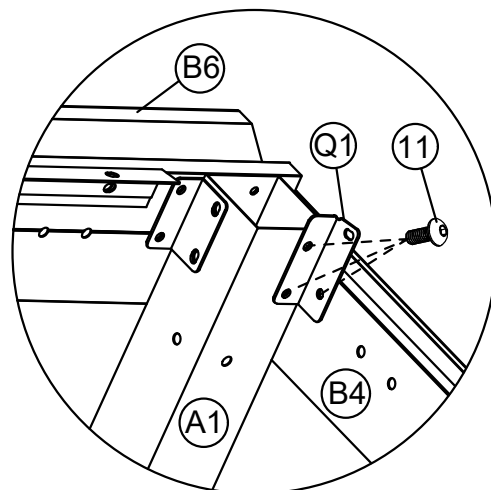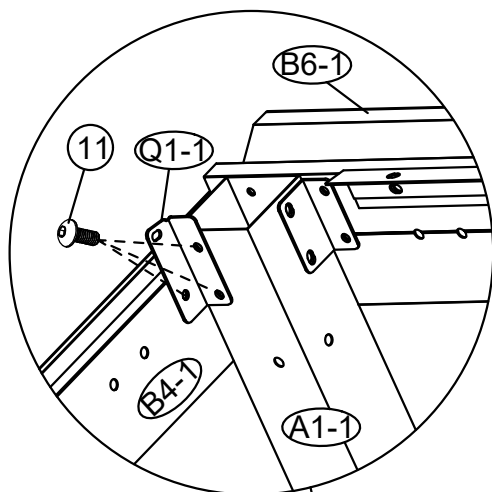



6.2*11*20


② 8x




M6x35


⑭ 8x

<8>

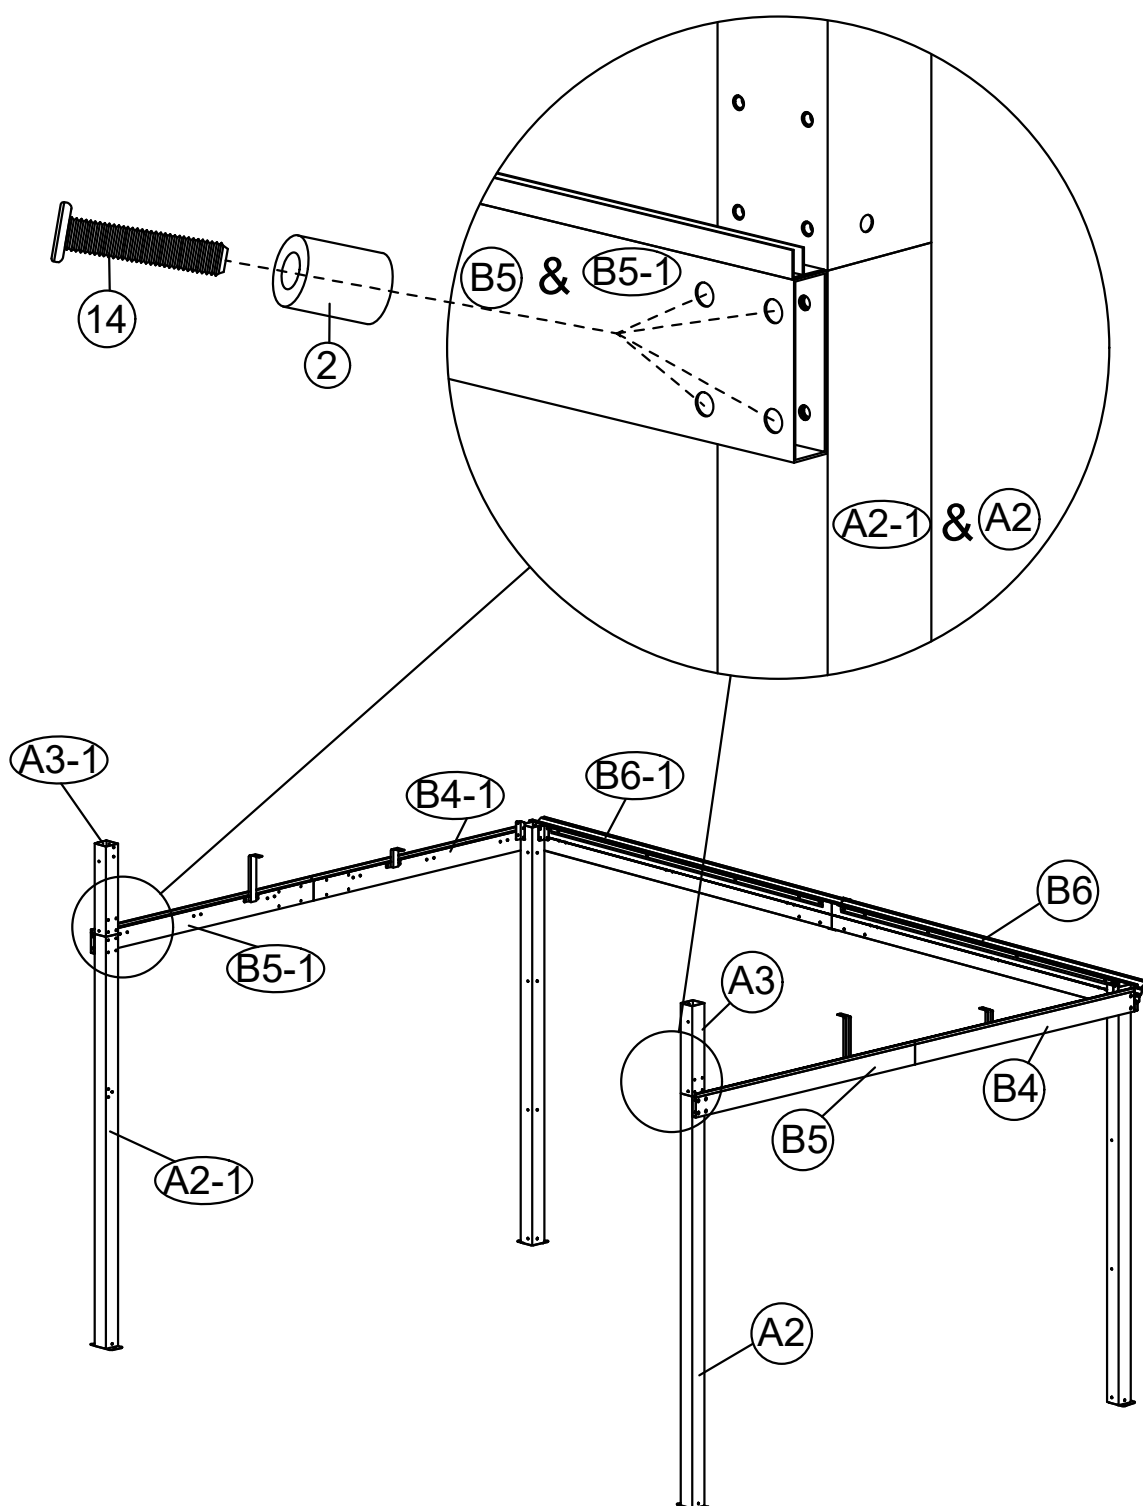





Q2 2x



Q5 1x



Q5-1 1x



6.2*11*20

2 2x



M6x35

14 4x




M6x15

11 8x



18

<9>


1




2

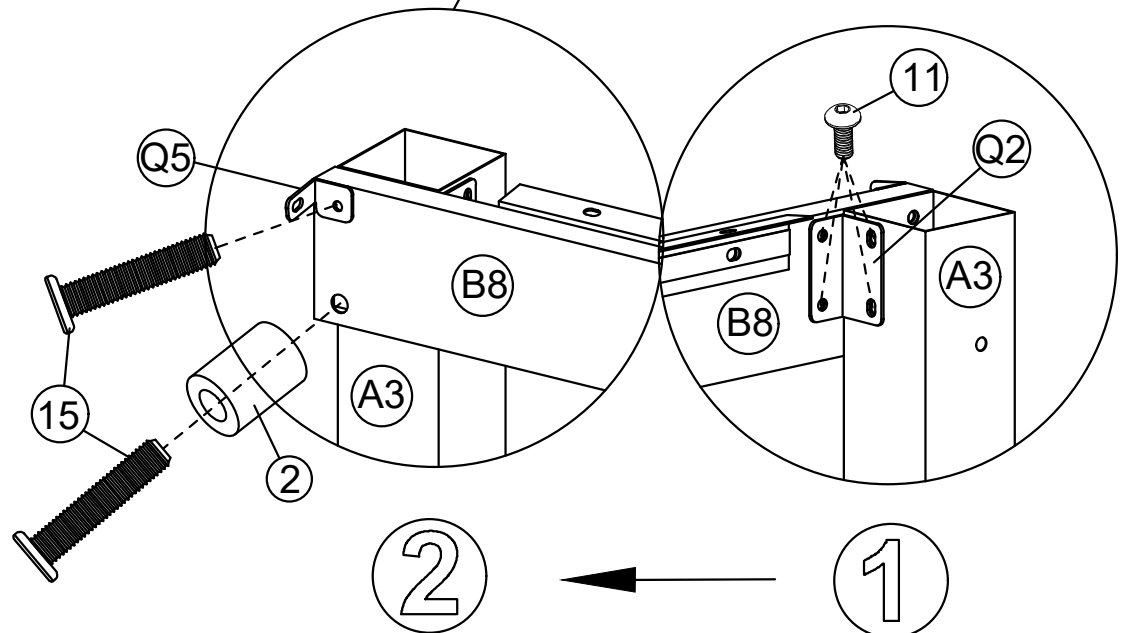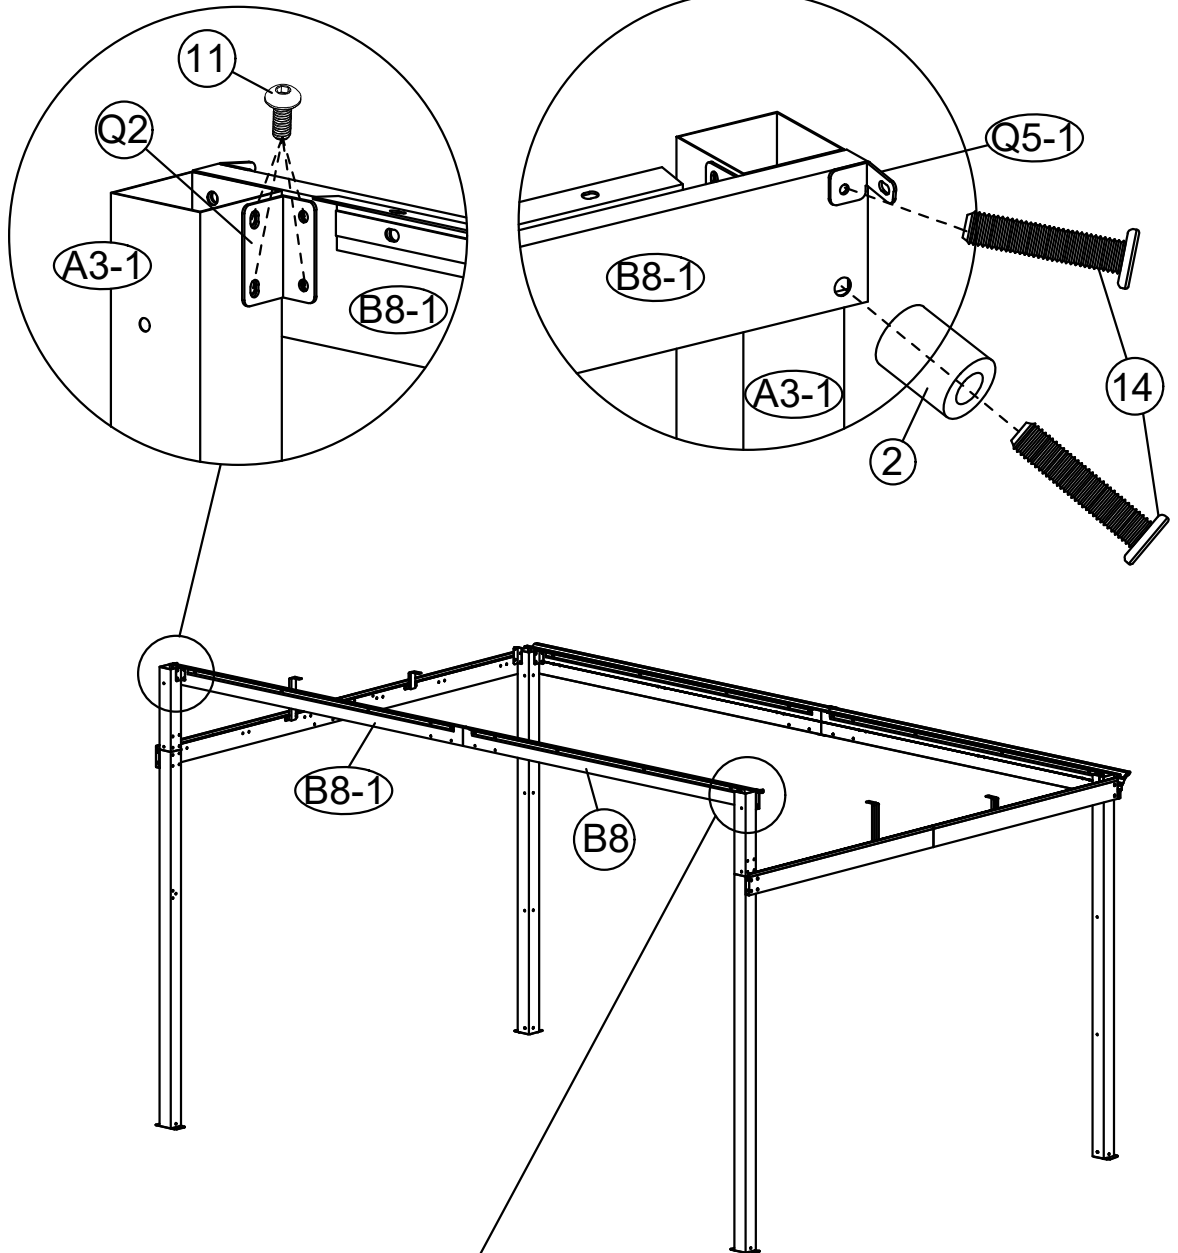

<10>



Q5 2x




Q5-1 2x



M6x15

11 12x

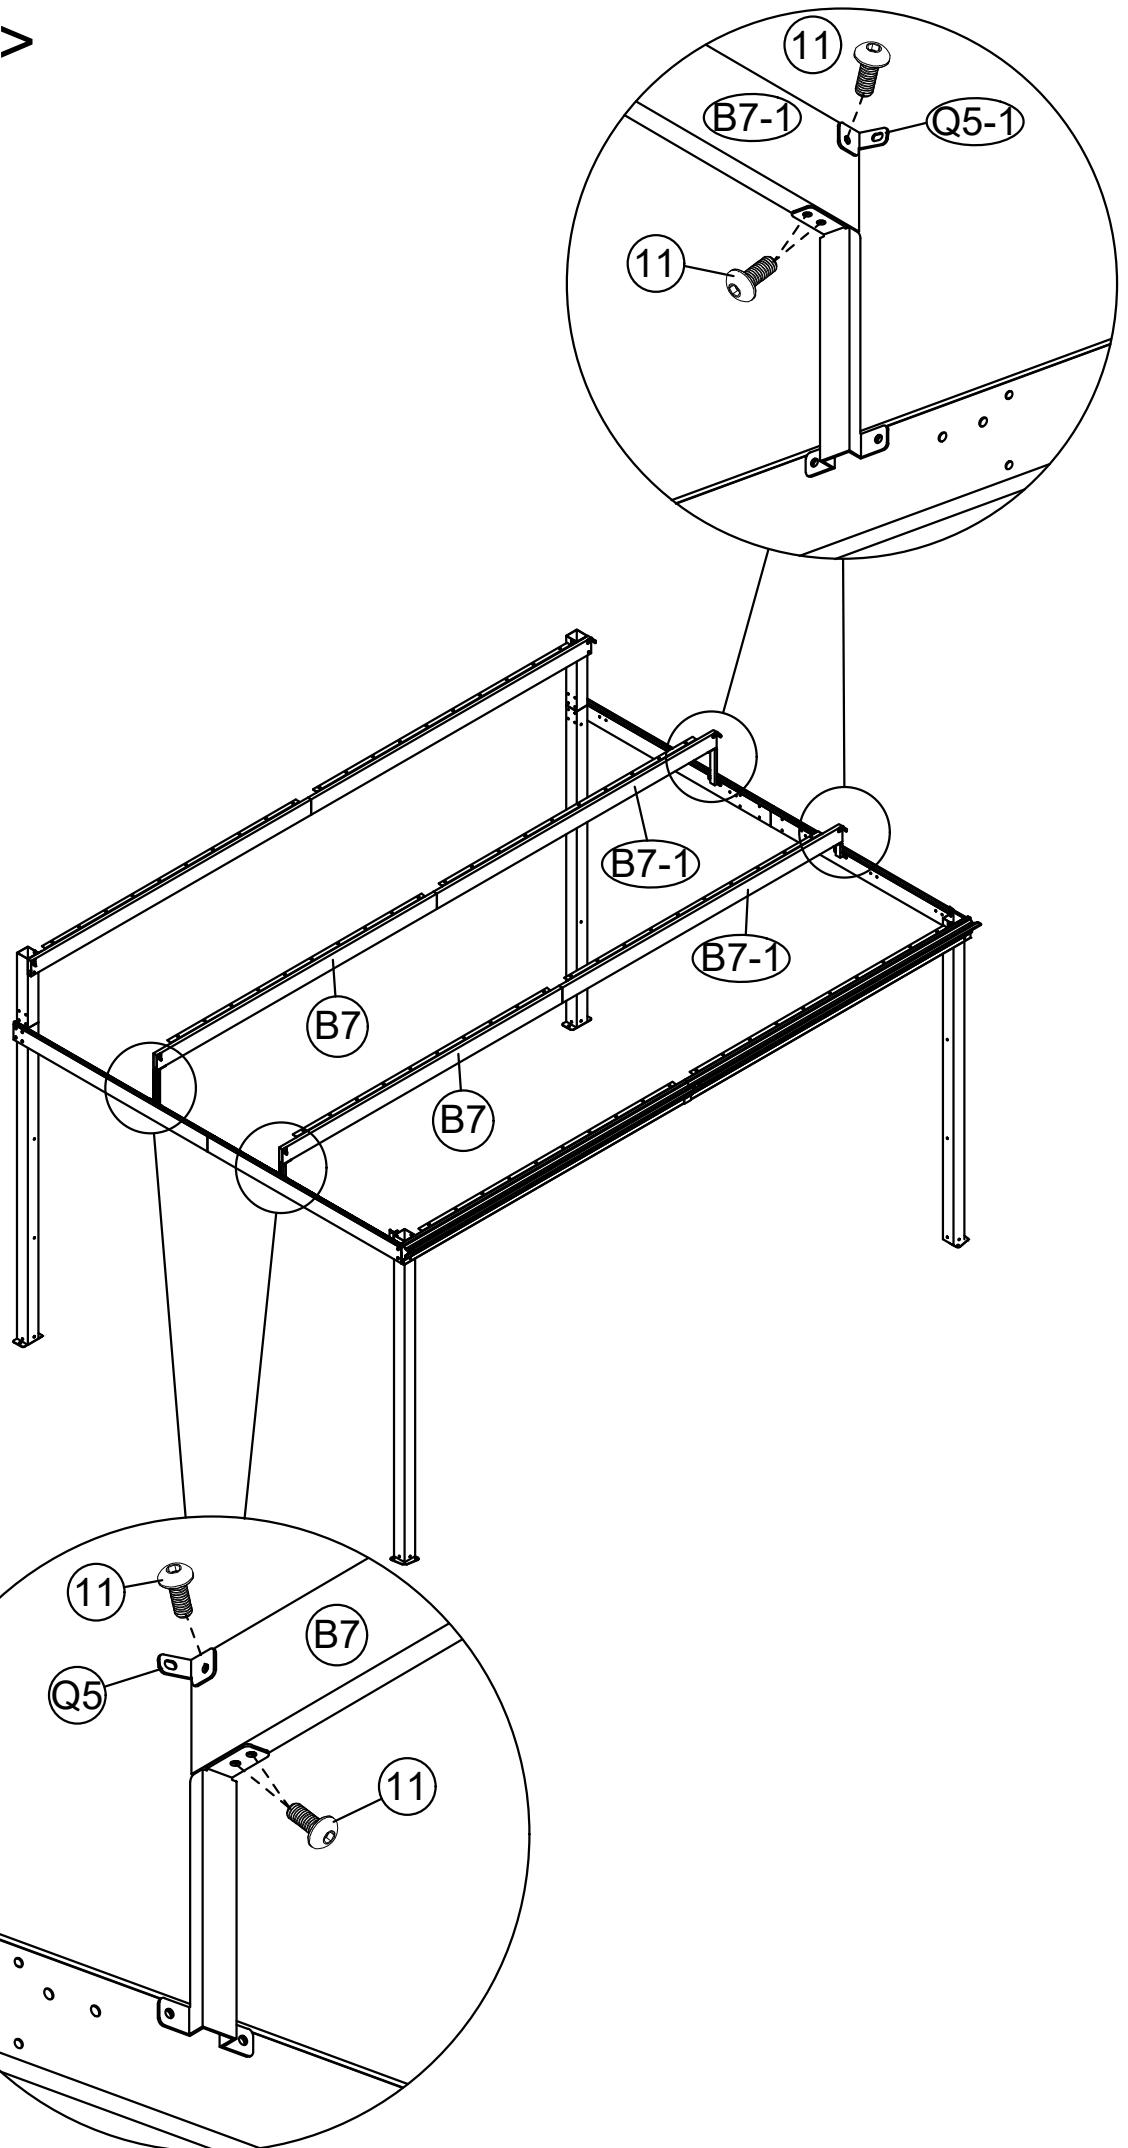


<11>



(M1) 1x




(M1-1) 1x




(M2) 1x



(M2-1) 1x




(M3) 1x



(M3-1) 1x




(G1) 2x




(G2) 2x


20

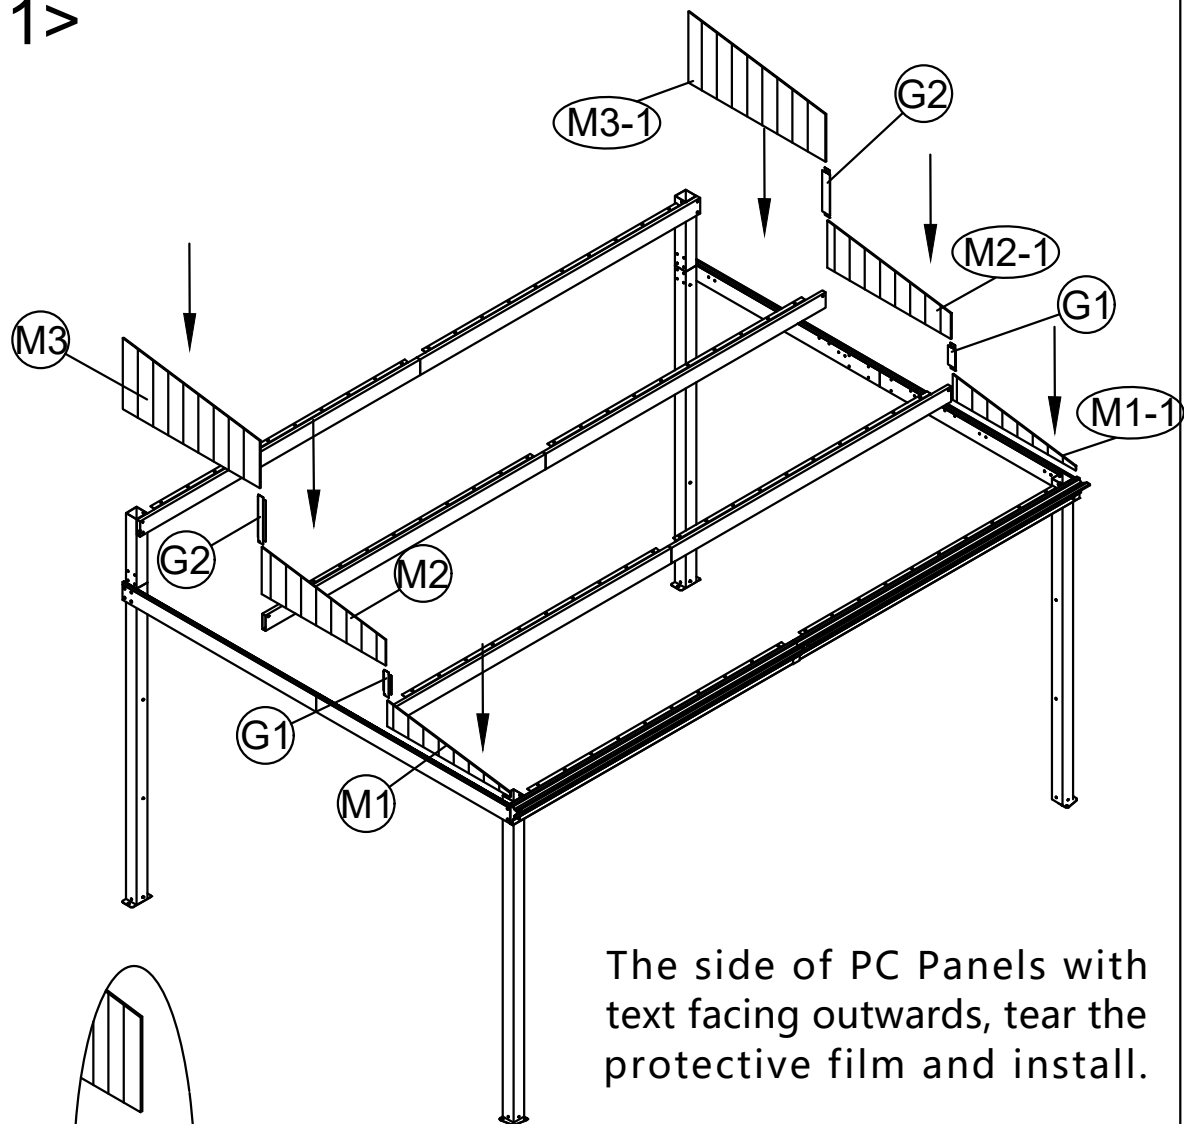


The side of PC Panels with text facing outwards, tear the protective film and install.

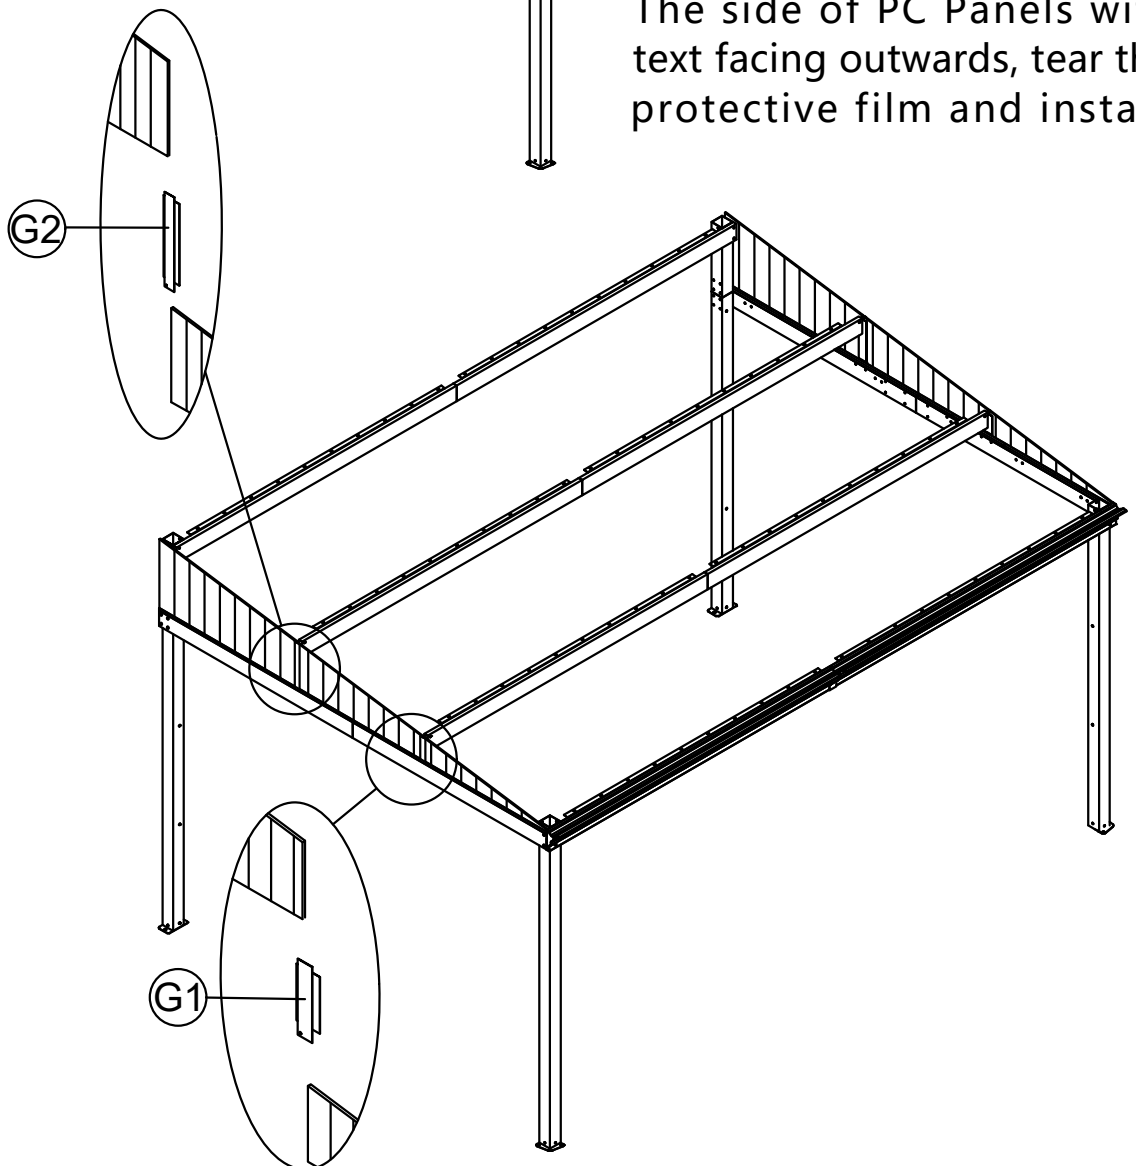


<12>

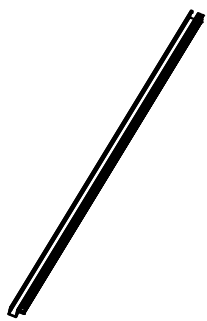


(F1) 1x

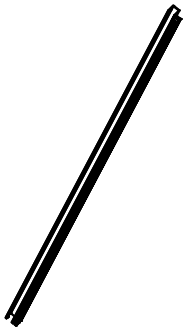

(F1-1) 1x

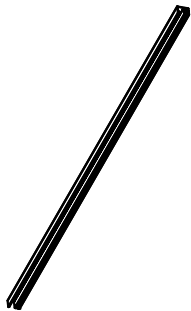

(F2) 2x

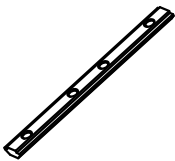



(15) 2x



M5*6

(16) 8x


21

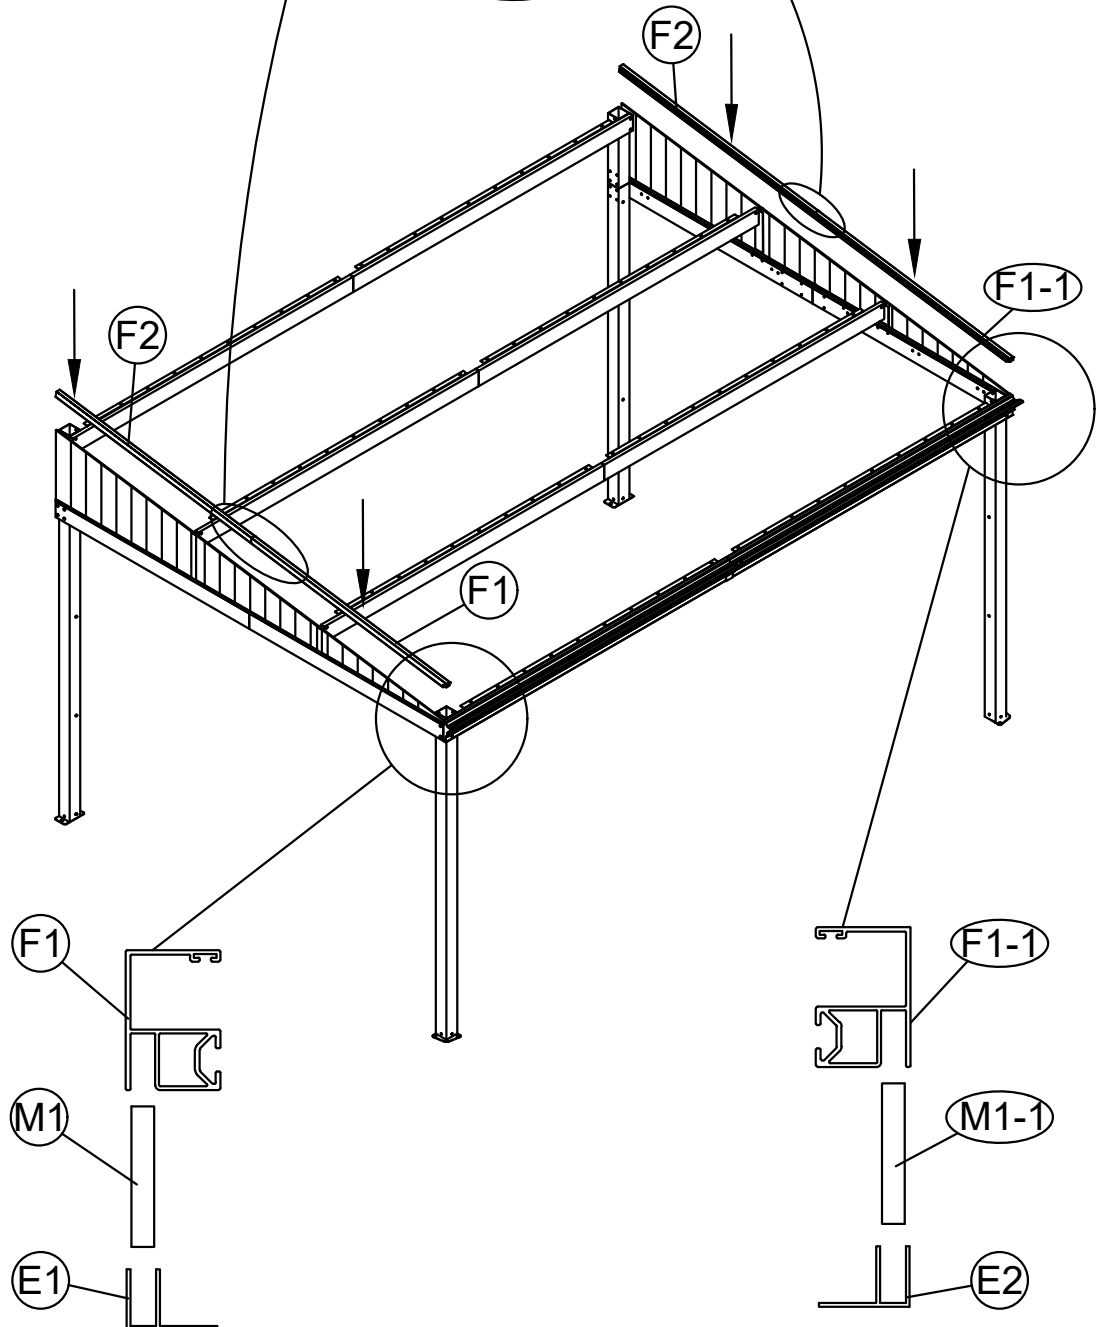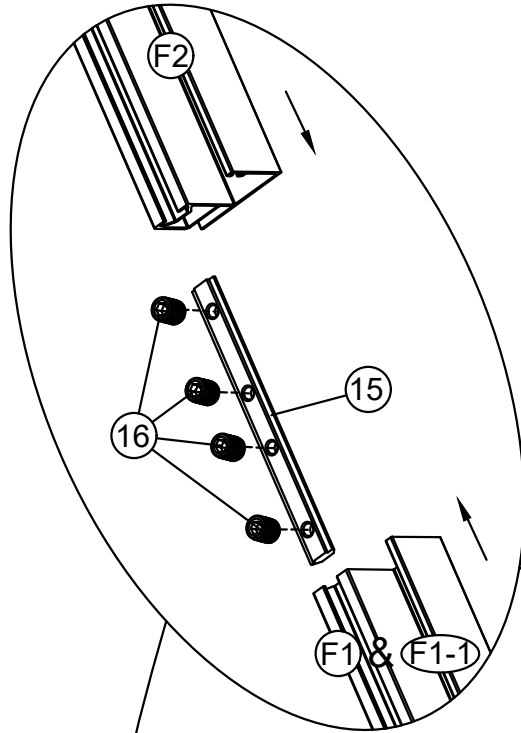



M5





17 8x




M5*12

18 8x

<13>

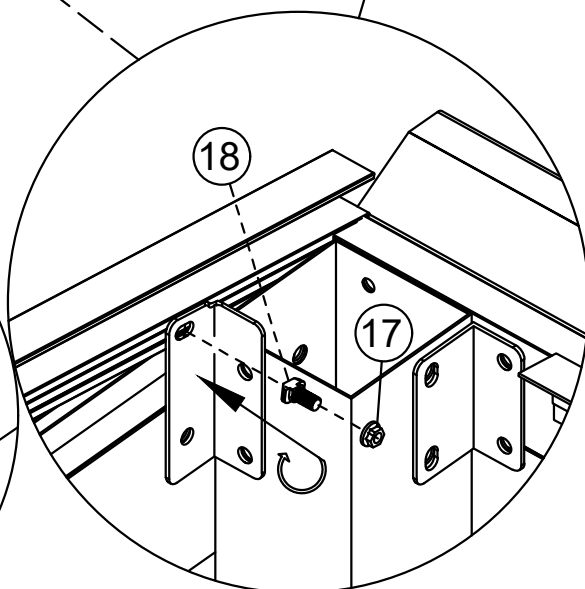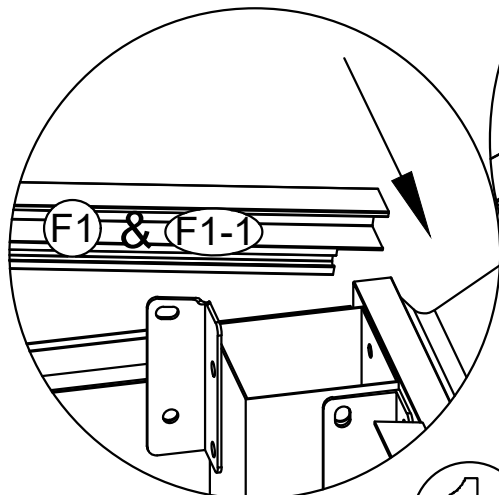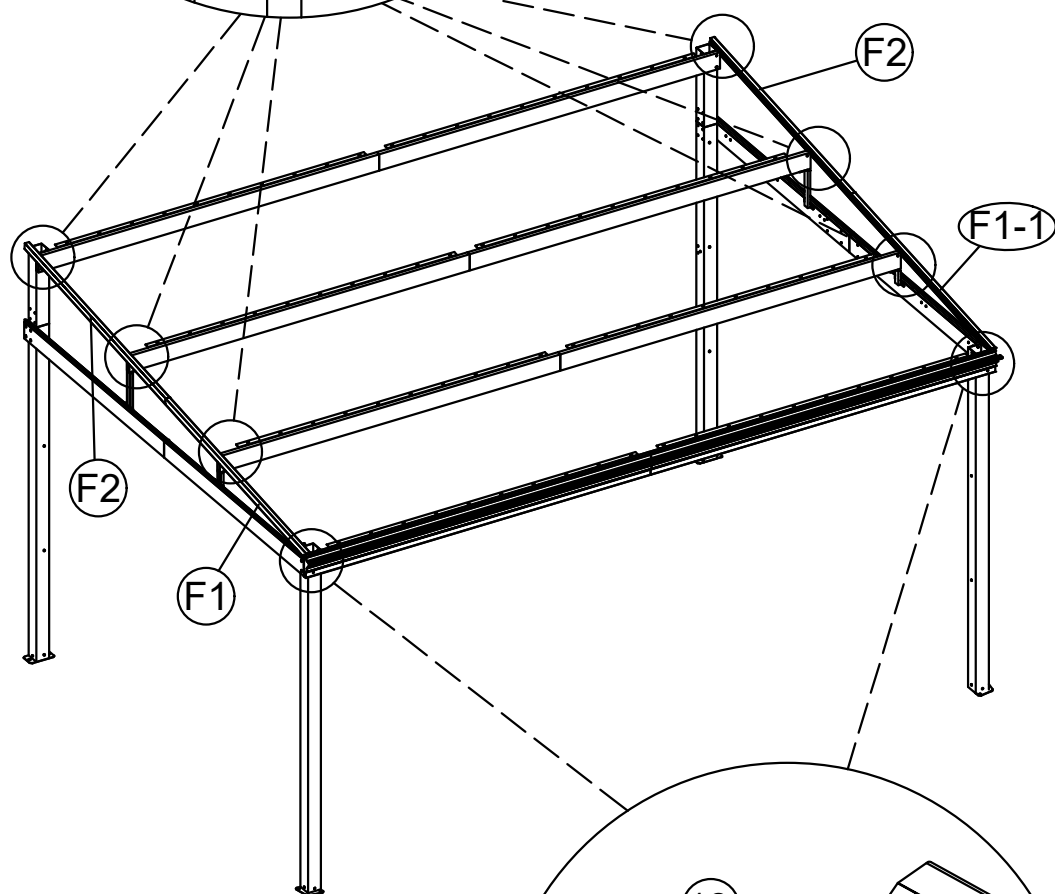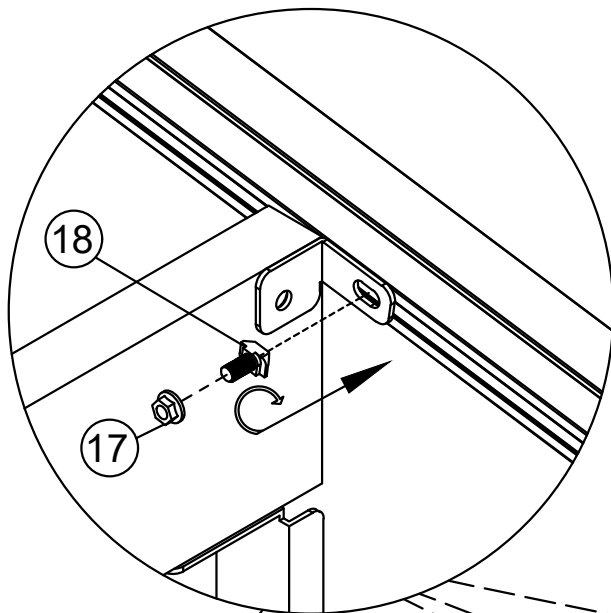

1




2


<14>



Ⓘ 2x



Ⓐ 1x





Ⓑ 1x




M6x15


⓫ 4x

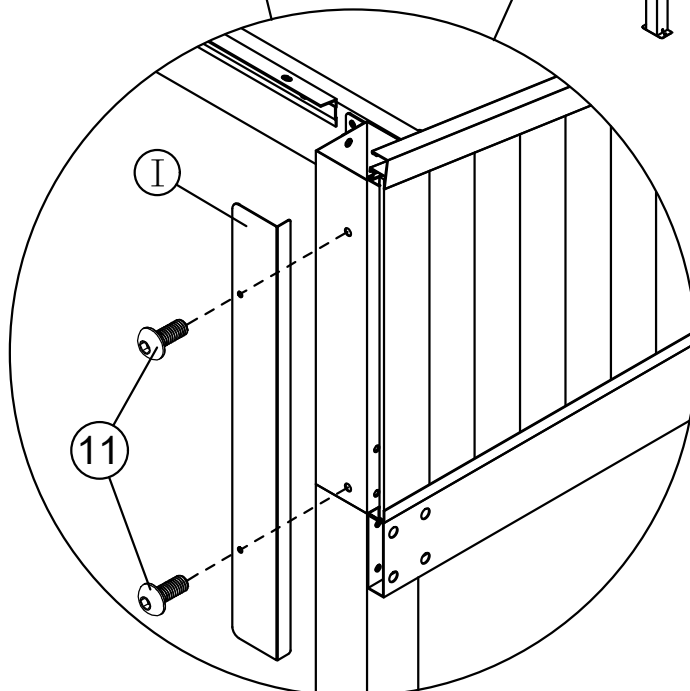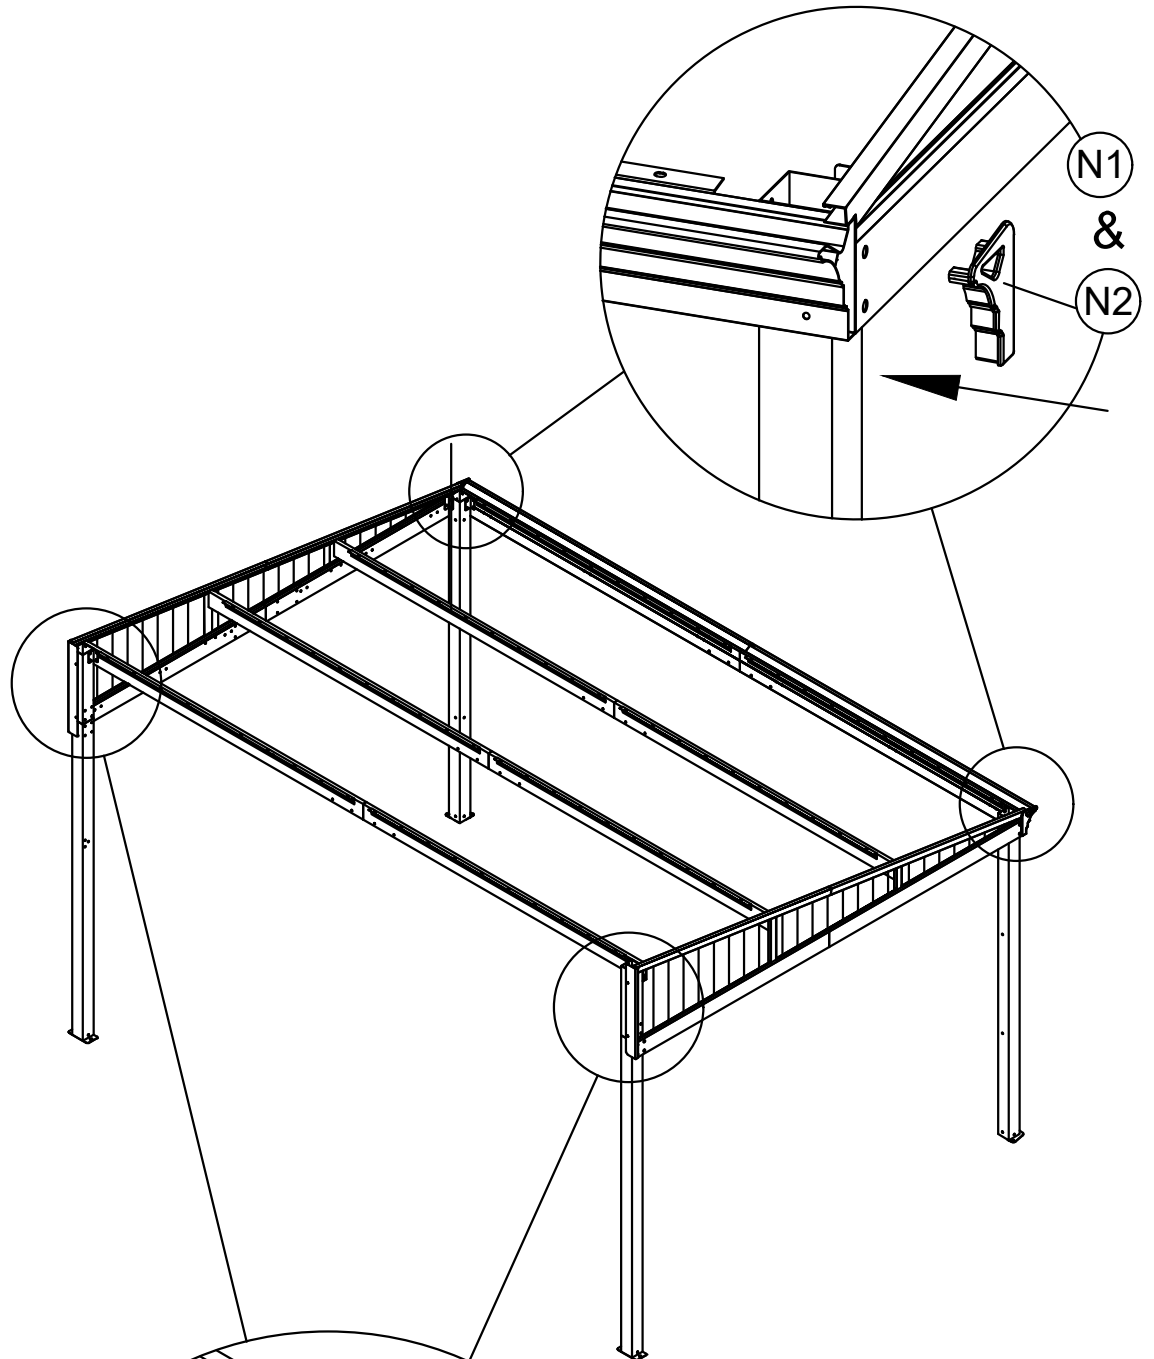

<15>

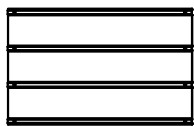

(R) 21x

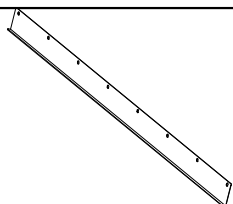

(L1) 3x



(Y) 80x



M6

(19) 80x



Rubber Gasket

(20) 80x



M6


(13) 80x






M6x28

(12) 80x

24

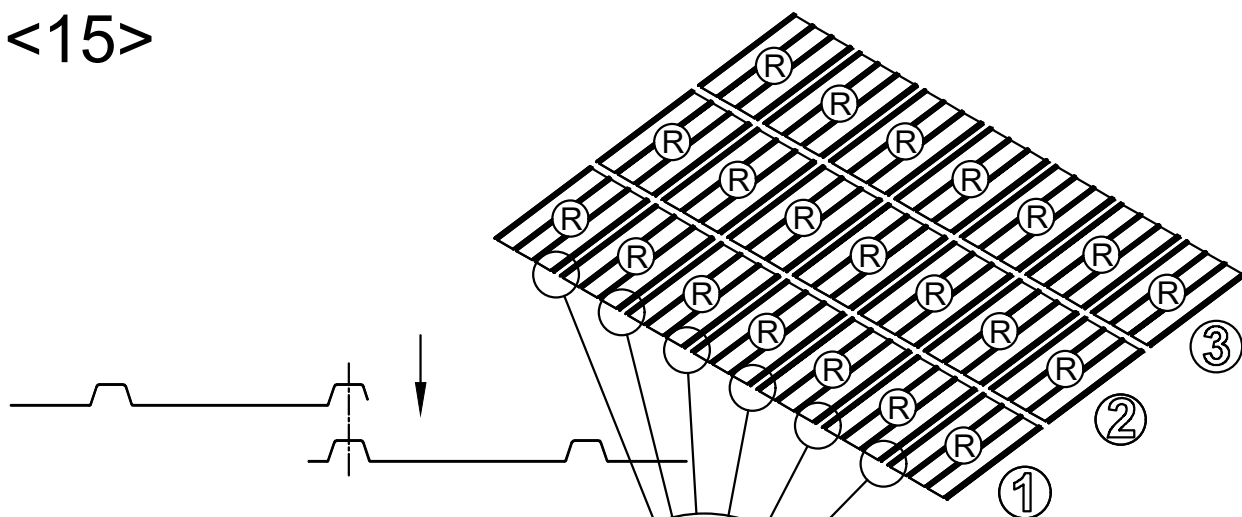






The first row is installed, then the second row is installed, and finally the third row is installed.

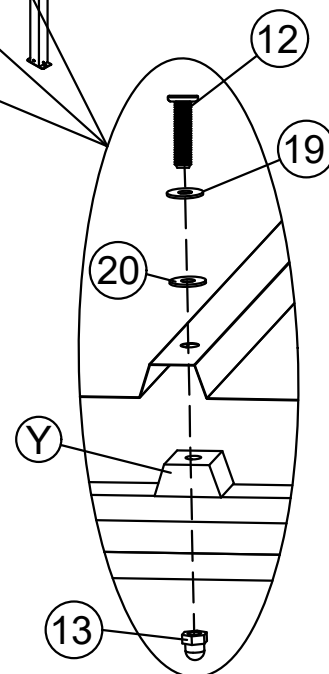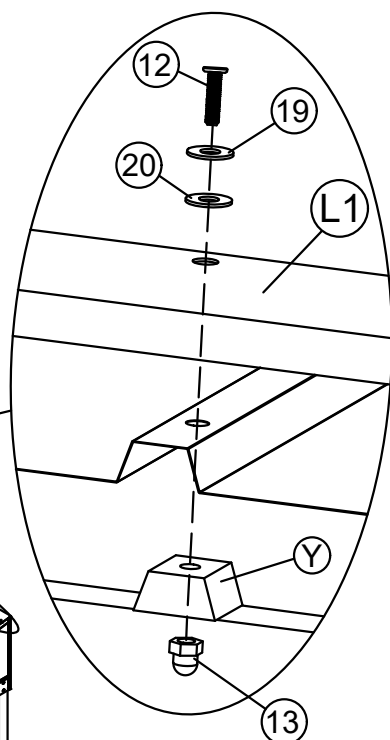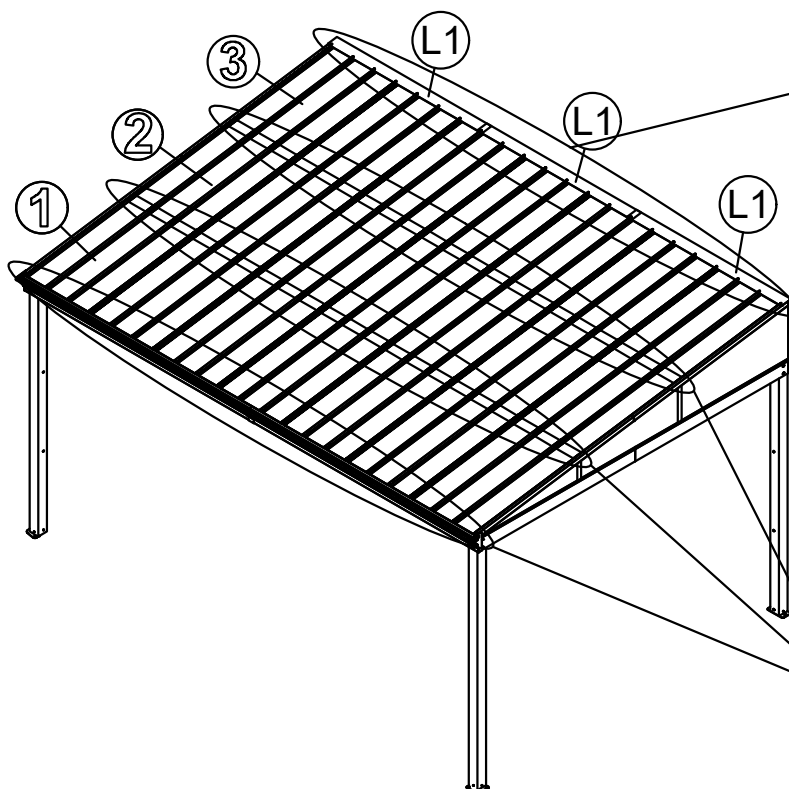


Note: When installing the roof top plates, if the roof plates are slightly uneven, please press the screws from the top of the plates until the bottom screw thread is exposed by 3 to 4mm, and then screw on the nut.

<16>

(AB) 2x

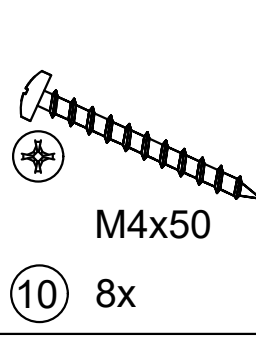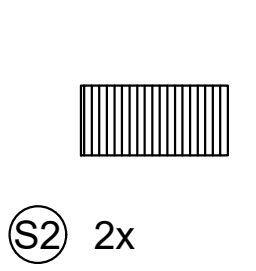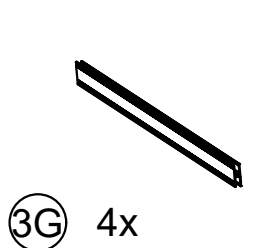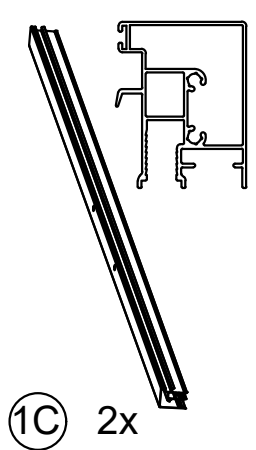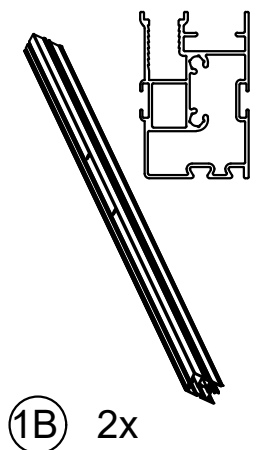


25

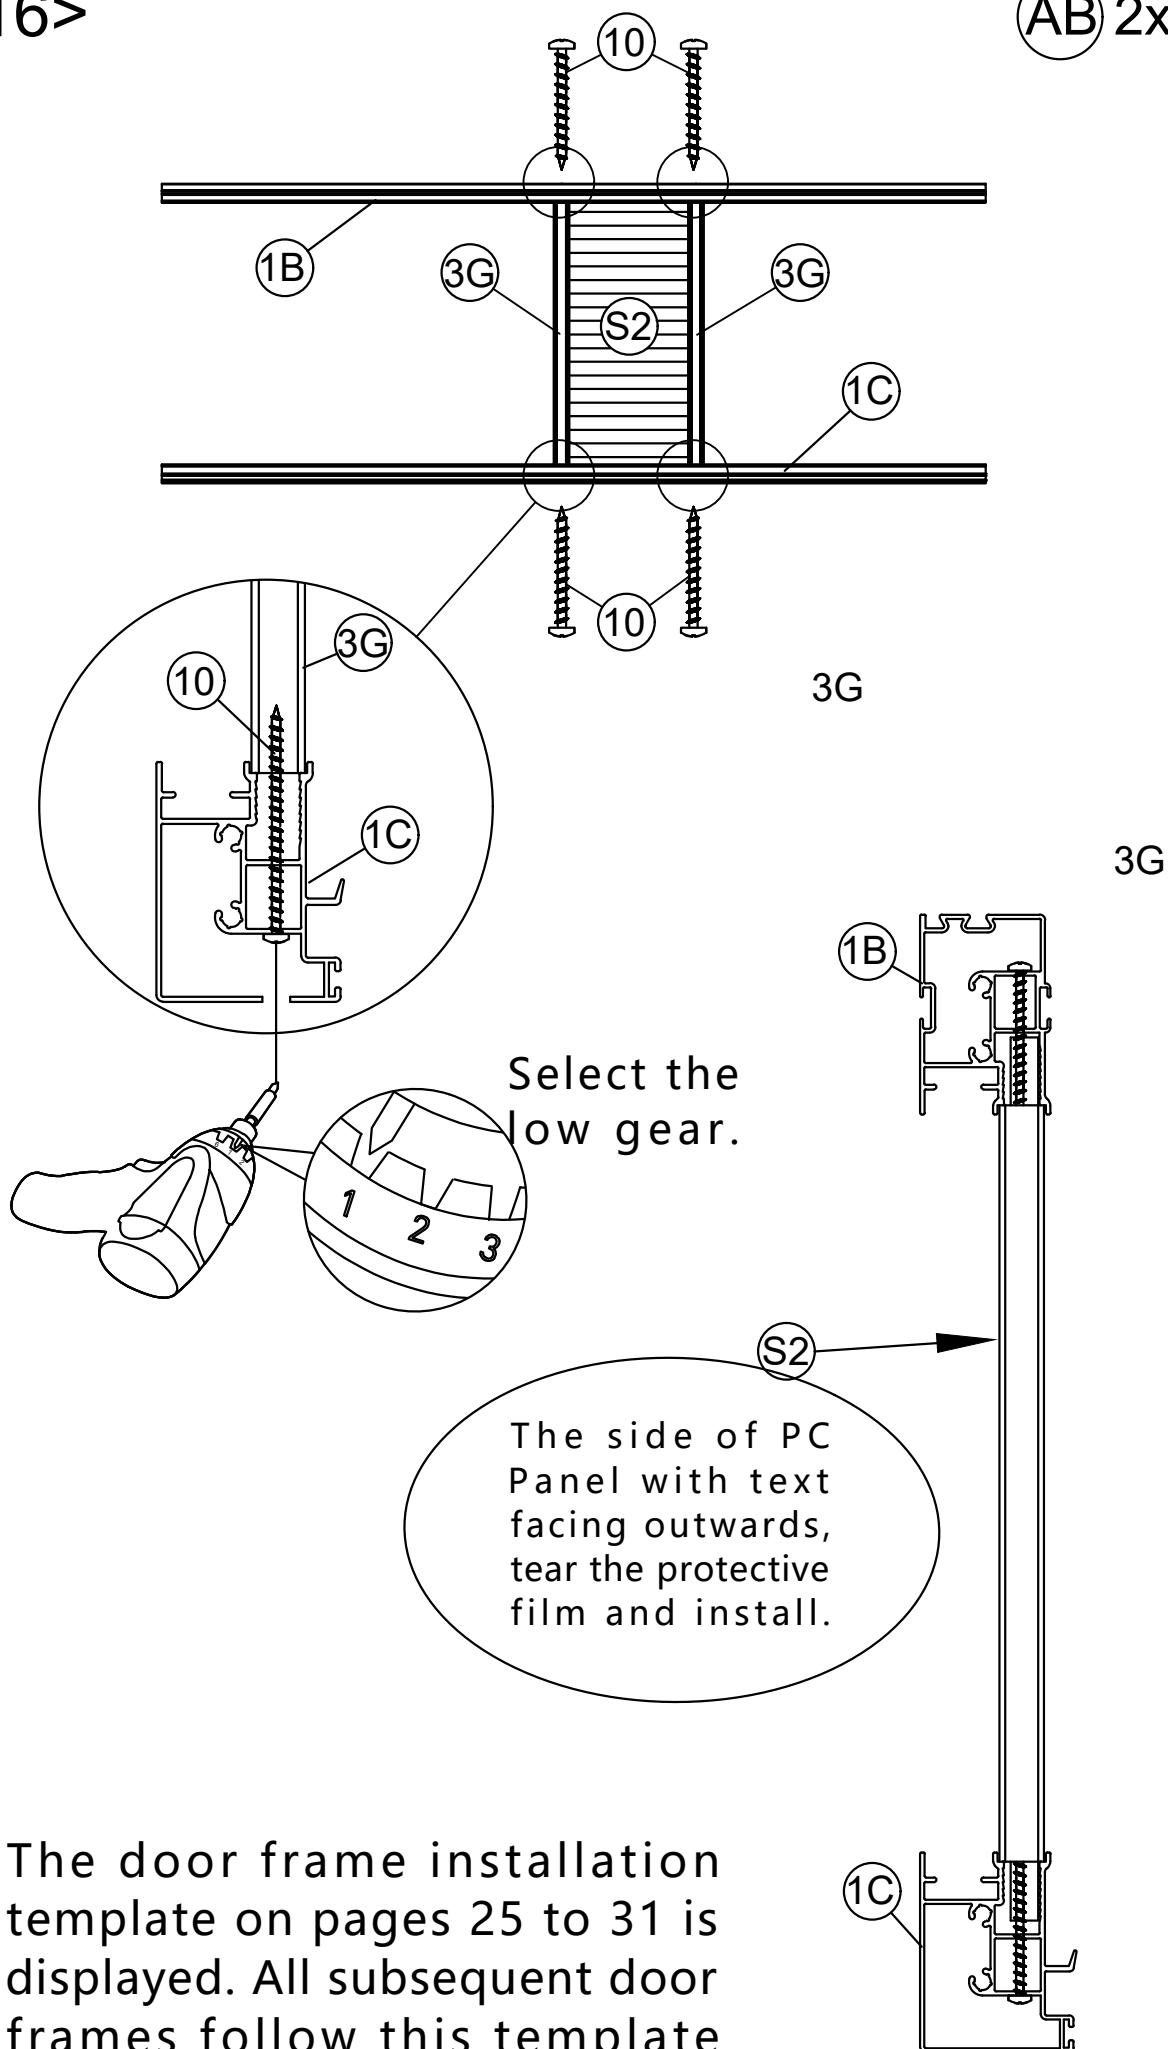


<17>


AB 2x

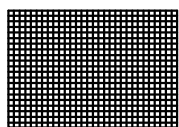

1S 2x


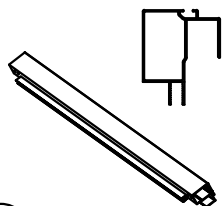


2K 2x



M4x20


8 8x

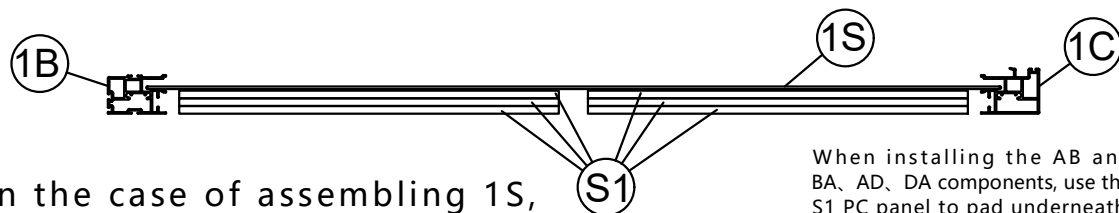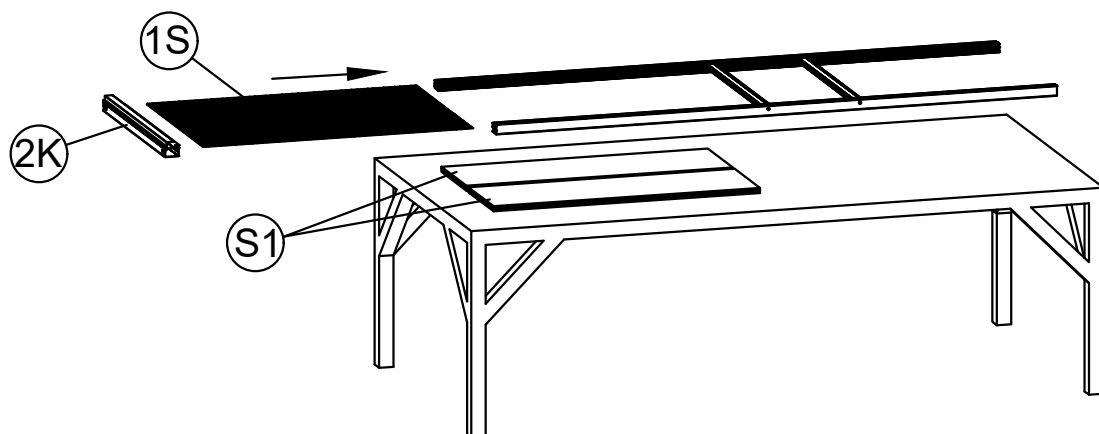

In the case of assembling 1S, borrow 6 sheets of "S1" in two piles and drain the bottom, lift the "1S"

When installing the AB and BA, AD, DA components, use the S1 PC panel to pad underneath.

When installing the AC and CA, AE, EA components, use the U1 PC panel to pad underneath.






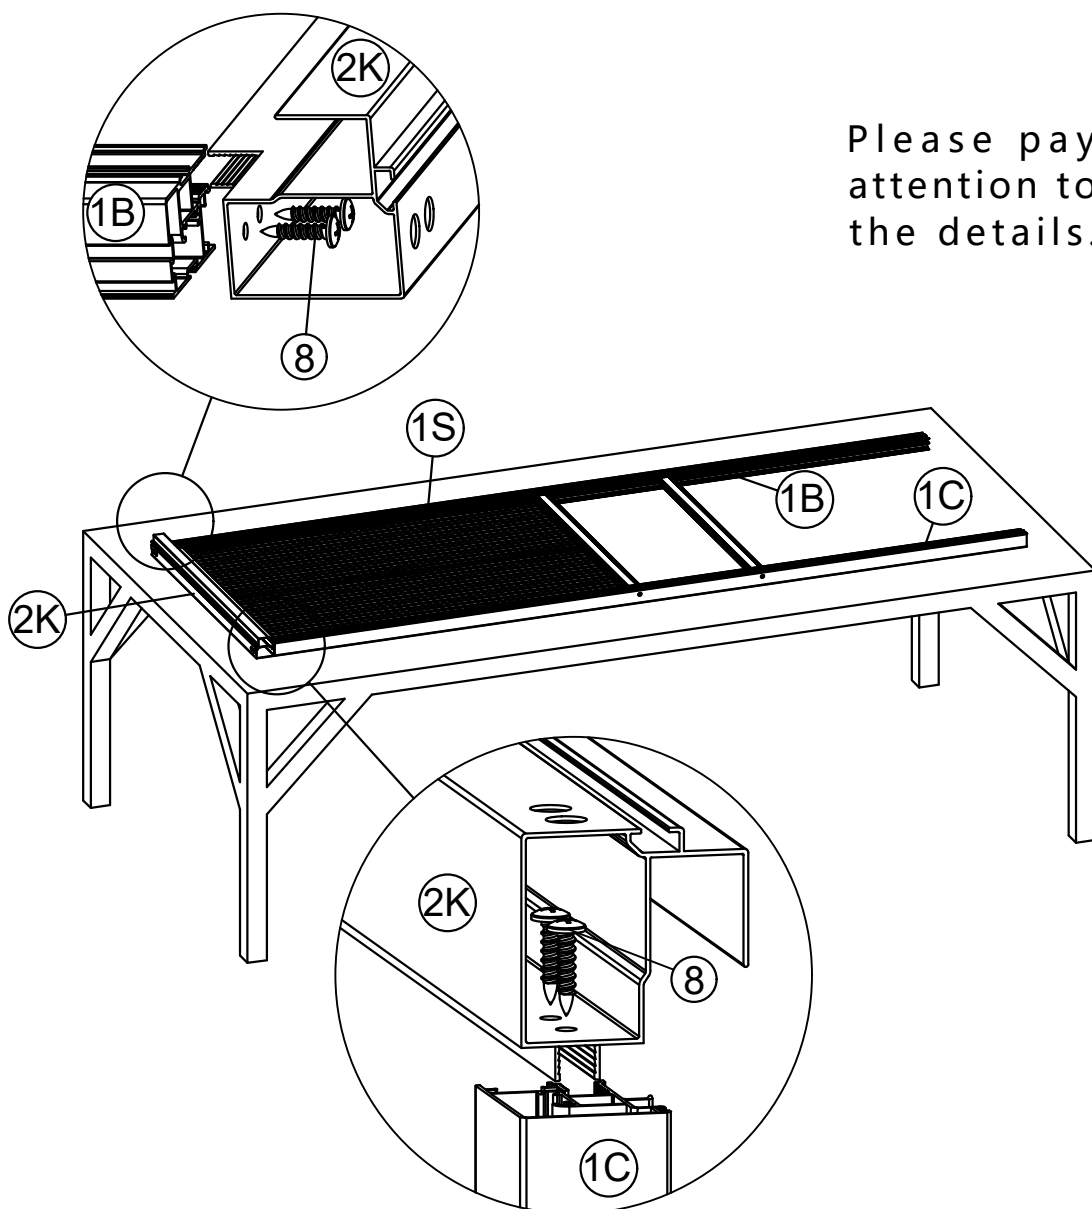


Please pay attention to the details.

<18>

AB 2x

Before installing the parts (1R and 3R), move the gauze by hand to ensure make enough space around the gauze.

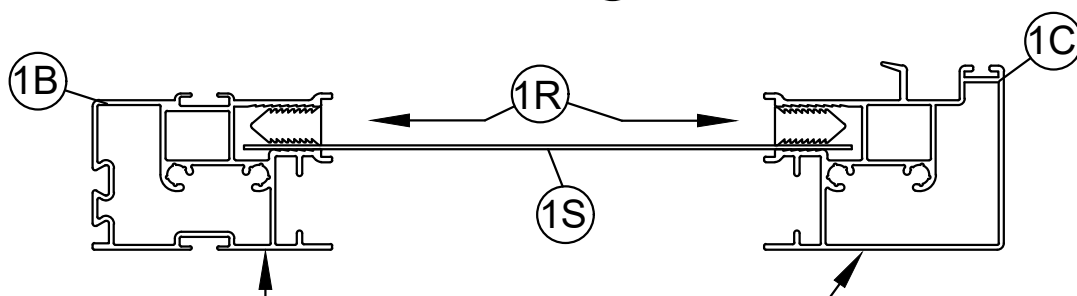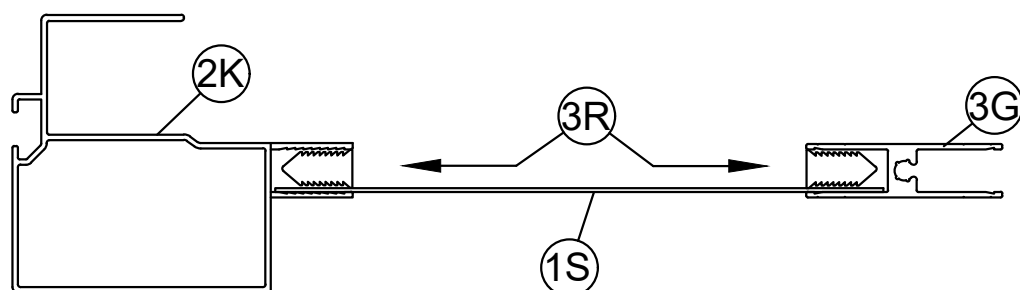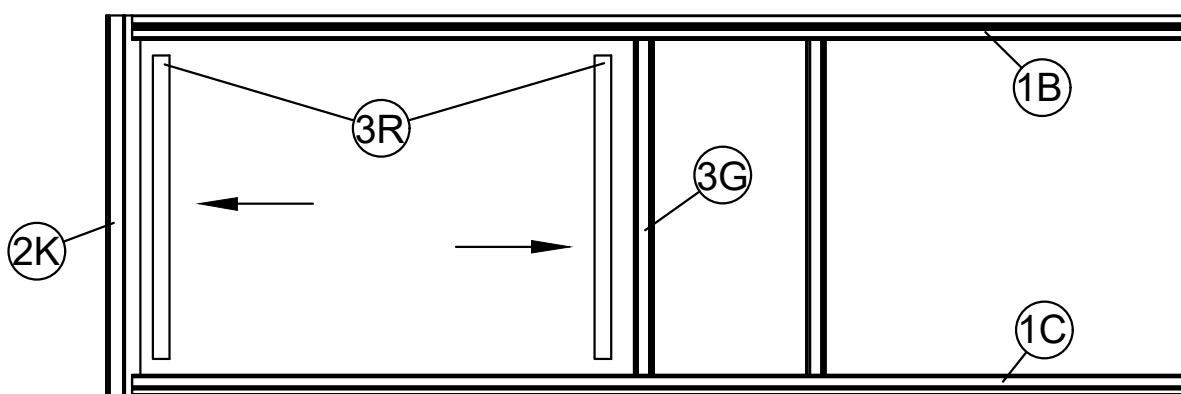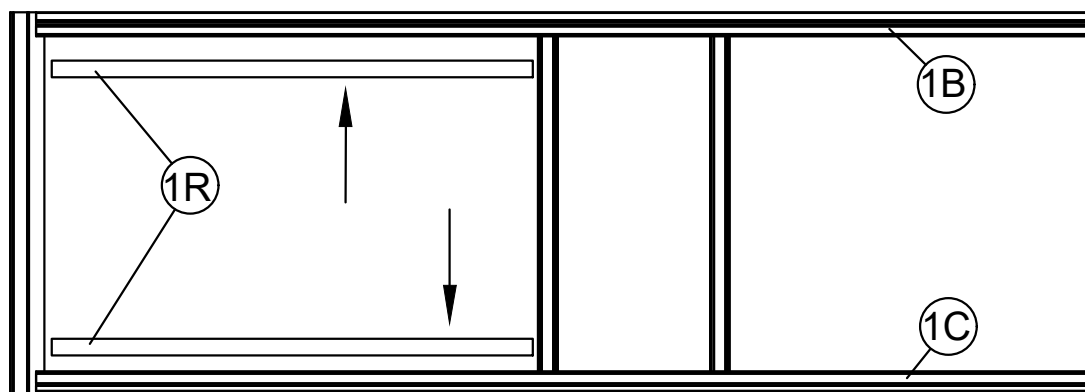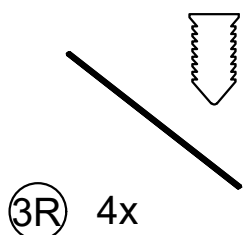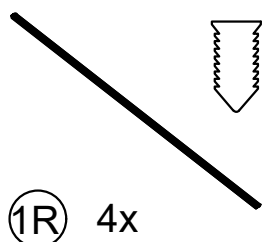


For the convenience of following assembly, please attach the letter sticker AB in a prominent position on the front.

Tip: Other components assembled in the same way as AB require corresponding letter stickers after assembly.


<19>

This picture is for subsequent reference

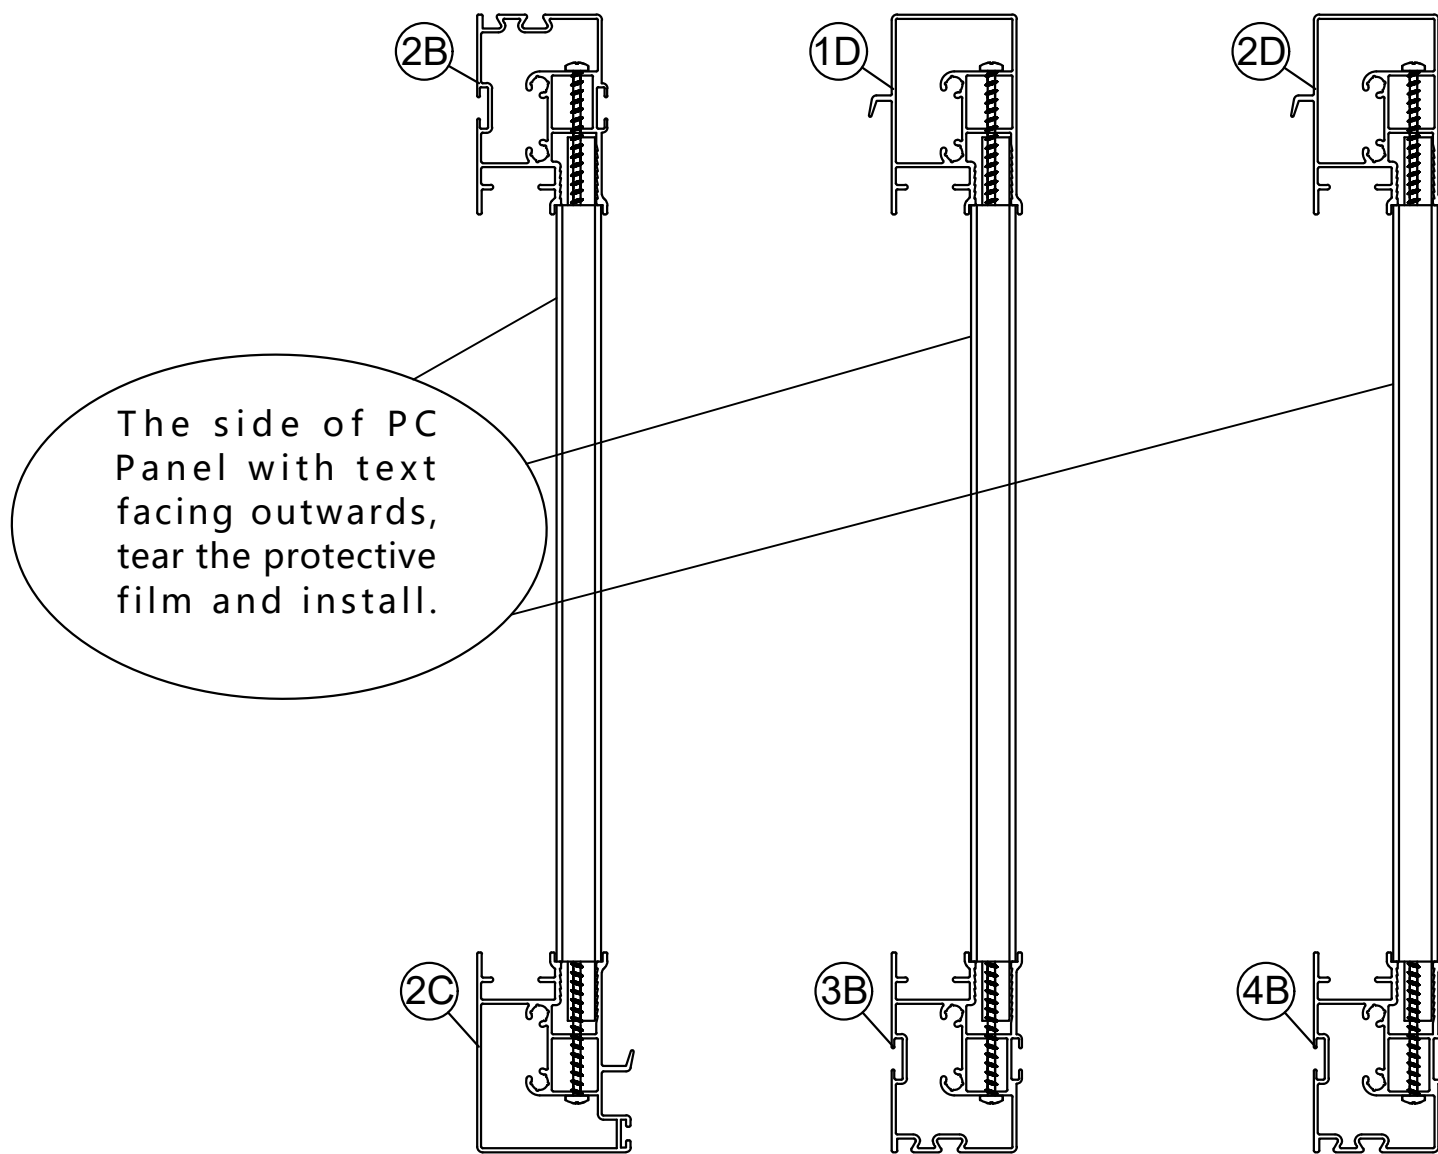


<20>

This picture is for
subsequent reference

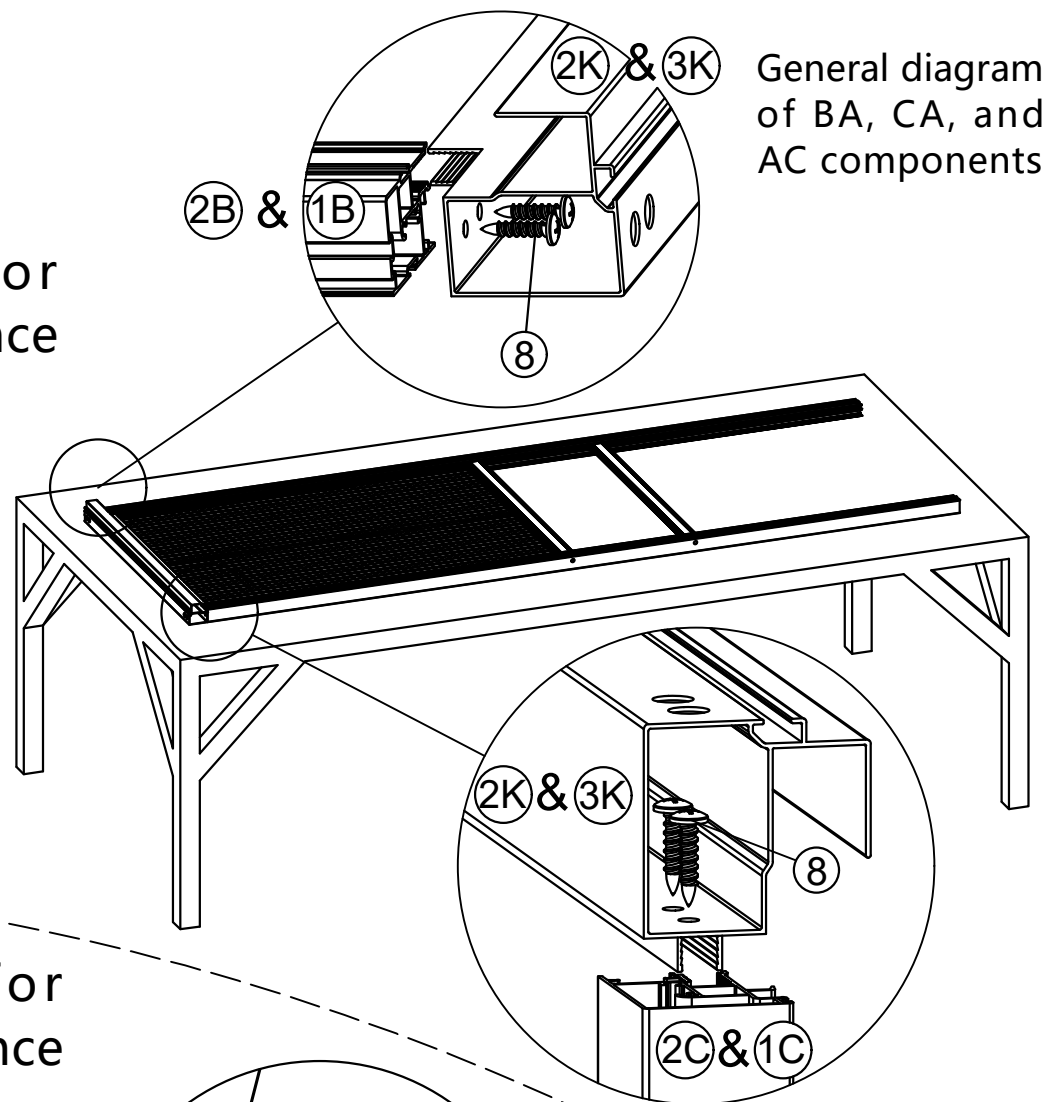


This picture is for
subsequent reference

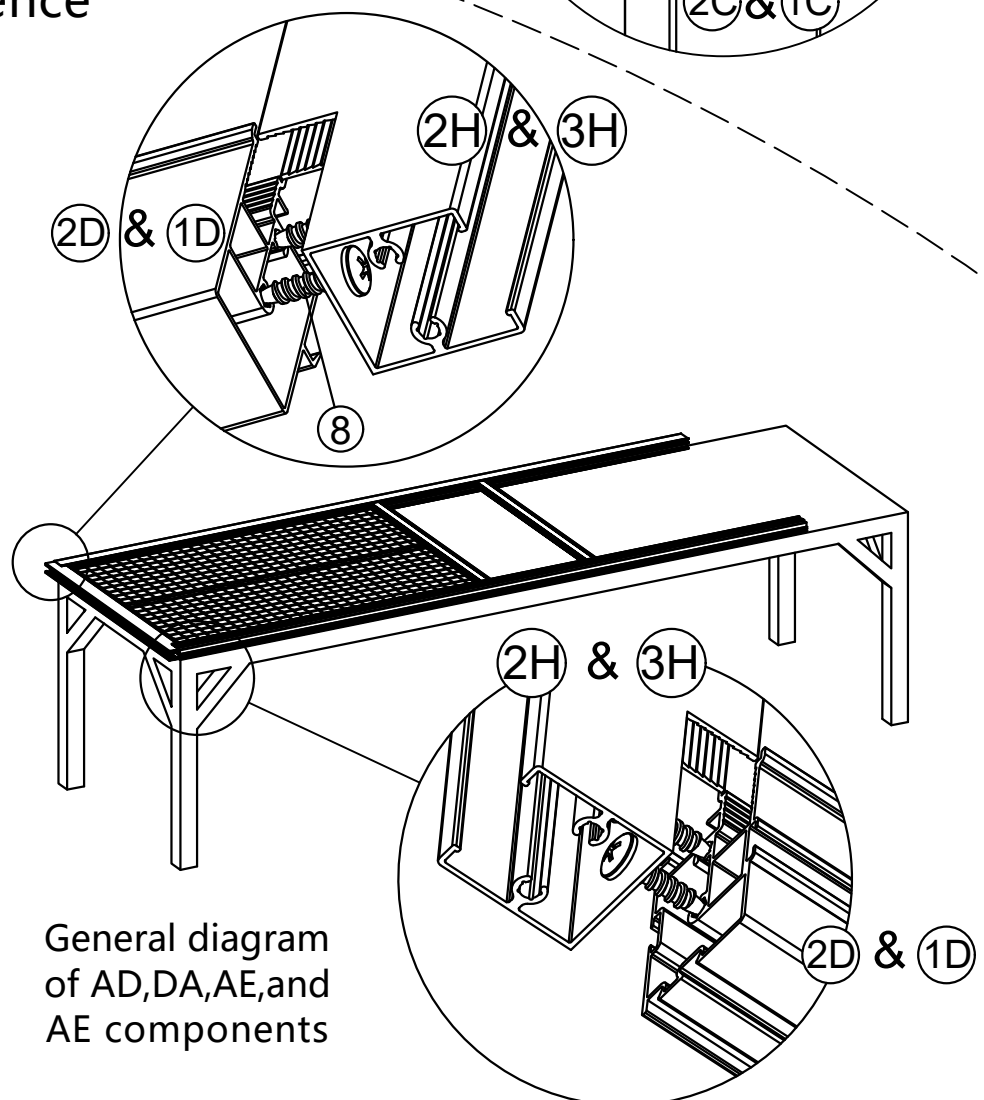


Door frame BA, AC, CA,
AD, DA, AE, EA installation
follow pages 25 to 31

- 2K 2x
- 1R 4x
- 3R 4x
- 3G 4x
- 1S 2x
- S2 2x
- 2B 2x
- 2C 2x
- 10 8x
- 8 8x

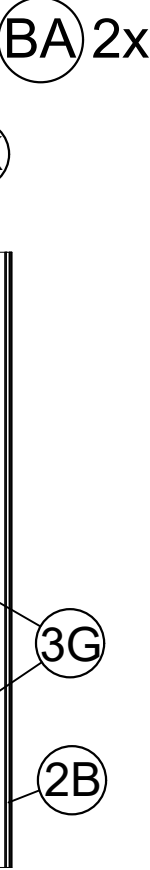



- 3K 1x
- 1R 2x
- 4R 2x
- 4G 2x
- 3S 1x
- U2 1x
- 1B 1x
- 1C 1x
- 10 4x
- 8 4x

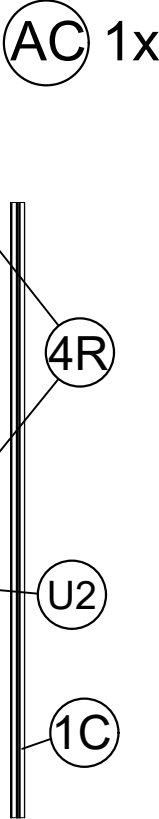





- 3K 1x
- 1R 2x
- 4R 2x
- 4G 2x
- 3S 1x
- U2 1x
- 2B 1x
- 2C 1x
- 10 4x
- 8 4x



Component AB is symmetric
BA, AC is symmetric CA.

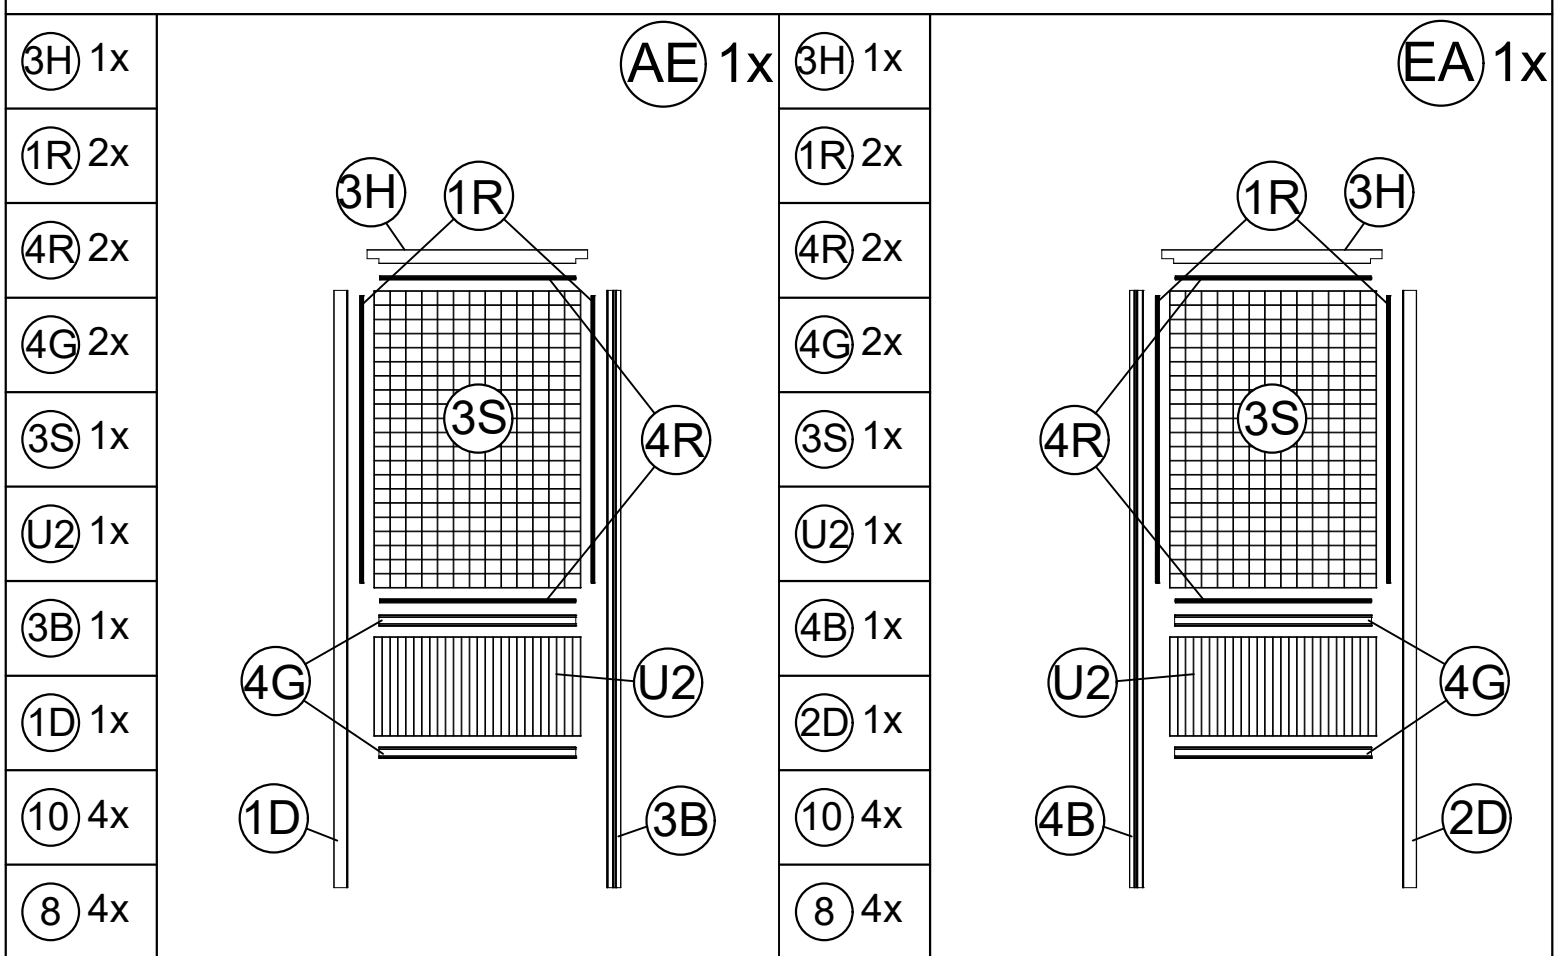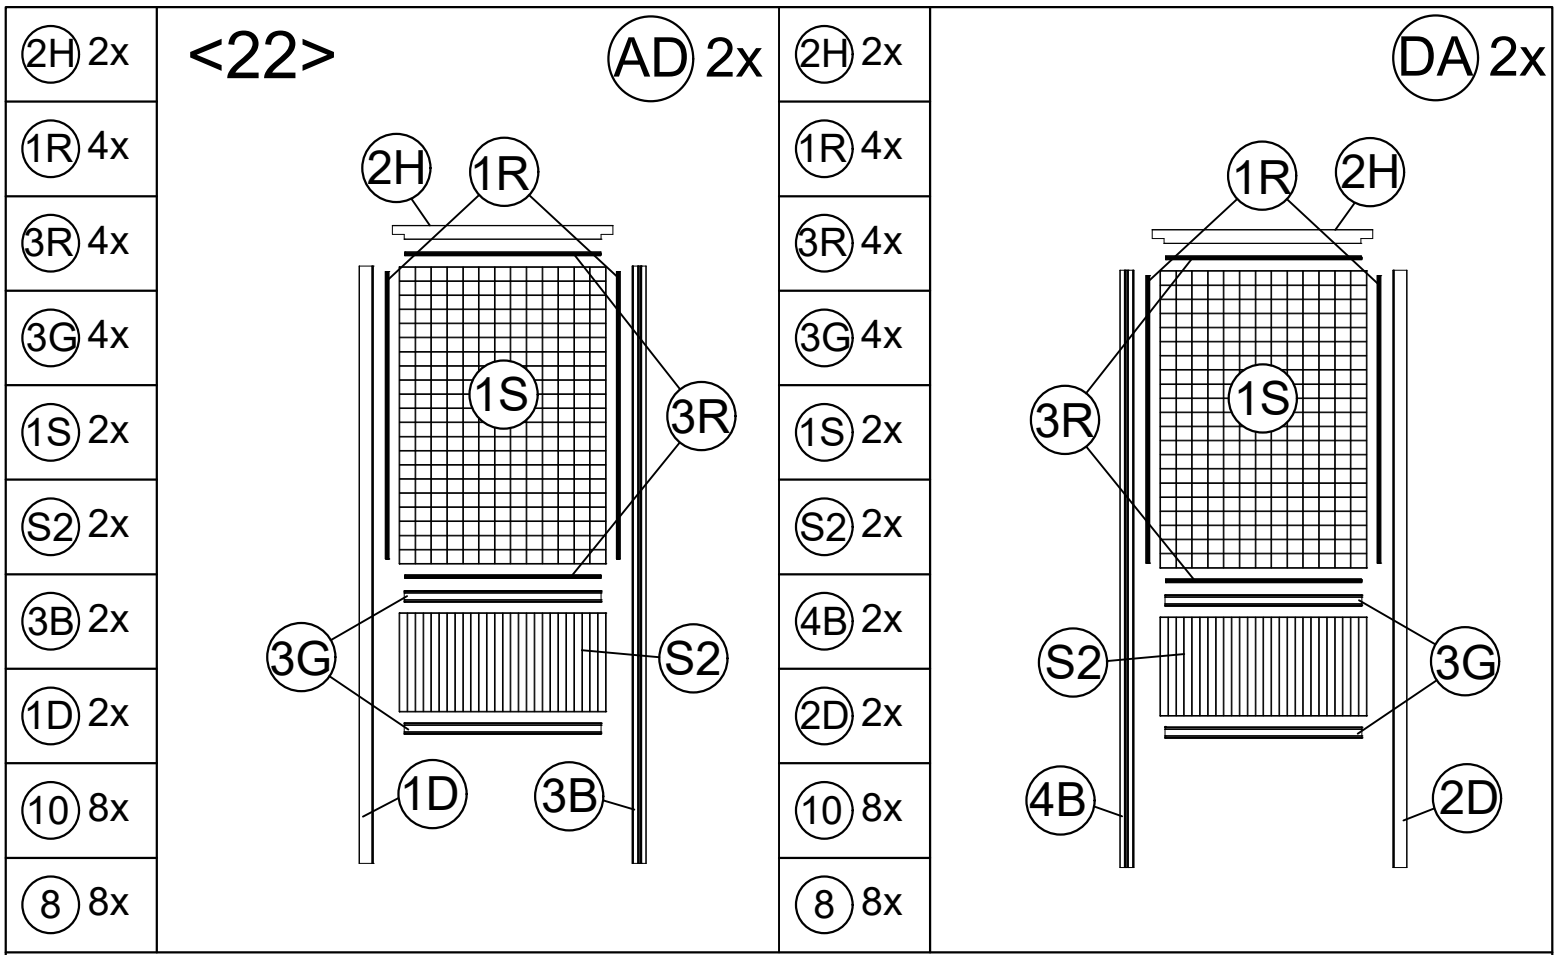


Component AD is symmetric
DA, AE is symmetric EA.

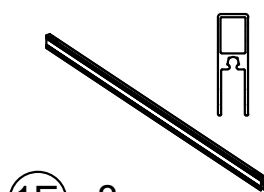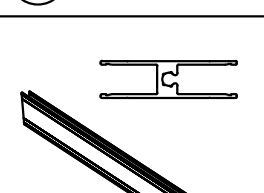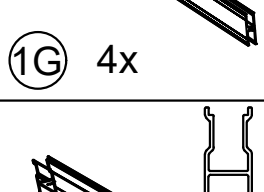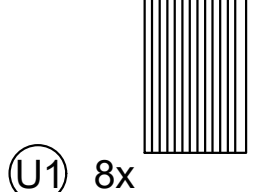- 
 1E 8x
- 
 1G 4x
- 
 3L 8x
- 
 U1 8x
- 
 9 24x

<23>







AG 4x

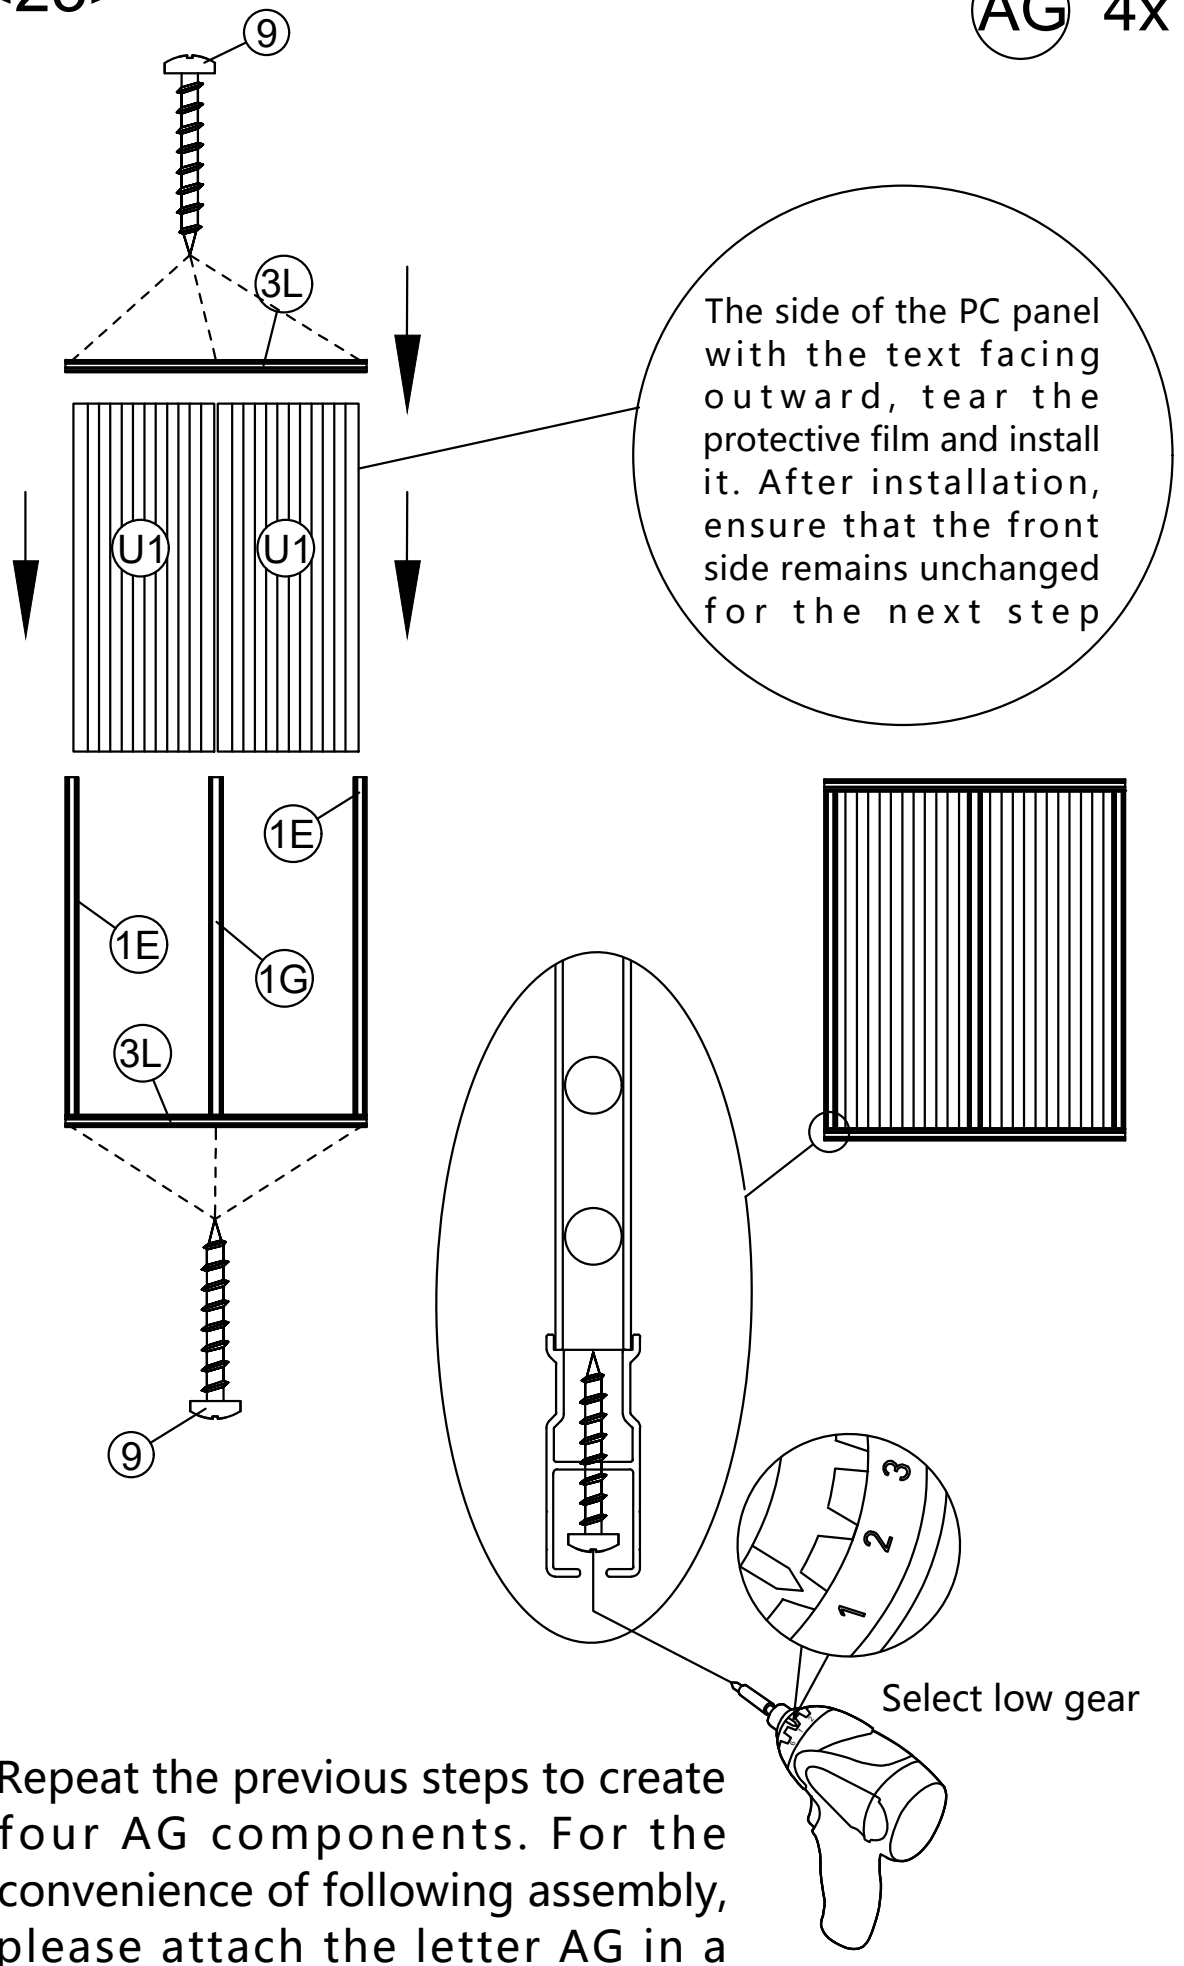


Repeat the previous steps to create four AG components. For the convenience of following assembly, please attach the letter AG in a prominent position on the front.

<24>

AF 8x

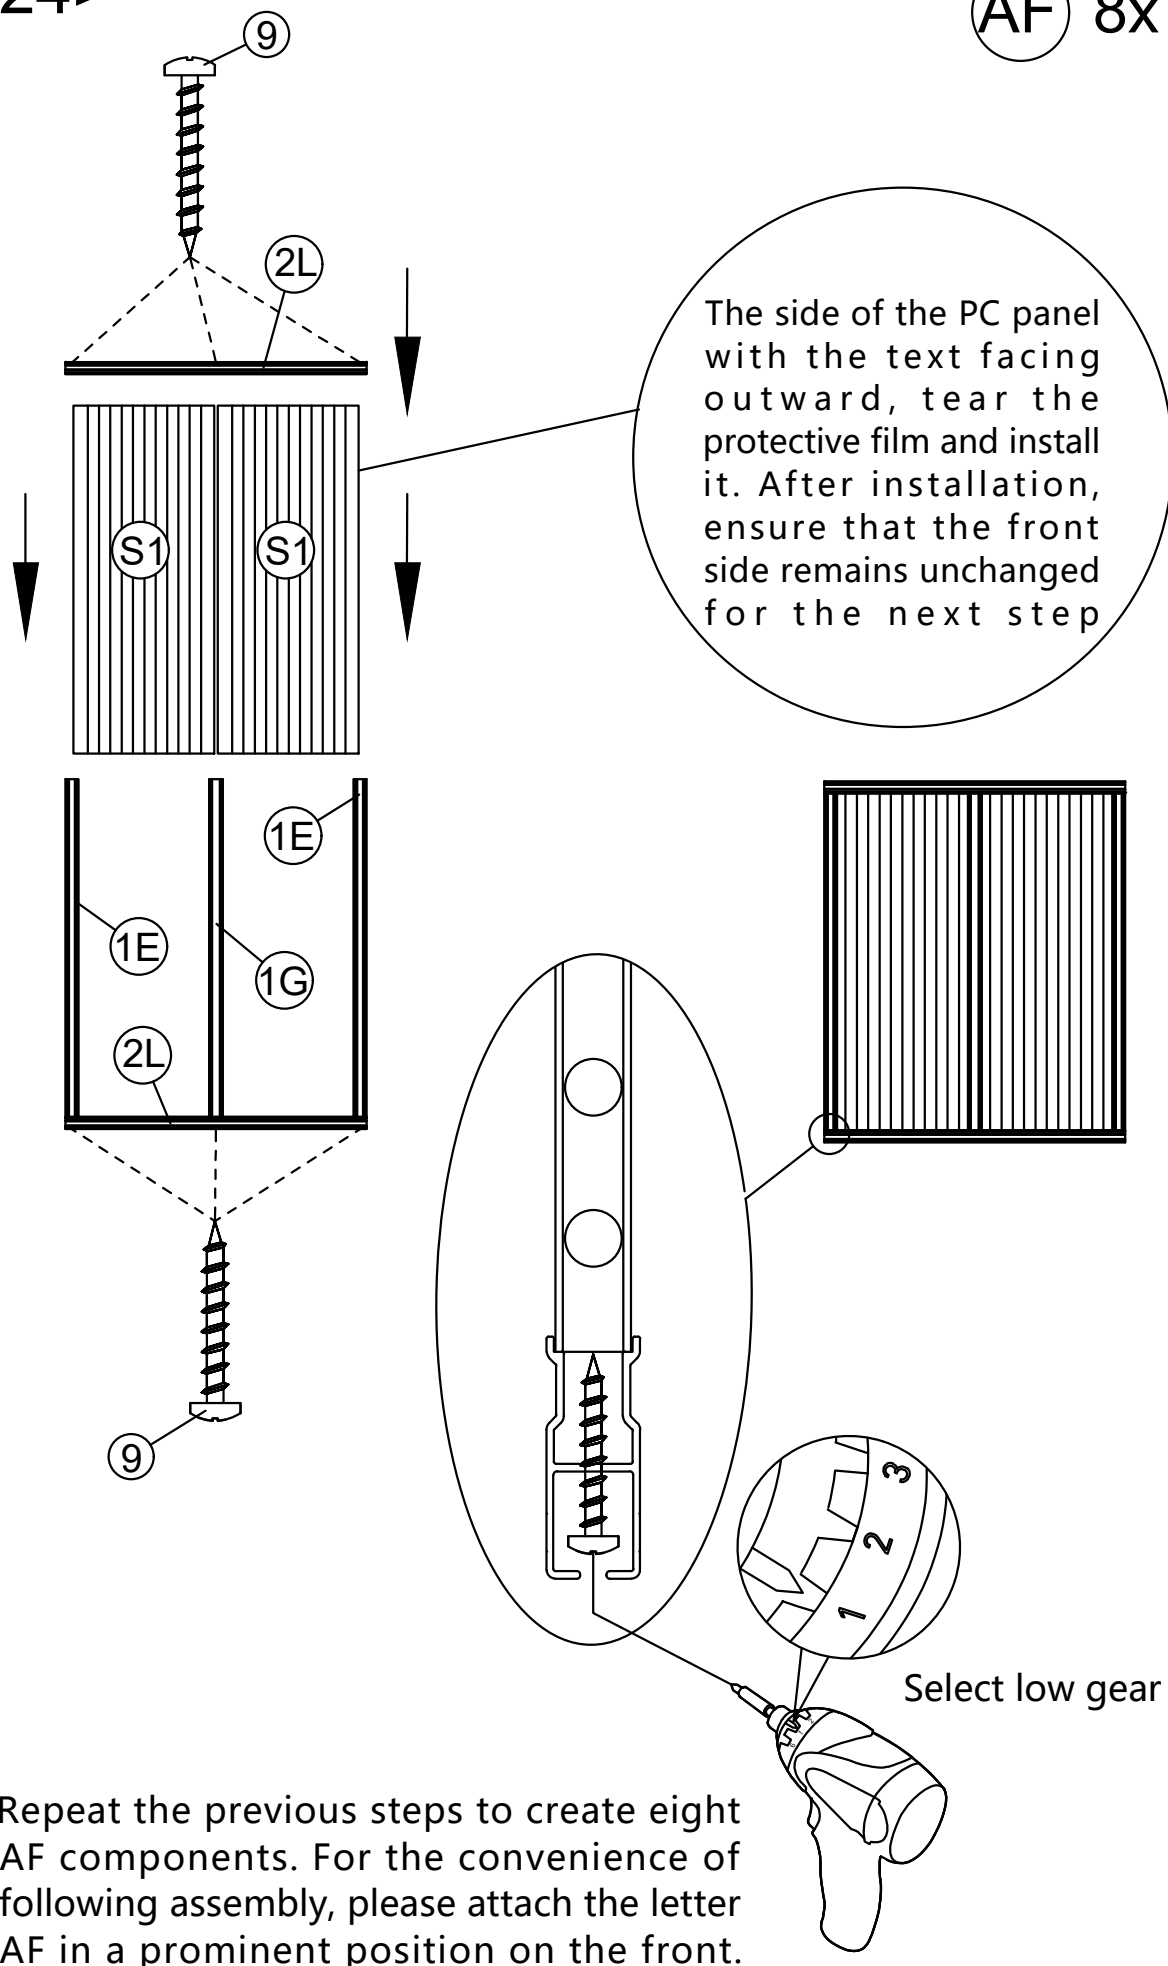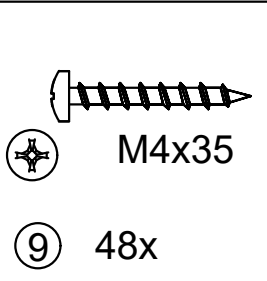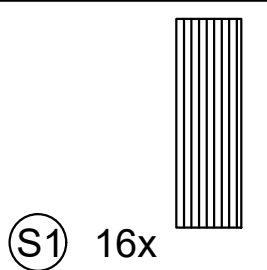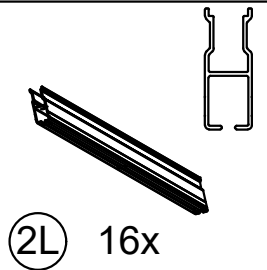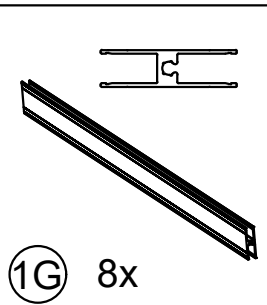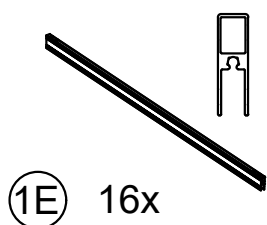





(D1) 8x




(D2) 16x



(1A) 2x








(D3) 4x

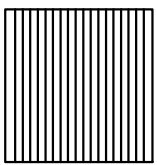


(S3) 2x

<25>

(AB) 2x

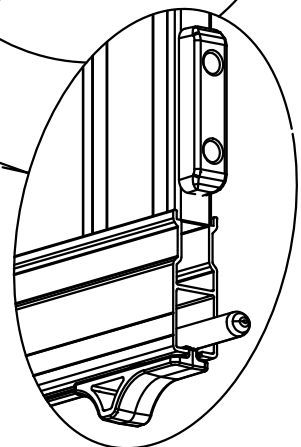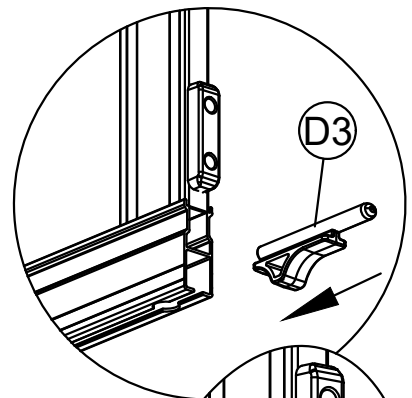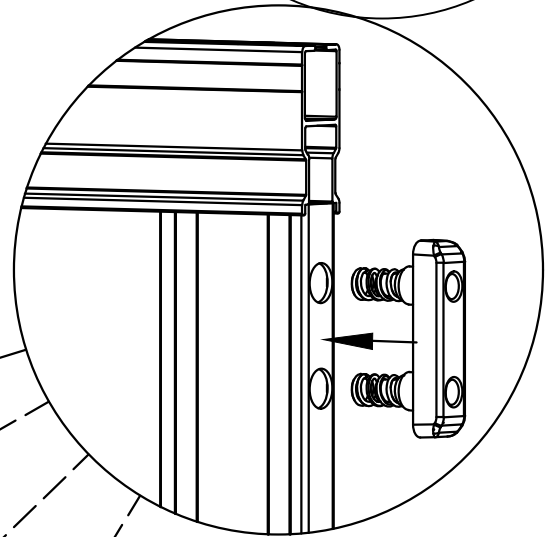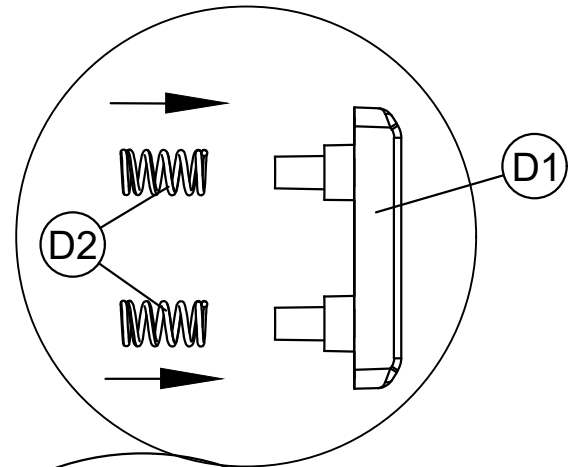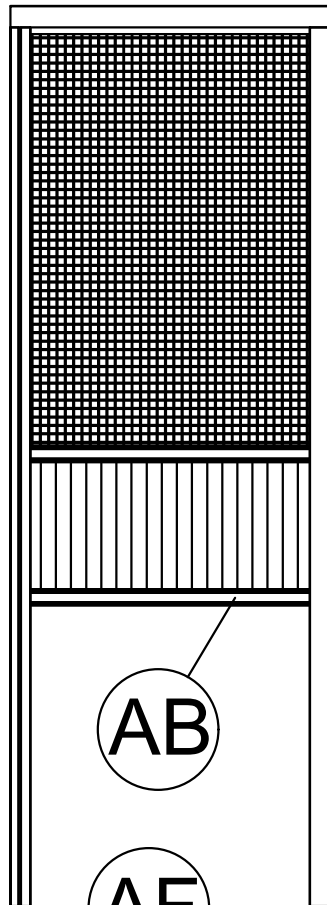

(1A)

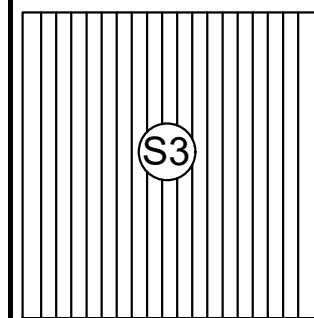


(S3)


(S3)

The side of PC Panel with text facing outwards, tear the protective film and install.



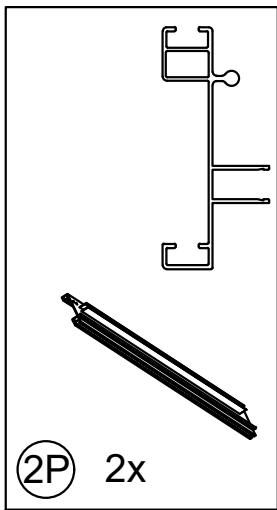

(2P) 2x

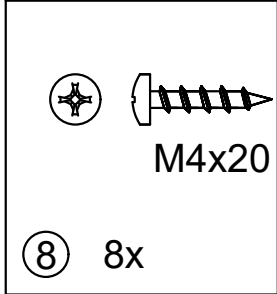


M4x20

(8) 8x


<26>

(AB) 2x

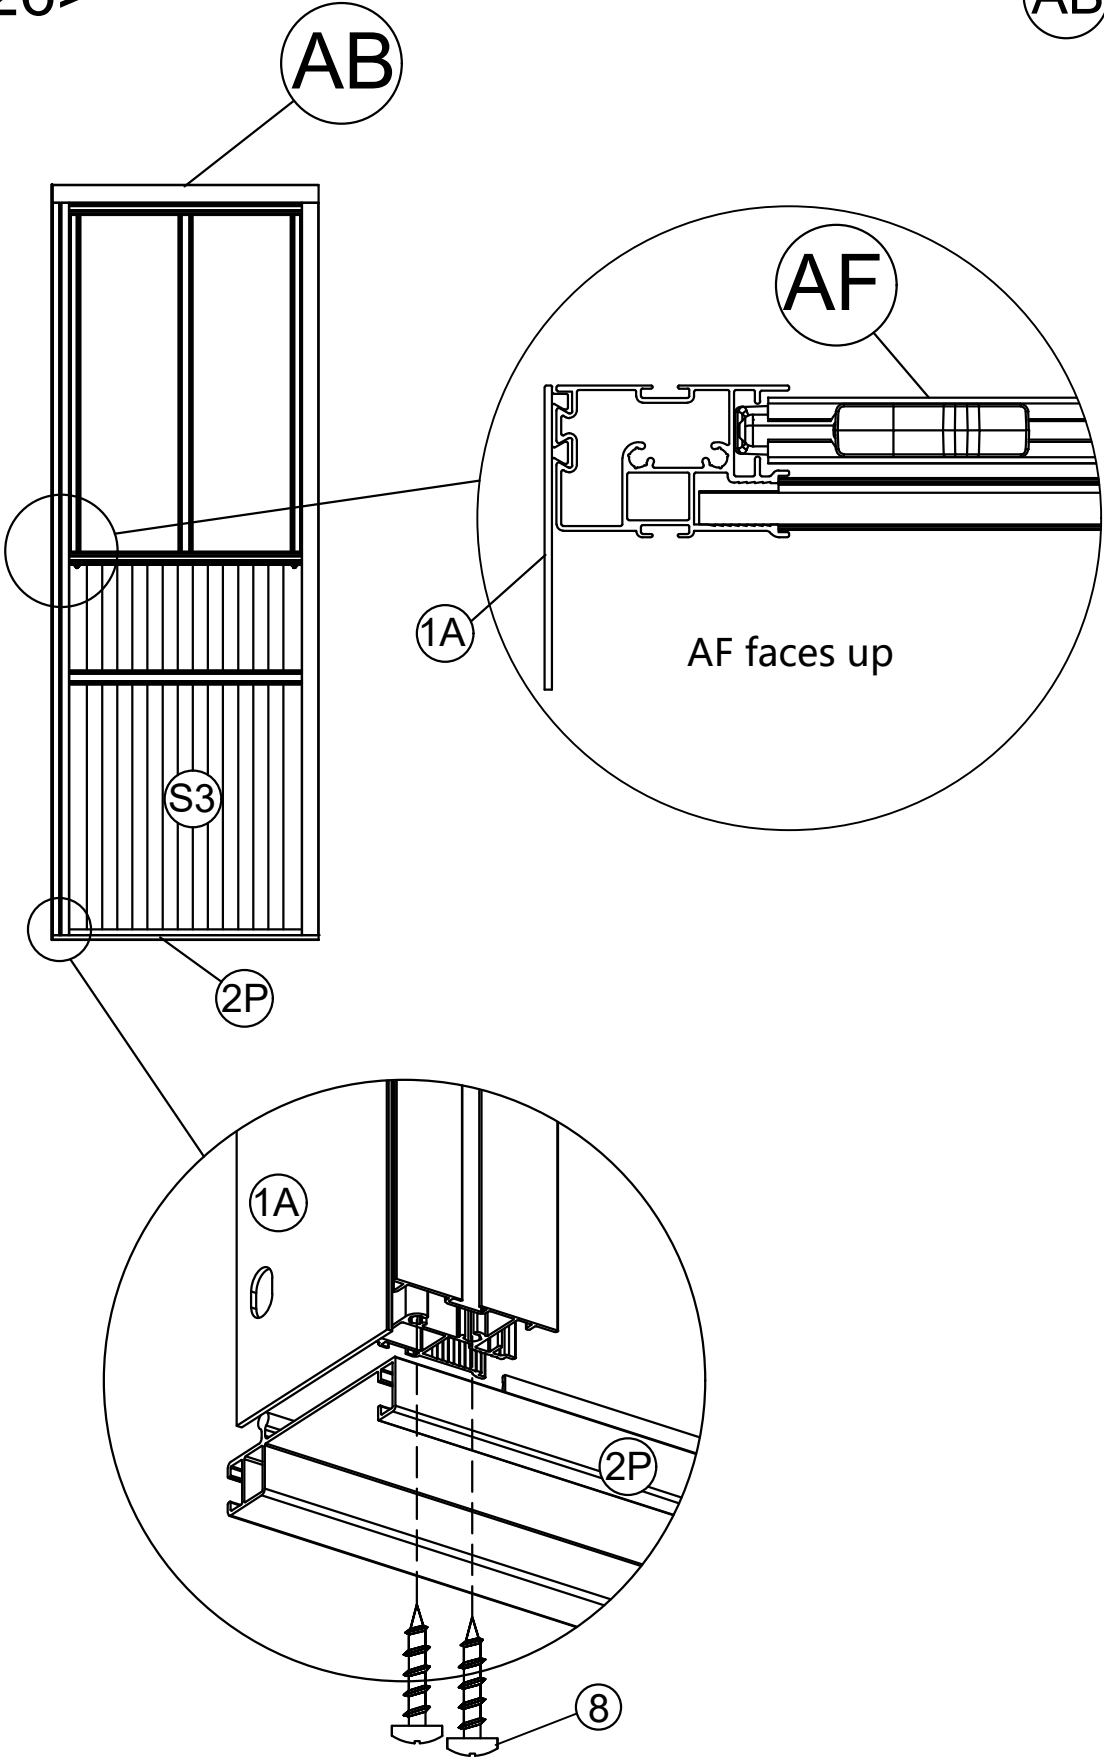


Door frame BA, AC,
CA installation follow
pages 34 to 36


- (S3) 2x
- (2P) 2x
- (2A) 2x
- (D1) 8x
- (D2) 16x
- (D3) 4x
- (8) 8x

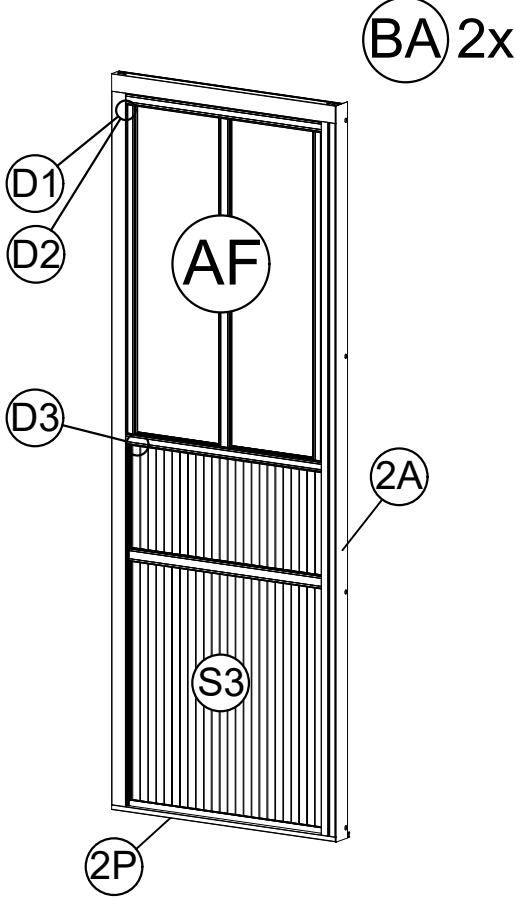

- (U3) 1x
- (3P) 1x
- (1A) 1x
- (D1) 4x
- (D2) 8x
- (D3) 2x
- (8) 4x

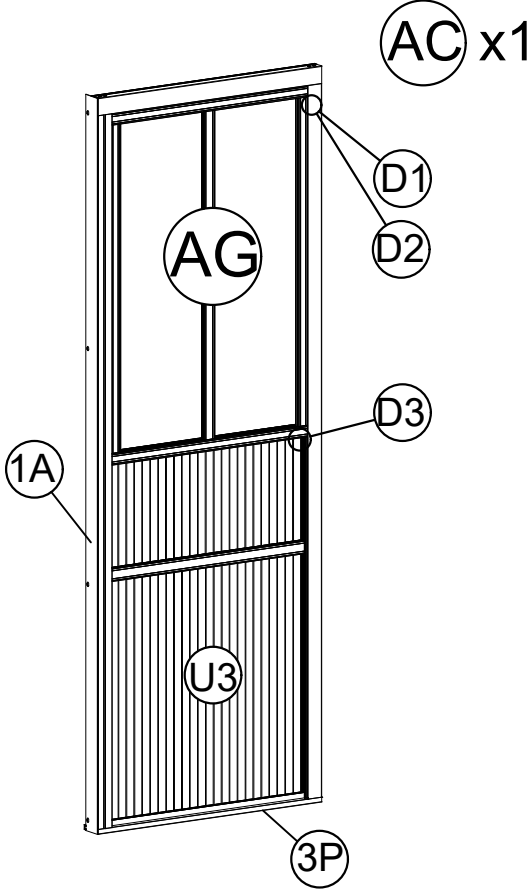


- (U3) 1x
- (3P) 1x
- (2A) 1x
- (D1) 4x
- (D2) 8x
- (D3) 2x
- (8) 4x

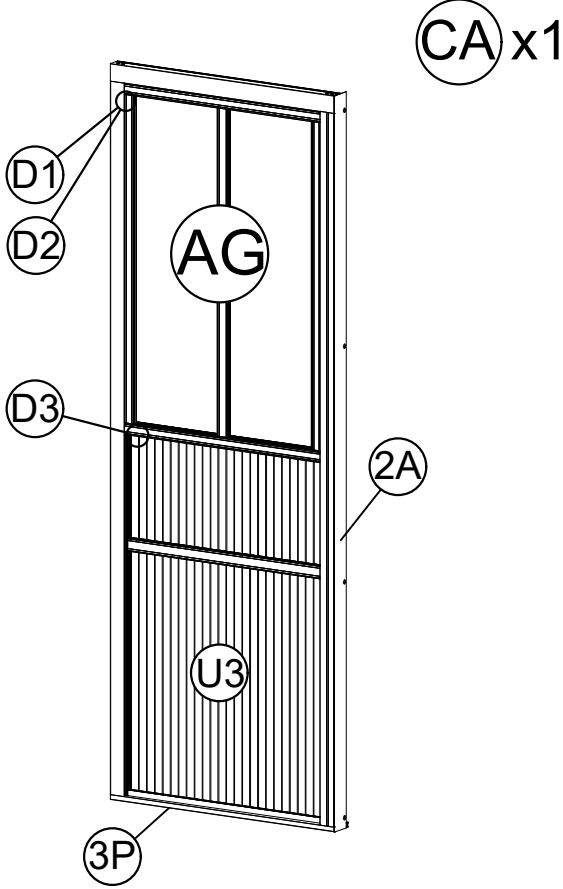

<28>


AD 2x

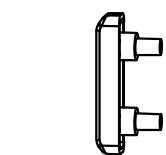


D1 8x




D2 16x

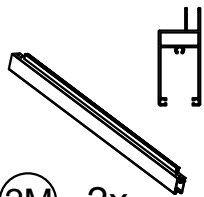






2M 2x



D3 4x

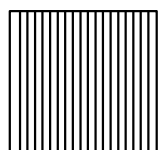


S4 2x

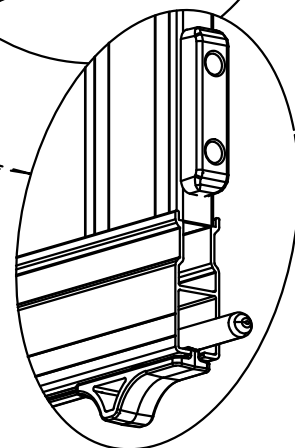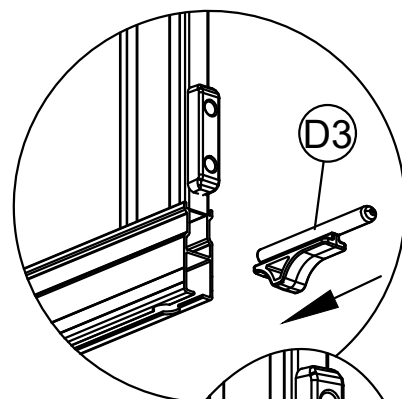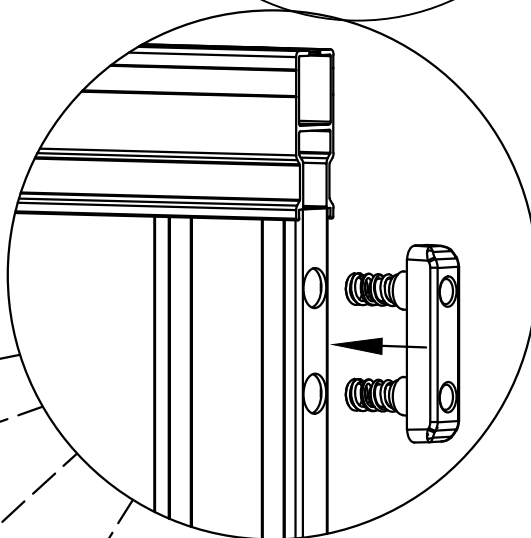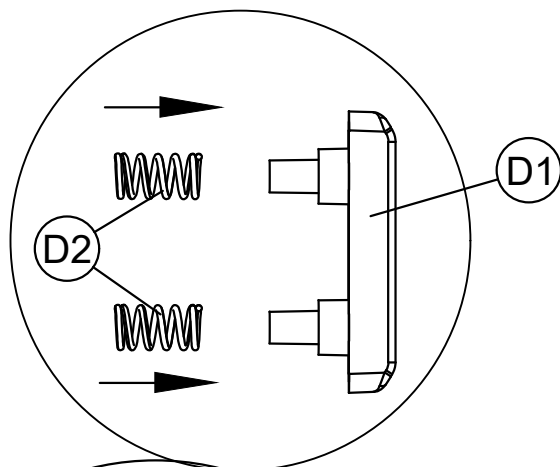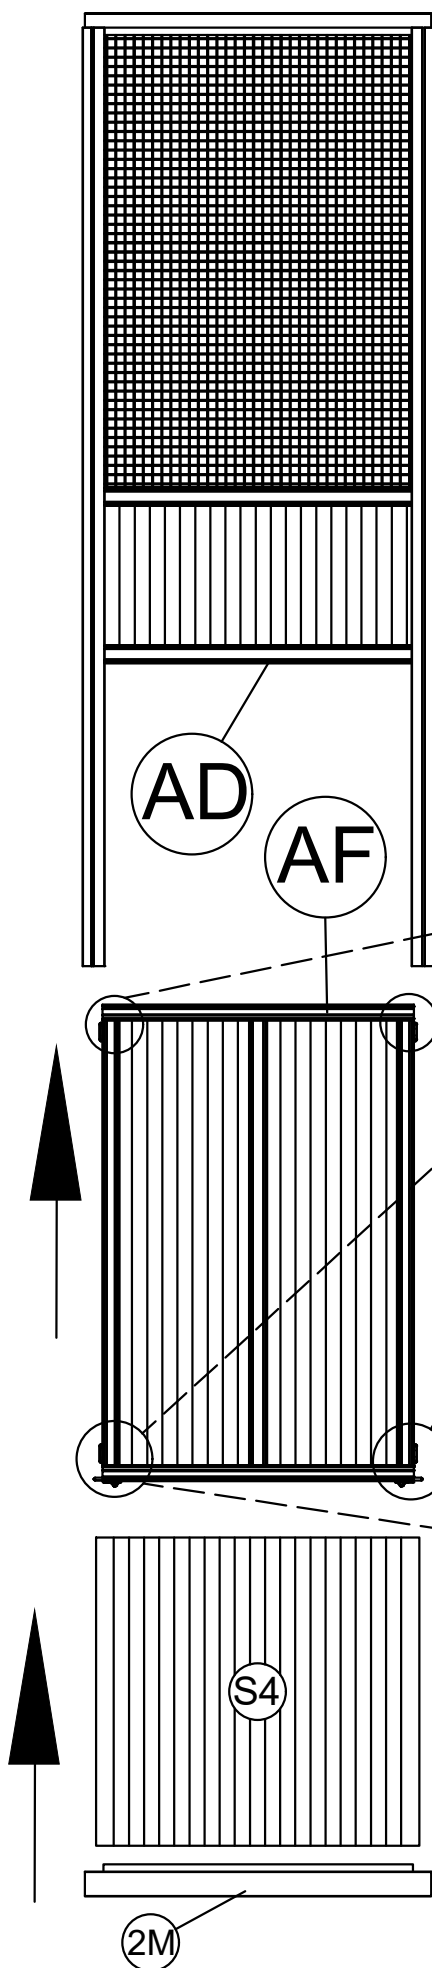


S4
The side of PC
Panel with text
facing outwards,
tear the protective
film and install.


<29>

AD 2x




8 8x

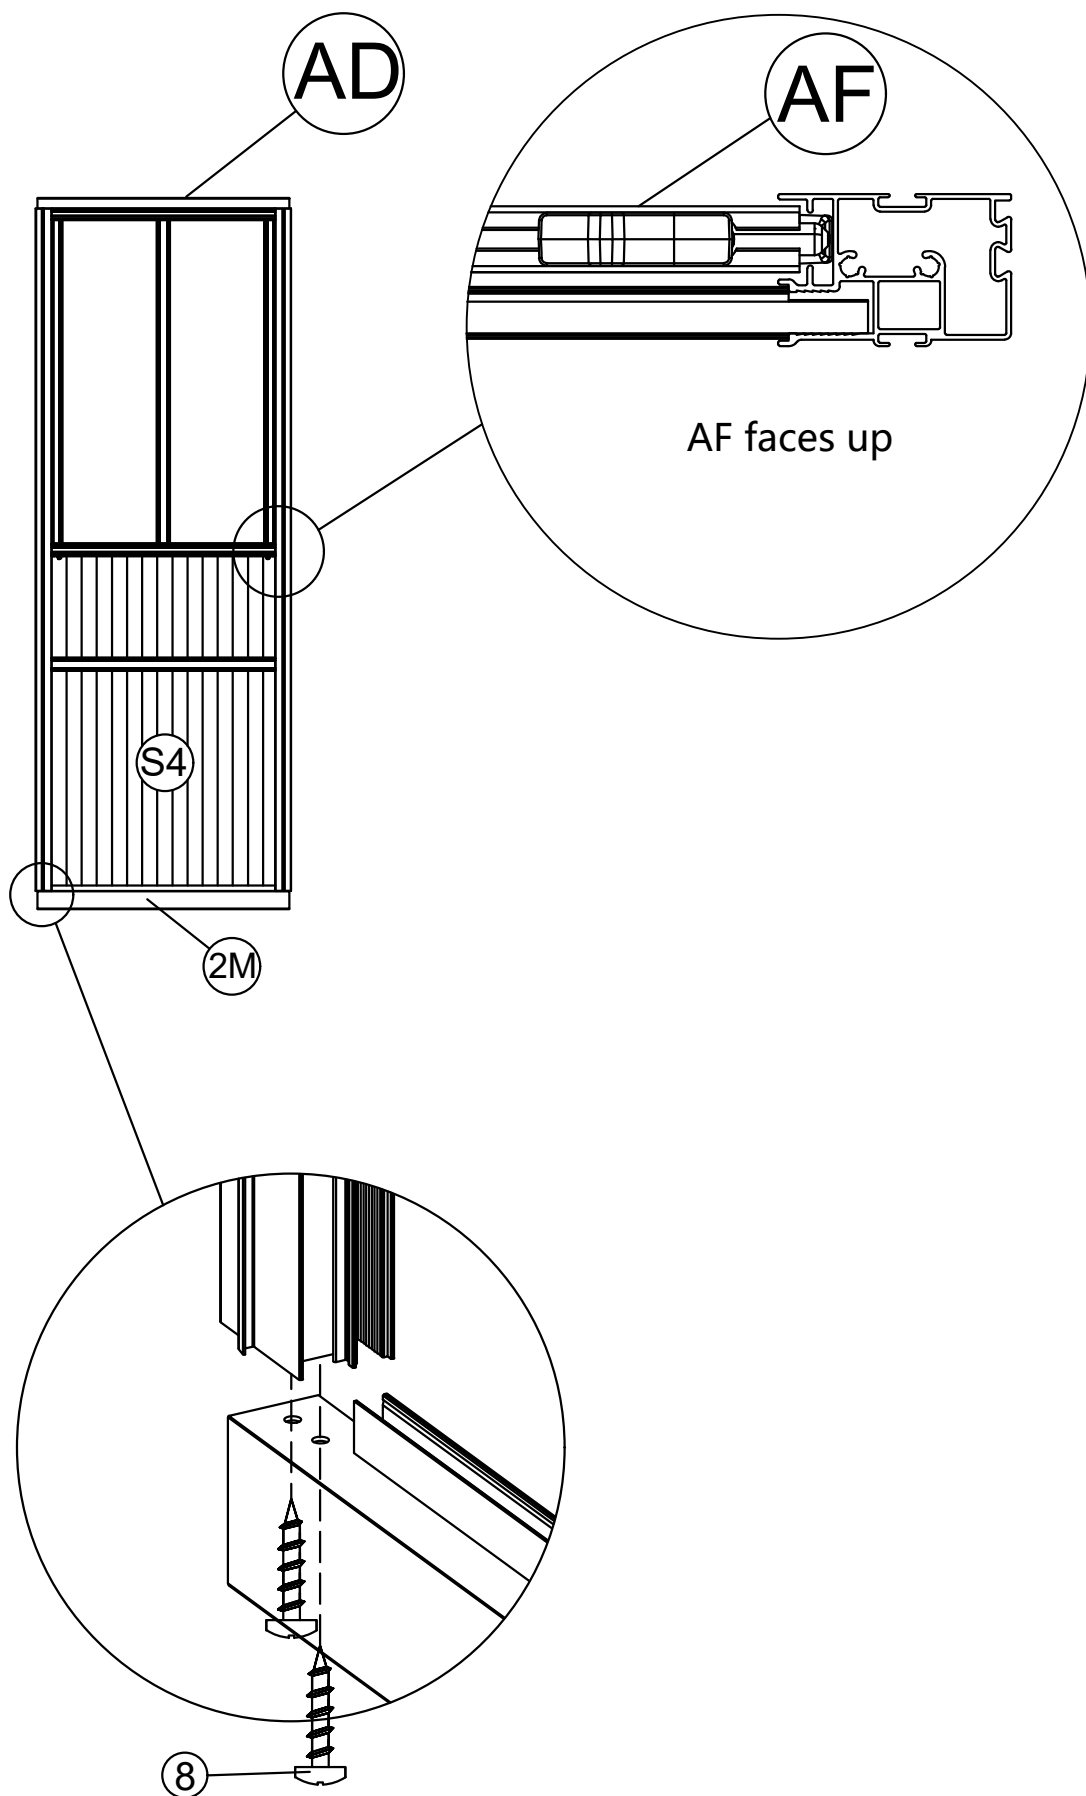





D5 4x



D4 4x

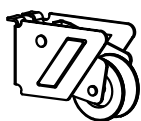


4 4x



M4x20

8 8x




M4x35

9 4x


<30>

AD 2x

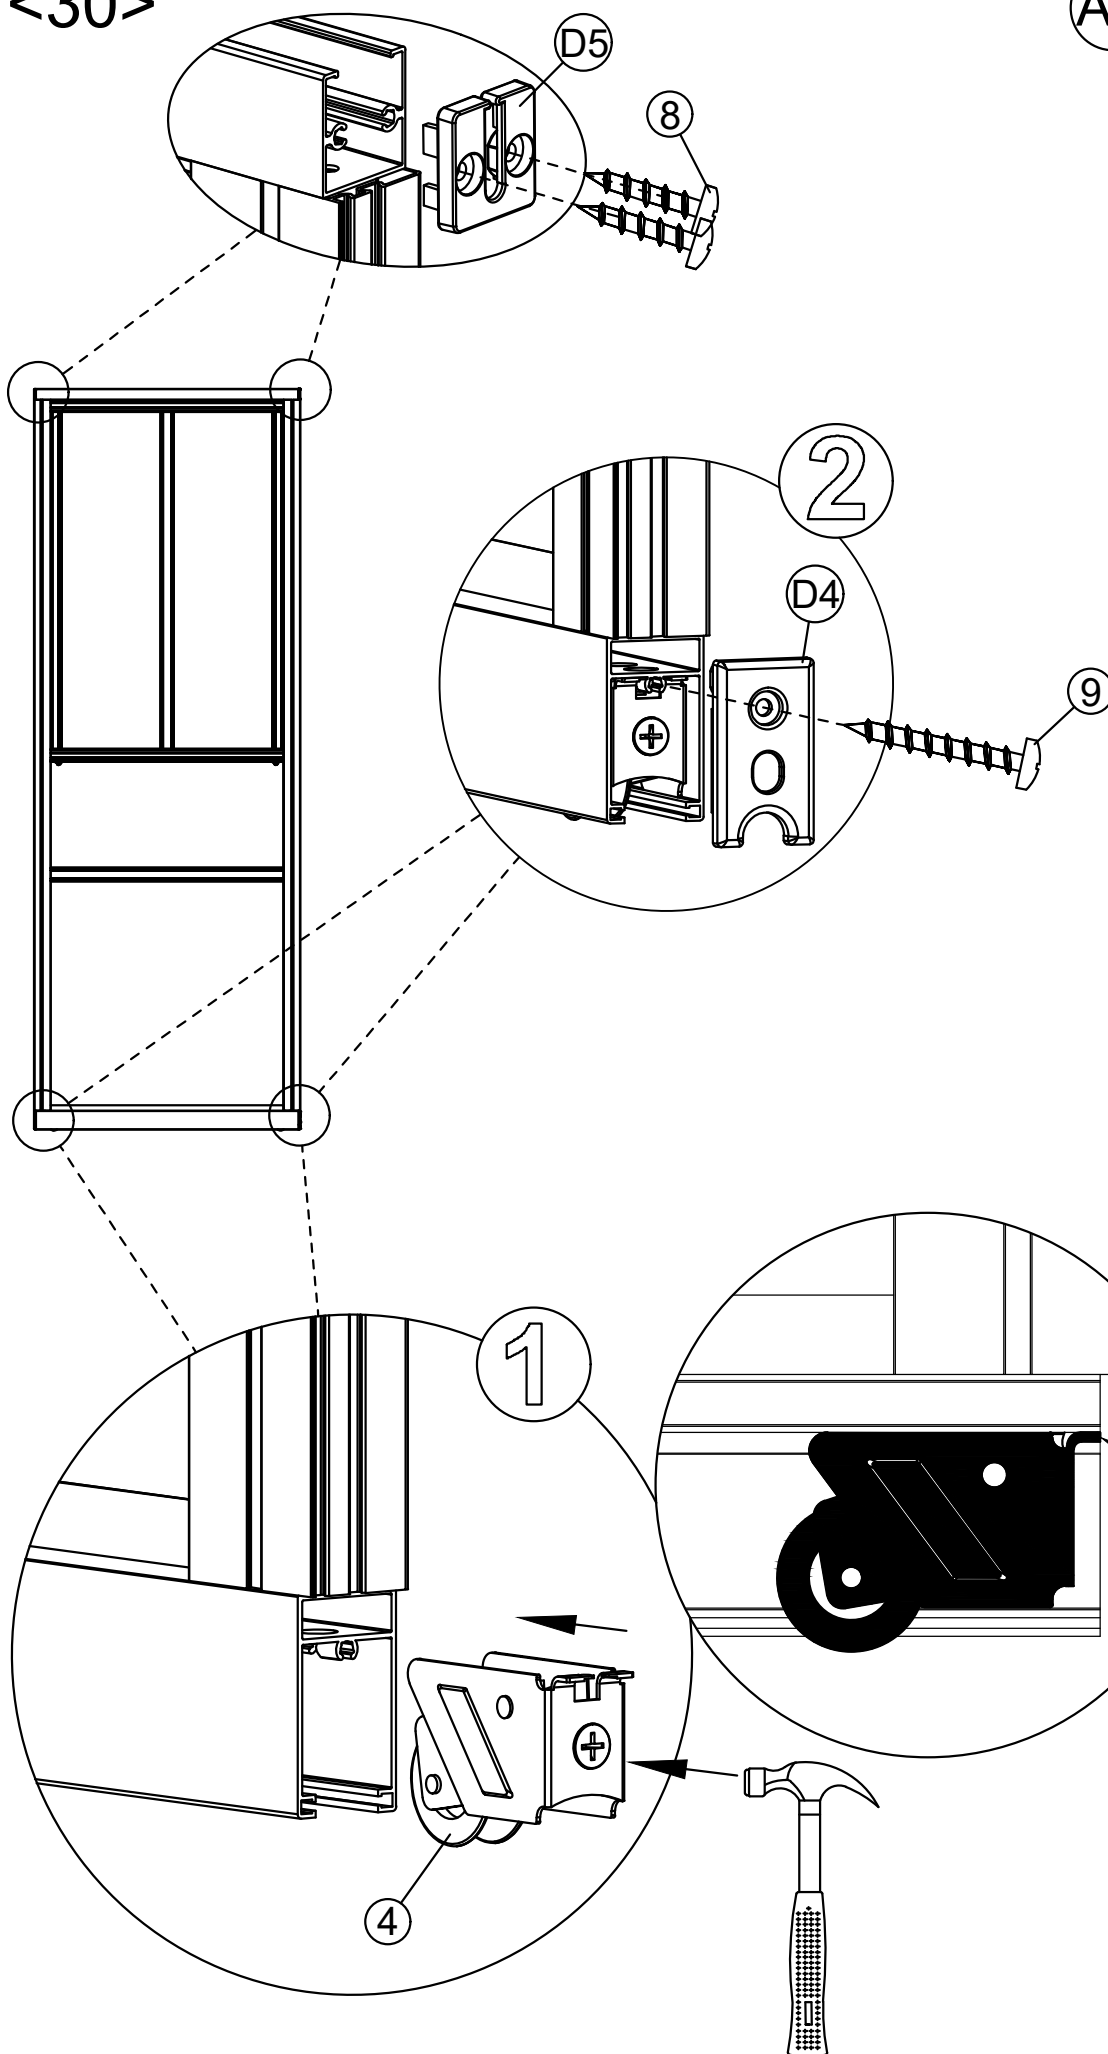


Door frame DA, AE,
EA installation follow
pages 37 to 40


- (2M) 2x
- (S4) 2x
- (D1) 8x
- (D2) 16x
- (D3) 4x
- (D4) 4x
- (D5) 4x
- (4) 4x
- (8) 16x
- (9) 4x

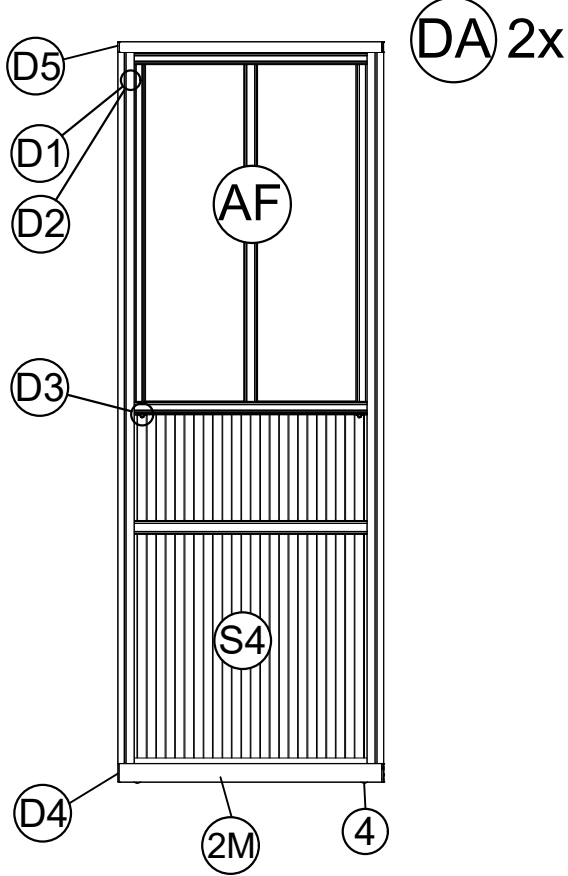

- (3M) 1x
- (U4) 2x
- (D1) 4x
- (D2) 8x
- (D3) 2x
- (D4) 2x
- (D5) 2x
- (4) 2x
- (8) 8x
- (9) 2x

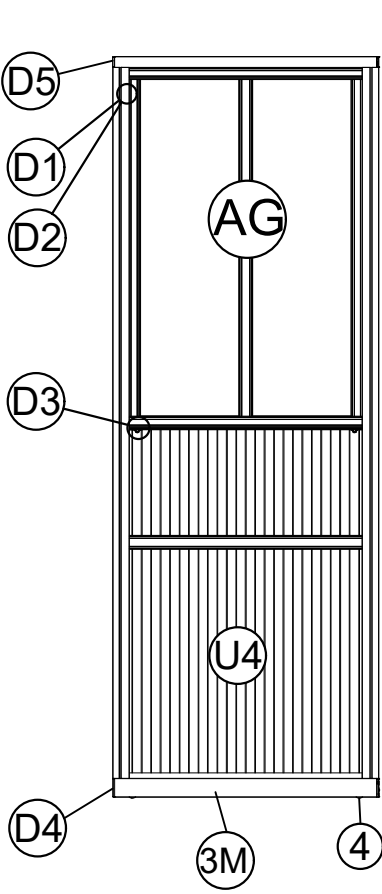

- (3M) 1x
- (U4) 2x
- (D1) 4x
- (D2) 8x
- (D3) 2x
- (D4) 2x
- (D5) 2x
- (4) 2x
- (8) 8x
- (9) 2x

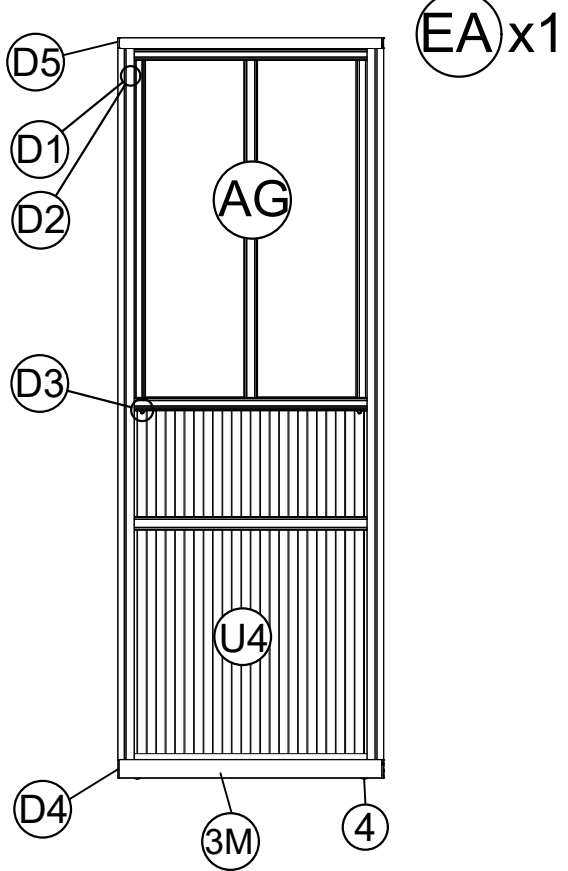

Component AD is symmetric DA, AE is symmetric EA.


<32>

Before installation, wet the rubber strips "⑤" with water to make it easier to stick into the slot.






AD 2x






⑤ 1x



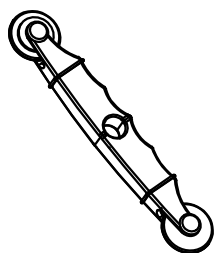



②④ 1x

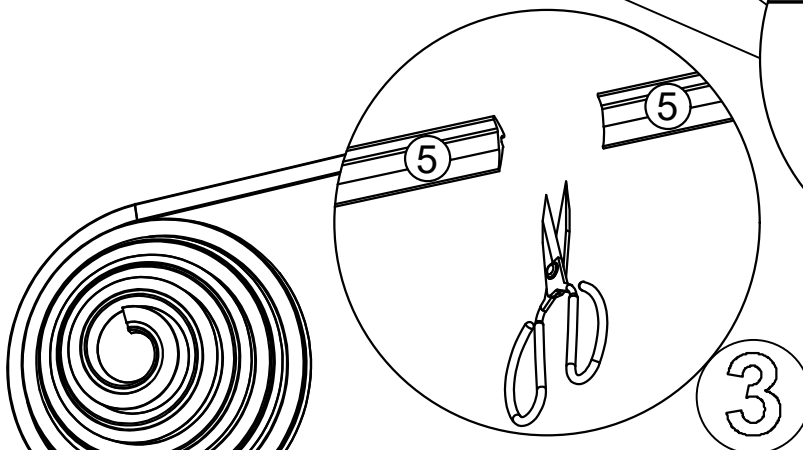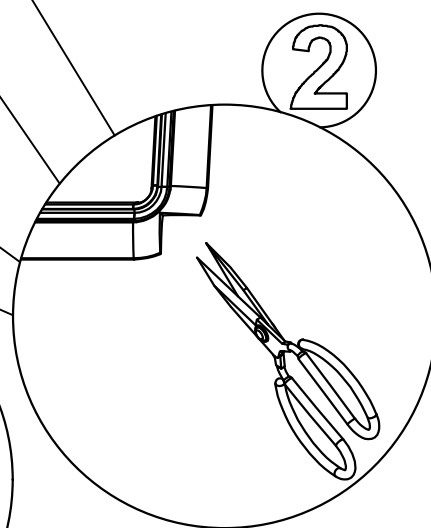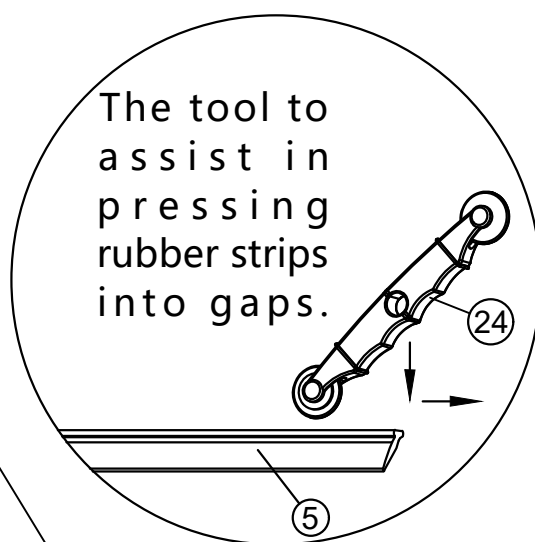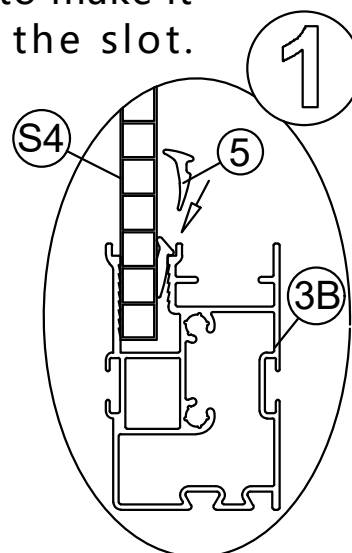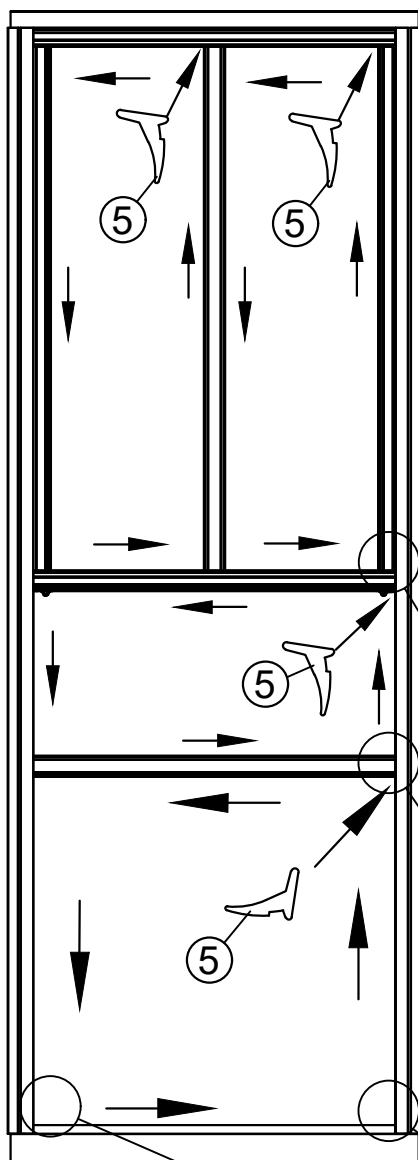

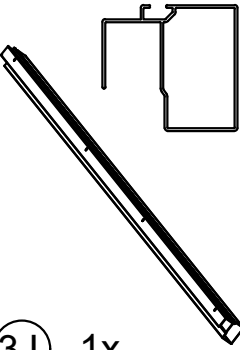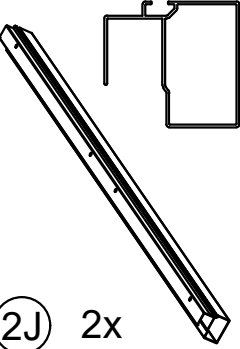
 ③J 1x
 ②J 2x
 6.2*11*15 ③ 12x
 M6 ⑥ 12x
 M6x15 ⑪ 12x
42

<33>

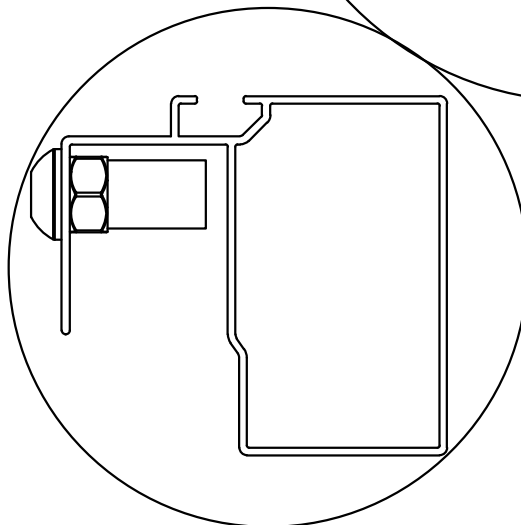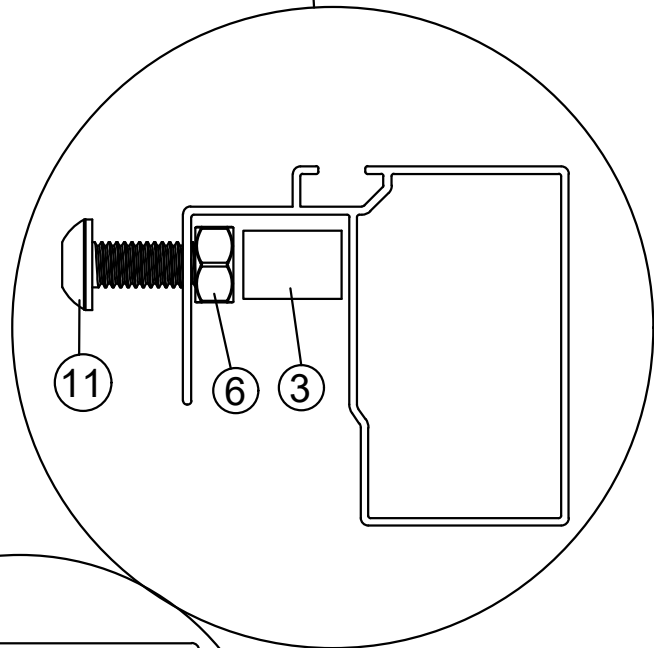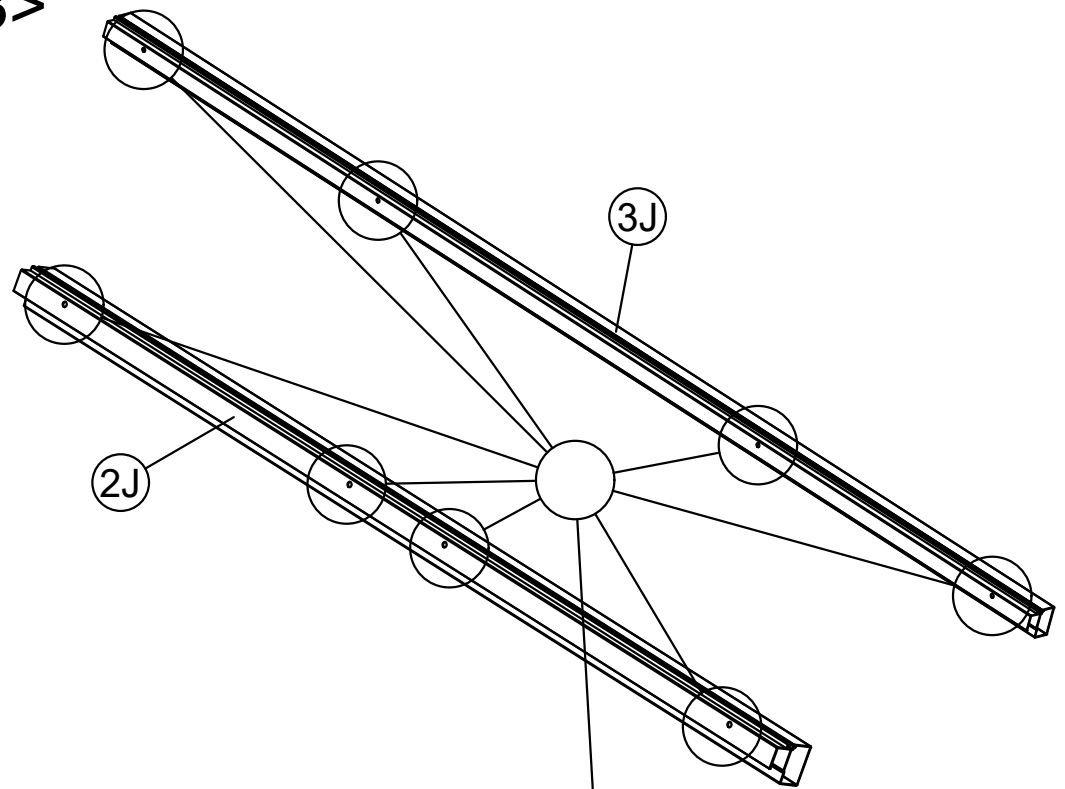


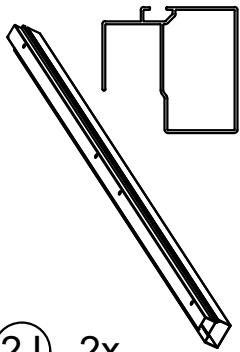

(2J) 2x

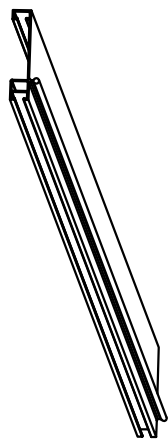

(2N) 2x



(15) 12x



M5*6

(16) 48x








2.5mm


(23) 1x

<34>


x2

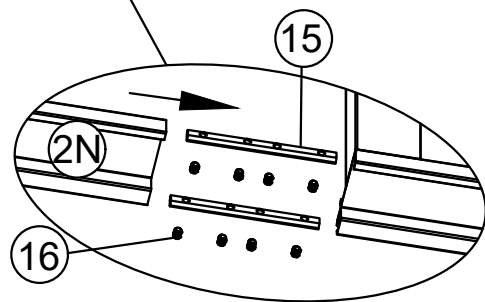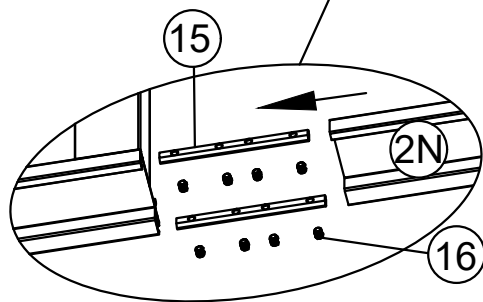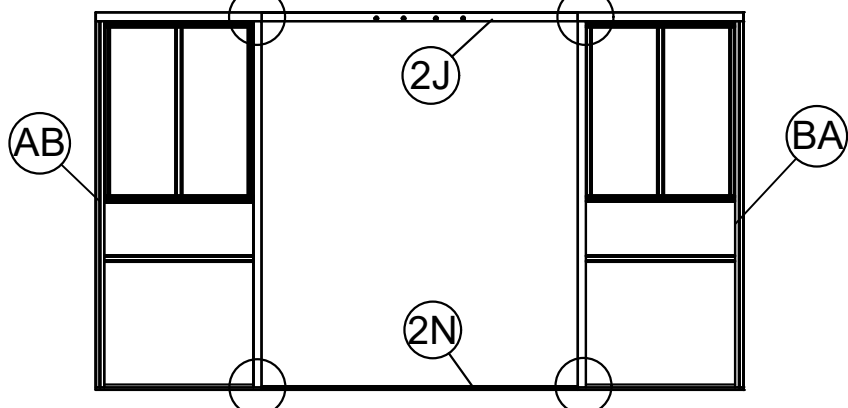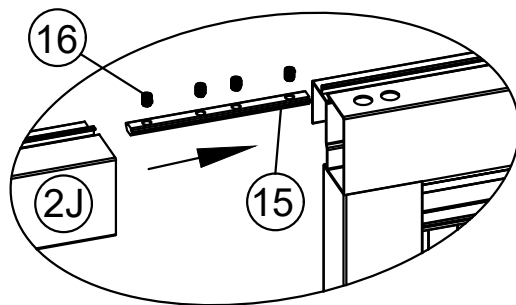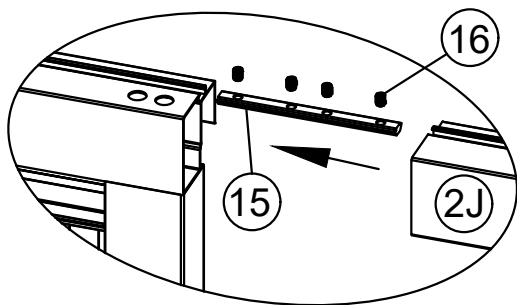

<35>

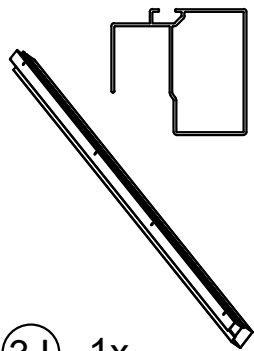

(3J) 1x

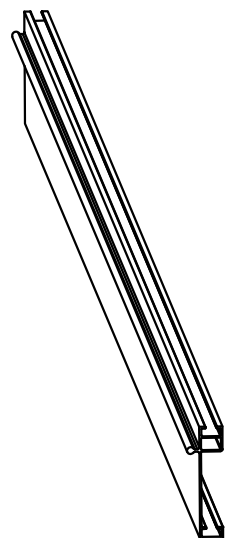

(3N) 1x



(15) 6x








M5*6

(16) 24x



2.5mm

(23) 1x

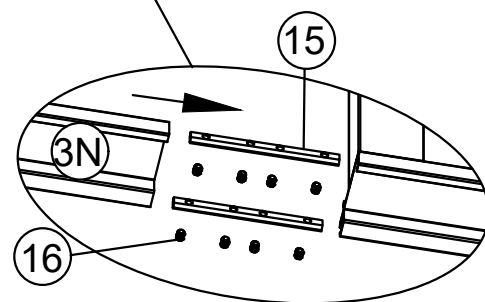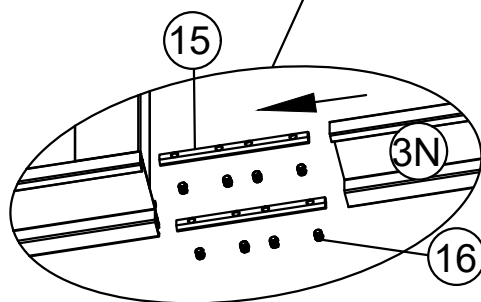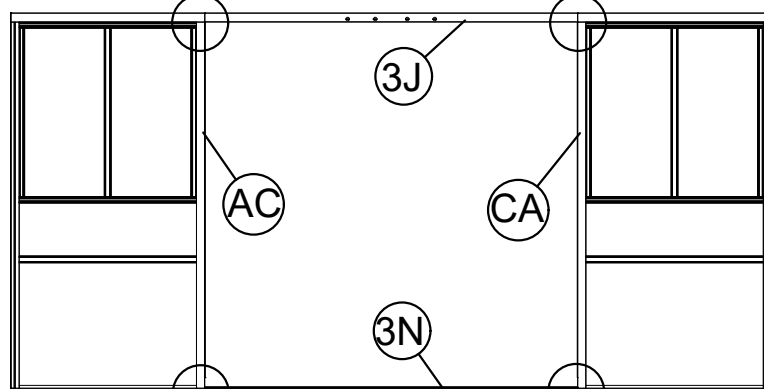
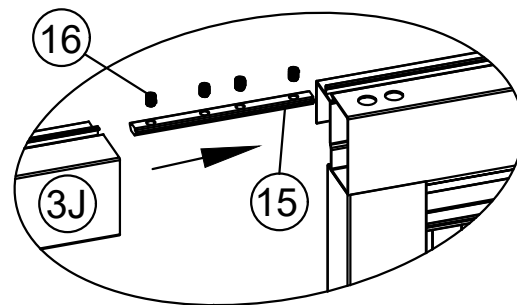
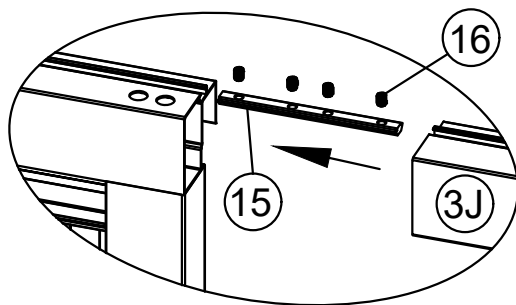









M6x15

<36>

11 16x

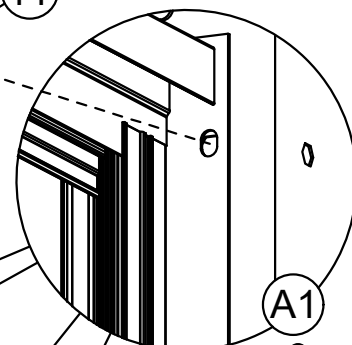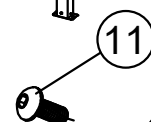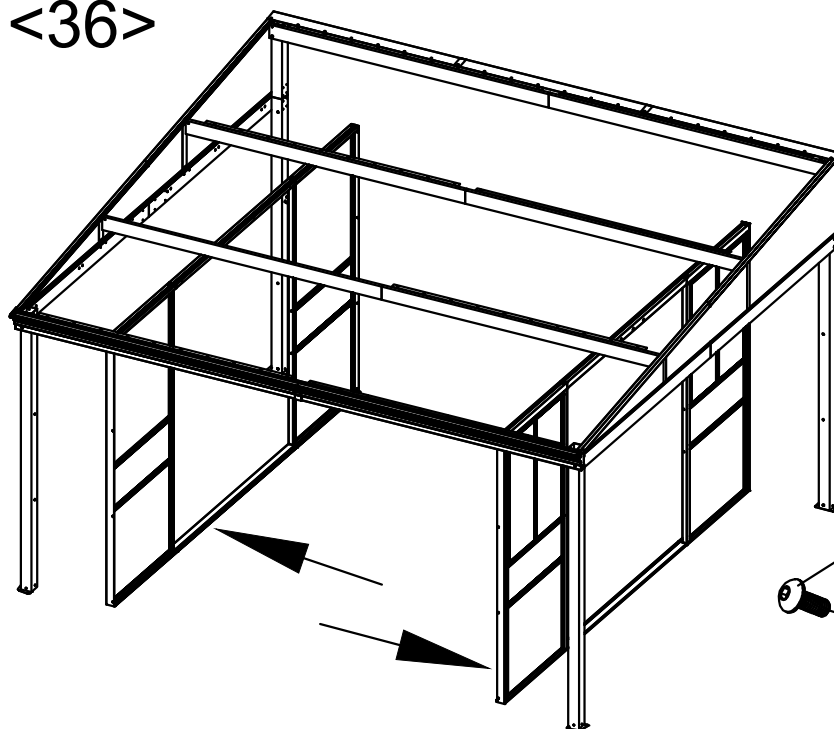


A1
&
A1-1
&
A2
&
A2-1

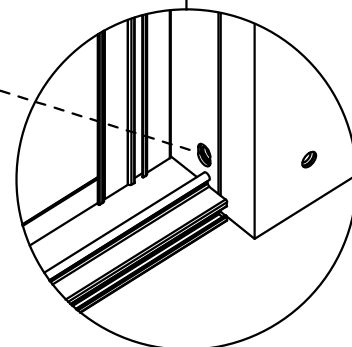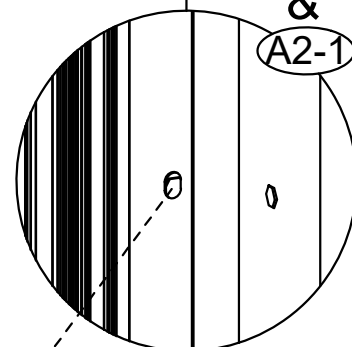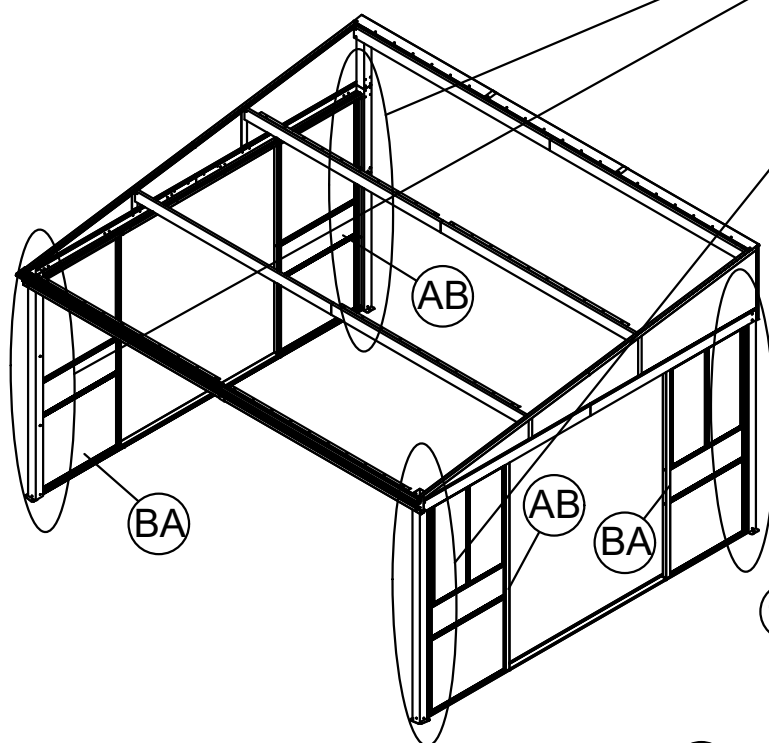



M6x15

(11) 24x

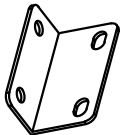


(Q2) 12x



M5




(17) 24x



M5*12

(18) 24x

<37>


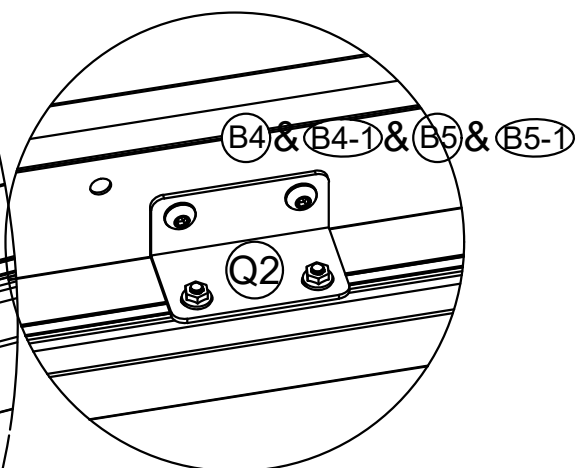
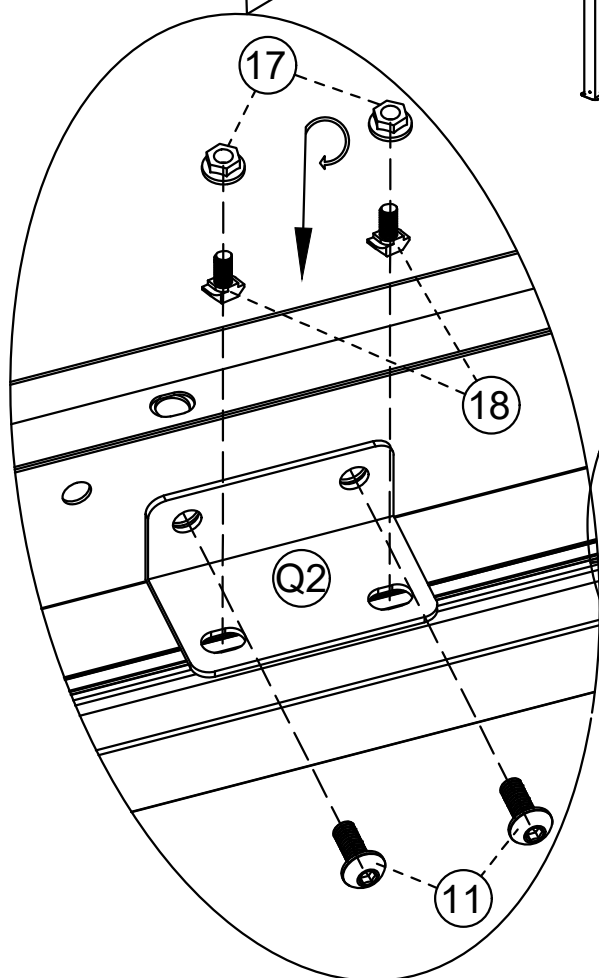
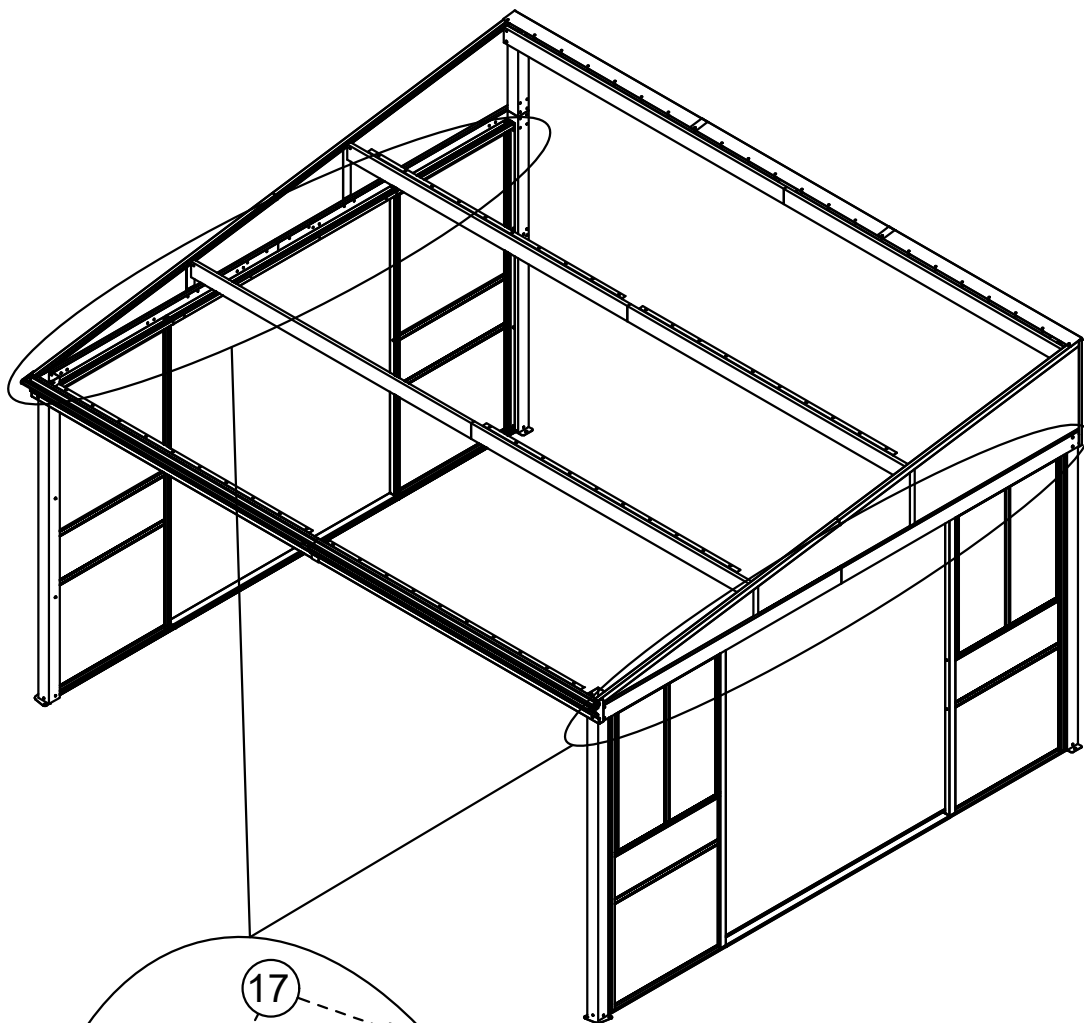




M6x15

<38>


11 8x

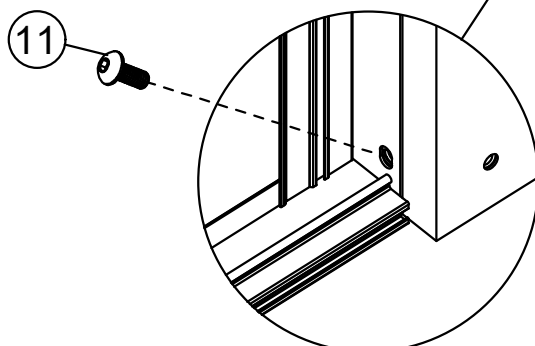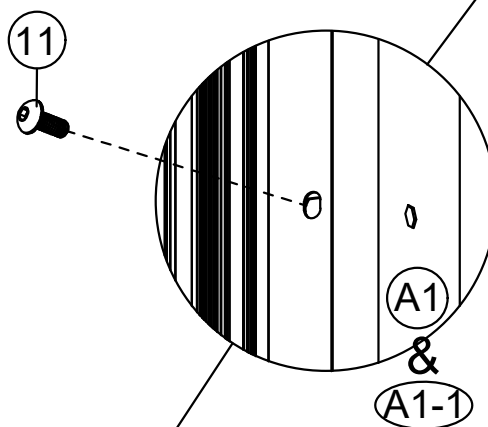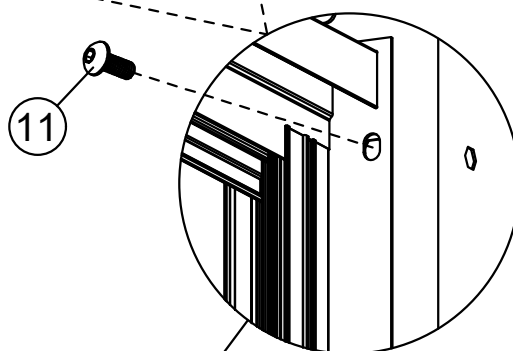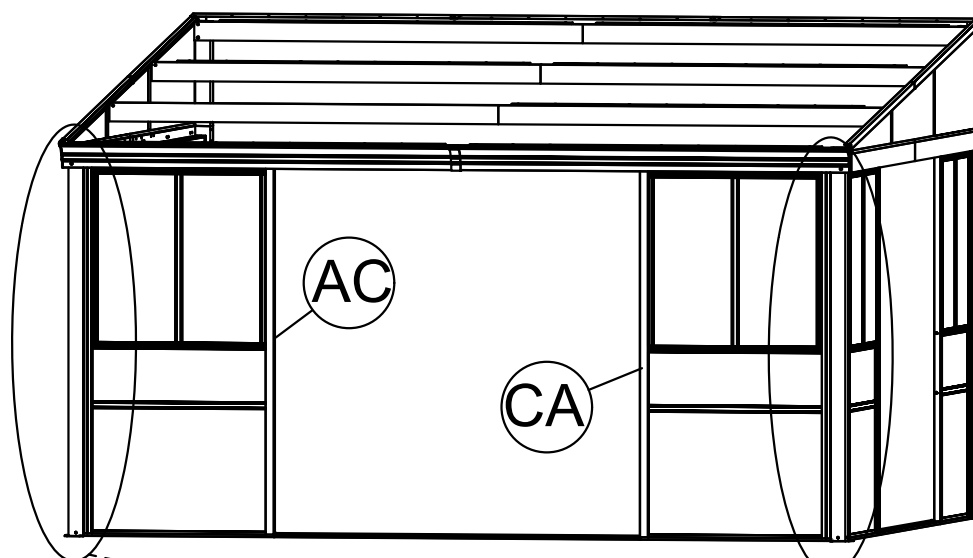



M6x15

(11) 12x

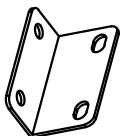


(Q2) 6x



M5




(17) 12x




M5*12

(18) 12x

<39>

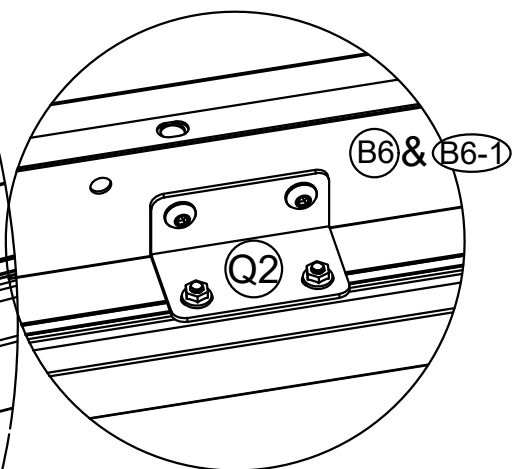
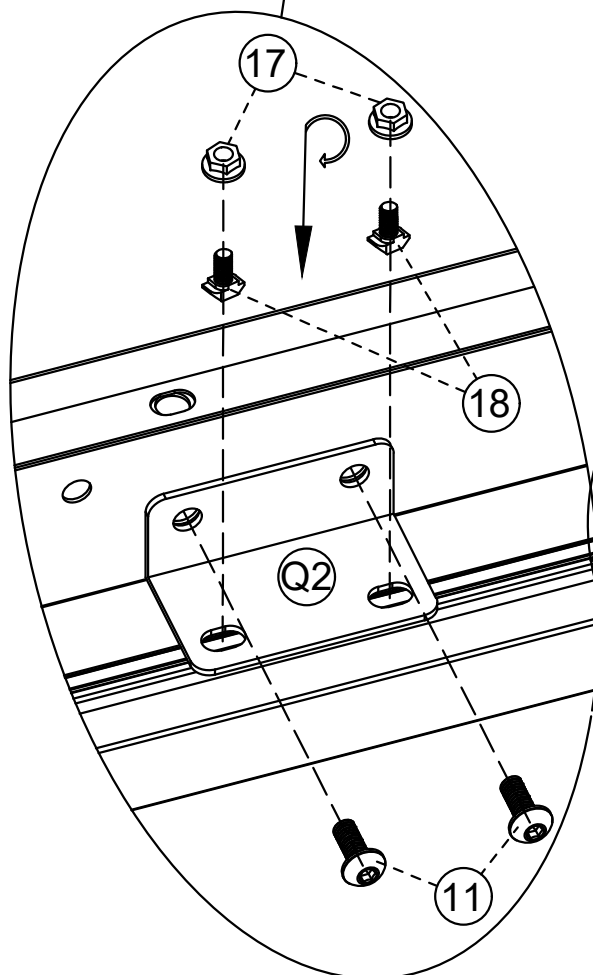
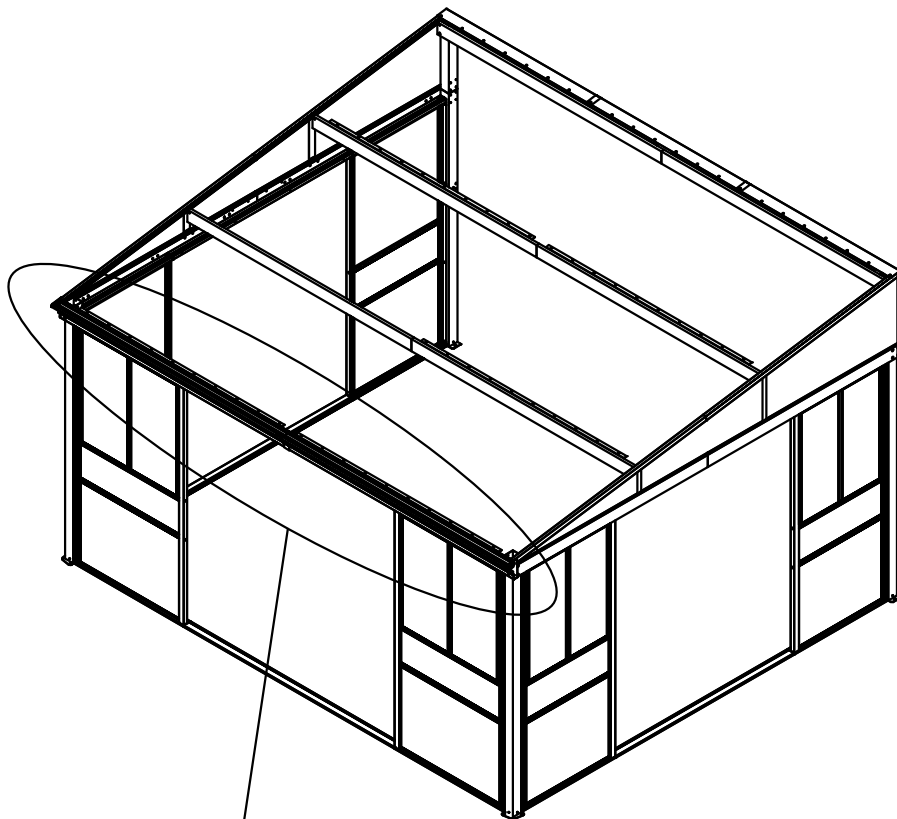



<40>

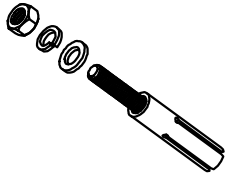

(21) 8x

Please install it
on a level floor

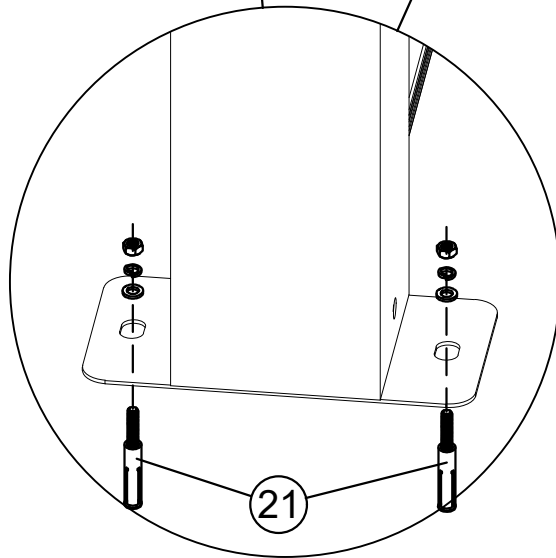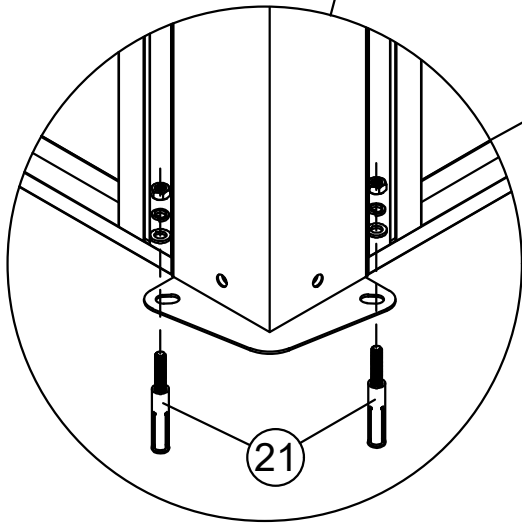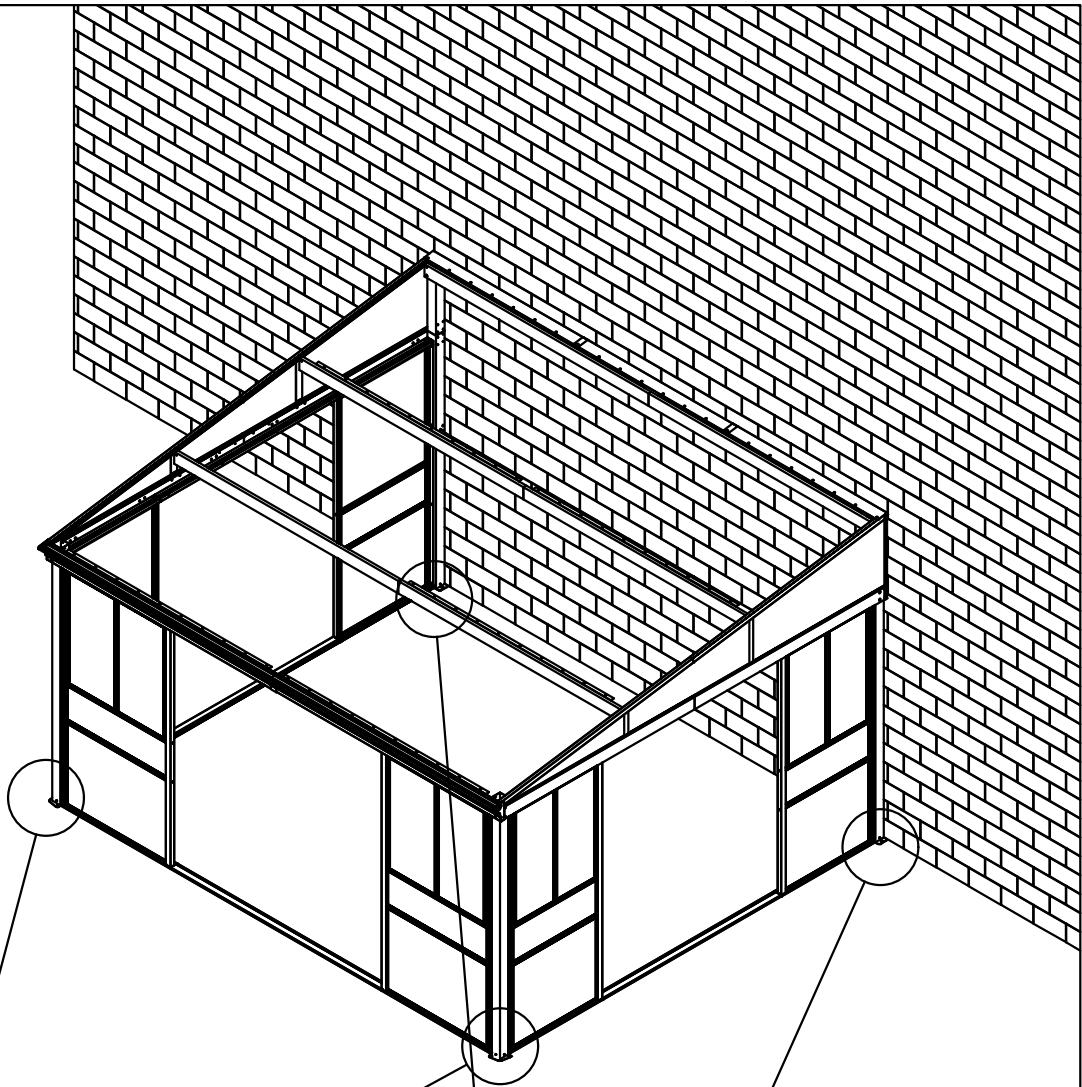




<41>

Q3 2x






M6x15

11 6x

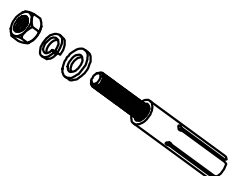

21 2x

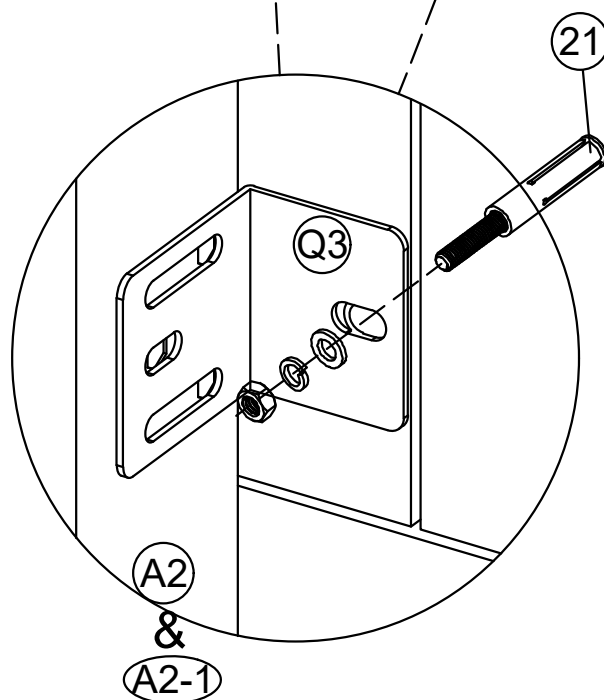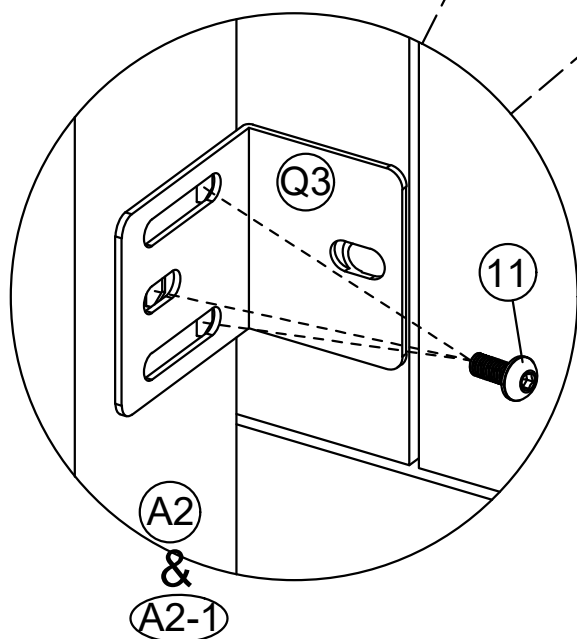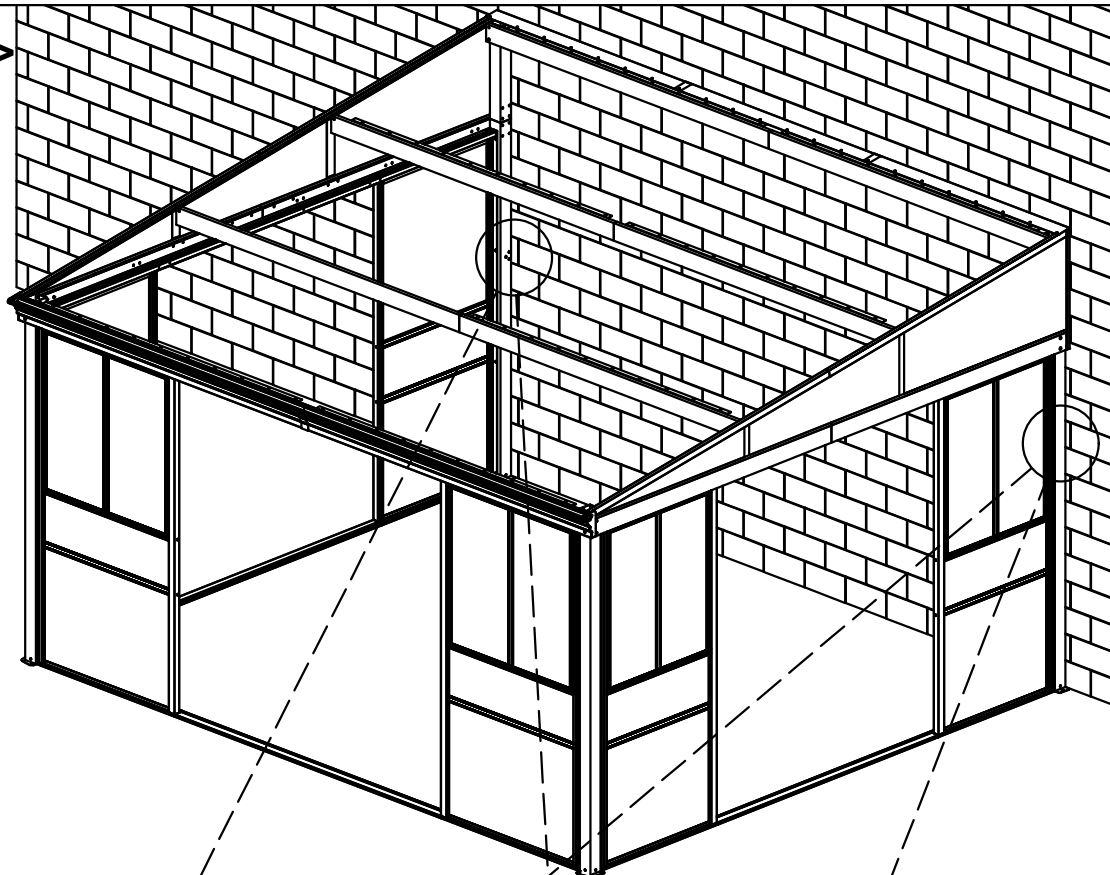

<42>

AD 2x


Pay attention to the
installation direction.

1F 2x



ST 4.8x12

7 8x

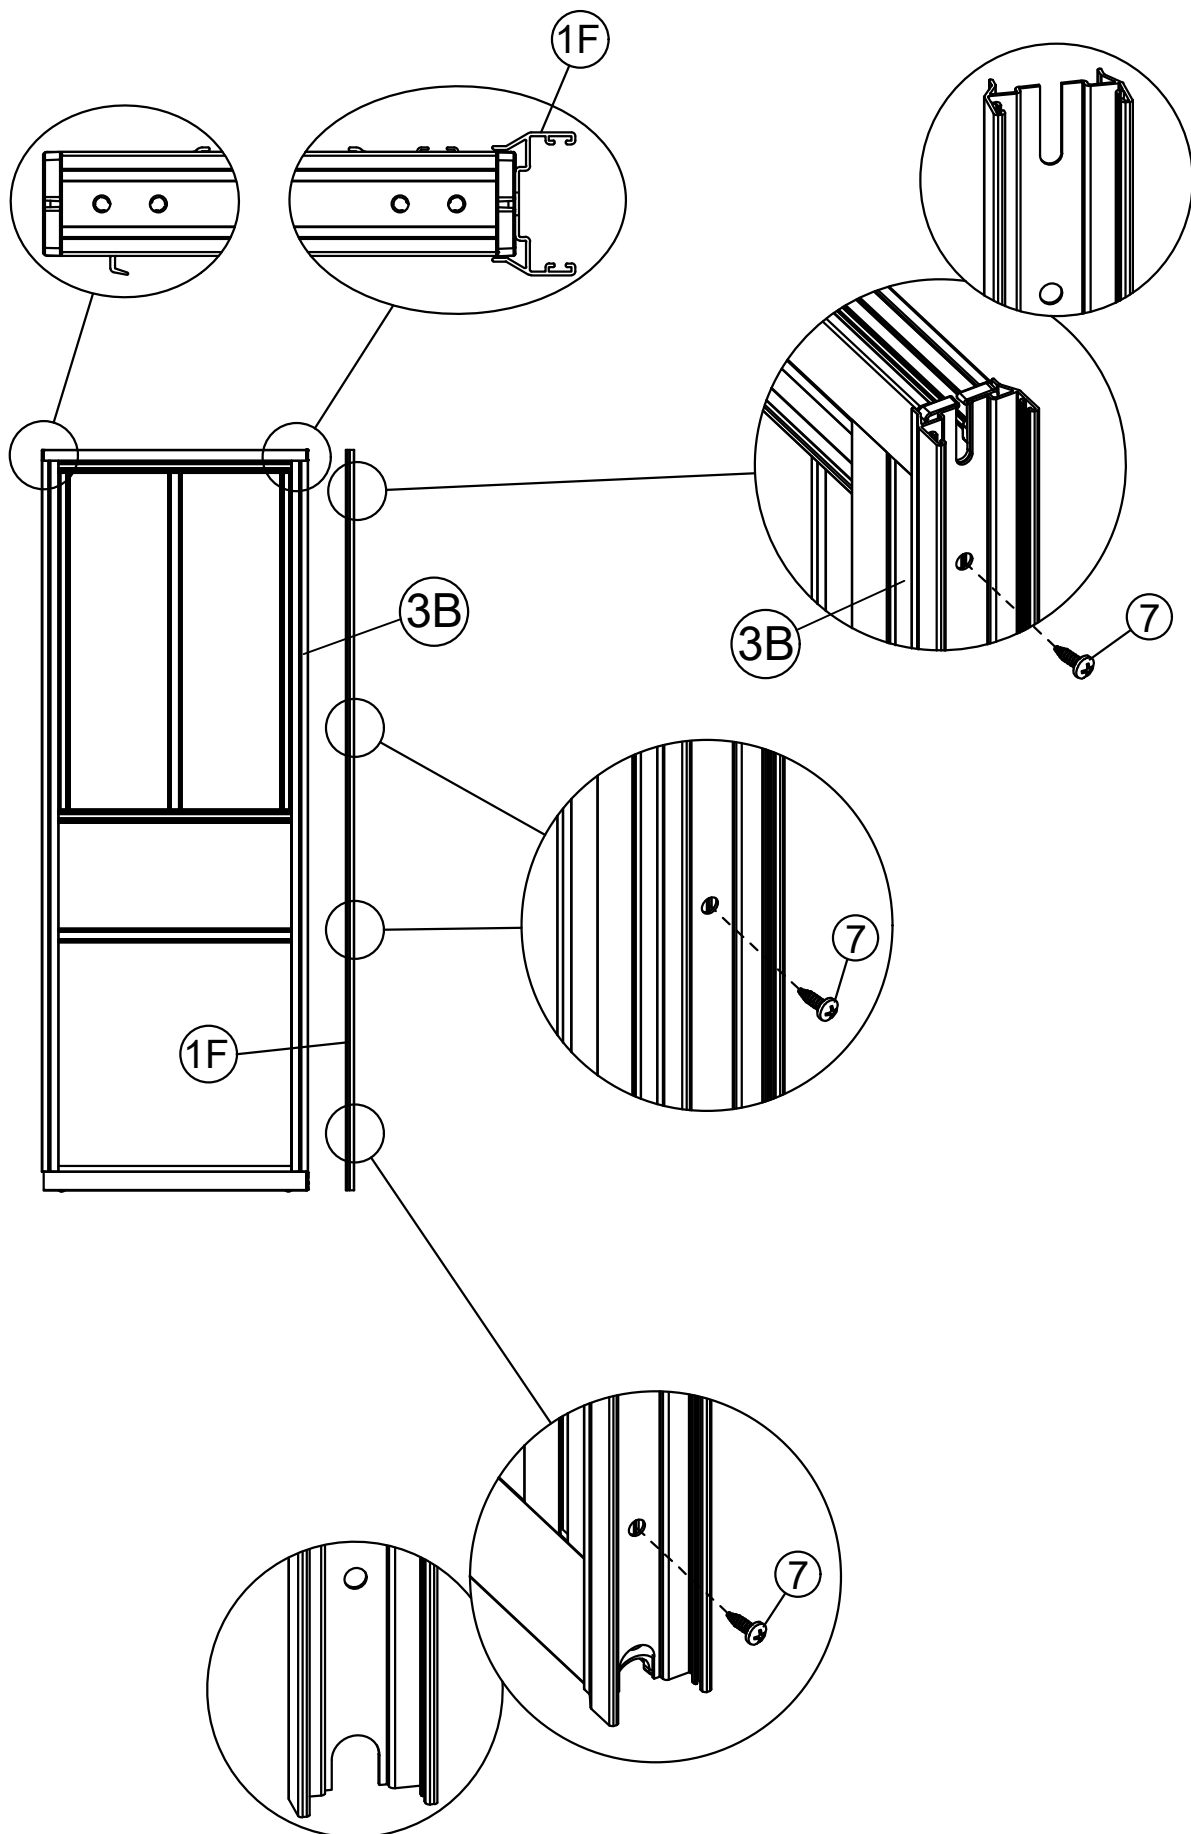

<43>

AE 1x


Pay attention to the
installation direction.


1F 1x



ST 4.8x12



7 4x

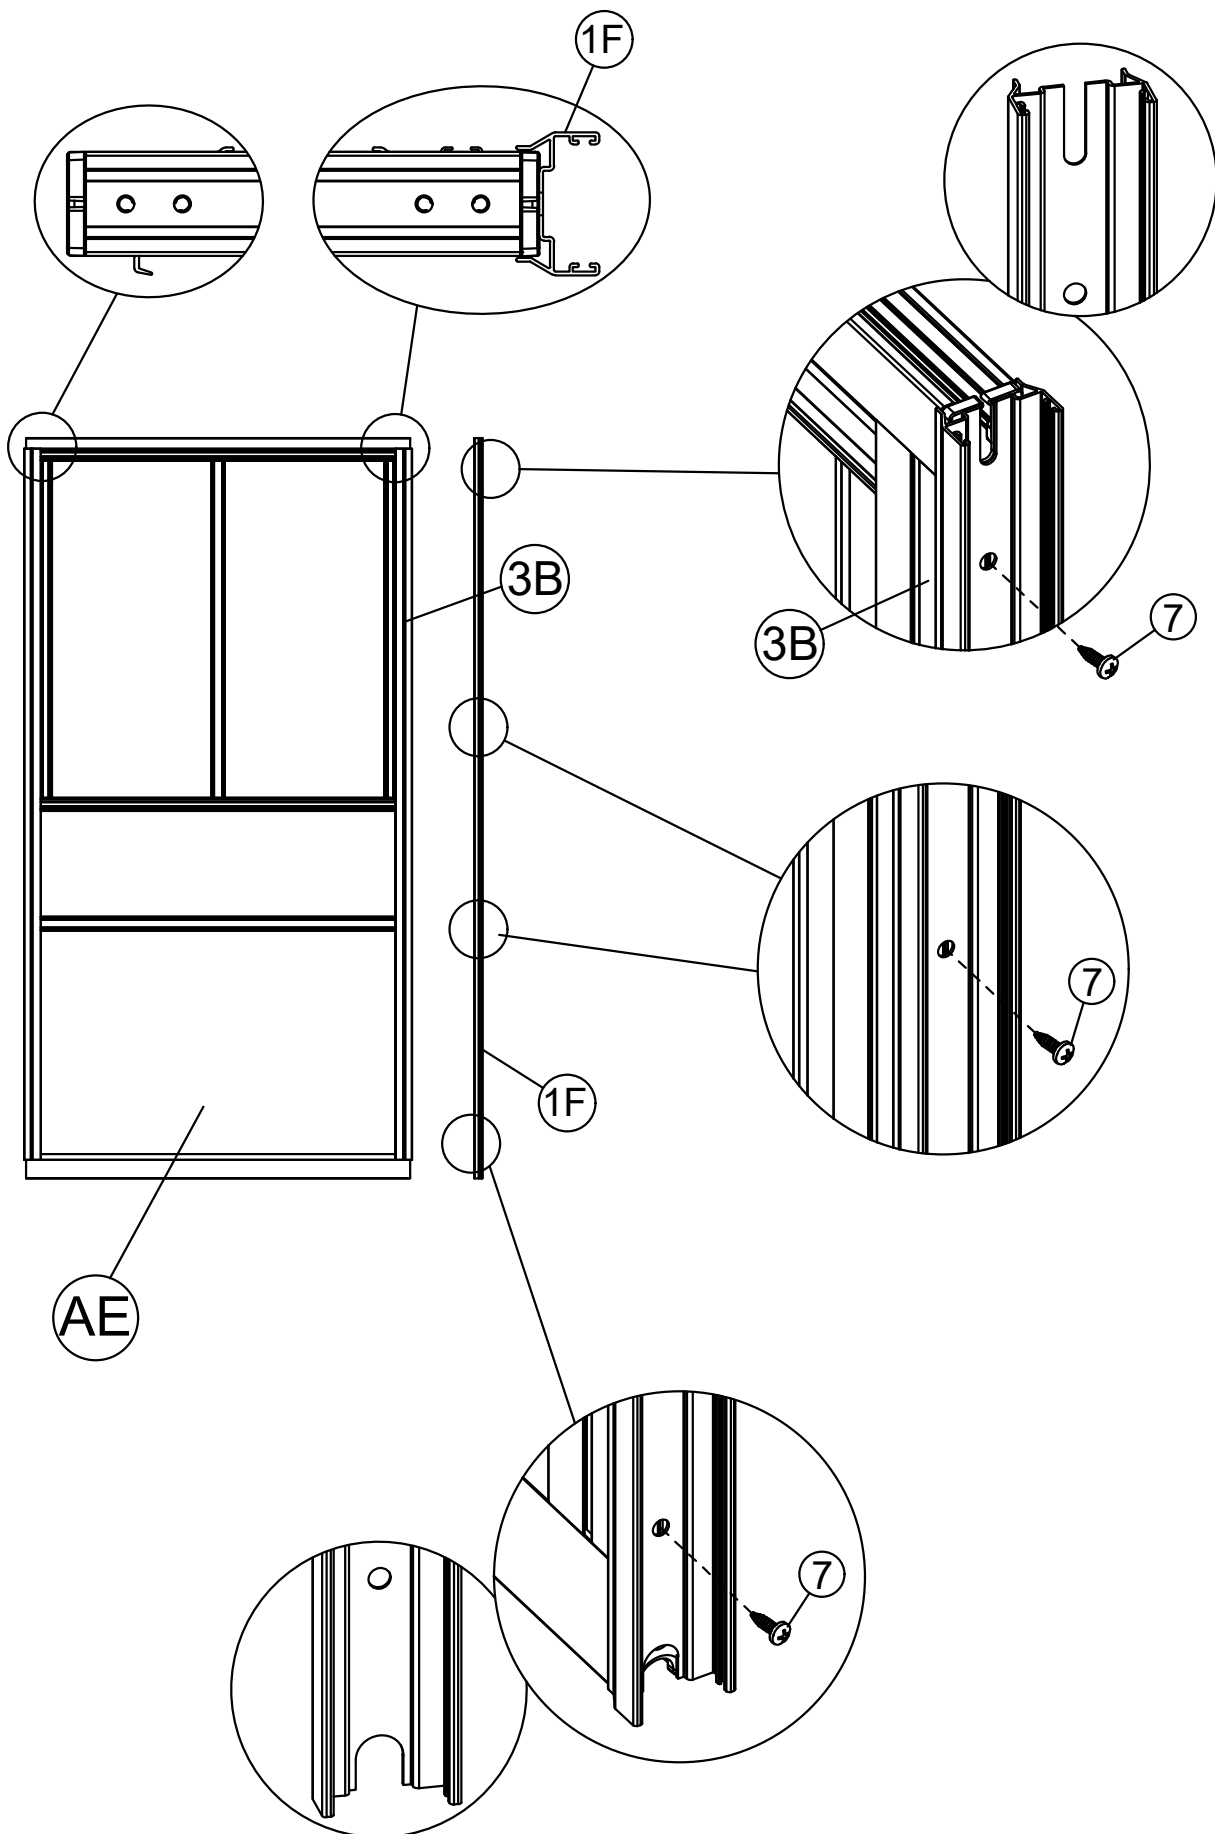

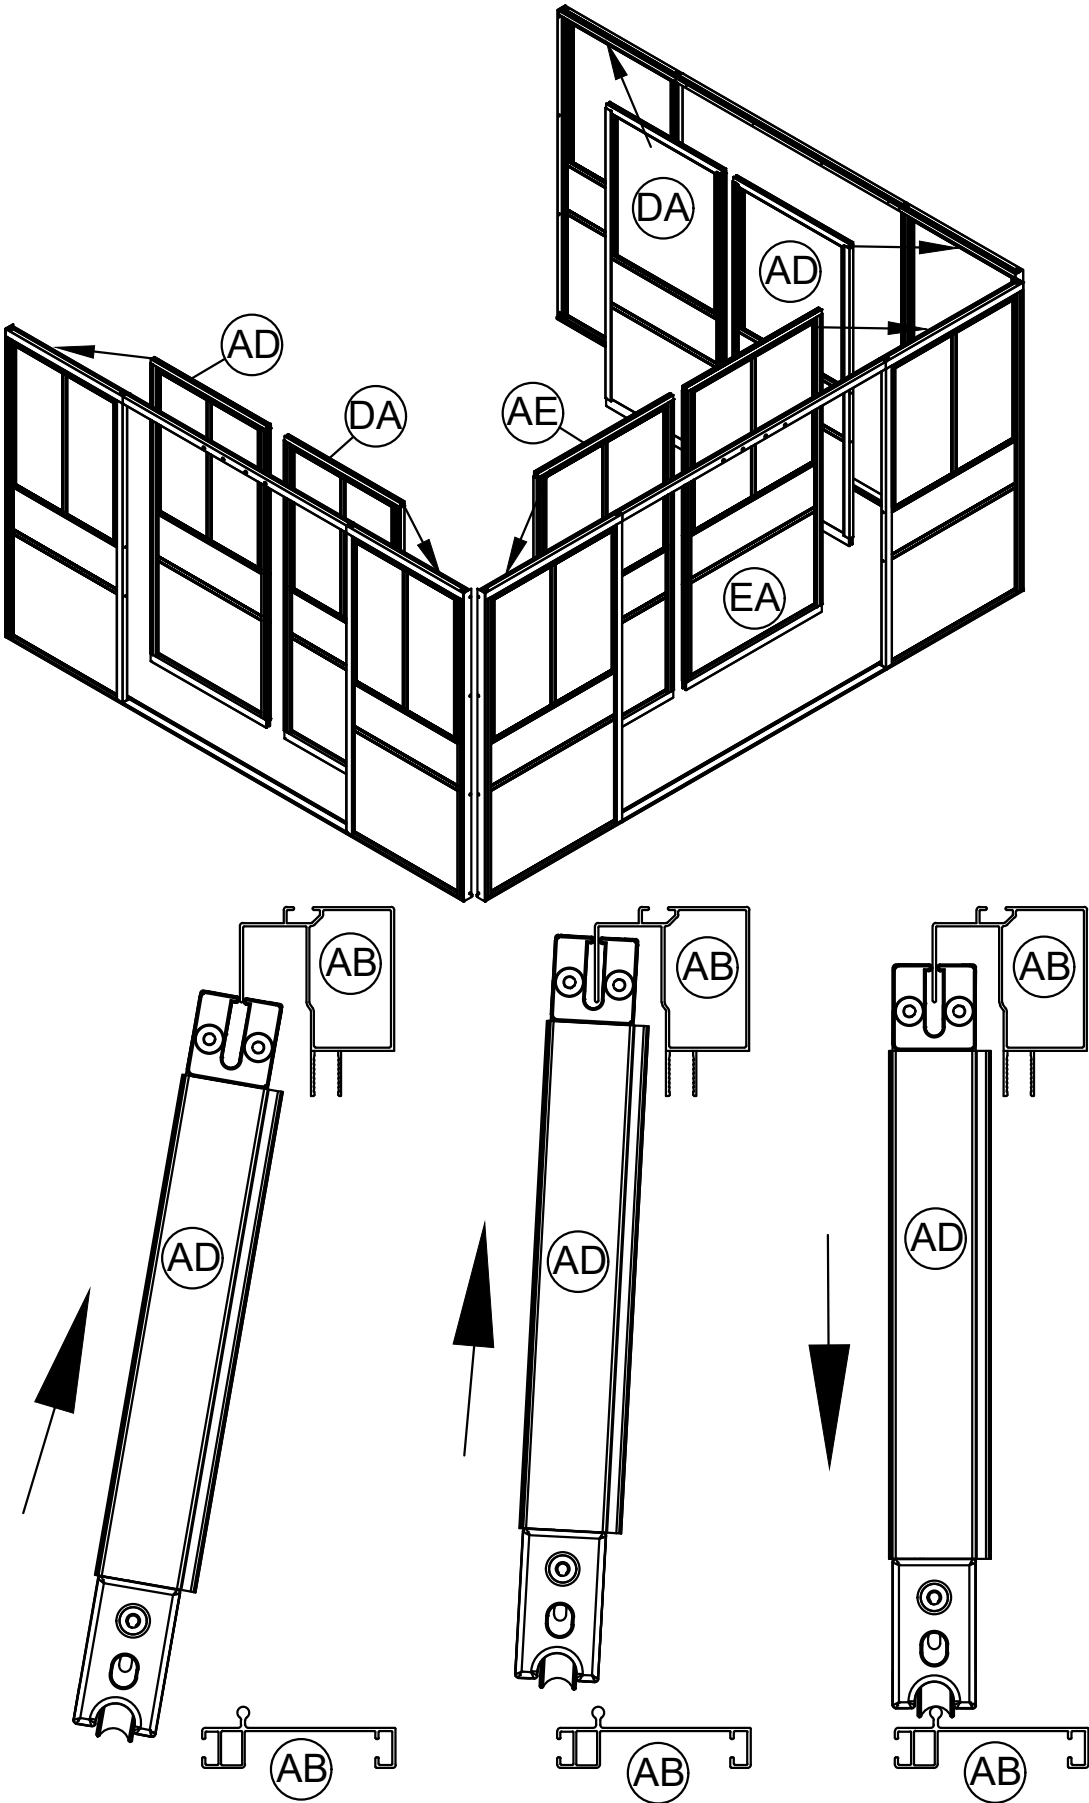

Repeat the previous steps
for other components

<45>

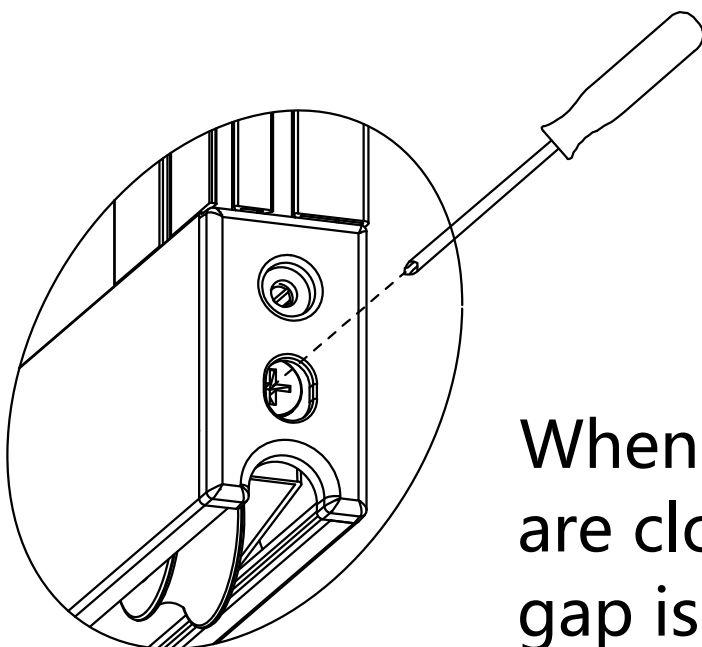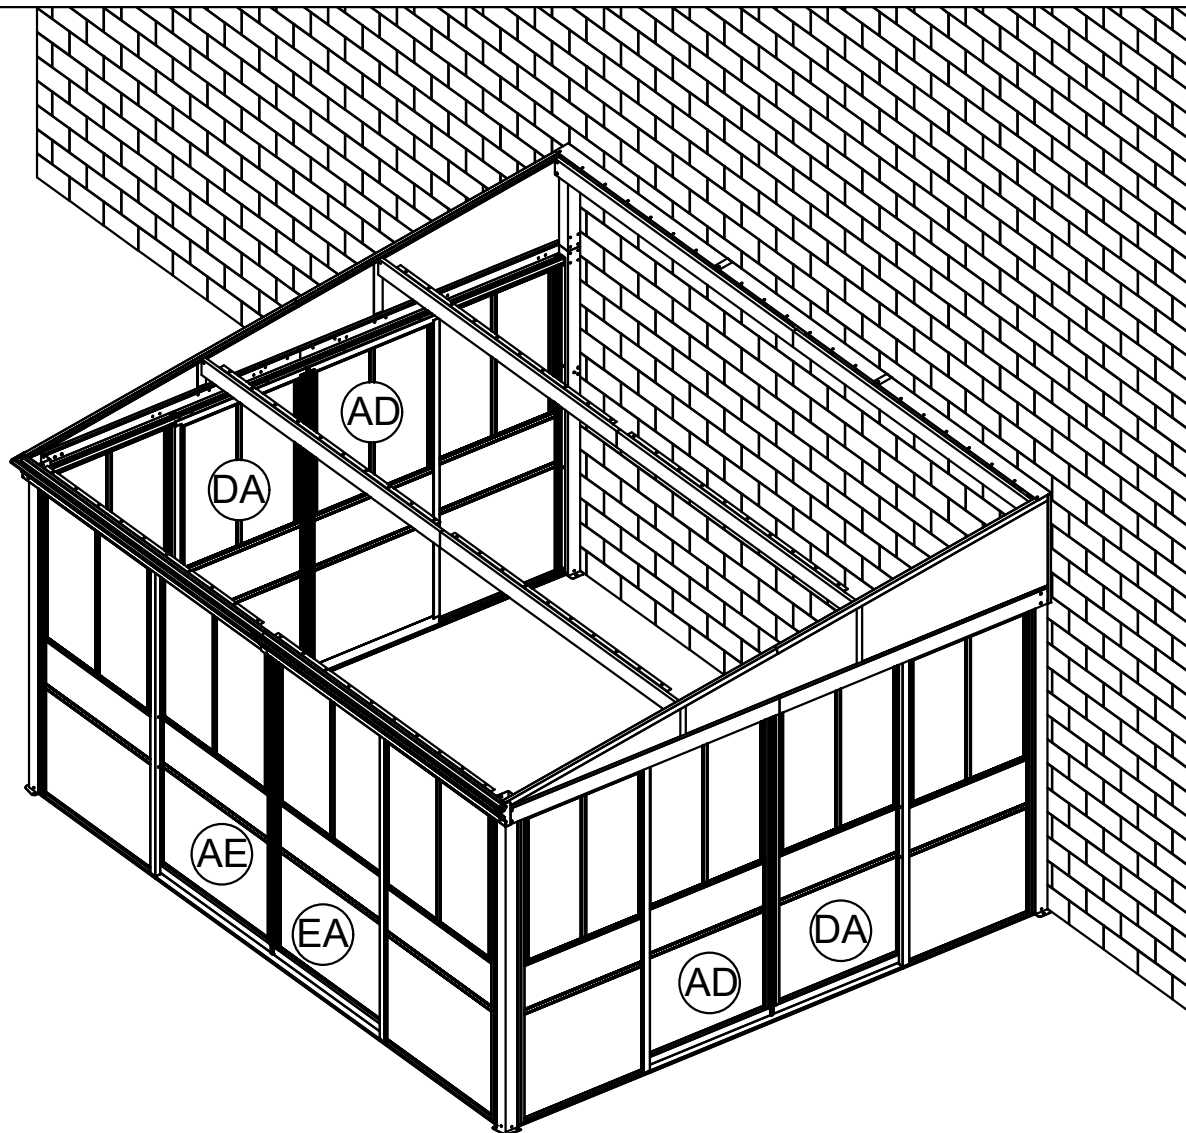

When the two sliding doors are closed and an obvious gap is found, the height of the pulley can be adjusted by the screw on the pulley

<46>

