
INSTALLATION INSTRUCTIONS

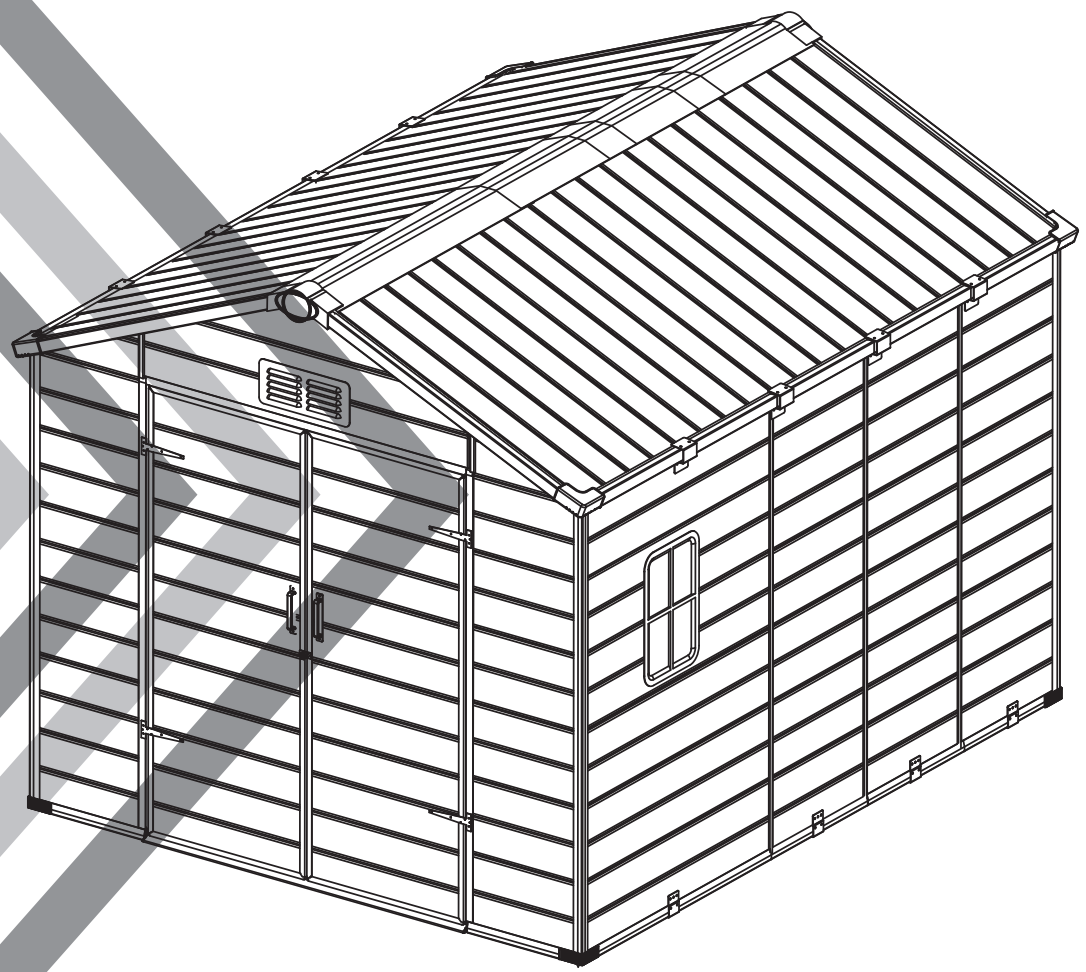

TOOL ROOM8x10

-INSTALLATION INSTRUCTIONS-

How to Use the Installation Manual

Read Thoroughly First

Before beginning assembly, carefully read all instructions and information in the manual. Verify that you have all the parts listed in the parts list.

Self-Drilling Required

Due to the ductility of the resin material, there are no pre-drilled holes on the panels. You will need to drill the holes yourself during assembly as per the instructions.

Understand the Diagrams

The manual includes diagrams and a parts list. Cross-reference the part numbers with the physical pieces to ensure all components are present.

Follow Step-by-Step

Do not skip ahead. Adhere strictly to the assembly instructions in the sequence provided to avoid errors.

Tools needed for installation



Scraper×1




Electric Drill×1



Ladder×1



Screw Driver×1

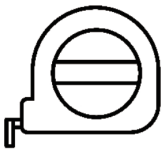

Tape Measure×1



Small wrench×1



Glove×1







































Note:Due to the ductility of the resin,there are no pre-drilled holes on the panel,so please drill your own holes.






















Due to the large size of the product and for Safety,we recommend 2-4 people to work together on the installation,which is expected to be completed in 2-4 hours.


















Box A

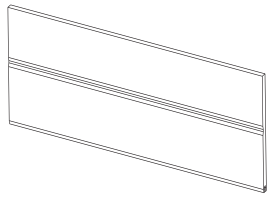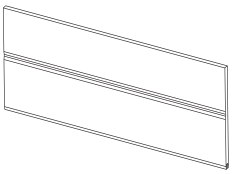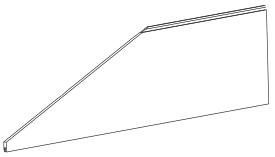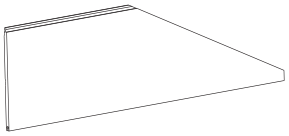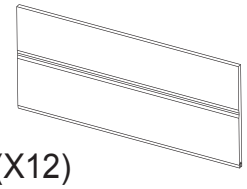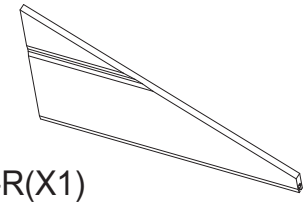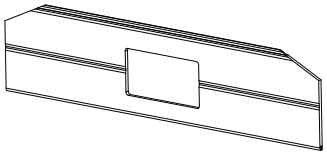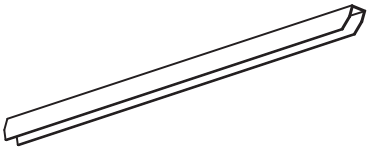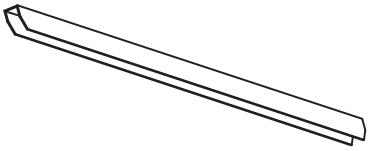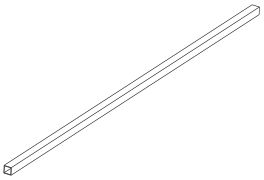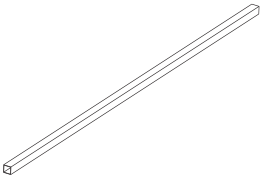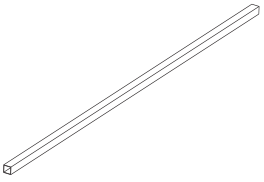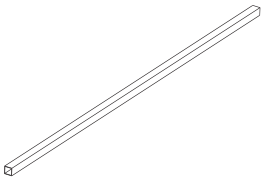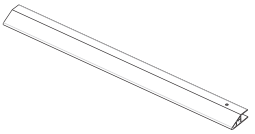
 E7(X12)	 E54(X12)	 E68-L(X1)
 E68-R(X1)	 E47(X12)	 E70-R(X1)
 E70-L(X1)	 E64-R(X1)	 E64-L(X1)
 E69(X1)	 H16-L(X1)	 H17(X4)
 F2(X2)	 F65(X1)	 F8(X1)
 F13(X4)	 J43(X8)	 J29(X3)
 J23(X2)	 J58(X2)	 F21(X1)

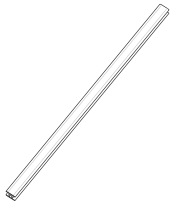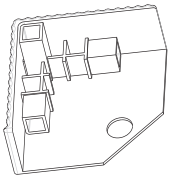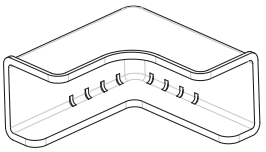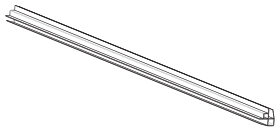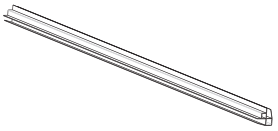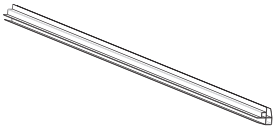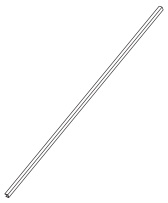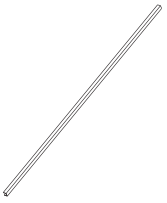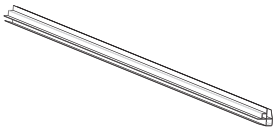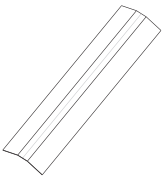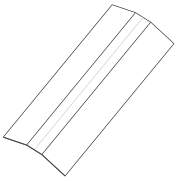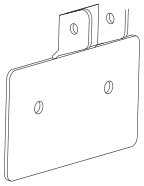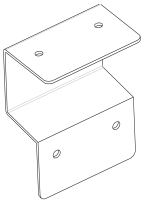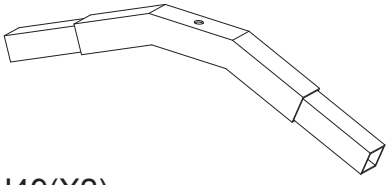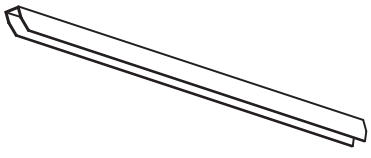 H6(X1)	 G1(X4)	 G9(X4)
 F28(X2)	 F27(X2)	 F33(X2)
 F71(X2)	 F70(X2)	 F26(X2)
 F47(X2)	 G10(X1)	 G12(X1)
 J3(X4)	 J4(X4)	 J49(X2)
 H16-R(X1)		







Box B

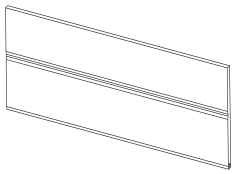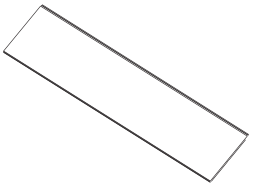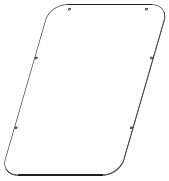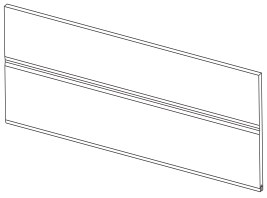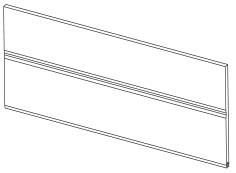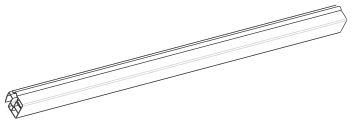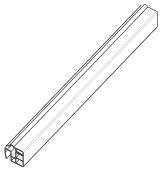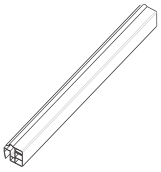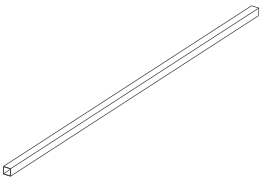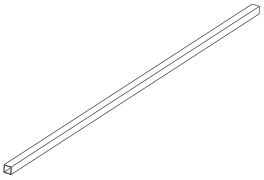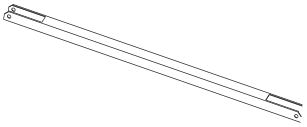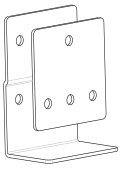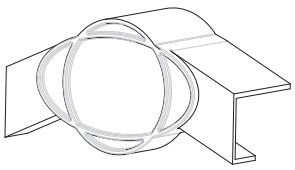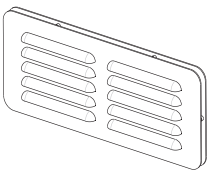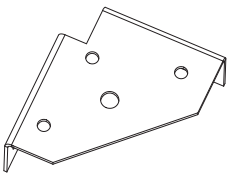 E59(X10)	 E58(X2)	 G18(X2)
 G5(X1)	 E13(X12)	 E3(X6)
 F44(X4)	 F43(X2)	 F12(X1)
 F39(X2)	 F11(X1)	 J37(X1)
 J46(X1)	 J48(X2)	 J47(X4)
 H15(X4)	 G21(X5)	 J6(X7)
 G8(X2)	 G3(X2)	 J2(X4)

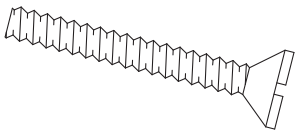
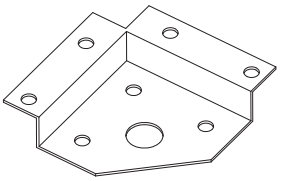
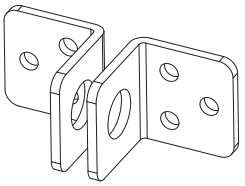
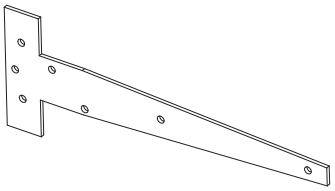


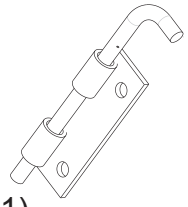
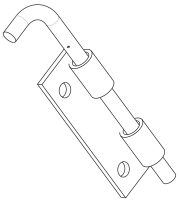
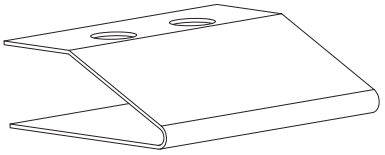


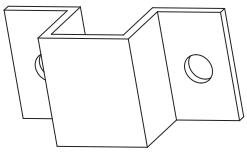
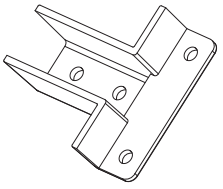
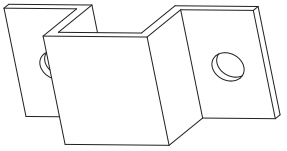
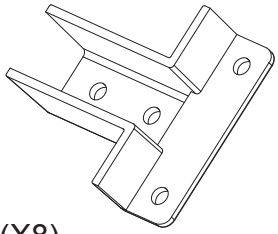


 J45(X2)	 J1(X4)	 J16(X2)
 J17(X4)	 J18(X2)	 J19(X17)
 J65(X22)	 J20(X253)	 J21(X126)
 J60(X16)	 J31(X1)	 J32(X1)
 J59(X1)	 D90(X4)	 D91(X4)
 G15(X6)	 G25(X4)	 G16(X11)
 G26(X8)	 G28(X6)	 G23(X2)




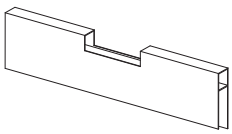
 J62(X1)		

Box C

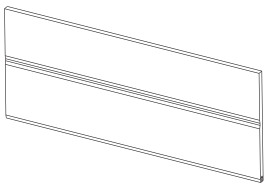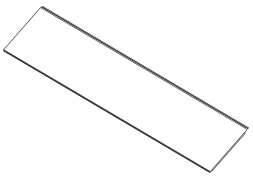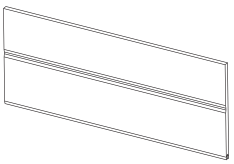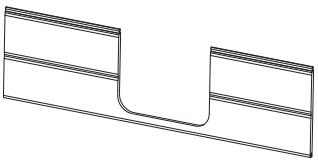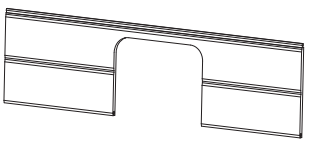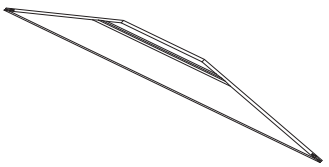
 E7-G(X10)	 E6(X2)	 E3(X4)
 E74(X1)	 E75(X1)	 E4(X1)


Box D.E (8X2)

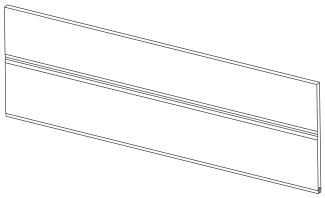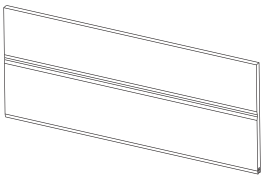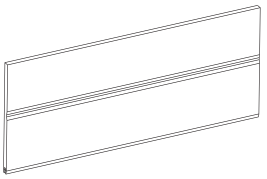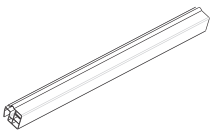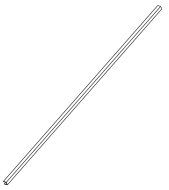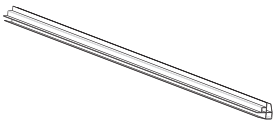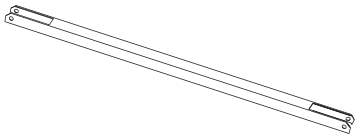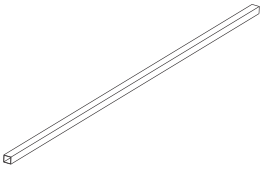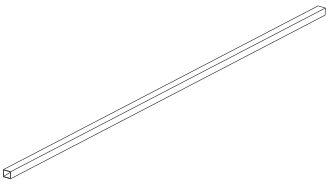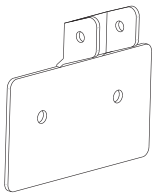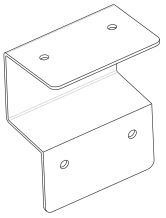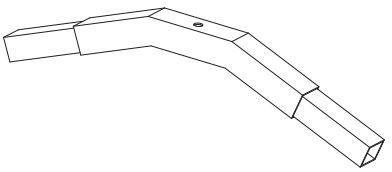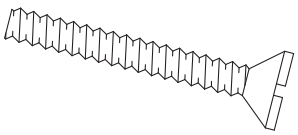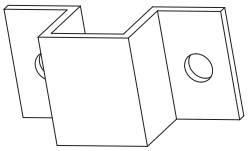 E13(X4)	 E7-G(X4)	 E54(X12)
 F2(X2)	 F40(X2)	 F70(X2)
 F31(X2)	 F10(X1)	 J47(X2)
 J48(X1)	 J58(X2)	 J61(X1)
 J3(X2)	 J4(X2)	 J49(X1)
 J45(X1)	 G15(X4)	 G23(X2)

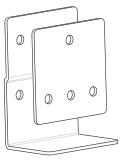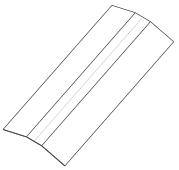
 J6(X2)	 J19(X9)	 J65(X8)
 J20(50)	 J21(X10)	 G12(X1)


1 E6(x1) E7-G(X9) Cork Hammer

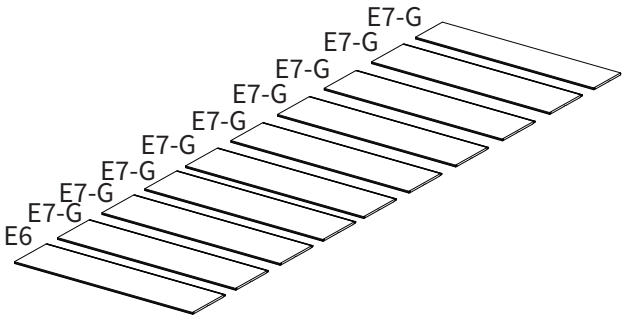

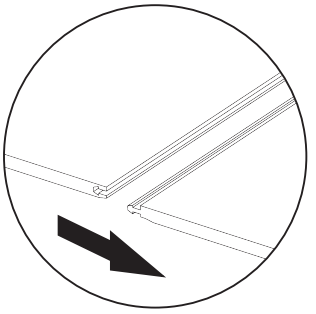



2 F12 (X1) F11 (X1) F10 (X2) Cork Hammer

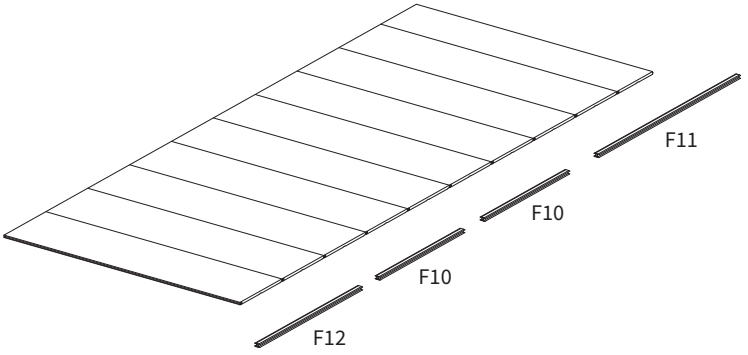

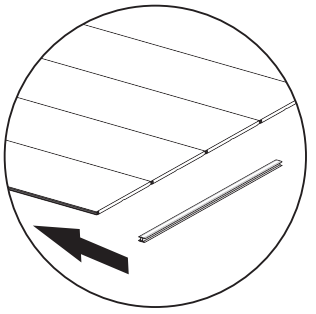



3 E6(x1) E7-G(X9) Cork Hammer

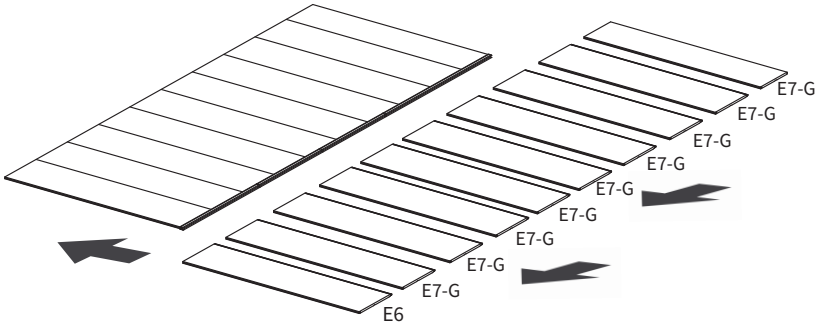

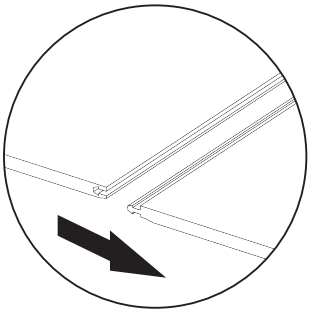


4 G1(X1) Cork Hammer

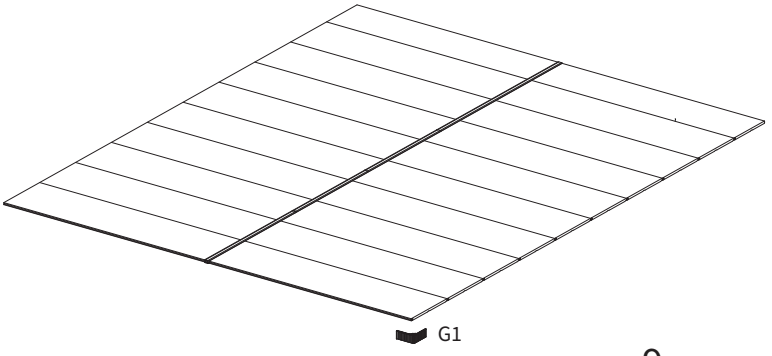


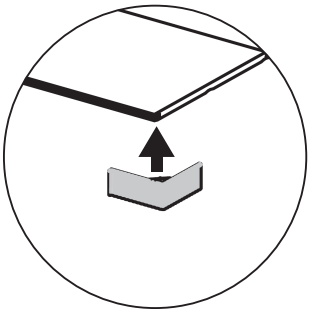


5 F26(X2) F21(X1) Cork Hammer

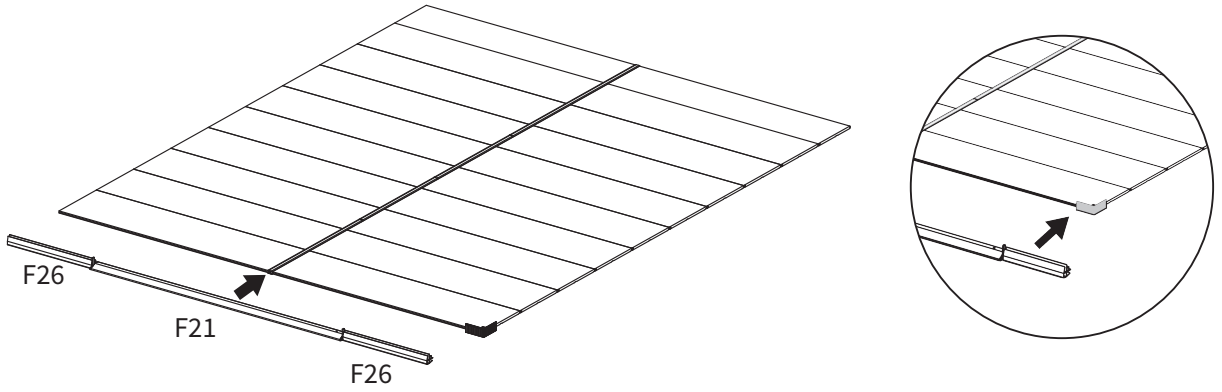


6 G1 (X1) Cork Hammer

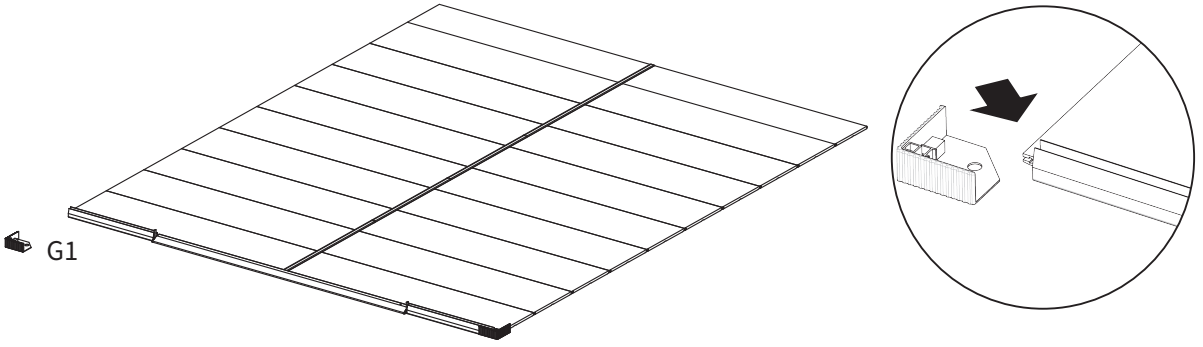


7 F28(X1) F27(X1) F31(X2) Cork Hammer

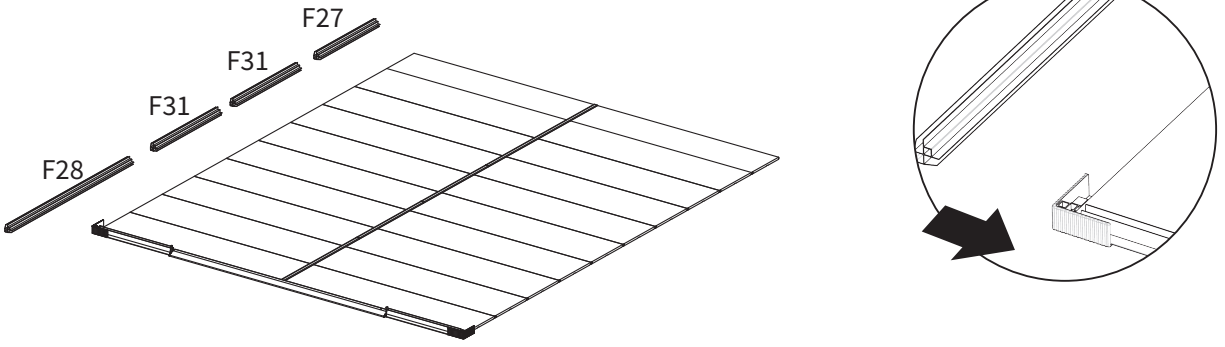


8 G1(X1) Cork Hammer

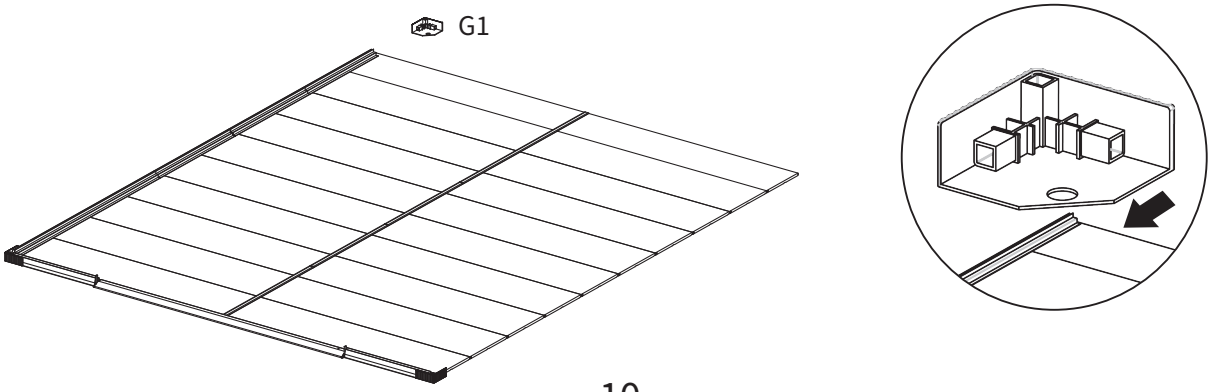



9 F33(X2) Cork Hammer

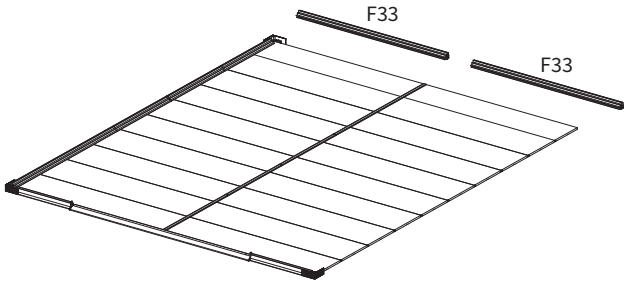

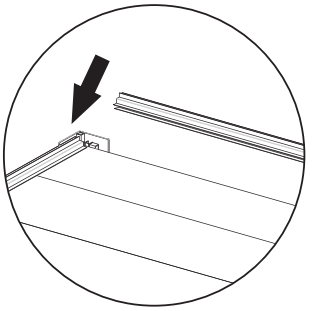



10 F28 (X1) F27 (X1) F31 (X2) Cork Hammer

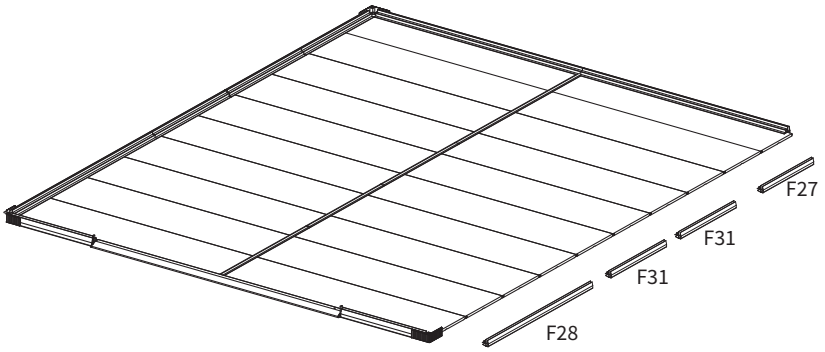

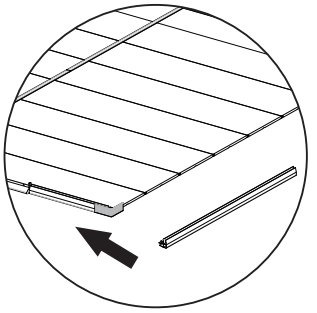



11 G1(X1) Cork Hammer

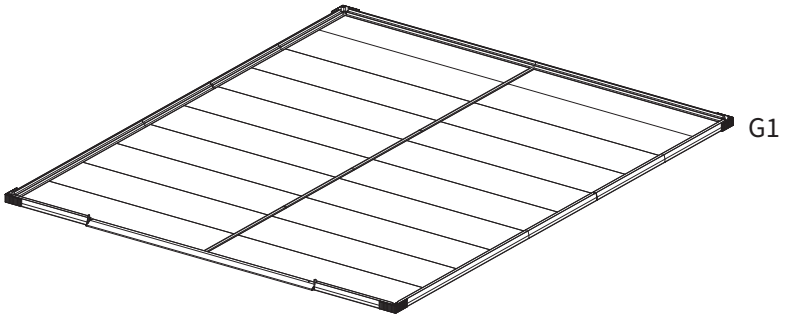

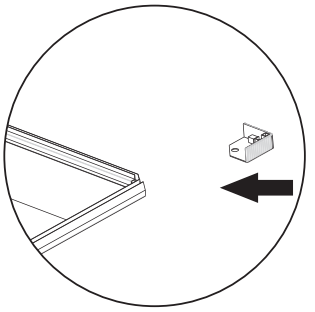


12 J20(X48) Cork Hammer Electric Drill

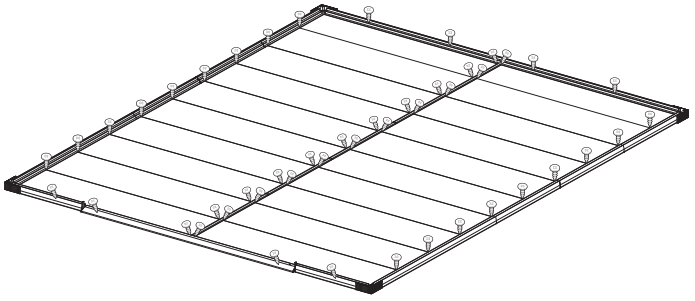


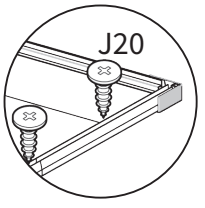


After the floor screws are tightened, proceed to the next installation step.


13 F13(X1) Cork Hammer

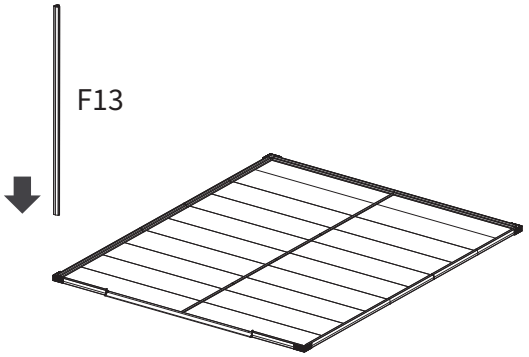

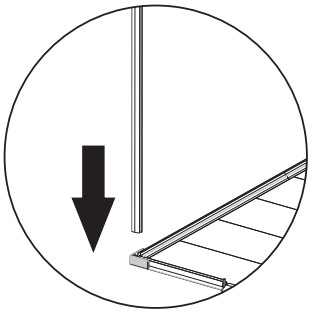



14 E3 (X3) Cork Hammer

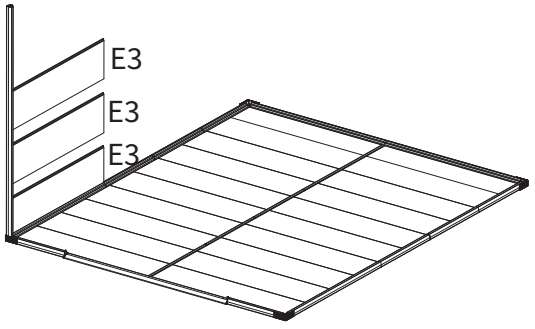

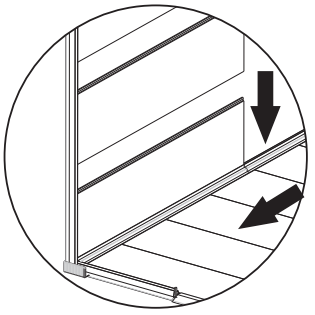



15 E47(X2) Cork Hammer

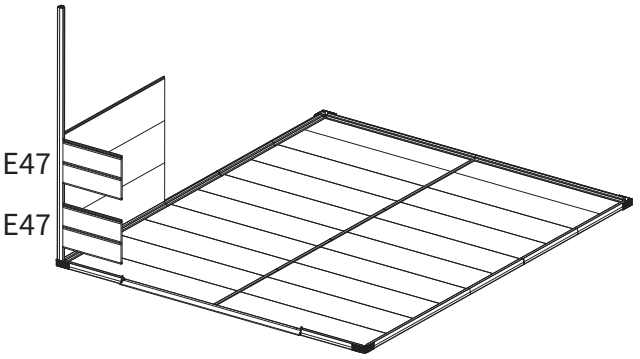

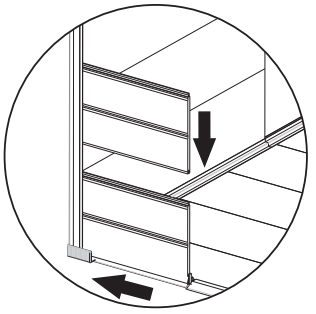


16 E3 (X3) Cork Hammer

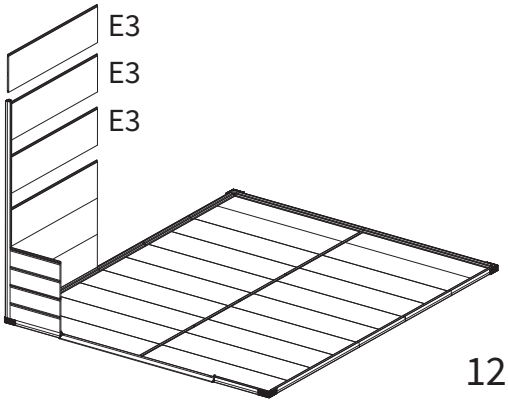

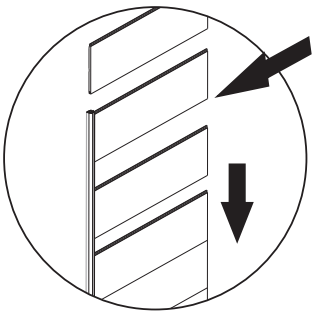



17 F2(X1) Cork Hammer

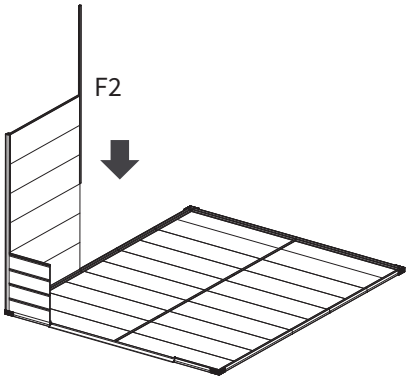





18 E54 (X6) Cork Hammer

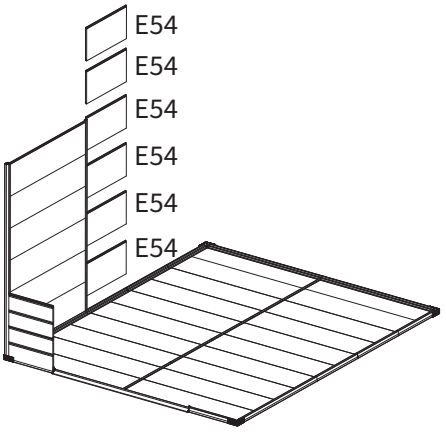

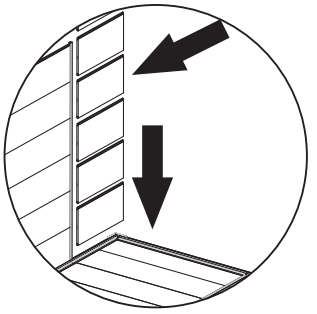



19 F2(X1) Cork Hammer

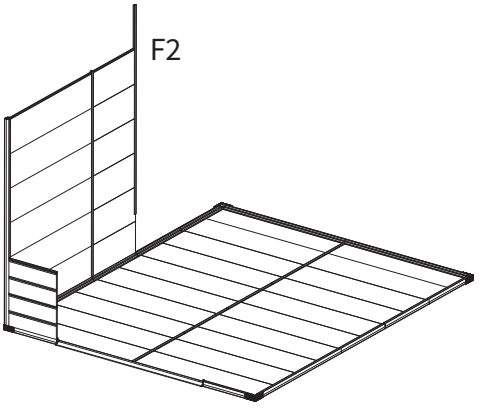

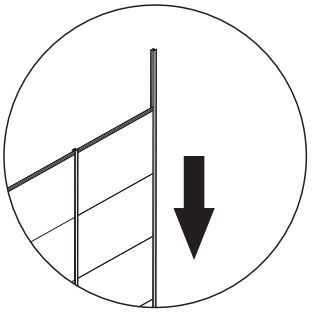


20 E54 (X6) F2 (X1) Cork Hammer

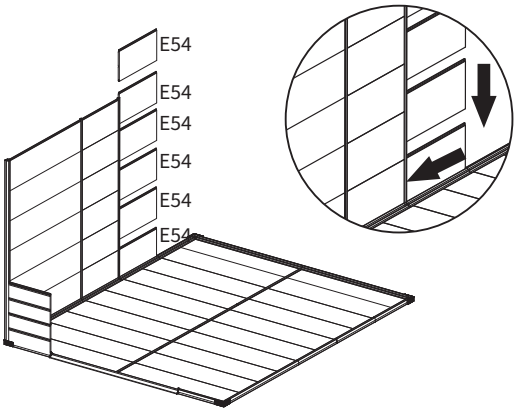


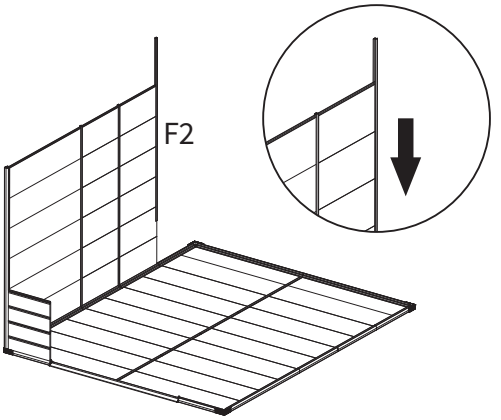


21 E54(X6) F13(X1) Cork Hammer

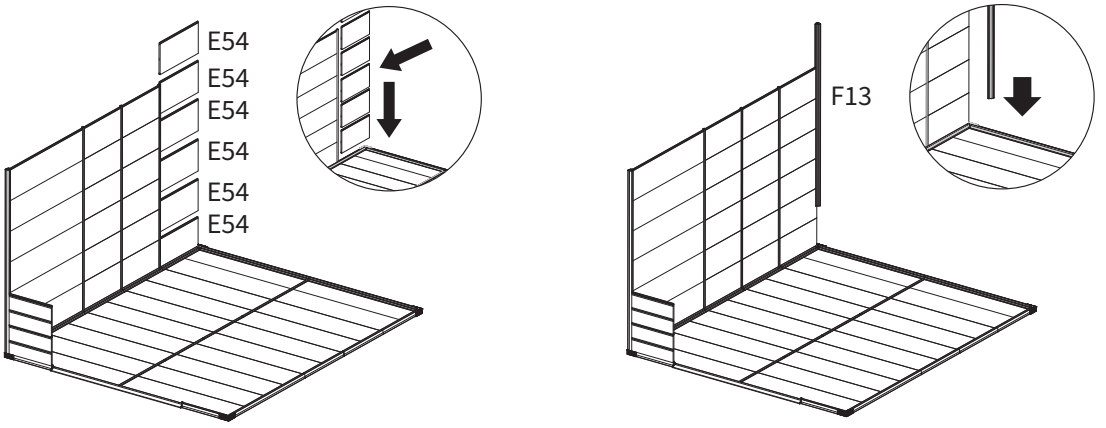


22 J20(X50) Cork Hammer Electric Drill

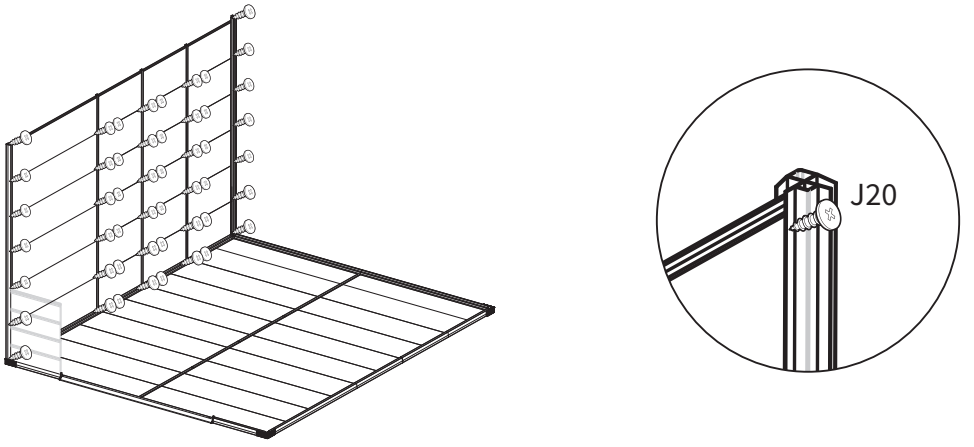


23 E7(X6) Cork Hammer

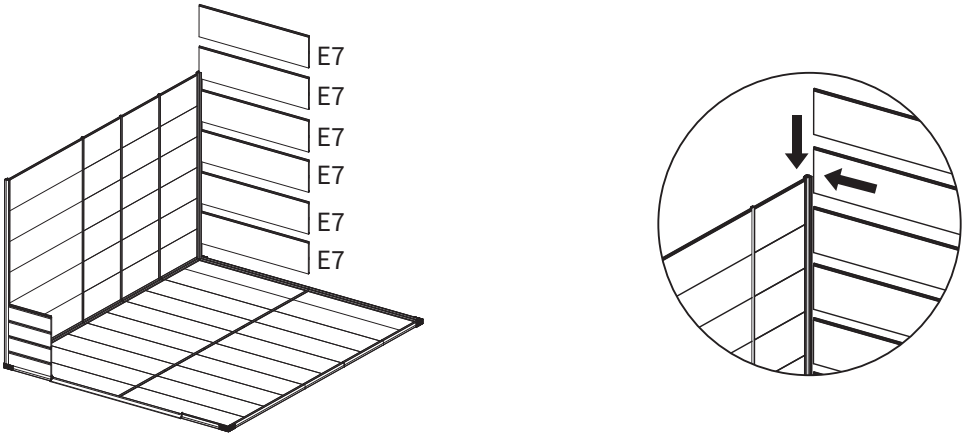


24 F65 (X1) Cork Hammer

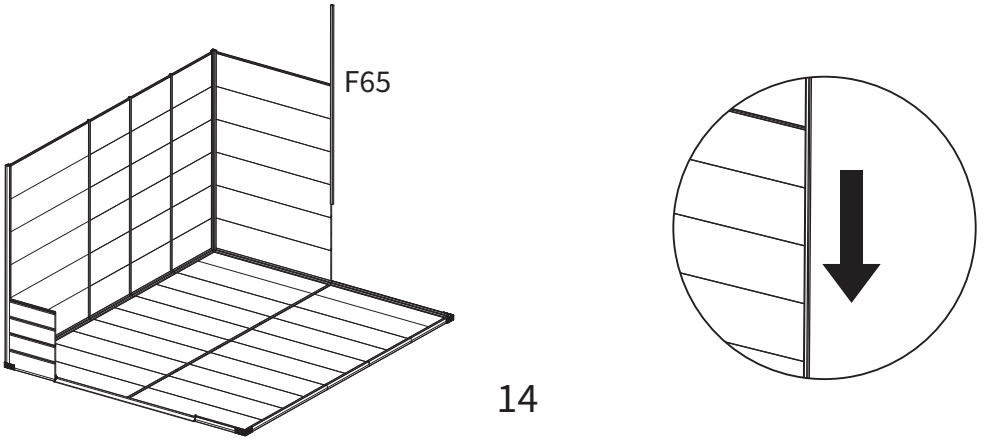



25 E7(X6) Cork Hammer

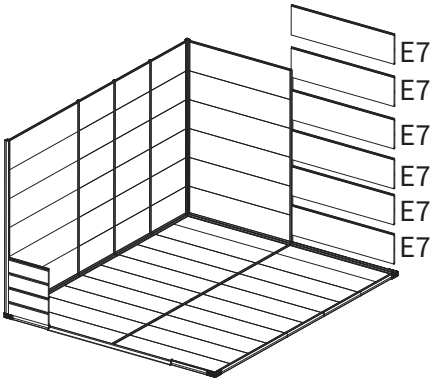

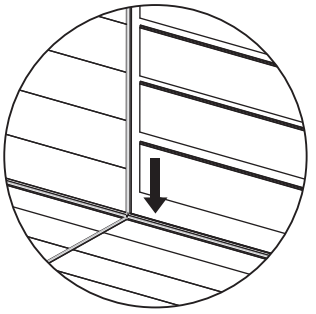



26 E68-L(X1) E70-L(X1) F8(X1) E68-R(X1) E70-R(X1) J20(X4) J62(X1) Cork Hammer Electric Drill

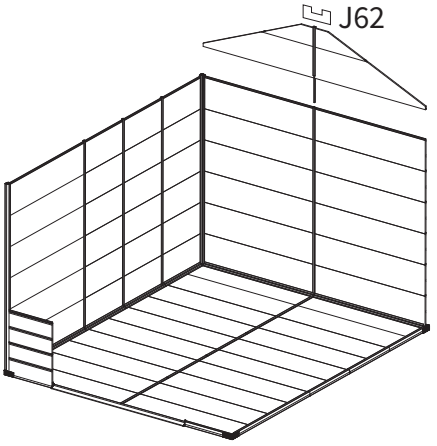

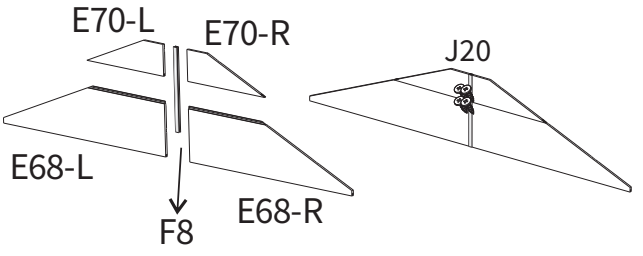



27 F13(X1) Cork Hammer

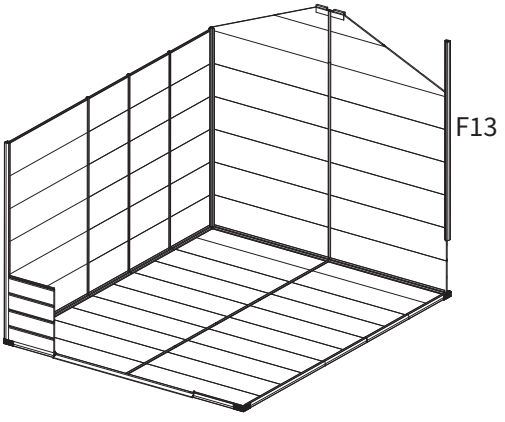

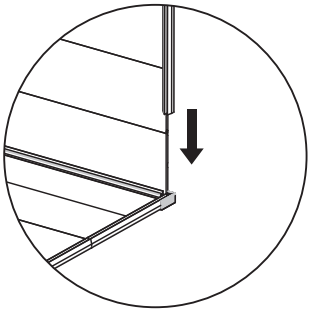



28 J20(X30) Cork Hammer Electric Drill

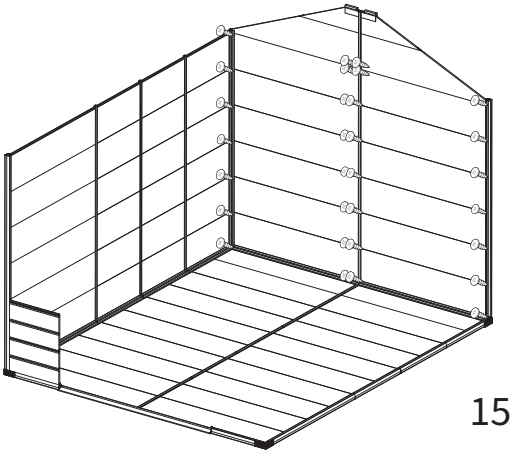

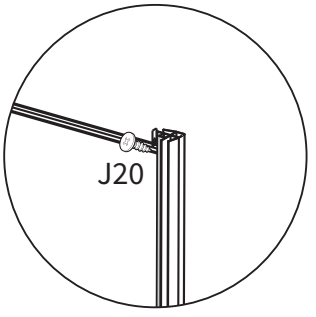



29 E54(X6) Cork Hammer

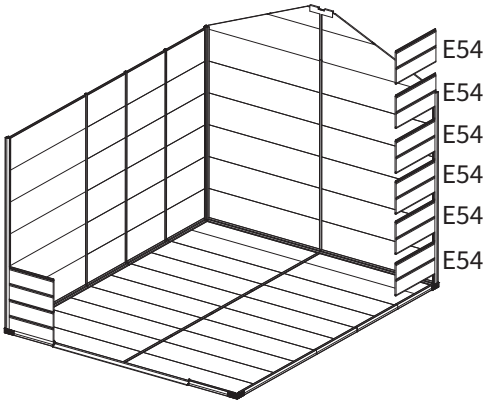

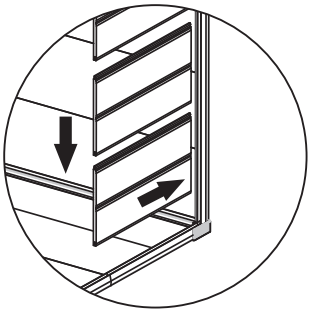



30 F2(X1) Cork Hammer

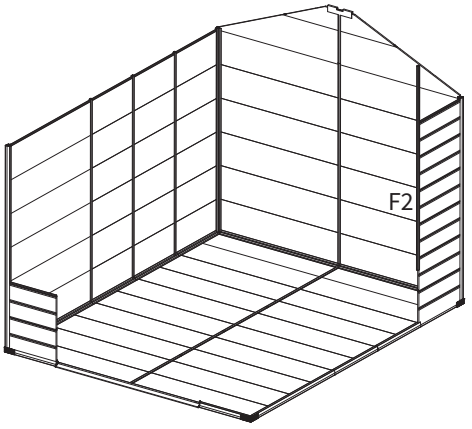

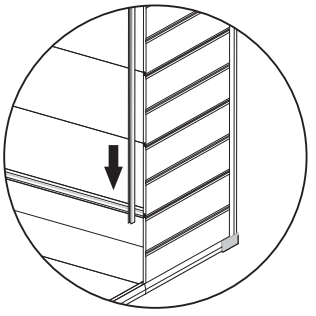



31 E54(X6) Cork Hammer

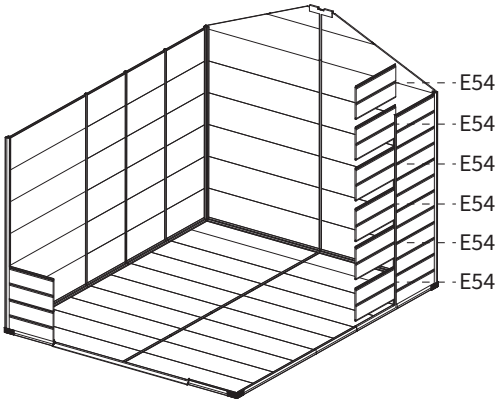

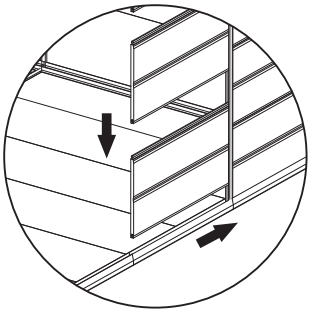



32 F2(X1) Cork Hammer

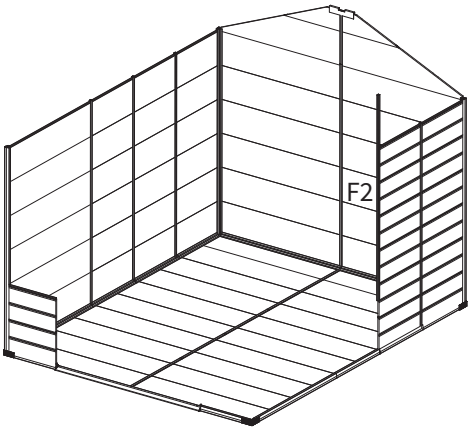

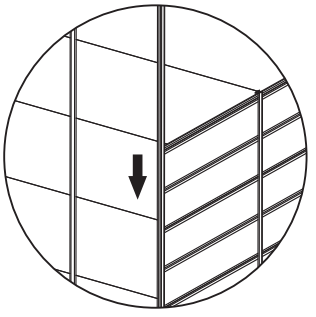



33 E54(X6) Cork Hammer

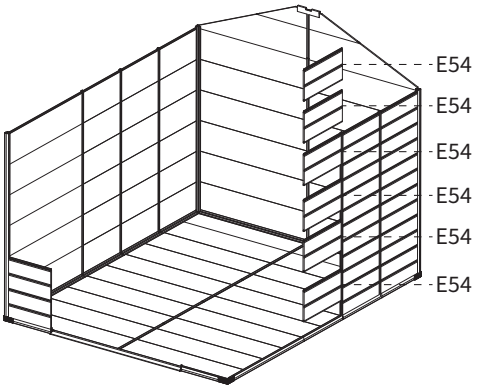

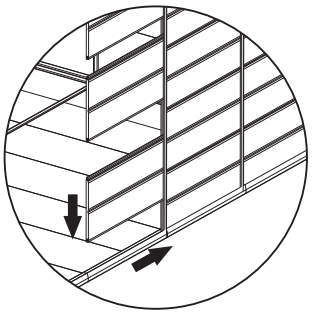



34 F2(X1) Cork Hammer

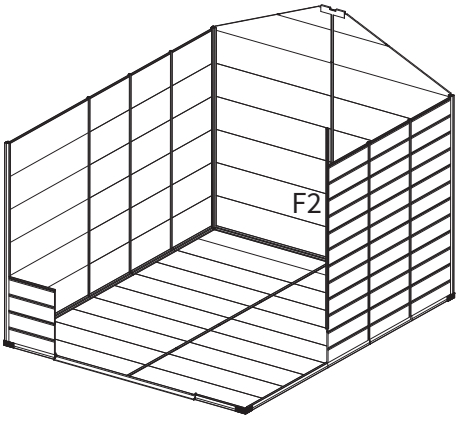

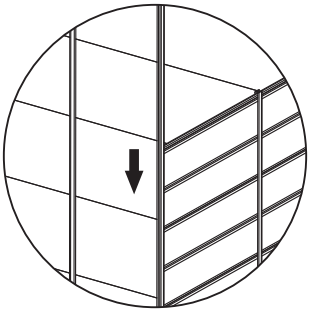



35 E3(X3) Cork Hammer

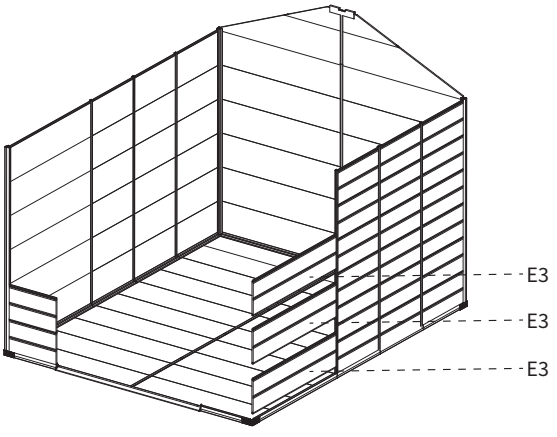


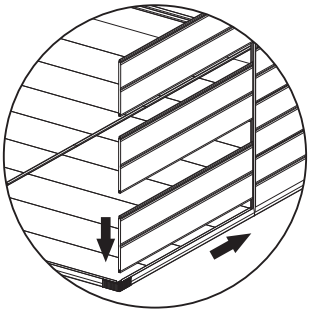


36 J20(X11) E74(X1) E75(X1) G18(X2) G5(X1) Cork Hammer Electric Drill

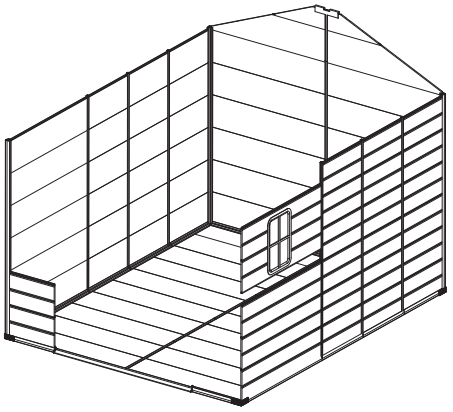


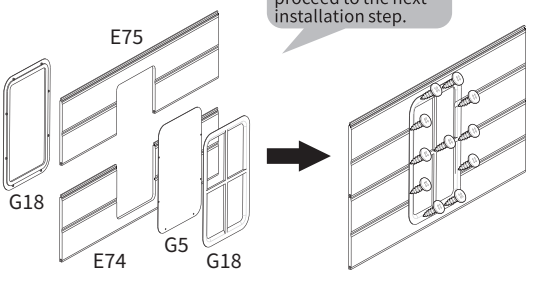

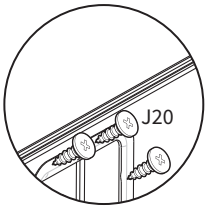



37 E3(X1) Cork Hammer

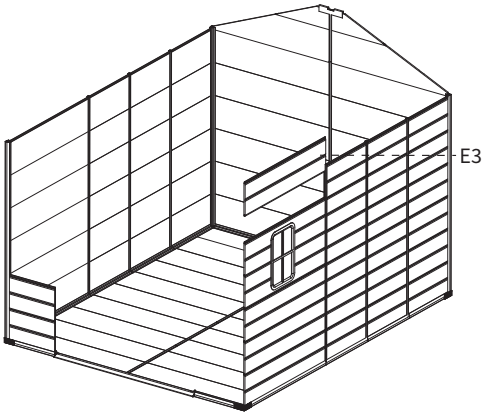

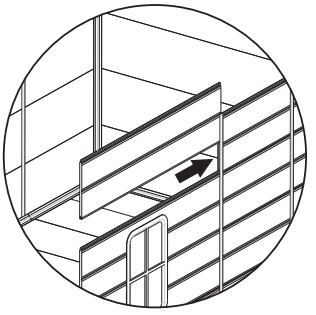



38 F13(X1) Cork Hammer J20(X50)

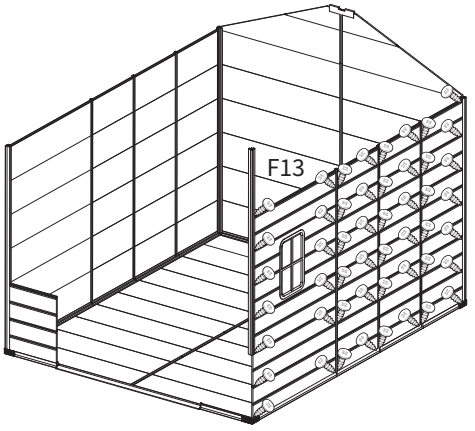

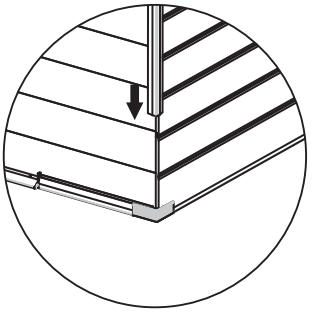



39 E47(X4) E64-L (X1) Cork Hammer

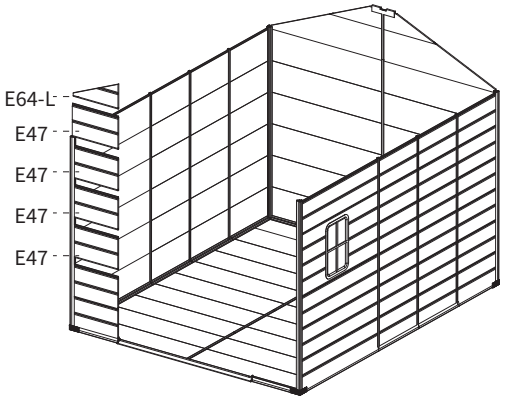

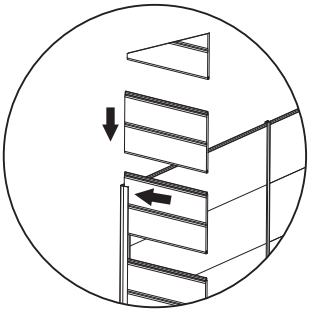



40 E64-L(X1) E47(X6) Cork Hammer

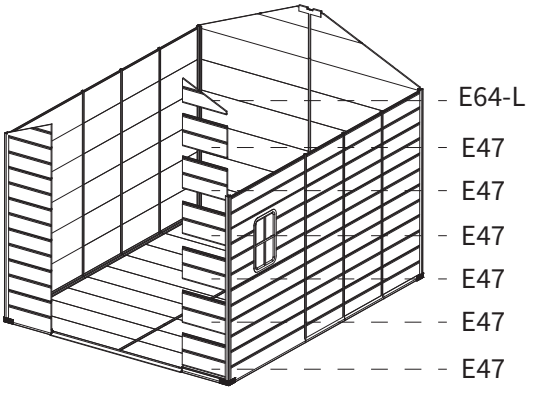

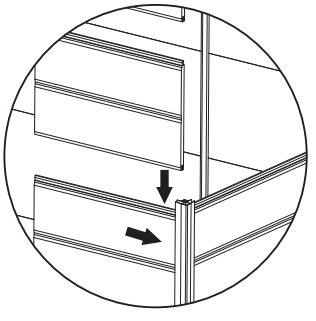


41 H16-L(X1) H16-R(X1) Cork Hammer

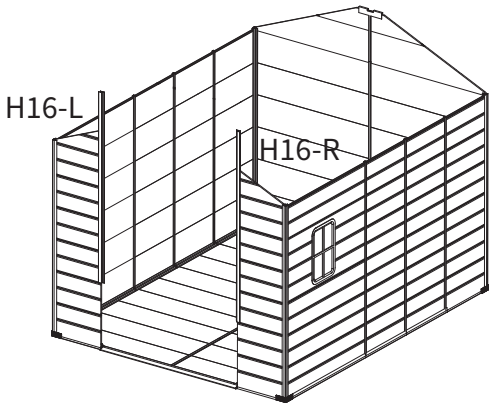


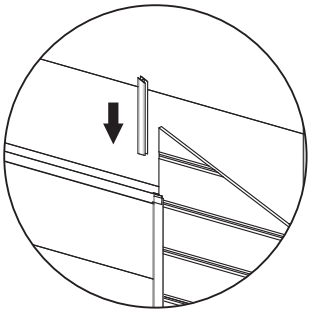


Install after tightening the screws from the inside out.


42 H6(X1) Cork Hammer

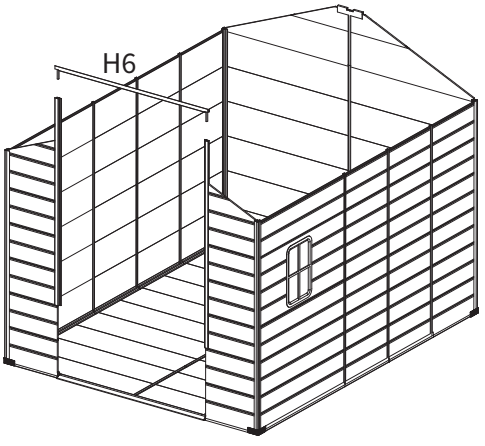


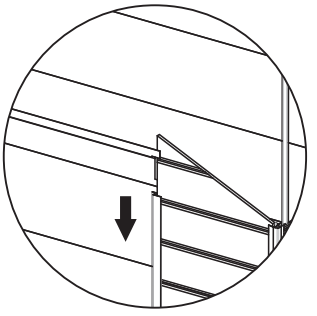


43 E69(X1) E4(X1) G3(X2) J20(X8) F47(X2) Cork Hammer

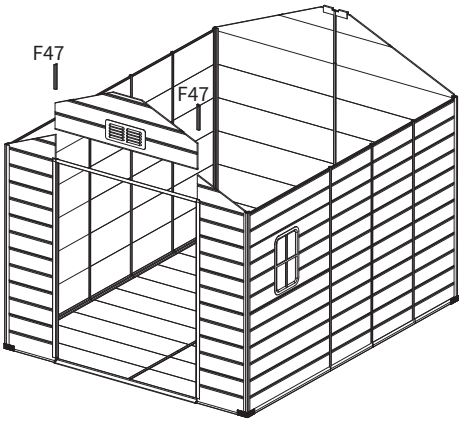


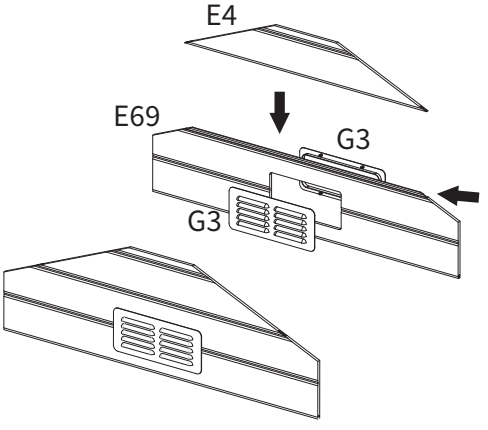


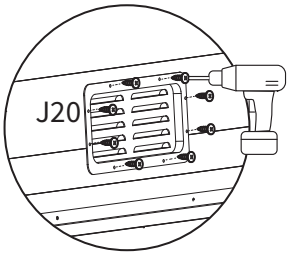


44 G21(X5) J20(X14) J21(X10) Cork Hammer Electric Drill

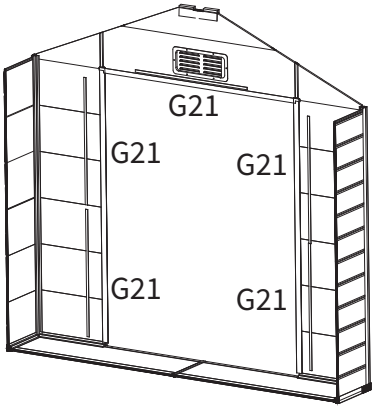


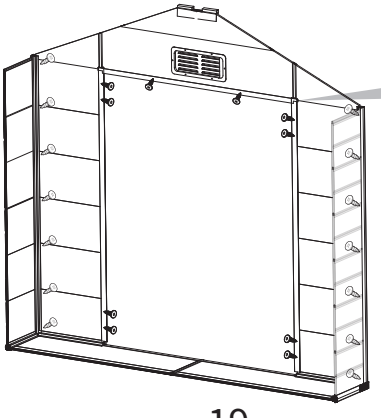

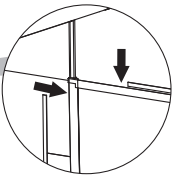



From inside the tool room, insert the door frame clip G21 into the gaps on all three sides of the door frame to maintain its stability.

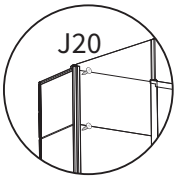

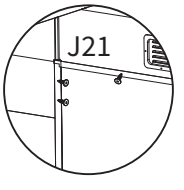



45 F43(X2) F40(X4) F39(X2) J20(X18) Cork Hammer

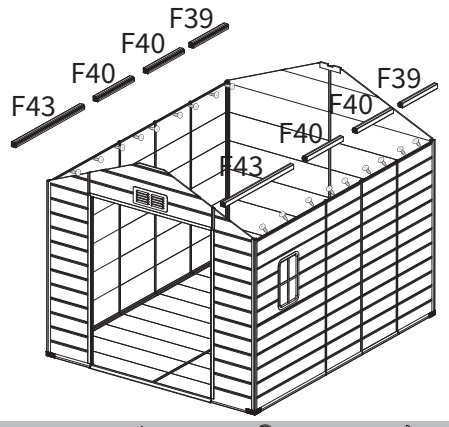


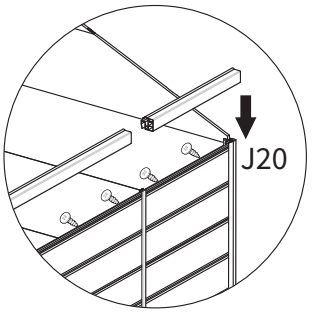


46 J3(X8) J4(X8) J65(X16) Small Wrench Allen key Cork Hammer Ladder

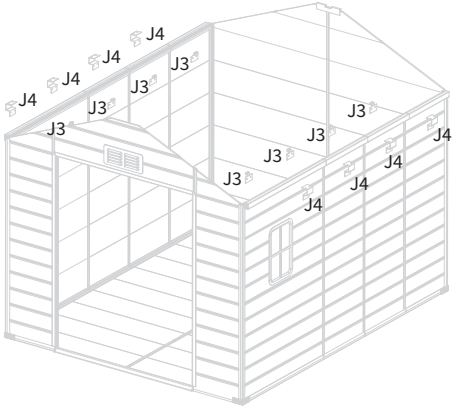

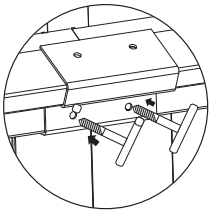

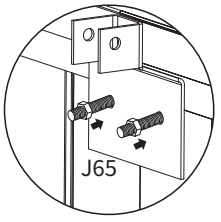


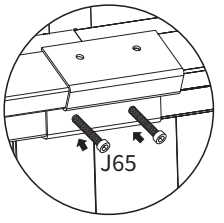


First, drill two holes on each side of the tool room, then install J3 and J4.

The screw passes through the holes of J3 and J4 and is locked with a nut.

47 J19(X24) J47(X8) J48(X4) J49(X4) Small Wrench Allen key

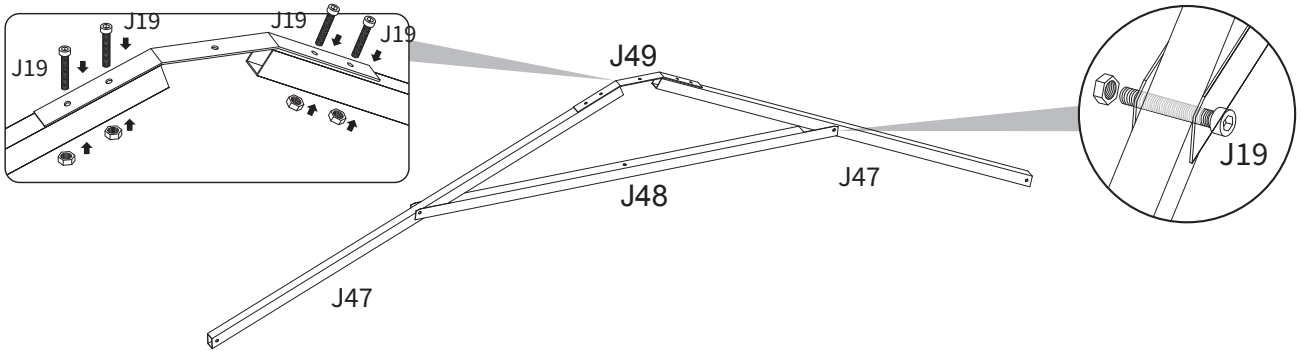



48 J19(X8) Small Wrench Allen key Ladder

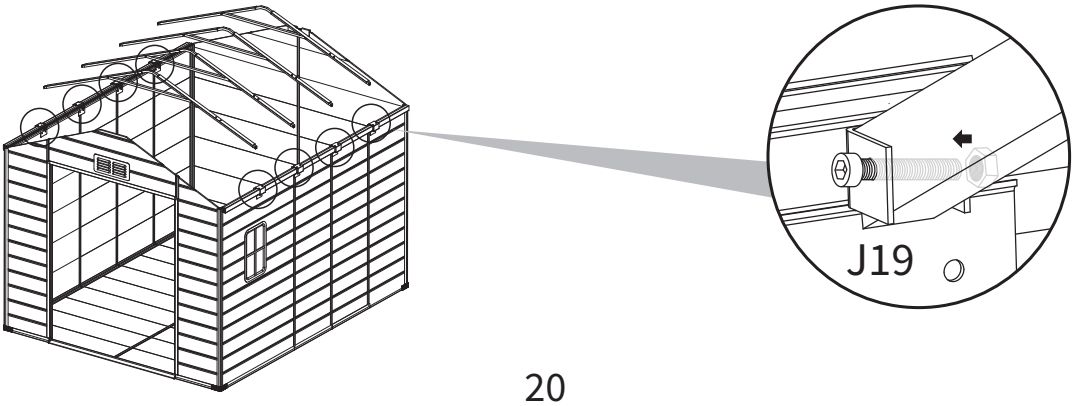

49 E13(X10)


Cork Hammer · Ladder · Scraper

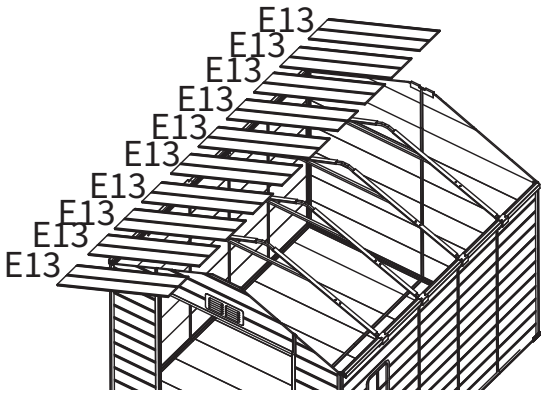


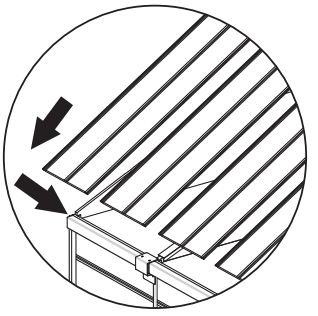

50 F71(X1) F70(X3)


Cork Hammer · Ladder

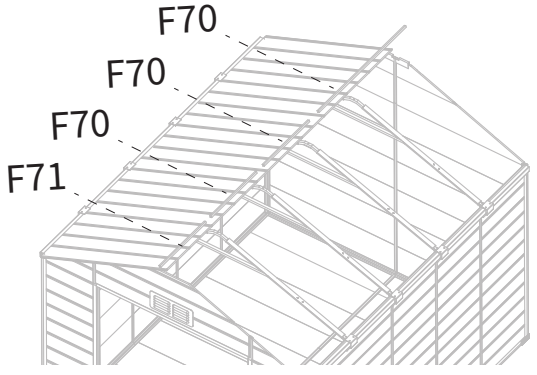


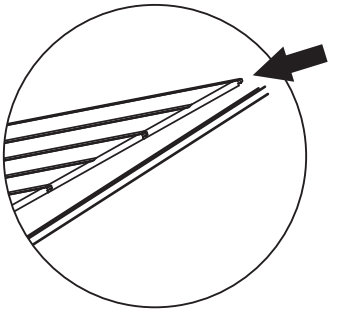

51 F44(X2)


Cork Hammer · Ladder

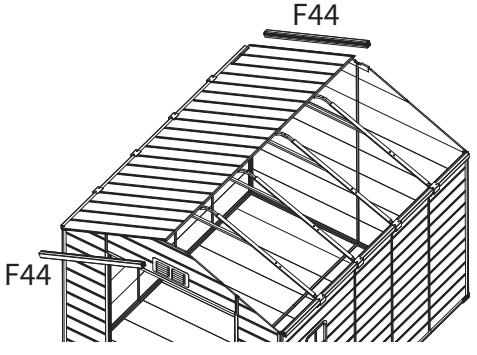


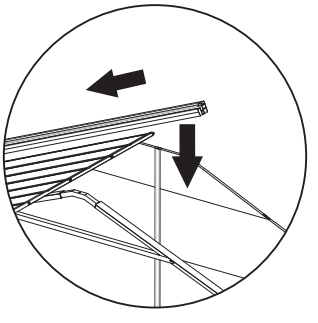


52 E13(X10)


Cork Hammer · Ladder · Scraper

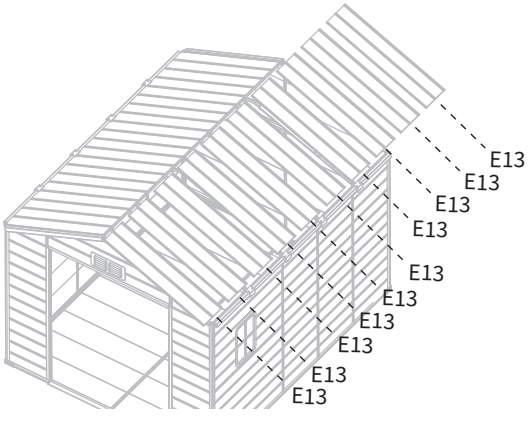

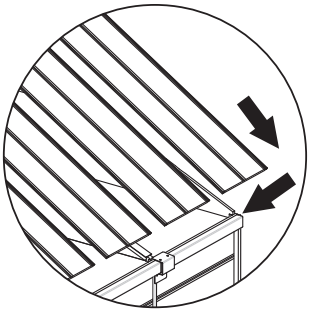



53 F71(X1) F70(X3) Cork Hammer Ladder

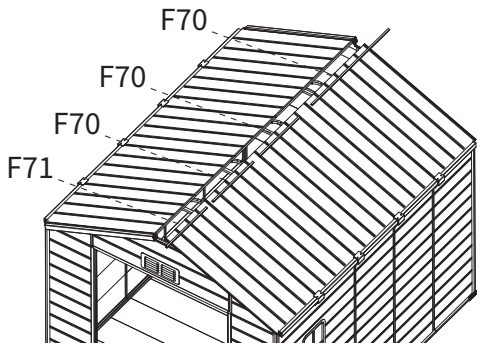

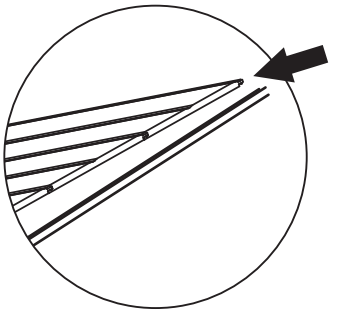



54 F44(X2) Cork Hammer Ladder

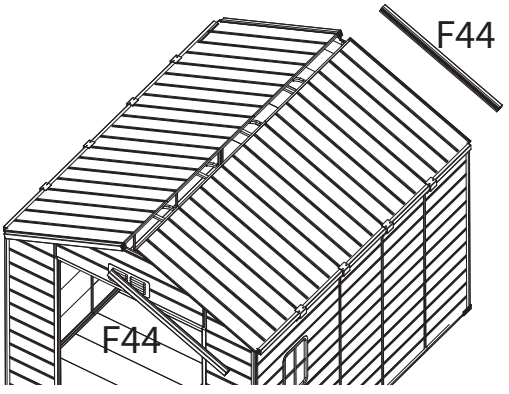

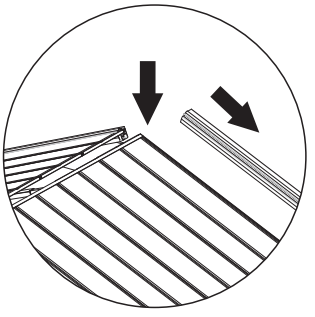



55 J37(X1) J61(X2) J46(X1) J19(X3) Cork Hammer Small Wrench Allen key Ladder

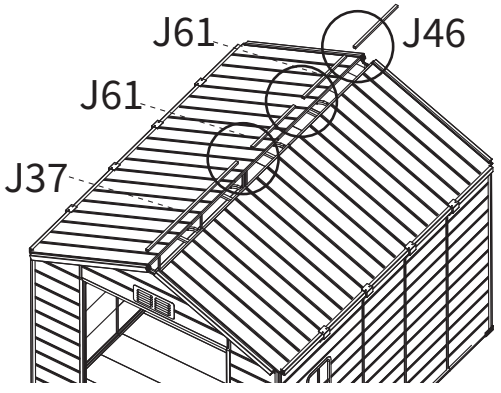

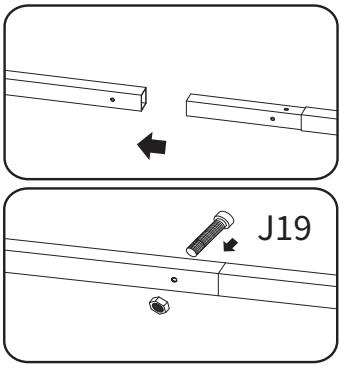


56 J45(X4) Cork Hammer Ladder

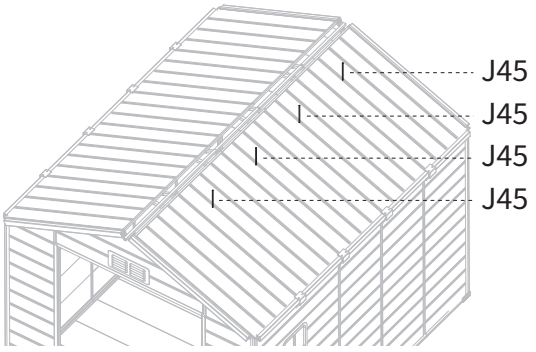


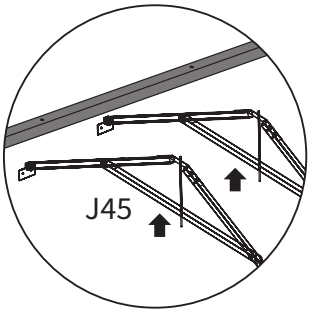


57 G10(X1) G12(X3) Cork Hammer Ladder

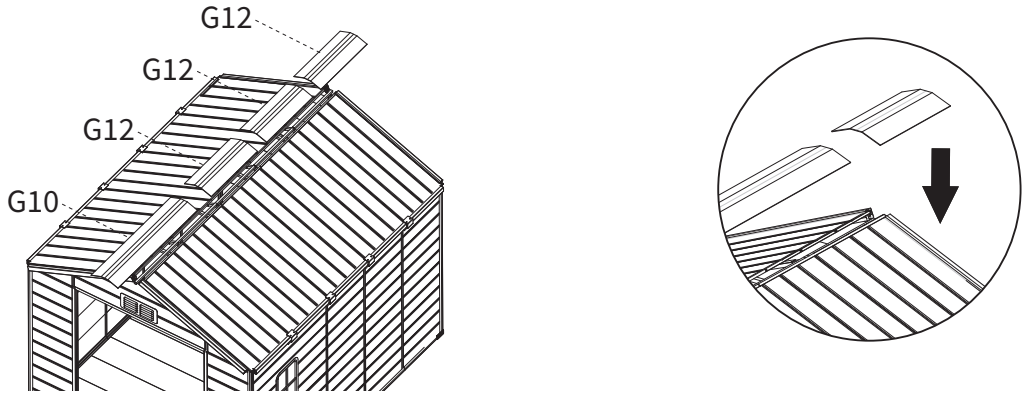


58 G8(X2) Ladder

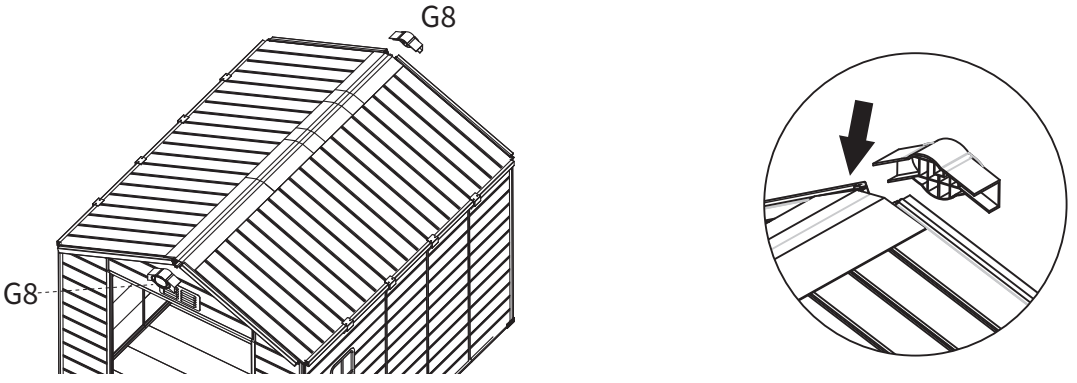


59 G9(X4) J20(X52) Cork Hammer Ladder

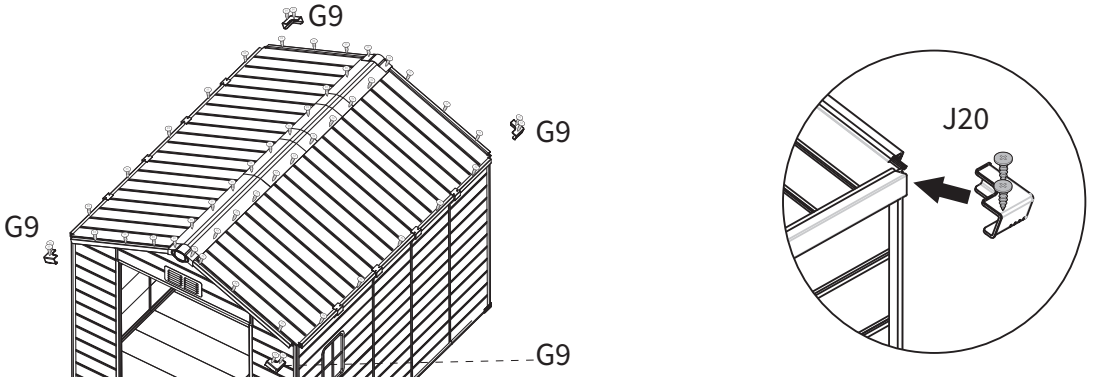


60 G16(X1) G26(X1) J43(X1) J21(X6) Electric Drill

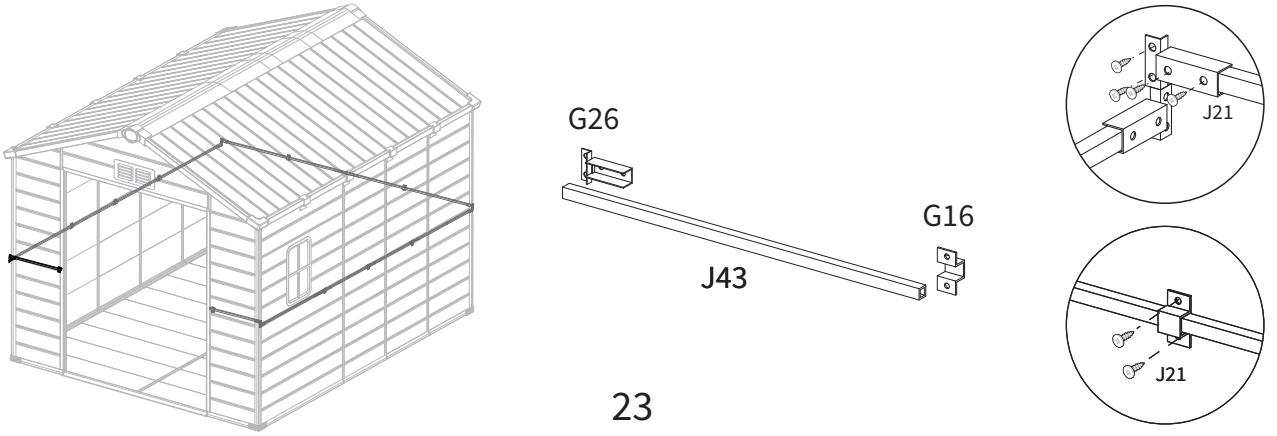


61 G15(X7) G25(X2) J23(X1) J58(X3) G23(X3) J20(X8) J21(X14) Electric Drill

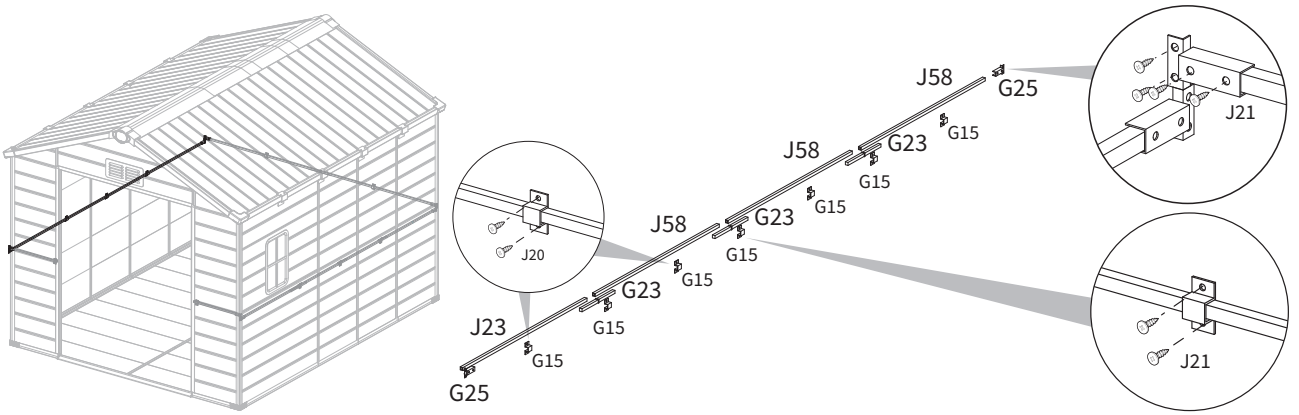


62 G16(X6) G26(X4) J43(X4) J29(X2) G28(X4) J20(X8) J21(X20) Electric Drill

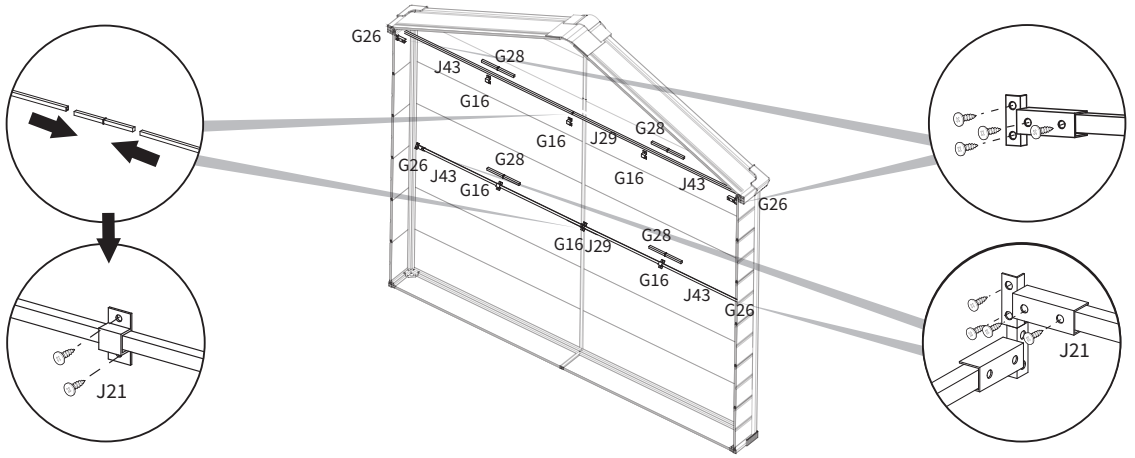


63 G15(X7) G25(X2) J23(X1) J58(X3) G23(X3) J20(X8) J21(X14) Electric Drill

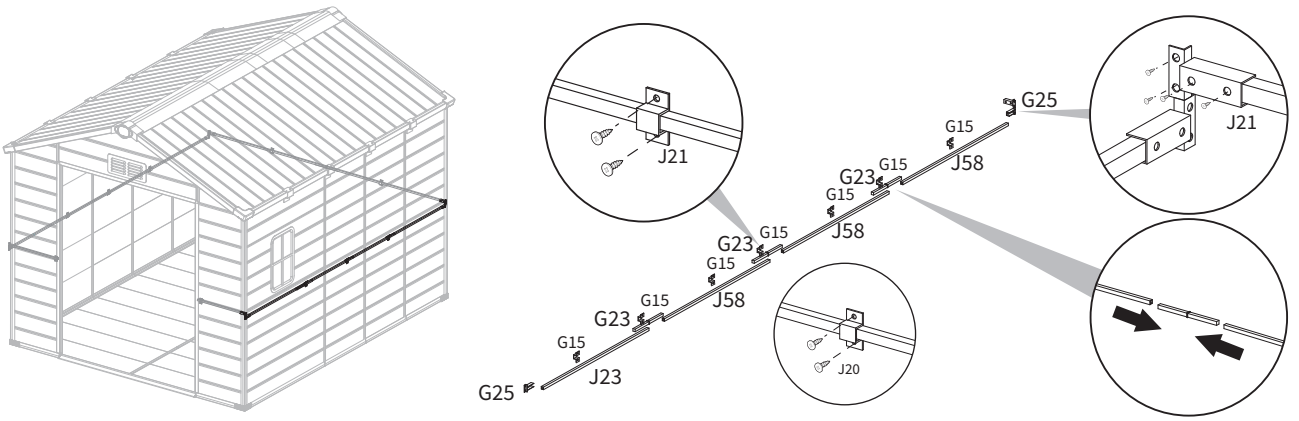


64 G16(X4) G26(X3) J43(X3) J21(X20) G28(X2) J29(X1) Electric Drill

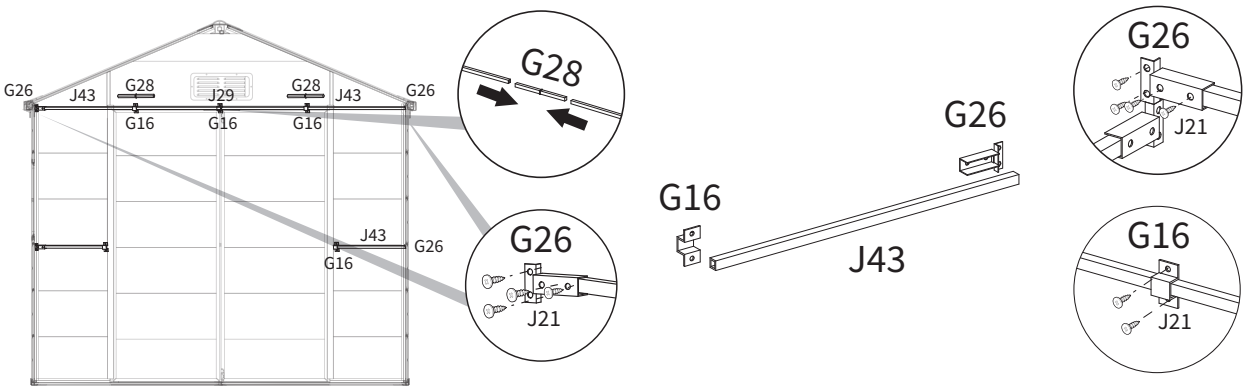


65 J2(X4) J21(X16) Electric Drill

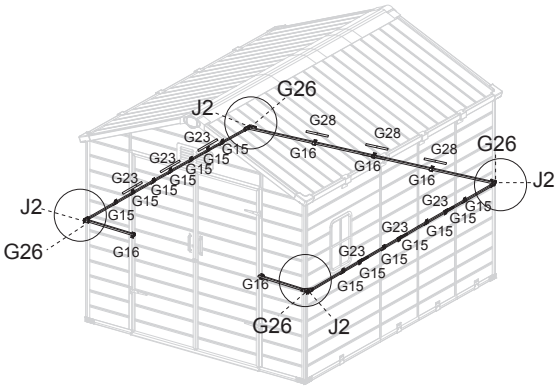


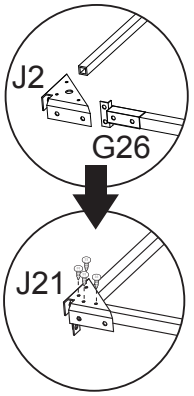


If you choose to install J2, remove a G26 at the corner, and then install the horizontal alignment screw.


66 •E58(×2) •E59(×10) •J60(×16) •H15(×4) •H17(×4) Cork Hammer Electric Drill

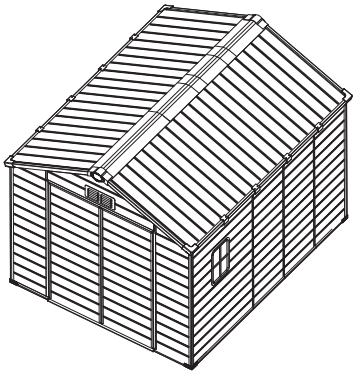

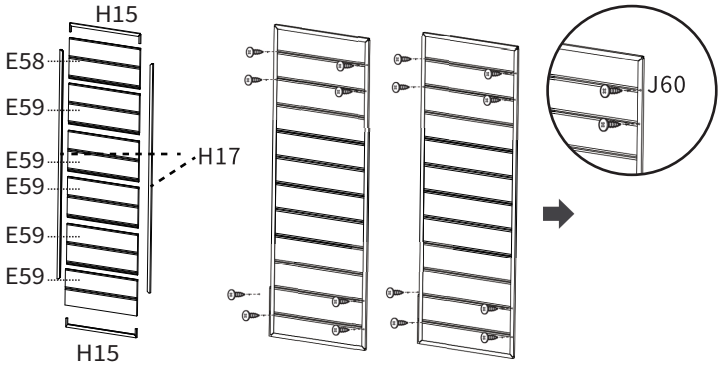



67 J17(X4) J21(X20) J20(X8) Electric Drill

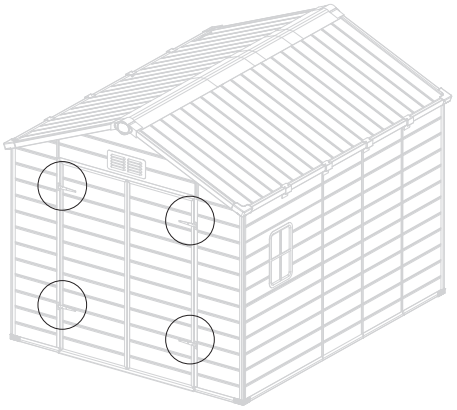

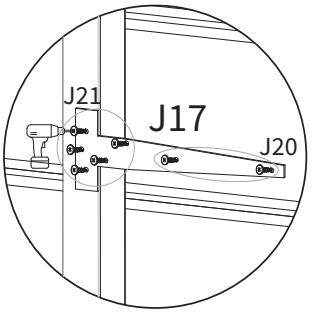



68 J16(X2) J21(X10) J18(X2) Electric Drill

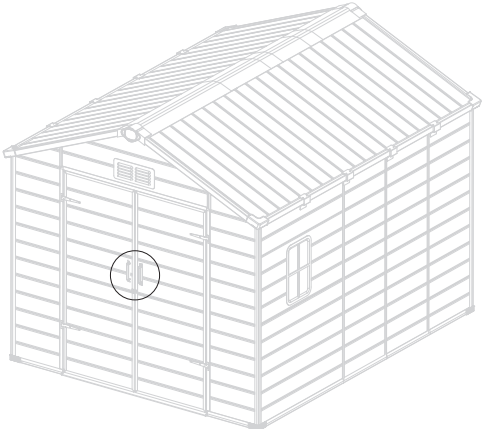


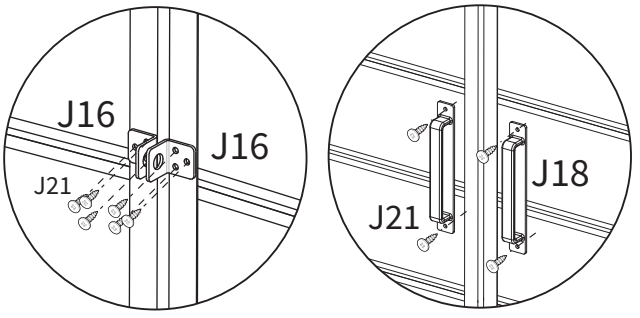


69 J31(X1) J32(X1) J59(X1) J21(X4) J20(X2) Electric Drill

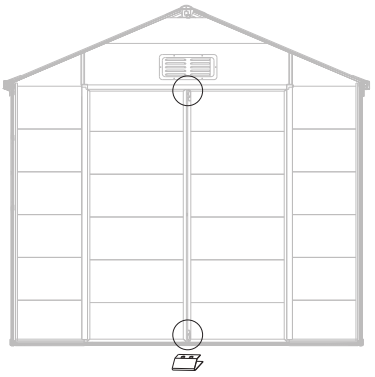


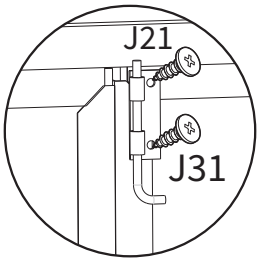


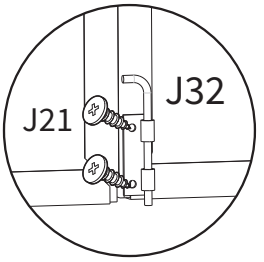


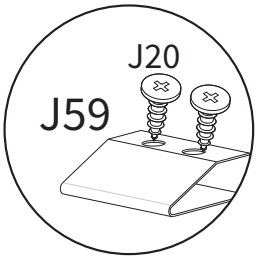


70 J1(X4) D90(X4) D91(X4) J20(X28) Electric Drill

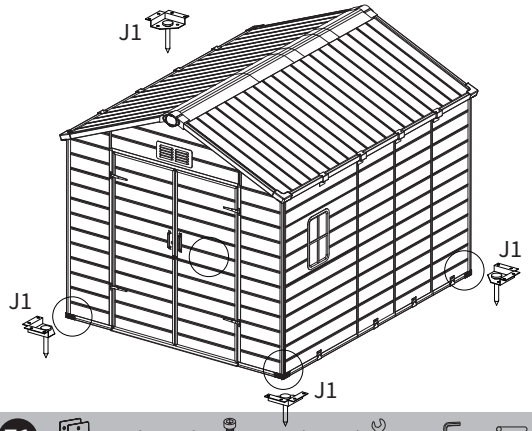

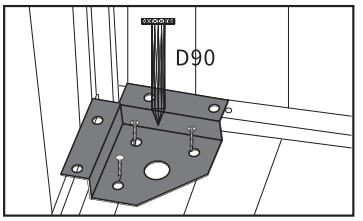


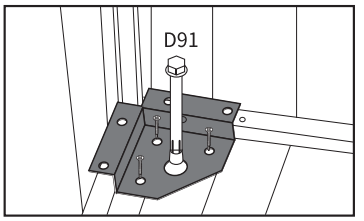



Install separately at the four corners inside the house

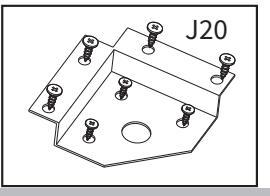


71 J6(X11) J65(X22) Small Wrench Allen key

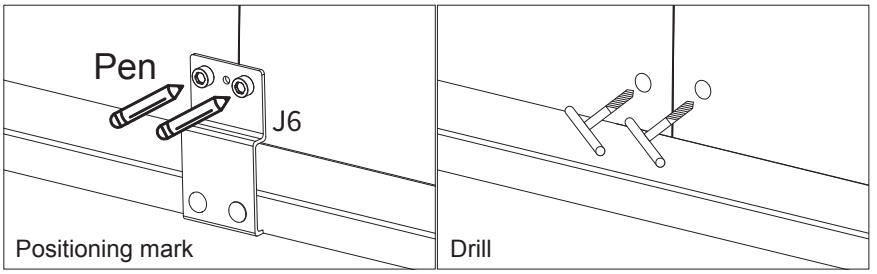


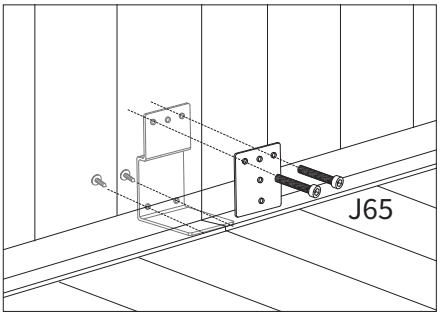

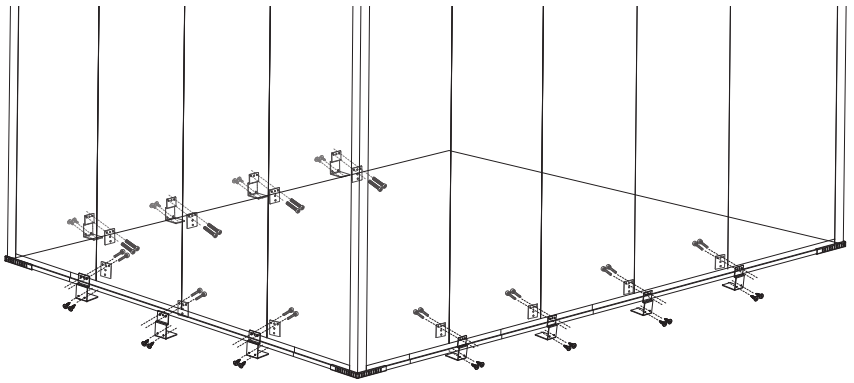

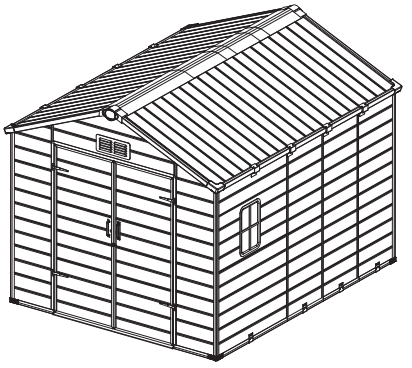

Bottom reinforcement, effective wind resistance

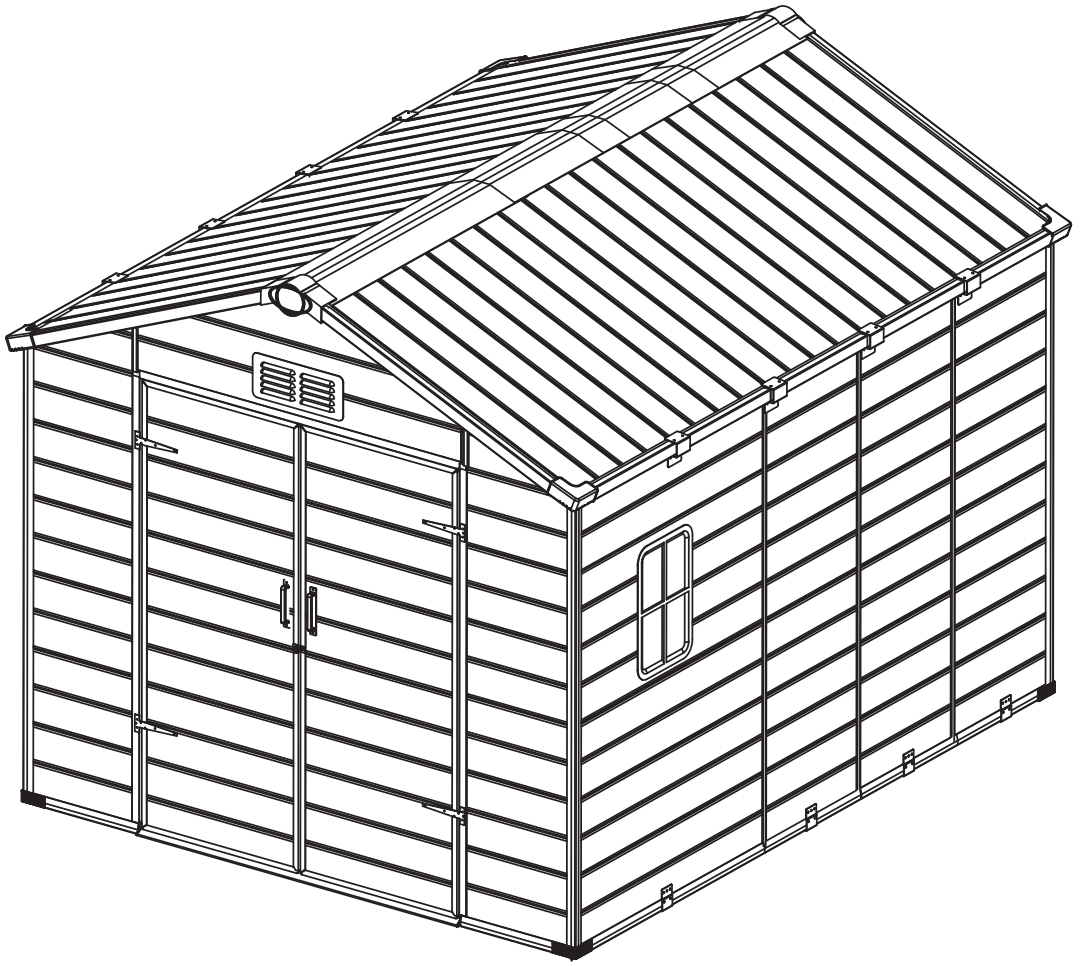

Key Installation Precautions
Adhering to safety and preparation steps is crucial for a successful installation.

Personal Safety
Wear protective gloves during assembly.
Personnel & Assistance
Assembly requires 2–3 people. Ensure the work area is clear of children and pets during the process.
Foundation & Securing
The plastic shed must be anchored to a stable base (not included) to prevent damage.
Product Limitations
This structure is designed for storage purposes only—not for habitation. Do not store hot items (e.g., recently used grills) or volatile chemicals inside.

Maintenance After Installation
Proper maintenance will extend the life of your plastic tool shed.
Cleaning
Clean the shed with a cloth and water.
Debris Removal
Remove leaves from the roof promptly to prevent staining. In snowy conditions, clear snow regularly to avoid structural damage from heavy load.
General Care
Keep the door closed and locked when not in use to prevent wind damage.