






# PATIO SWING









## ASSEMBLY INSTRUCTION

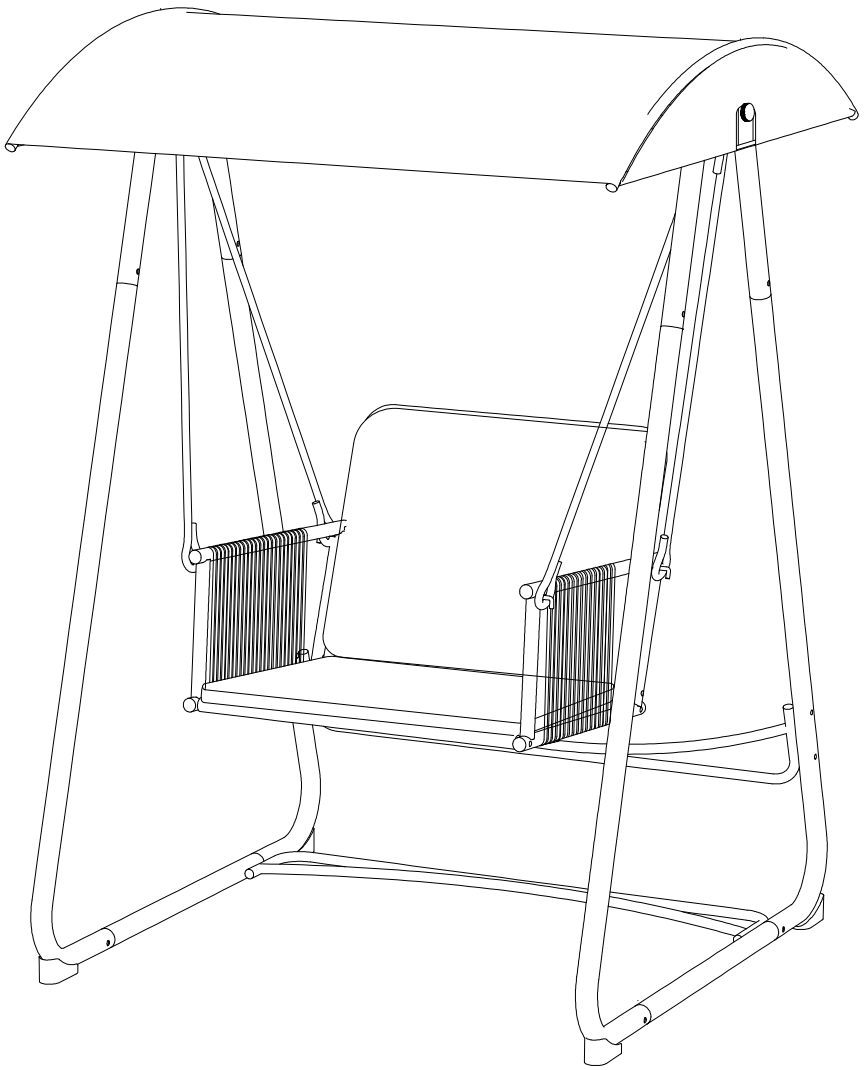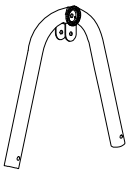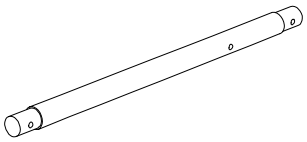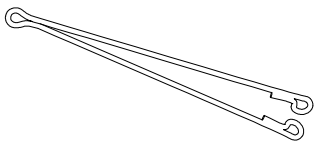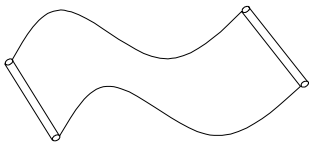




# Component List

| LABEL | ILLUSTRATION | DESCRIPTION | QTY |
|---|---|---|---|
| A |  | Front leg tube | 2 |
| A1 |  | Rear leg tube | 2 |
| B |  | Top bar | 2 |
| C |  | Leg connecting tube | 2 |
| D |  | Back support bar | 2 |
| E |  | Top connecting tube | 1 |
| F |  | Seat bottom tube | 2 |
| G |  | Hanging rope | 2 |
| H |  | Sitting cloth | 1 |



# Component List

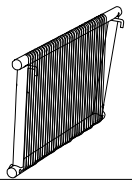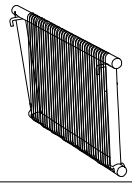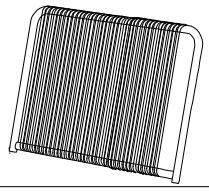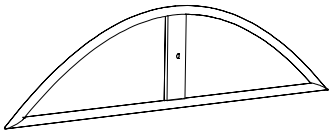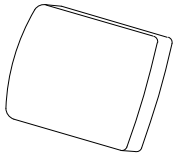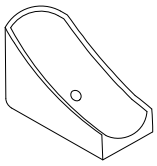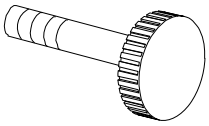
| LABEL | ILLUSTRATION | DESCRIPTION | QTY |
|---|---|---|---|
| I |  | Left armrest | 1 |
| I1 |  | Right armrest | 1 |
| J |  | Backrest | 1 |
| K |  | Ceiling bracket | 2 |
| M |  | Ceiling cloth | 1 |
| N |  | Seat cushion | 2 |
| G1 |  | Angled foot | 4 |
| Y |  | Large handwheel | 2 |

# Hardware List

| LABEL | ILLUSTRATION | DESCRIPTION | QTY |
|---|---|---|---|
| 1 |  M8X50 | Bolts+Washers +Nut | +1 (spare) 6 |
| 2 |  M6X65 | Bolts+Washers +Nut | +1 (spare) 8 |
| 3 |  M8X50 | Bolts+Washers | 6 |
| 4 |  M6X50 | Bolts+Washers | 4 |
| 5 |  M6X20 | Bolts | 4 |
| 6 |  | Rubber pad | 2 |
| 7 |  | Allen key | 1 |
| 8 |  | Bilateral opening | 1 |


1

| 1×6PCS | 7 | 8 |
| --- | --- | --- |
|  M8x50 |  |  |

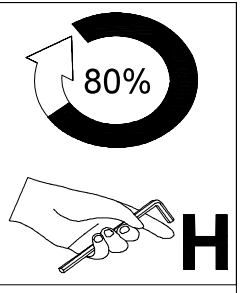



## Step 1 Attach the Leg Tubes


Pay attention to the orientation

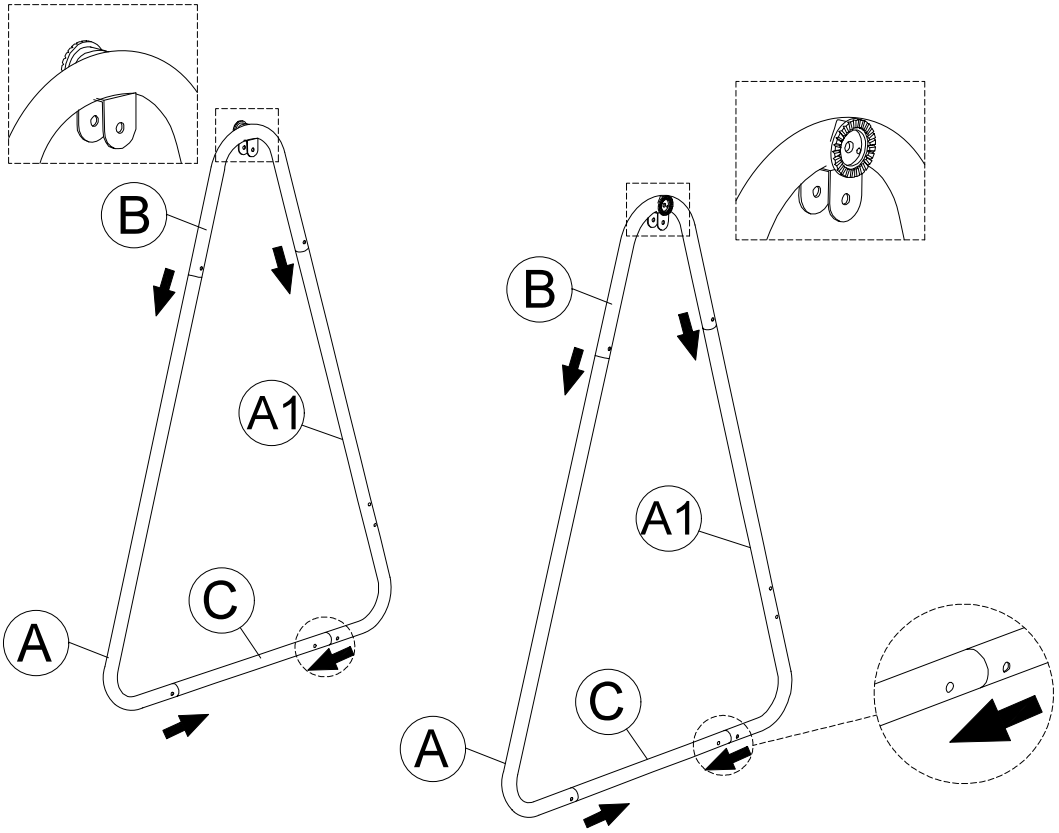



## Step 2

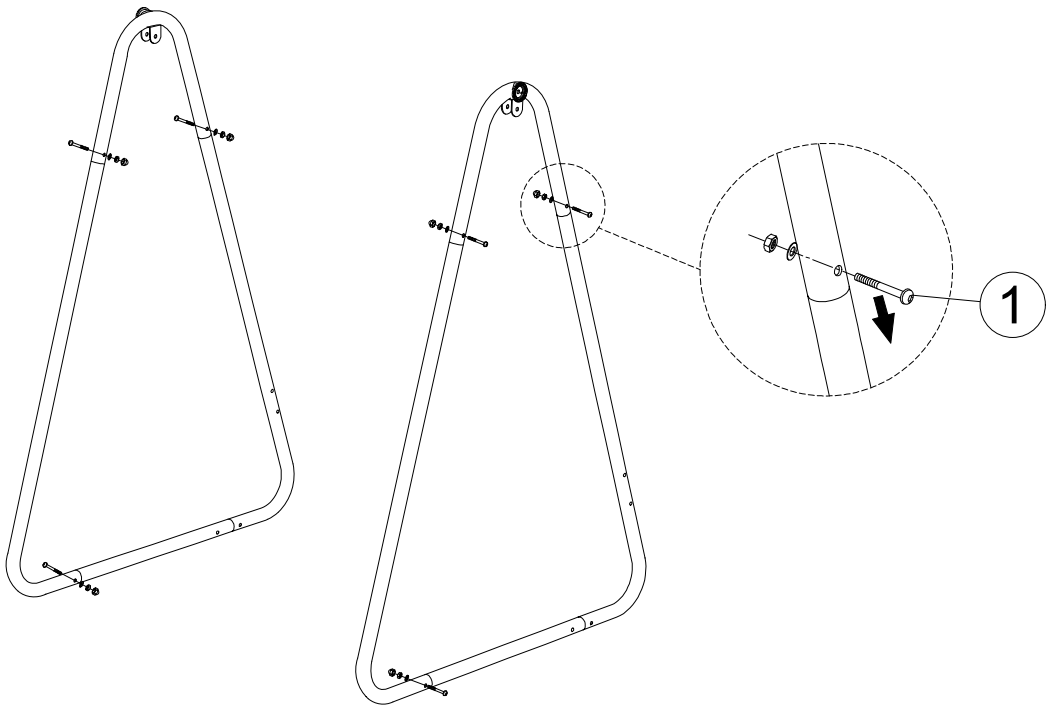


# 2



| 5×4PCS | G1×4PCS | 7 |
| --- | --- | --- |
|  M6x20 |  |  |

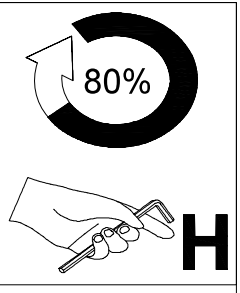



## Attach the Angled Feet

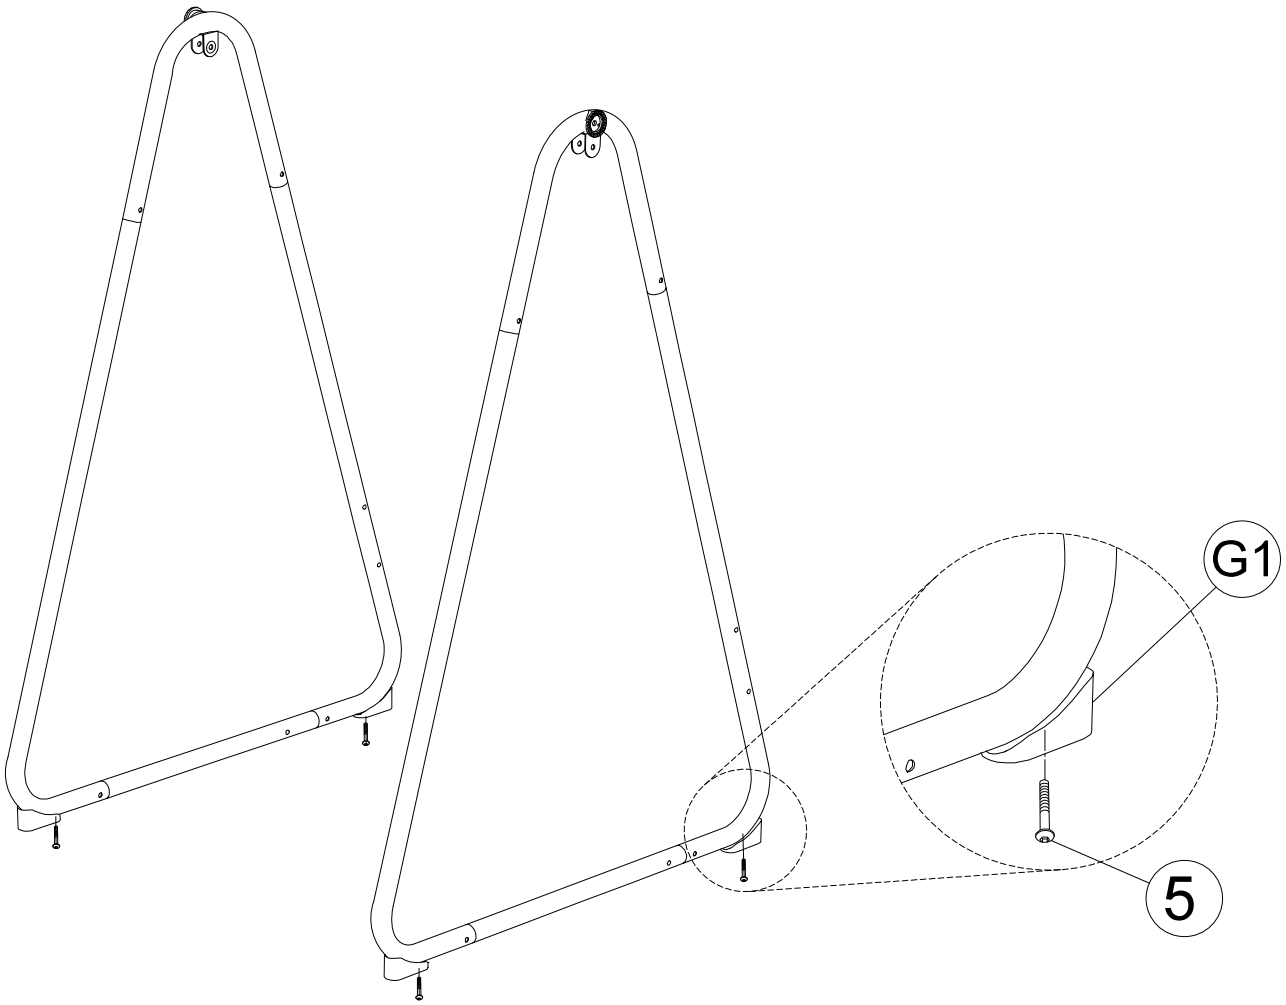


3

| 2×8PCS | 7 | 8 |
| --- | --- | --- |
|  M6X65 |  |  |


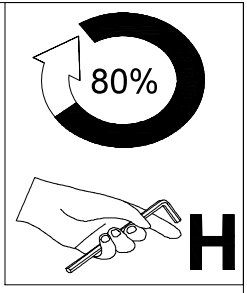



Attach the Back Support Bar


Pay attention to the orientation of the frame.

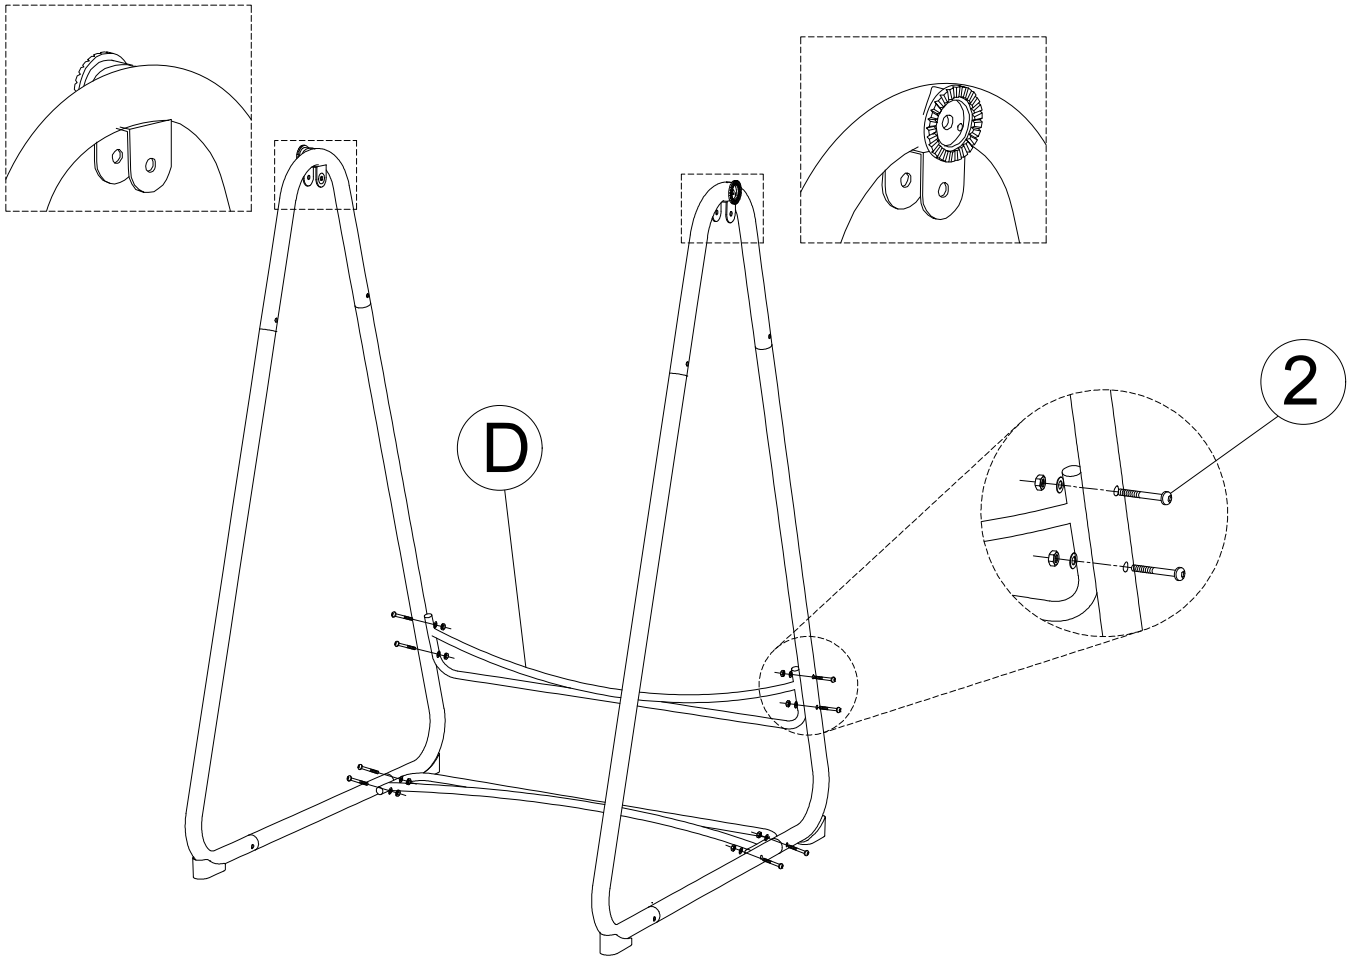


# 4

| 3×2PCS | 6×2PCS | 7 |
| --- | --- | --- |
|  M8x50 |  |  |


Step 1 Insert the Rubber Pad into the Hanging Rope then place it into the center of the Metal Bracket

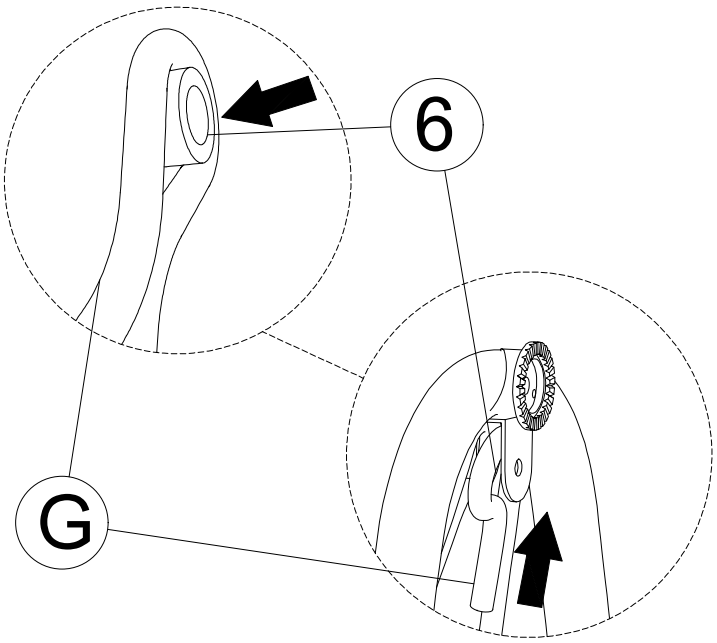



Step 2

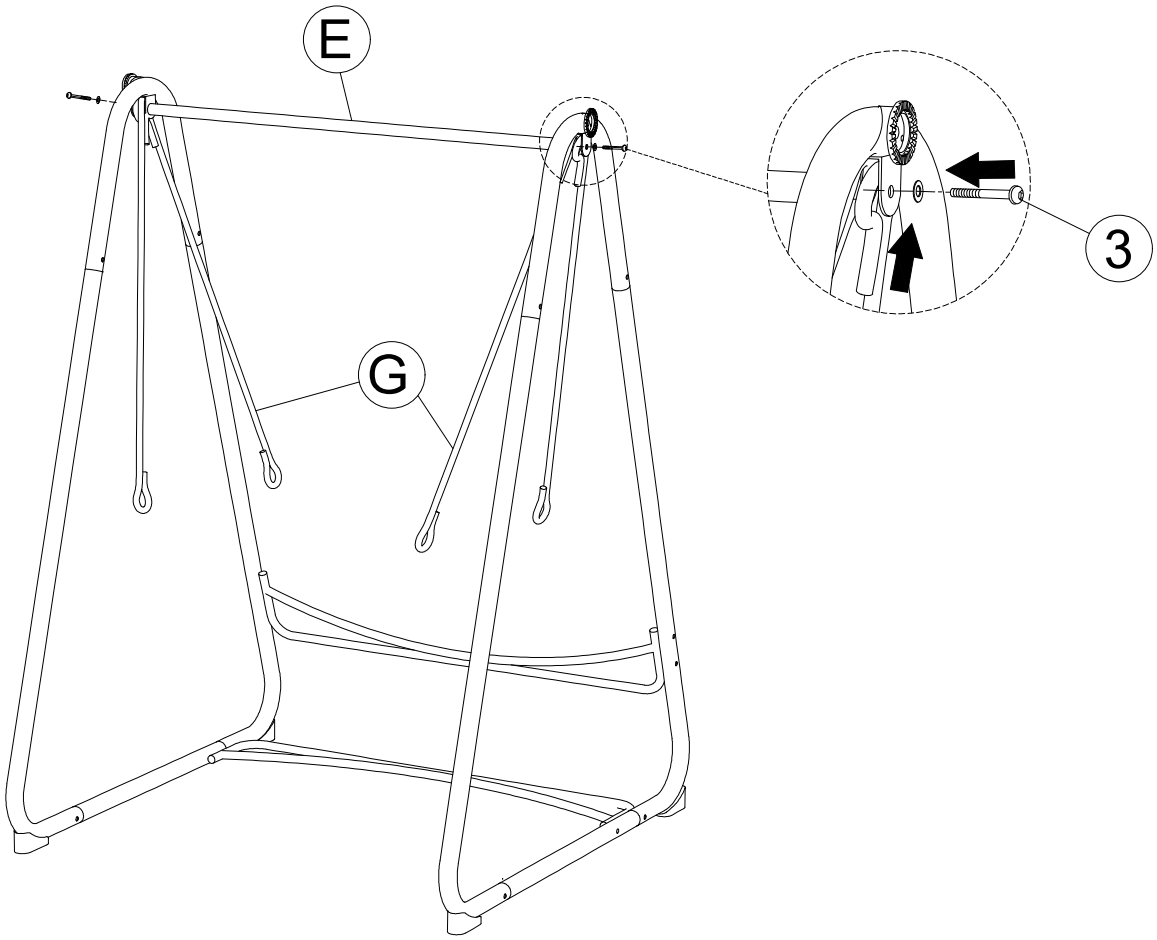


# 5


| 4×4PCS | 7 |
| --- | --- |
|  M6x50 |  |

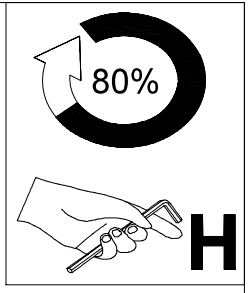


## Step 1 Install the swing seat

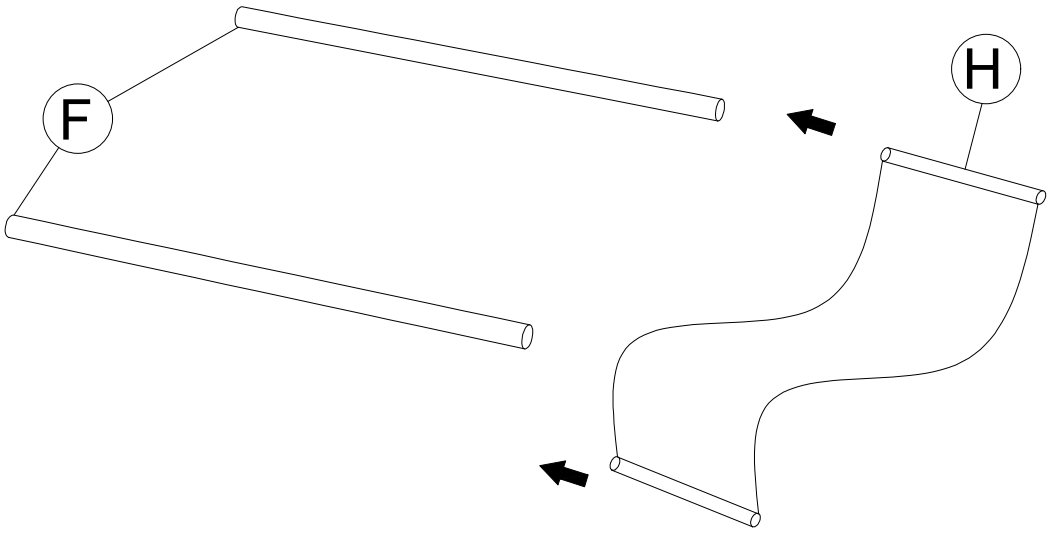



## Step 2

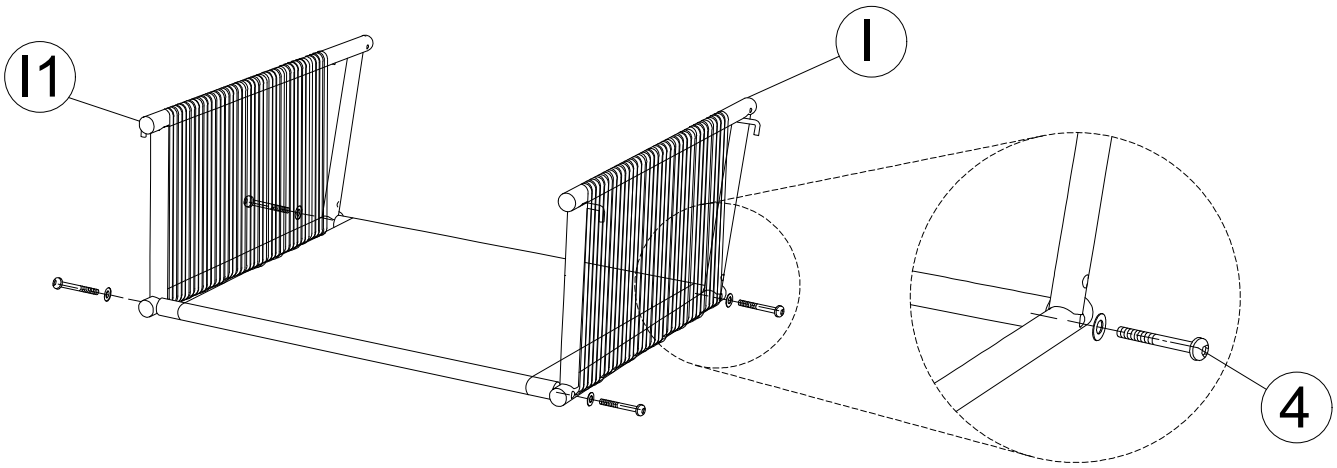

# 6


3×4PCS




M8x50


7



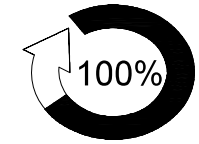



## Step 1 Install the seat and tighten all screws

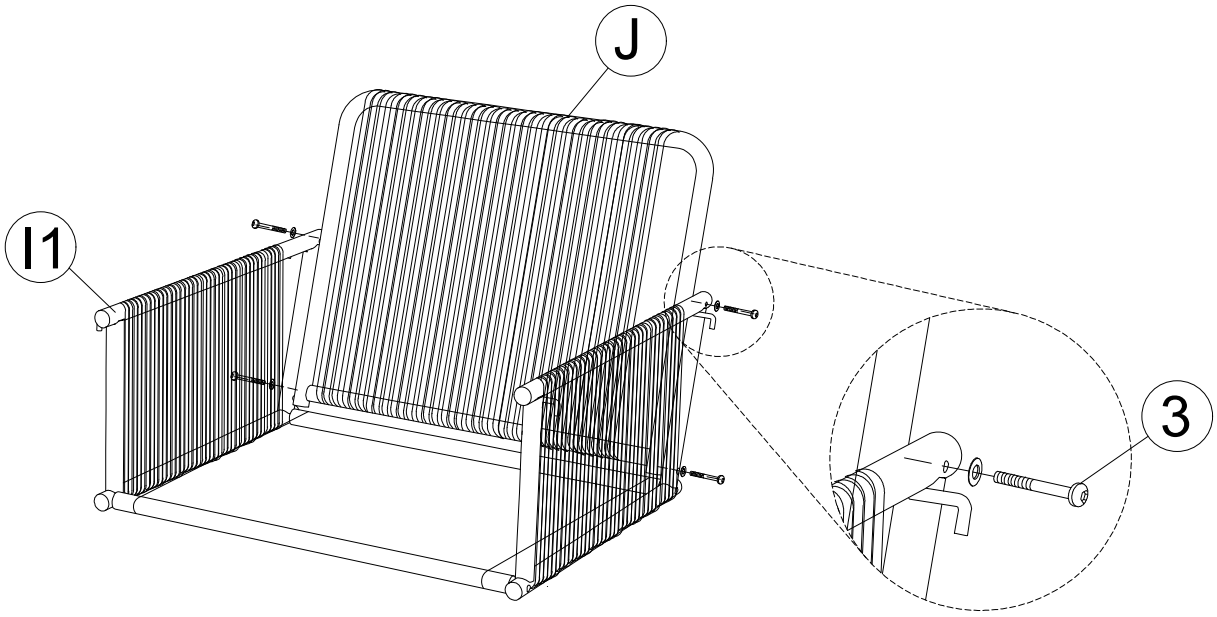



## Step 2

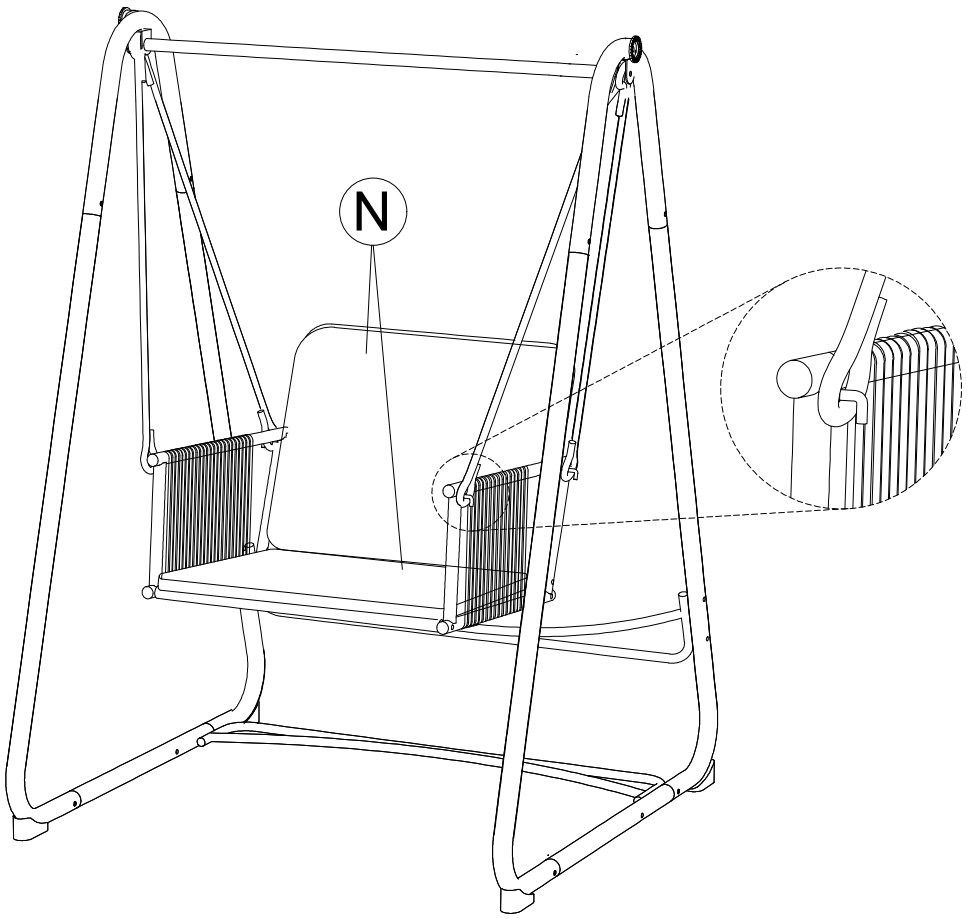


7

Y×2PCS




## Install the Ceiling bracket

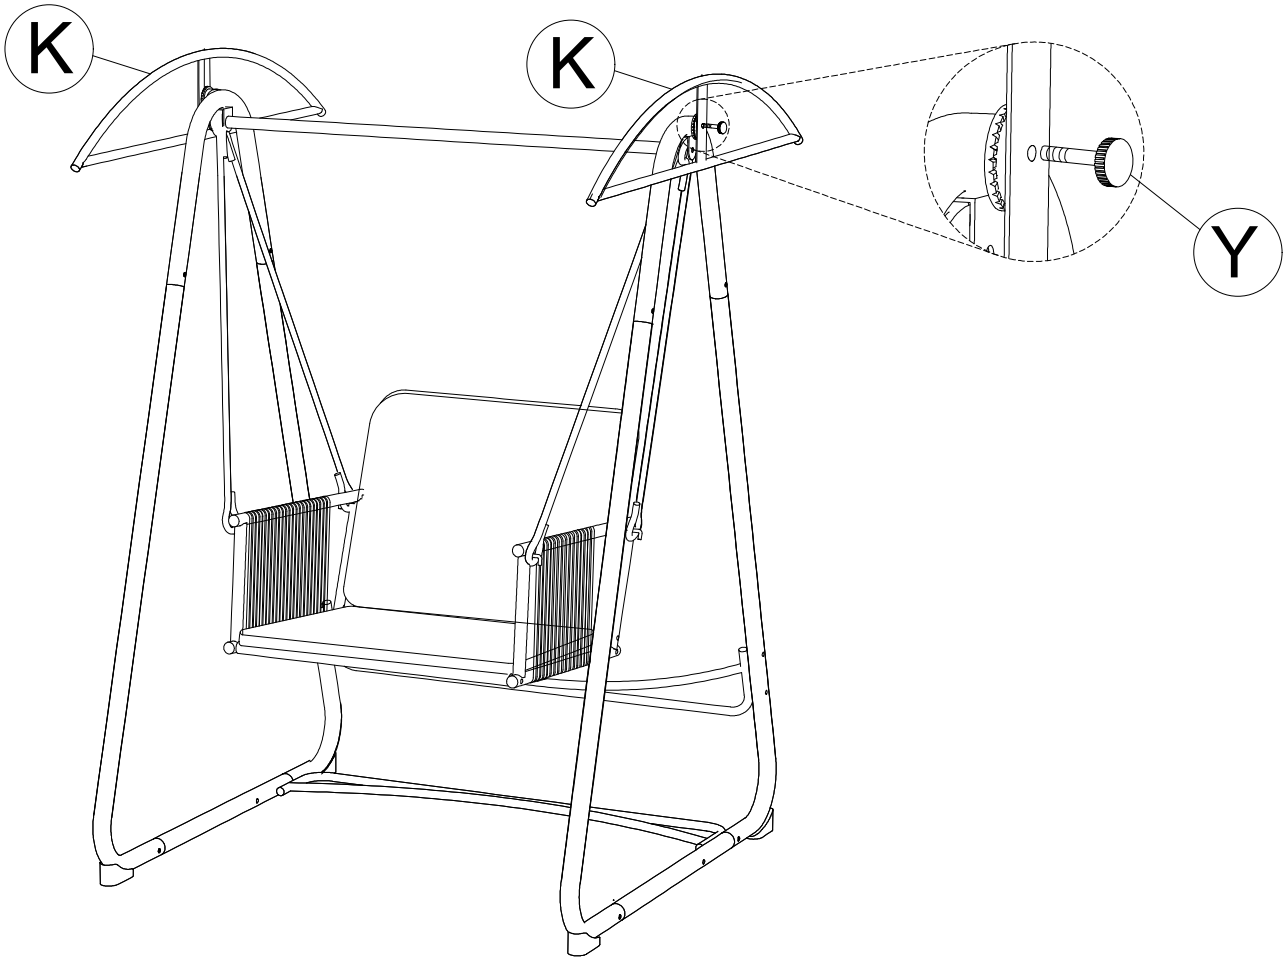

# 8

## Install the Ceiling cloth

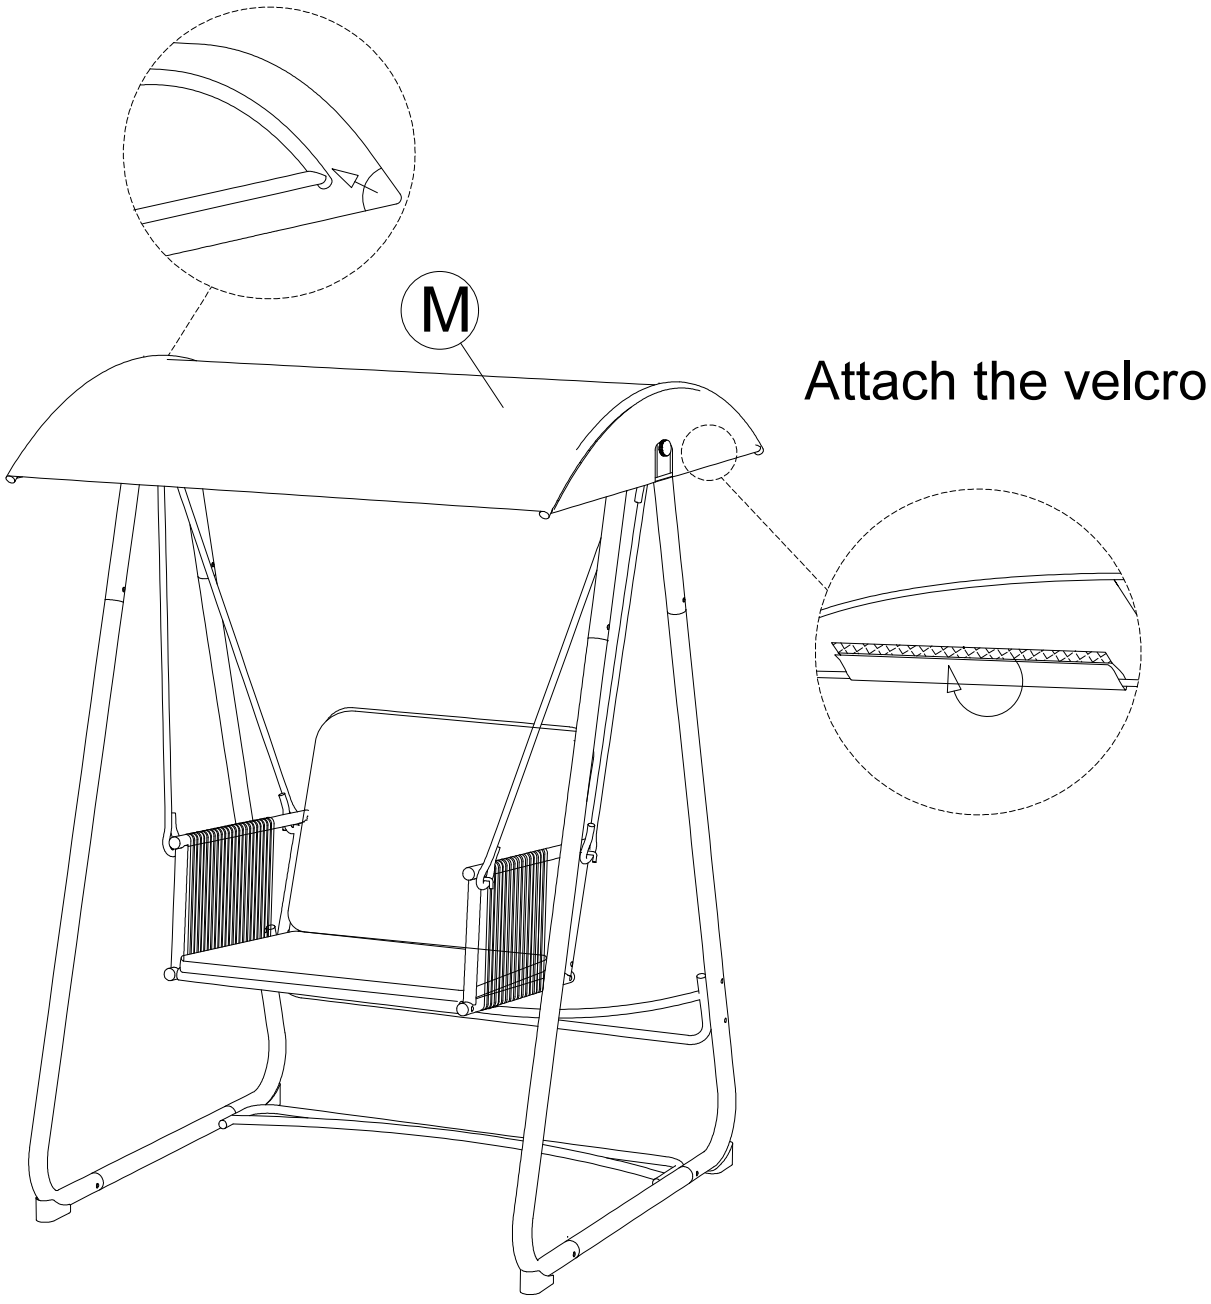


**ATTENTION**

To adjust the angle of the canopy,
please loosen the knobs on both sides,
then align the gears and tighten.