


INSTALLATION INSTRUCTIONS

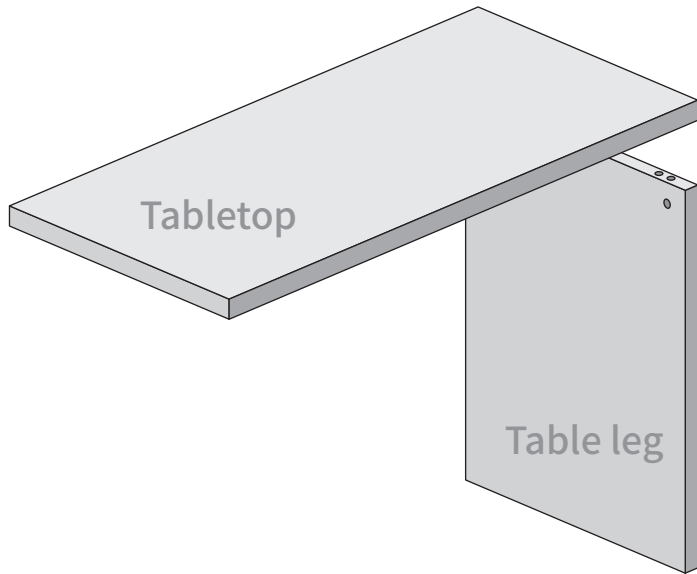


Cam screw




Cam lock



Wooden dowel




Self-tapping screws

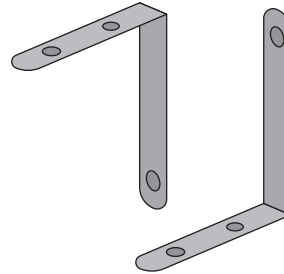

Right-angle connector


- 1** Flip tabletop upside-down to reveal screw holes. Fit cam screws and wooden dowels into the holes.

Cam screw
Wooden dowel

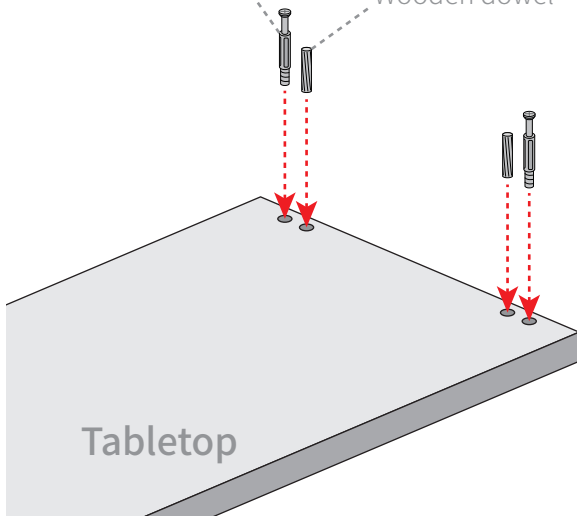

- 2** Align and insert table leg to screw holes. Fasten cam screws using cam locks on table leg.


Cam lock

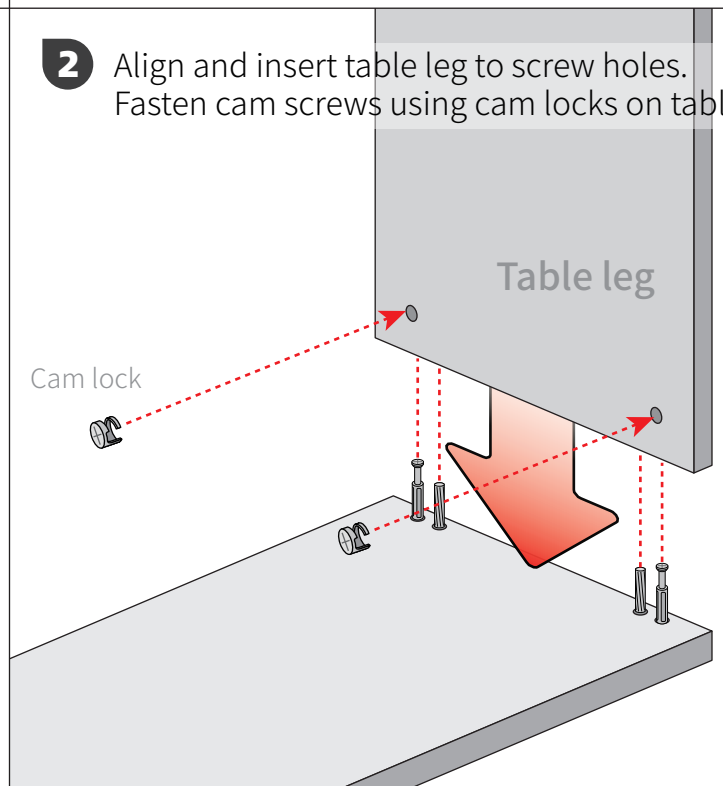

- 3** Attach the right-angle connector to the joint and secure it with self-tapping screws.

Self-tapping screws

Right-angle connector

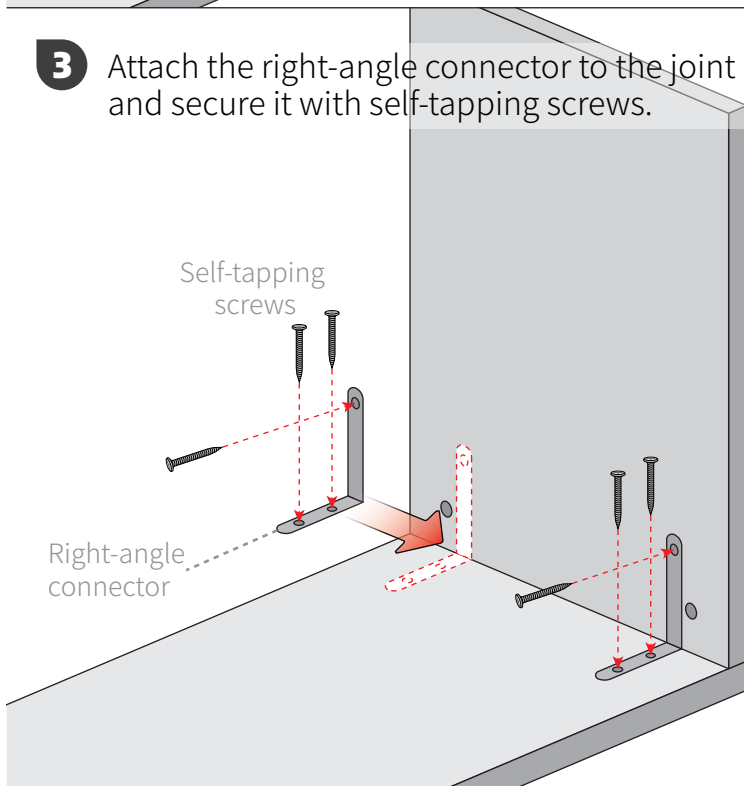

- ✓** Installation completed

