

DA0299

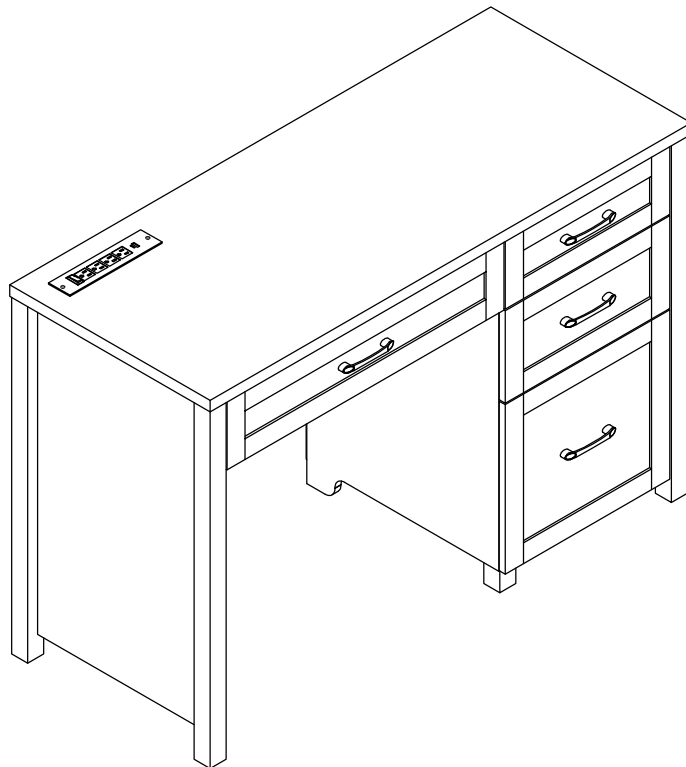


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

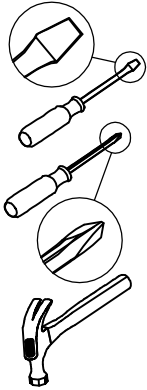

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

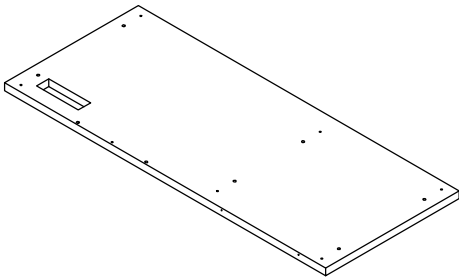


①
DESK TOP

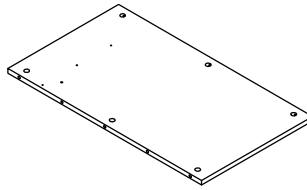


②
LOWER LEFT SIDE PANEL

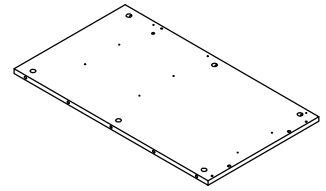


③
LOWER RIGHT SIDE PANEL

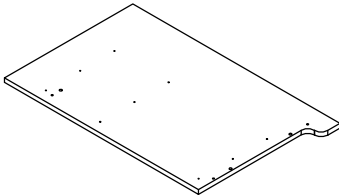


④
PARTITION PANEL

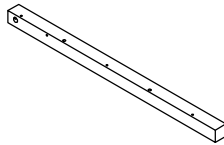


⑤
LEG

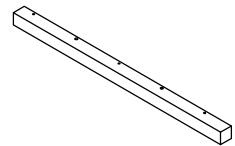


⑥
LEG

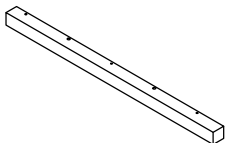

⑦
LEG

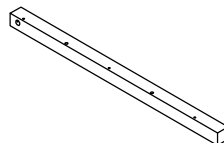


⑧
LEG



⑨
LEG


Board Identification

Not actual size

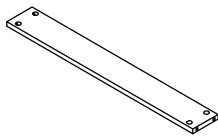


⑩

FRONT SLAT
Qty:2

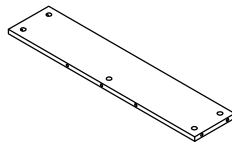


⑪

BACK SLAT




⑫

FRONT SLAT

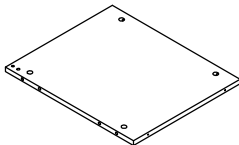


⑬

BOTTOM

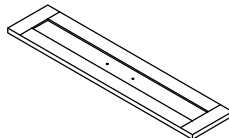


⑭

DRAWER FRONT PANEL




⑮

DRAWER FRONT PANEL




⑯

DRAWER FRONT PANEL

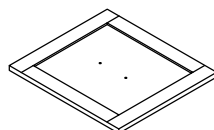

⑰

DRAWER FRONT PANEL




⑱

DRAWER LEFT SIDE PANEL
Qty:2


Board Identification

Not actual size




19

DRAWER RIGHT SIDE PANEL
Qty:2




20

DRAWER LEFT SIDE PANEL




21

DRAWER RIGHT SIDE PANEL




22

DRAWER LEFT SIDE PANEL




23

DRAWER RIGHT SIDE PANEL

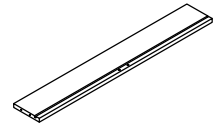


24

DRAWER BACK PANEL




25

DRAWER BACK PANEL



26

DRAWER BACK PANEL




27

DRAWER BACK PANEL


Board Identification

Not actual size




28

DRAWER BOTTOM SLAT

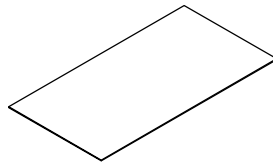


29

DRAWER BOTTOM PANEL

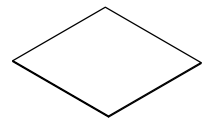


30

DRAWER BOTTOM PANEL
Qty:2



31

DRAWER BOTTOM PANEL

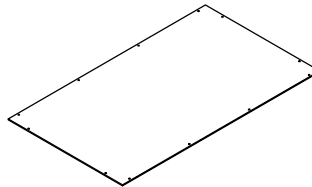


32


BACK PANEL

Board Identification


Not actual size

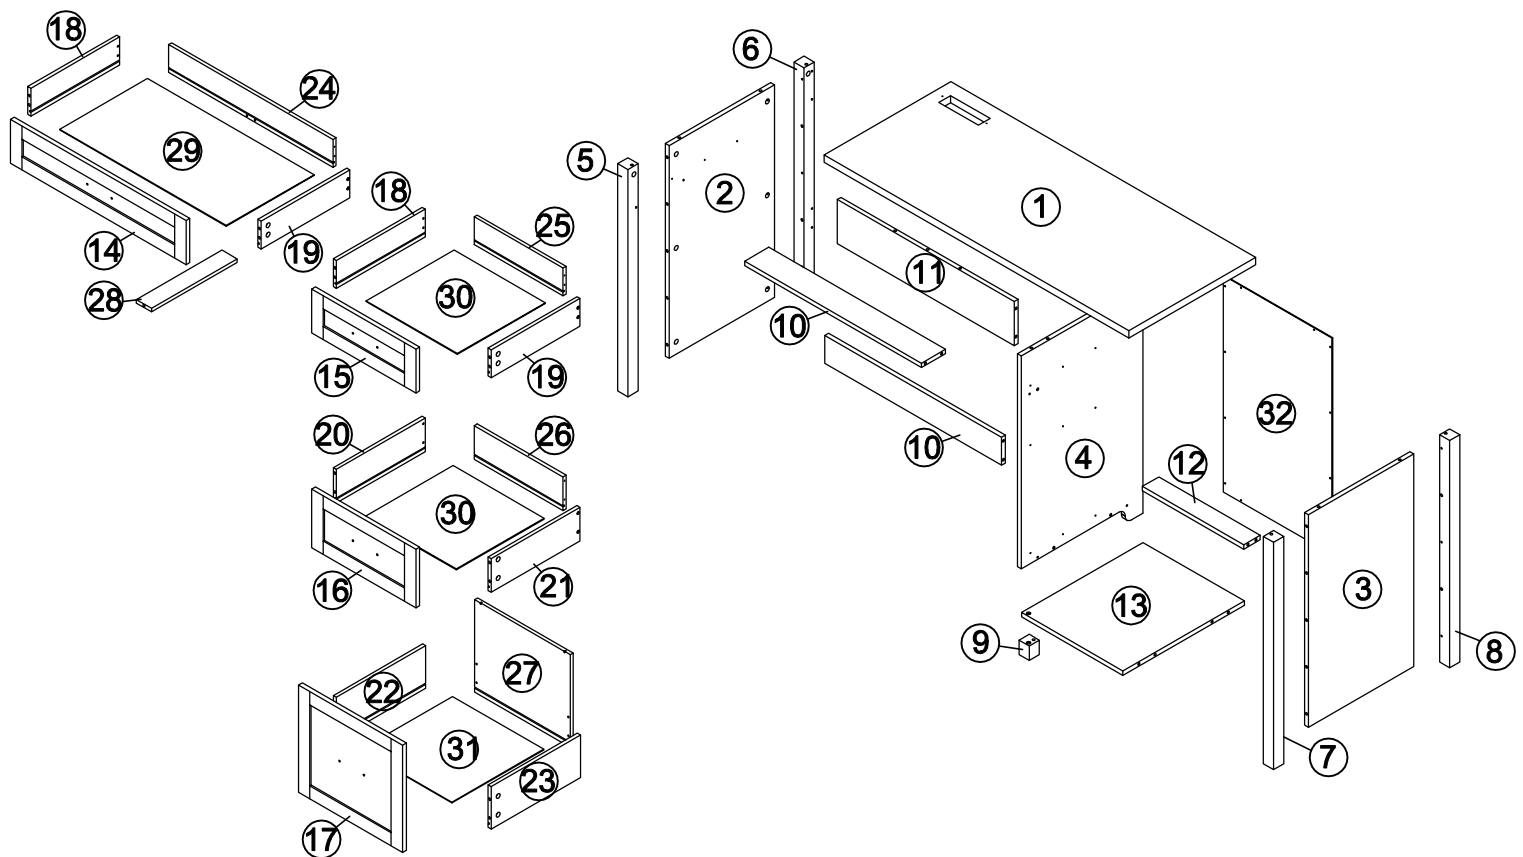


Part List

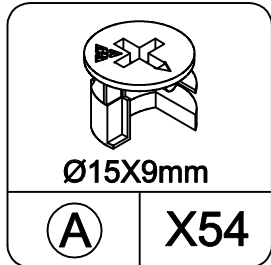


CAM LOCK
spare: 3

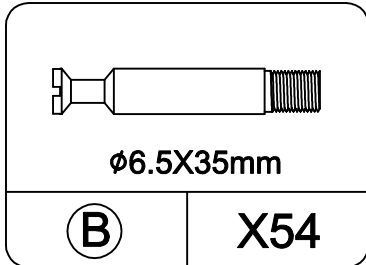


CAM BOLT
spare: 3

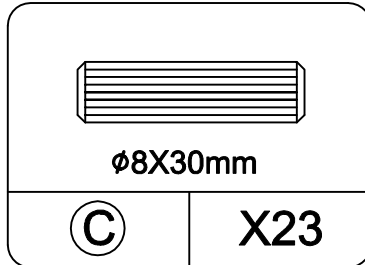


WOOD DOWEL
spare: 2

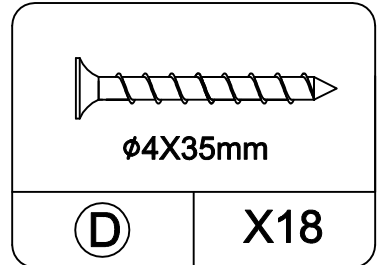


SCREW
spare: 2

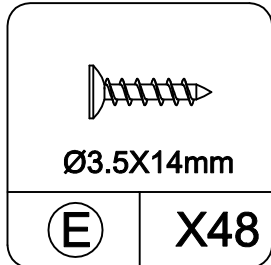


SCREW
spare: 5

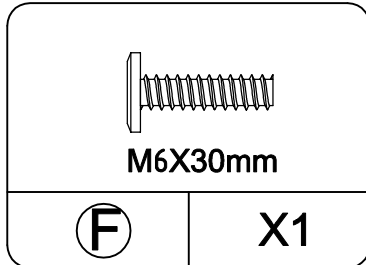


SCREW
spare: 1

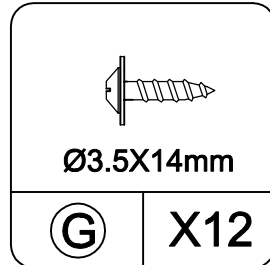


SCREW
spare: 2

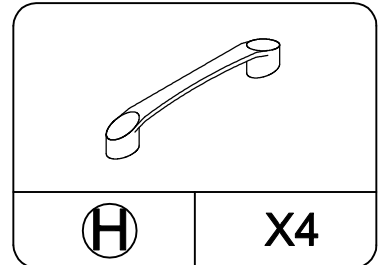


HANDLE

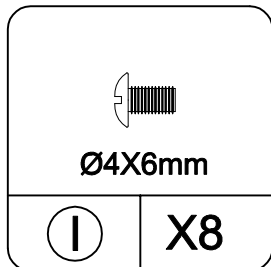


SCREW
spare: 1

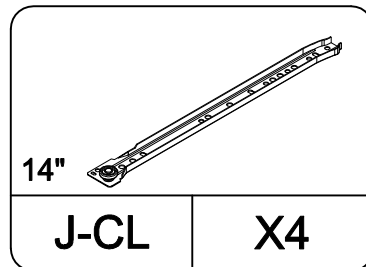


LEFT CABINET MEMBER

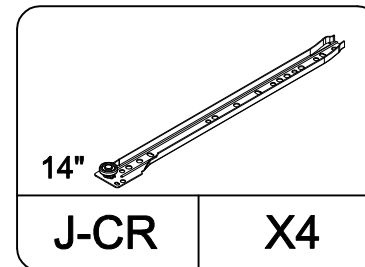


RIGHT CABINET MEMBER

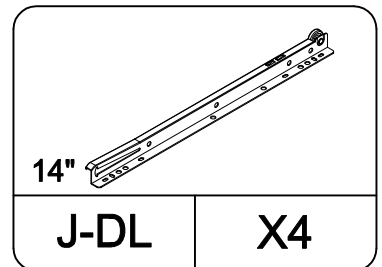


LEFT DRAWER RUNNER

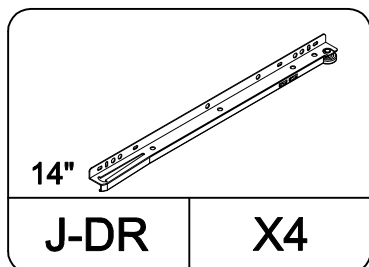


RIGHT DRAWER RUNNER

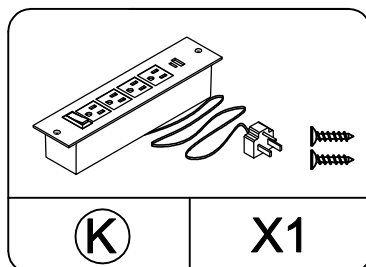

PLUG BOARD

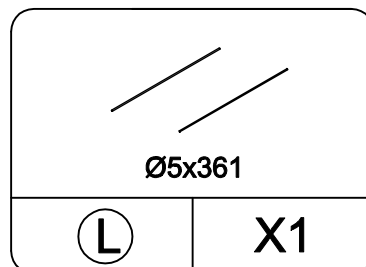

SCREW

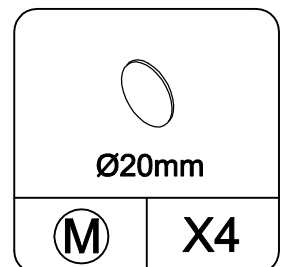


SCAM LOCK COVER
spare: 1













Part List

Cam Lock Fastening System

Insert the cam bolt into
the hole first, then insert
the cam lock and lock it.

















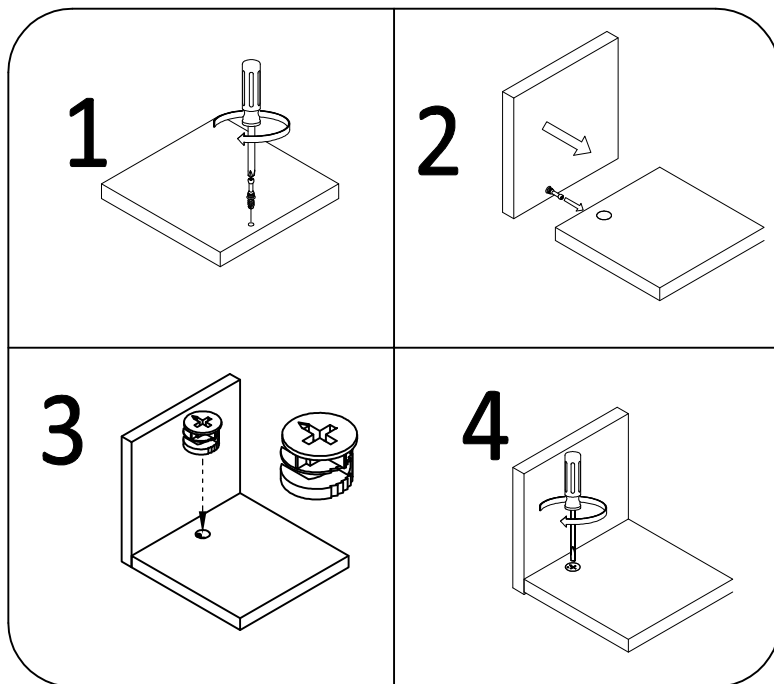


STEP1

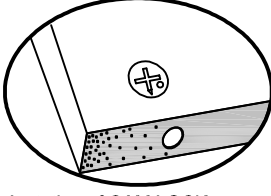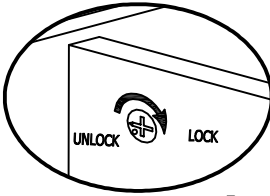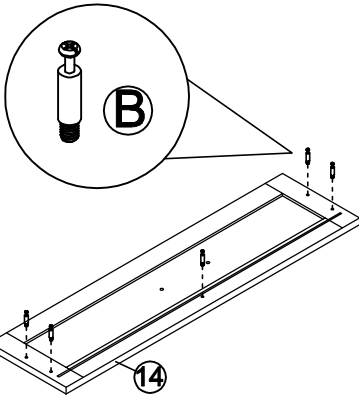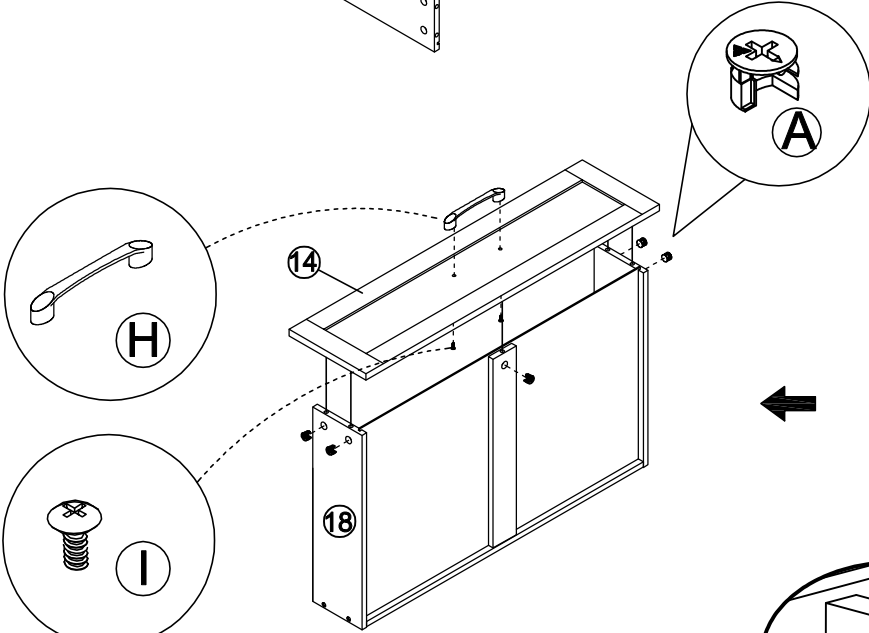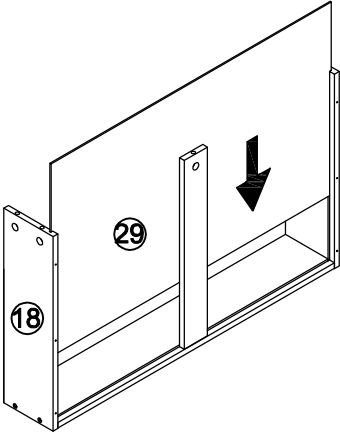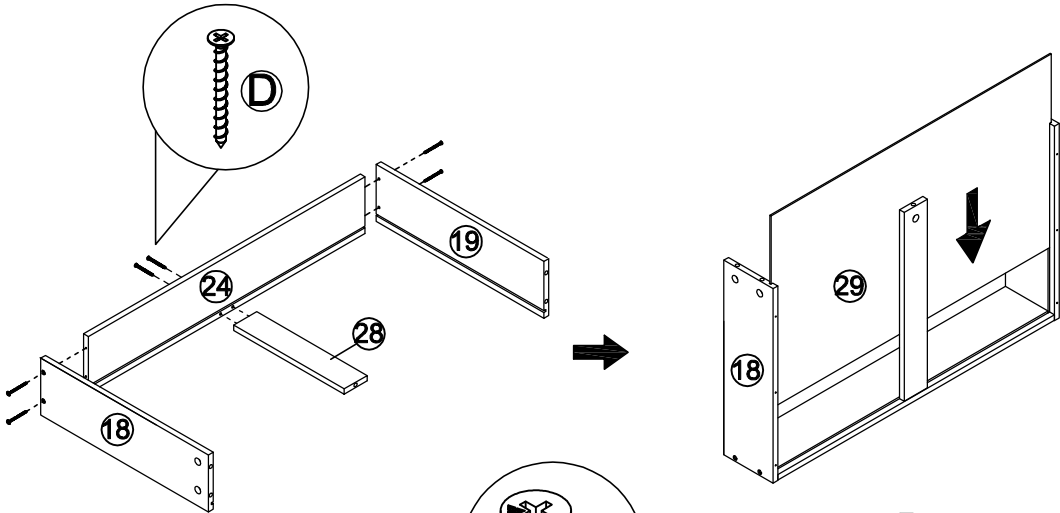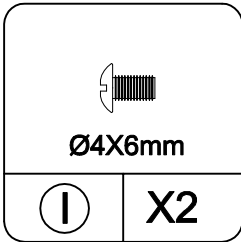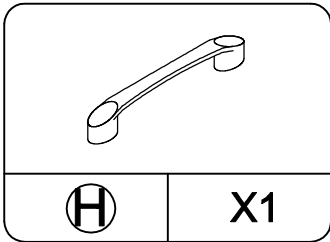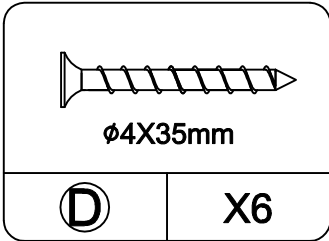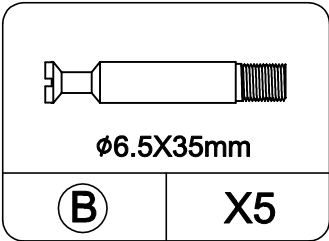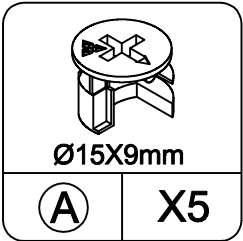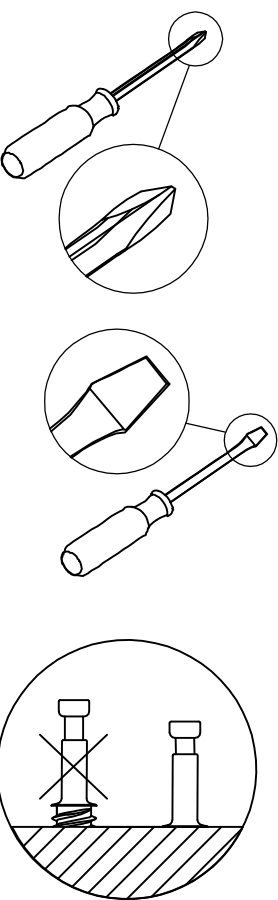









Proper orientation of CAM LOCK

STEP2

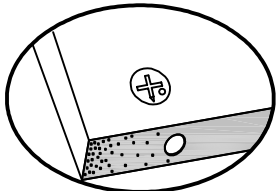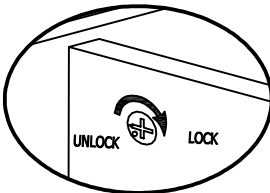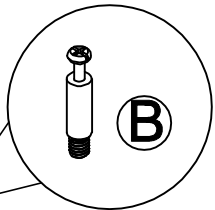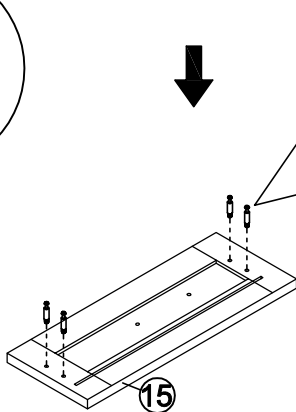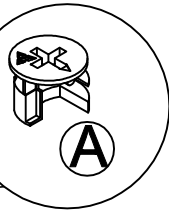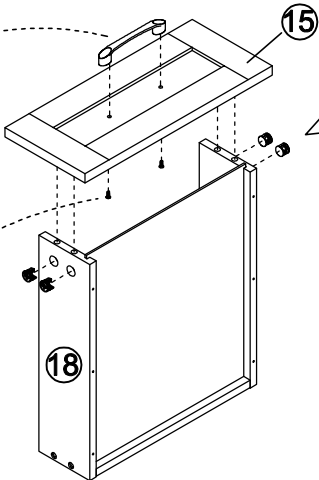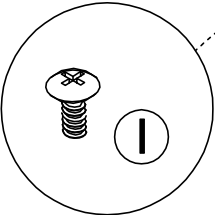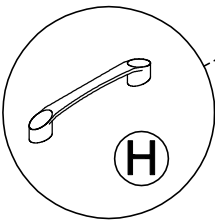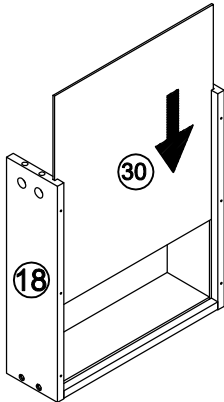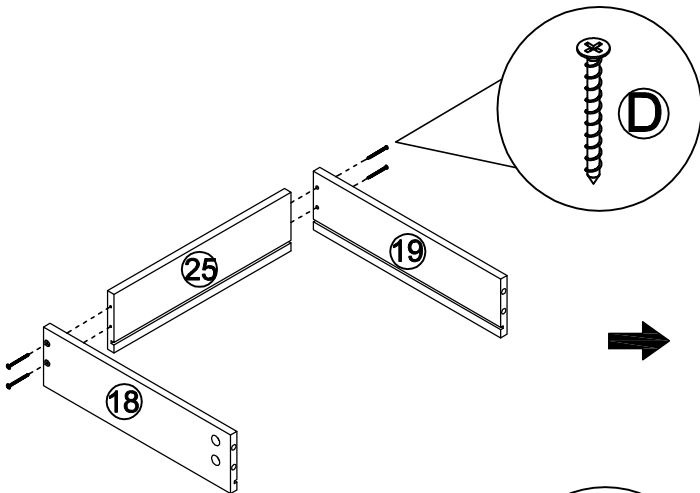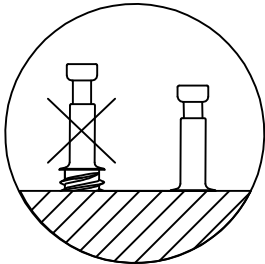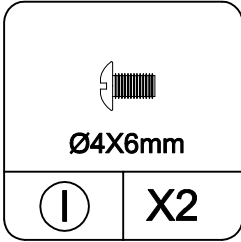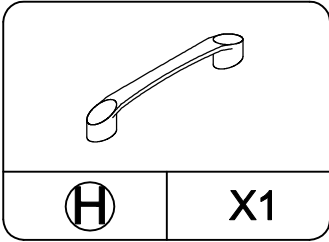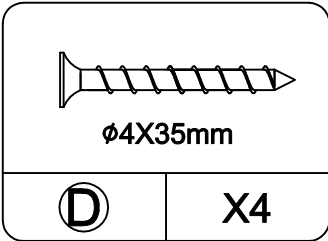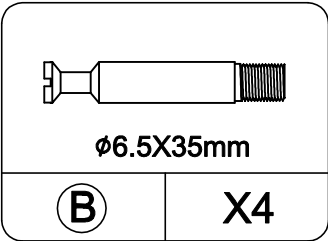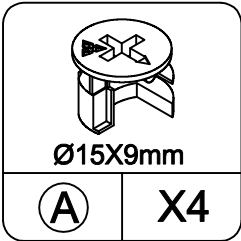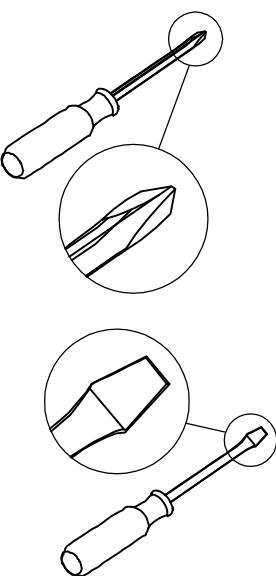


Proper orientation of CAM LOCK


STEP4

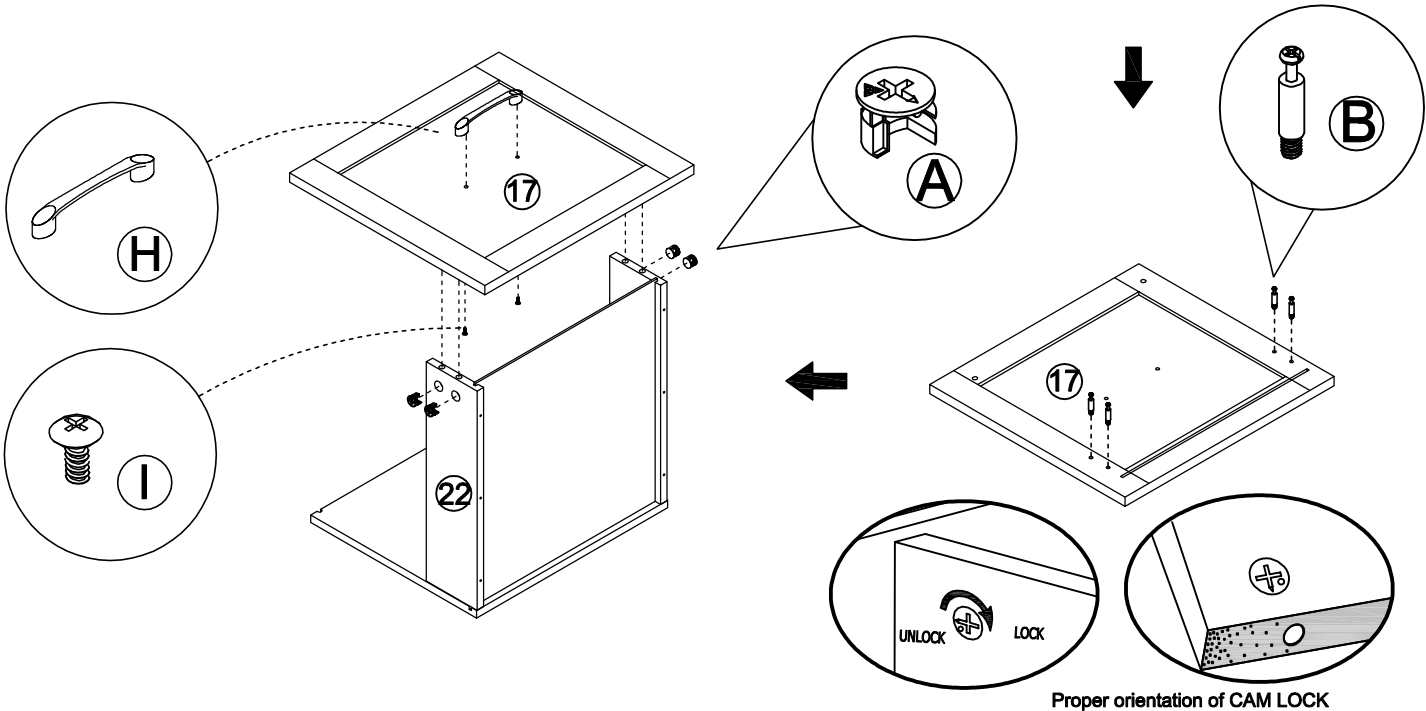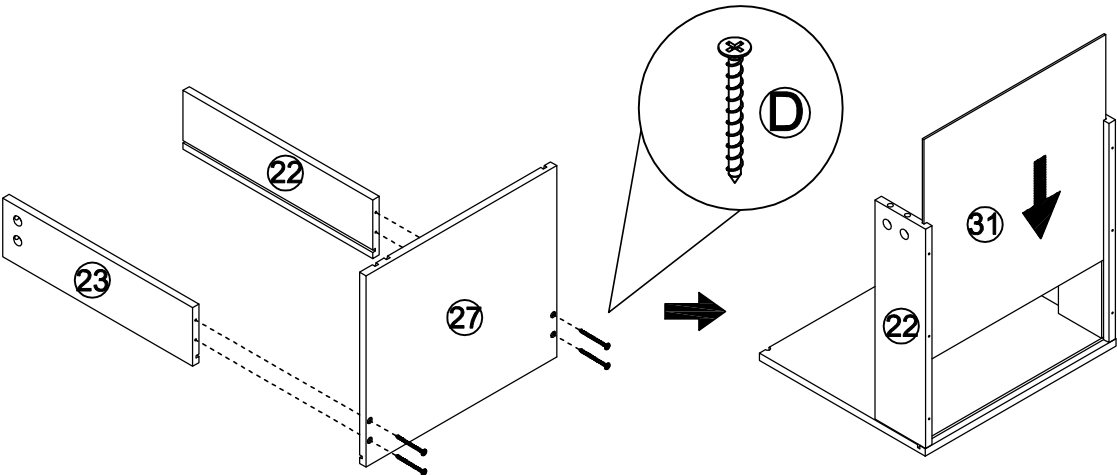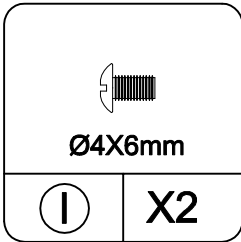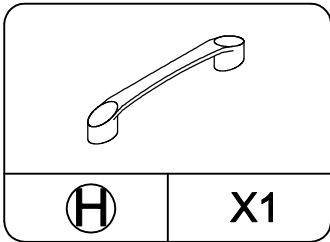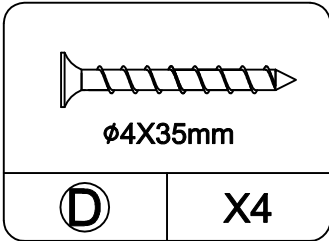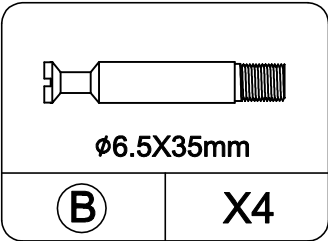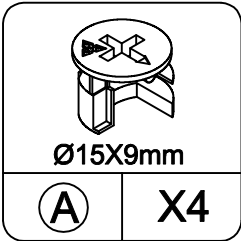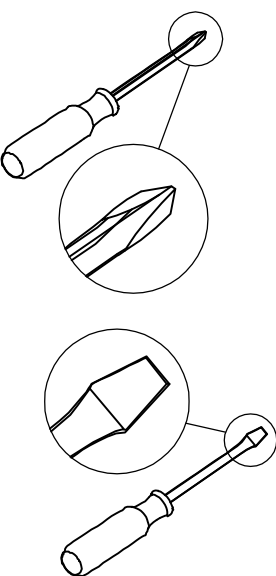



Proper orientation of CAM LOCK


STEP5

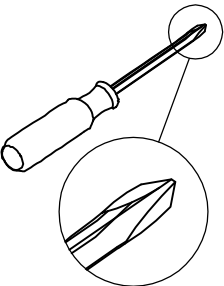


 Ø3.5X14mm	
(E)	X12

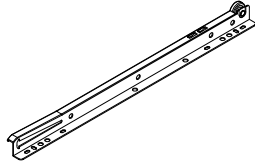
 14" J-DL	
	X2

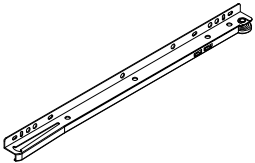
 14" J-DR	
	X2

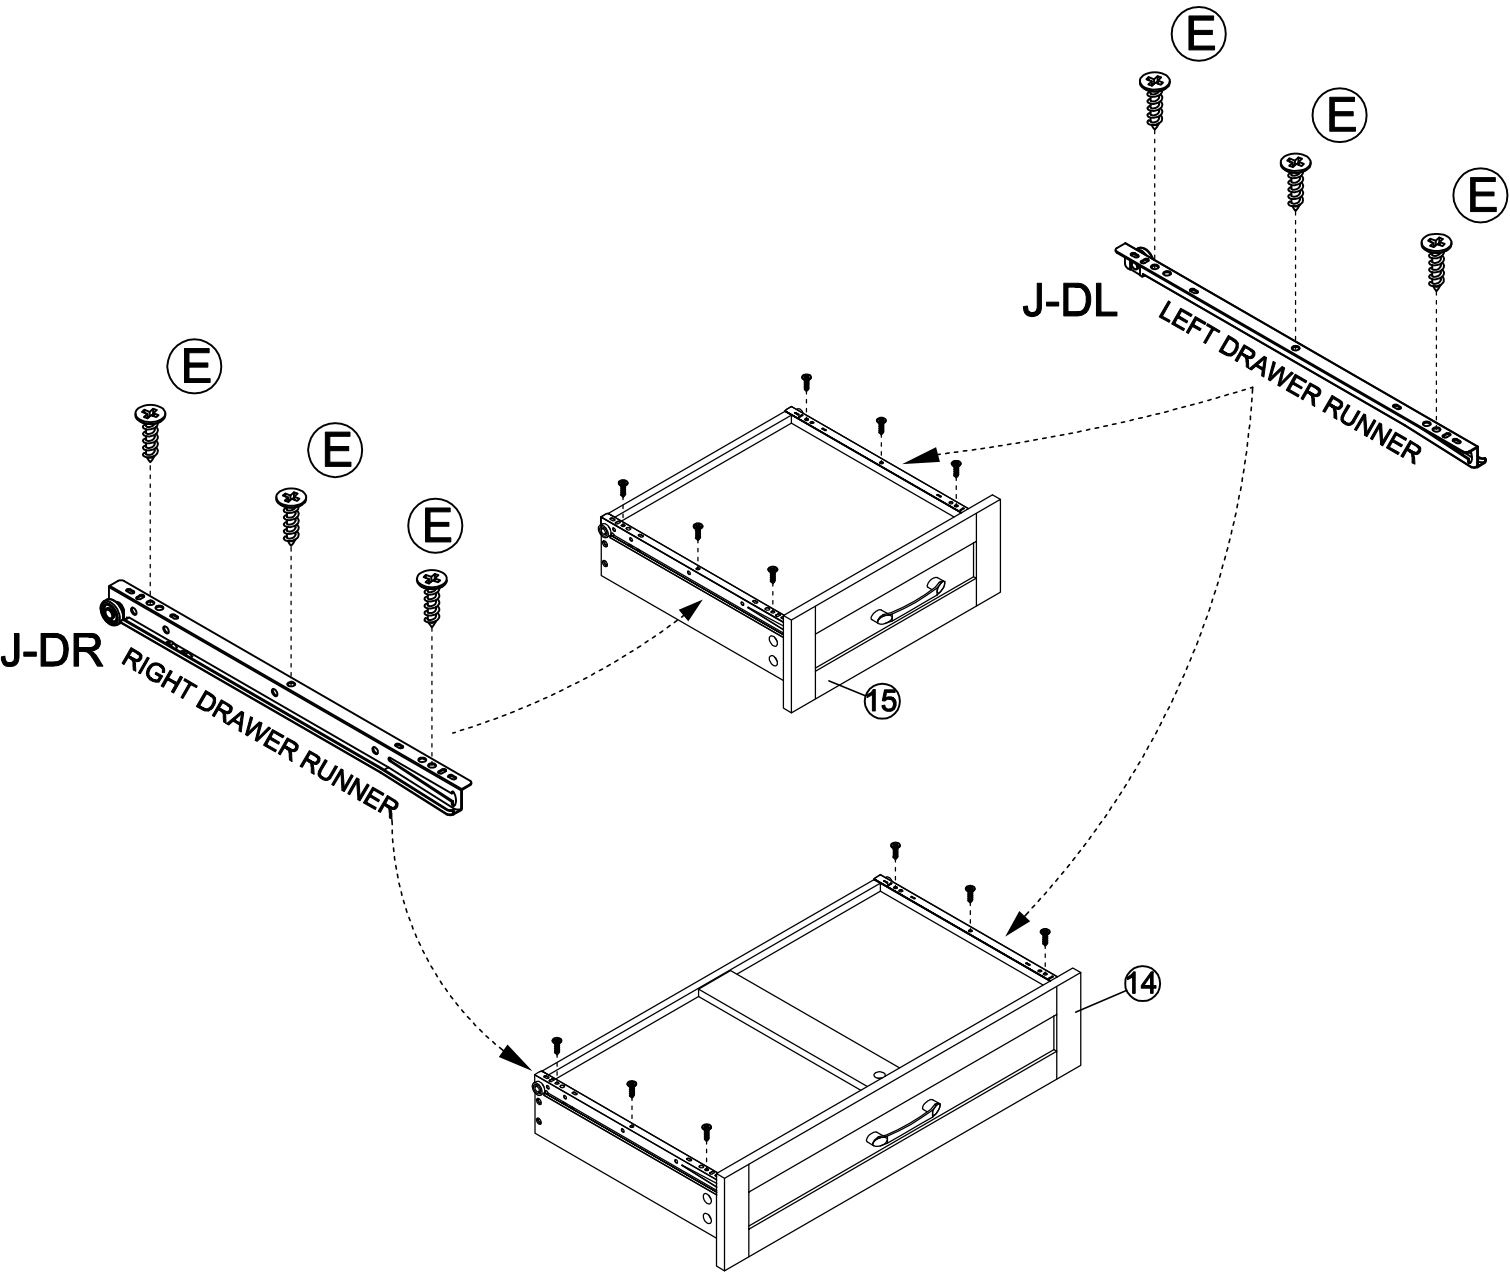



STEP6

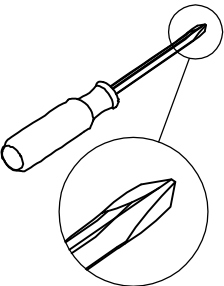











 Ø3.5X14mm	
(E)	X12

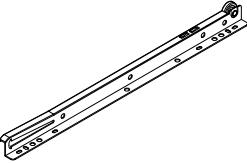 14"	
J-DL	X2










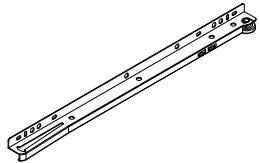
 14"	
J-DR	X2

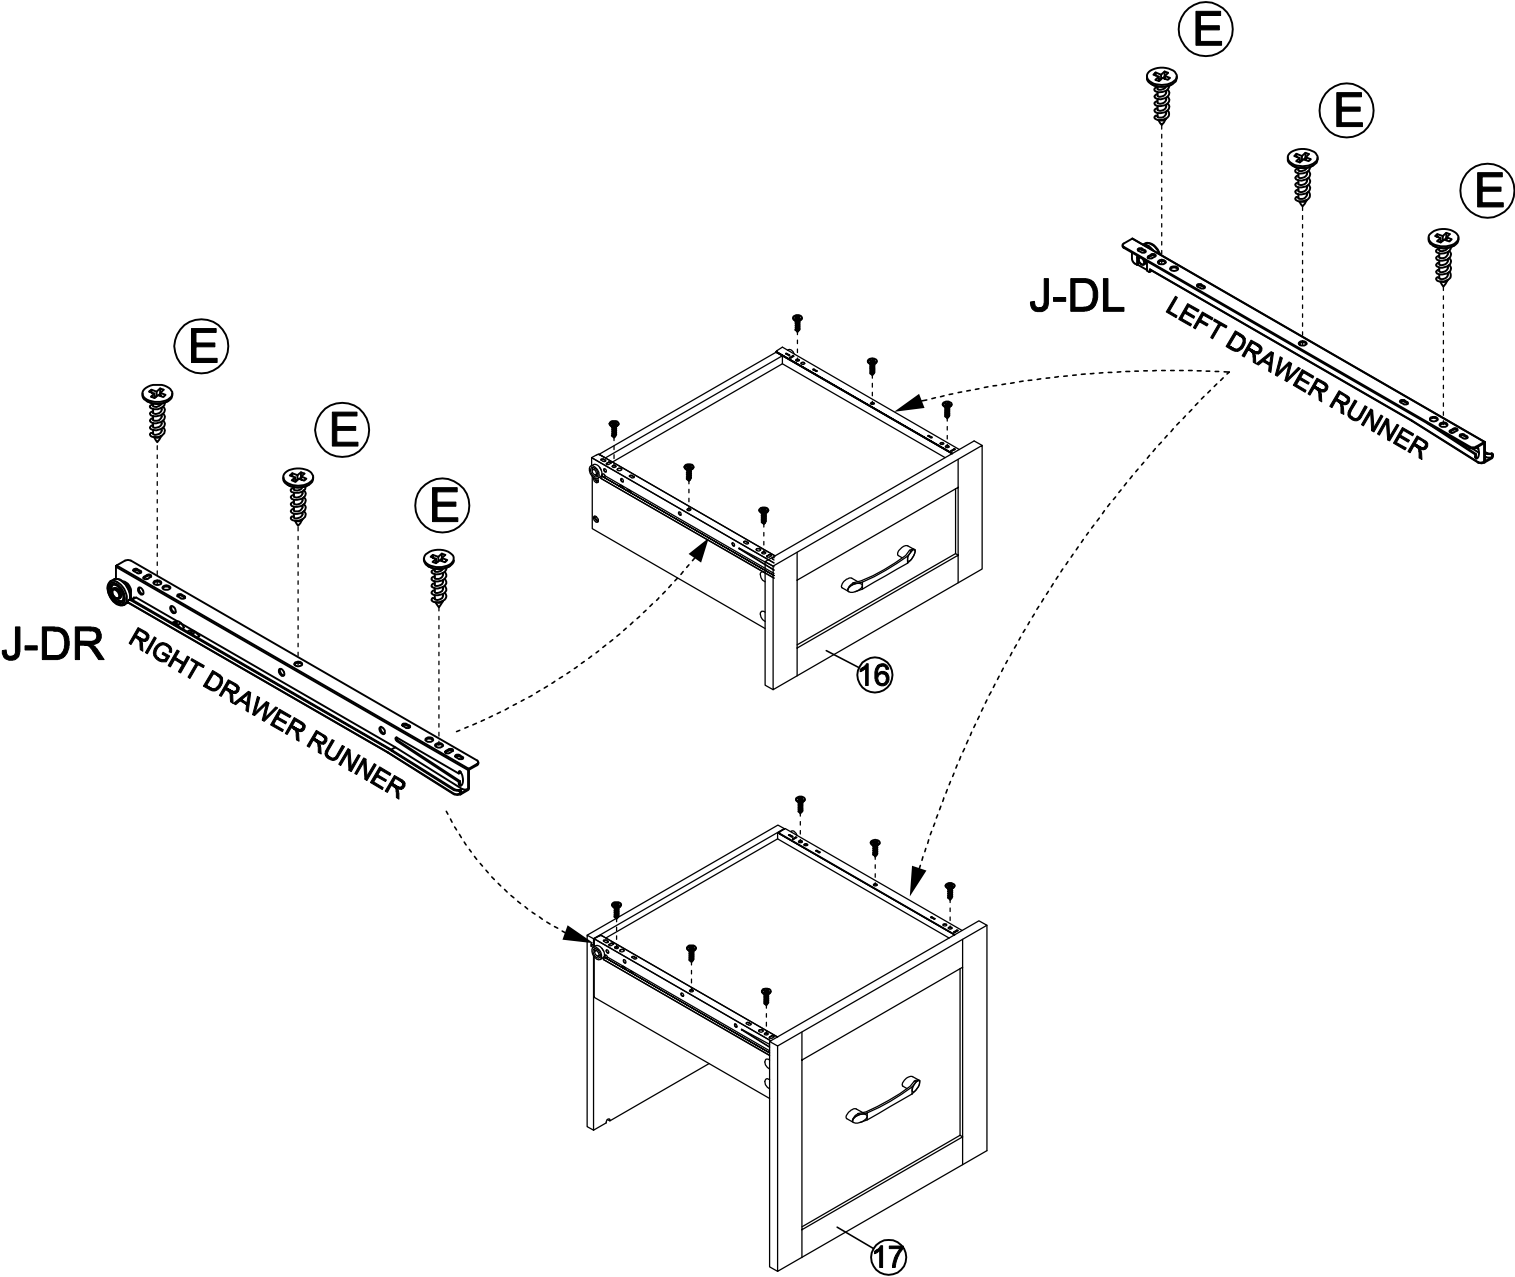

STEP7

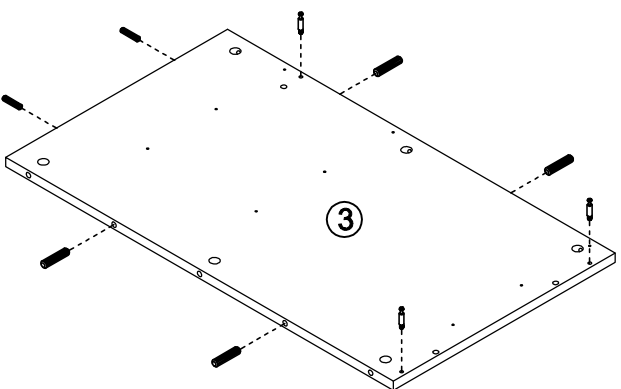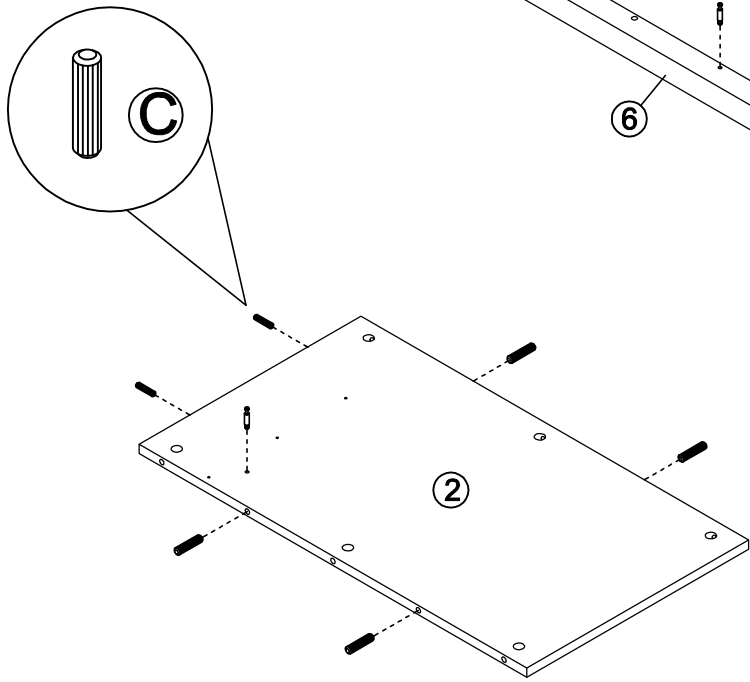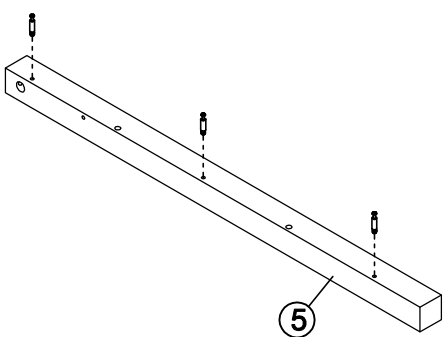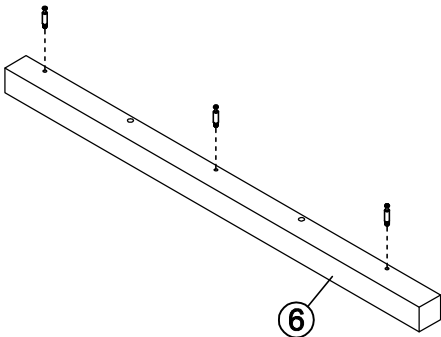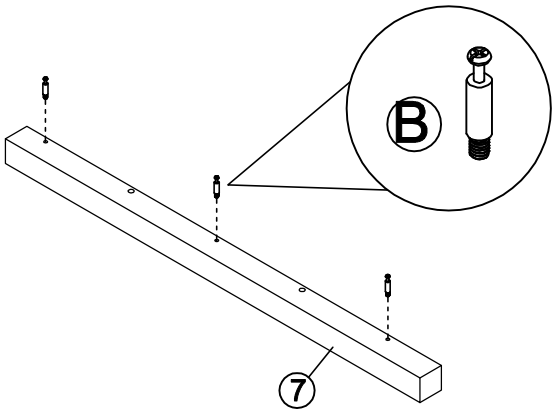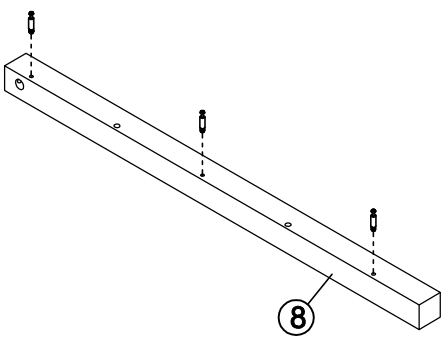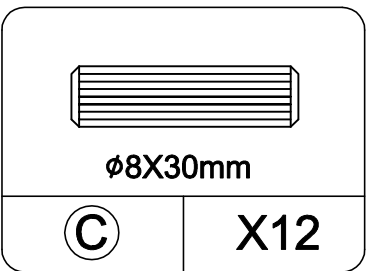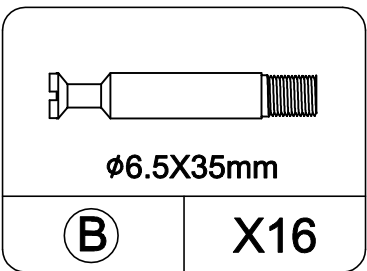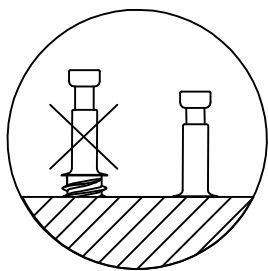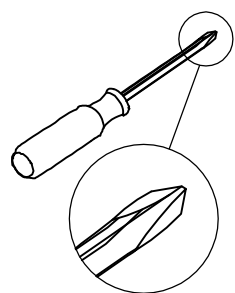



STEP8

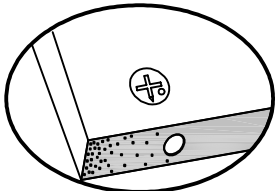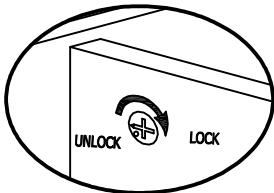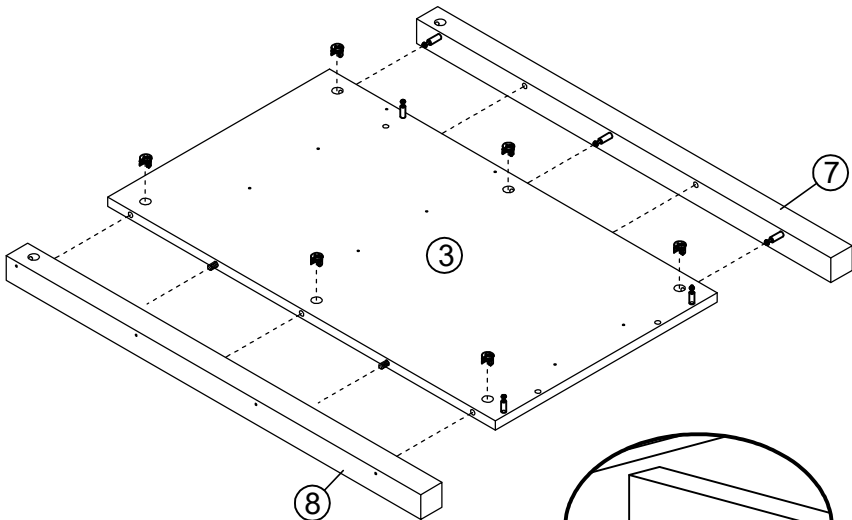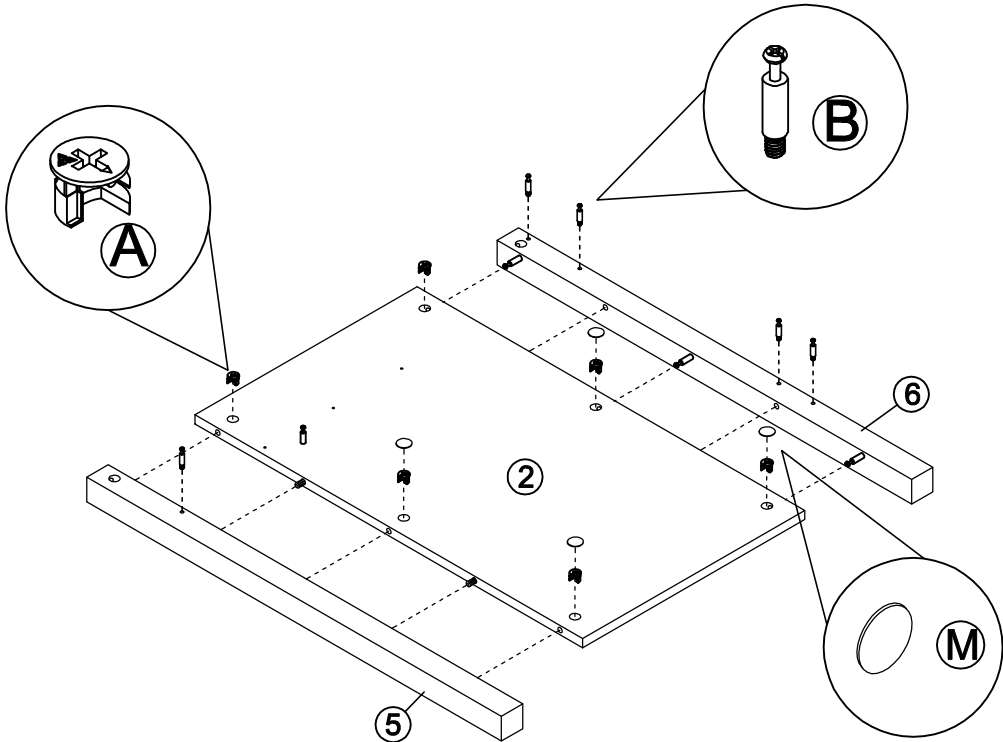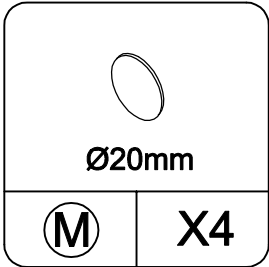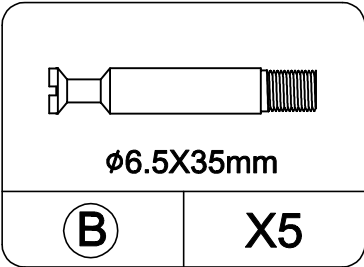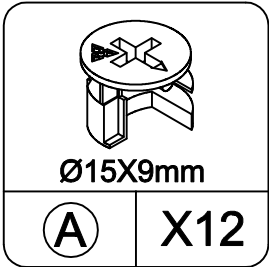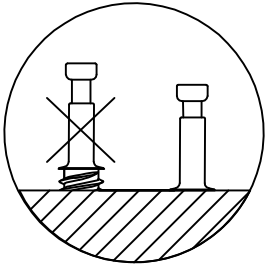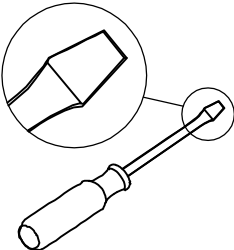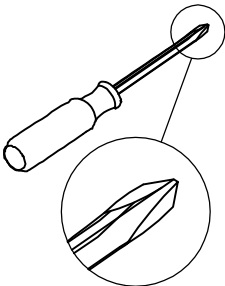



Proper orientation of CAM LOCK





STEP9

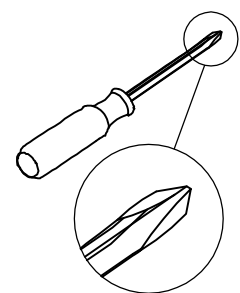



 Ø3.5X14mm	
(E)	X12

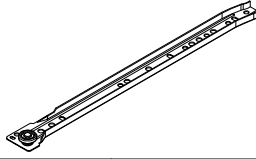 14"	
J-CL	X1

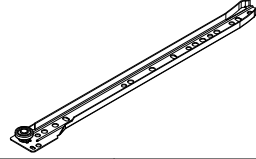 14"	
J-CR	X3

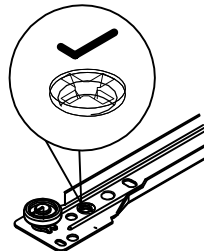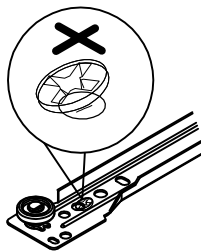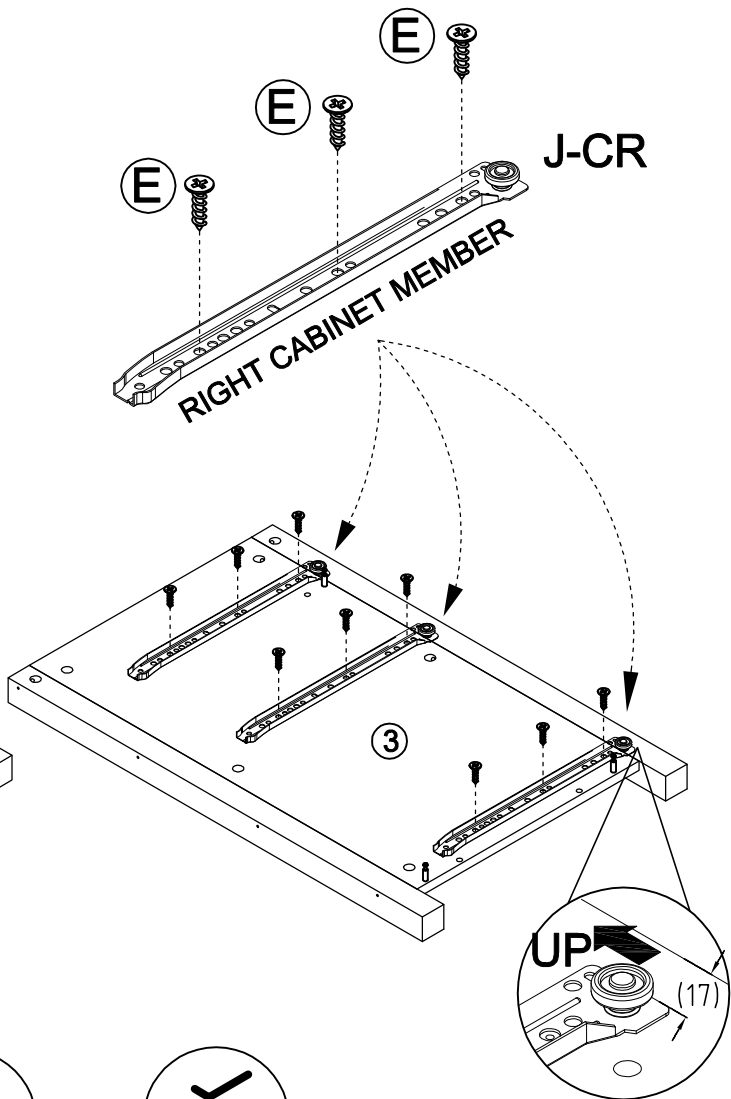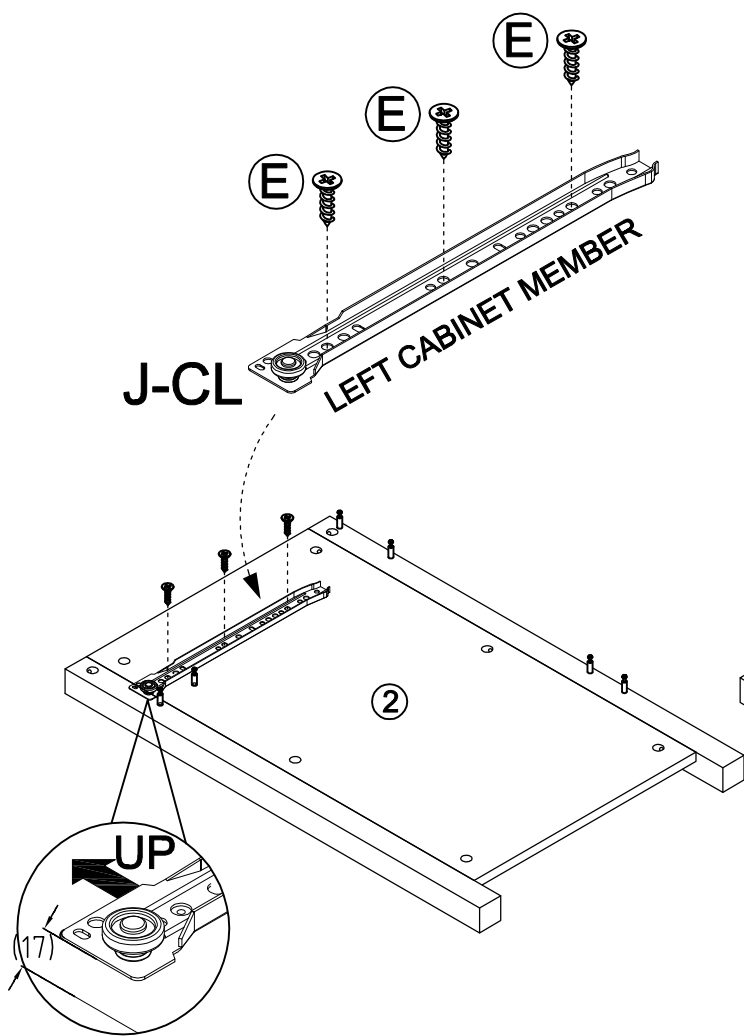


Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

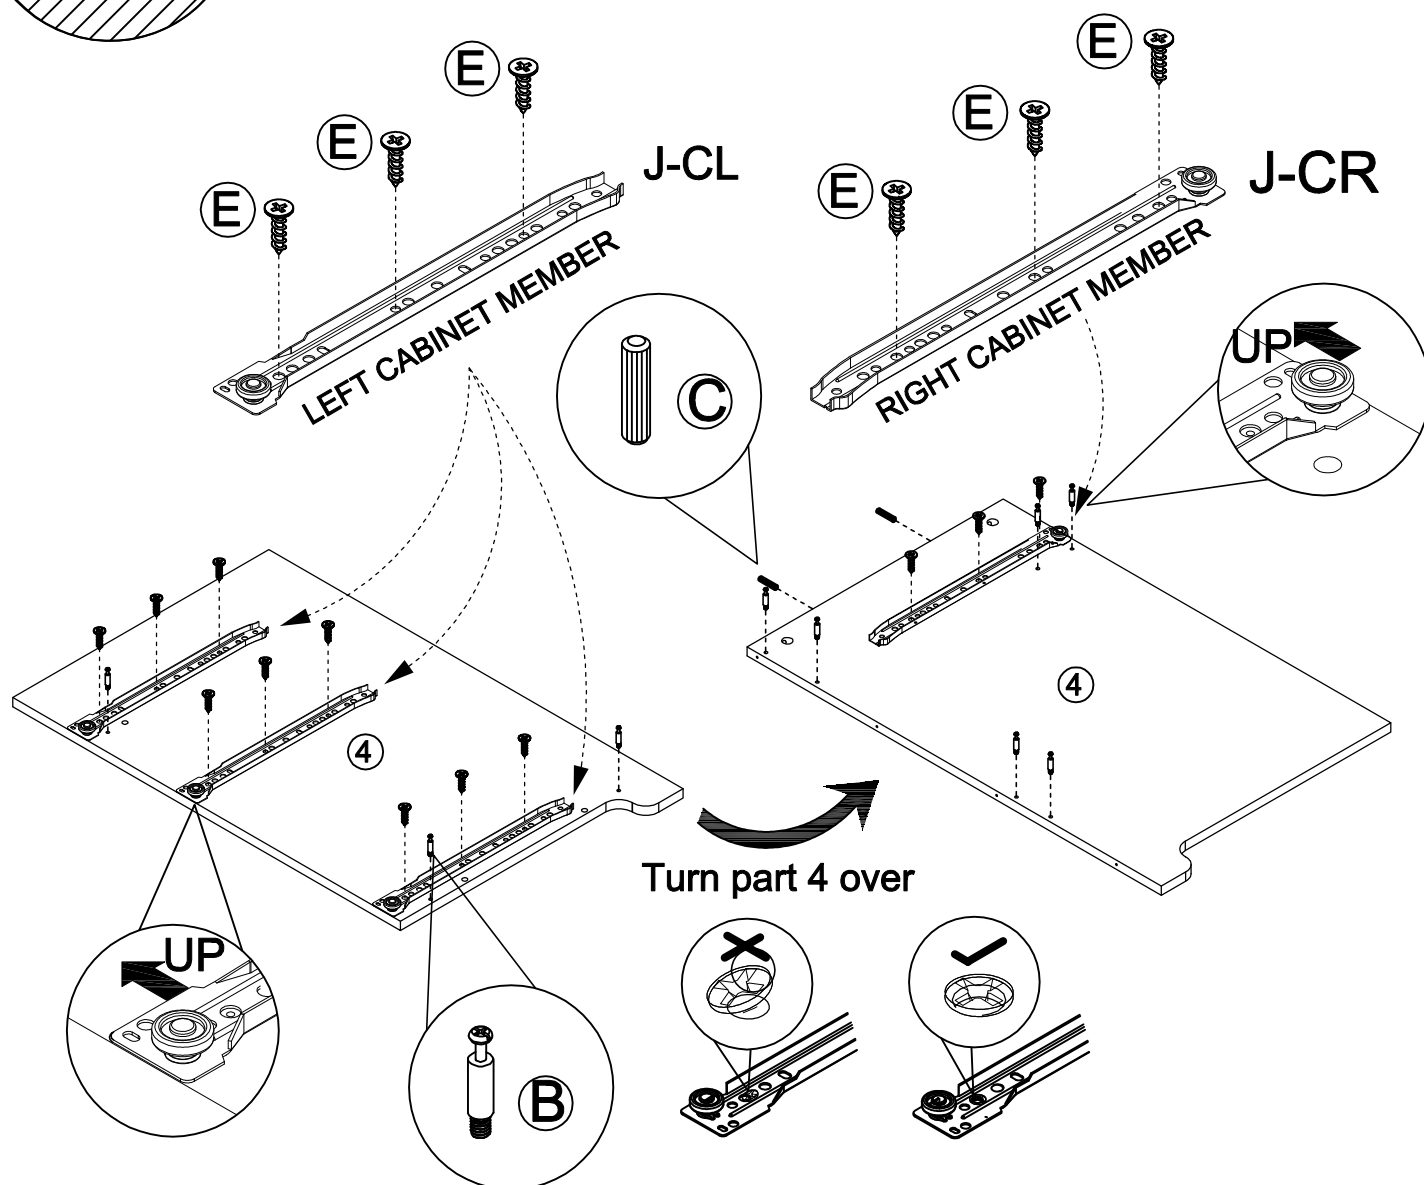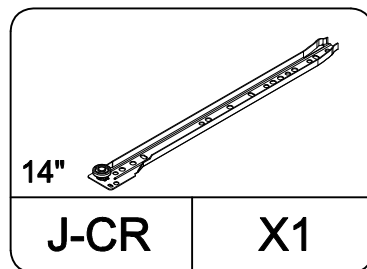

10/26

STEP11

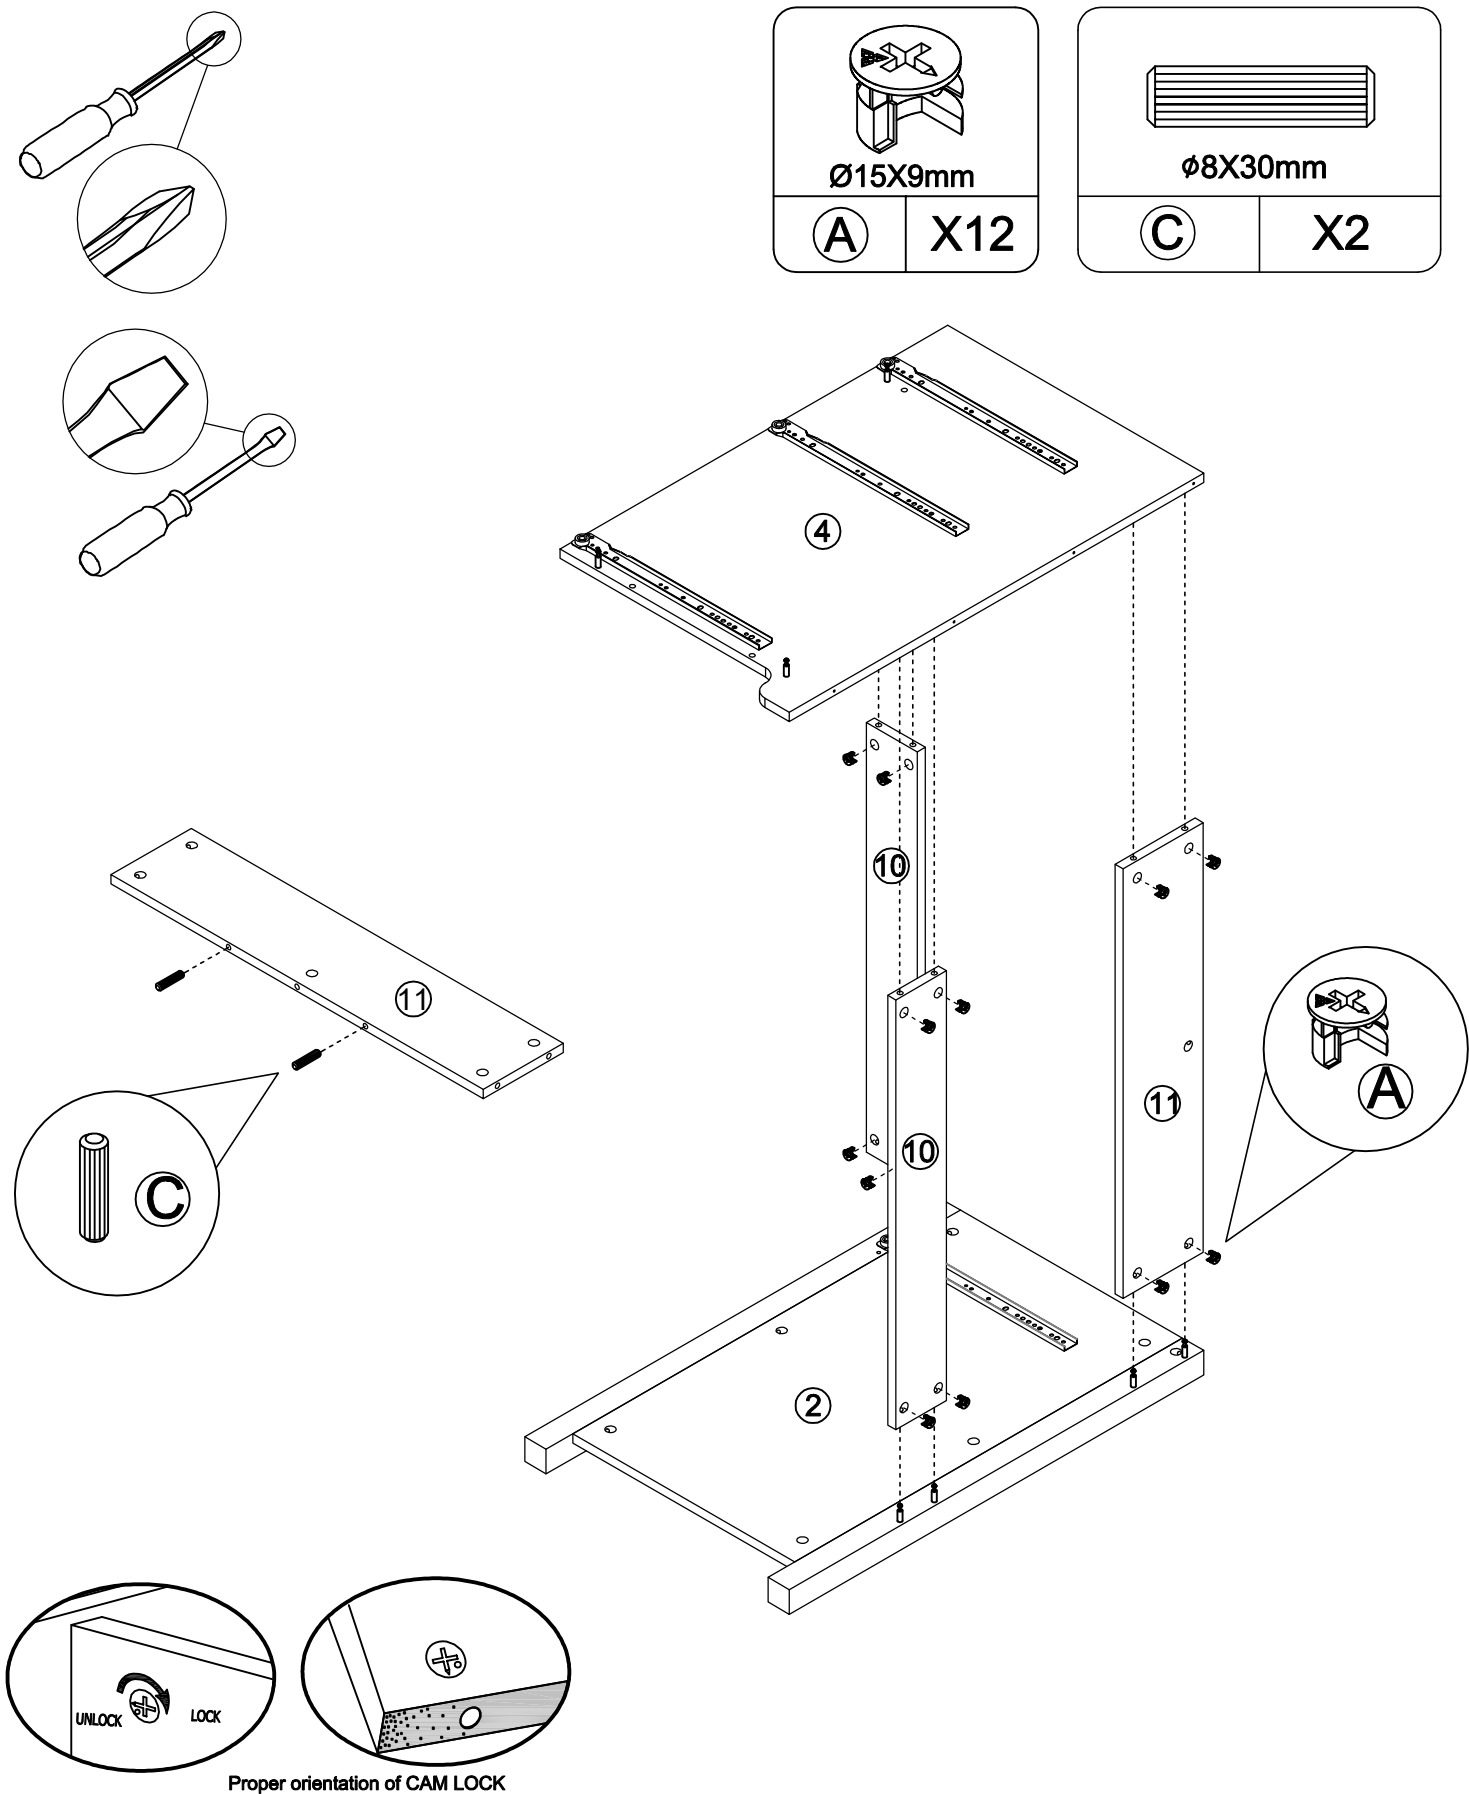


STEP12




Ø8X30mm

C	X7
---	----







M6X30mm

F	X1
---	----

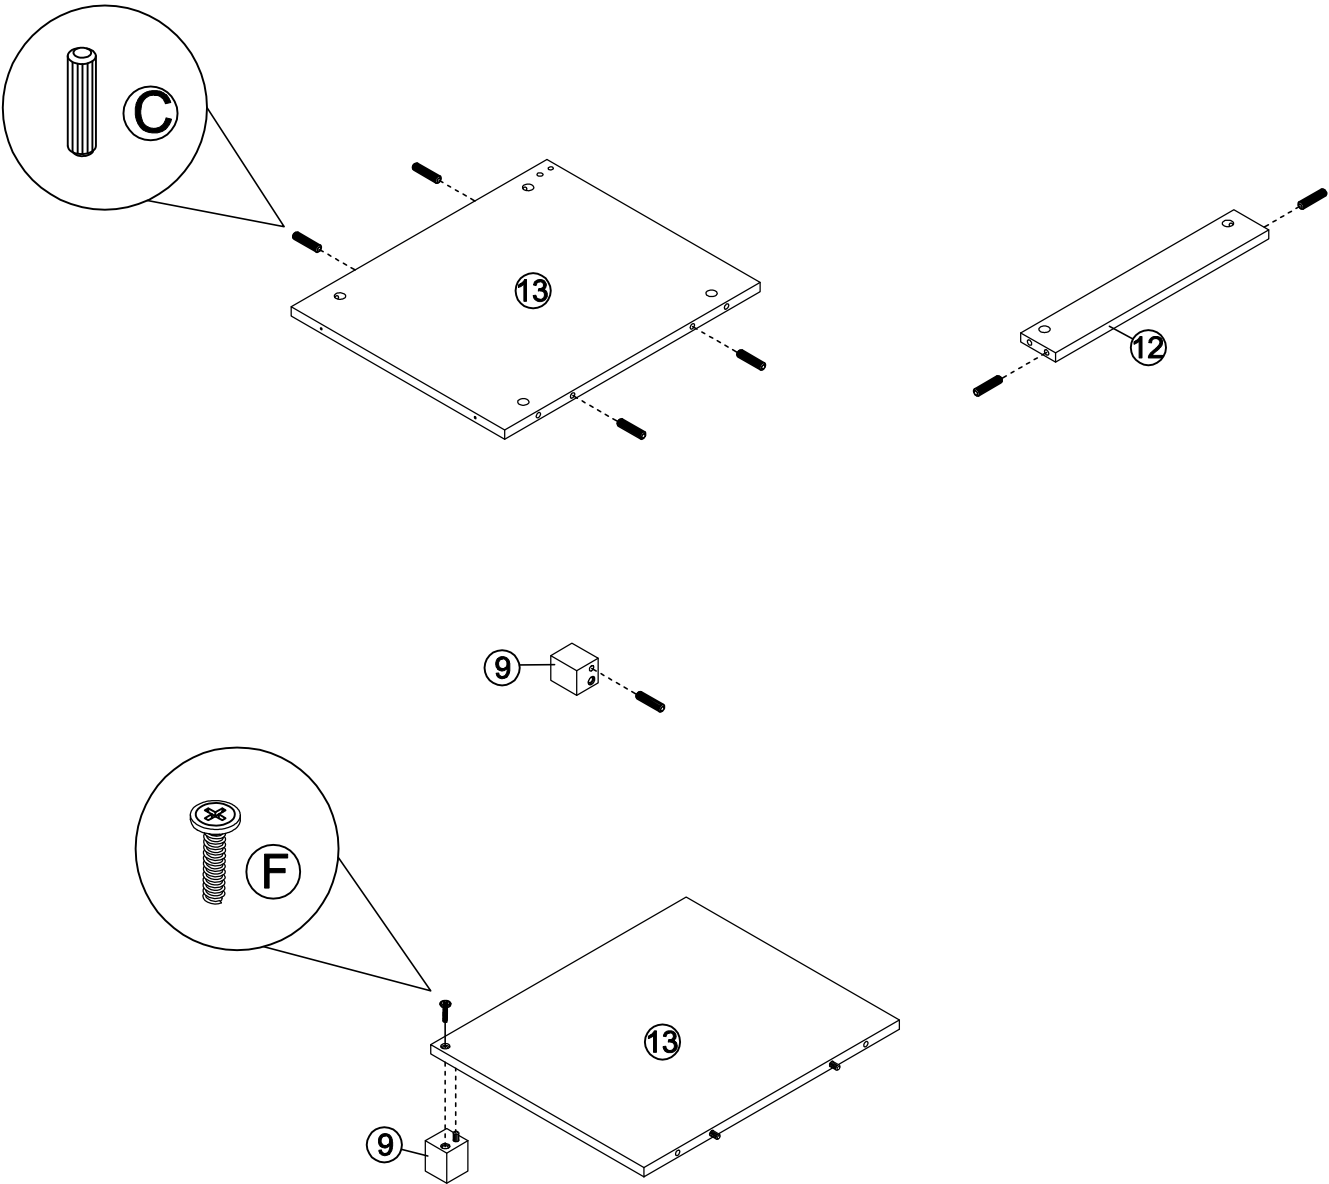


STEP13

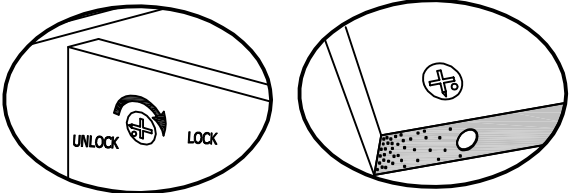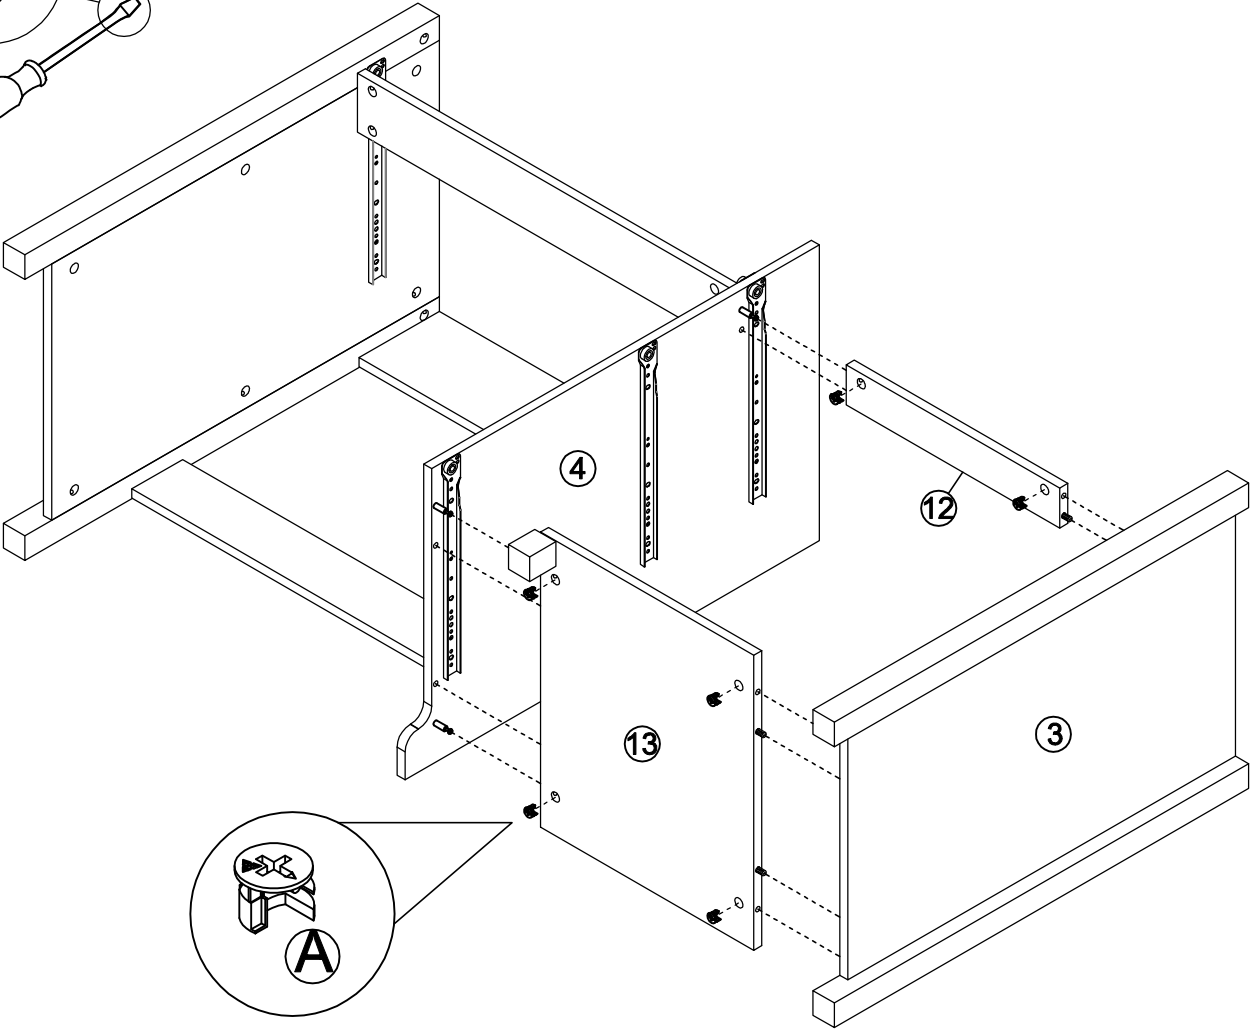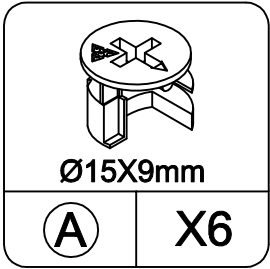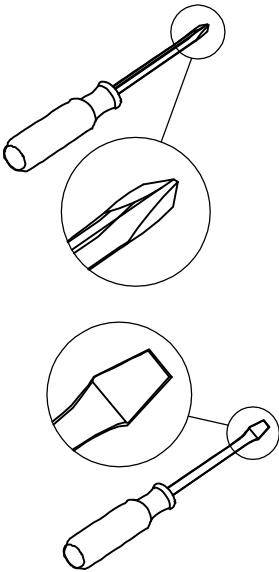




Proper orientation of CAM LOCK

STEP14

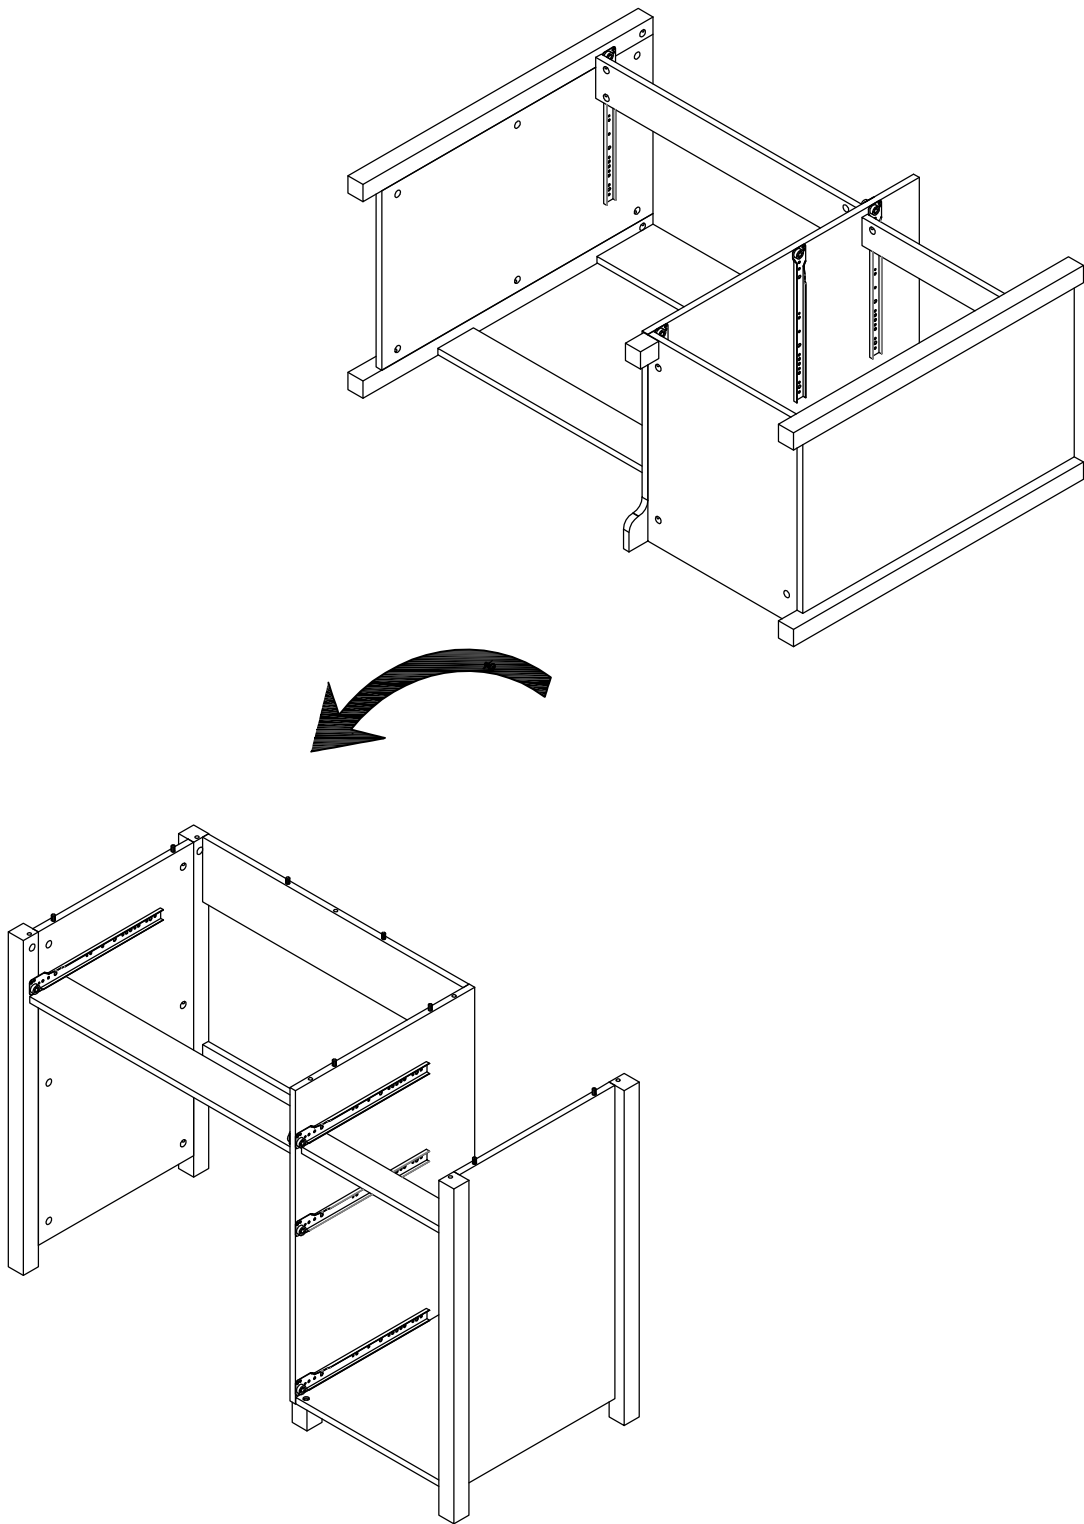



STEP16

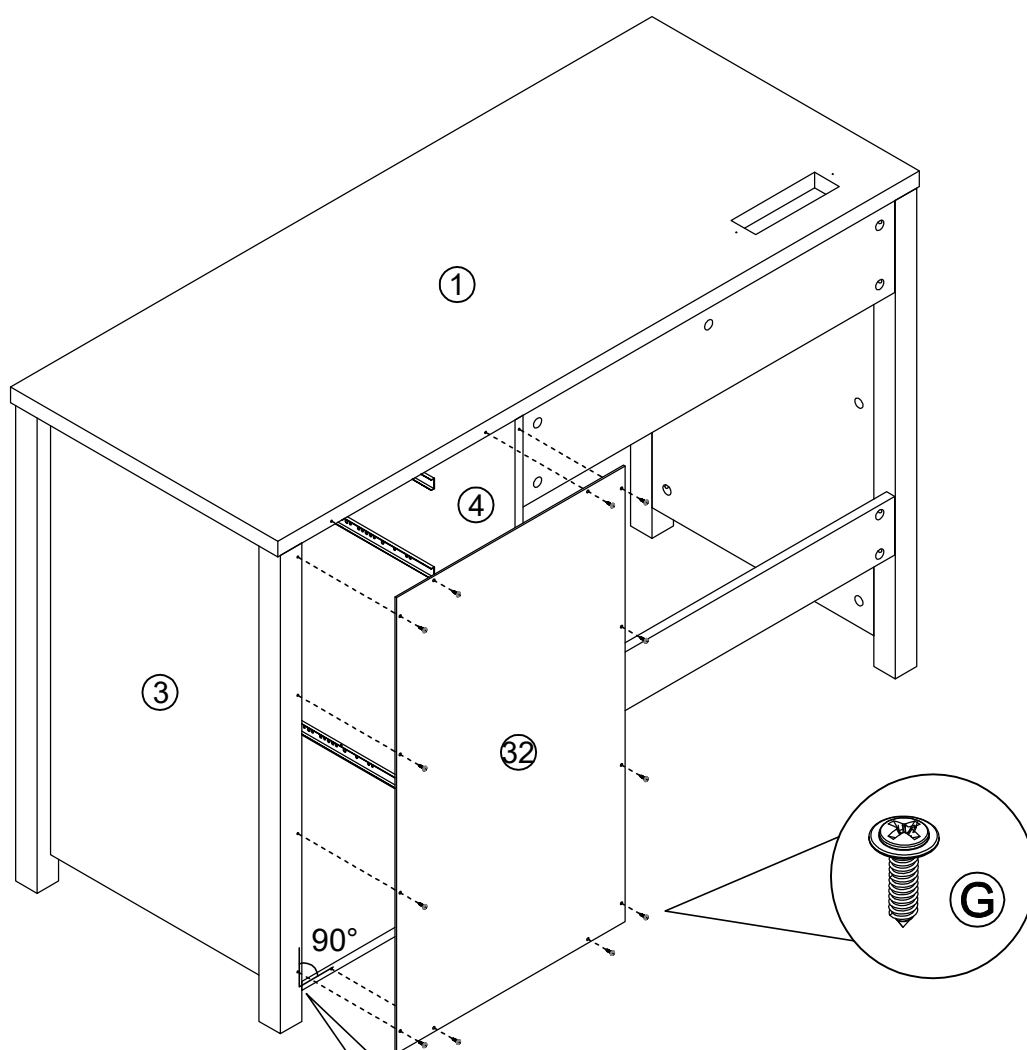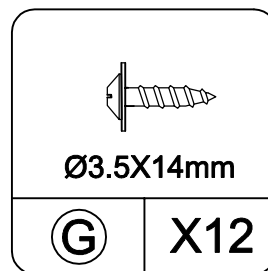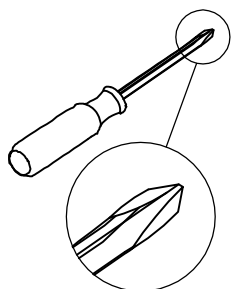

Before attaching the back panel, be sure that the unit is at 90°
Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°
Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°

STEP17

