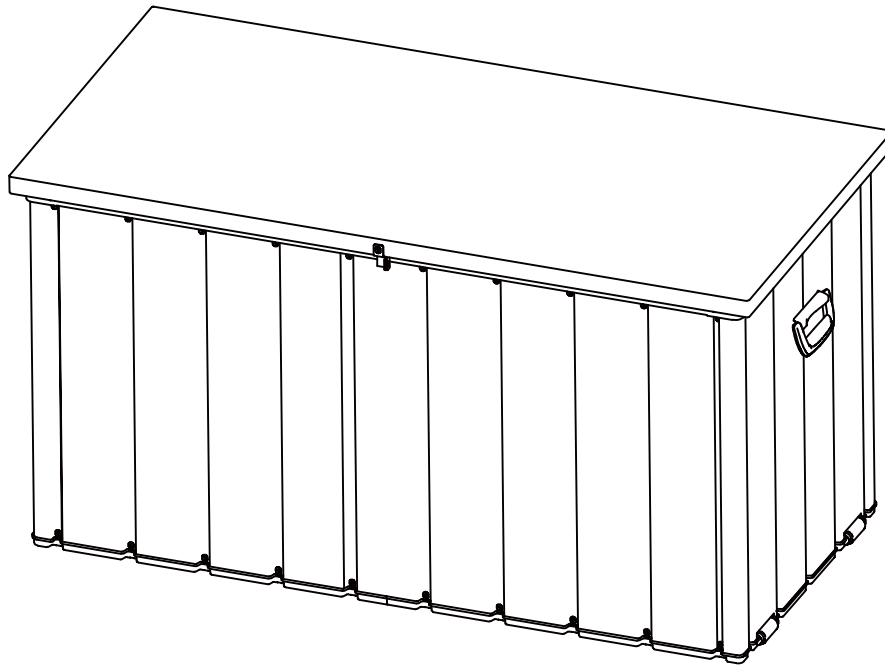




100 US GAL Metal Deck Box with Liner

ASSEMBLY MANUAL




SKU : LNCF0545-B


Missing part? Damaged? Contact us via email at
service@domioutdoorliving.com

© Copyright 2023–2025 domi LLC. All Rights Reserved.

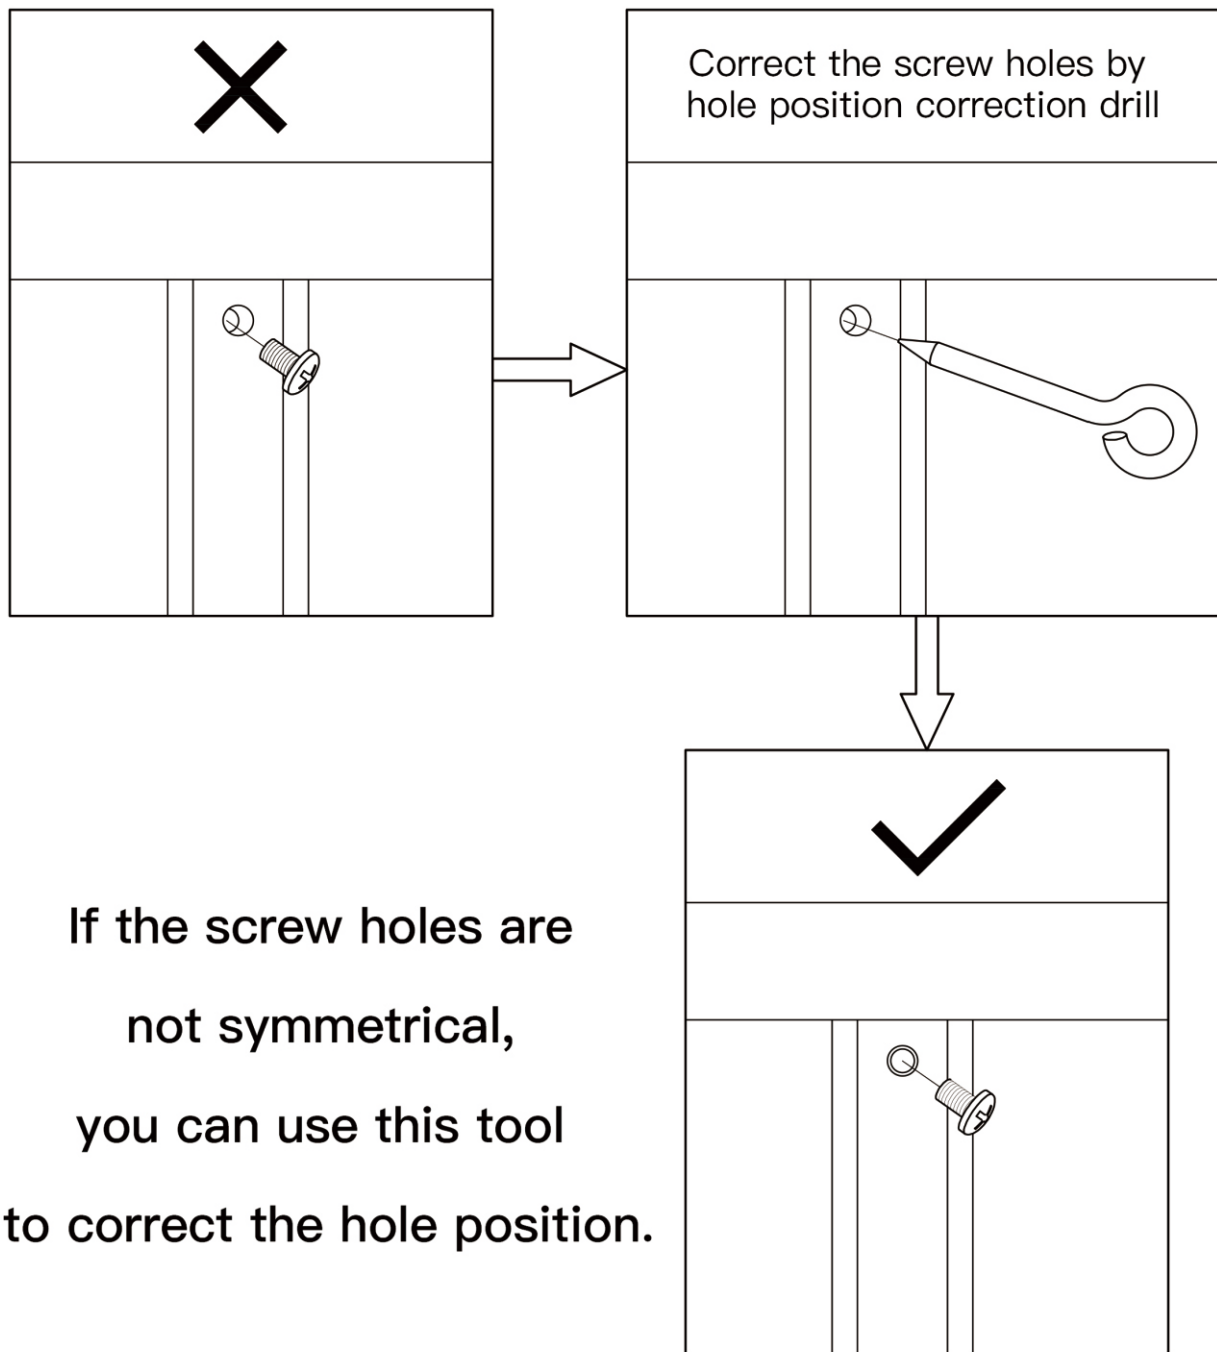
BEFORE STARTING ASSEMBLY

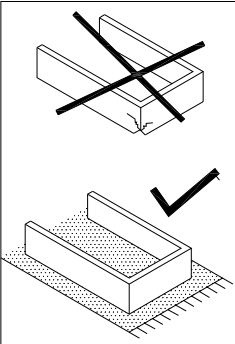

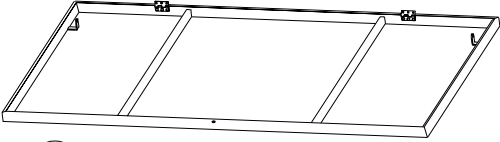
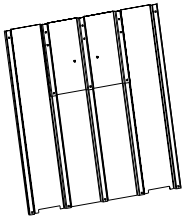
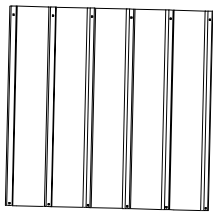
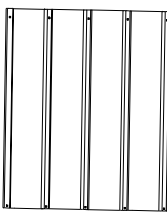
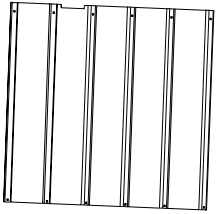






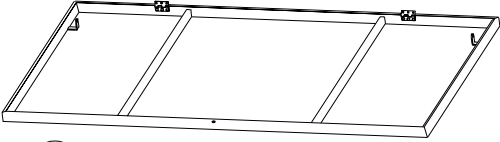
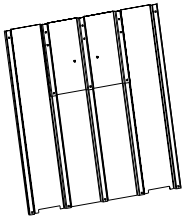
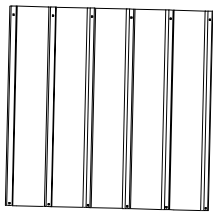
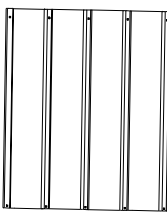
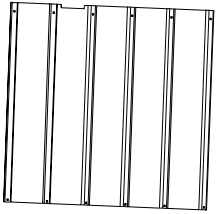






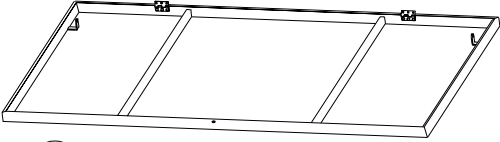
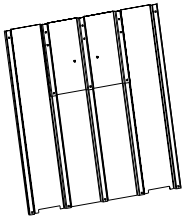
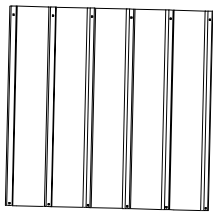
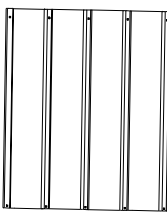
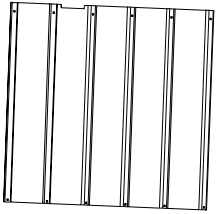





- ① Some parts have metal edges. Please be careful when handling components. Always wear work gloves.
- ② Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.
- ③ Please do not fully tighten the bolts prior to complete assembly.
- ④ Retain for future reference. Read carefully. For domestic use.



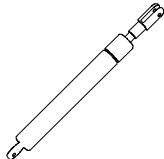



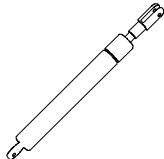



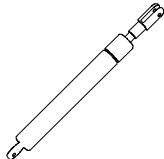

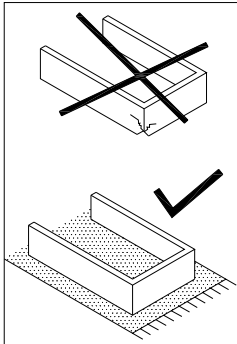




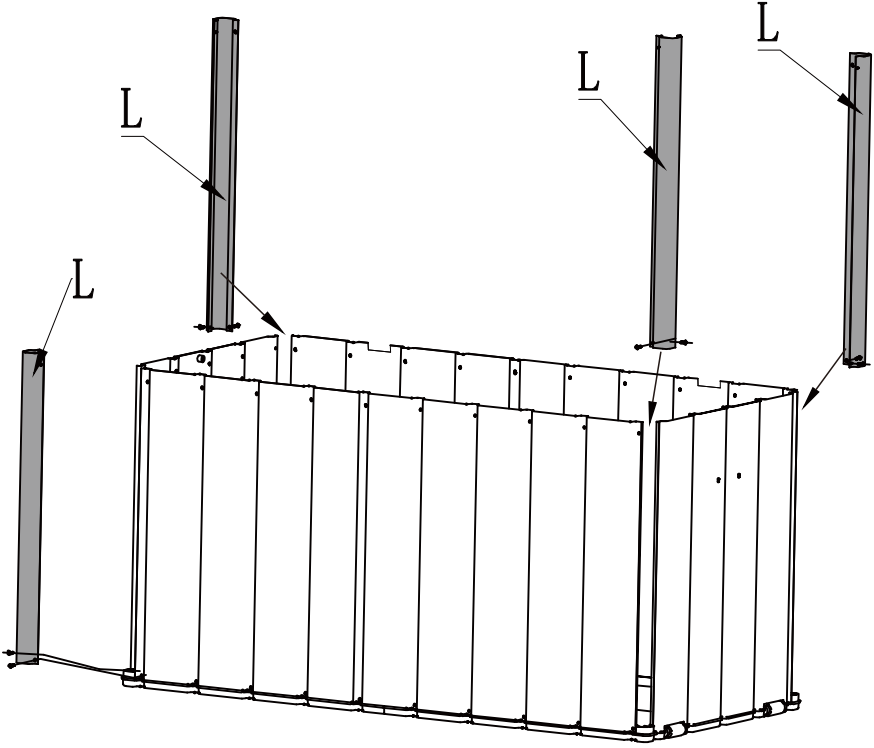
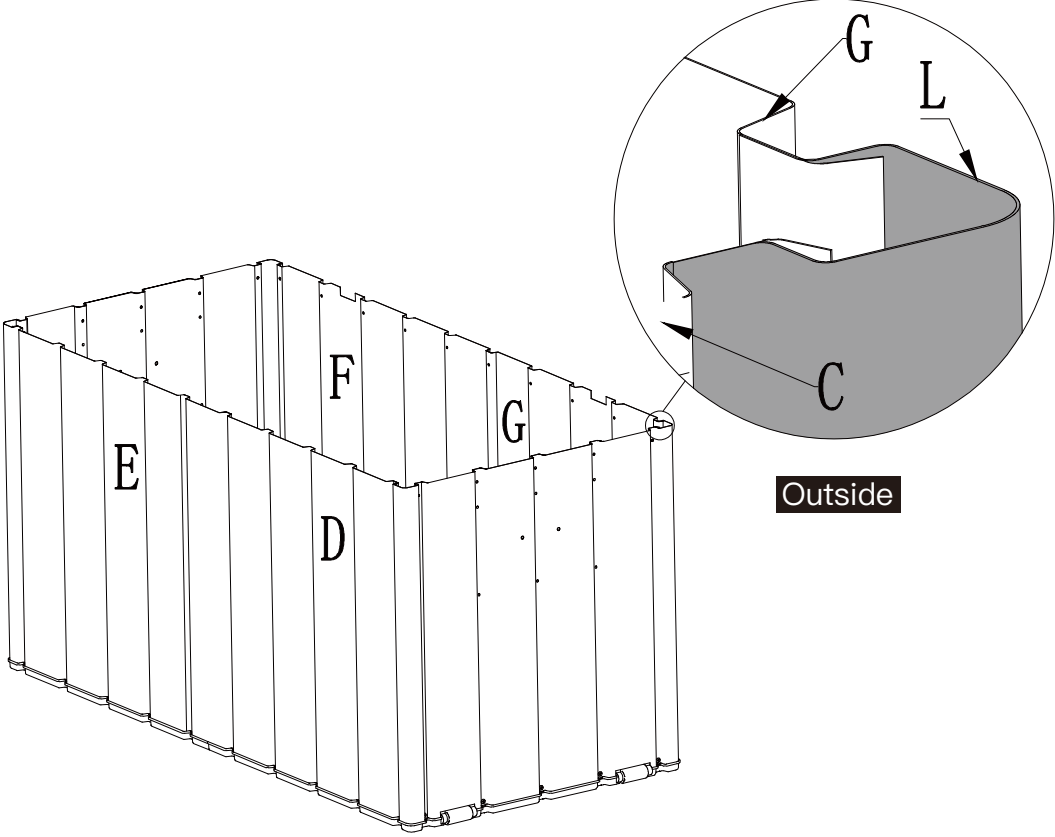
Hole position correction drill



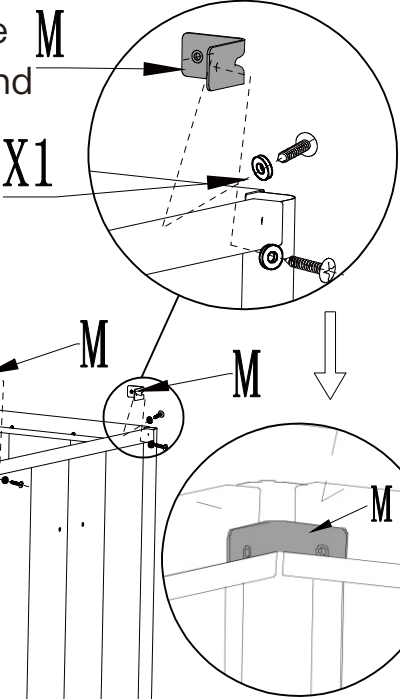
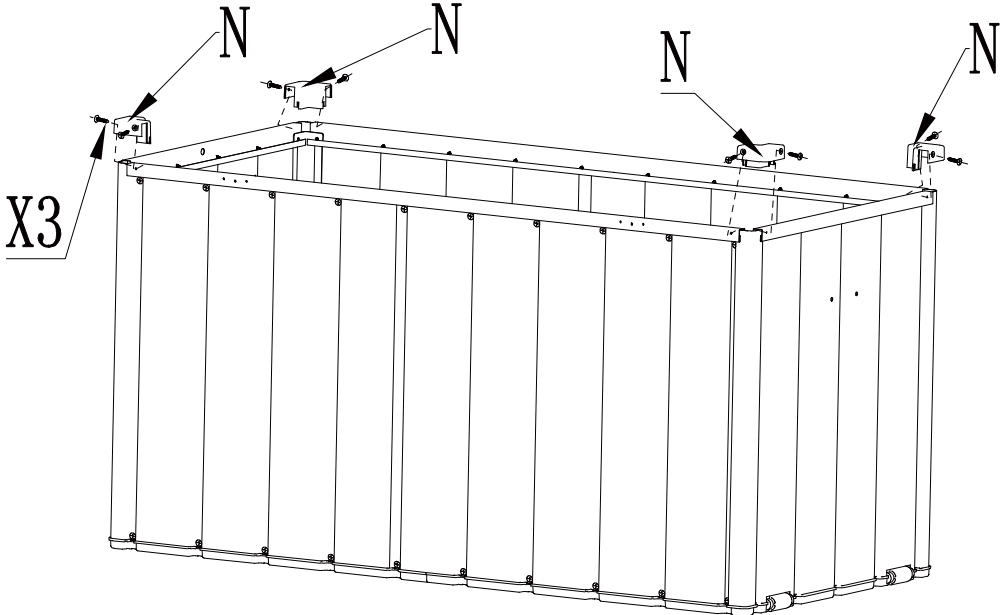
	<table border="1"> <tr> <td data-bbox="397 197 916 427">  A 1X </td><td data-bbox="940 197 1458 427">  B 1X </td></tr> <tr> <td data-bbox="397 450 916 680">  C 2X </td><td data-bbox="940 450 1458 680">  D 1X </td></tr> <tr> <td data-bbox="397 703 916 934">  E 1X </td><td data-bbox="940 703 1458 934">  F 1X </td></tr> <tr> <td data-bbox="397 956 916 1187">  G 1X </td><td data-bbox="940 956 1458 1187">  G1 Waterproof Liner 1X </td></tr> <tr> <td data-bbox="397 1209 916 1440">  G2 Velcro Straps 1X </td><td data-bbox="940 1209 1458 1440">  H 1X </td></tr> <tr> <td data-bbox="397 1462 916 1693">  I 1X </td><td data-bbox="940 1462 1458 1693">  J 1X </td></tr> <tr> <td data-bbox="397 1715 916 1946">  K 1X </td><td data-bbox="940 1715 1458 1946">  L 4X </td></tr> </table>	 A 1X	 B 1X	 C 2X	 D 1X	 E 1X	 F 1X	 G 1X	 G1 Waterproof Liner 1X	 G2 Velcro Straps 1X	 H 1X	 I 1X	 J 1X	 K 1X	 L 4X
 A 1X	 B 1X														
 C 2X	 D 1X														
 E 1X	 F 1X														
 G 1X	 G1 Waterproof Liner 1X														
 G2 Velcro Straps 1X	 H 1X														
 I 1X	 J 1X														
 K 1X	 L 4X														
1	⚠ Please do not fully tighten the bolts prior to complete assembly.														

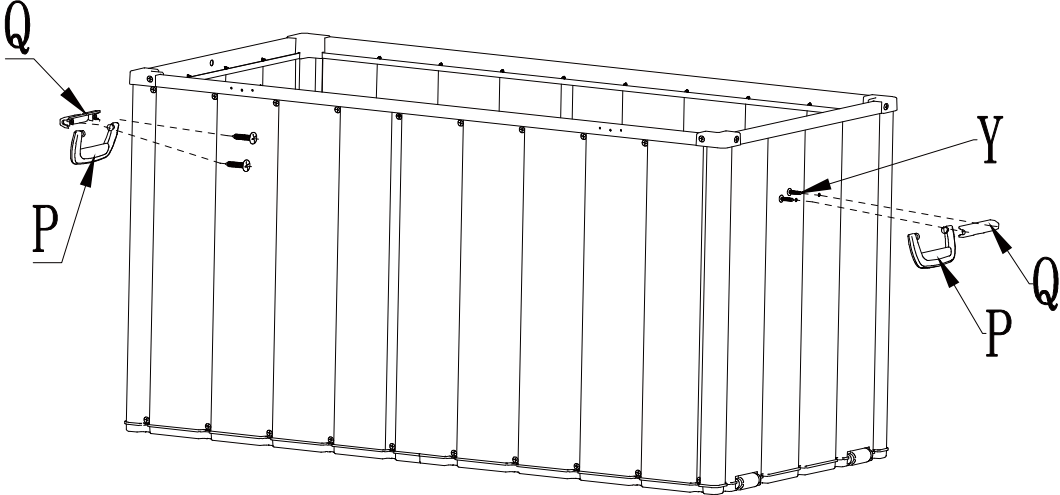
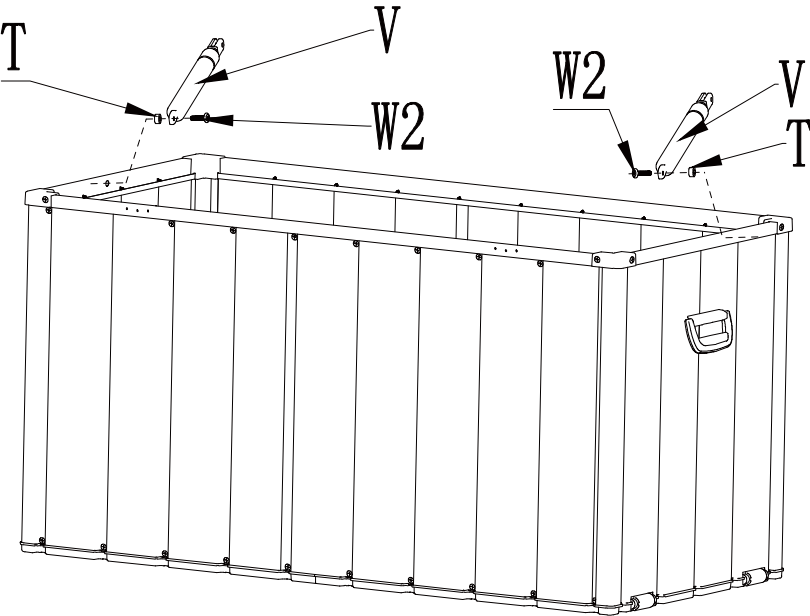
	<table><tr><td> M 4X</td><td> N 4X</td><td> P 2X</td><td> Q 2X</td></tr><tr><td> R 1X</td><td> S 1X</td><td> T 2X</td><td> U 2X M6</td></tr><tr><td> V 2X</td><td> W1 2X M6X16</td><td> W2 2X M6X25</td><td> X1 15X M4X10</td></tr><tr><td> X2 23X ST4X8</td><td> X3 38X ST4X16</td><td> O 1X Screwdriver</td><td> O1 1X Hole position correction drill</td></tr><tr><td> Y 4X ST5X16</td><td> Z1 1X</td><td> Z2 1X</td><td> Z3 1X</td></tr></table>	 M 4X	 N 4X	 P 2X	 Q 2X	 R 1X	 S 1X	 T 2X	 U 2X M6	 V 2X	 W1 2X M6X16	 W2 2X M6X25	 X1 15X M4X10	 X2 23X ST4X8	 X3 38X ST4X16	 O 1X Screwdriver	 O1 1X Hole position correction drill	 Y 4X ST5X16	 Z1 1X	 Z2 1X	 Z3 1X
 M 4X	 N 4X	 P 2X	 Q 2X																		
 R 1X	 S 1X	 T 2X	 U 2X M6																		
 V 2X	 W1 2X M6X16	 W2 2X M6X25	 X1 15X M4X10																		
 X2 23X ST4X8	 X3 38X ST4X16	 O 1X Screwdriver	 O1 1X Hole position correction drill																		
 Y 4X ST5X16	 Z1 1X	 Z2 1X	 Z3 1X																		
	2  Please do not fully tighten the bolts prior to complete assembly.																				


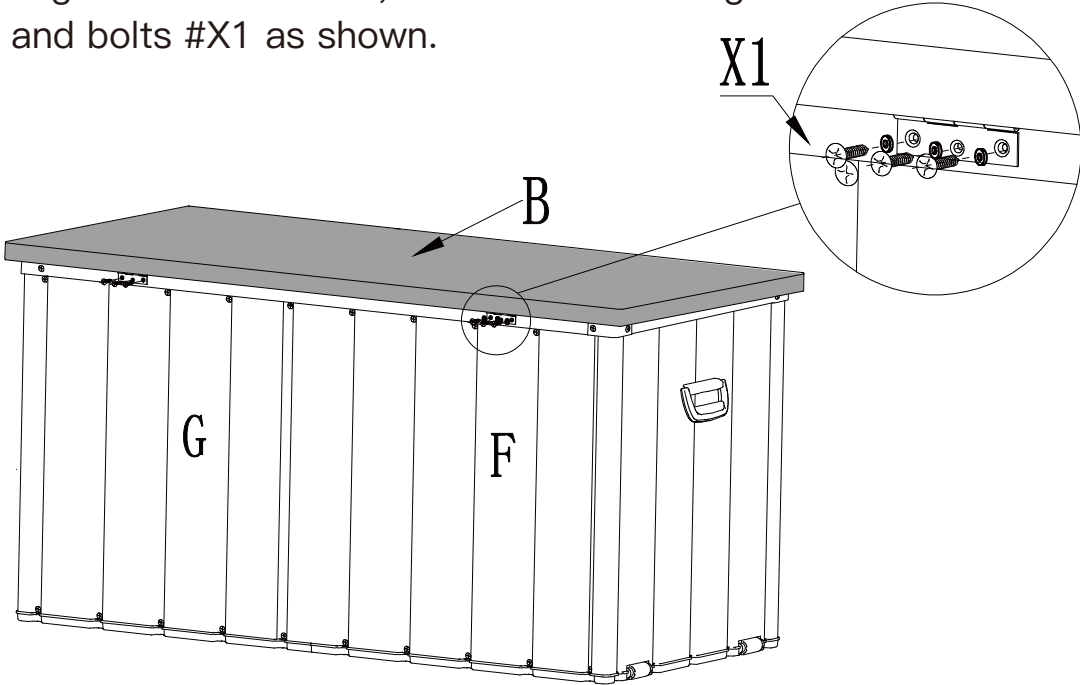

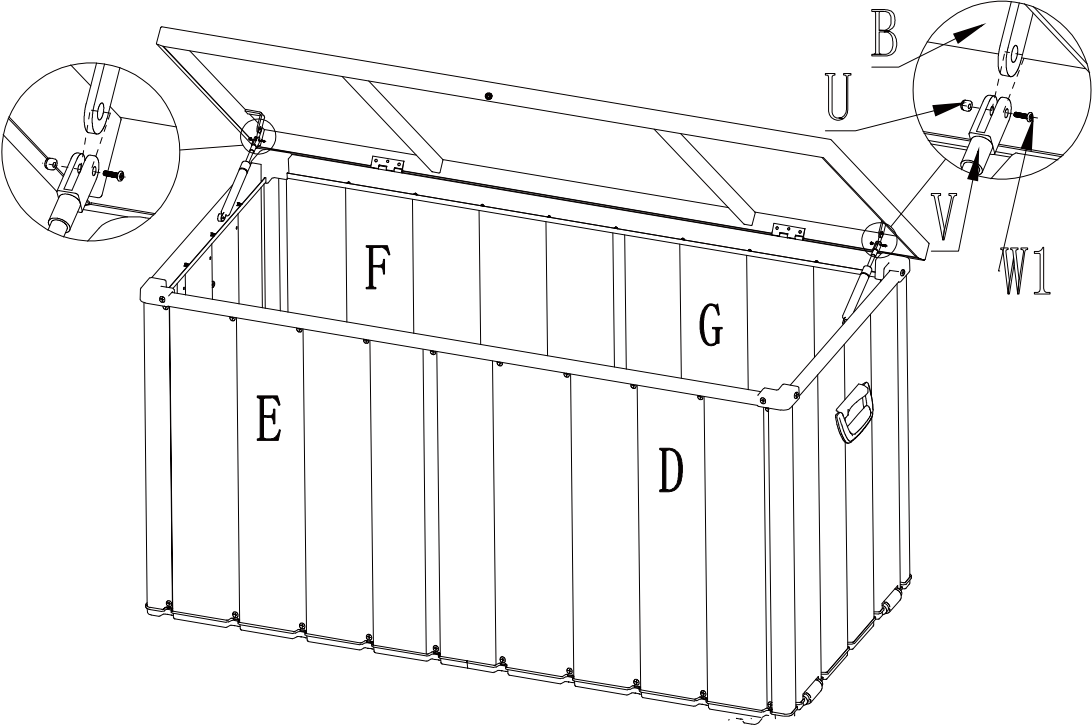
(A) 1X	(1) Place part #C on part #A, align the screw holes, and secure with 3 bolts #X3. (2) Repeat the above procedure to assemble the other side.
(C) 2X	
St4x16 (X3) 6X	
(D) 1X	<u>Step 1:</u> Place part #D, #E, on part #A, align the screw holes, and secure with 8 bolt #X3.
(E) 1X	<u>Step 2:</u> Place part#F, #G on part #A, align the screw holes, and secure with 8 bolt #X3.
(F) 1X	
(G) 1X	
St4x16 (X3) 16X	
3	



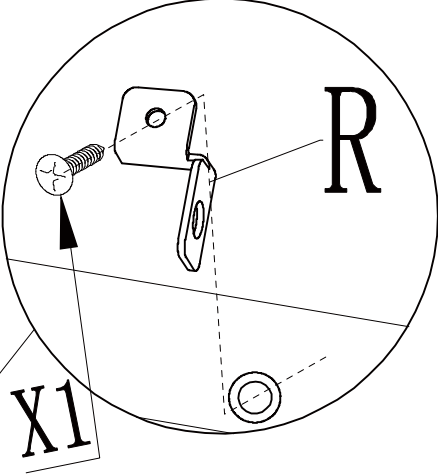
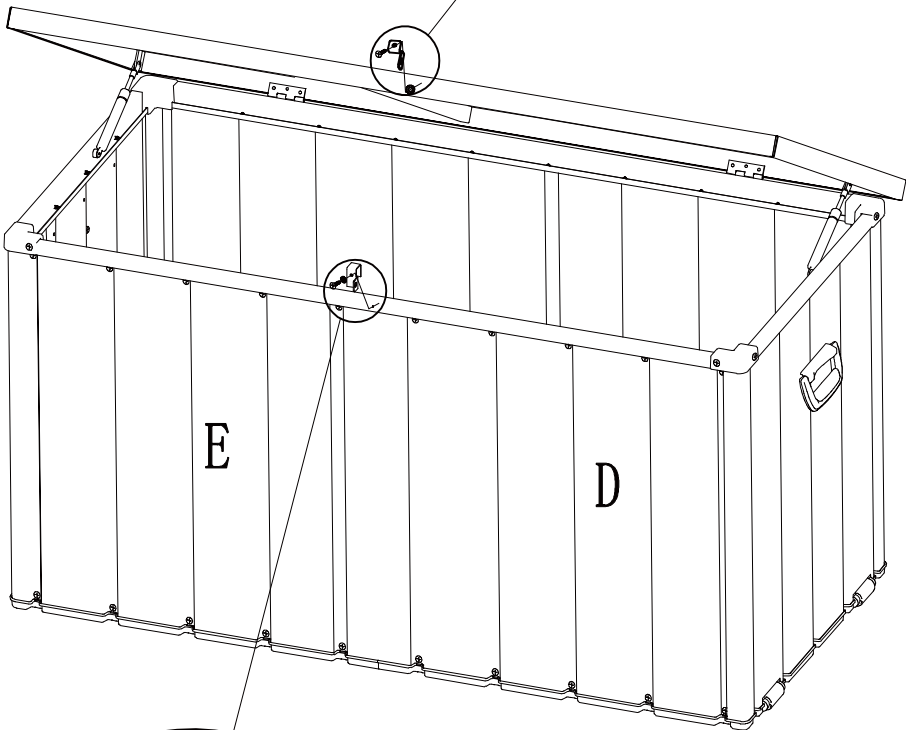
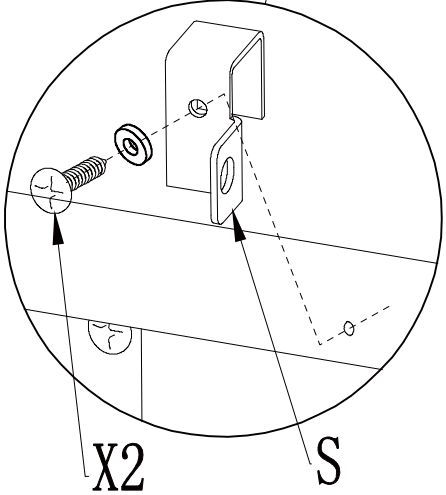
 (L) 4X	(1) Insert 4 part #L to the bottom of the deck box and secure with 8 bolt #X3.
 St4x16 (X3) 8X	
	
4	

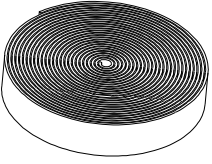
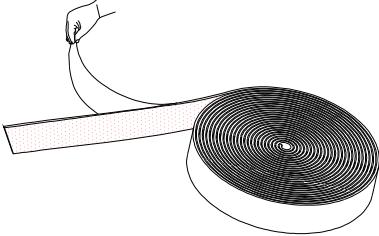
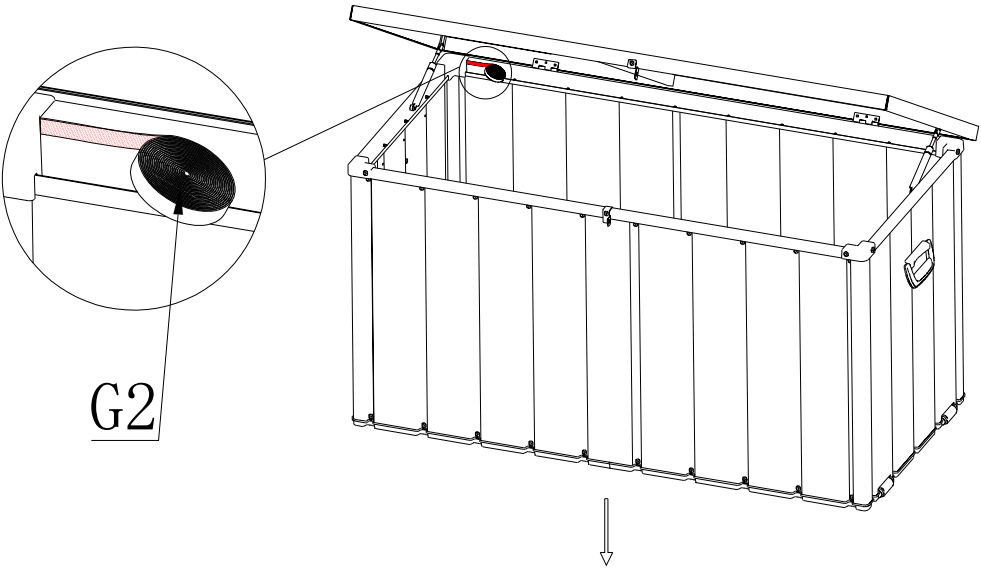
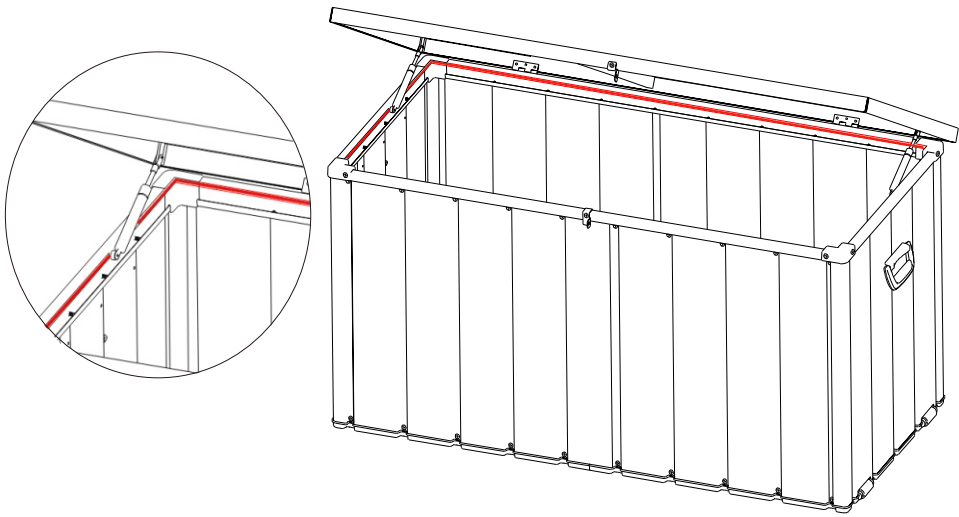
Ⓜ 1X Ⓜ 1X Ⓜ 1X Ⓜ 1X Ⓜ 22X	Step 1: Place part #H on the storage panel #G & #F as shown, align the screw holes, and secure with 8 gaskets and bolts #X2. Step 2: Place part #I on the storage panel #E & #D as shown, align the screw holes, and secure with 8 gaskets and bolts #X2. Step 3: Place part #J on the storage panel as shown, align the screw holes, and secure with 3 gaskets and bolts #X2. Step 4: Place part #K on the storage panel as shown, align the screw holes, and secure with 3 gaskets and bolts #X2.
5	


 M 4X	Place 4 part #M on the inside of the box frame, secure with 8 gaskets and bolts #X1 as shown. 
 X1 8X	
 O	
 O1	
 N 4X	Cover 4 part #N on the corner of the box, secure with 8 bolt #X3 as shown.
 X3 8X	
 O	
6	

 (P) 2X	<u>Step 1:</u> Connect part #P and part #Q. <u>Step 2:</u> Use bolt #Y to secure them to the storage panel.
 (Q) 2X	
 St5x16 (Y) 4X	
 (V) 2X	
 (T) 2X	Use bolt #W2 and gasket #T to secure part #V on the storage panel as shown.
 M6X25 (W2) 2X	
 (Z2)	
7	

 (B) 1X	(1) Place part #B on the storage panel #G & #F, align the screw holes, and secure with 6 gaskets and bolts #X1 as shown. 
 (X1) 6X	
 (U) 2X	(2) Use bolt #W1 and nut #U to connect part #V with the bracket under the lid.
 (W1) 2X	
 (Z3)	
 (Z2)	
	
8	

 (R) 1X  (S) 1X  (X1) 1X  (X2) 1X	(1) Use gasket and bolt #X1 to fix part #R to the lid as shown.    (2) Use gasket and bolt #X2 to fix part #S to the storage frame as shown.
9	

 G2 1X	
	(1) Remove the adhesive strip behind #G2. (2) Stick Velcro Straps to the inside of top frame #H, I,J, K as shown(You can cut it and paste in 4 strips).  
10	

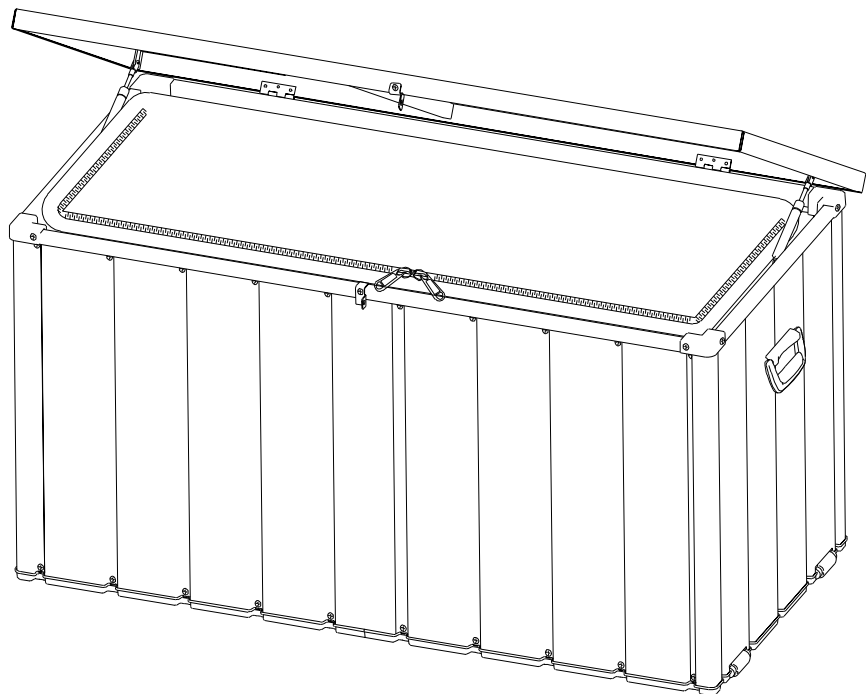
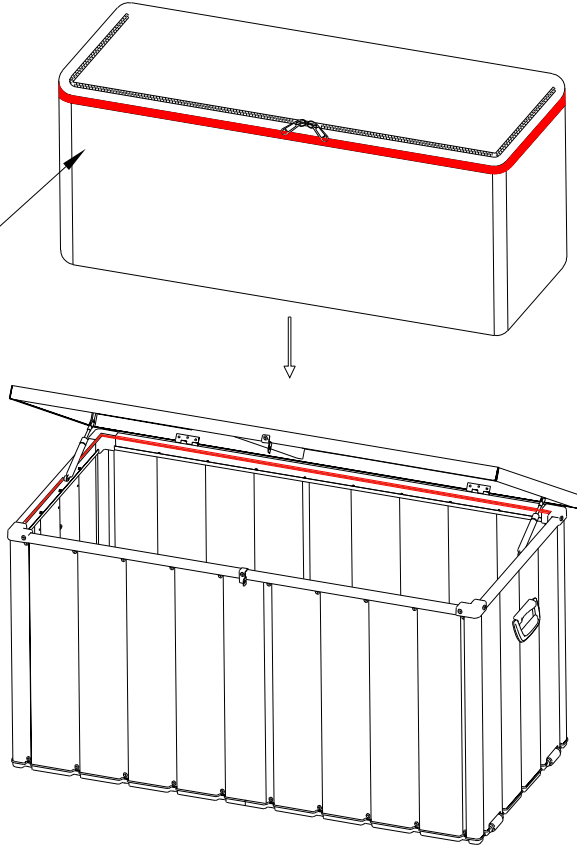


G1

1X

Place the liner #G1 in the box and secure the Velcro to the top frame #H, I, J, K.

G1





CARE & SAFETY

It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.

Wear safety goggles and always follow the manufacturer's instructions when using power tools.

Hot items such as recently used grills, blowtorches, etc., must not be stored in the box.

Not designed for carrying items.

Do not stand on lid.

To prevent risk of suffocation, do not allow children to play inside the box.

IF THERE ARE MISSING OR BROKEN PARTS, PLEASE DO NOT RETURN THE PRODUCT DIRECTLY.

Please log onto our website, or contact Customer Service.



USA & Canada:
1-833-807-3550



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:  

After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.