CORDLESS WALL SCONCE

Quick assembly and wall-mounting instructions

PACKAGE CONTENTS



- **A** Fabric shade
- **B** Wall canopy
- **C** Lamp arm
- **D** Lamp cup
- **E** Threaded socket
- **F** Shade retaining ring
- **G** Screw-base bulb
- **H** Remote control
- **I** USB charging cable
- **J** 2 mounting brackets
- **K** 2 wall anchors
- **L** 2 mounting screws
- **M** 2 canopy side screws
- **N** O-ring

TOOLS NEEDED: Pencil | Drill | Screwdriver | Level (recommended)

1 CHARGE THE BULB




Fully charge the rechargeable bulb with the supplied USB cable before first use.

2 ASSEMBLE BODY & CANOPY



Insert the threaded end of the sconce arm through the center hole in the round wall canopy. Tighten the retaining nut securely.

3 INSERT ASSEMBLY INTO SHADE

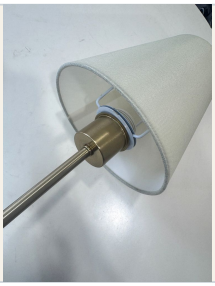

Pass the pre-assembled lamp cup and threaded socket through the center opening of the fabric shade.

PRE-ASSEMBLED PART

The lamp arm, lamp cup, and threaded socket are assembled at the factory. Do not take this section apart before installing the shade.

CORDLESS WALL SCONCE

Shade and bulb assembly - screw all parts in securely

4 INSTALL RETAINING RING



From inside the shade, place the white retaining ring over the threaded socket. Turn it clockwise until the shade is held firmly.

5 CHECK SHADE ASSEMBLY




Confirm the retaining ring is flat and secure and the socket is centered in the shade, as shown.

6 SCREW IN THE BULB



Align the threaded bulb base with the socket. Turn the bulb clockwise until snug. This bulb is screw-in, not magnetic.

FINAL ASSEMBLY RESULT

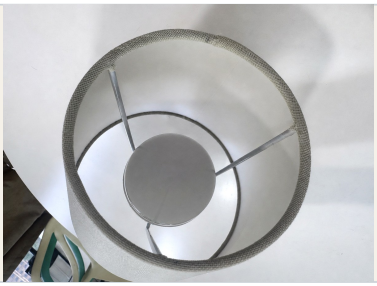

After the bulb is fully screwed in, the completed shade assembly should look like this.

IMPORTANT

Do not push the bulb straight into the socket. Always rotate the threaded base clockwise to install it and counterclockwise to remove it.

CORDLESS WALL SCONCE


Wall mounting - complete the steps in order

7 MARK & DRILL TWO HOLES




Use the mounting bracket as a template. Mark both holes, then drill to a depth suitable for the supplied wall anchors.

8 INSTALL ANCHORS & BRACKET

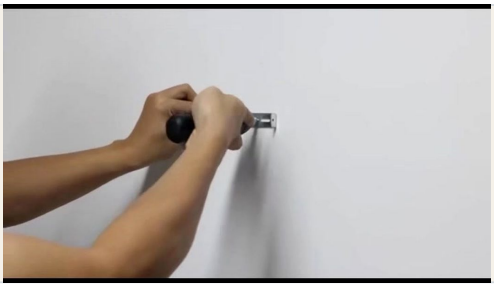

Push the 2 wall anchors fully into the holes. Position the bracket and fasten it with the 2 mounting screws. Confirm it is level and firm.

9 ATTACH THE SCONCE

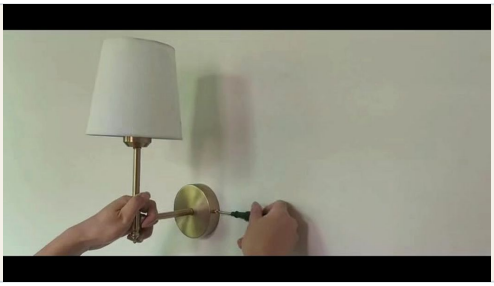

Place the round wall canopy over the bracket. Align the side holes, insert the 2 short canopy screws, and tighten evenly.

10 CHECK & TURN ON



Gently check that the fixture is secure. Turn on the bulb and use the remote control to select the preferred light setting.

IMPORTANT SAFETY & INSTALLATION NOTES

- This is a cordless, rechargeable fixture. No household electrical wiring is required.
- The supplied anchors are intended for solid masonry or similar walls. For drywall, tile, wood, or other surfaces, use fasteners appropriate for that wall type.
- Do not install on a loose, damaged, wet, or uneven surface. Keep the charging port dry.
- Do not overtighten the shade, bulb, or screws. Recheck the mounting screws periodically.
- If any part is missing or damaged, stop installation and contact the seller before use.

INSTALLATION COMPLETE

The wall sconce is now ready for everyday use.