


# ***Closet Organizer System***

## **ASSEMBLY INSTRUCTION**

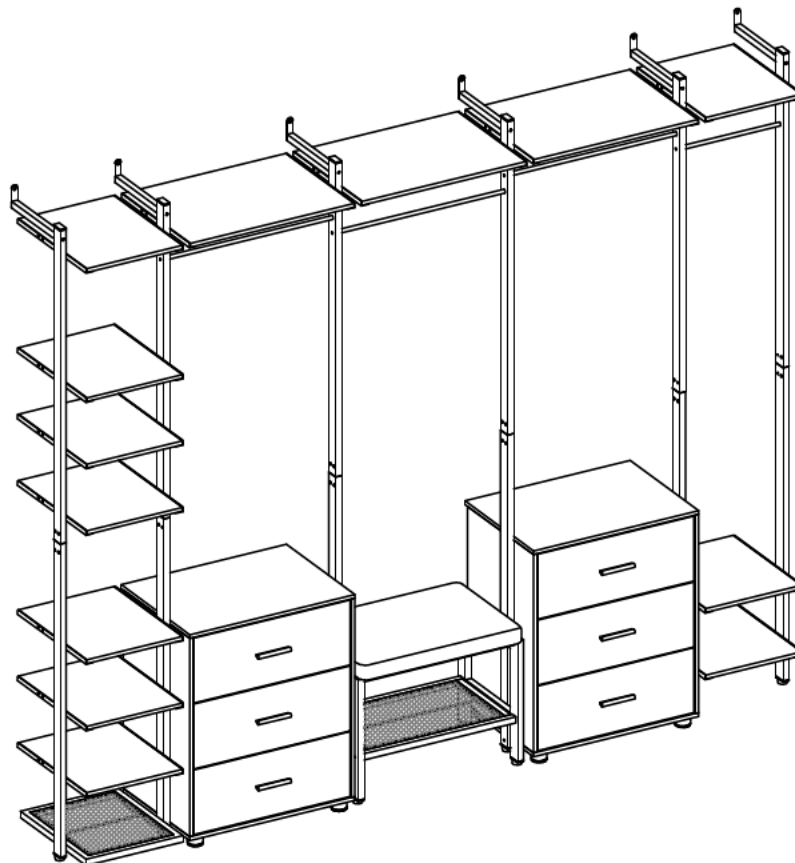

There are two packages for this rack, you may not receive them at the same time, please wait a few days if you only get one package.



(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)

### **Thank you for purchasing our products.**

As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time,We will provide you with a 100% satisfactory solution.


### **TIPS:**

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install,which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

# Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

**1** DO NOT OVER TIGHTEN

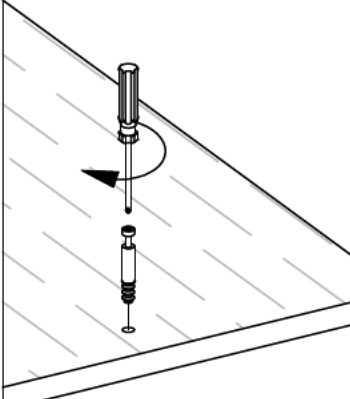

Push the male camlock into the entry hole.


**2**

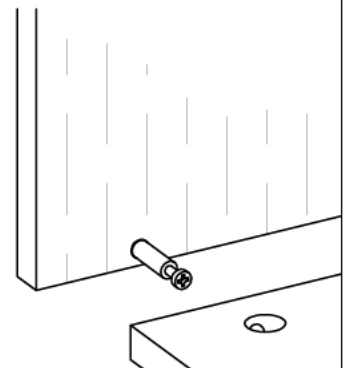

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

**3**

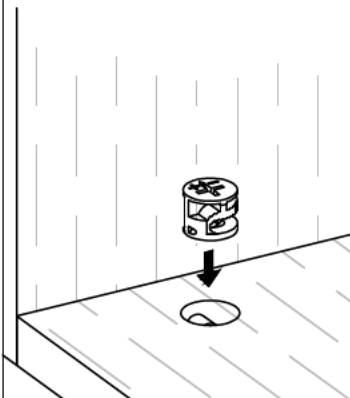









Turn the female camlock clockwise with a screwdriver.







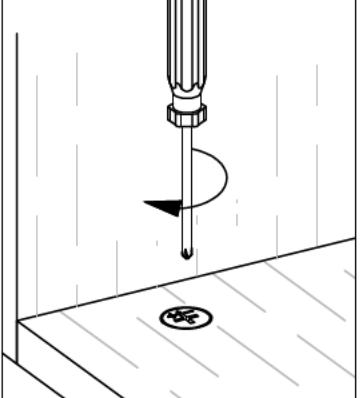

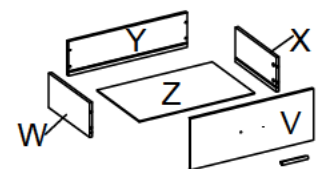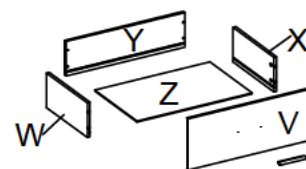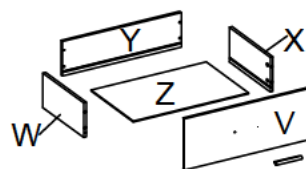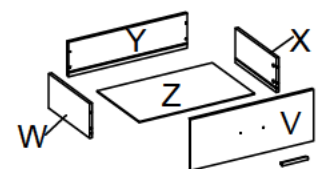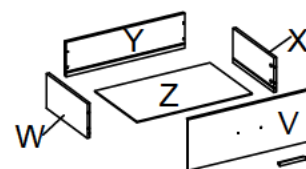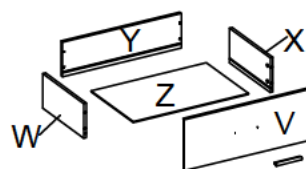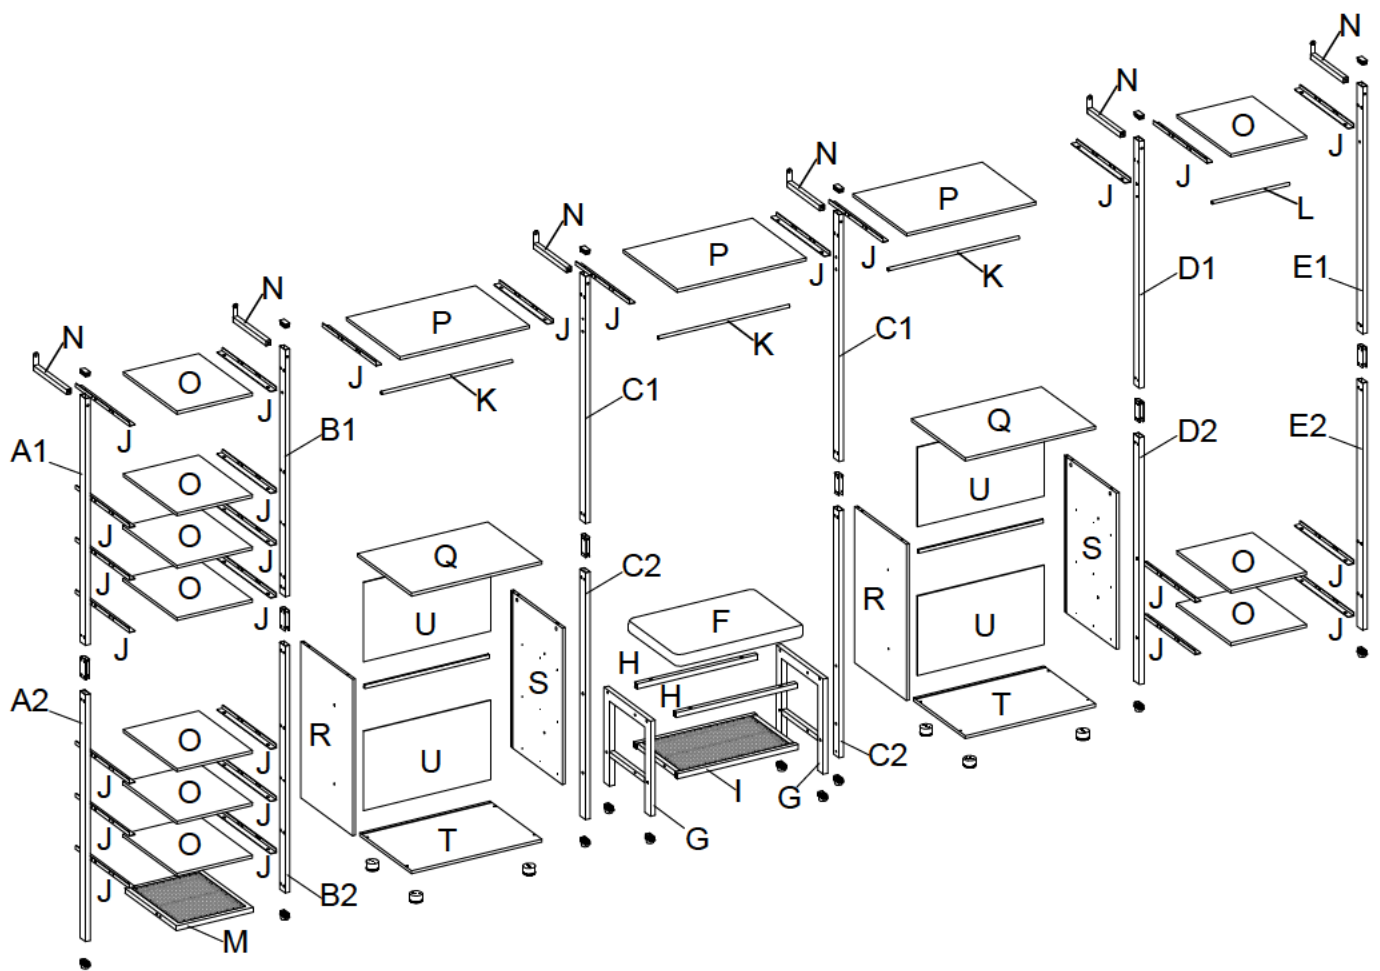


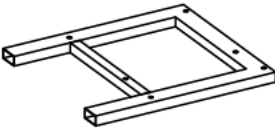








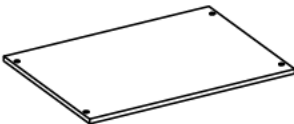










You should feel a click when the camlock is locked in place.

The joint is now secure.




























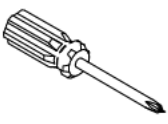
**4**







PART LIST A			
A1 x 1pc 	A2 x 1pc 	B1 x 1pc 	B2 x 1pc 
C1 x 2pcs 	C2 x 2pcs 	D1 x 1pc 	D2 x 1pc 
E1 x 1pc 	E2 x 1pc 	F x 1pc 	G x 2pcs 
H x 2pcs 	I x 1pc 	J x 26pcs 	K x 3pcs 
L x 1pc 	M x 1pc 	N x 6pcs 	O x 10pcs 
P x 3pcs 			
PART LIST B			
Q x 2pcs 	R x 2pcs 	S x 2pcs 	T x 2pcs 
U x 4pcs 	V x 6pcs 	W x 6pcs 	X x 6pcs 
Y x 6pcs 	Z x 6pcs 		

## HARDWARE LIST

<p>①</p>  <p>M6x35      26 pcs</p>	<p>②</p>  <p>M6x27      8 pcs</p>	<p>③</p>  <p>M6x8      48 pcs</p>	<p>④</p>  <p>M6x40      8 pcs</p>
<p>⑤</p>  <p>M4x30      24 pcs</p>	<p>⑥</p>  <p>M3x12      96 pcs</p>	<p>⑦</p>  <p>M6x10      52 pcs</p>	<p>⑧</p>  <p>M6x12      52 pcs</p>
<p>⑨</p>  <p>M4x15      12 pcs</p>	<p>⑩</p>  <p>6 pcs</p>	<p>⑪</p>  <p>M6x12      8 pcs</p>	<p>⑫</p>  <p>8 pcs</p>
<p>⑬</p>  <p>M3x16      16 pcs</p>	<p>⑭</p>  <p>M6x28      32 pcs</p>	<p>⑮</p>  <p>Ø12      32 pcs</p>	<p>⑯</p>  <p>20x40      6 pcs</p>
<p>⑰</p>  <p>528mm      2 pcs</p>	<p>⑱</p>  <p>20x40      6 pcs</p>	<p>⑲</p>  <p>20x40xM8      10 pcs</p>	<p>⑳</p>  <p>M4x40      6 pcs</p>
<p>㉑</p>  <p>6 pcs</p>	<p>㉒</p>  <p>6 pcs</p>	<p>㉓</p>  <p>6 pcs</p>	<p>㉔</p>  <p>6 pcs</p>
<p>㉕</p>  <p>M6x55      8 pcs</p>	<p>㉖</p>  <p>24 pcs</p>	<p>㉗</p>  <p>M4      1 pc</p>	<p>㉘</p>  <p>1 pc</p>

## STEP 1

⑤  x4


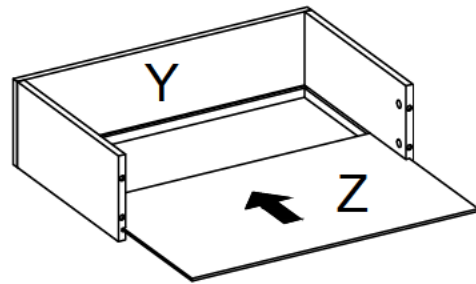
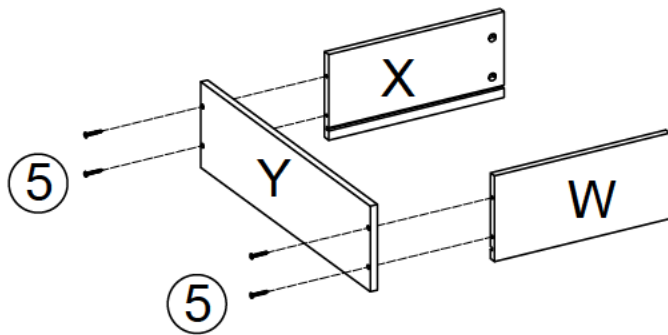


*Please make sure part "Z" is fully seated in part "Y"*

## STEP 2

⑭  x4


⑮  x4

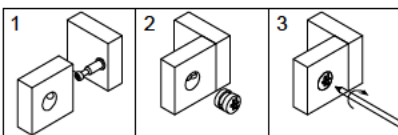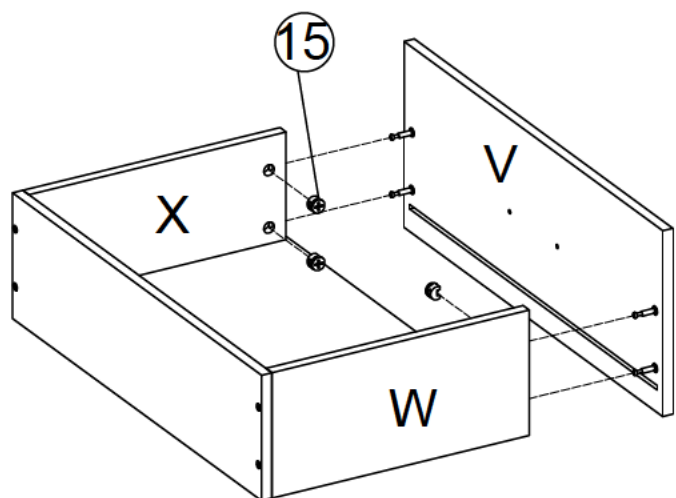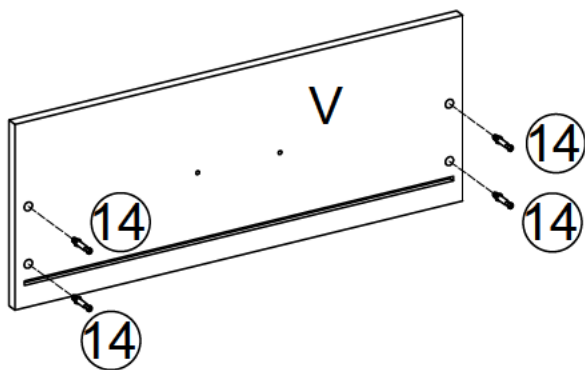

Please point the arrow upward to the mounting hole when installing Part ⑮ then use screwdriver to tighten it in the "+" direction.

Cam Lock Fastening System


## STEP 3

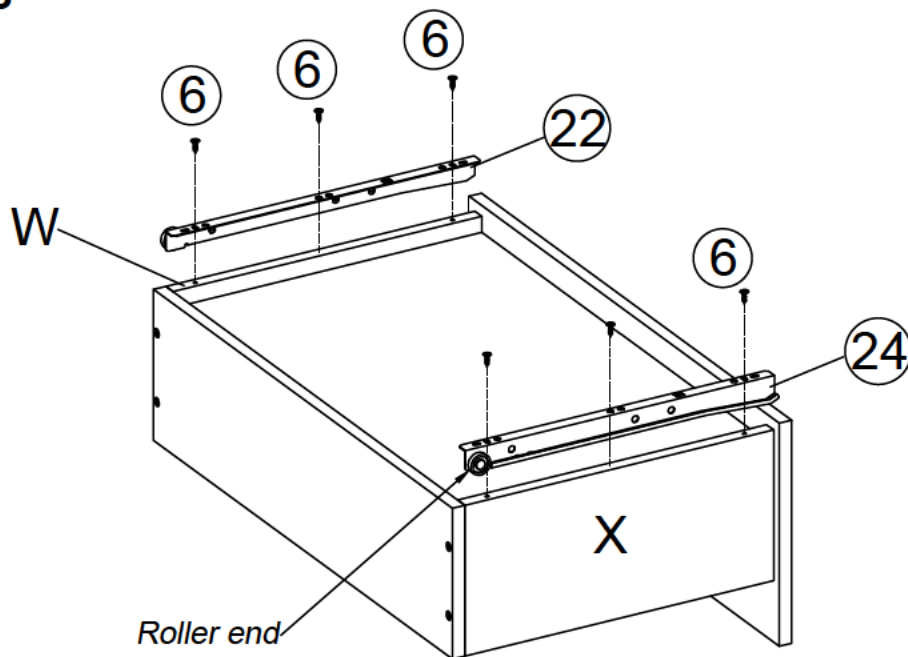

6 x6

22 x1

24 x1

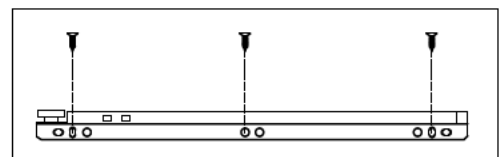


## STEP 4

### NOTICE:


The installation for all the six drawers is base on the one to four steps.

9 x2

10 x1

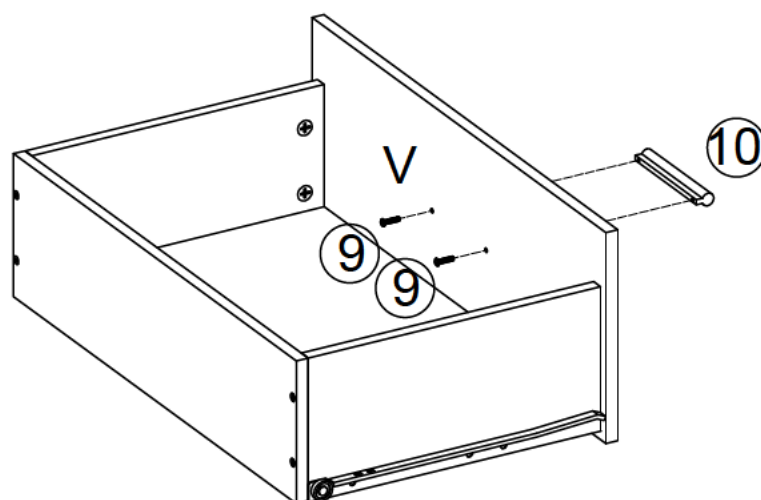

## STEP 5

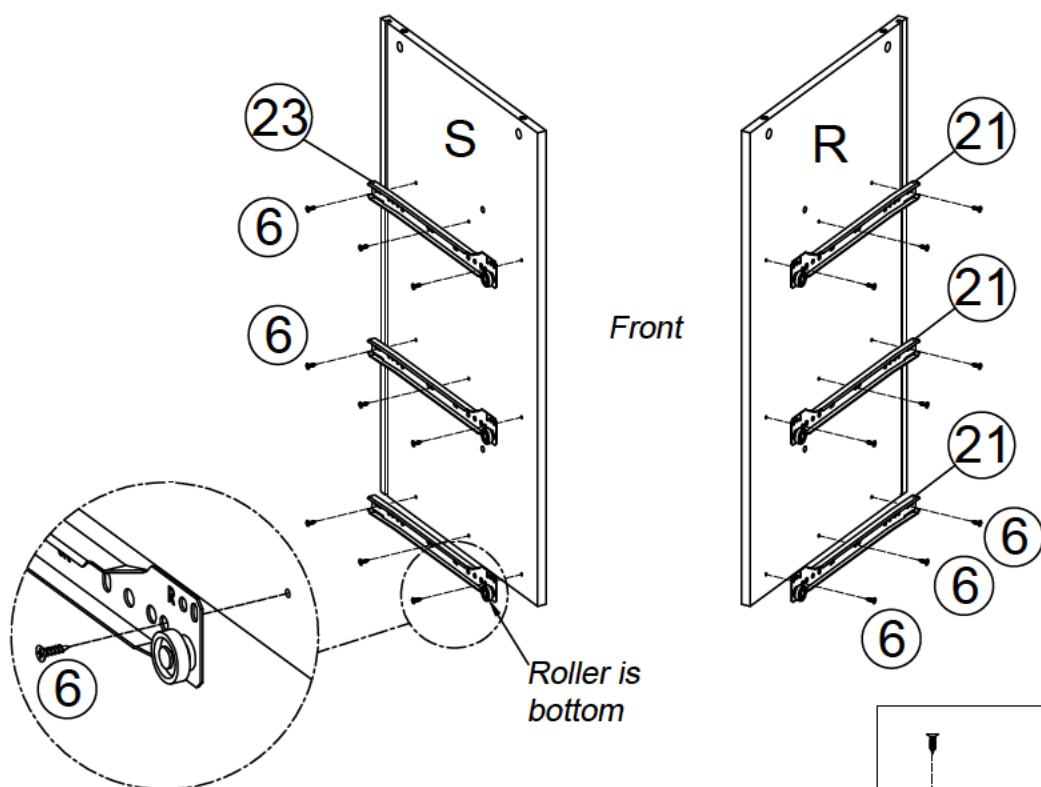


⑥ x18

②① x3

②③ x3


## STEP 6

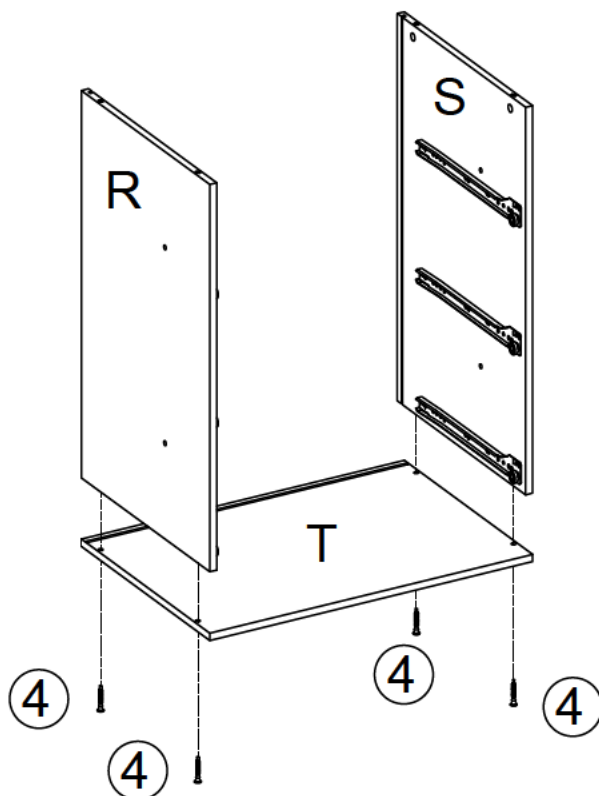

④ x4


## STEP 7

17 — x1

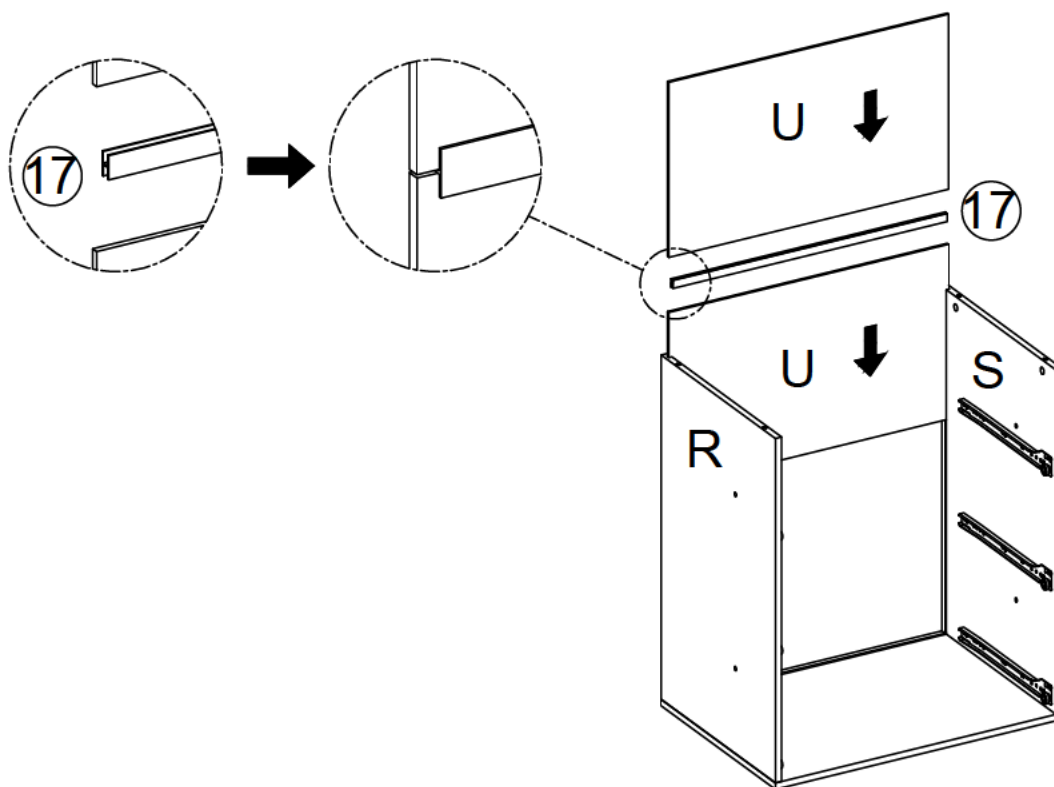


## STEP 8

14 — x4

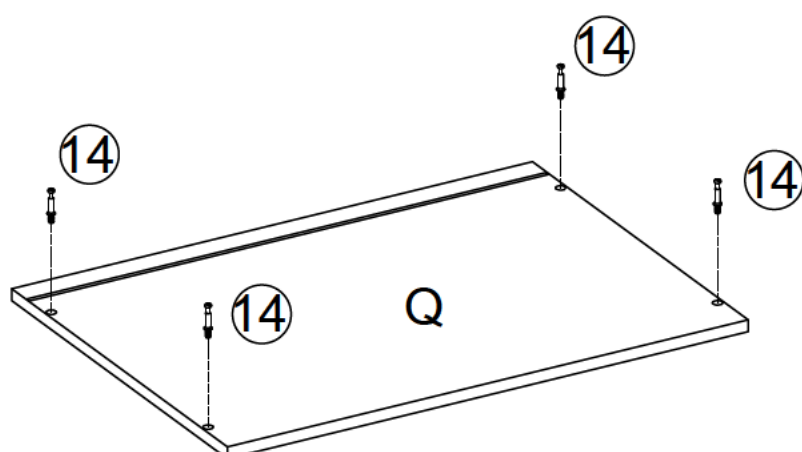

## STEP 9


15  x4

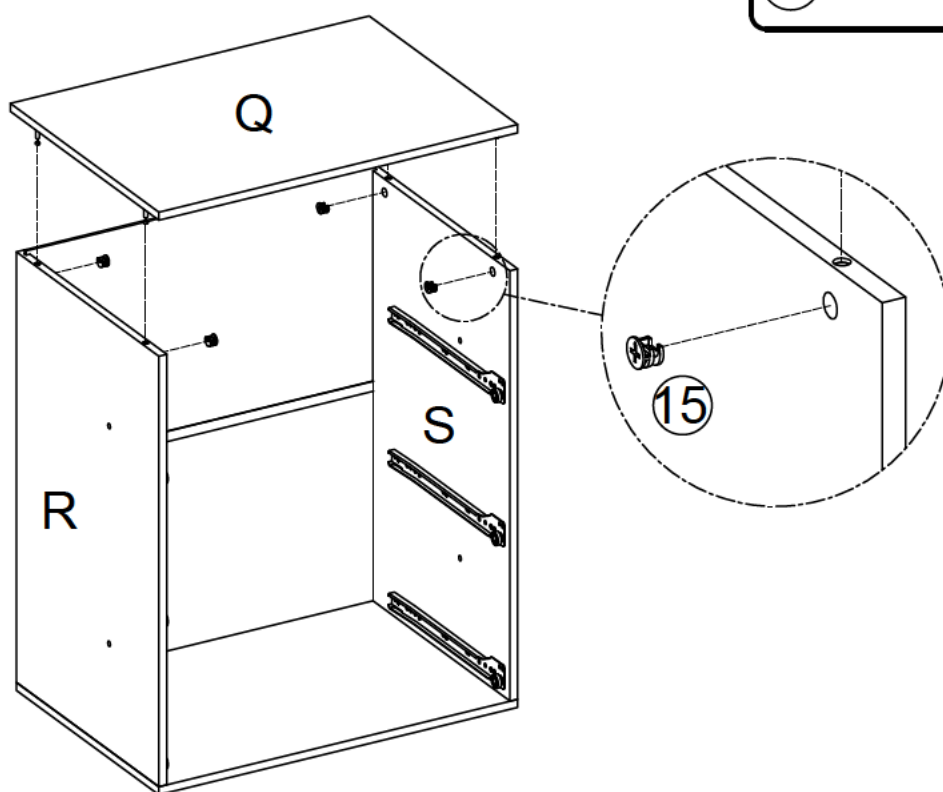

## STEP 10


11  x4

12  x4

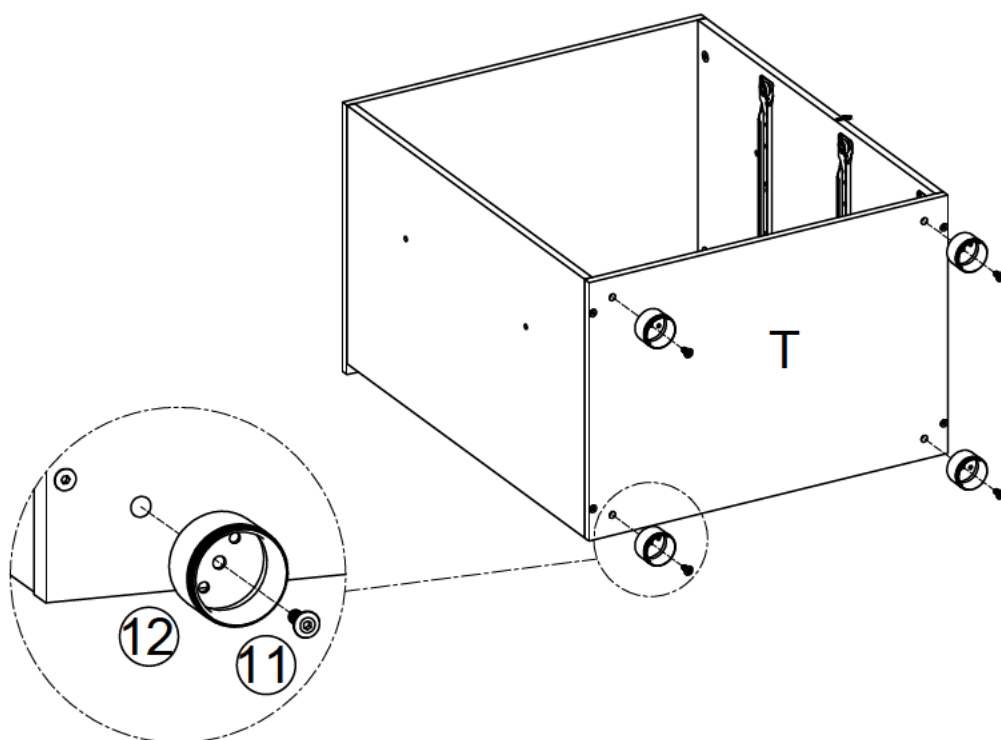

## STEP 11


13  x8

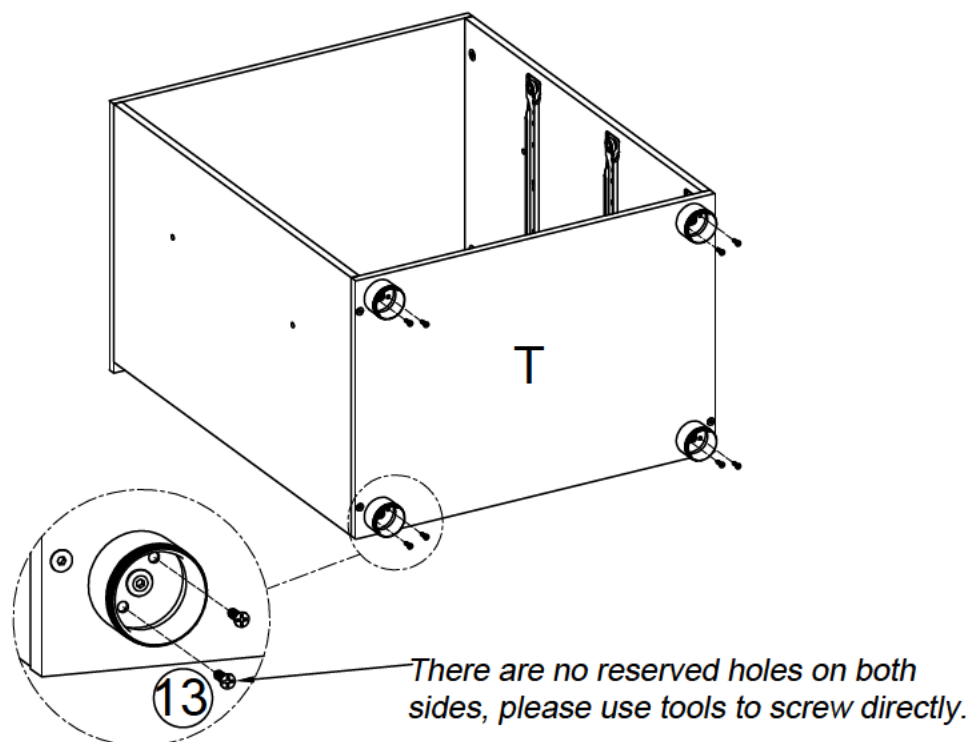


## STEP 12

### NOTICE:

The installation for all the two drawer cabinet is base on the step 5-12 above.

6  x12

26  x12

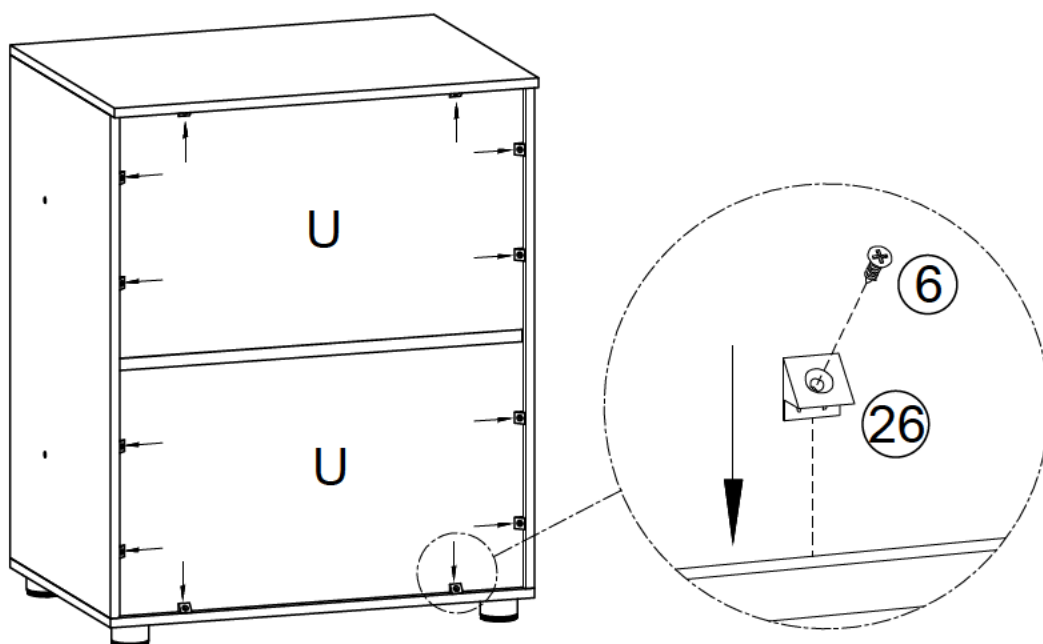


## STEP 13

19



x4

Please use a hammer or solid tools  
(not included) to knock the footpads  
into the frame.

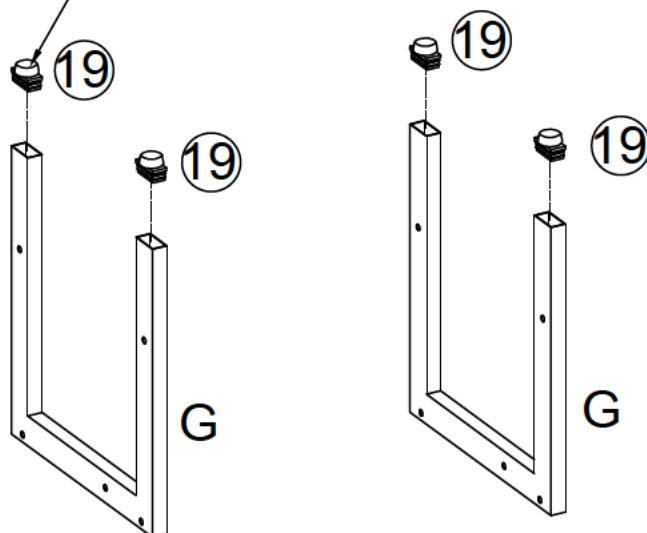


## STEP 14

1




x8

Keep the holes of the  
Part G ,Part H and Part I as shown

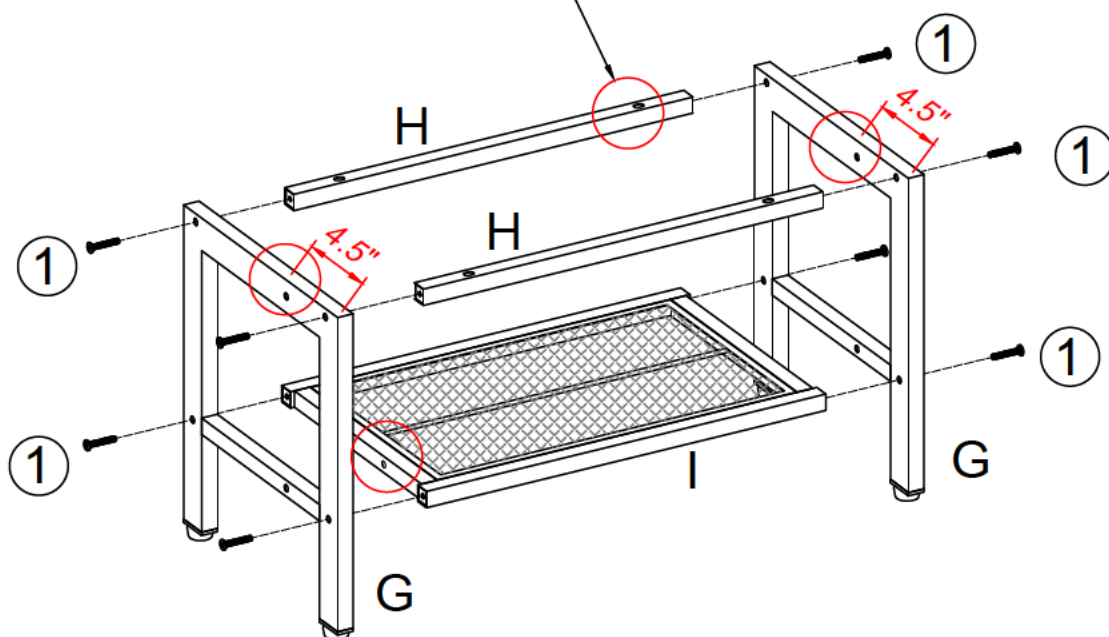

## STEP 15


1 x4

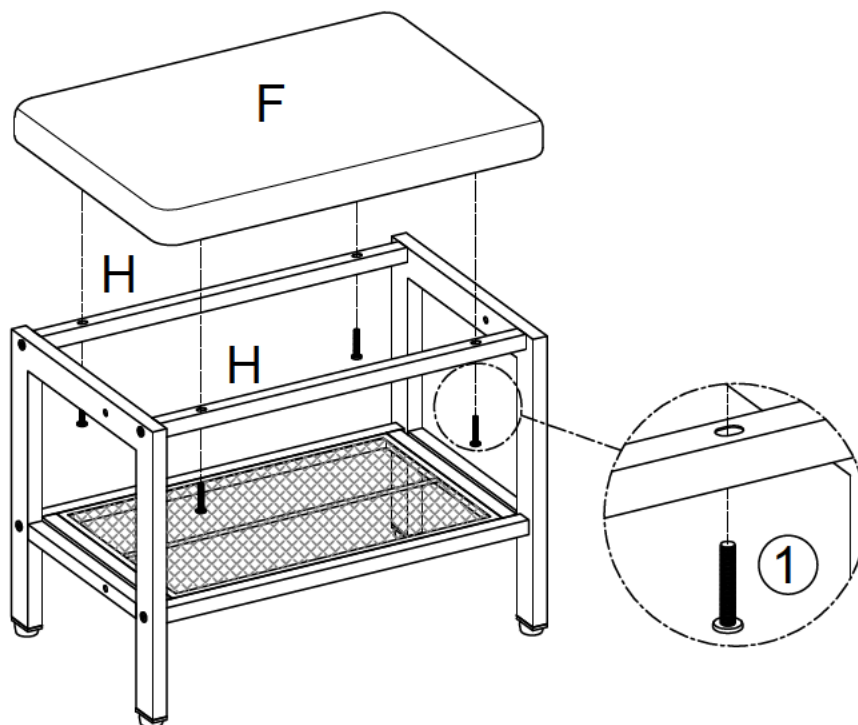

## STEP 16


*The installation steps are directional, please put all the parts in accordance to the direction of below image first, and then assemble step by step.*

18 x6

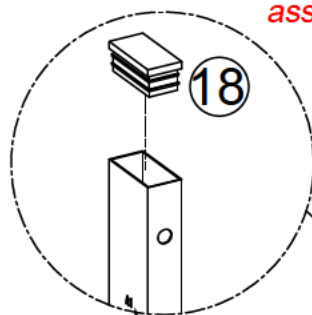

*Notice the number A1,B1,C1,C1,D1, E1 is in the top of up legs.*

*Please use a hammer or solid tools (not included) to knock the plastic pads into the frame.*

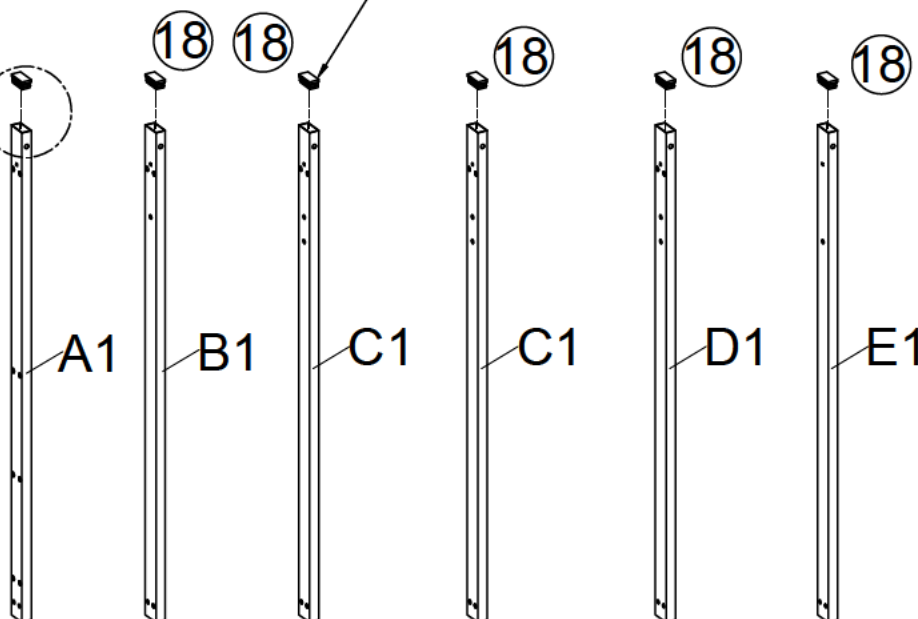


## STEP 17

19



x6

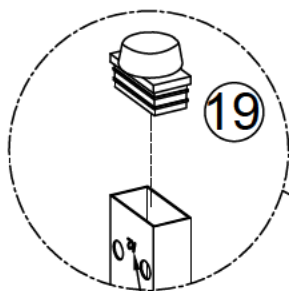

Notice the number  
A2,B2,C2,C2,D2,  
E2 is at the bottom  
of lower legs.

Please use a hammer or solid tools  
(not included) to knock the footpads  
into the frame.

19

19

19

19

19

A2

B2

C2

C2

D2

E2

## STEP 18

3






x16

16




x2

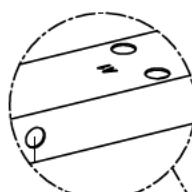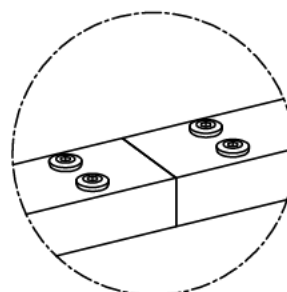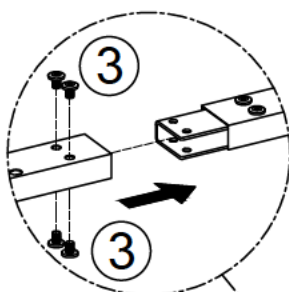

A1

A2


16

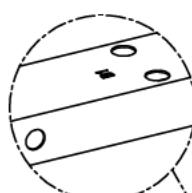

B1

B2


16

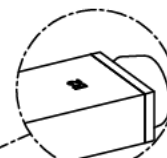

# STEP 19


③ x32

①⑥ x4

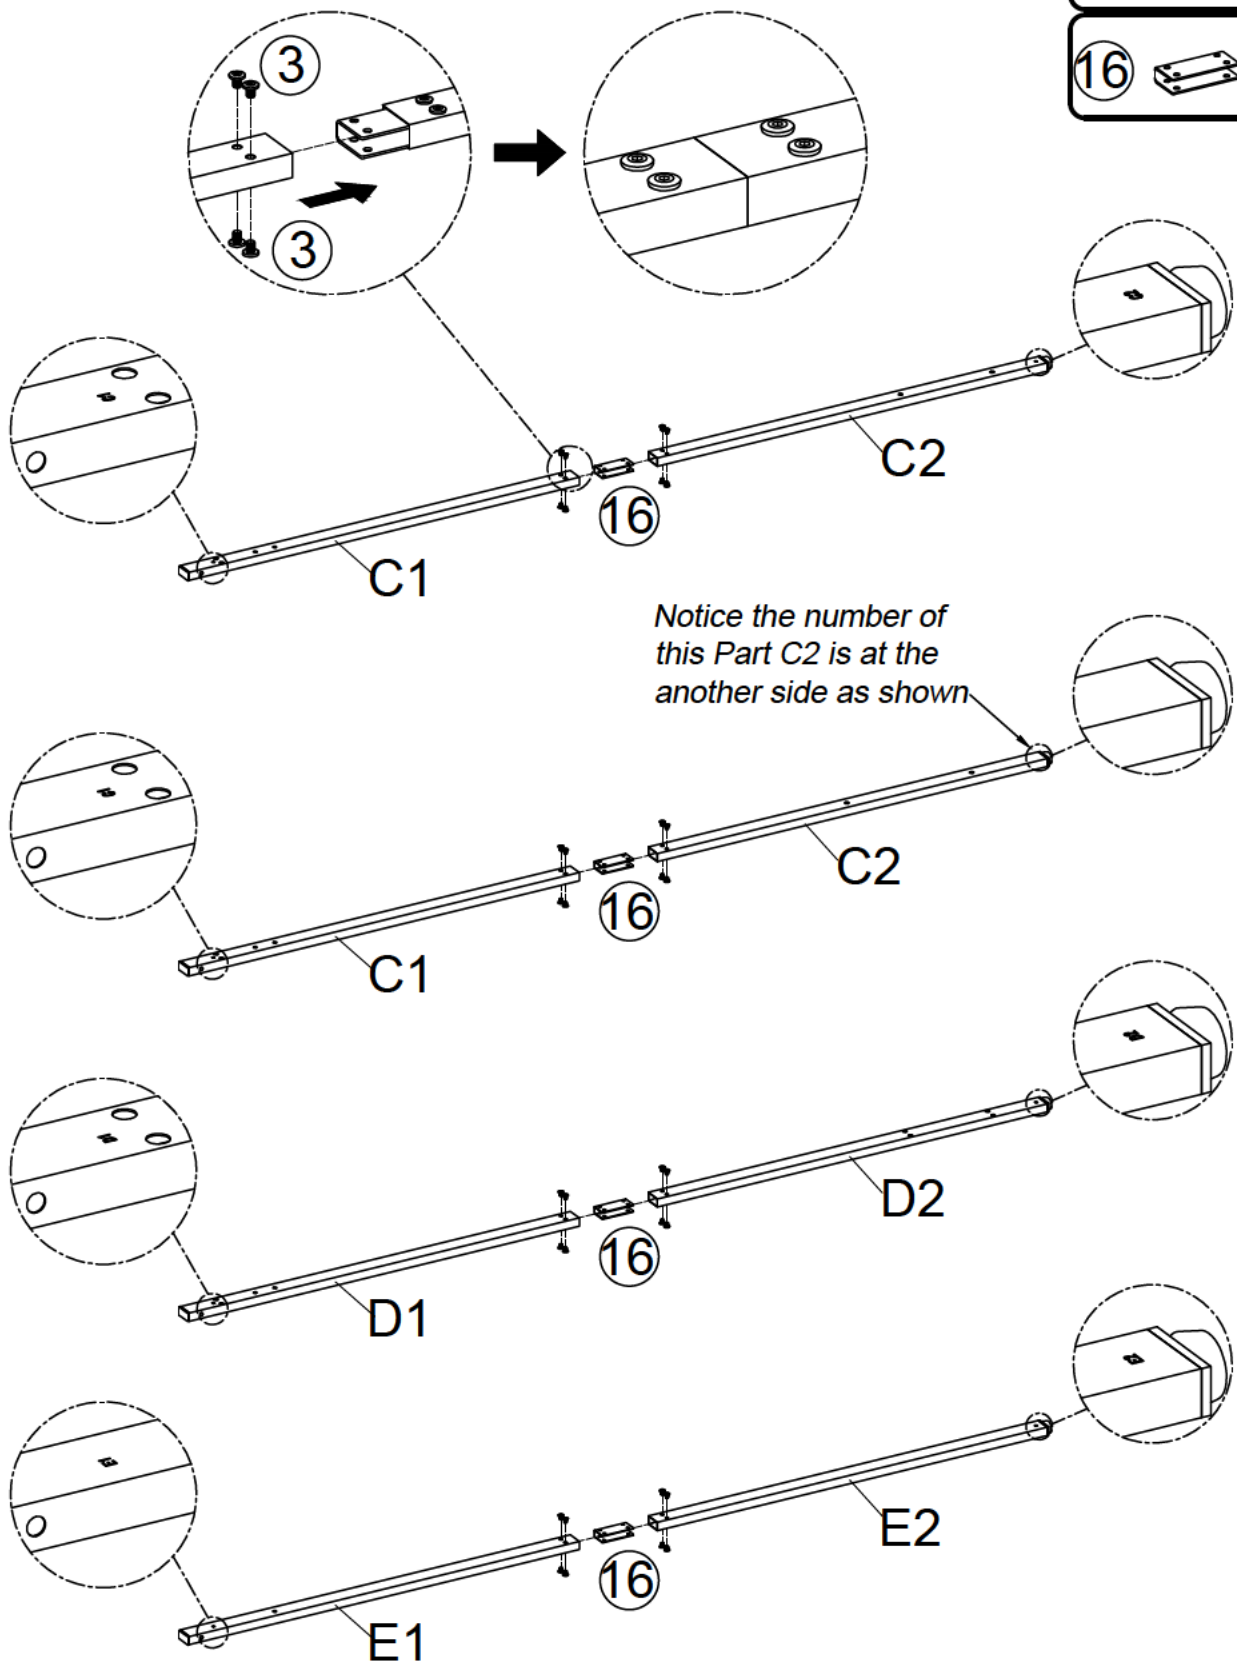


## STEP 20

8 x30

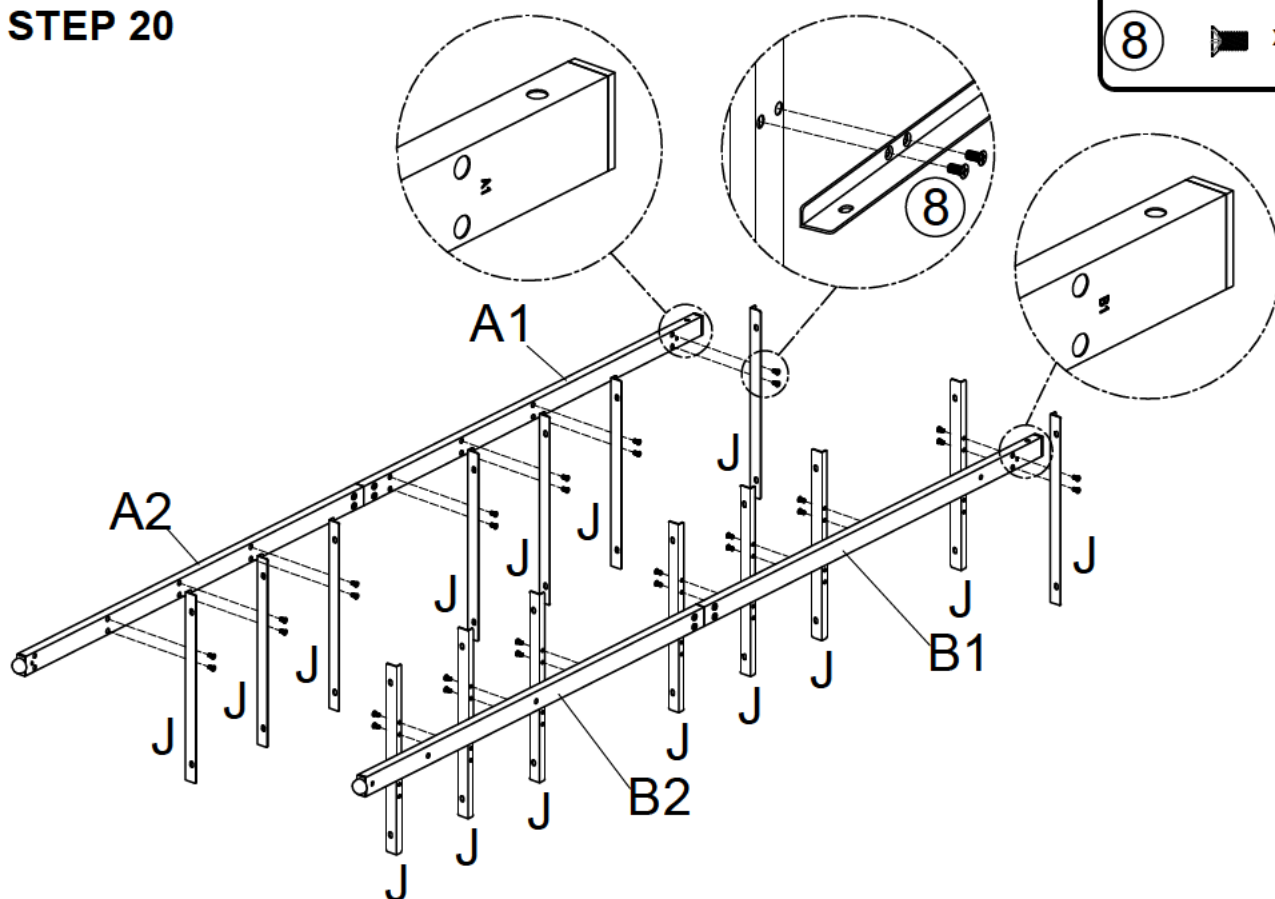


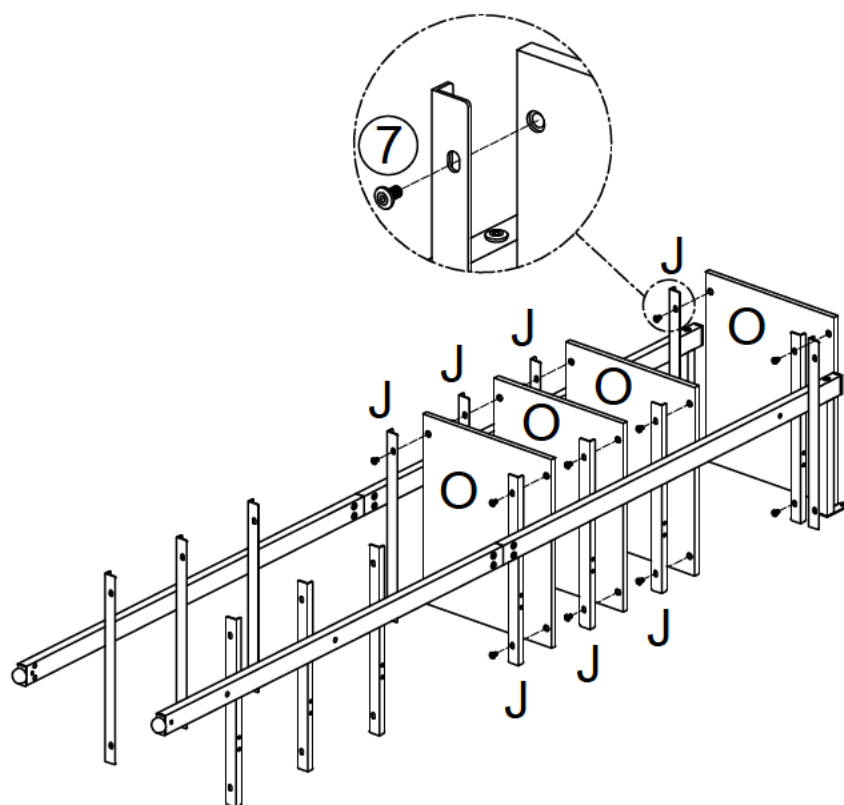
## STEP 21

25 x2

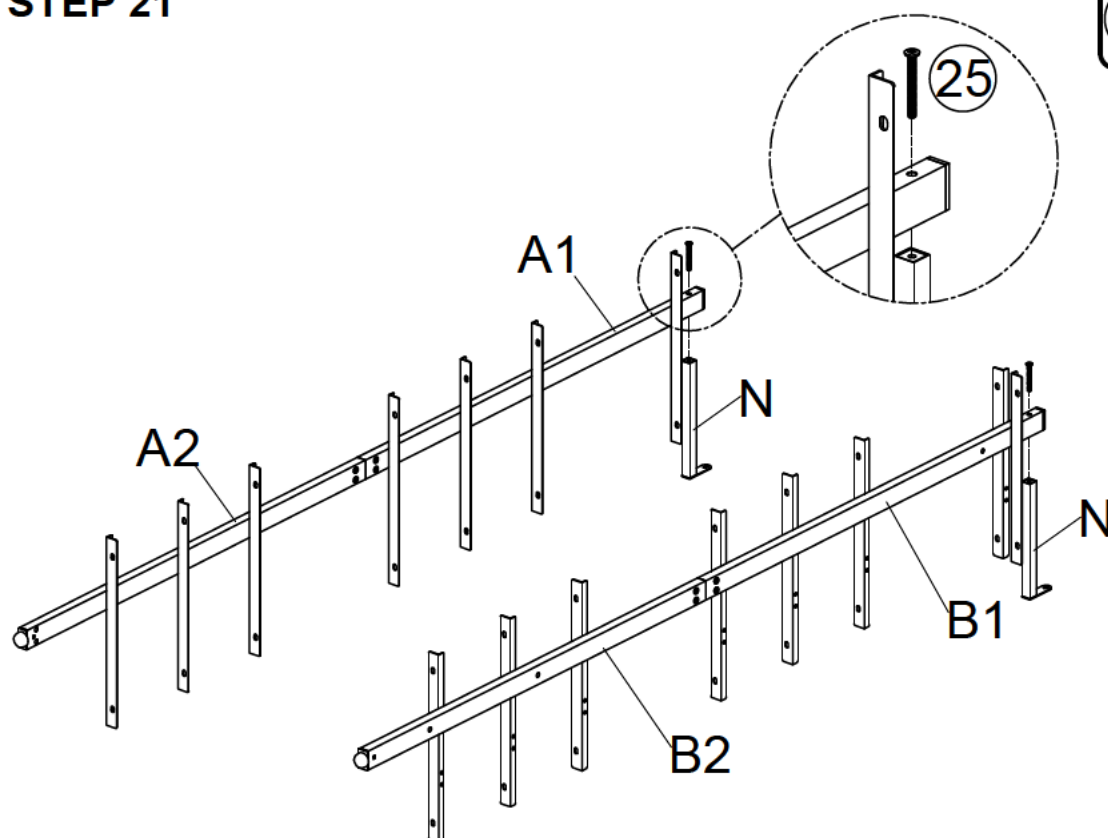


## STEP 22


7  x16




## STEP 23

1  x4


7  x12

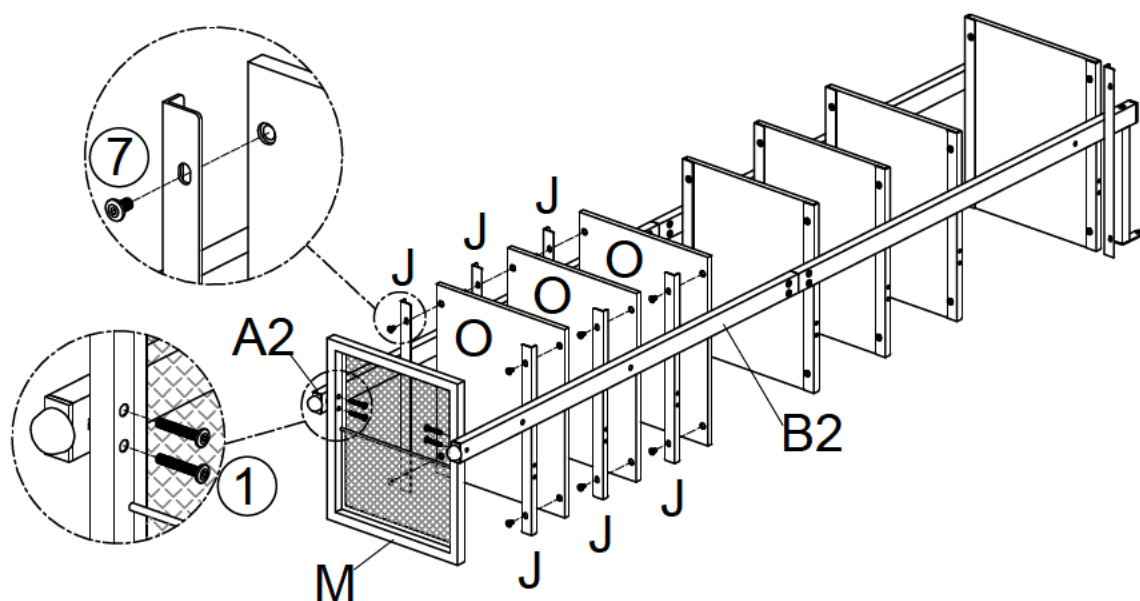

## STEP 24

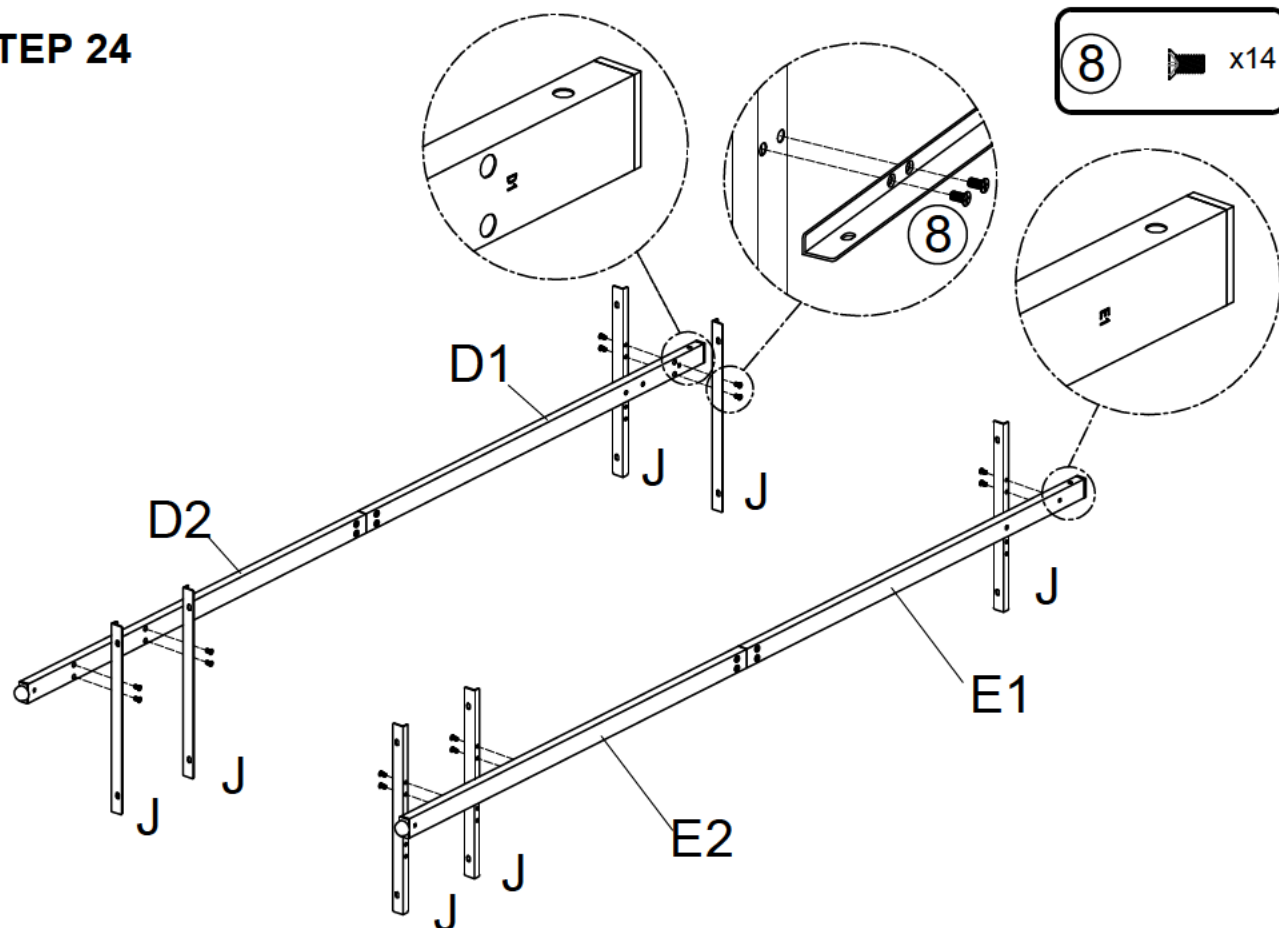


## STEP 25

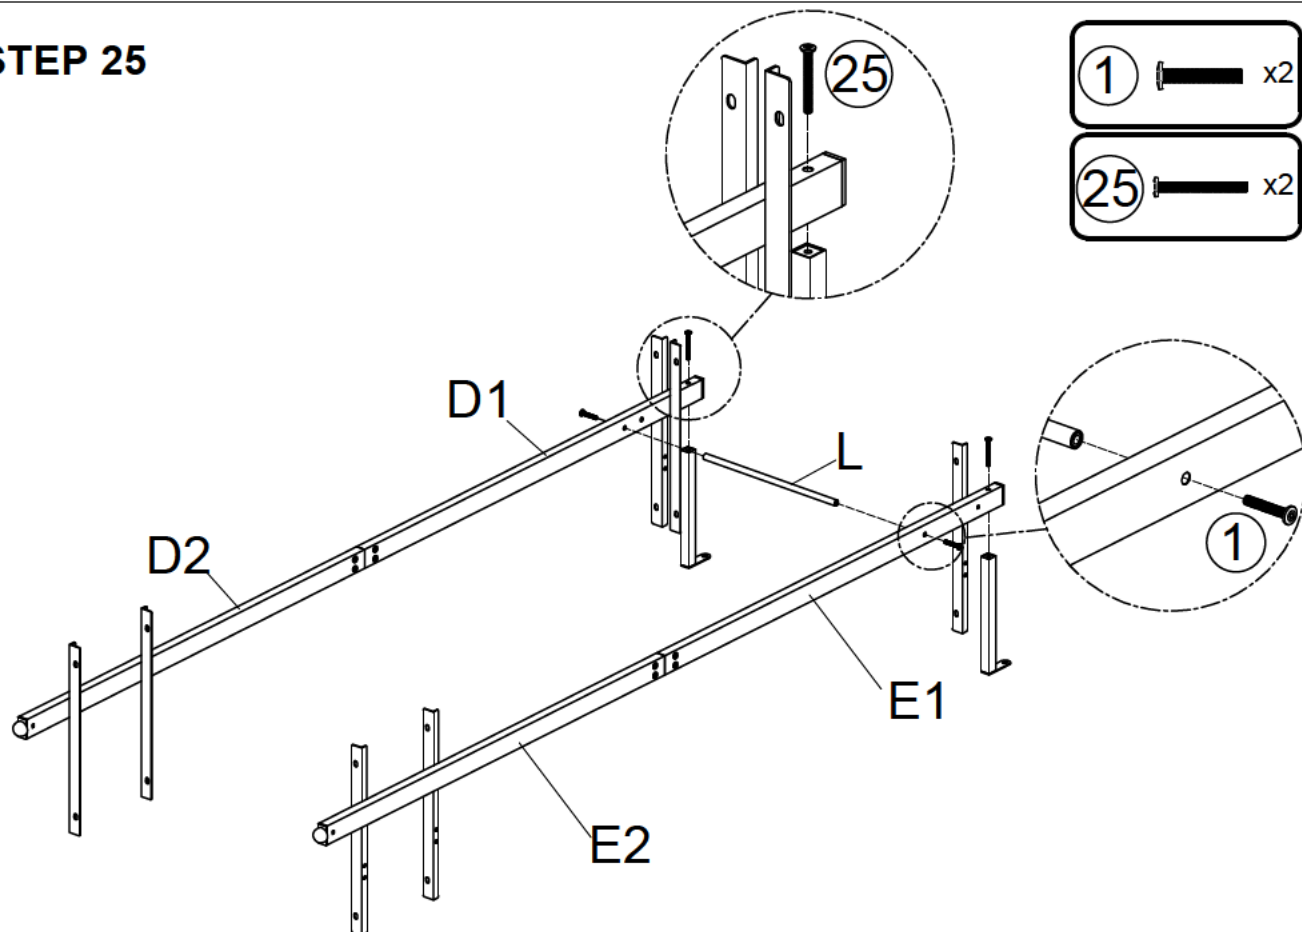


## STEP 26

7  x12

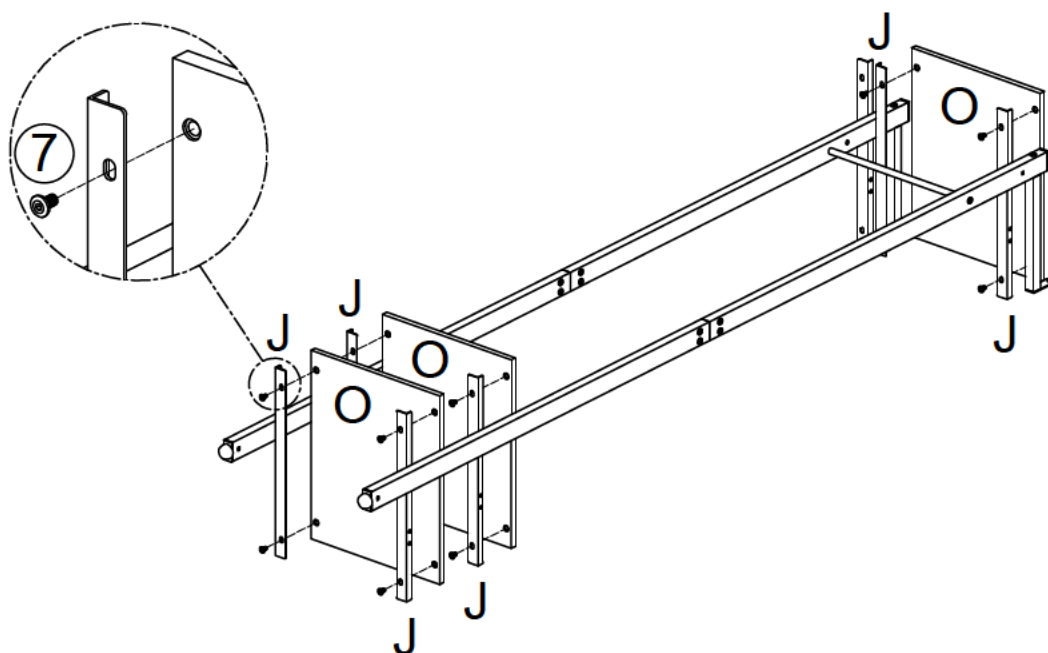


## STEP 27


8  x8

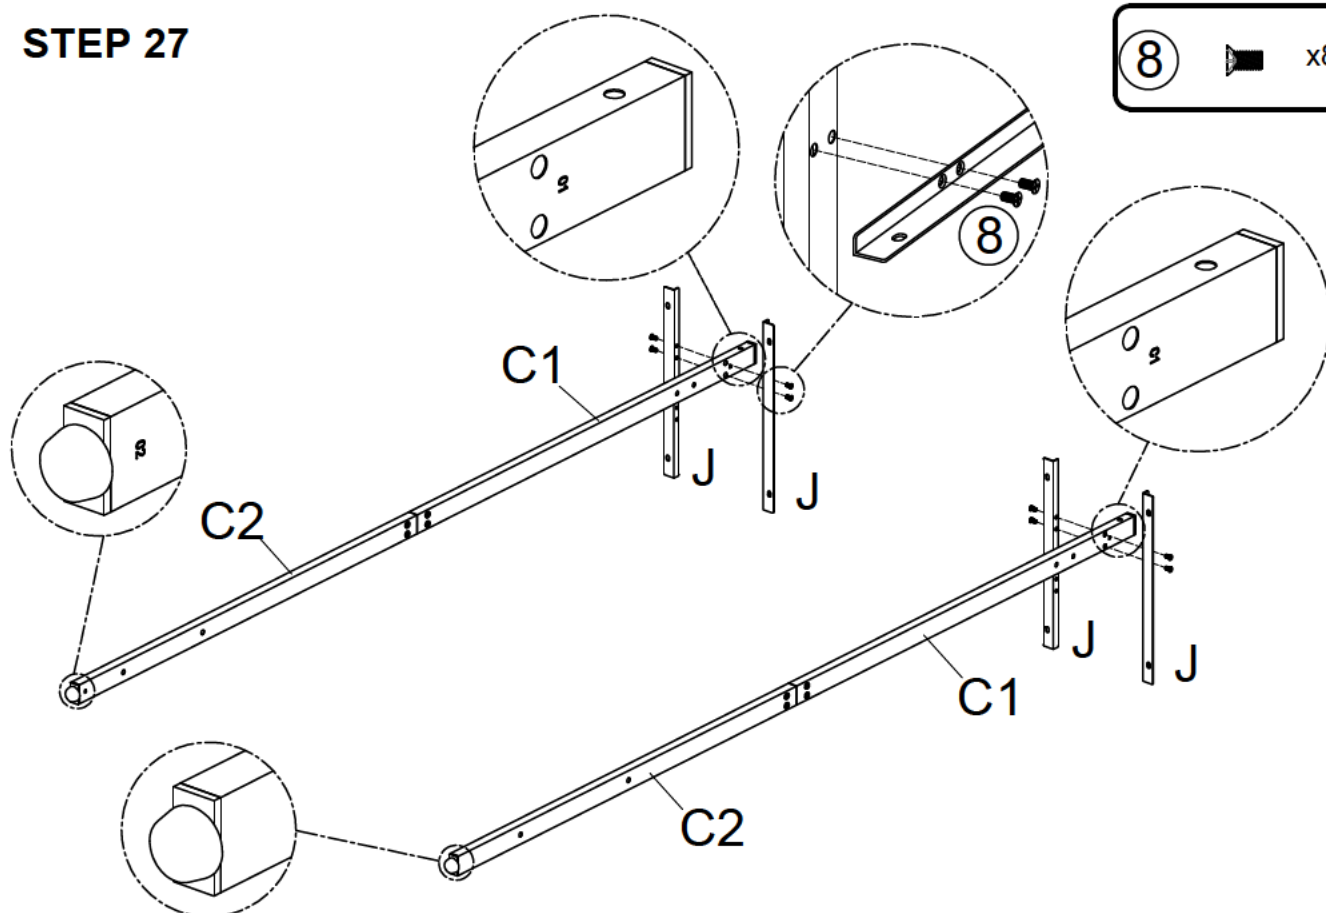



## STEP 28

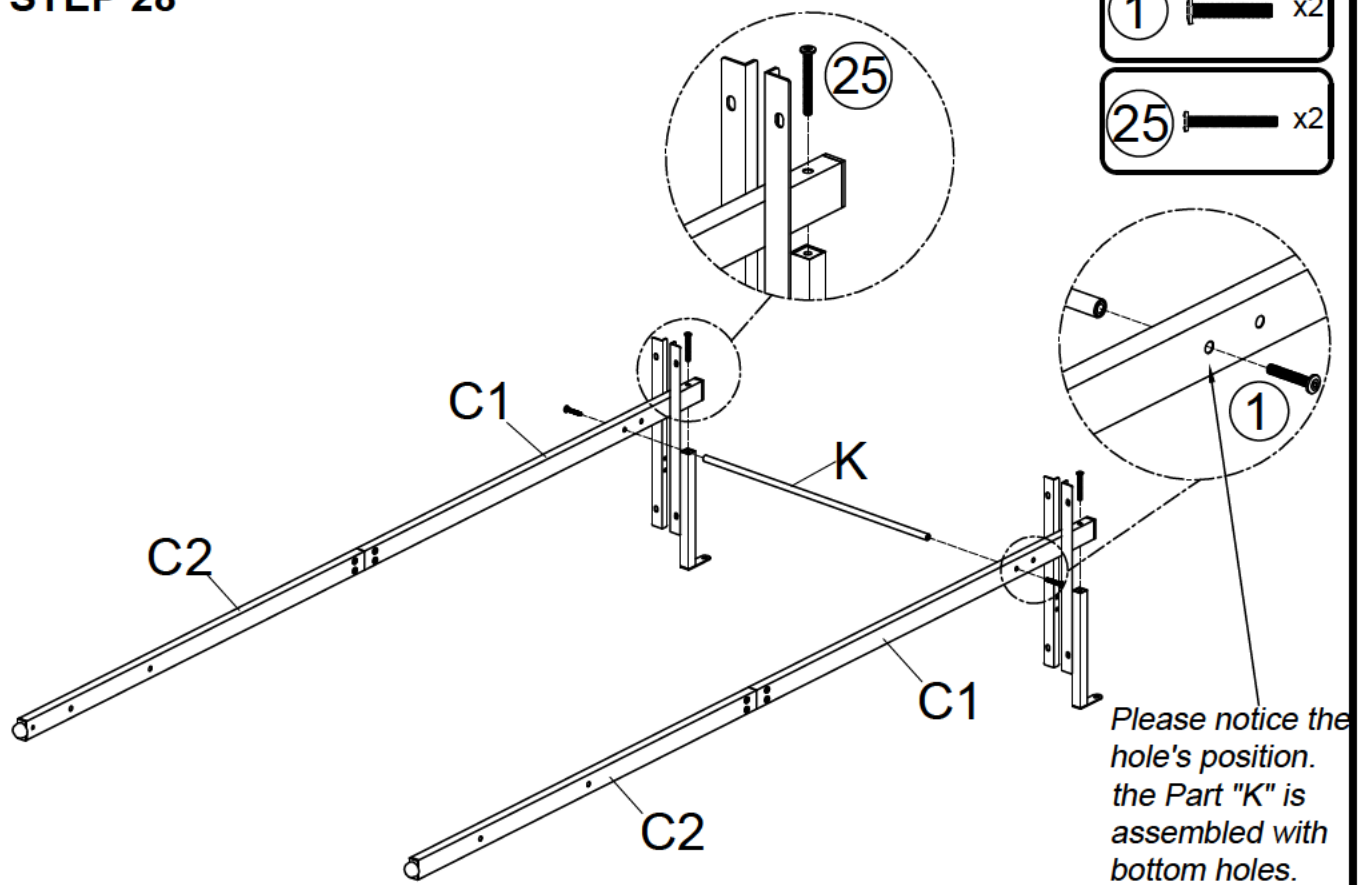

## STEP 29


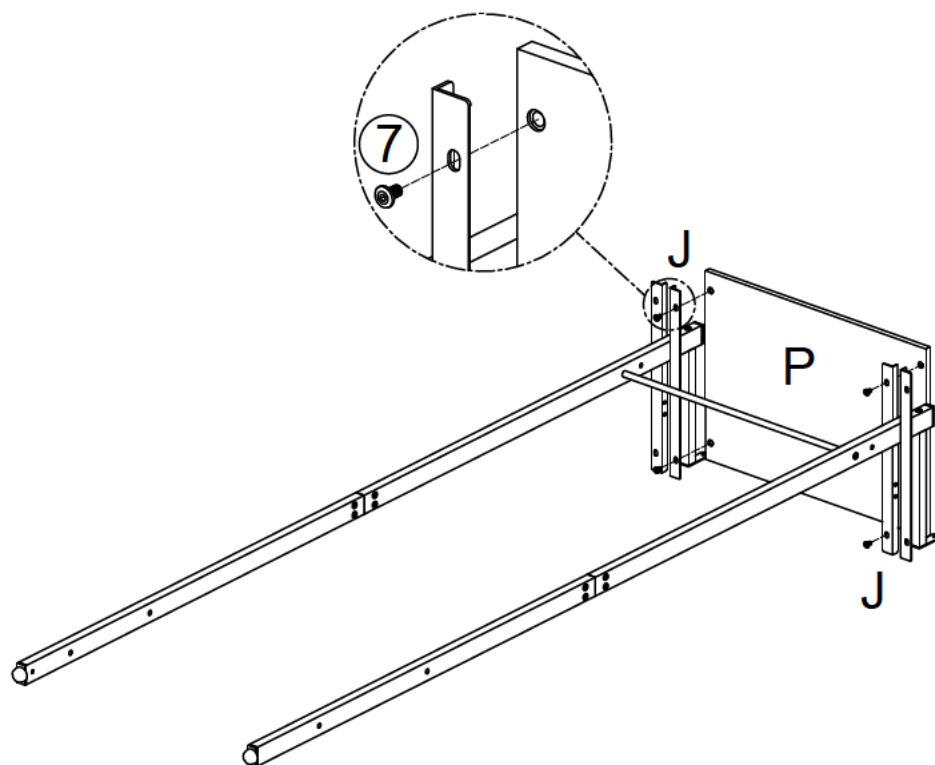


## STEP 30

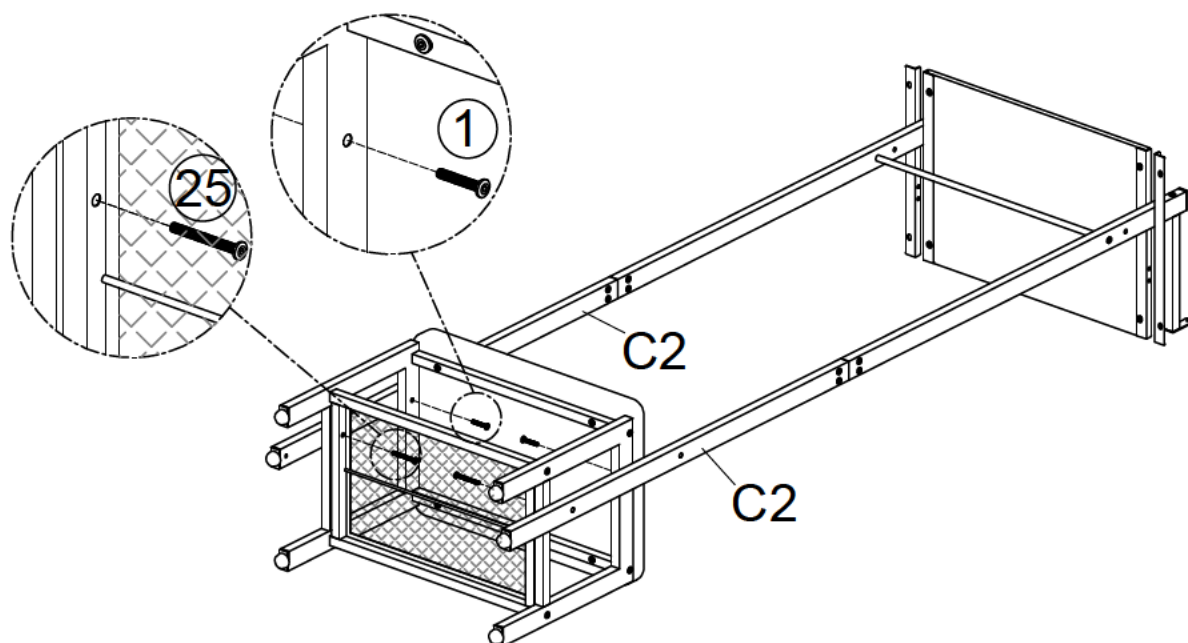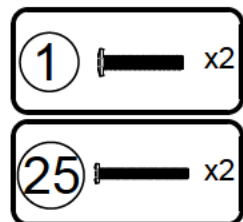


## STEP 31

*We recommend 2 person to assemble.*

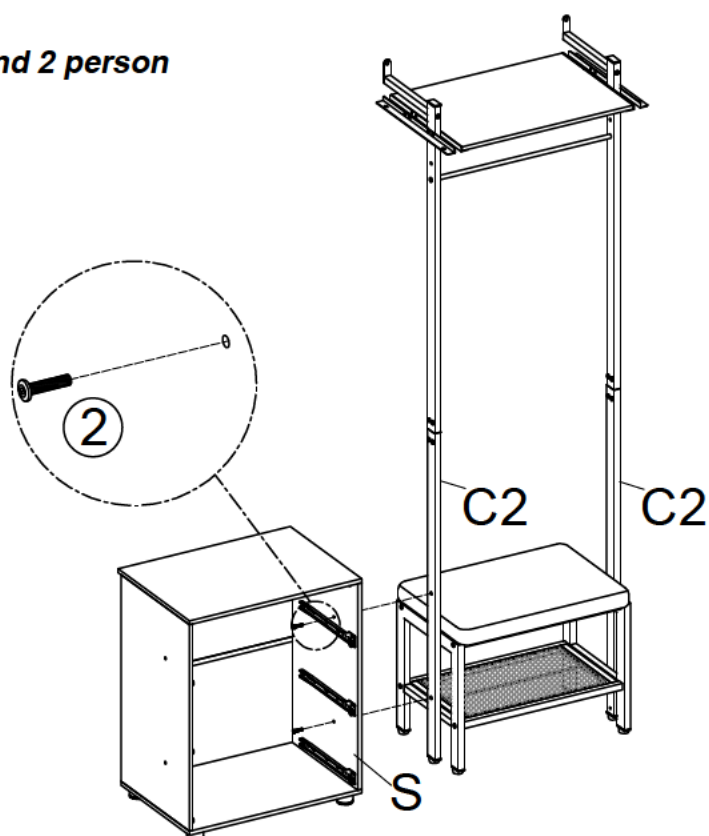

## STEP 32


*We recommend 2 person to assemble.*

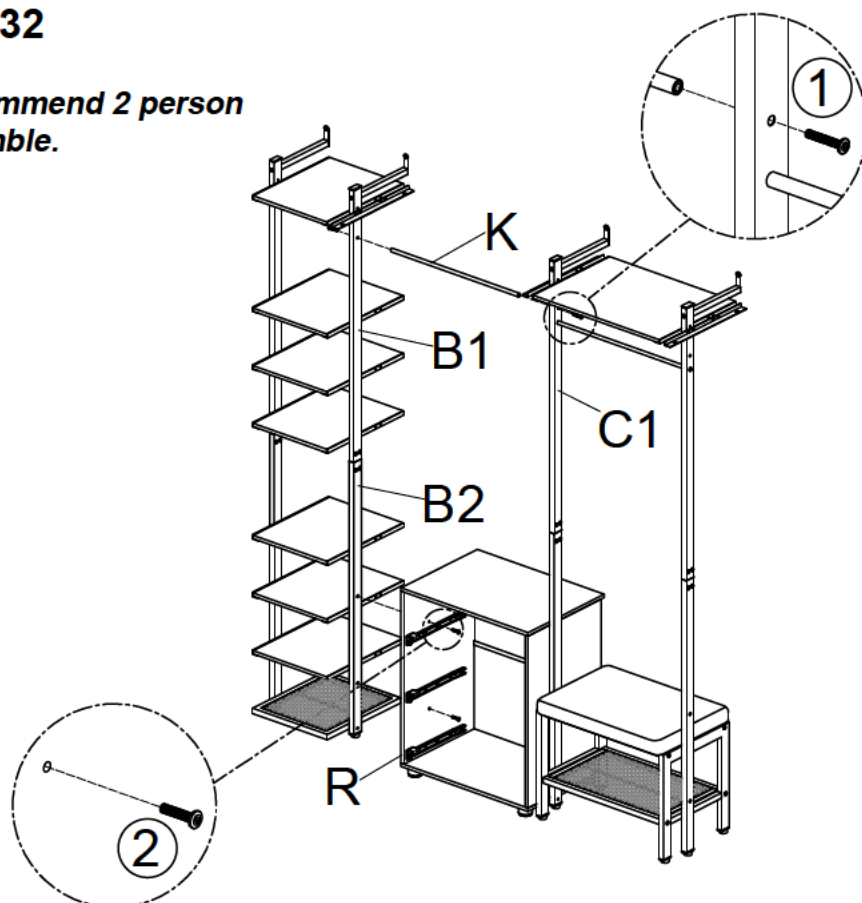

①  x2


②  x2


## STEP 33

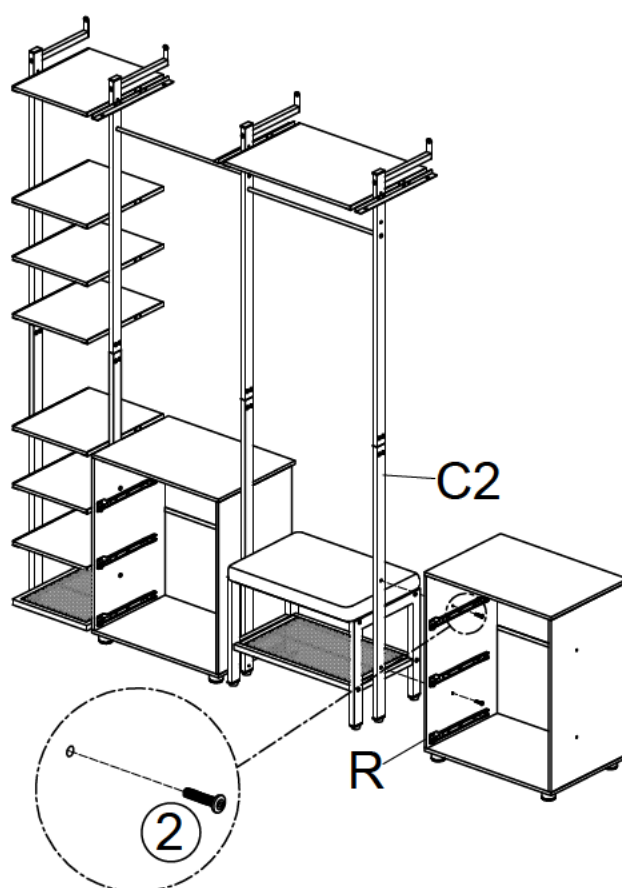


②  x2


## STEP 34

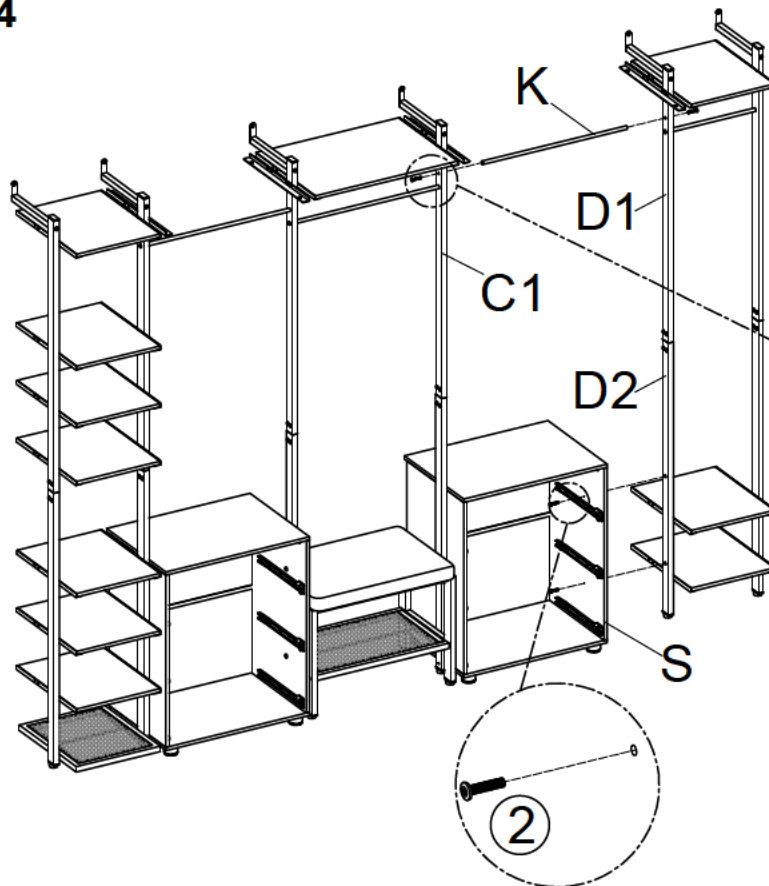


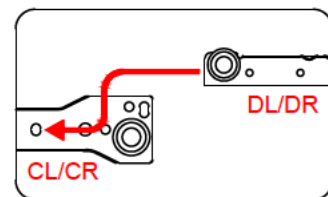
①  x2

②  x2

## STEP 35

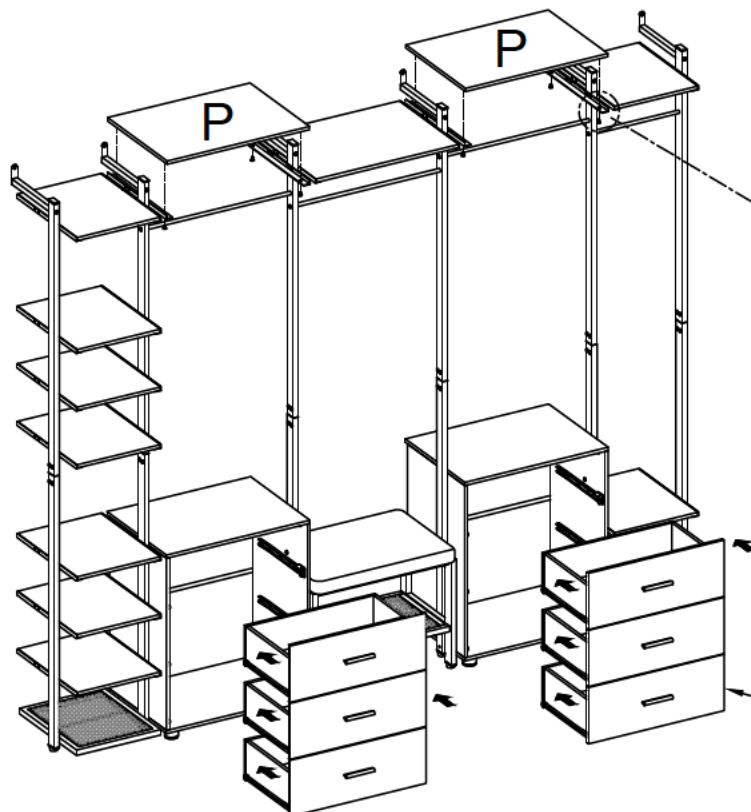

⑦  x8



Please put the wheels align with the slots as the instruction shows, then slide into them



## STEP 36



### TIPPING RESTRAINT HARDWARE

**Note:** We have included six Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

**Note:** You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

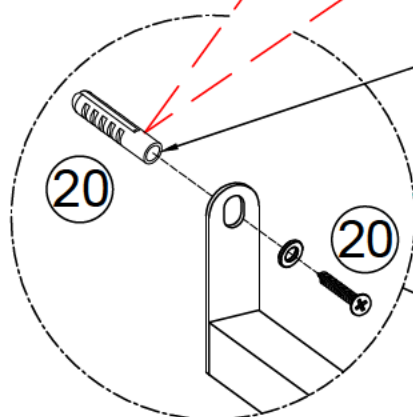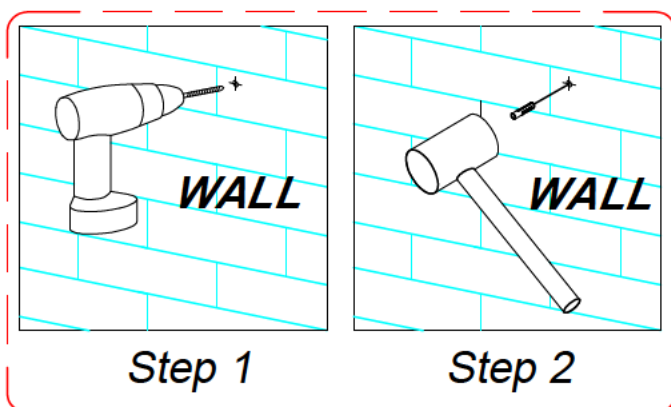

Tipping  
Restraint  
Hardware

