
## **Assembly Instructions**


Parts						
NO.	Picture	Description	Size	QTY		
A		Metal frame	70.5*78.4*8CM	2		
В		Metal tube	38.2*1.9*1.9CM	4		
С		Metal tube	38.2*1.9*1.9CM	3		
D		Metal shelf	24.5*38.2	1		
Е		Wood shelf	66.5*37.8*1.8CM	1		
F		Wood box	55.6*37.8*6CM	1		

## Hardware


NO.	Picture	Description	Size	QTY
G		Bolt	1/4*10MM	22
Н		Bolt	1/4*30MM	4
I		Allen Key	6ММ	1
J	Ô	Wheel	3"	4
L		Wrench		1

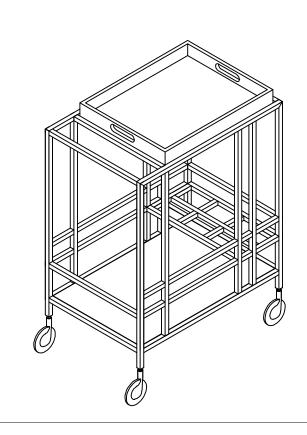

STEP:1. Connect metal frame (A) with metal tubes (B/C) through Bolts (G) as diagram shown and tighten them with allen wrench, then connect the metal shelf (D) onto the assemblied part with Bolts (H) and tighten with allen wrench.

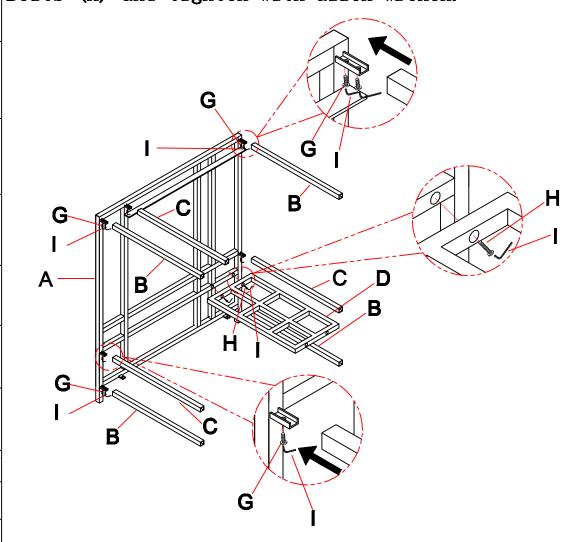

STEP:2. Repeat Step#1 to connect another Metal frame (A) with the assemblied unit as diagram shown.

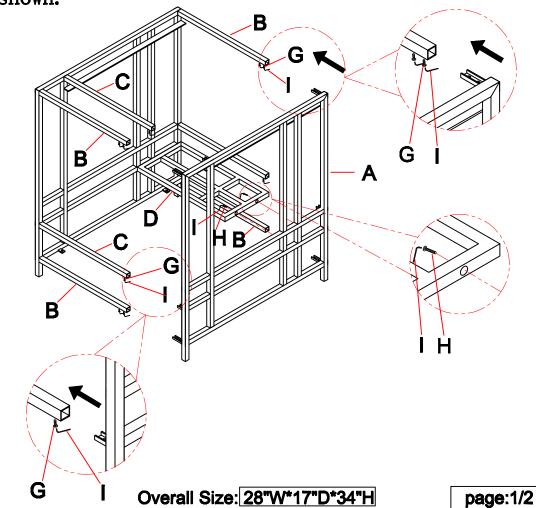


## **Assembly Instructions**


Parts					
NO.	Picture	Description	Size	QTY	
A		Metal frame	70.5*78.4*8CM	2	
В		Metal tube	38.2*1.9*1.9CM	4	
С		Metal tube	38.2*1.9*1.9CM	3	
D		Metal shelf	24.5*38.2	1	
E		Wood shelf	66.5*37.8*1.8CM	1	
F		Wood box	55.6*37.8*6CM	1	

Hardware	Н	a	rd	W	ıa	re
----------	---	---	----	---	----	----

NO.	Picture	Description	Size	QTY
O		Bolt	1/4*10MM	22
Н		Bolt	1/4*30MM	4
I		Allen Key	6ММ	1
J	Ö	Wheel	3"	4
L	£	Wrench		1

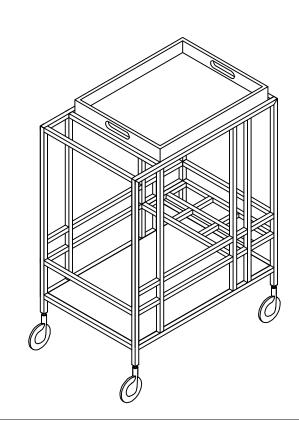

STEP:3. Lay down the assemblied unit on a clean and soft surface, then insert the Wheel(J) into the bottom of legs as diagram shown, and tighten them with wrench (L).

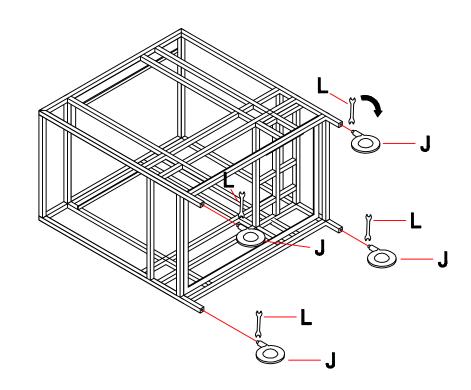

STEP:4. Put the assemblied unit in upright position, then pu the wood tray (F) on the top and the wood shelf (E) on the center as diagram shown.

