



7 Drawer Dresser Installation Instructions

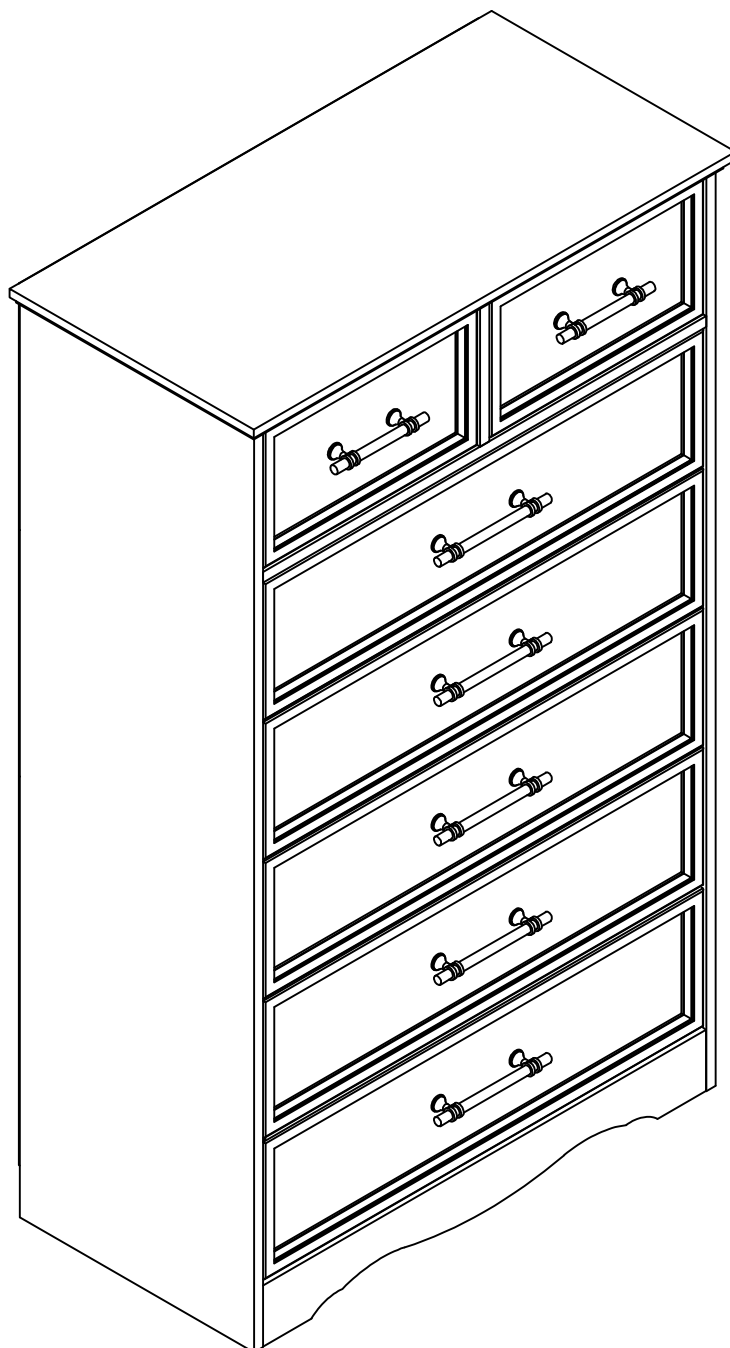

PACKAGE INCLUDE








KEEP THE NUMBER STICKERS ON panel UNTIL FINISHED ASSEMBLING!

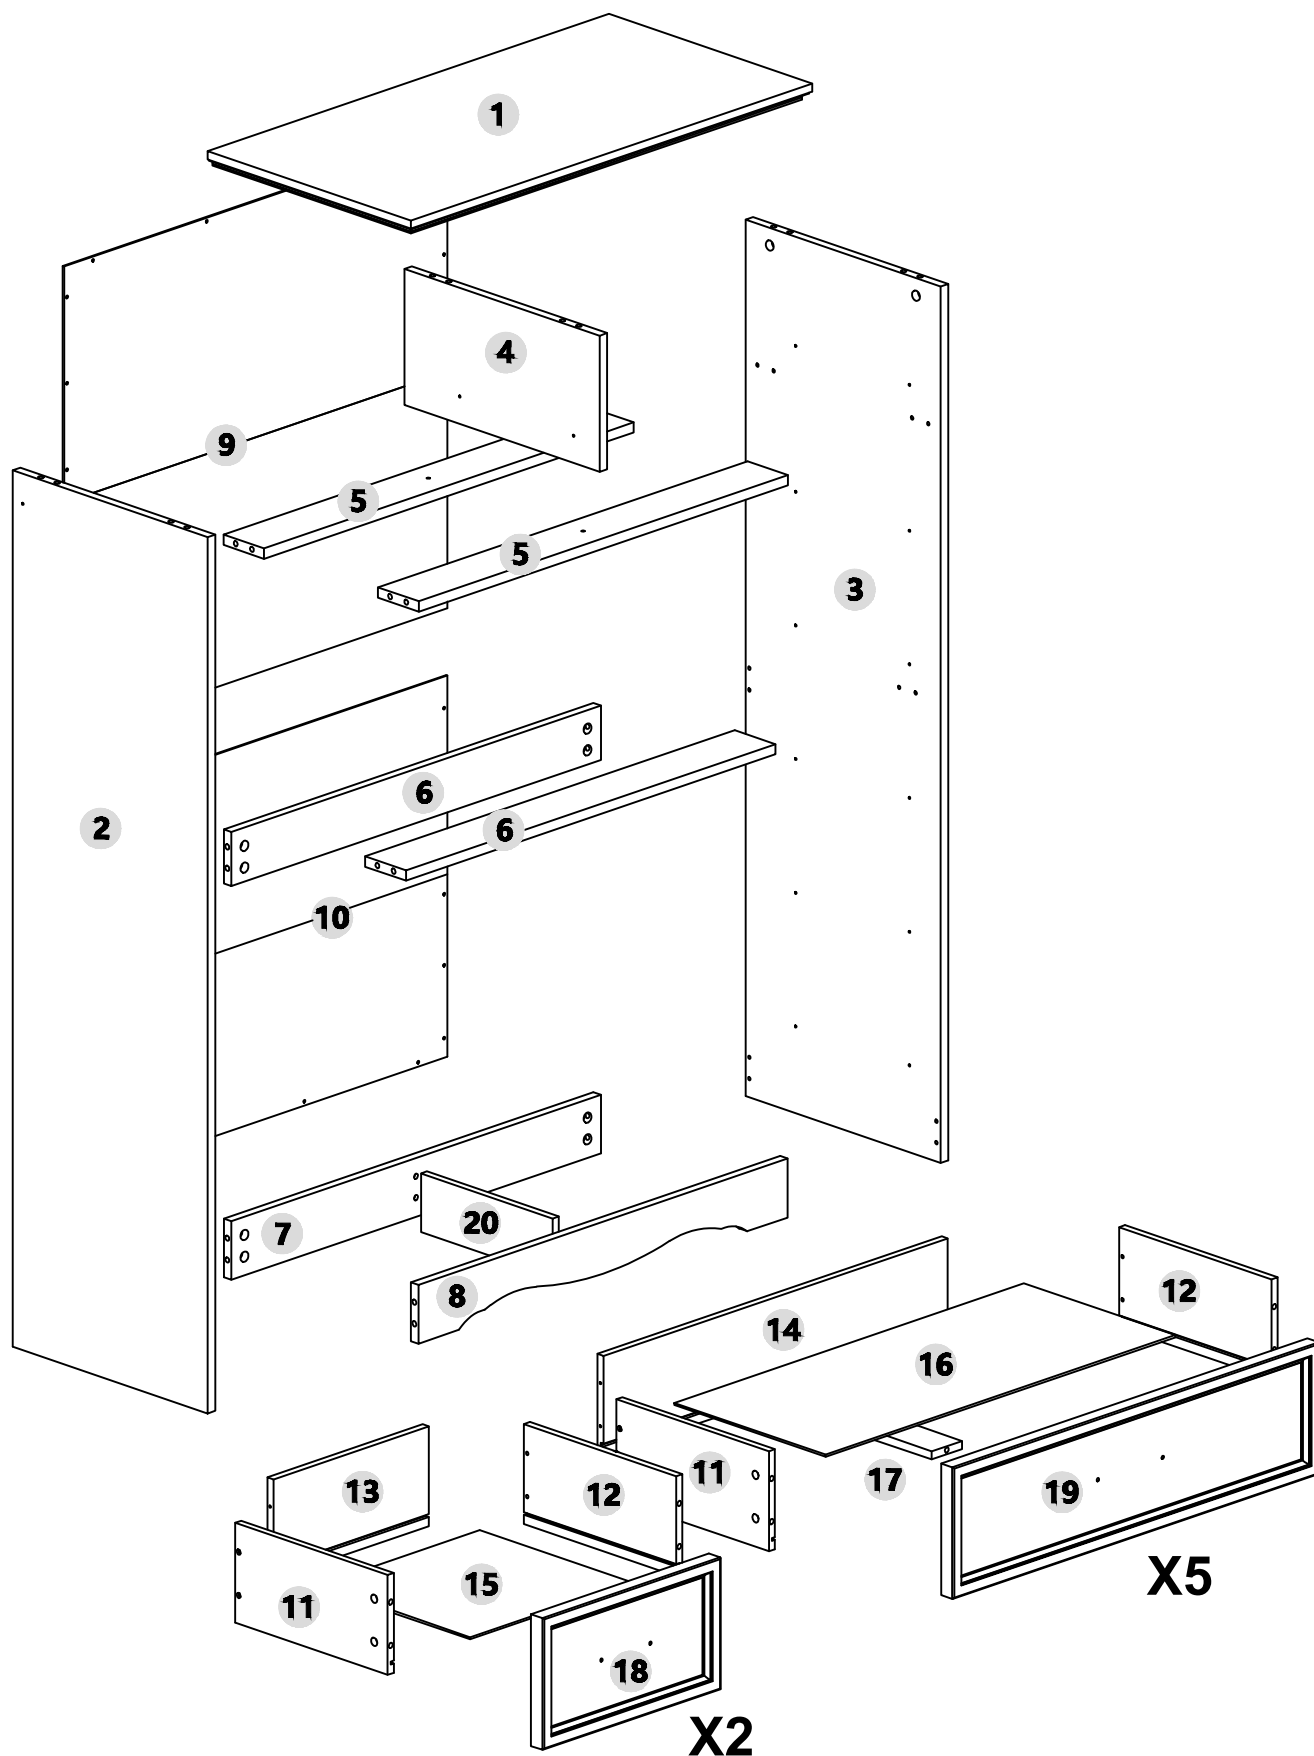


PART IDENTIFICATION

CODE	DESCRIPTION	QTY
1	Top panel	1
2	Left side panel	1
3	Right side panel	1
4	Upper middle partition panel	1
5	Upper drawbar	2
6	Lower drawbar	2
7	Back bottom panel	1
8	Front bottom panel	1
9	Top back panel	1
10	Bottom back panel	1
11	Drawer left side panel	7
12	Drawer Right side panel	7
13	Short Drawer tail plate	2
14	Long Drawer tail plate	5
15	Bottom panel of drawer	2
16	Bottom panel of drawer	5
17	Bottom drawbar of drawer	5
18	front panel of upper drawer	2
19	front panel of Lower drawer	5
20	middle bottom panel	1


PACKAGE CONTENTS

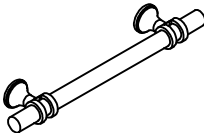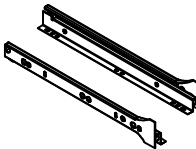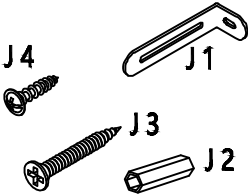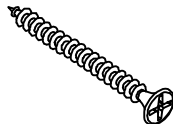M6x34MM  A 65x+5	Ø15x9MM  B 65x+5	Ø8x30MM  C 6x+2	128MM  D 5x
Ø3.5x35MM  E 38x+4	Ø3.5x12MM  F 84x+6	Ø3.5x14MM  G 36x+4	12"  H 7x
Ø4x18MM  I 14x+1	 J 2x	96MM  K 2x	Ø4*40MM  L 2x


How do we finish the installation of the cam lock system?

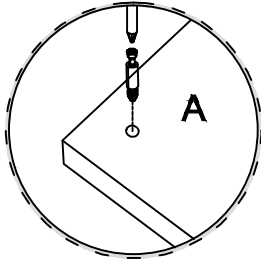


1. Screw a cam bolt A into the panel

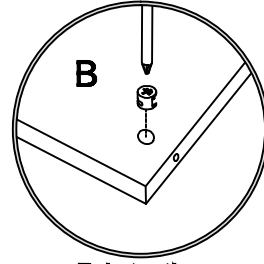


2. Push a cam B into the panel, make sure the arrow feature on the cam B points to the panel edge

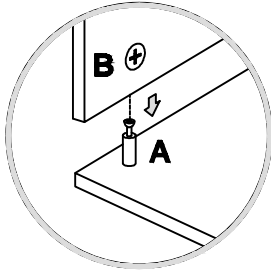

3. Align cam bolt(s) A with cam(s) B and then insert cam bolt(s) A into cross-bored hole(s) completely




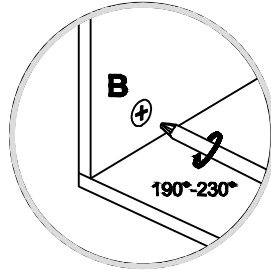


4. Rotate cam(s) B clockwise 190°-230° to lock 2 panels together

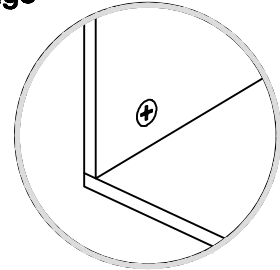


5. 2 panels should be tight against with each other and the connection should be rigid

Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

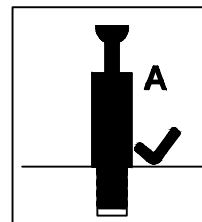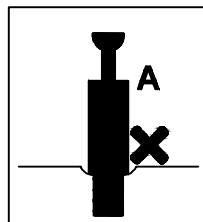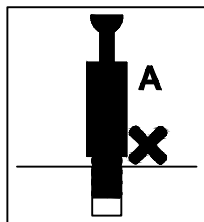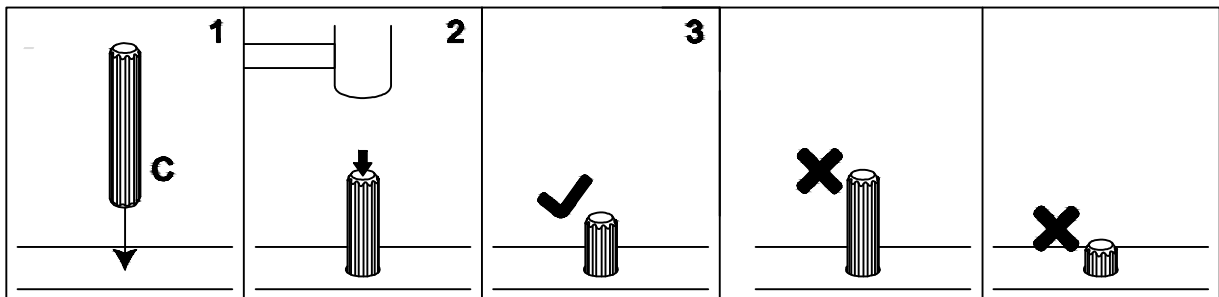


Ready to assemble the dresser


Before installation, observe each structure of the drawer dresser. The drawer dresser consists of two main parts. You will assemble the chest first, and then install the three small drawers and four larger drawers. We should keep all track slides on the dresser body in one direction like the below finished look.

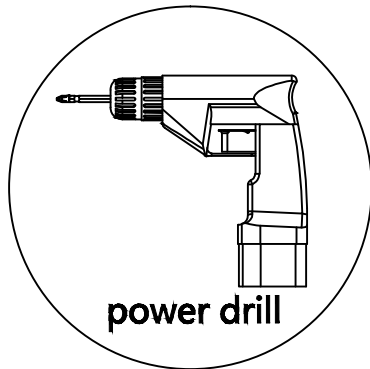

We recommend using a power drill to assemble.

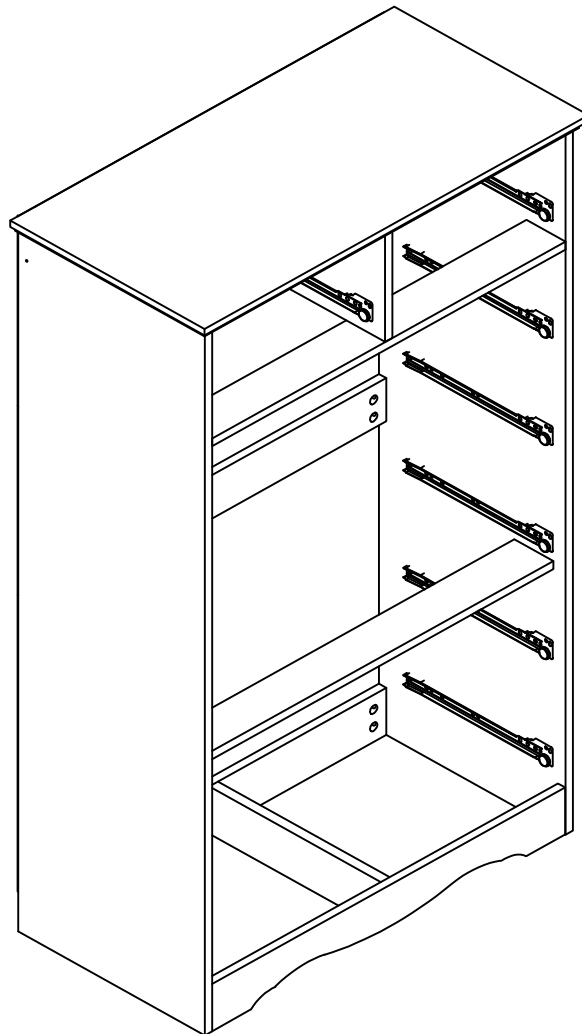

STEP 1-1


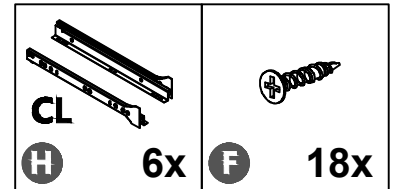


-Install the drawer slide (H) on the left side panel (2). The tracks are marked with the CL symbol. We have 6 X (H) and one lot (H) has a CL track.


Lot (H) has a CL track. So we need to open up 6 batches (H) to get 6 CL tracks.

-Tighten the track sliders with the screws (F) as shown below. Make sure the roller end of the track slider is facing up.

Make sure the 2 large pre-drilled holes are on the upside.

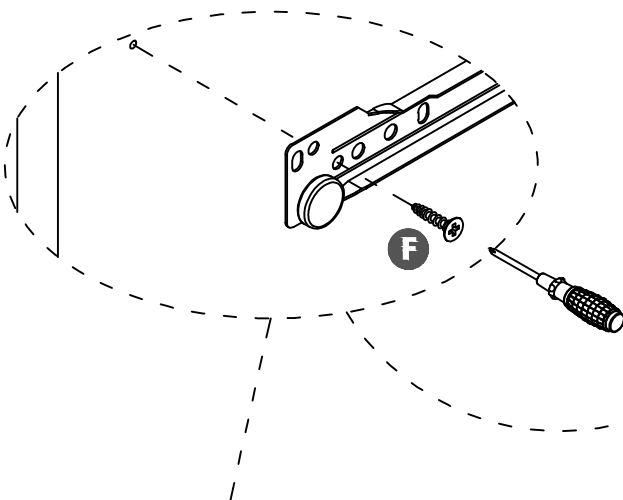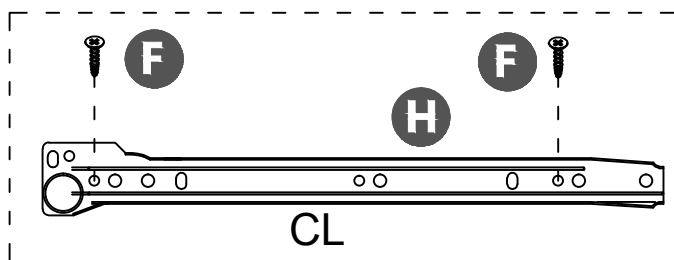

(F) should be locked in the first hole against the pulley

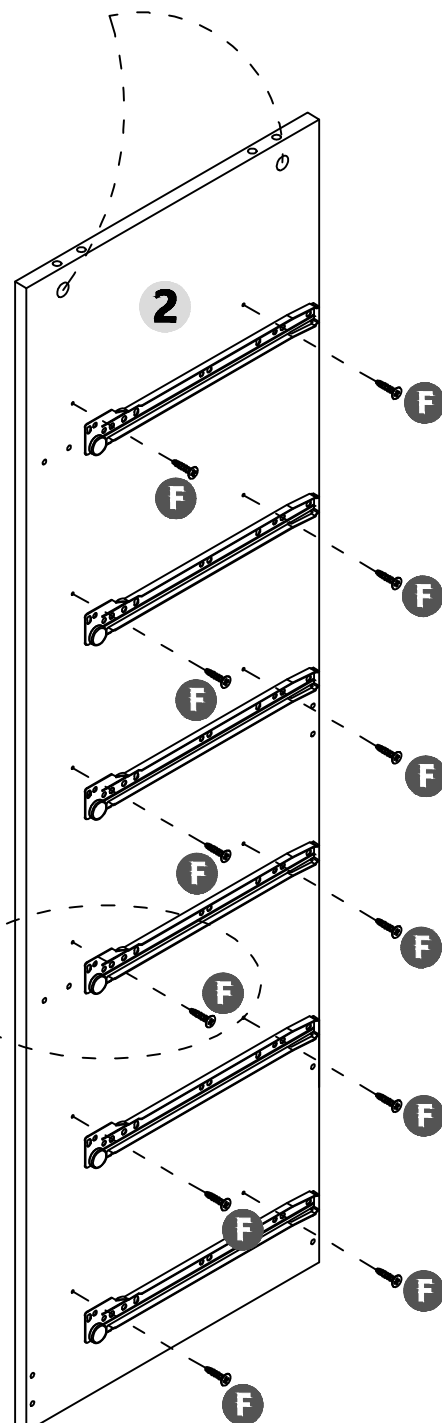


STEP 1-2

-Attach (A) to (2) as below shown




A

12X

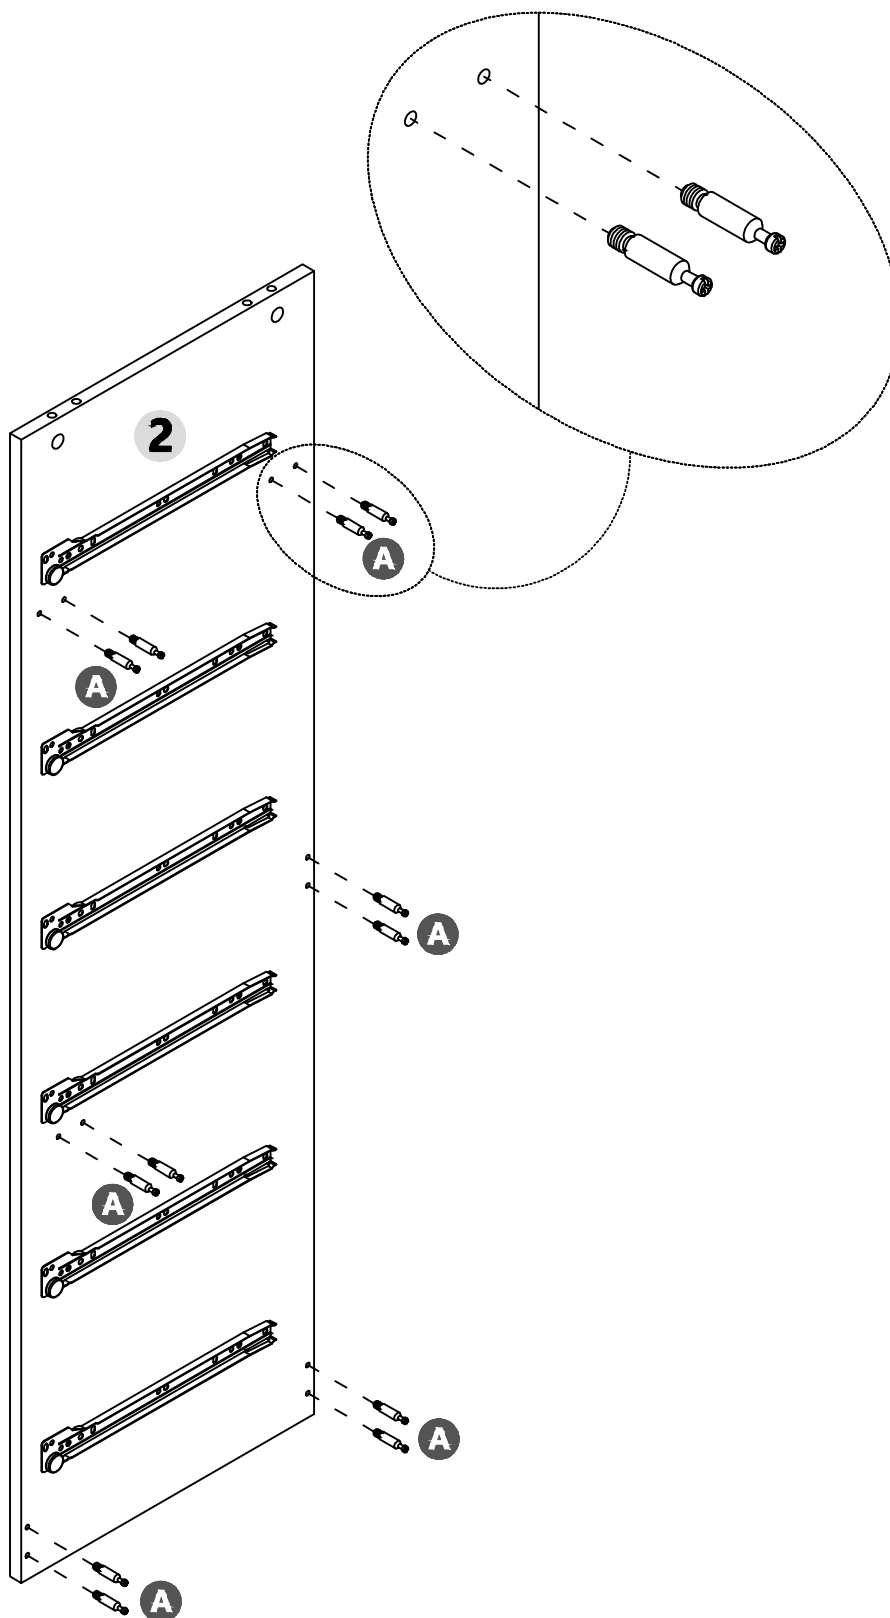


STEP 2-1

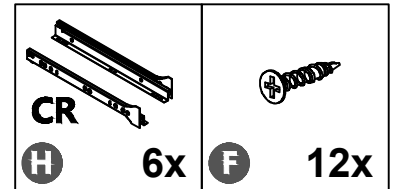



- Install the drawer slide (H) on the left side panel (3). The tracks are marked with the CR symbol. We have 6 X (H) and one lot (H) has a CR track.
- Lot (H) has a CR track. So we need to open up 6 batches (H) to get 6 CR tracks.
- Tighten the track sliders with the screws (F) as shown below.
- Make sure the roller end of the track slider is facing up.

Make sure the 2 large pre-drilled holes are on the upside.

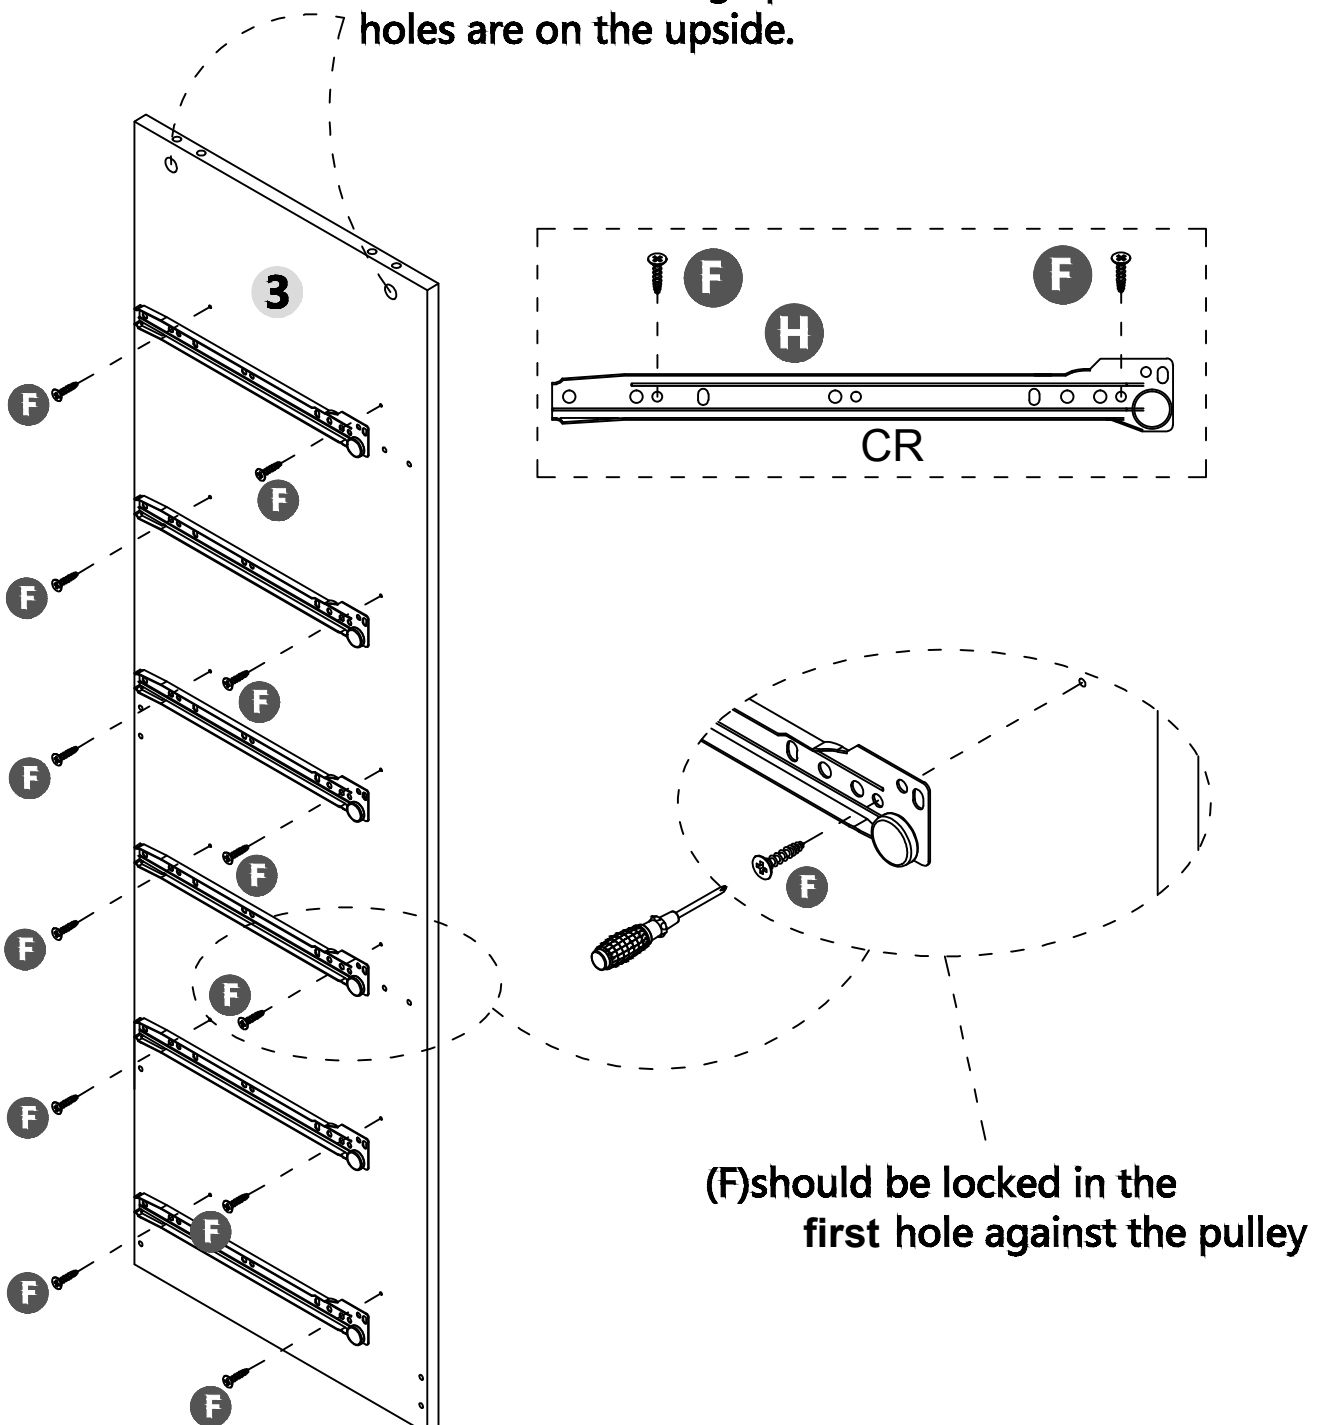


STEP 2-2



-Attach (A) to (3) as below shown

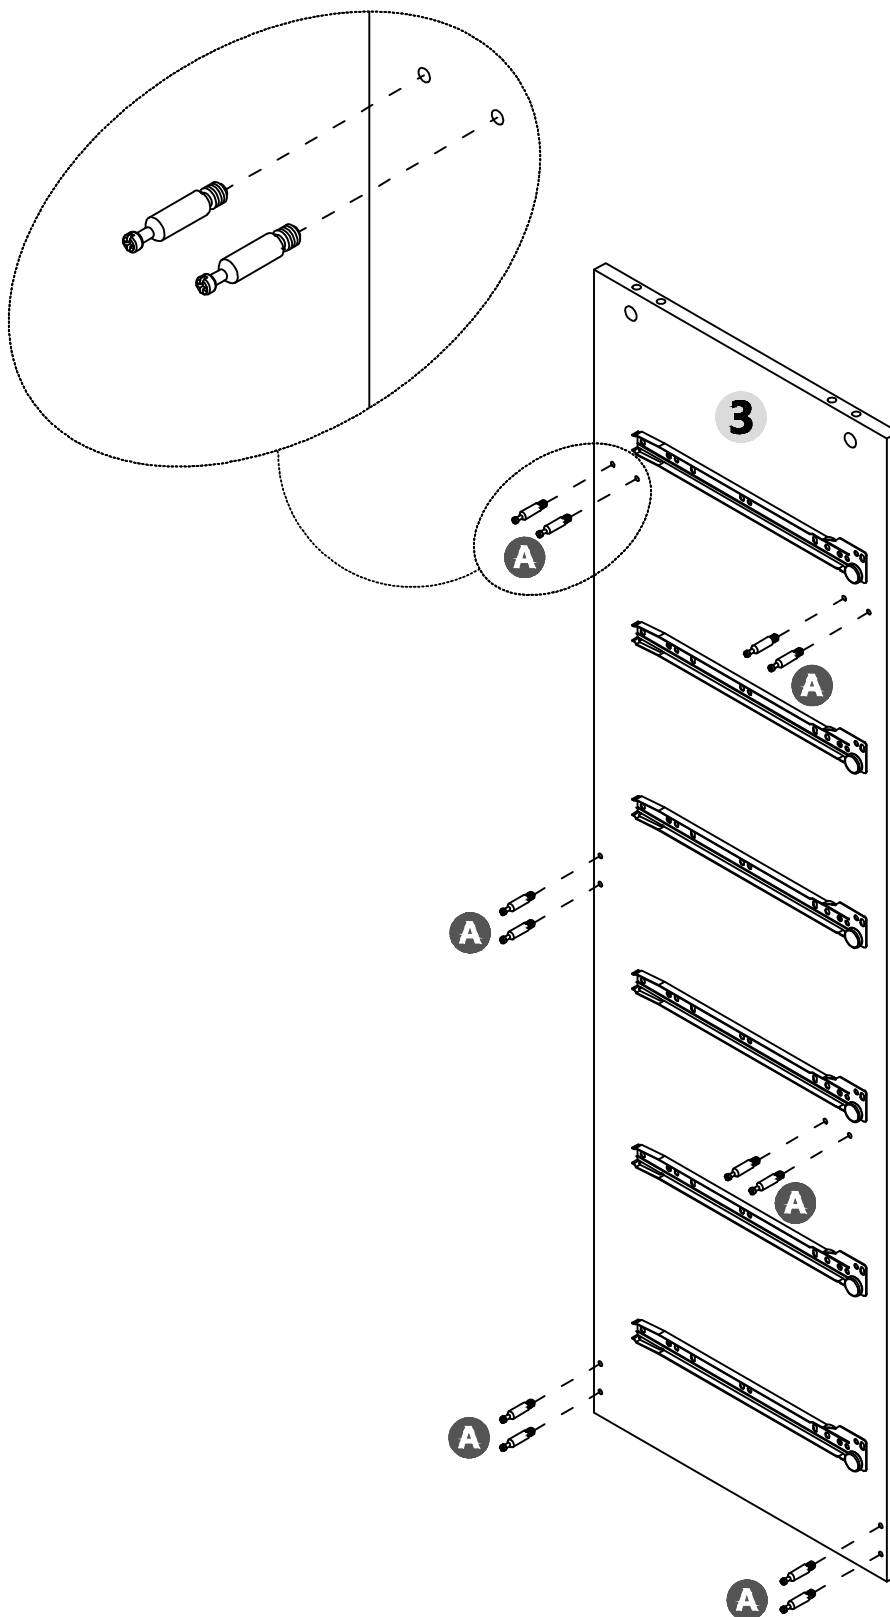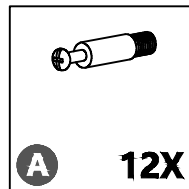

STEP 3-1


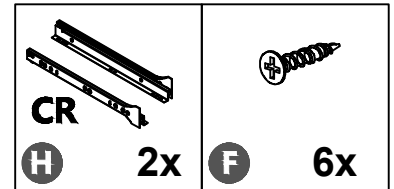


- Install the drawer slides(H) on the left side of upper middle partition panel(4).
- There is a CR sign on the track. Install CR track on the side without 2 big holes of panel (4)
- Screw(F)to tighten the track slides as below shown.

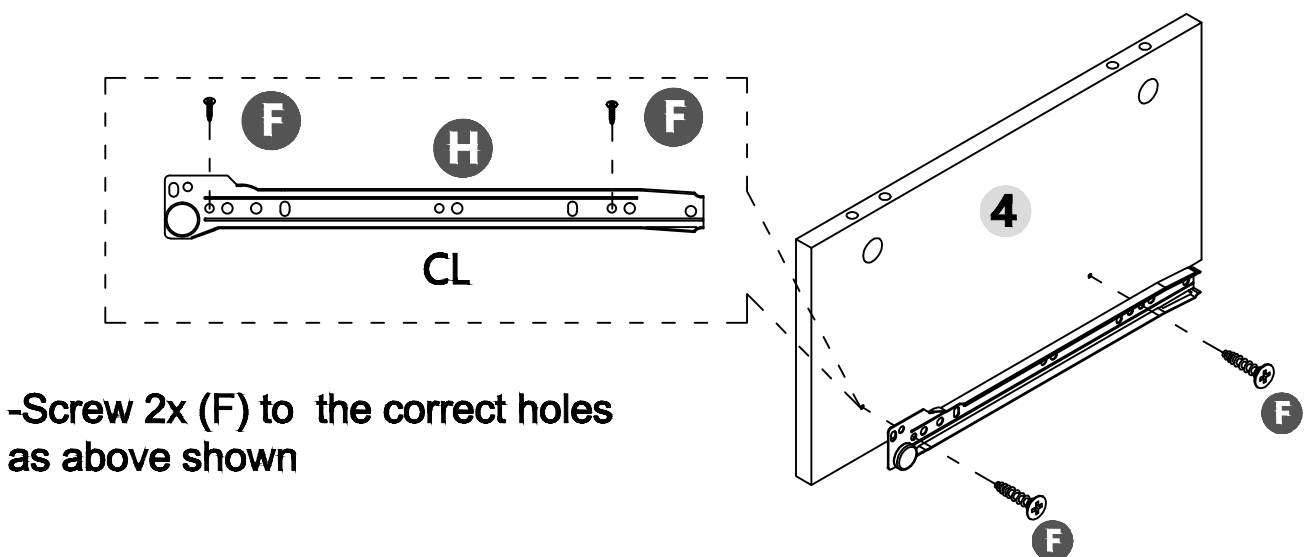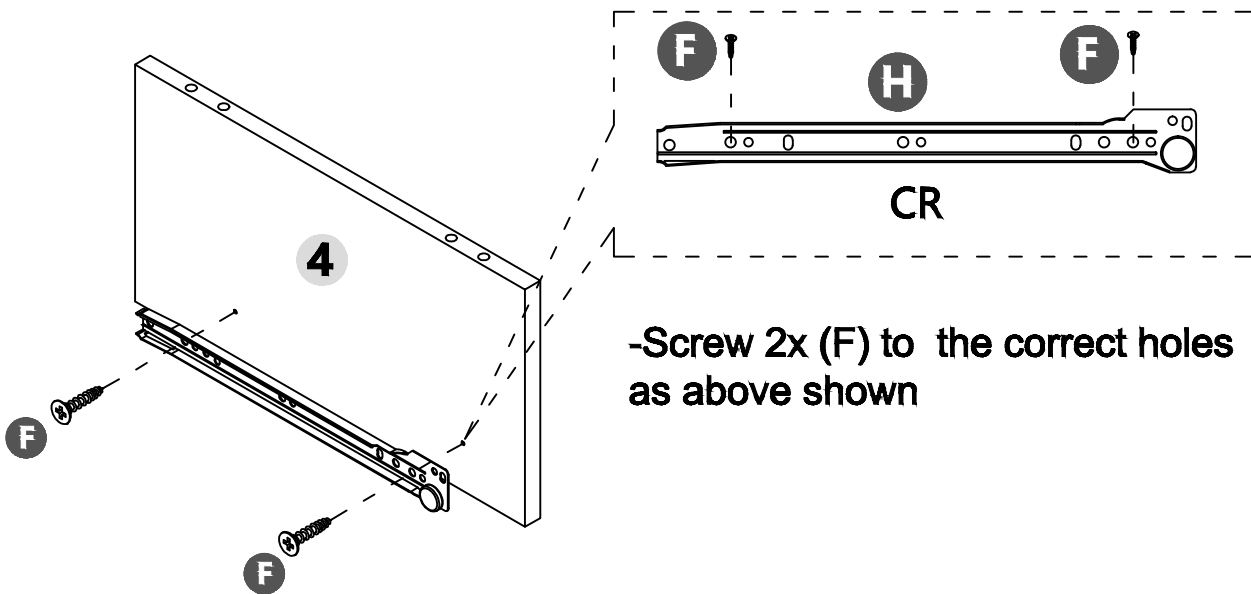



STEP 4

-Screw (L) to lock (5) and (4) as below shown

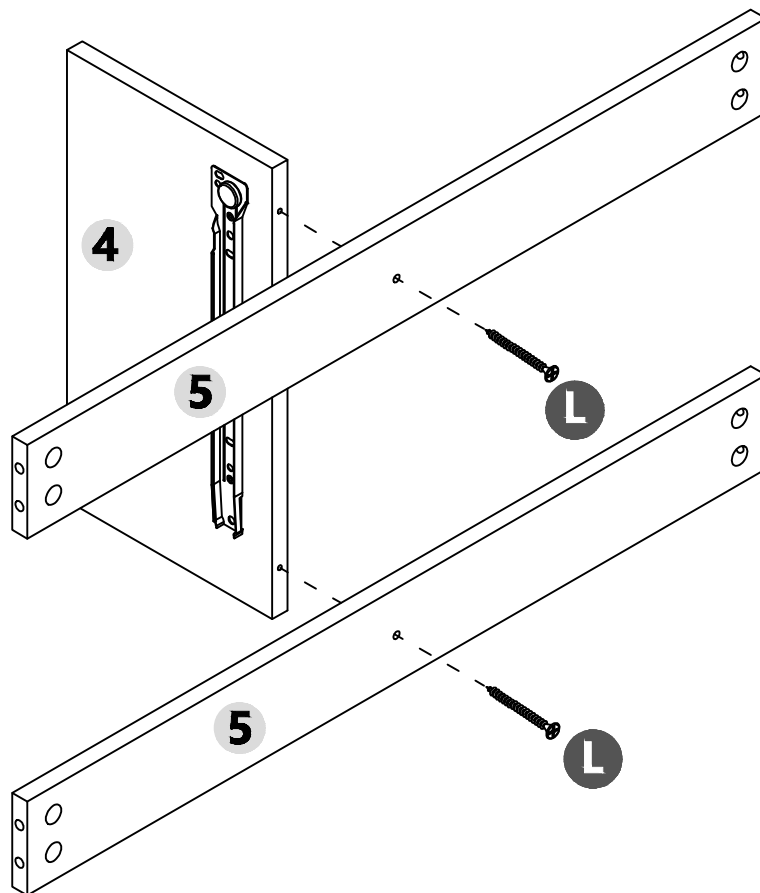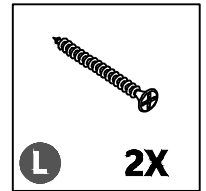


STEP 5

- Screw(A) to(7)&(8)as below shown
- Attach (20)to(7)&(8) as below shown
- Screw (B) to lock the (20) as below shown

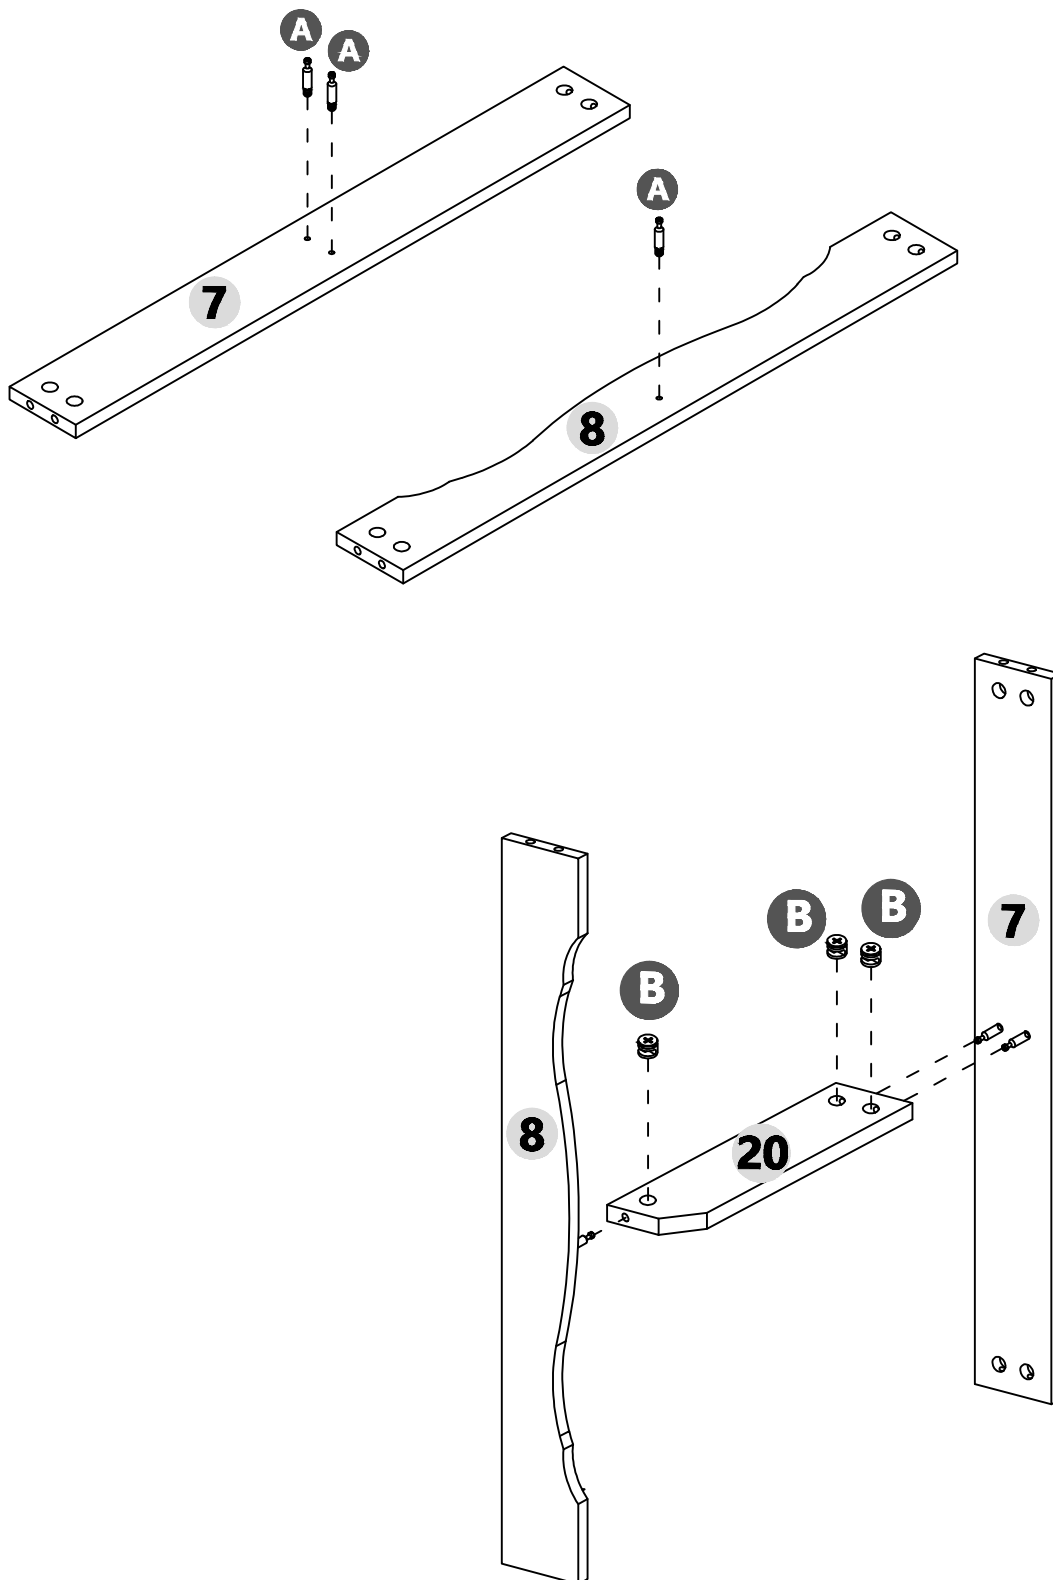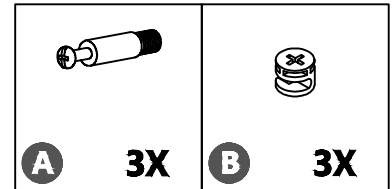


STEP 6

- Attach(5)&(6)&(7)&(8) to (2) as below shown
- Screw (B) to lock the (5)&(6)&(7)&(8)as below shown

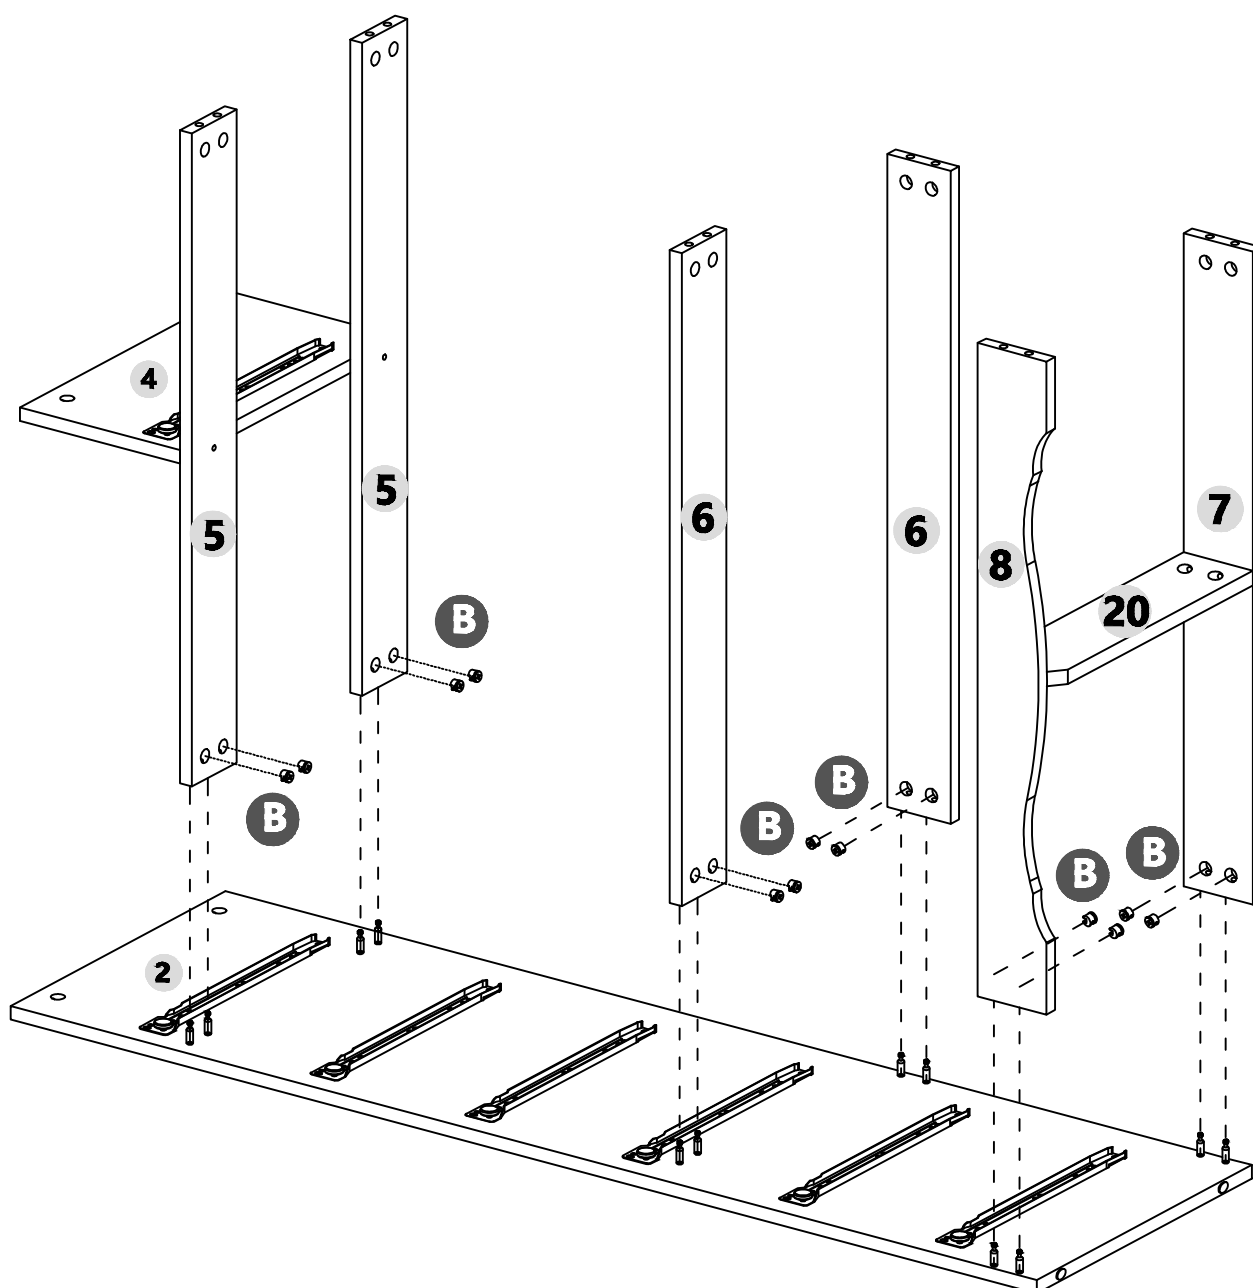**B****12X**



STEP 7

- Attach(3)to (5)&(6)&(7)&(8) as below shown
- Screw (B) to lock the (5)&(6)&(7)&(8)as below shown

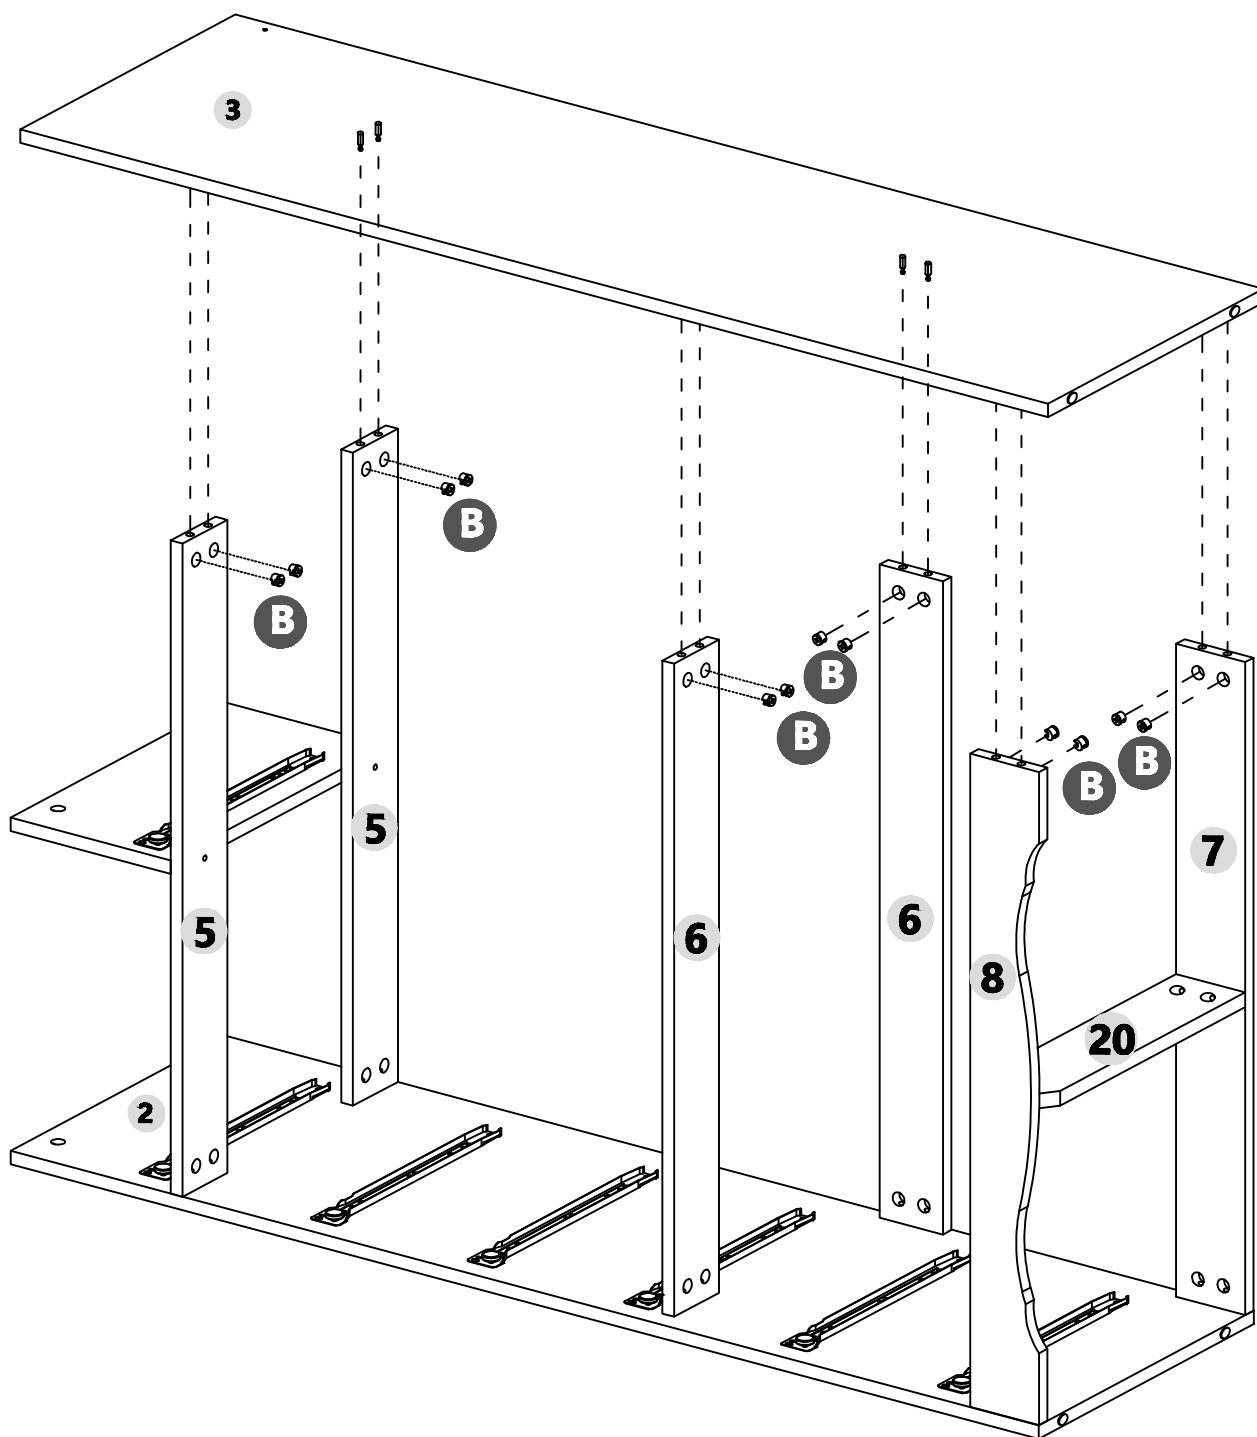**B****12X**



STEP 8

- Screw(A)to (1)as below shown
- Screw (C)to (1)as below shown
- Flip(1), attach (1) to (2)&(3)&(4)as below shown
- Screw (B)to lock the (2)&(3)&(4)as below show

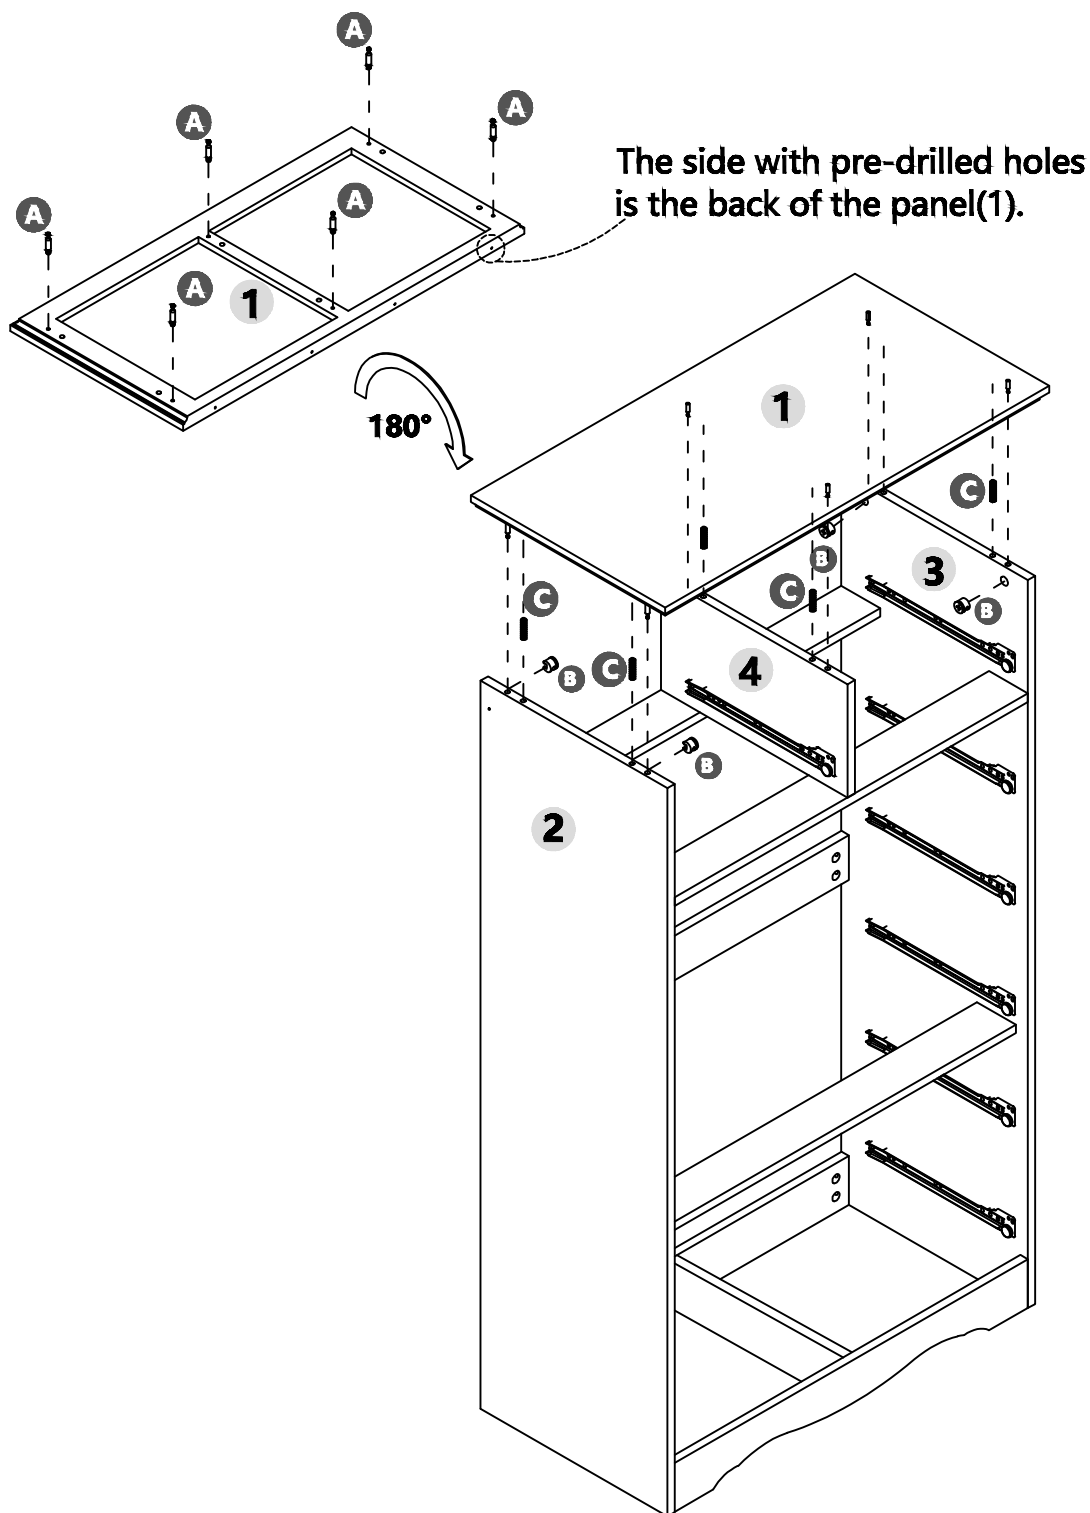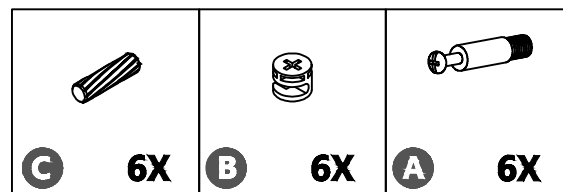



STEP 9

-Screw(G) to Back panel (9)&(10) as below shown

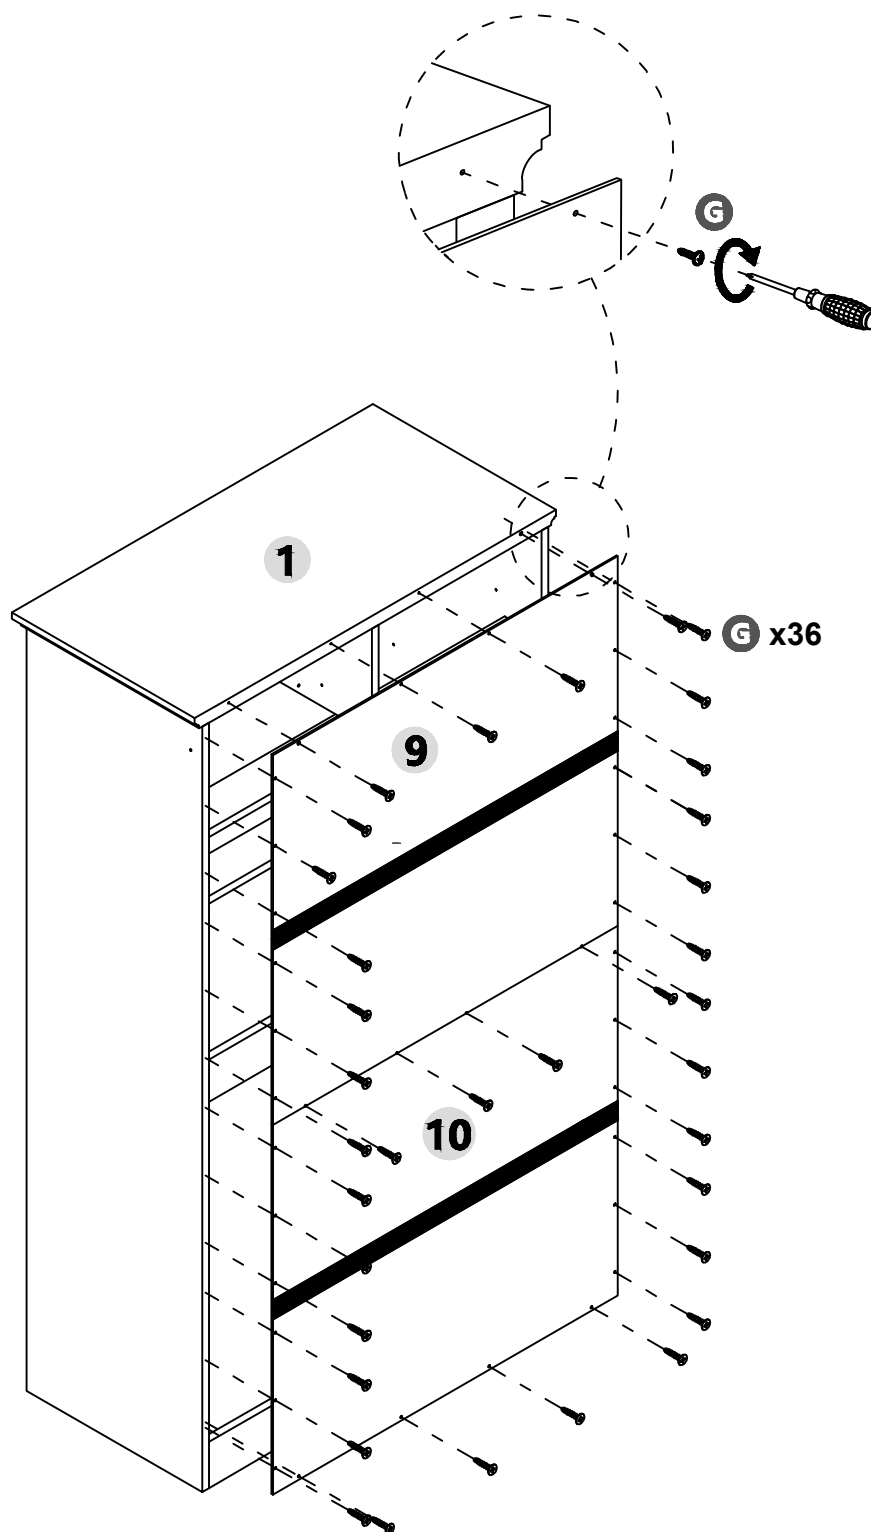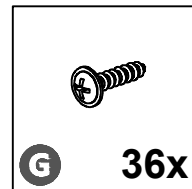



STEP 10-1

- Screw(A) to(19)as below shown
- Attach (11)&(12)&(17)to(19) as below shown
- Screw (B) to lock the (11)&(12)&(17) as below shown

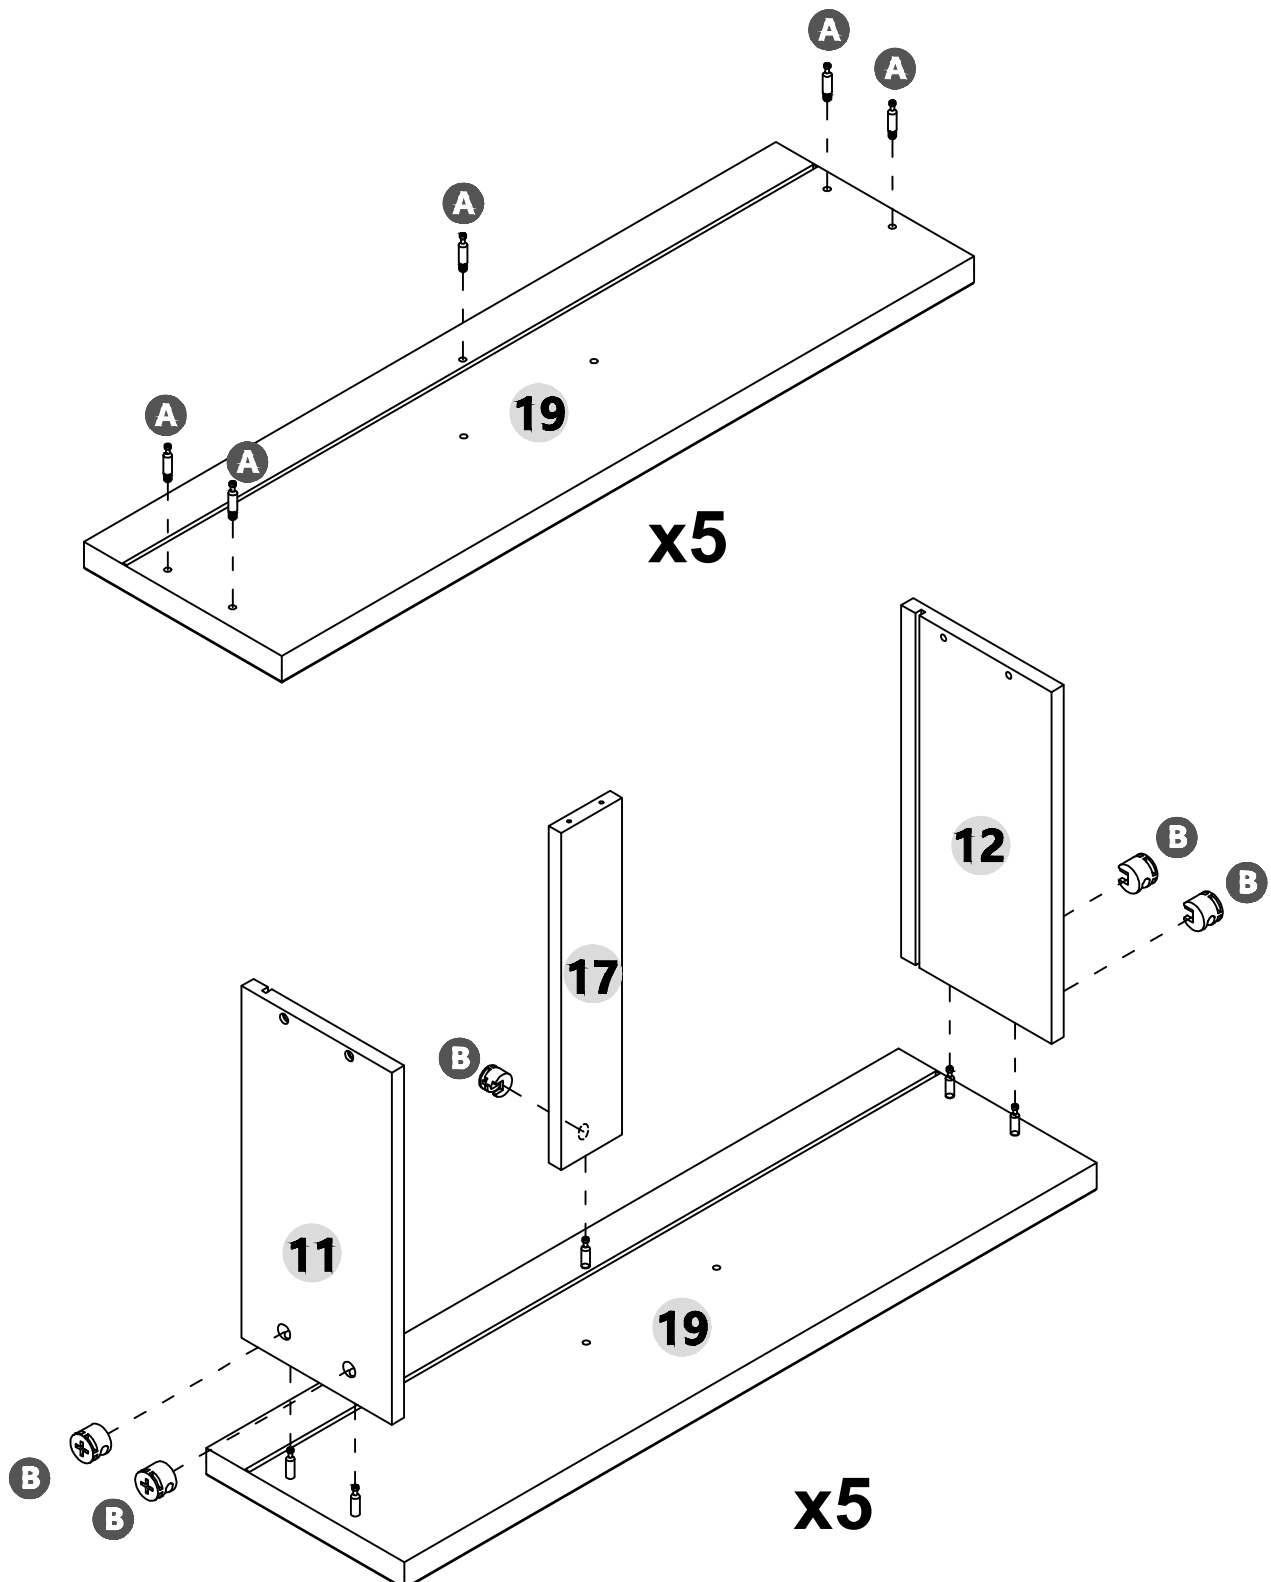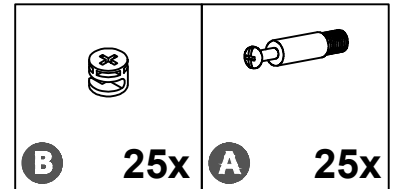



STEP 10-2

- Attach (14)&(16) to (11)&(12) as below shown
- Screw (E) to attach (11)&(12) to (14) as below shown
- Screw (E) to attach (14) to (17) as below shown
- Screw (I)&(D) to (19) as below shown

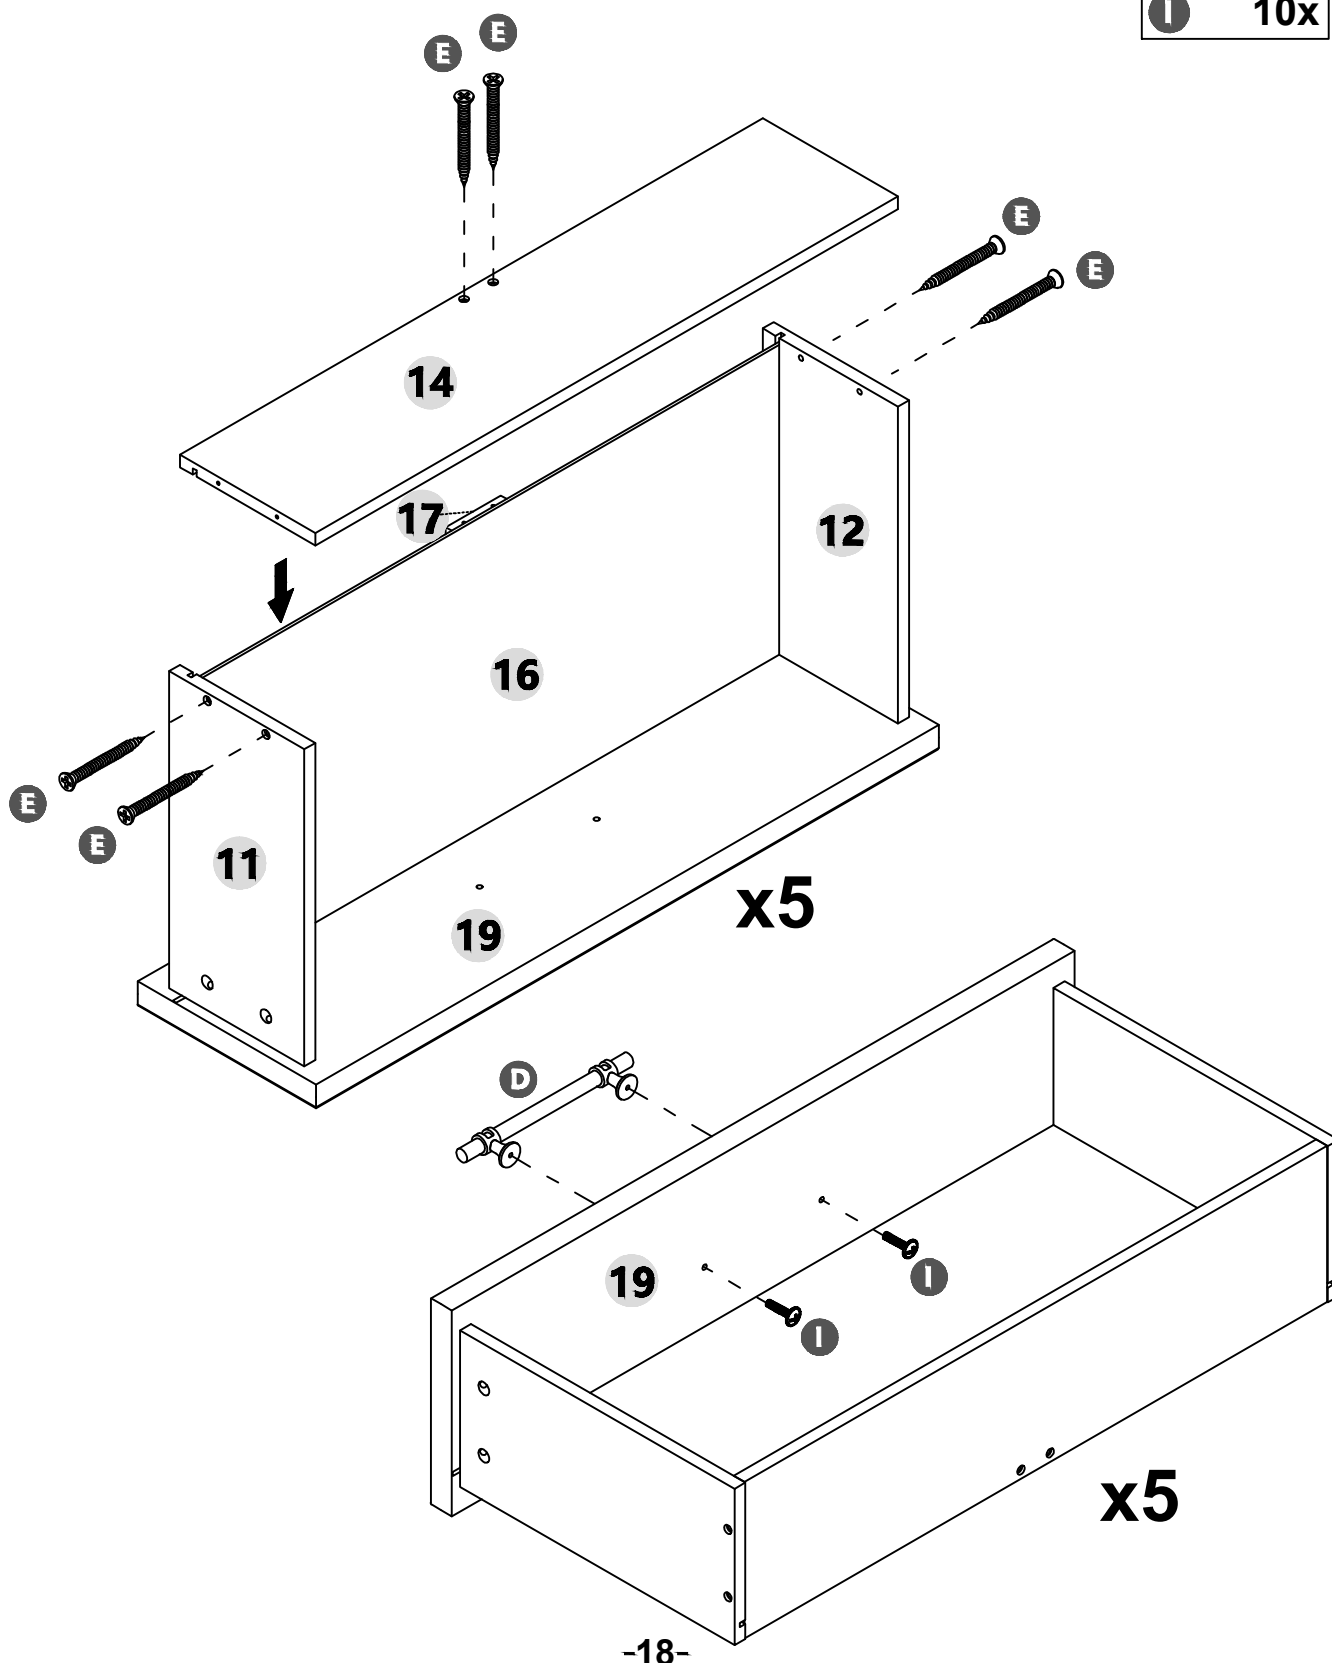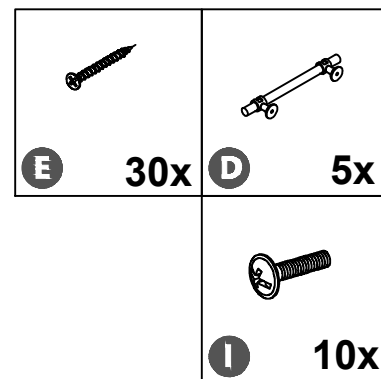


STEP 10-3

-install the drawer slides (H) on the drawer side panels (11)&(12) as below shown

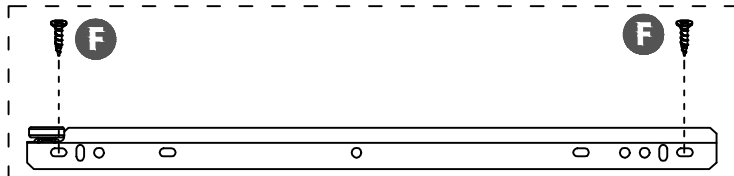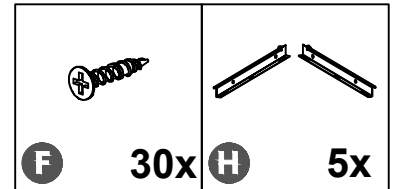




If necessary, install one more screw in the middle of the drawer slide.

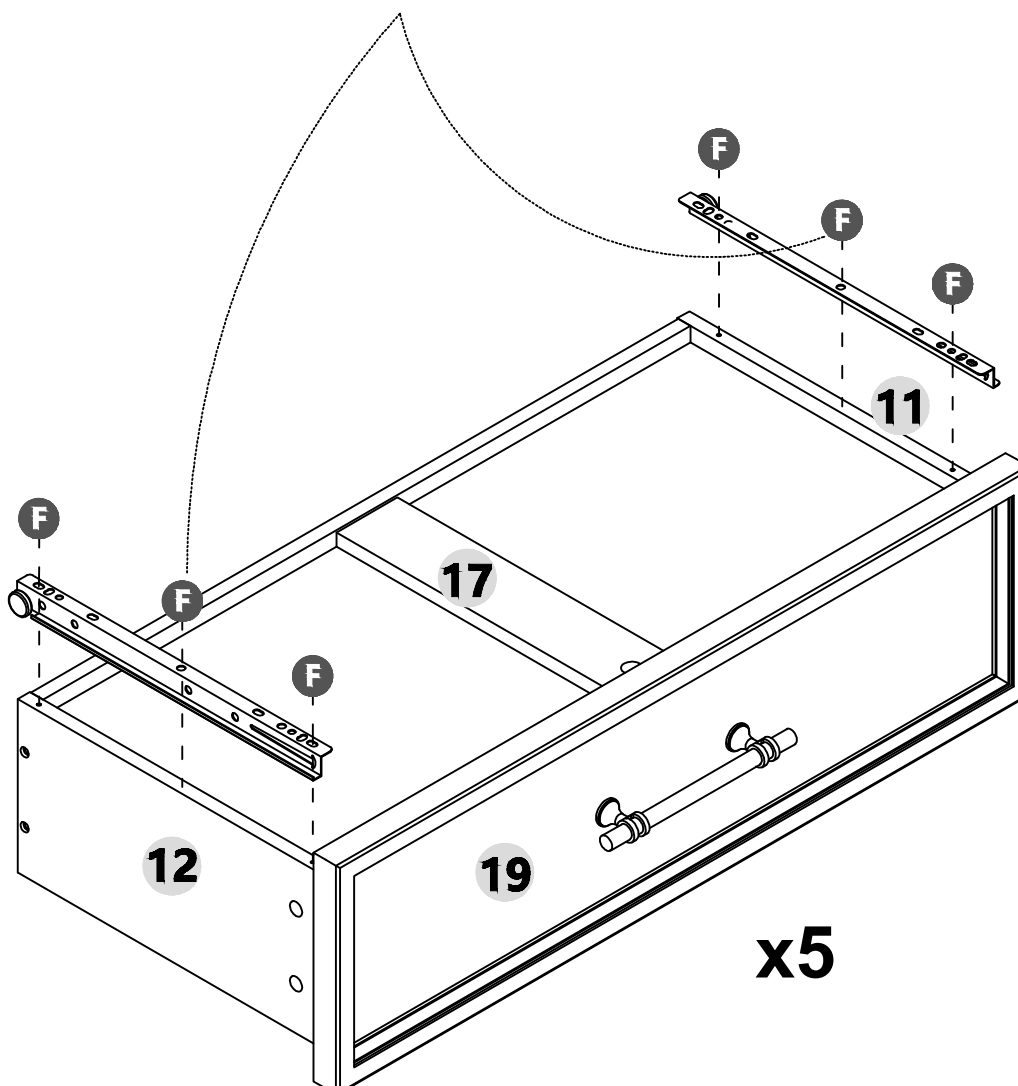

Repeat the previous step to install the remaining drawers




STEP 11-1

- Screw(A) to(18)as below shown
- Attach (11)&(12)&(18) as below shown
- Screw (B) to lock the (11)&(12) as below shown

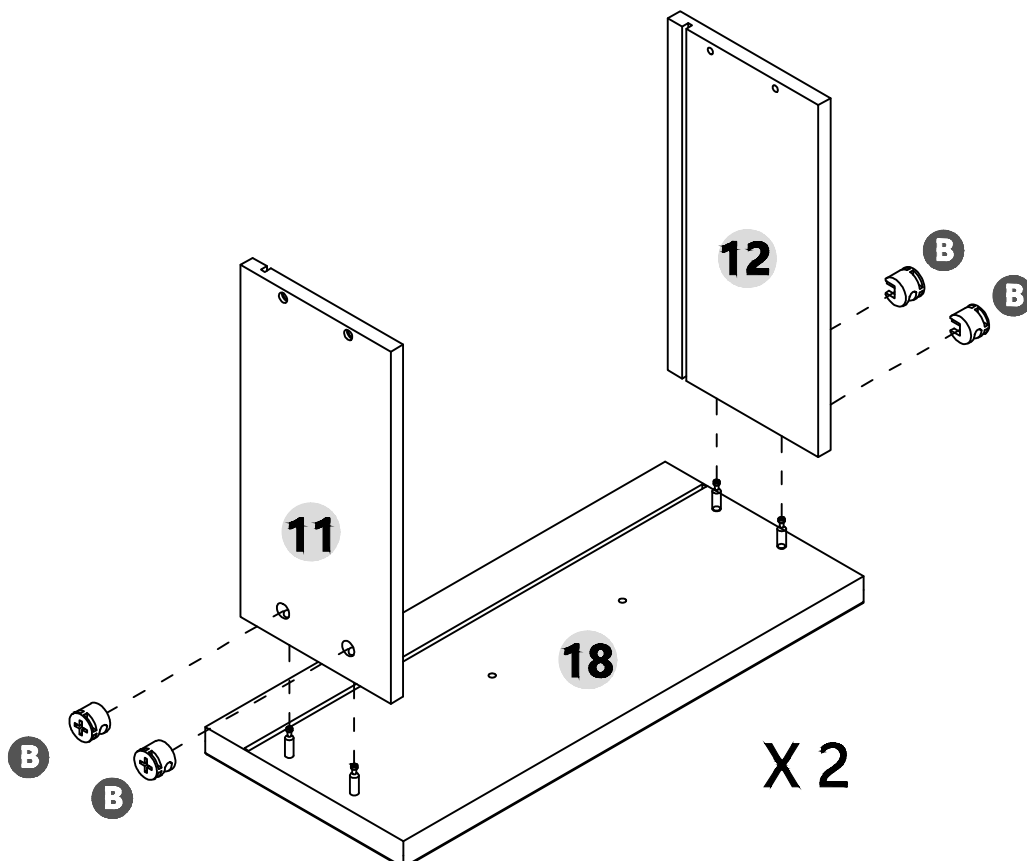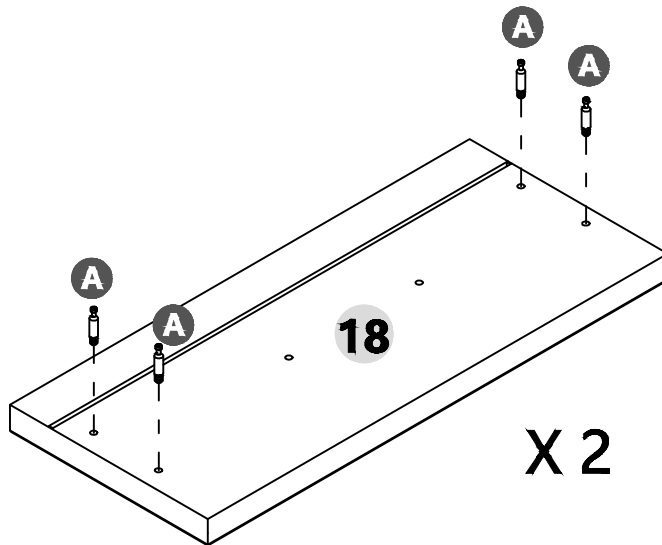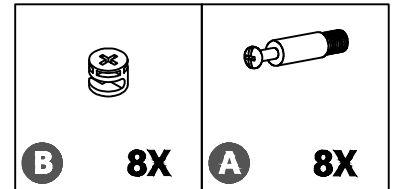



STEP 11-2

- Attach (13)&(15) to (11)&(12) as below shown
- Screw (E) to attach (11)&(12) to (13) as below shown
- Screw (I)&(K) to (18) as below shown

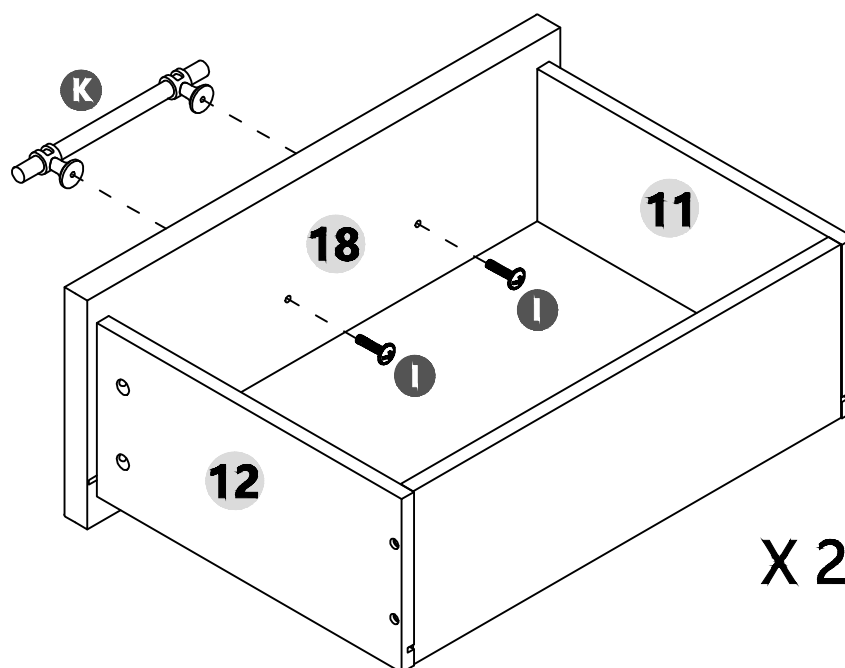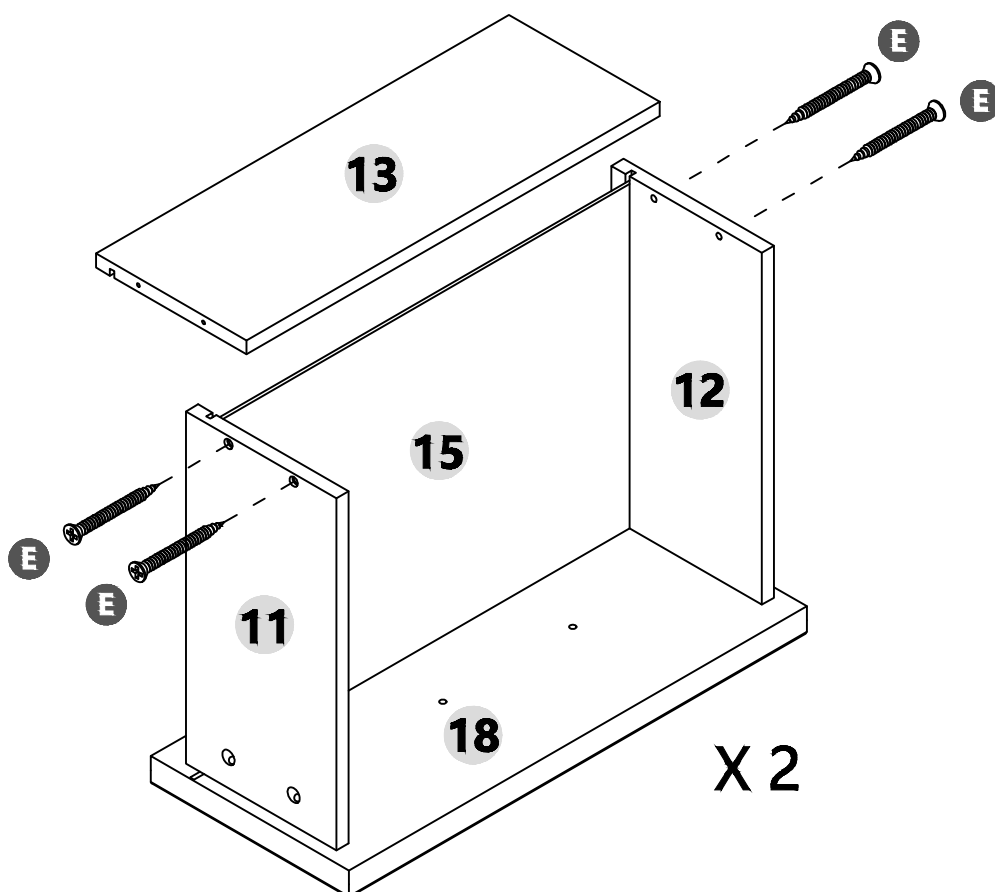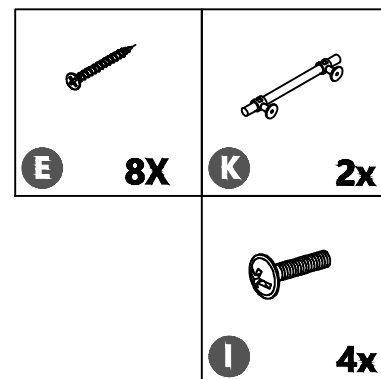


STEP 11-3

-install the drawer slides (H) on the drawer side panels (11)&(12) as below shown


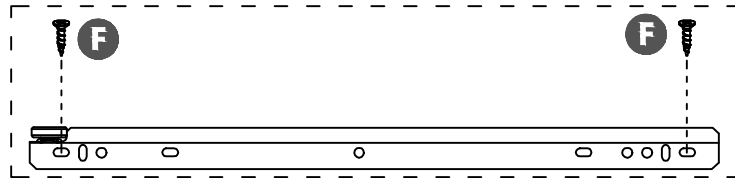
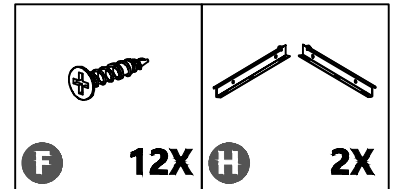


If necessary, install one more screw in the middle of the drawer slide.


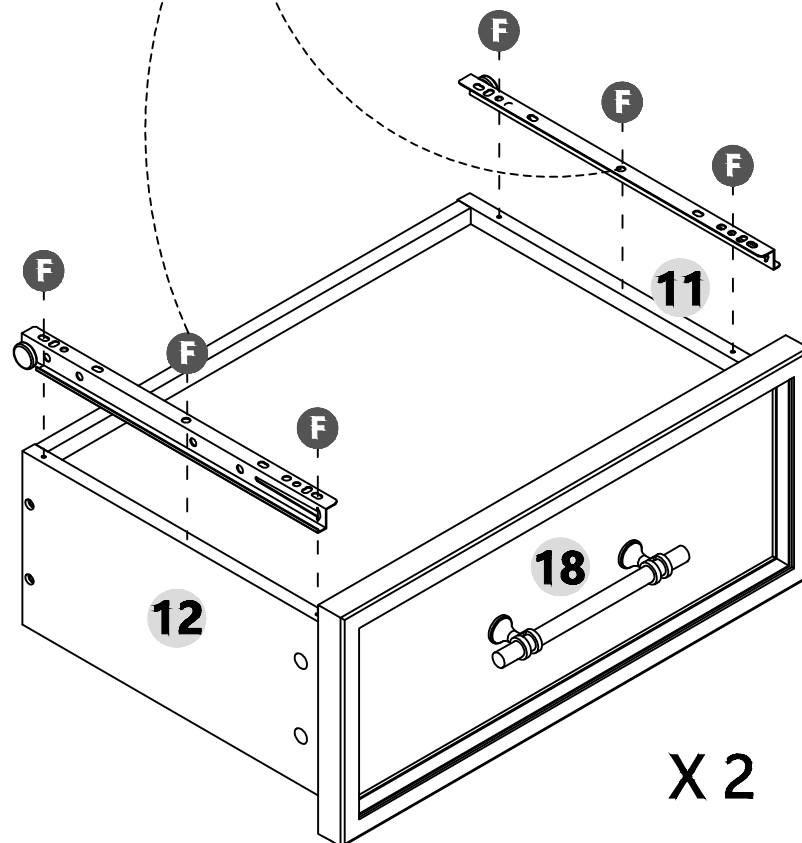


Repeat the previous step to install the remaining drawers

STEP 12

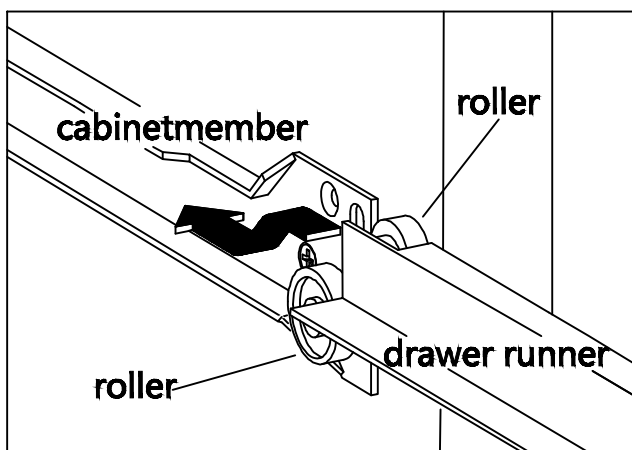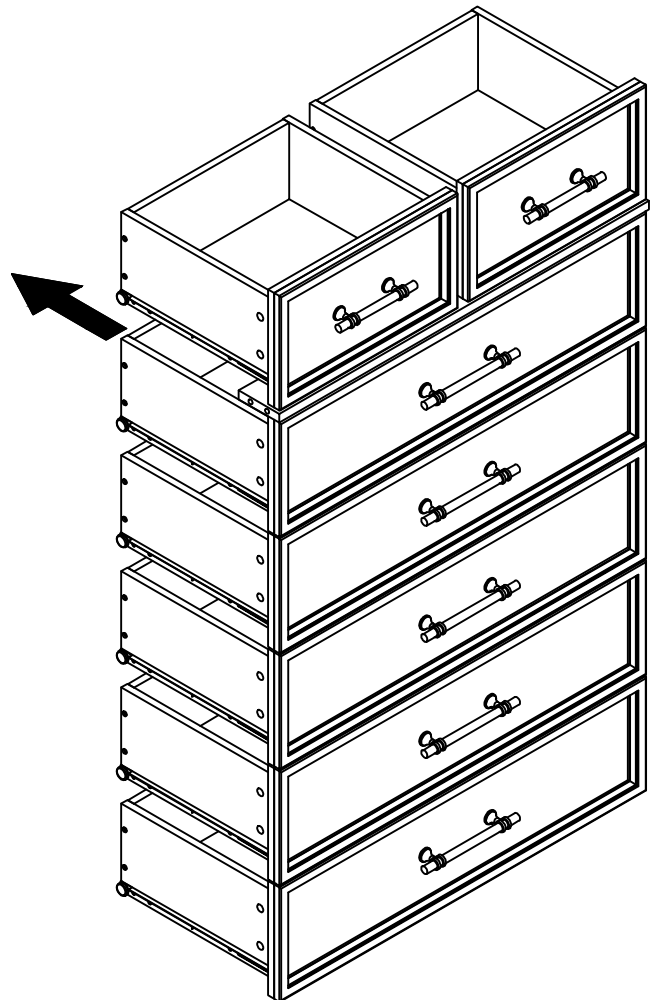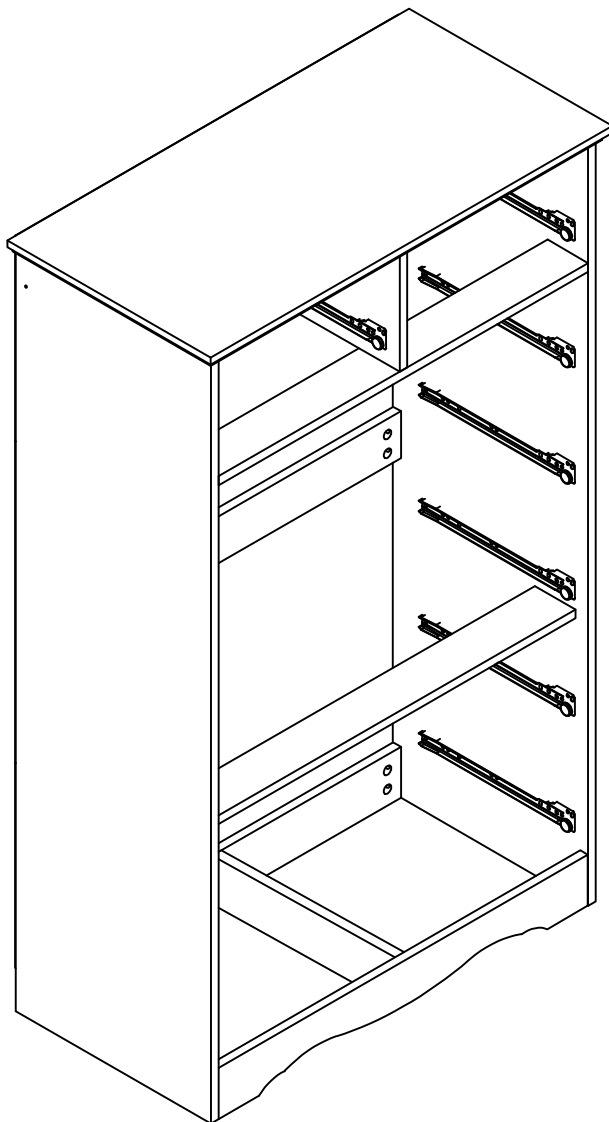

STEP 13-1

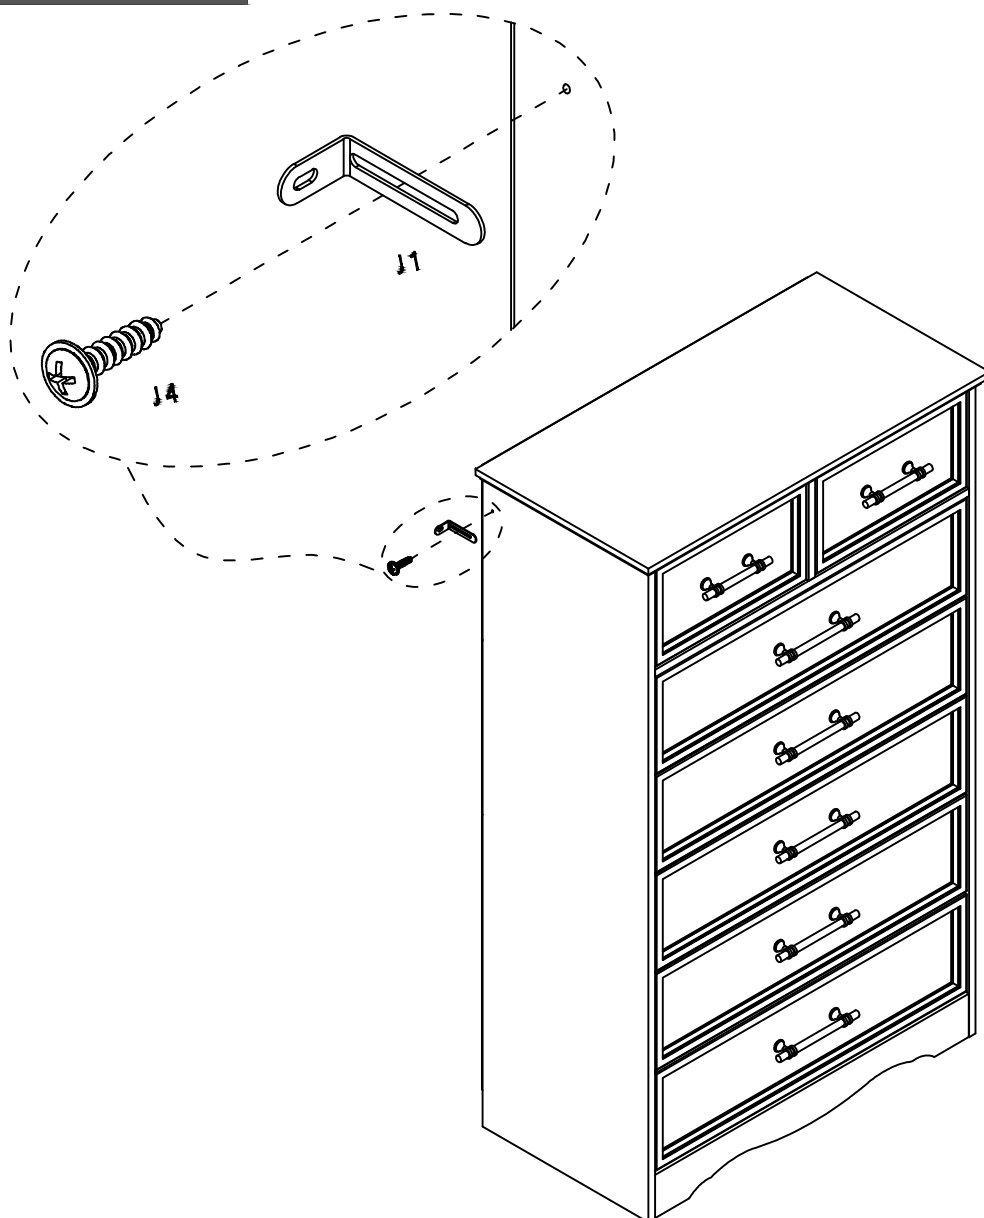
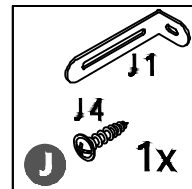


Tools required (not included): screwdriver, stud finder, tape measure, pencil, power drill and 3/16" drill bit.

Now, follow the guide printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision, the tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




STEP 13-2

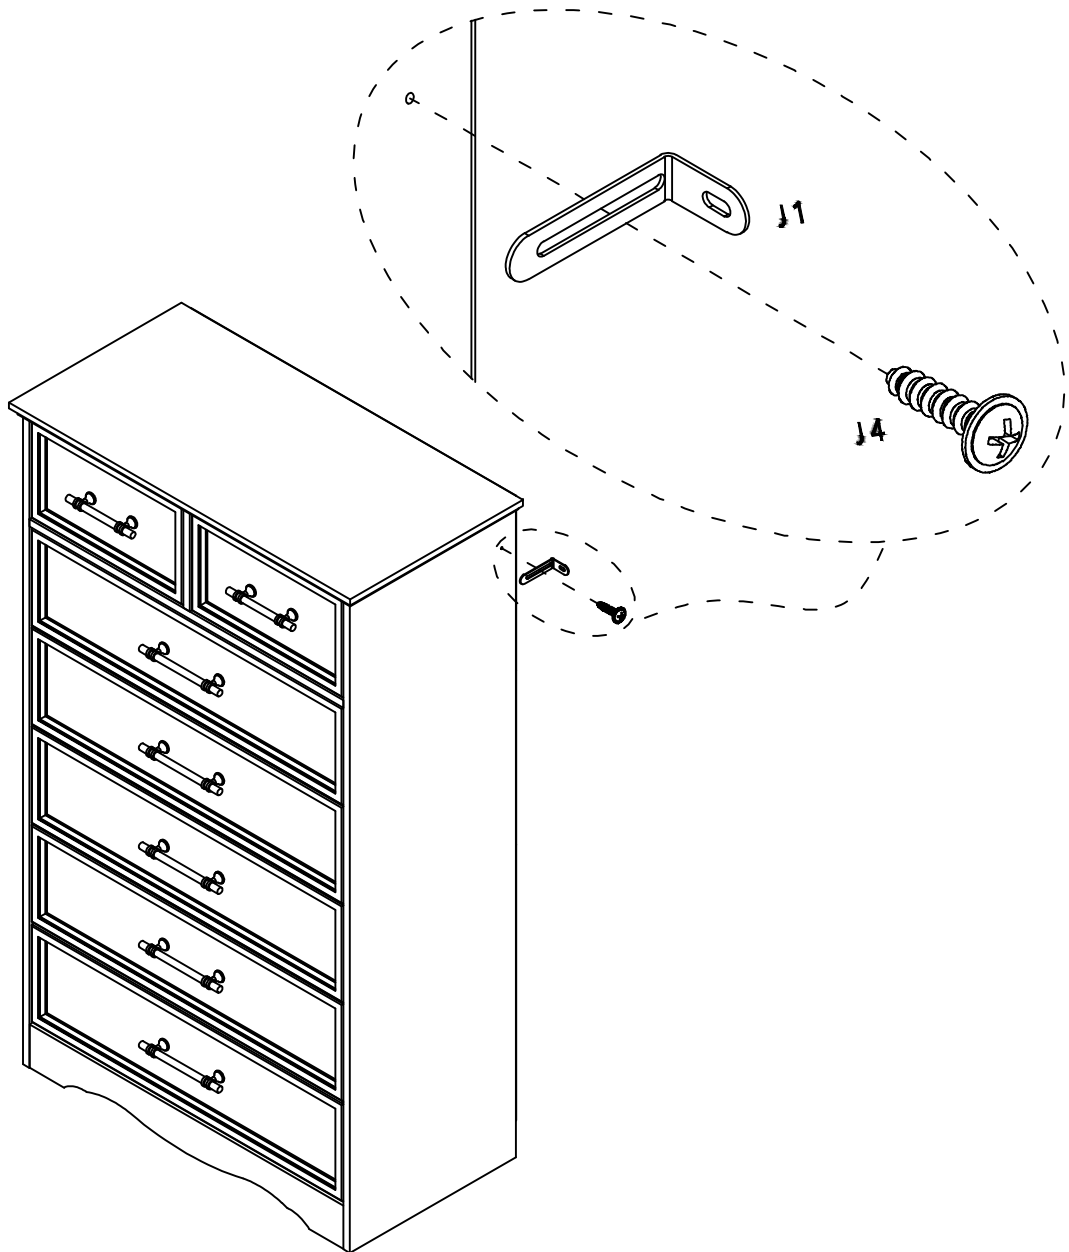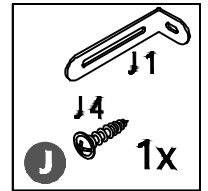

STEP 14

Install anti-tipping device as shown:

1. Drill a hole in the wall with a power drill so that the bolt J2 can fit in.
2. Take the bolt J2 from the expansion screw
3. Insert the bolt J2 into the hole, the bolt should be plugged to the bottom of the hole, so that it can be fixed firmly.
4. Align metal connector J1 with the hole, and insert screw J3 through J1 to secure the bolt, Screw all the screws into the bolt, so that an expansion screw is installed.

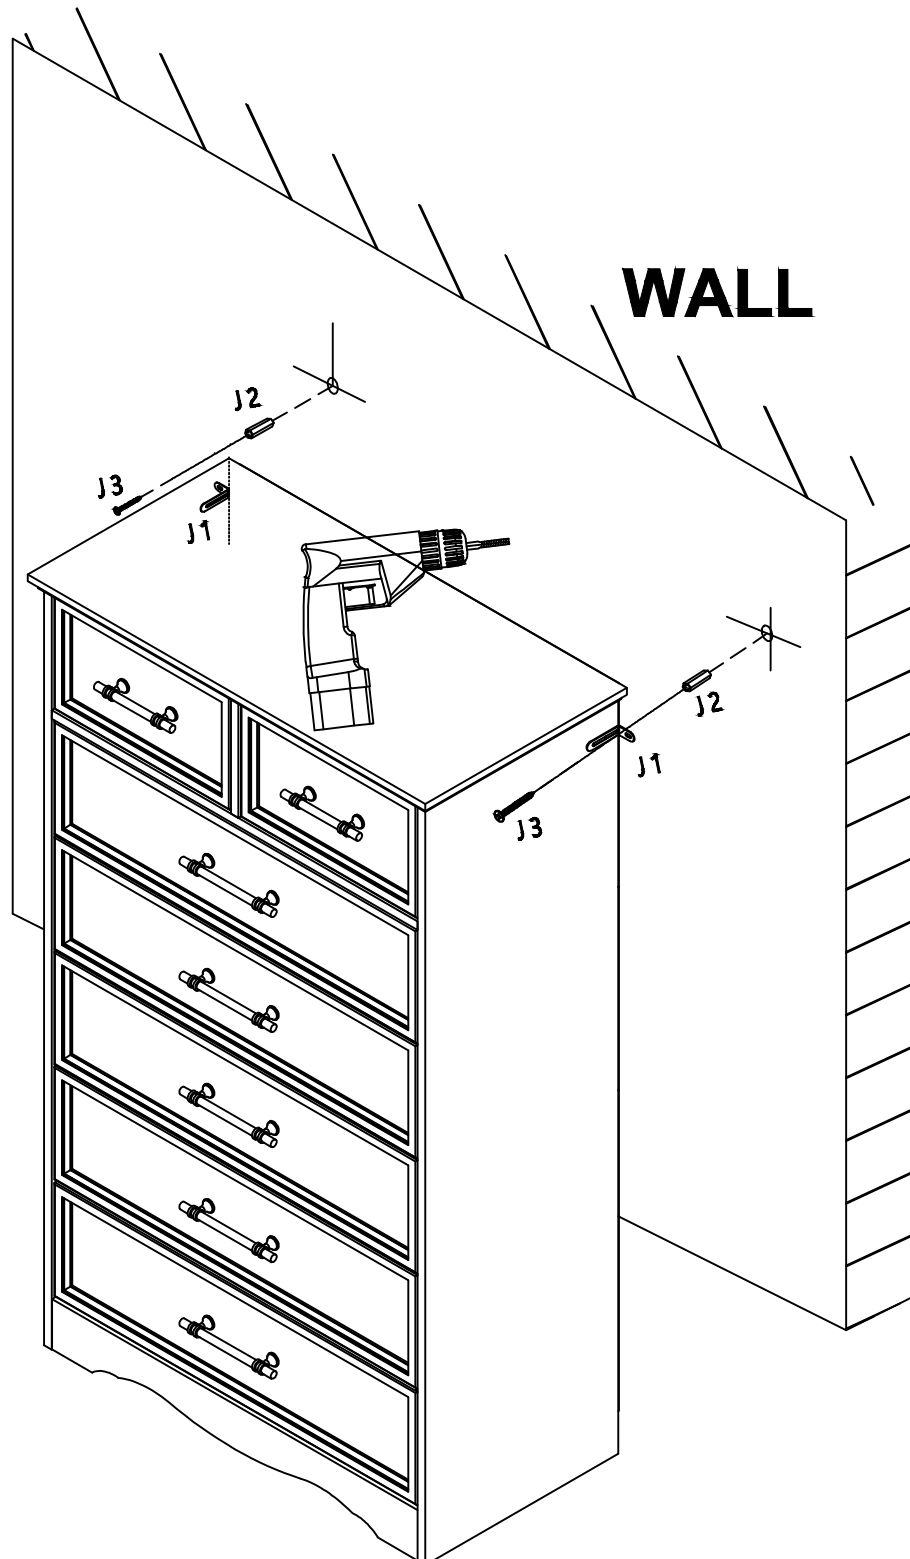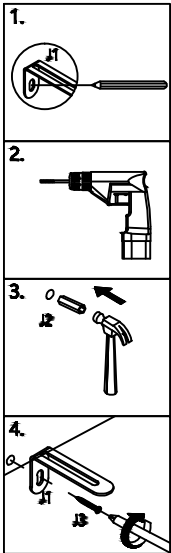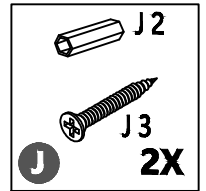

Finally, you got a 7-drawer dresser!

