
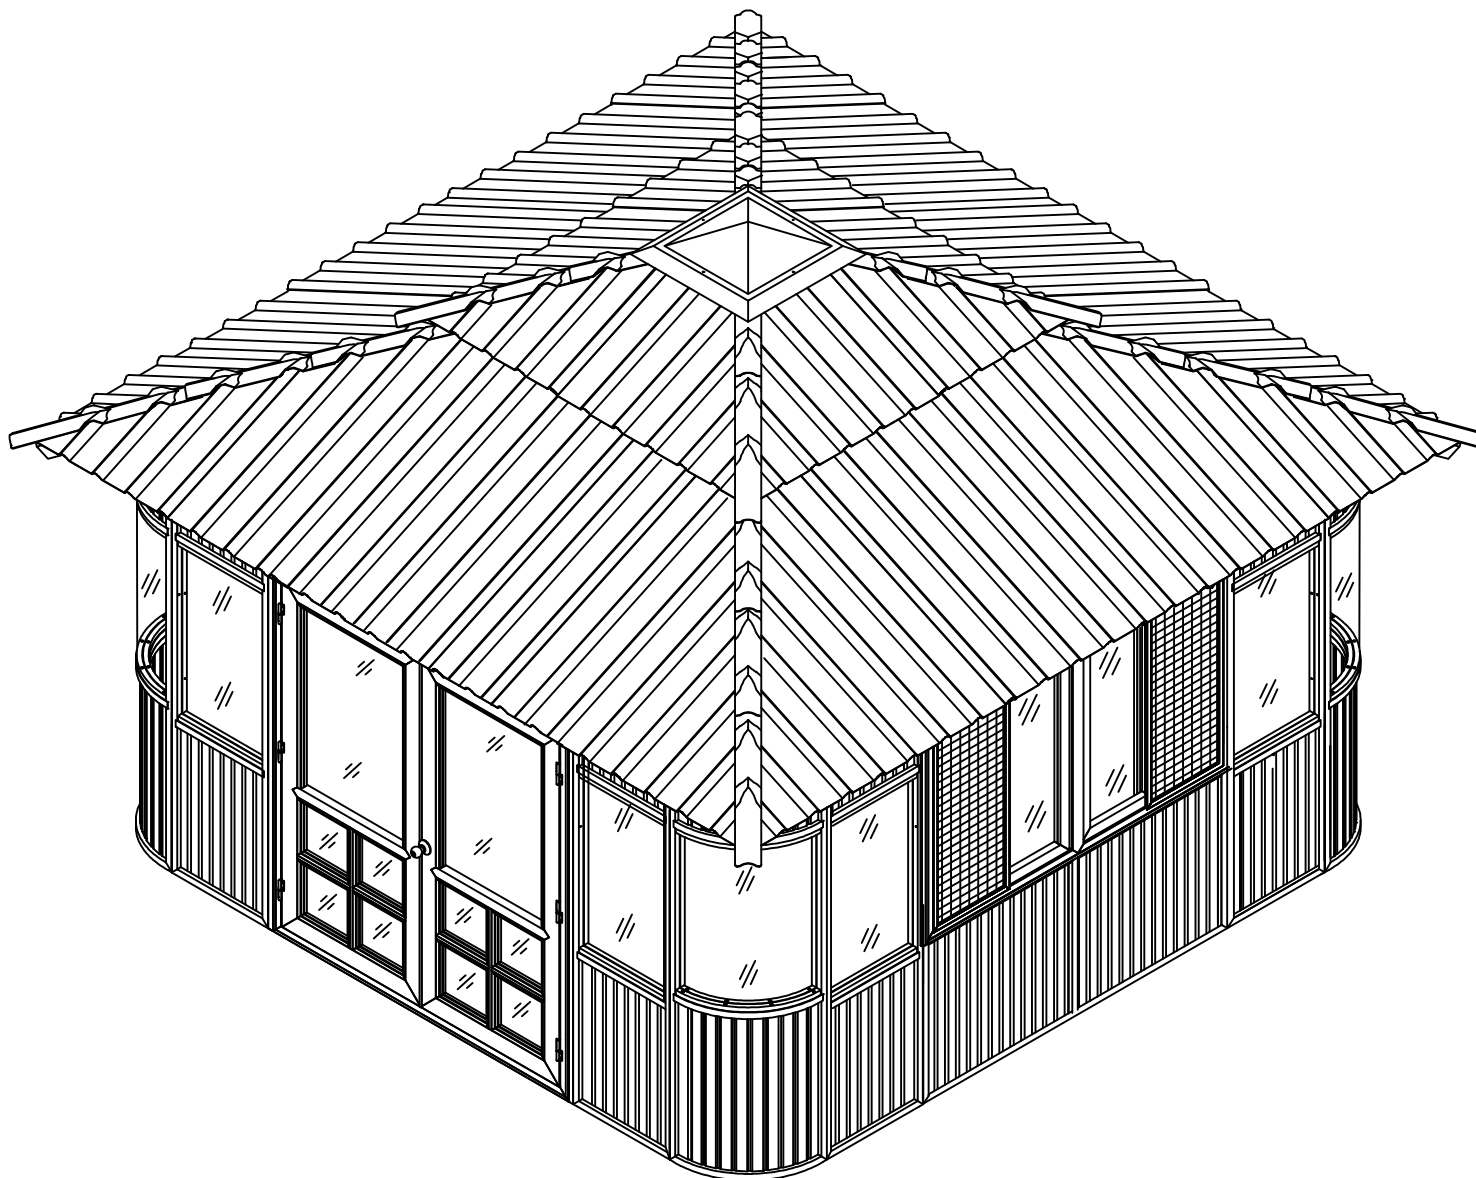
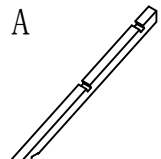

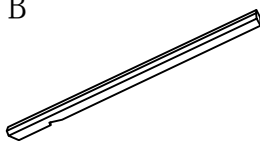

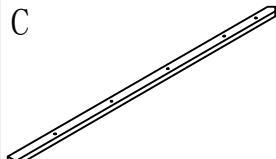




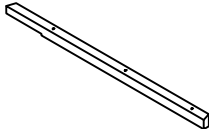
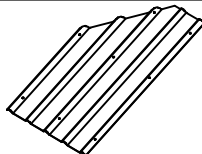
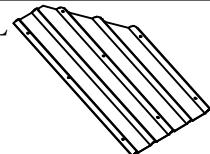




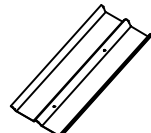

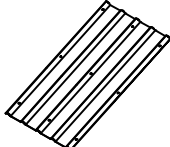
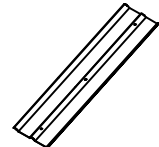
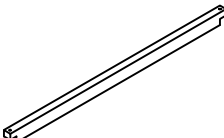
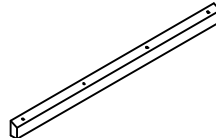
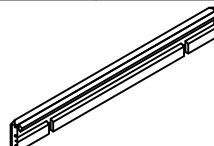


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO















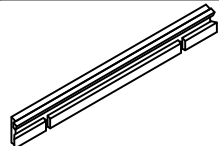


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO

A  SIZE: 1450X80X70MM 57 $\frac{1}{8}$ "X3" $\frac{3}{4}$ " X8	A1  SIZE: 654X80X70MM 26 $\frac{3}{4}$ "X3" $\frac{3}{4}$ " X4	B  SIZE: 1965X90X70MM 77 $\frac{3}{8}$ "X3 $\frac{1}{2}$ "X2 $\frac{3}{4}$ " X4	B1  SIZE: 879X90X70MM 35 $\frac{3}{8}$ "X3 $\frac{1}{2}$ "X2 $\frac{3}{4}$ " X4	C  SIZE: 2010X60X35MM 79 $\frac{1}{8}$ "X2 $\frac{3}{8}$ "X1 $\frac{3}{8}$ " X8	D  SIZE: 590X90X35MM 23 $\frac{3}{16}$ "X3 $\frac{1}{2}$ "X1 $\frac{3}{8}$ " X4
D1  SIZE: 300X90X35MM 12"X3 $\frac{1}{2}$ "X1 $\frac{3}{8}$ " X4	E  SIZE: 886X60X35MM 35 $\frac{3}{8}$ "X2 $\frac{3}{8}$ "X1 $\frac{3}{8}$ " X4	E1  SIZE: 445X60X35MM 18 $\frac{1}{2}$ "X2 $\frac{3}{8}$ "X1 $\frac{3}{8}$ " X4	F  SIZE: 886X60X35MM 35 $\frac{3}{8}$ "X2 $\frac{3}{8}$ "X1 $\frac{3}{8}$ " X4	F1  SIZE: 445X60X35MM 18 $\frac{1}{2}$ "X2 $\frac{3}{8}$ "X1 $\frac{3}{8}$ " X4	G  SIZE: 400X60X35MM 16 $\frac{1}{4}$ "X2 $\frac{3}{8}$ "X1 $\frac{3}{8}$ " X4
H  SIZE: 400X60X35MM 16 $\frac{3}{4}$ "X2 $\frac{3}{8}$ "X1 $\frac{3}{8}$ " X4	I  SIZE: 1355X70X35MM 53 $\frac{3}{8}$ "X2 $\frac{3}{4}$ "X1 $\frac{3}{8}$ " X4	J  SIZE: 1355X70X35MM 53 $\frac{3}{8}$ "X2 $\frac{3}{4}$ "X1 $\frac{3}{8}$ " X4	K  SIZE: 1485X880X30MM 58 $\frac{7}{16}$ "X34 $\frac{3}{8}$ "X1 $\frac{3}{16}$ " X4	L  SIZE: 1485X880X30MM 58 $\frac{7}{16}$ "X34 $\frac{3}{8}$ "X1 $\frac{3}{16}$ " X4	M  SIZE: 945X864X30MM 37 $\frac{1}{4}$ "X34"X1 $\frac{3}{16}$ " X4
M1  SIZE: 800X854X30MM 32 $\frac{1}{2}$ "X34 $\frac{3}{8}$ "X1 $\frac{3}{16}$ " X4	N  SIZE: 945X864X30MM 37 $\frac{1}{4}$ "X34"X1 $\frac{3}{16}$ " X4	N1  SIZE: 800X854X30MM 32 $\frac{1}{2}$ "X34 $\frac{3}{8}$ "X1 $\frac{3}{16}$ " X4	N2  SIZE: 800X377X30MM 32 $\frac{1}{2}$ "X14 $\frac{7}{8}$ "X1 $\frac{3}{16}$ " X4	O  SIZE: 730X115X50MM 28 $\frac{3}{8}$ "X4 $\frac{1}{2}$ "X2" X8	O1  SIZE: 307X115X50MM 12 $\frac{1}{8}$ "X4 $\frac{1}{2}$ "X2" X4
P  SIZE: 835X115X50MM 33 $\frac{7}{8}$ "X4 $\frac{1}{2}$ "X2" X8	Q  SIZE: 650X650X140MM 26 $\frac{3}{8}$ "X26 $\frac{3}{8}$ "X5 $\frac{1}{2}$ " X1	R  SIZE: 740X740X190MM 29 $\frac{1}{4}$ "X29 $\frac{1}{4}$ "X7 $\frac{1}{2}$ " X1	S3  SIZE: 1485X880X30MM 58 $\frac{7}{16}$ "X34 $\frac{3}{8}$ "X1 $\frac{3}{16}$ " X4	S4  SIZE: 1485X377X30MM 58 $\frac{7}{16}$ "X14 $\frac{7}{8}$ "X1 $\frac{3}{16}$ " X4	
S5  SIZE: 1200X60X35MM 47 $\frac{1}{4}$ "X2 $\frac{3}{8}$ "X1 $\frac{3}{8}$ " X8	S6  SIZE: 1130X70X35MM 44 $\frac{1}{2}$ "X2 $\frac{3}{4}$ "X1 $\frac{3}{8}$ " X4	S7  SIZE: 1800X102X190MM 70 $\frac{7}{8}$ "X4"X7 $\frac{1}{2}$ " X2	S8  SIZE: 1748X102X190MM 68 $\frac{3}{4}$ "X4"X7 $\frac{1}{2}$ " X2		


2 OF 13

ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO

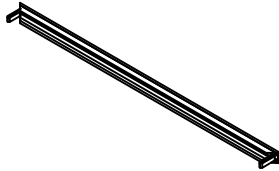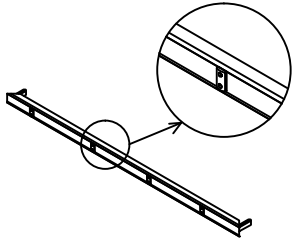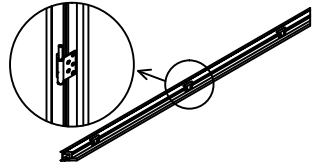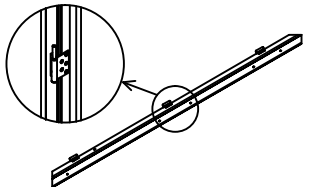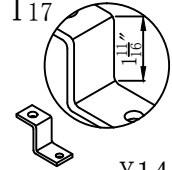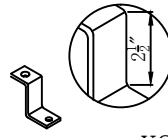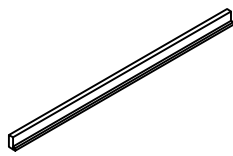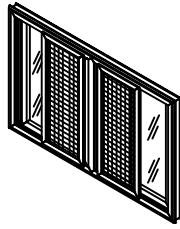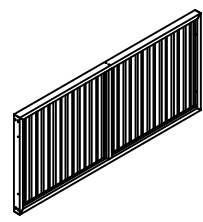
W1  SIZE:693X60X2080MM 27$\frac{1}{4}$"X2$\frac{3}{8}$"X81$\frac{1}{8}$" X4	W2  SIZE:600X60X2080MM 23$\frac{5}{8}$"X2$\frac{3}{8}$"X81$\frac{1}{8}$" X4	W3  SIZE:600X60X2080MM 23$\frac{5}{8}$"X2$\frac{3}{8}$"X81$\frac{1}{8}$" X4	T1  X4	T2  X8	T3  X8	T4  X4		
W6  SIZE:1840X65X65MM 72$\frac{7}{16}$"X2$\frac{9}{16}$"X2$\frac{9}{16}$" X1	W7  SIZE:1840X65X65MM 72$\frac{7}{16}$"X2$\frac{9}{16}$"X2$\frac{9}{16}$" X1	W8  SIZE:1995X65X65MM 78$\frac{9}{16}$"X2$\frac{9}{16}$"X2$\frac{9}{16}$" X1	T5  X4	T11  X2	T12  X1	T13  X2		
W9  SIZE:1995X65X65MM 78$\frac{9}{16}$"X2$\frac{9}{16}$"X2$\frac{9}{16}$" X1	W10  SIZE:860X45X1890MM 33$\frac{7}{8}$"X1$\frac{3}{4}$"X74$\frac{3}{8}$" X1	W11  SIZE:860X45X1890MM 33$\frac{7}{8}$"X1$\frac{3}{4}$"X74$\frac{3}{8}$" X1	T14  X1	T16  X16	T17  X14	T18  X8		
W12  SIZE:1900X59X90MM 74$\frac{3}{4}$"X2$\frac{3}{8}$"X3$\frac{1}{2}$" X1	W13  SIZE:60X35X1990MM 2$\frac{3}{8}$"X1$\frac{3}{8}$"X78$\frac{3}{8}$" X2	W14  SIZE:1930X1230X87MM 76"X48$\frac{3}{8}$"X3$\frac{3}{8}$" X3	W15  SIZE:1900X880X60MM 75$\frac{3}{4}$"X34$\frac{3}{8}$"X2$\frac{3}{8}$" X3	U1  8-Ø5X90MM SIZE:$\frac{3}{16}$" X 3$\frac{9}{16}$"	U2  60-Ø5X75MM SIZE:$\frac{3}{16}$" X 3"	U3  178-Ø5X55MM SIZE:$\frac{3}{16}$" X 2$\frac{3}{16}$"	U4  374-Ø4X30MM SIZE:$\frac{3}{16}$" X 1$\frac{3}{16}$"	
U5  204-Ø4X55MM SIZE:$\frac{3}{16}$" X 2$\frac{3}{16}$"	U6  8-Ø4X20MM SIZE:$\frac{3}{16}$" X $\frac{13}{16}$"	U7-1  4-Ø6X20MM SIZE:$\frac{3}{16}$" X $\frac{13}{16}$"	U9  Color:Black 70-Ø4X30MM SIZE:$\frac{3}{16}$" X 1$\frac{3}{16}$"	U10  76-Ø5X65MM SIZE:$\frac{3}{16}$" X 2$\frac{9}{16}$"	V  SHIM X10	V1  PLASTIC SPACER PLECE X40	V2  X4	X  1-Ø5X30X70MM

ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO


#1

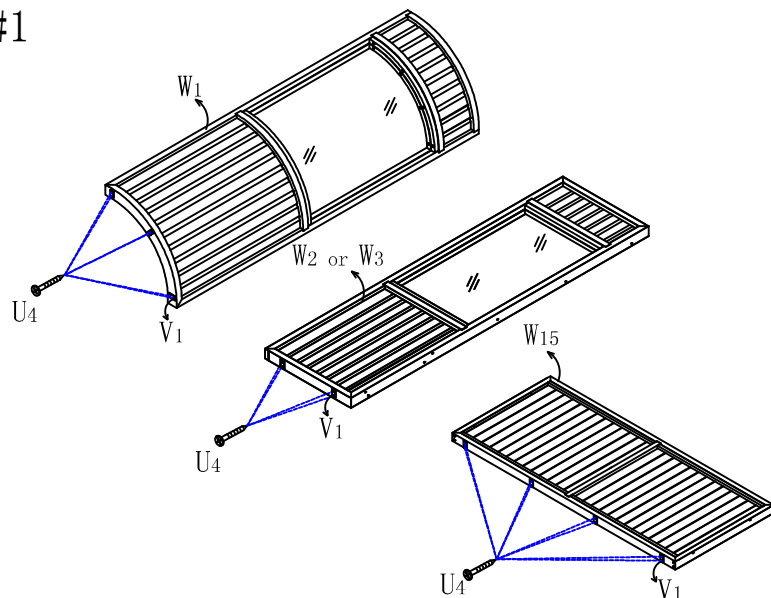


#2

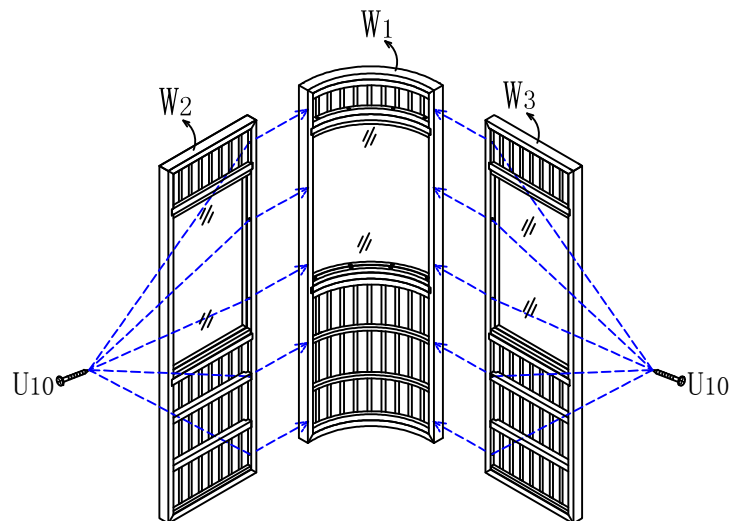

#3

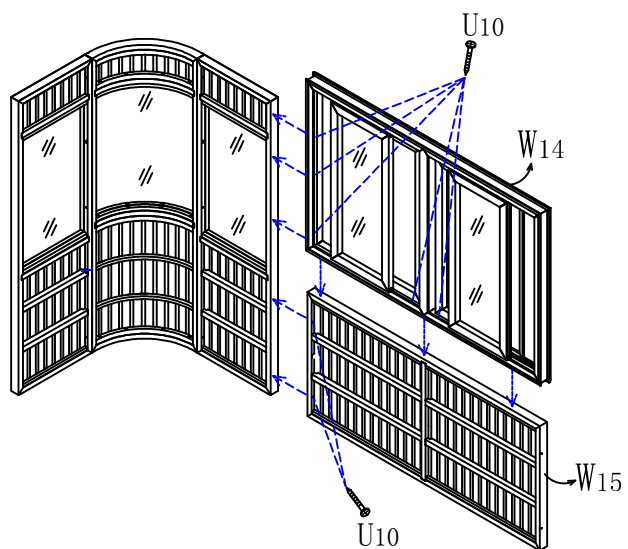


#4

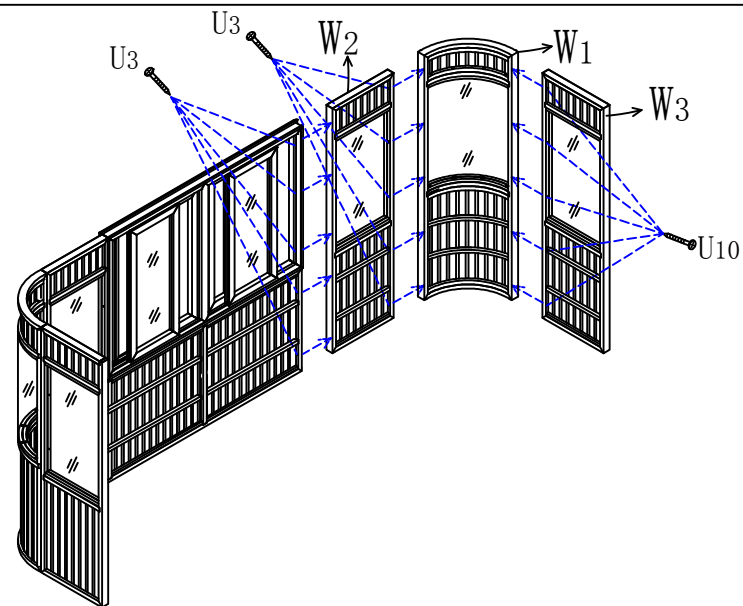


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO


#5

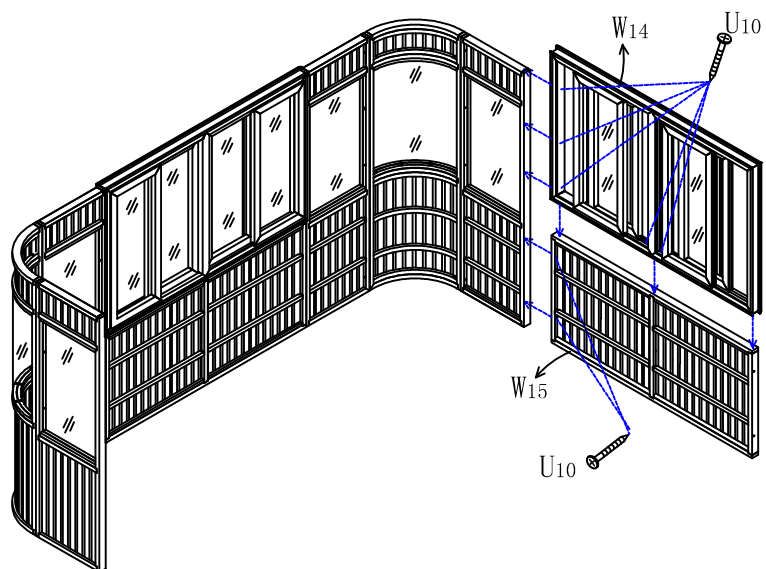


#6

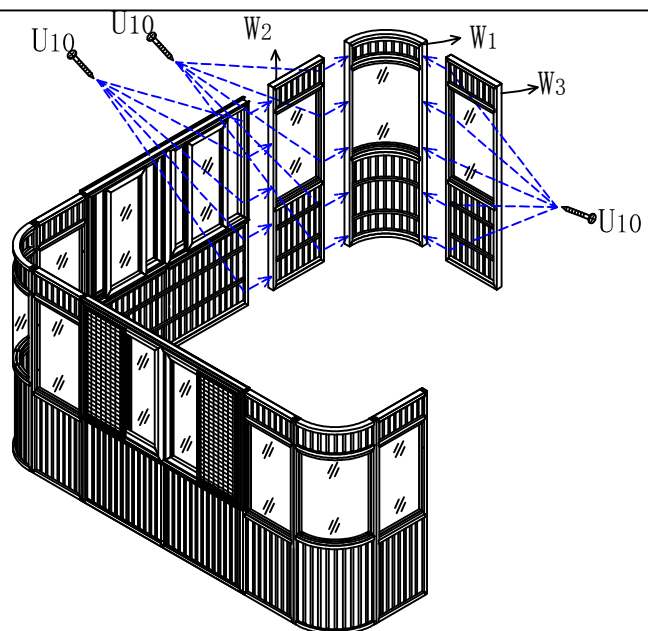

#7

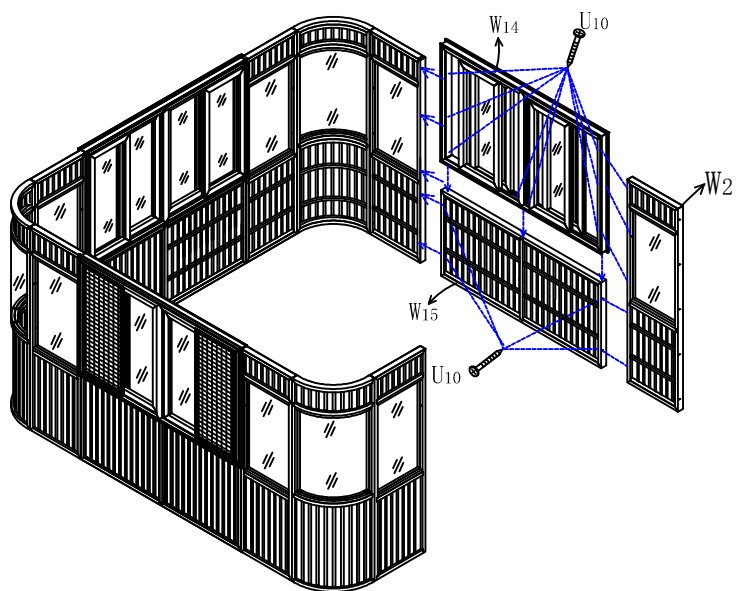


#8

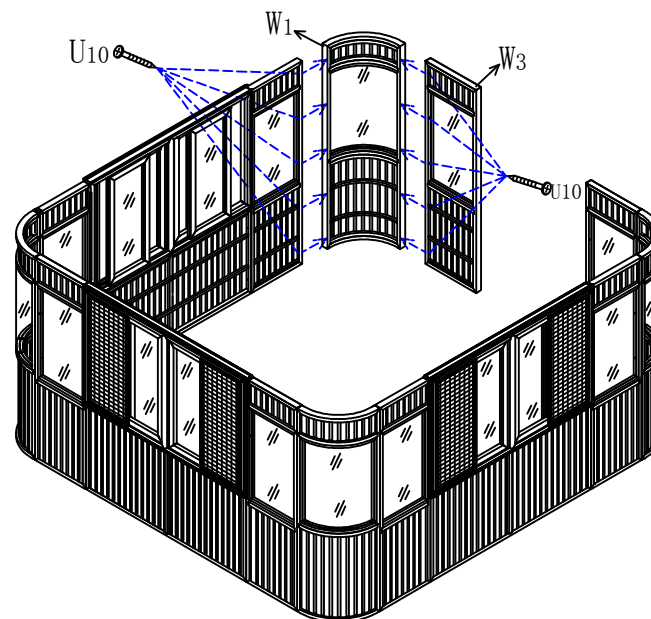


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO


#9

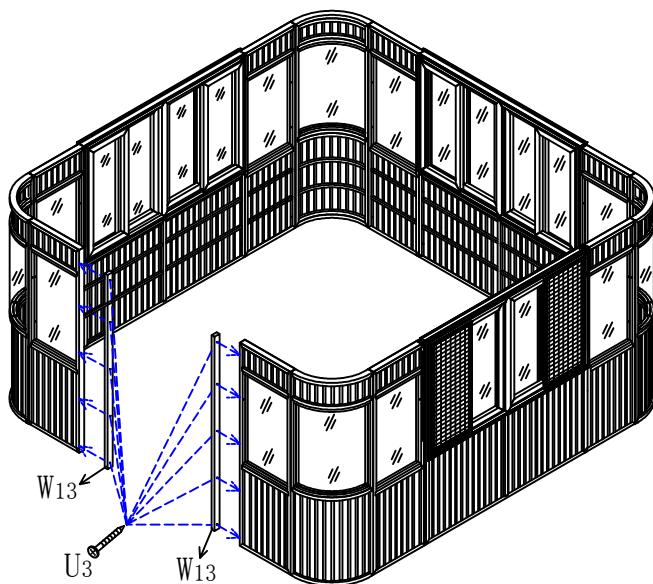


#10

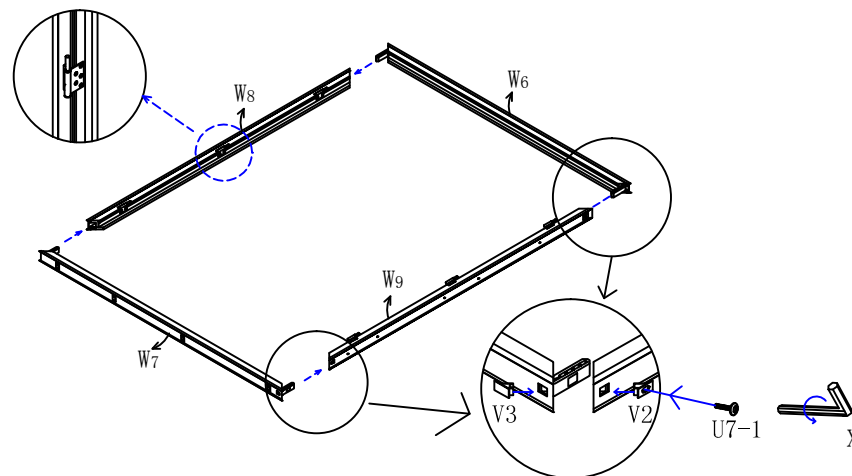

#11

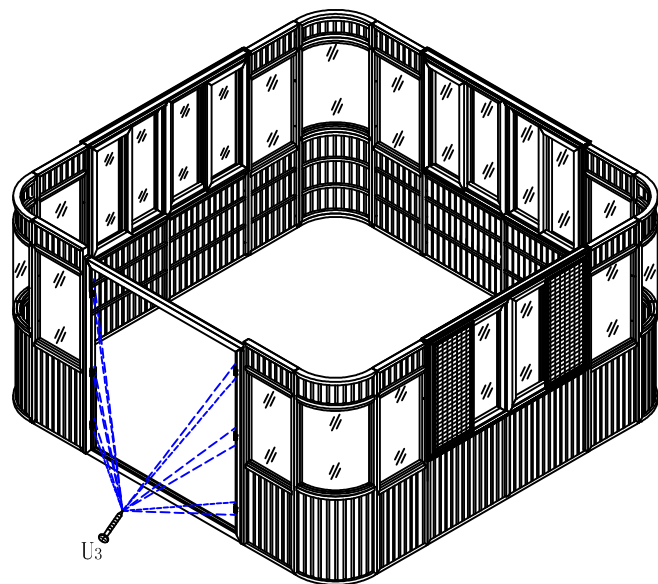


#12

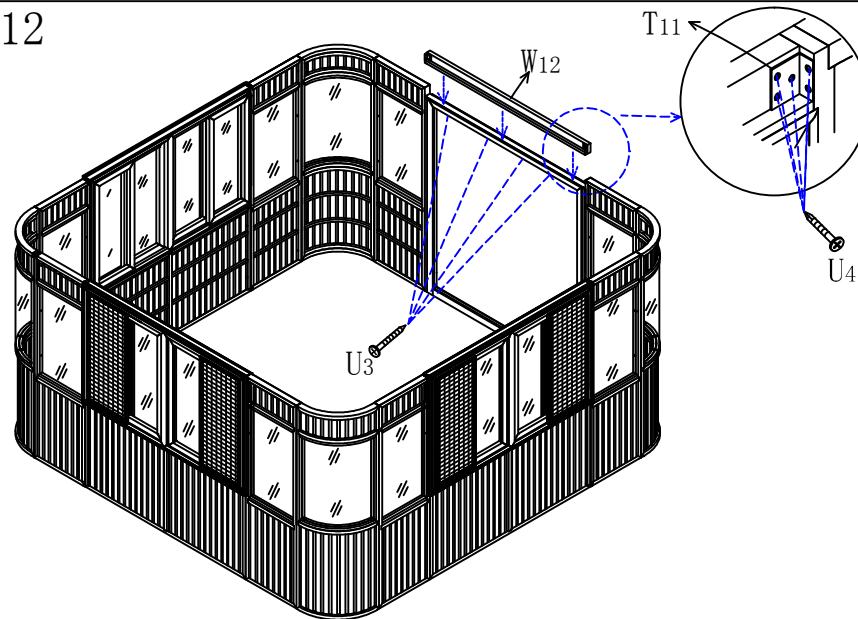


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO


#13

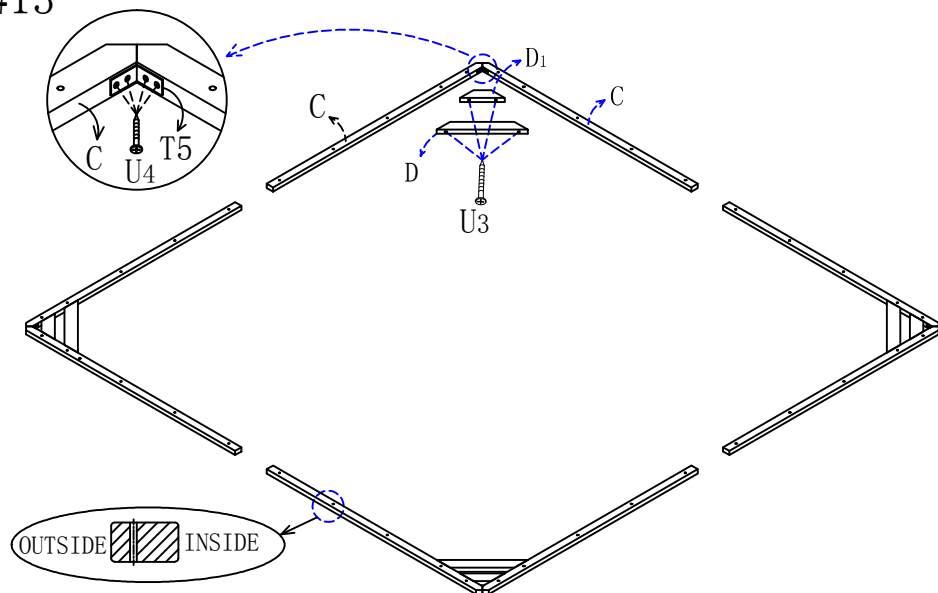


#14

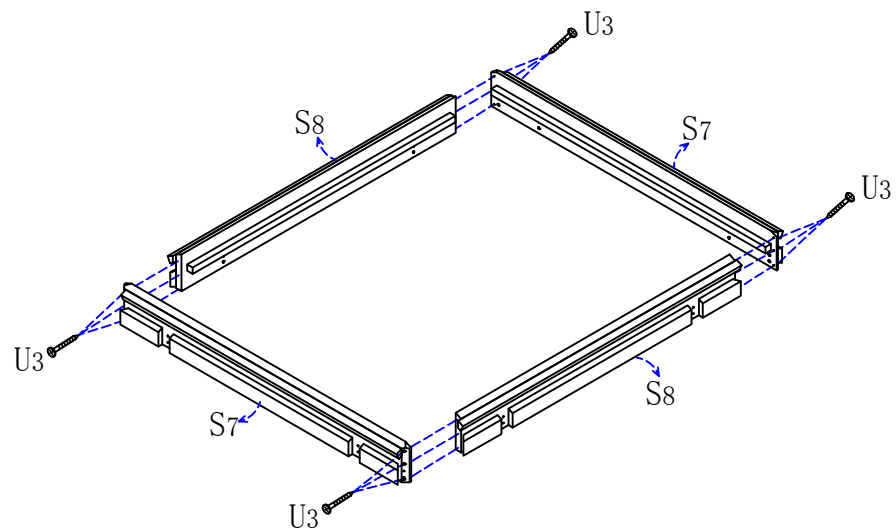

#15

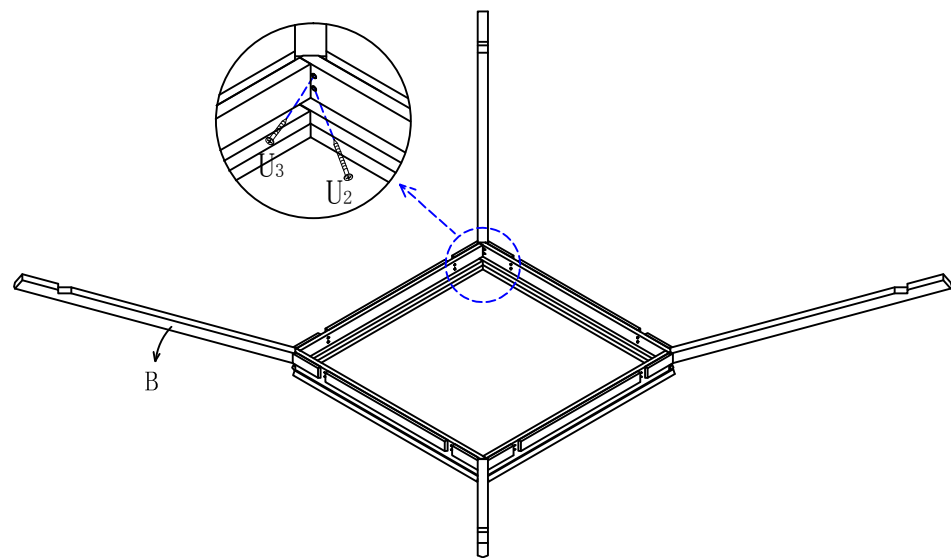


#16

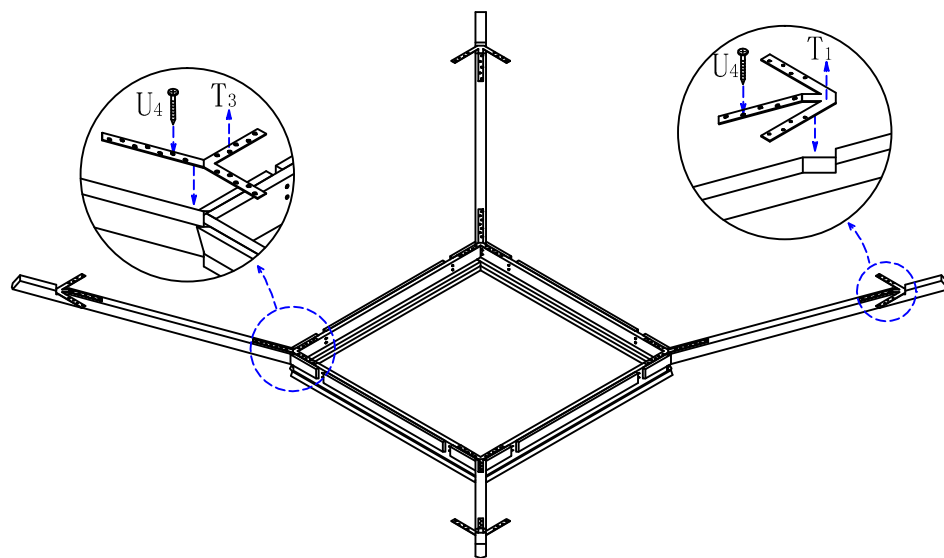


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO


#17

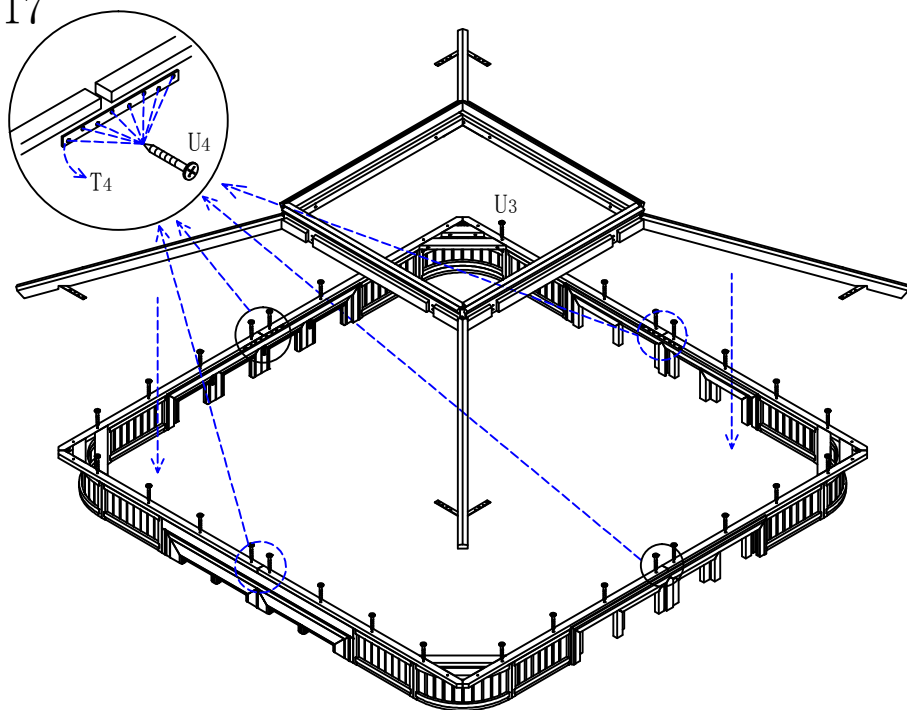


#18

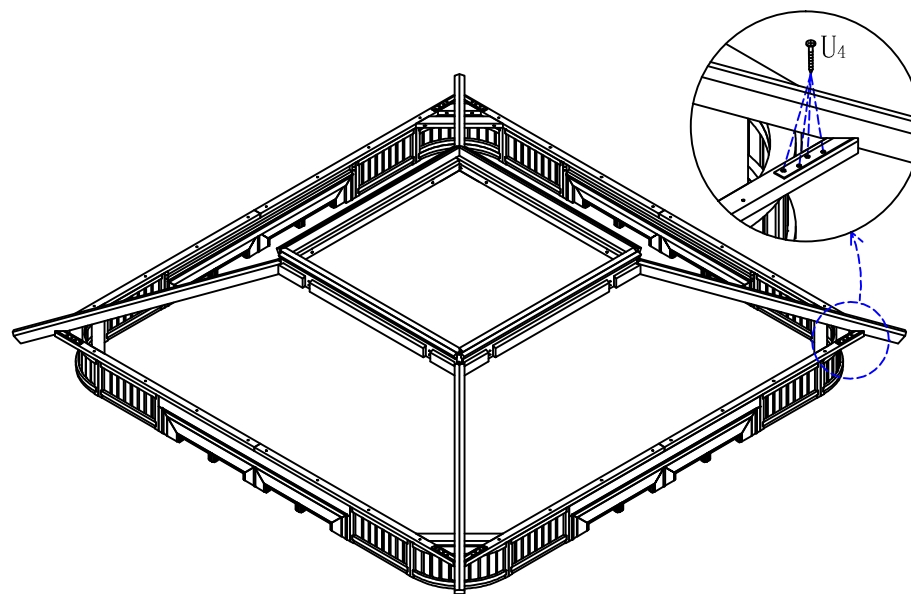

#19

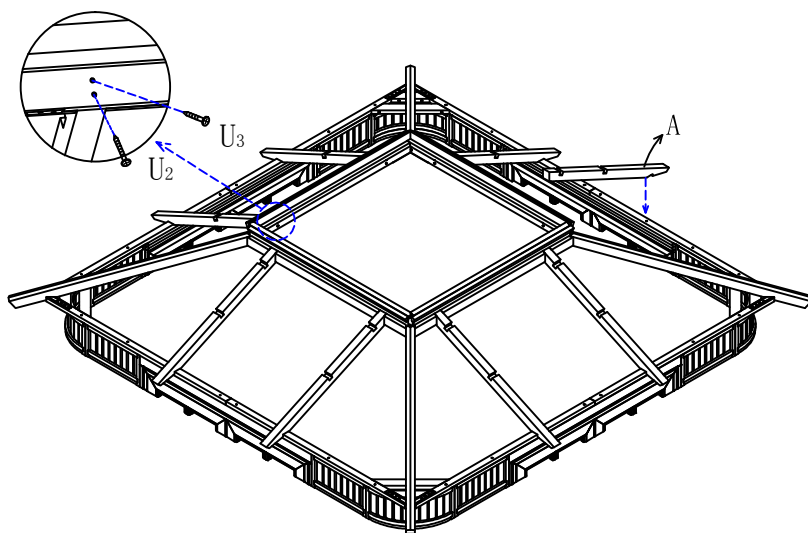


#20

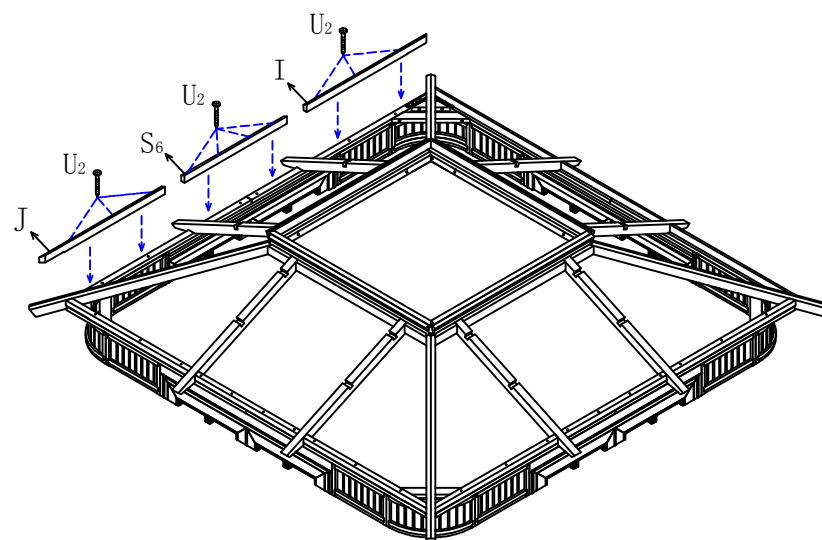


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO


#21

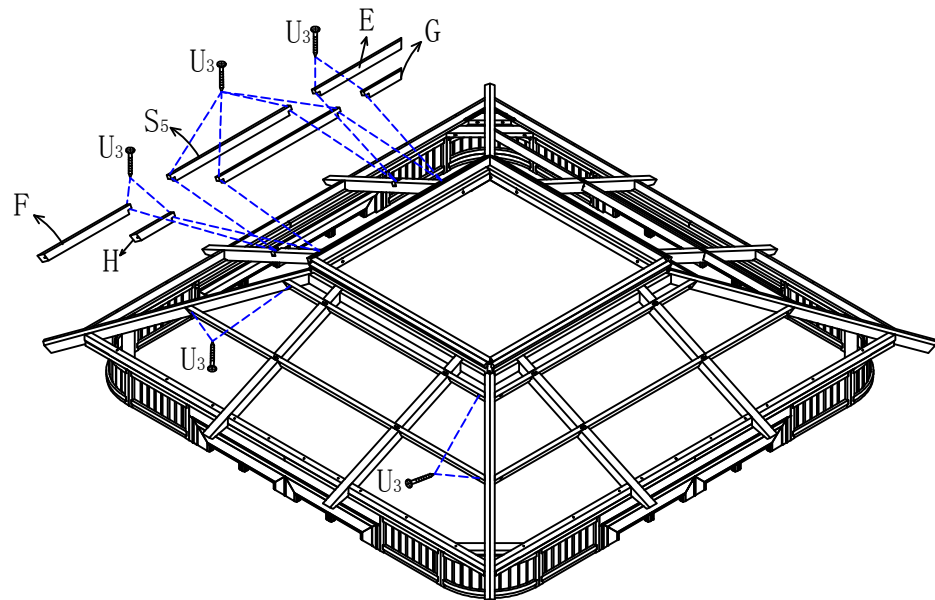


#22

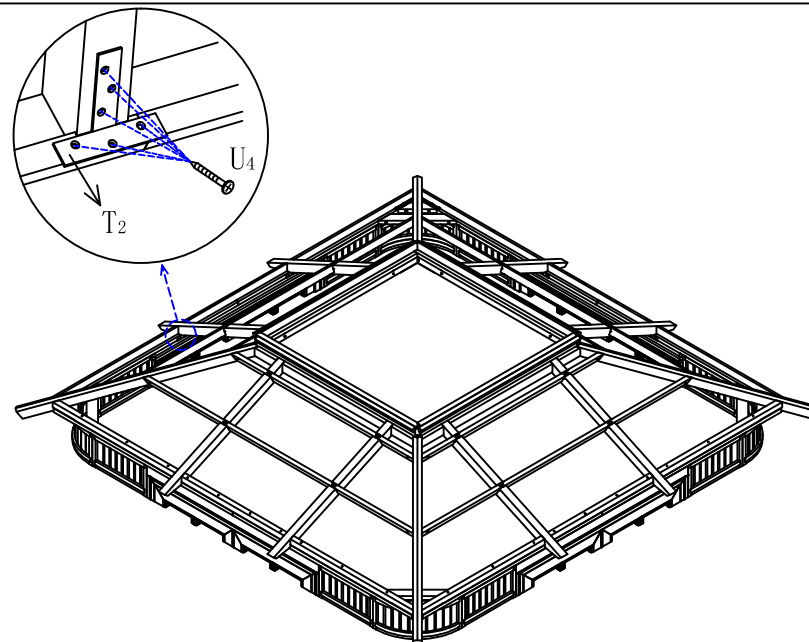

#23

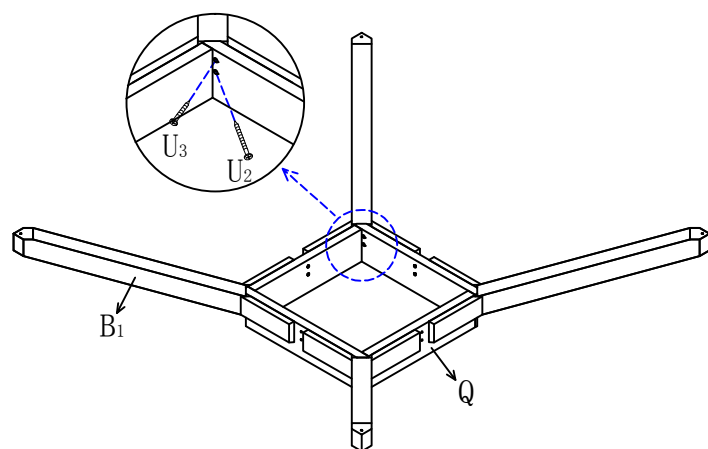


#24

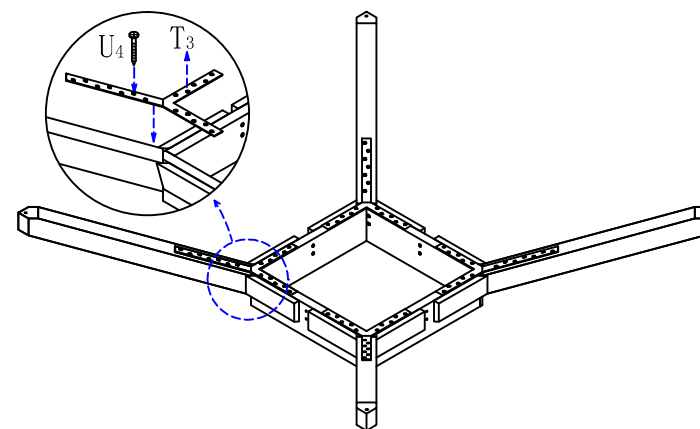


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO


#25

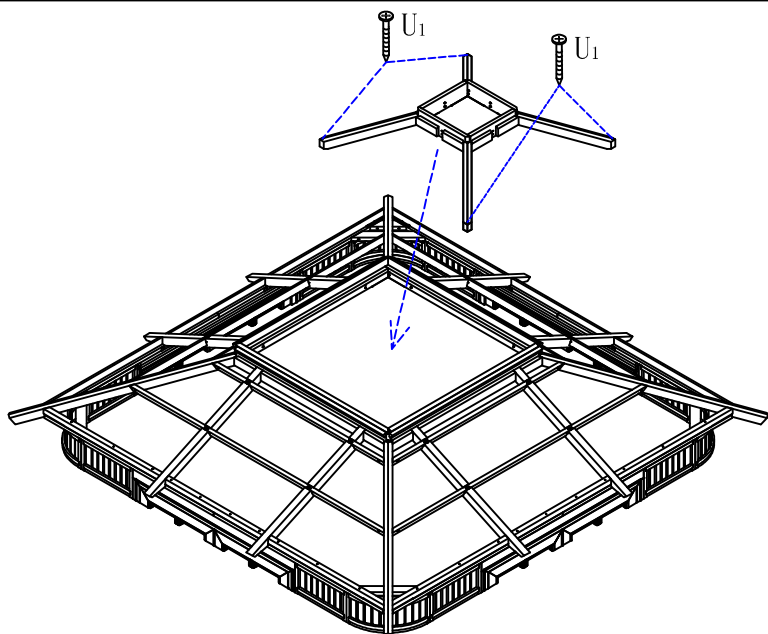


#26

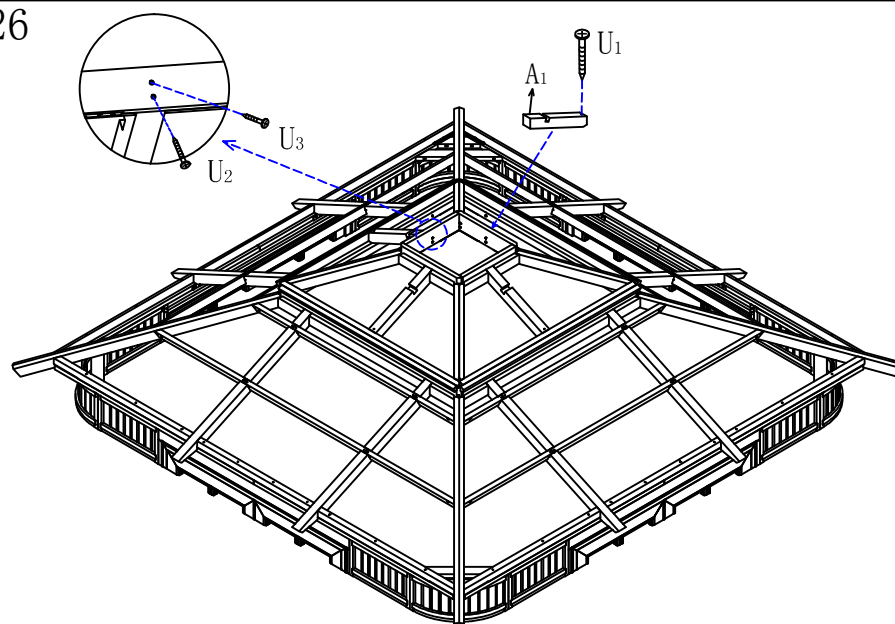

#27

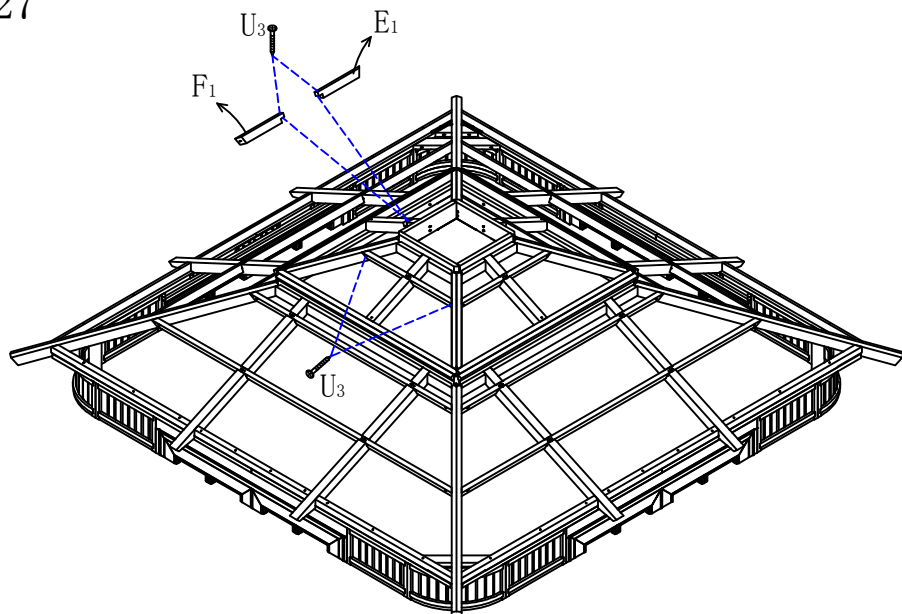


#28

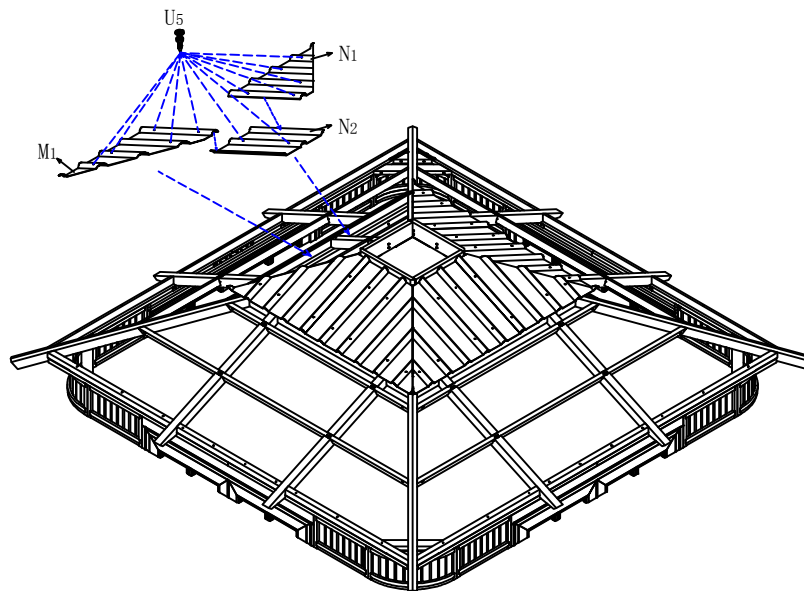


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO


#29

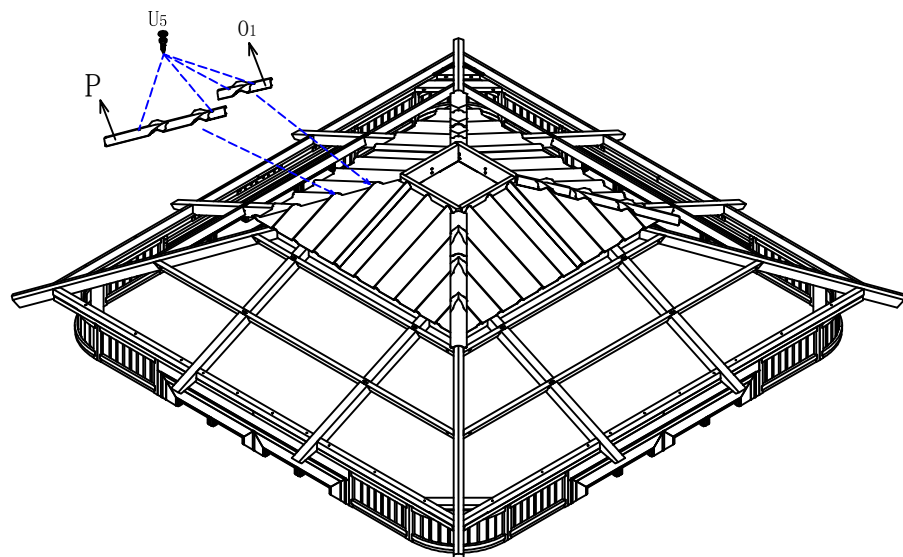


#30

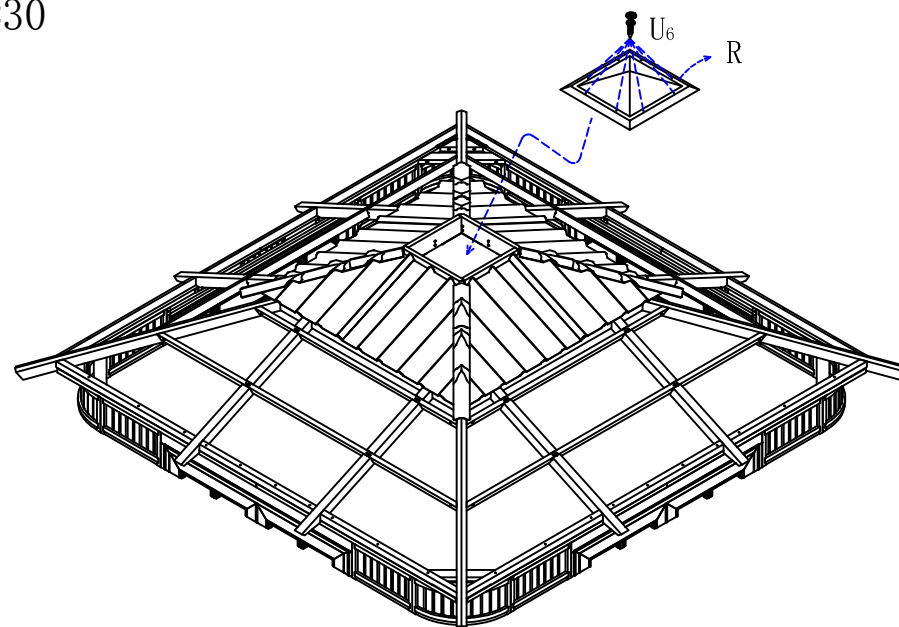

#31

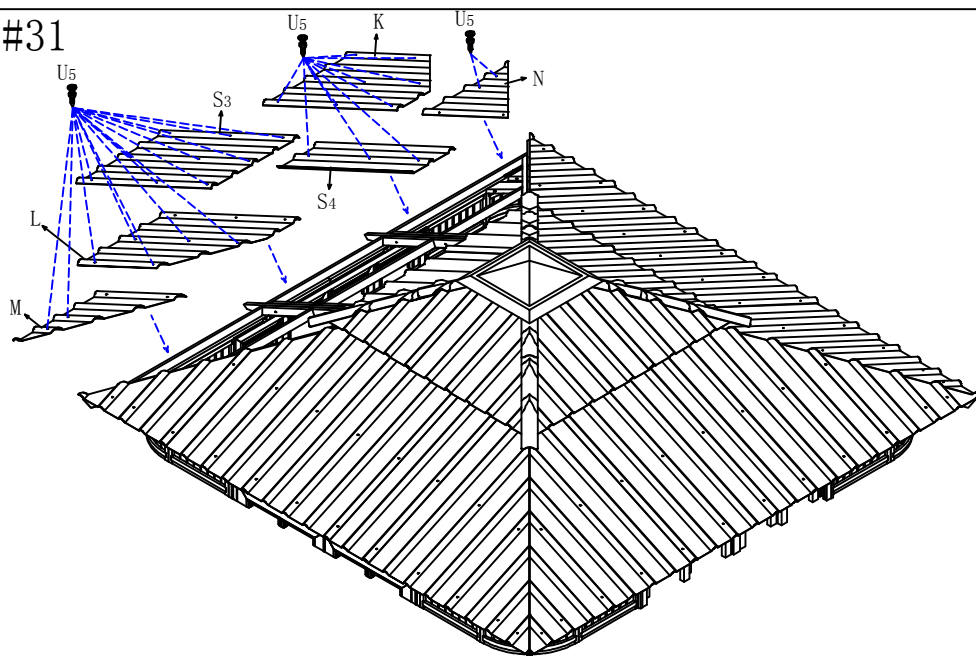


#32


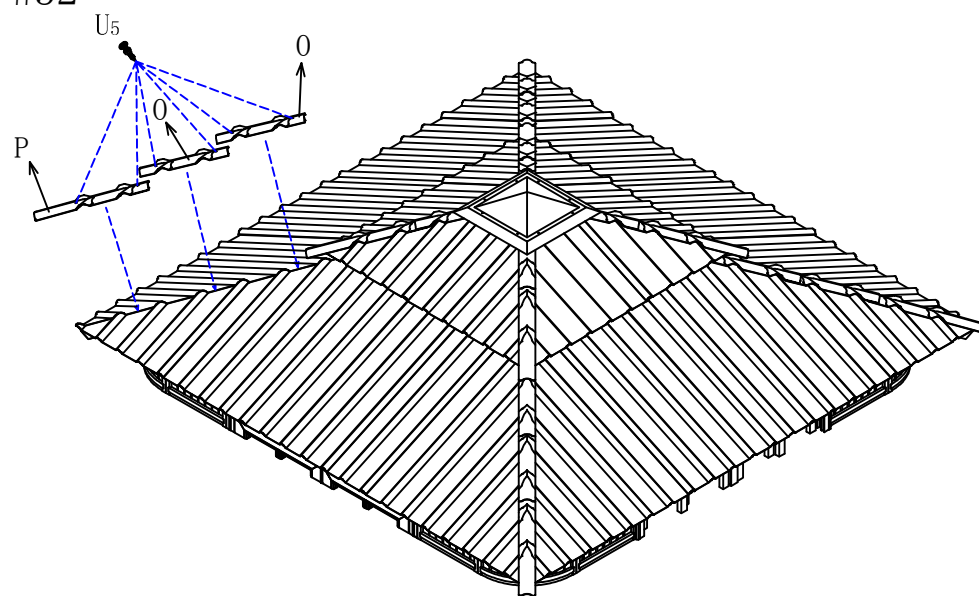


ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO

#33

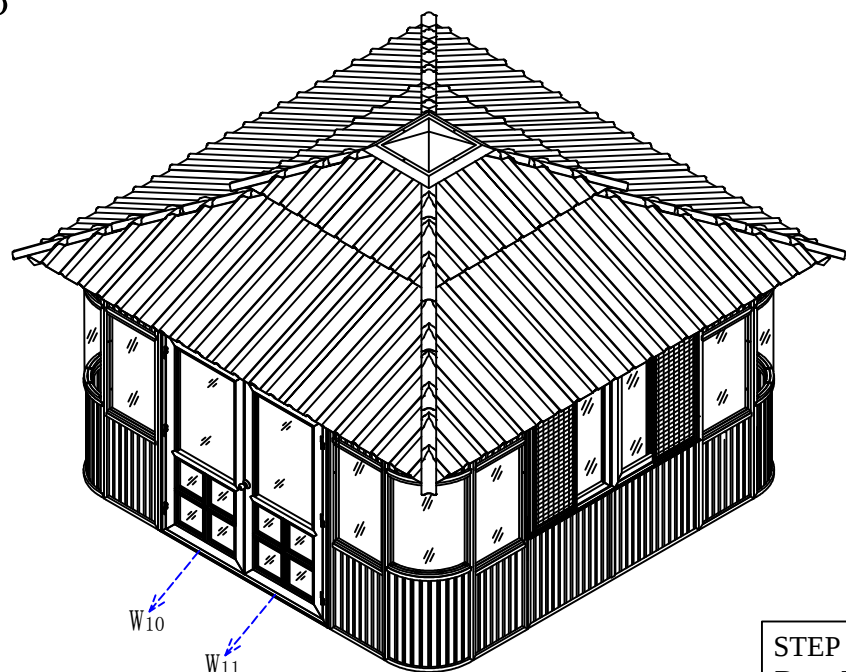


Install shims for smooth operation.

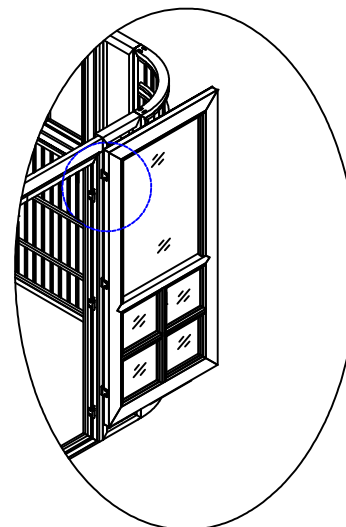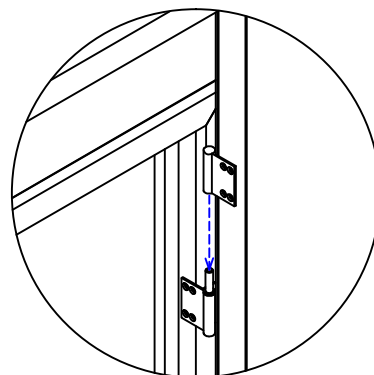


W10

W11


STEP 1:
Door Lock Installation.

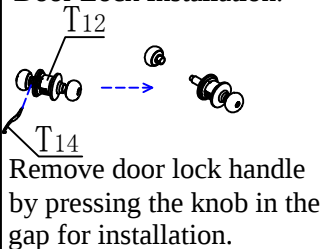

STEP 2:
Remove door lock cover ring and inner lock ring.




STEP 3: Door Lock Handle Installation.

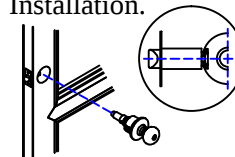


Install door lock handle into door hole and lock the end part of the door handle.


STEP 4: Install door lock inner ring with screw that shown.

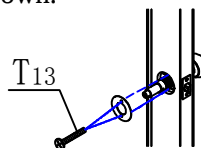

STEP 5: Door Lock Cover Ring Installation.

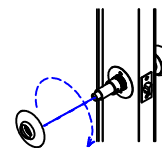

STEP 6: Door Lock Handle Installation.

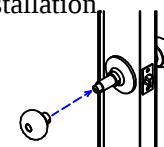

Complete the installation by pushing the door lock handle to the inner part of door lock.



Install handle /lock assembly

ASSEMBLY INSTRUCTION FOR 14'X14' ULTRAWOOD GAZEBO

#34

