
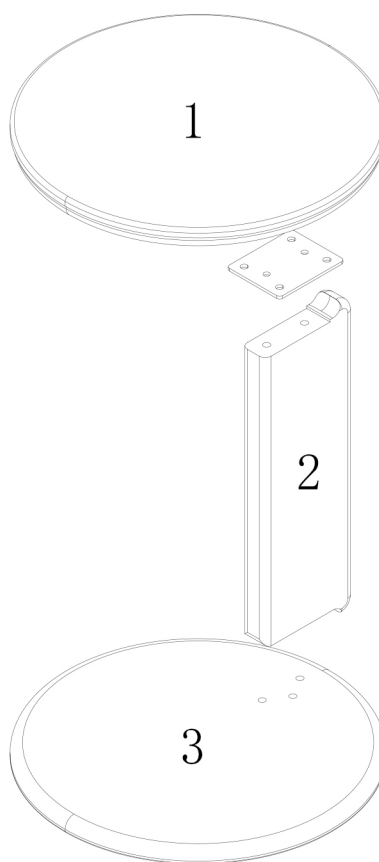



219J08

Assembly Instructions

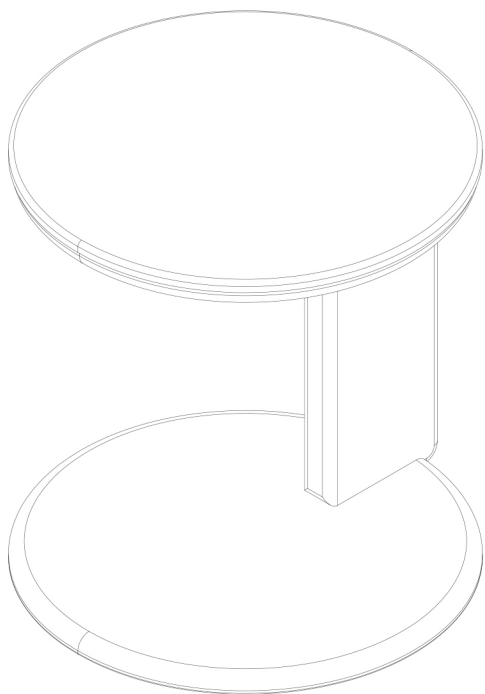

			
A. Allen Wrench 4#=1	B. Allen Wrench 5#=1	C. Hex Socket Screw M6×20=4	D. Plywood nuts M8×17 = 3

Step1. Turn the table upside down, then use A to tighten C, and then use B to tighten D.

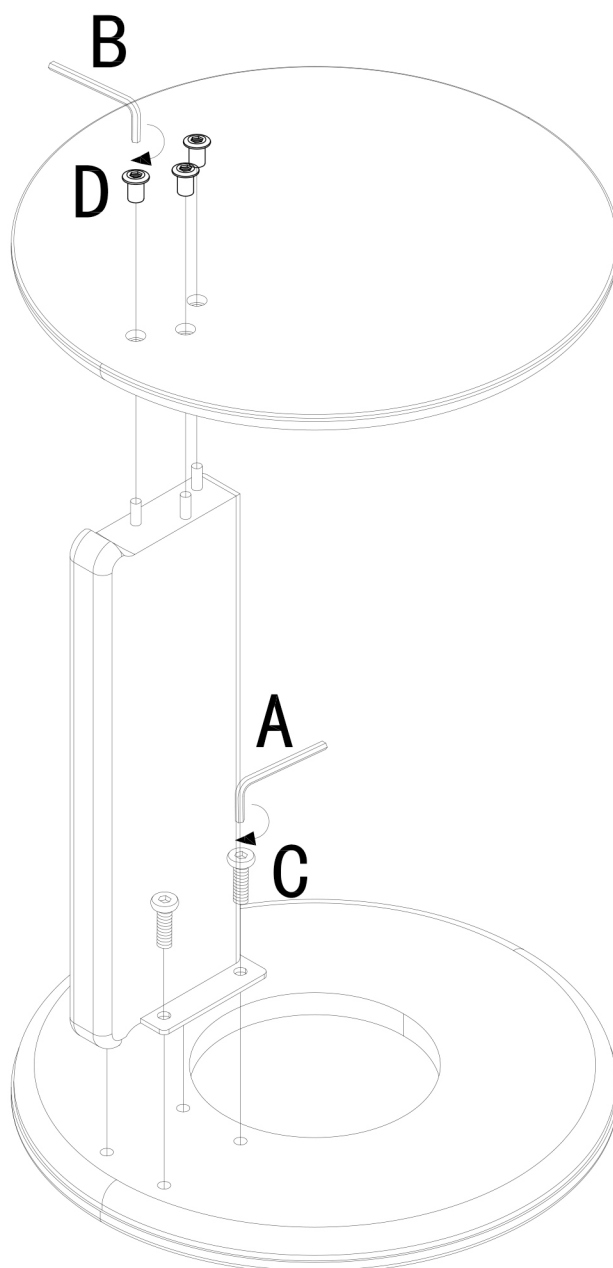

Step2. Place the assembled table right-side up on the floor.