


Assembly Instructions


⚠ Before you throw the carton, please ensure that you have all the parts needed for the assembly.

⚠ **Hardware Note:**
1. For each step please don't fully tighten all the screws at first, when they all align to the holes you can fully tighten them.
2. All the bolts should be assembled **vertically** to the holes.


⚠ **Spare parts** can be found in the hardware box if you do not have enough bolts for assembly.



4pcs




1pc



(foot caps)

1pc

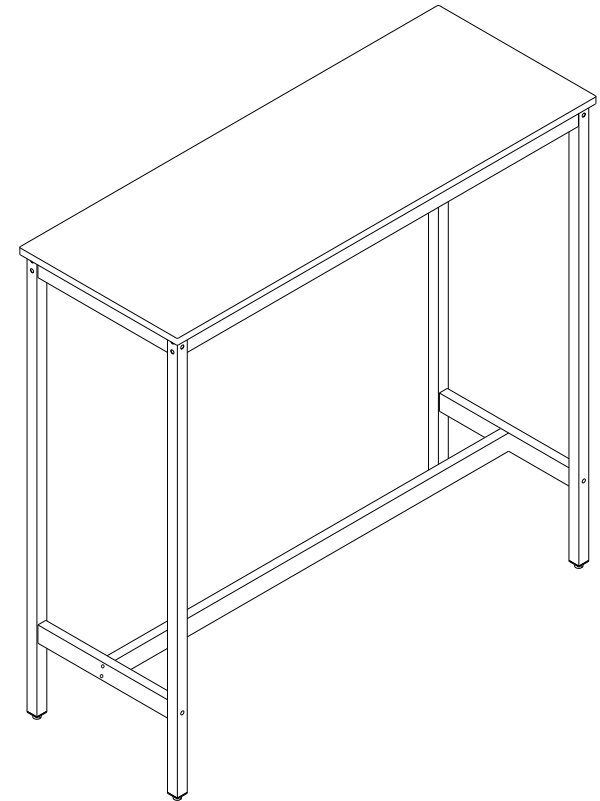

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.


Assembly Instructions

MADE IN CHINA

Parts and Hardware


Please check to make sure you have all parts and hardware before starting assembly process.

Ⓐ




Wooden Top
1pc

Ⓑ

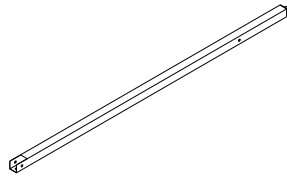


Legs
4pcs

Ⓒ

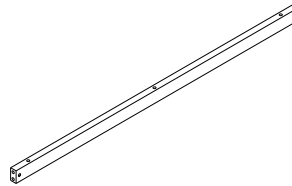


Upper long tube
2pcs

Ⓓ

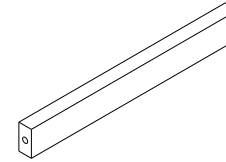


Upper short tube
2pcs

Ⓕ

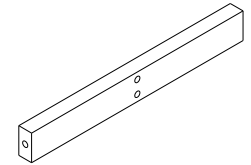


Lower short tube
2pcs

Ⓖ

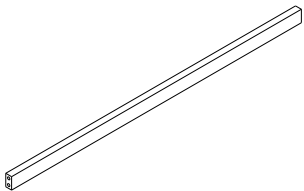


Lower long tube
1pc

①




Short bolts
20pcs

②



Long bolts
6pcs

③





Allen wrench
1pc

Assembly Instructions



MADE IN CHINA

Assembly Instructions

STEP 1: Assemble upper short tube and lower short tube to legs.

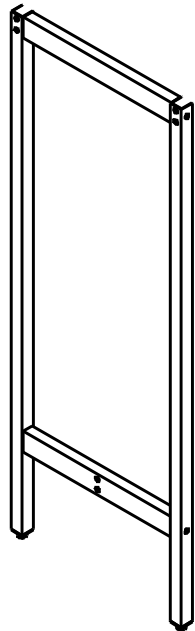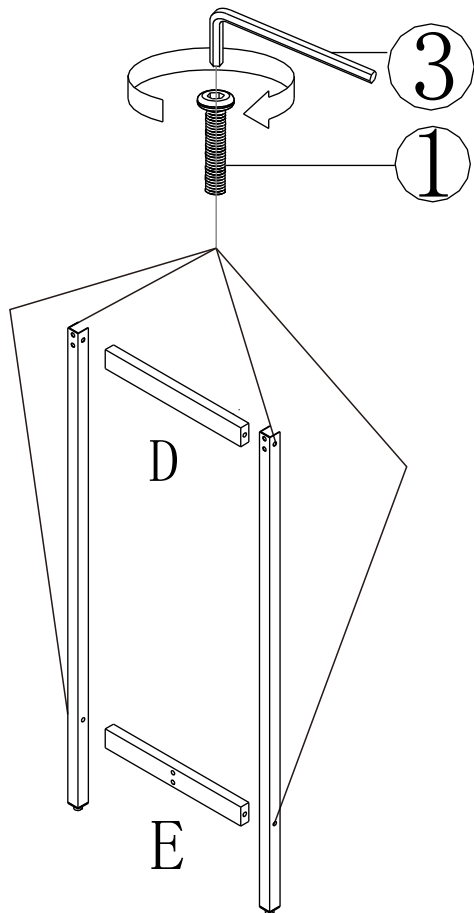

STEP 2: Assemble upper long tube to legs.

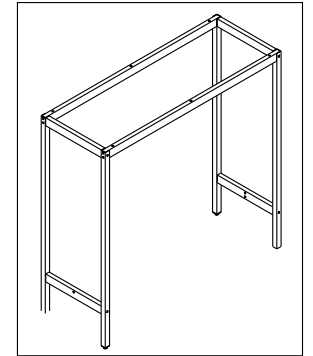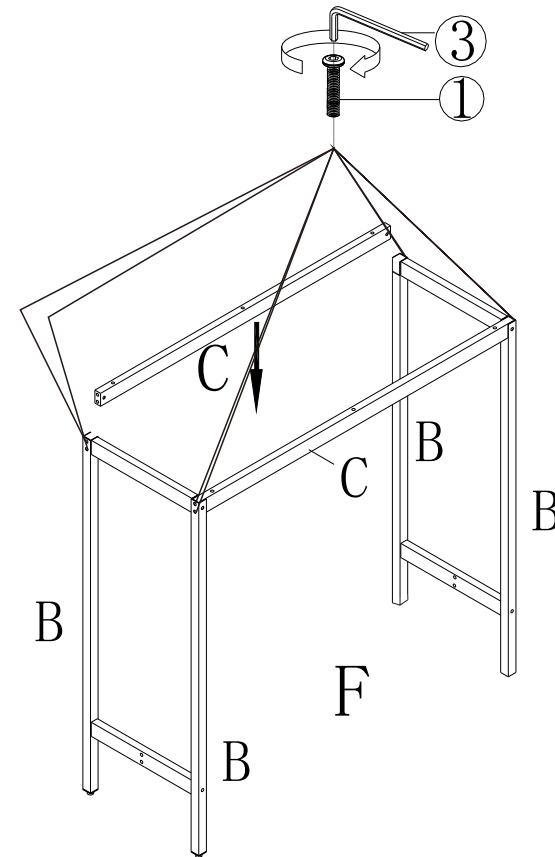


Assembly Instructions

MADE IN CHINA

Assembly Instructions

STEP 3: Assemble Lower long tube to lower short tube.

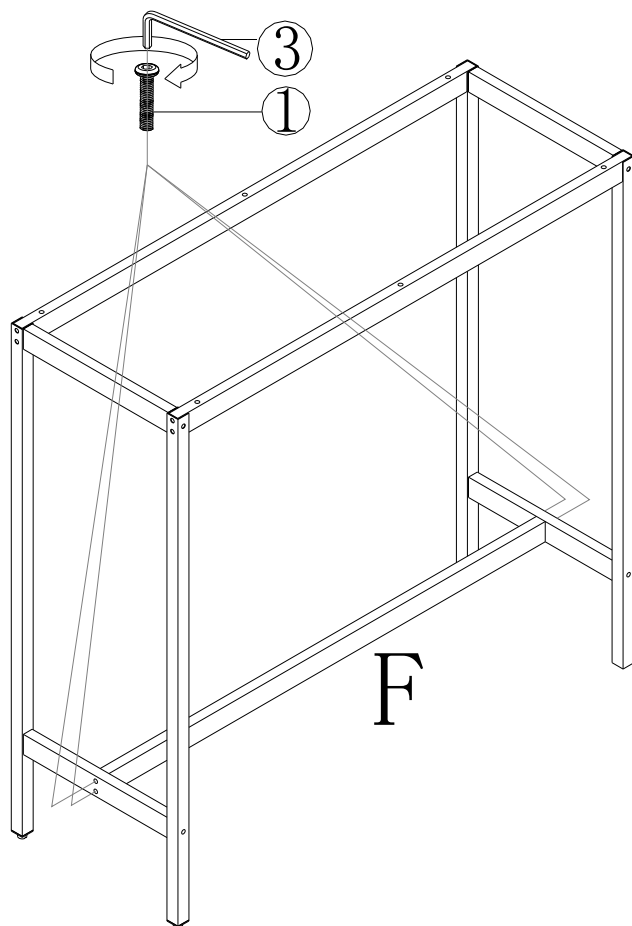

STEP 4: Put wooden top on a soft place then assemble metal frame to wooden top. Half tighten all the bolts until they are align to the holes then fully tighten them by the short side of wrench.

