

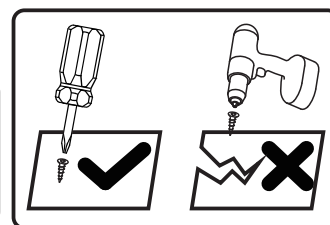


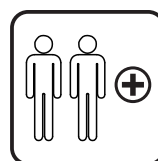

CLUB NINE
PETS

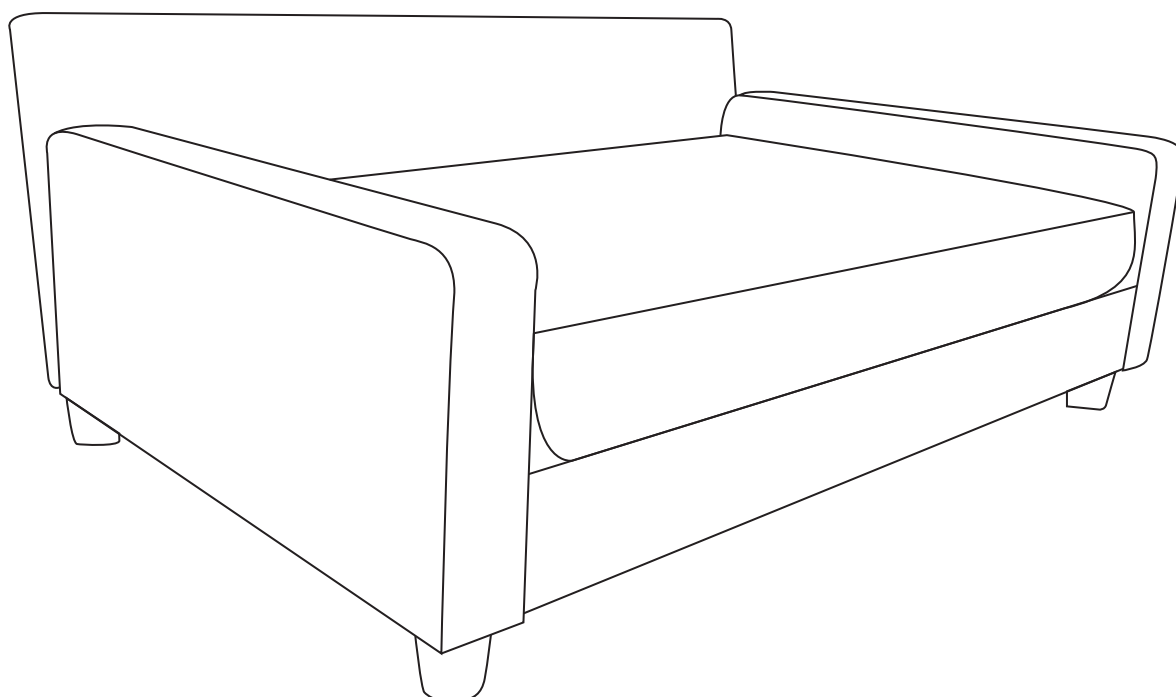

Tools Recommended

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

FR_IMPORTANT: A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION ULTÉRIEURE.

ES_IMPORTANTE, LEA Y GUARDE PARA FUTURAS REFERENCIAS.


PT_IMPORTANTE, RETER PARA REFERÊNCIA FUTURA: LEIA ATENTAMENTE.

DE_WICHTIG! SORGFÄLTIG LESEN UND FÜR SPÄTER NACHSCHLAGEN AUFBEWAHREN.


IT_IMPORTANTE! CONSERVARE IL PRESENTE MANUALE PER FUTURO RIFERIMENTO E LEGGERLO ATTENTAMENTE.

PARTS


1 x 1

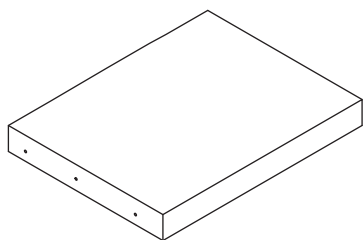


2 x 1

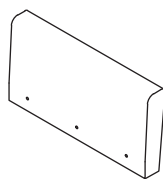


3 x 1

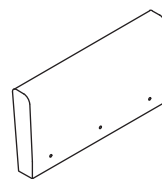

4 x 1

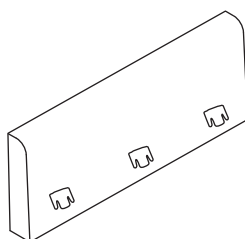


5 x 1

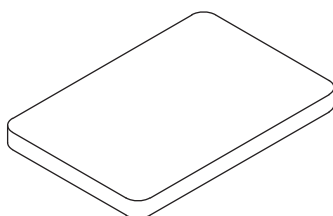


HARDWARE

A x6
M8*40




B x4




C x4



D x1
M5



01

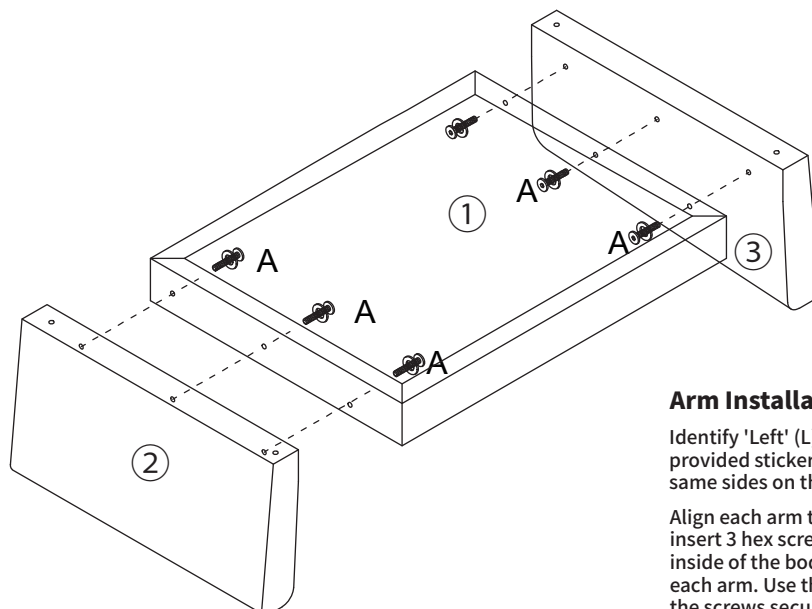
 AX6


Arm Installation (Metro Only)


Identify 'Left' (L) and 'Right' (R) arms using the provided stickers and match them to the same sides on the sofa frame.

Align each arm to the side of the bed frame and insert 3 hex screws per side (6 total) from the inside of the body into pre-installed T-nuts in each arm. Use the provided Allen key(D) to tighten the screws securely.

02

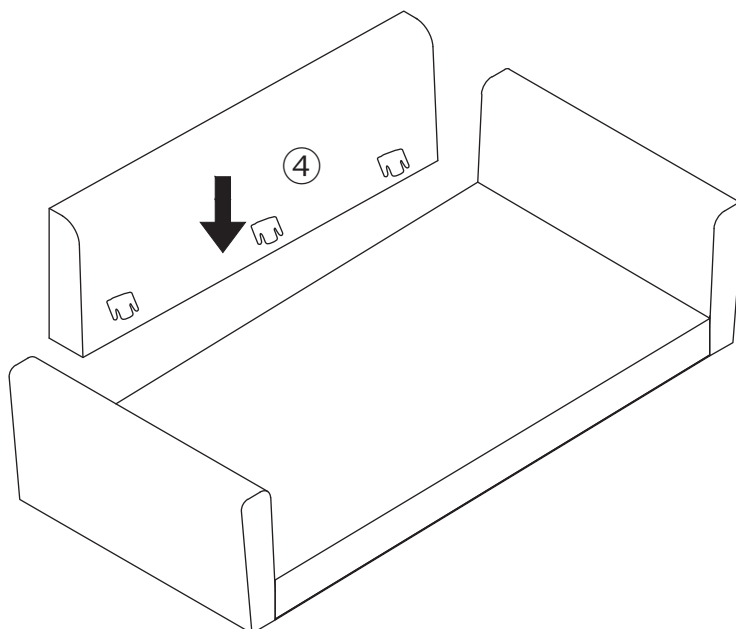

03


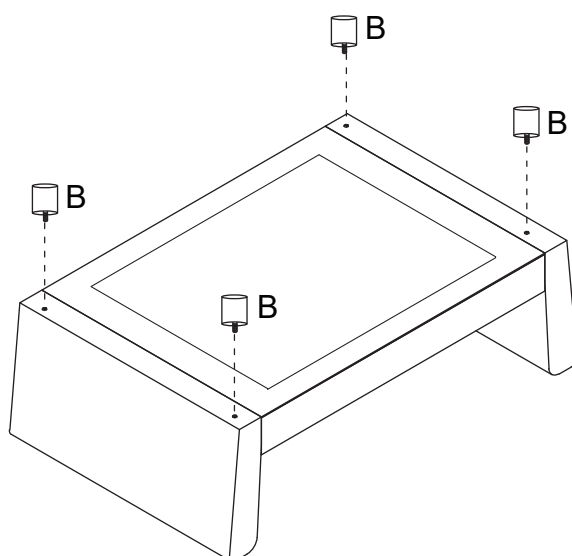
 BX4


Leg Assembly

Each leg comes with a pre-installed bolt. Screw each leg into the threaded inserts on the bottom of the sofa frame by hand.

After full assembly, apply the provided anti-slip pads to the bottom of each leg.

Use the 3 extra plastic washers (included in the parts bag) only if the bed is unbalanced after leg installation.

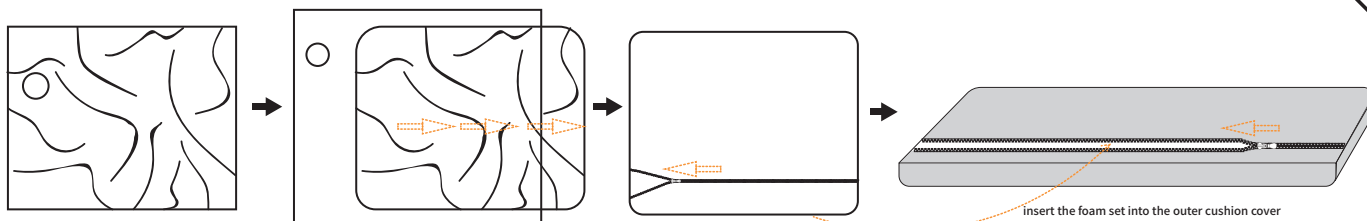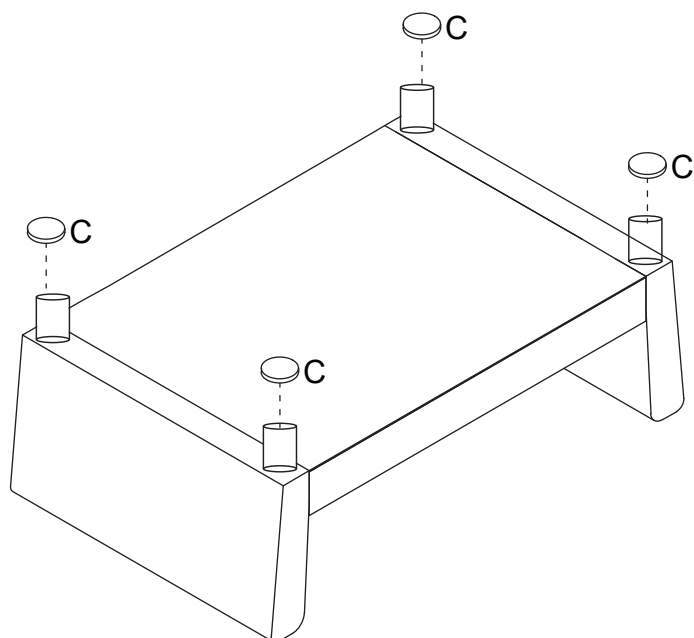 CX4


Vacuum-Sealed Cushion Instructions

Do not use any sharp objects to open the vacuum-sealed bag, just unzip the bag and remove the foam. Close the zipper on the foam cover, insert the foam set into the outer cushion cover, and allow 24 hours for the foam to fully regain its shape. Gently pat the foam to help it recover faster.

