
# ASSEMBLY INSTRUCTIONS

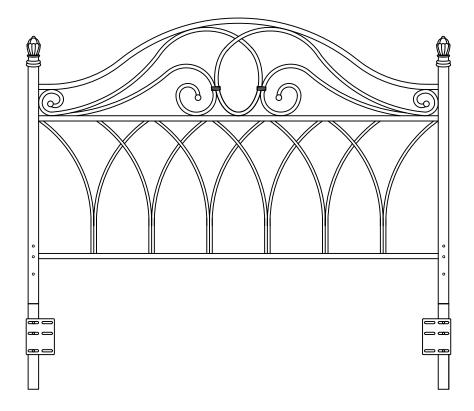

Fine Furniture for every stage of life

Queen / Full Headboard

PAGE 01 OF 04

### **ASSEMBLY INSTRUCTIONS**

### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

15 MINUTE

## PARTS IDENTIFICATION

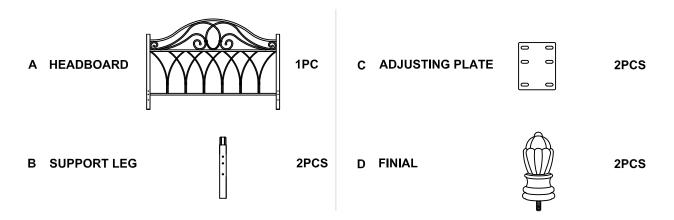

# HARDWARE IDENTIFICATION

1	BOLT (1/4"x2-1/4" - BLK)		4PCS	5	NUT (ø1/4"x11x8mm - BLK)		8PCS
2	BOLT (1/4"x7/8" - BLK)		4PCS	6	PLASTIC END CAP (¢1-1/2"mm - BLK)		2PCS
3	WASHER (¢16mm - BLK)	0	12PCS	7	ALLEN KEY (4x22X60mm - BLK)		1PC
4	WASHER (¢25mm - BLK)		8PCS	8	WRENCH (11.3x12.5X55mm - WHT)	5	1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ASSEMBLY INSTRUCTIONS

### **ASSEMBLY**

STEP 1:


Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.

### **60" ASSEMBLY INSTRUCTIONS**

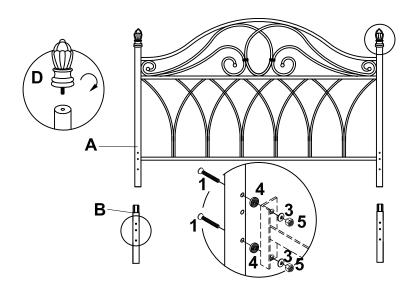



### **STEP 2:**

### **54" ASSEMBLY INSTRUCTIONS**

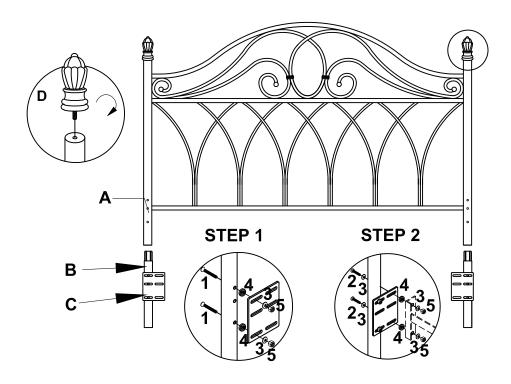

# ASSEMBLY INSTRUCTIONS STEP 3:

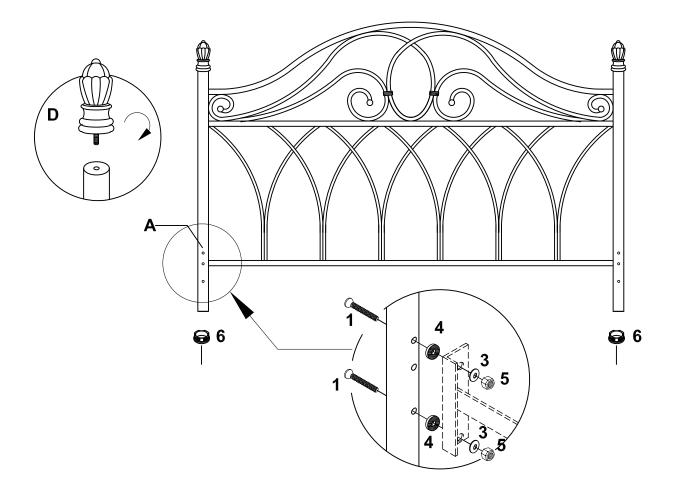

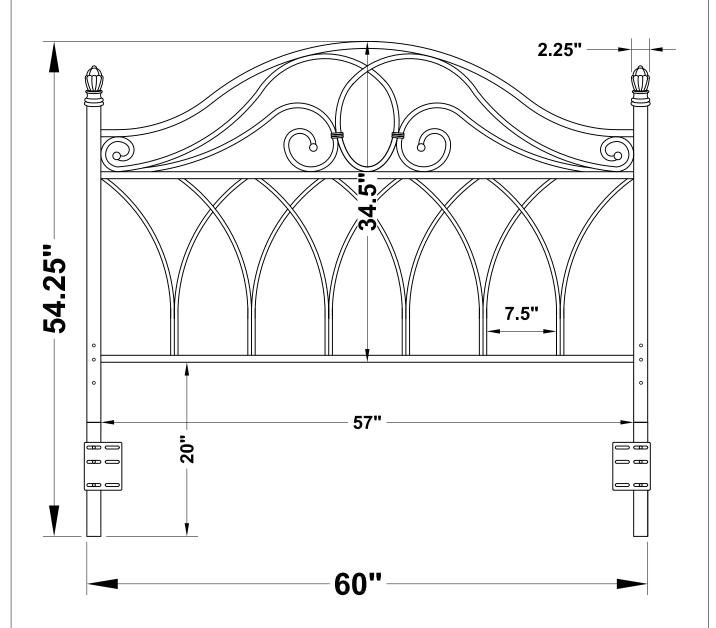

Note: Dimension tolerance ±5%