


Assembly Instruction


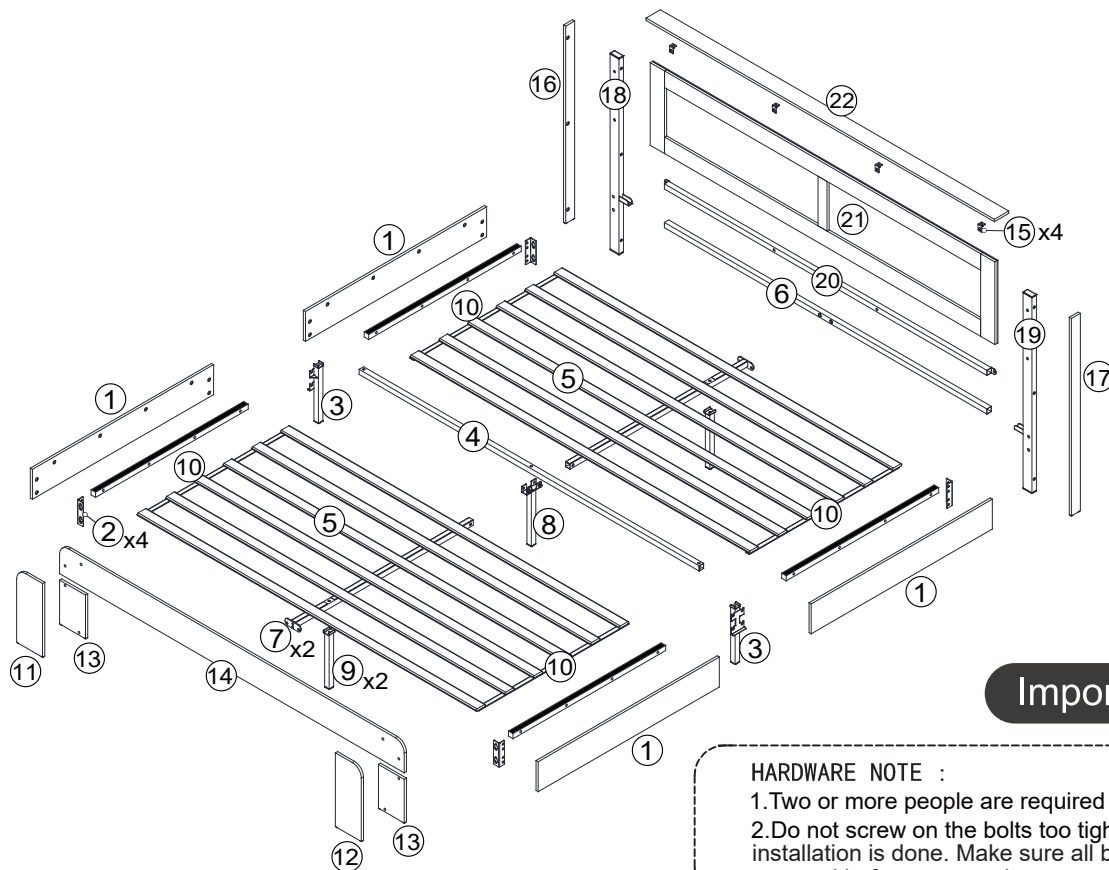


Important Note



HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

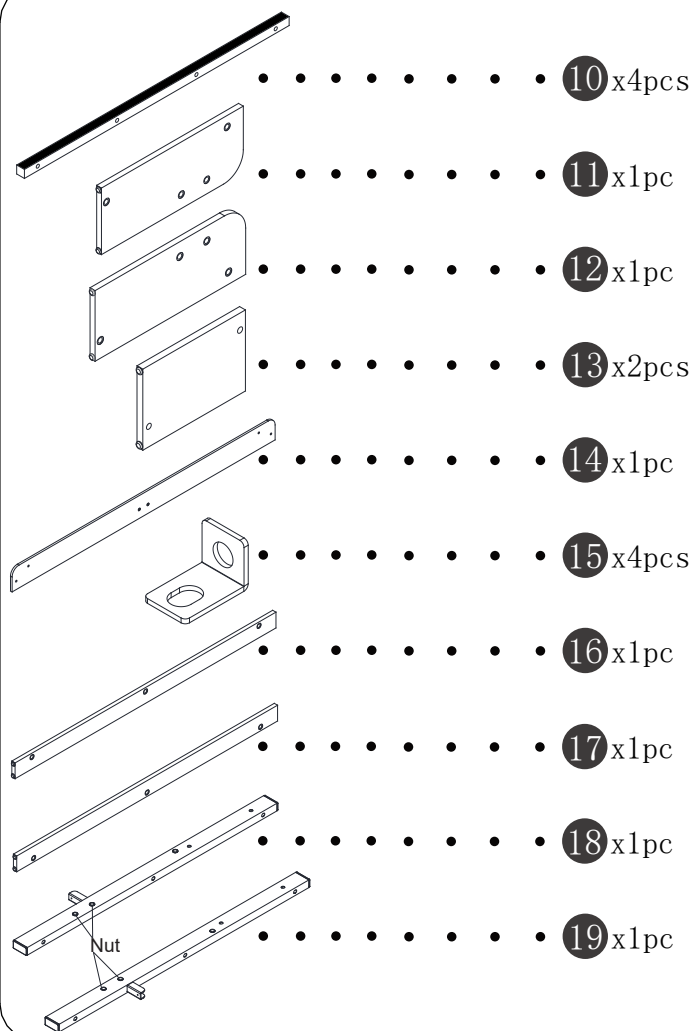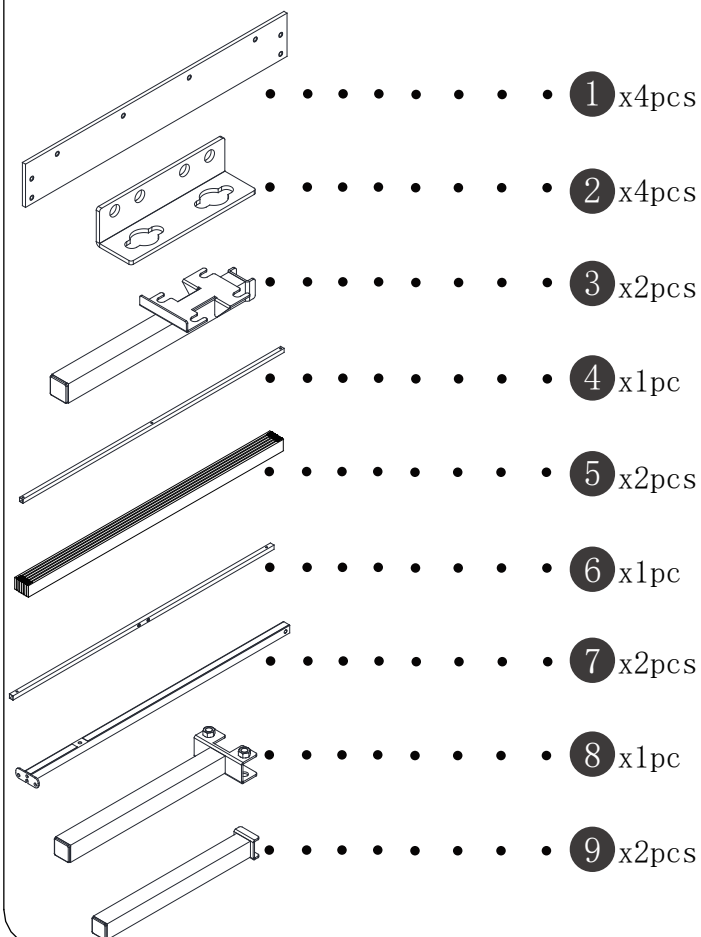


1

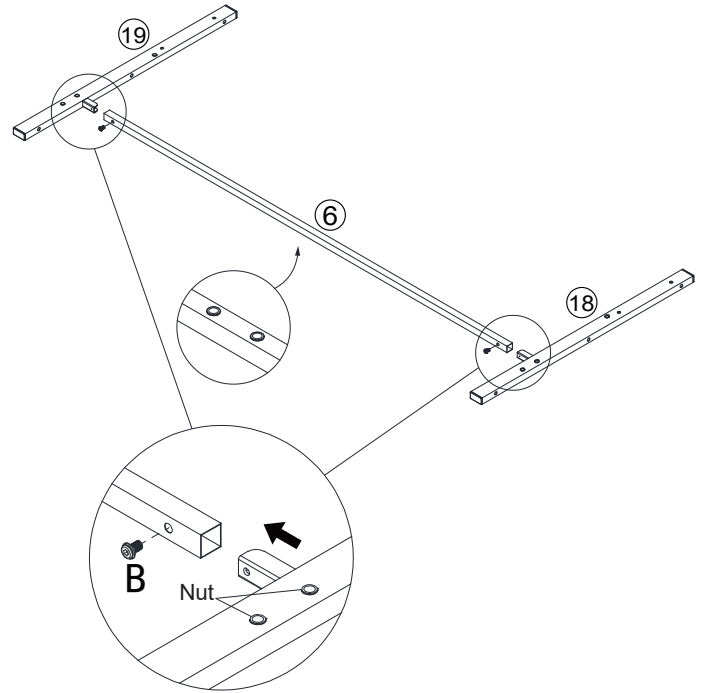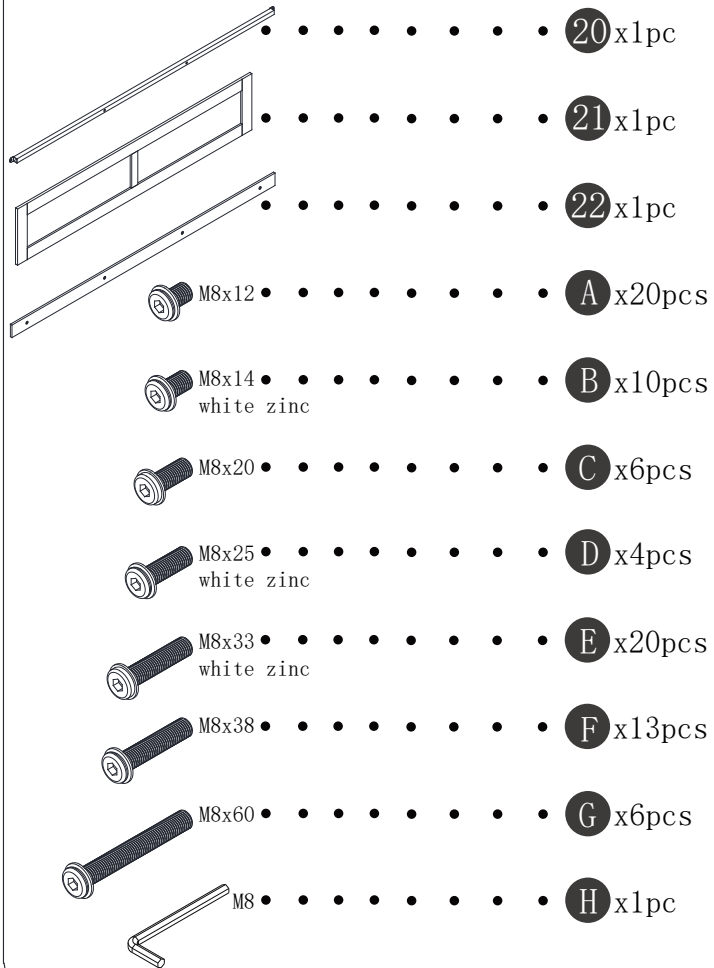


B		2 pcs	white zinc
---	--	-------	------------

2

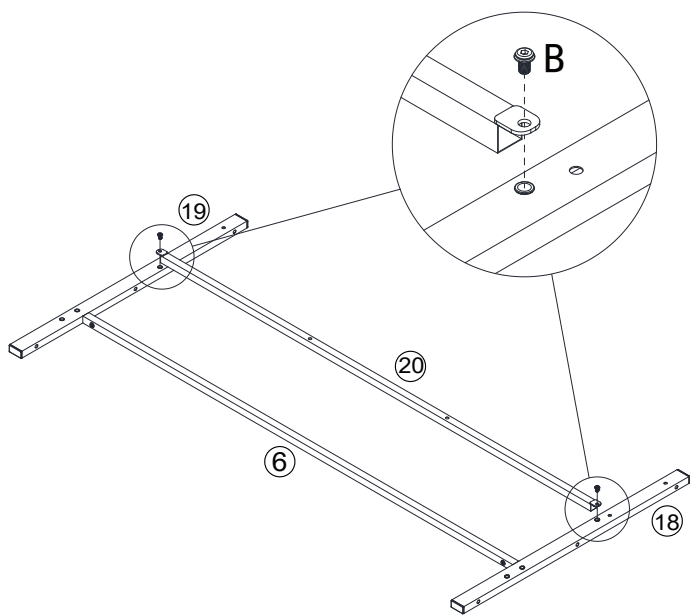


B		2 pcs	white zinc
---	---	-------	------------

3

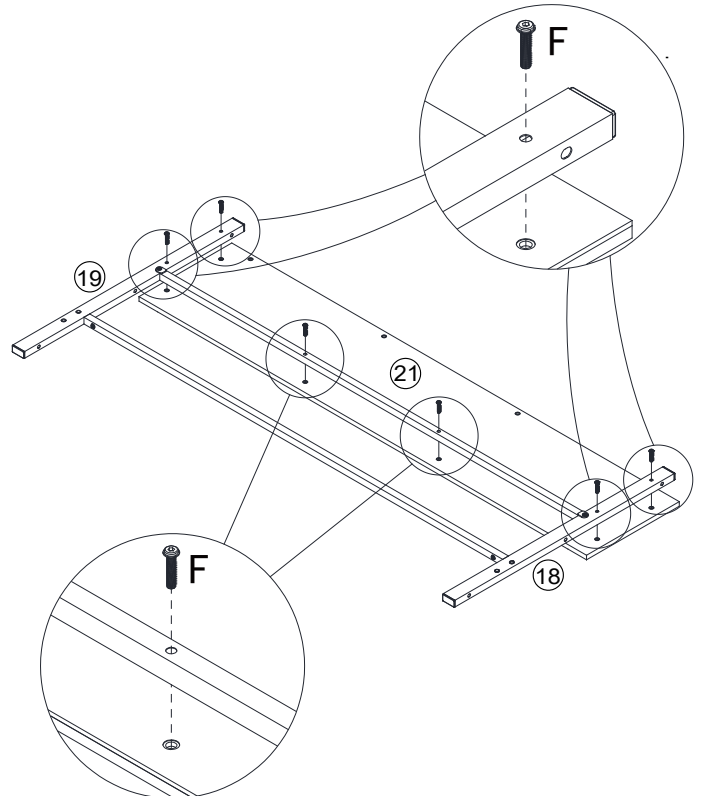


F		6 pcs	
---	--	-------	--

4

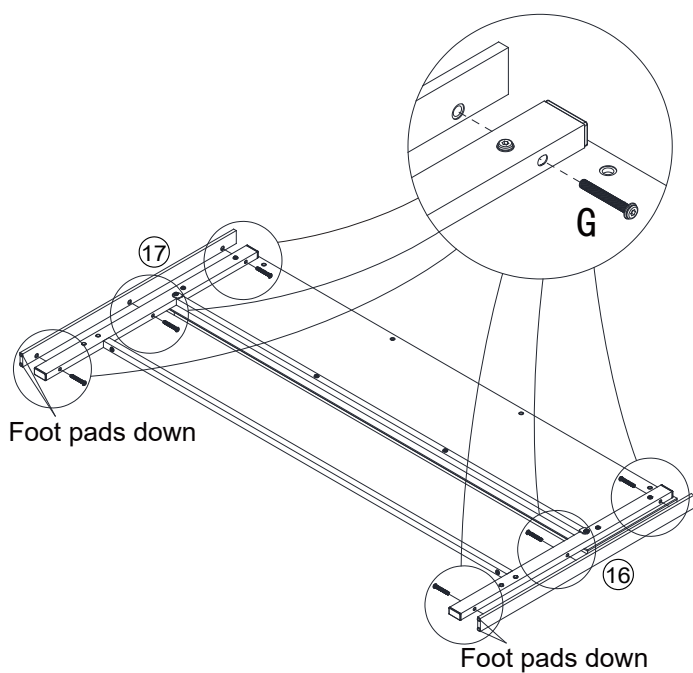


G		M8x60	6pcs
---	---	-------	------

5

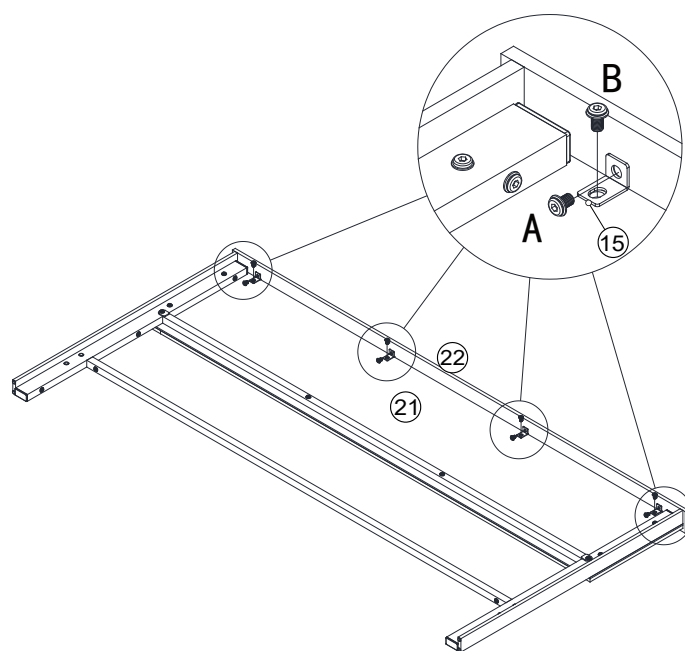


A		M8x12	4pcs
B		M8x14	4pcs

white zinc

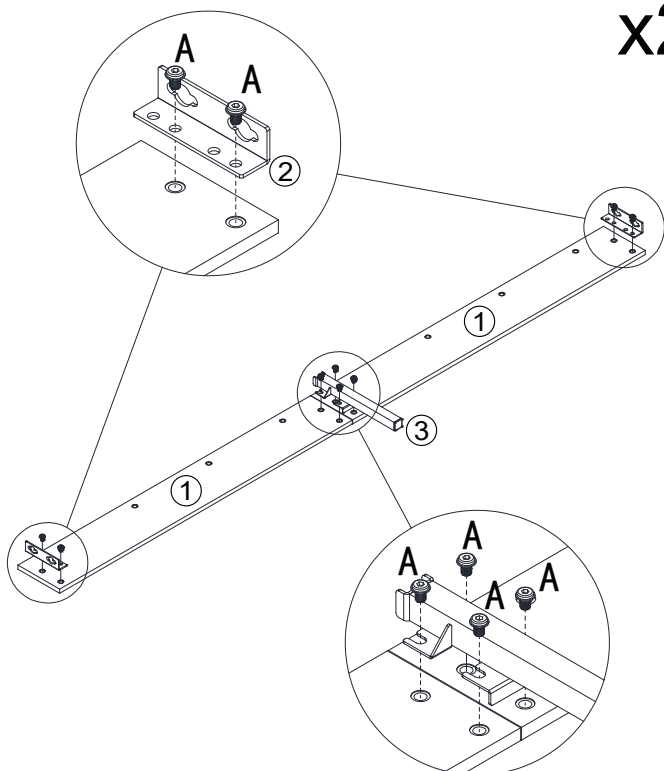6
x2


A		M8x12	16pcs
---	---	-------	-------

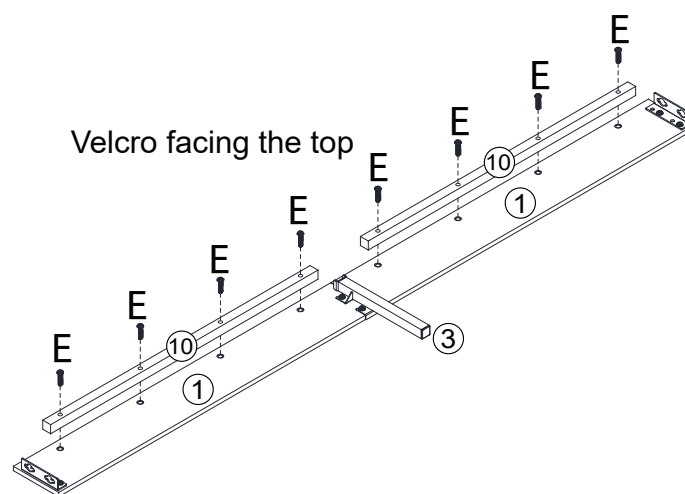7
x2

E		M8x33	16pcs
---	---	-------	-------

white zinc


8

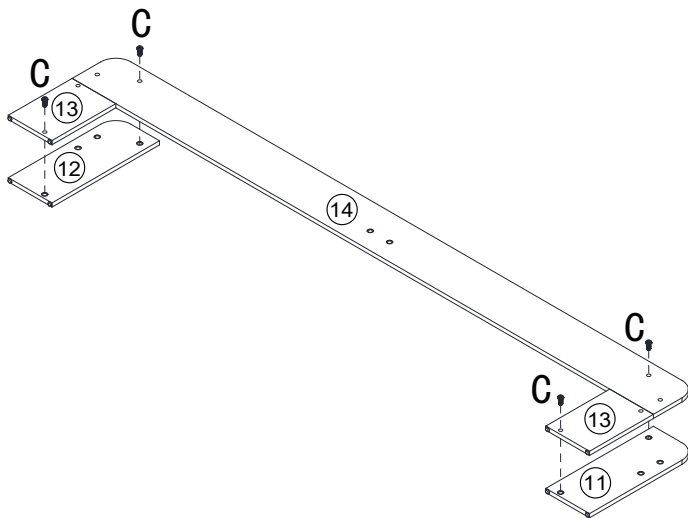

C		4pcs
M8x20		


Tighten screws D

9

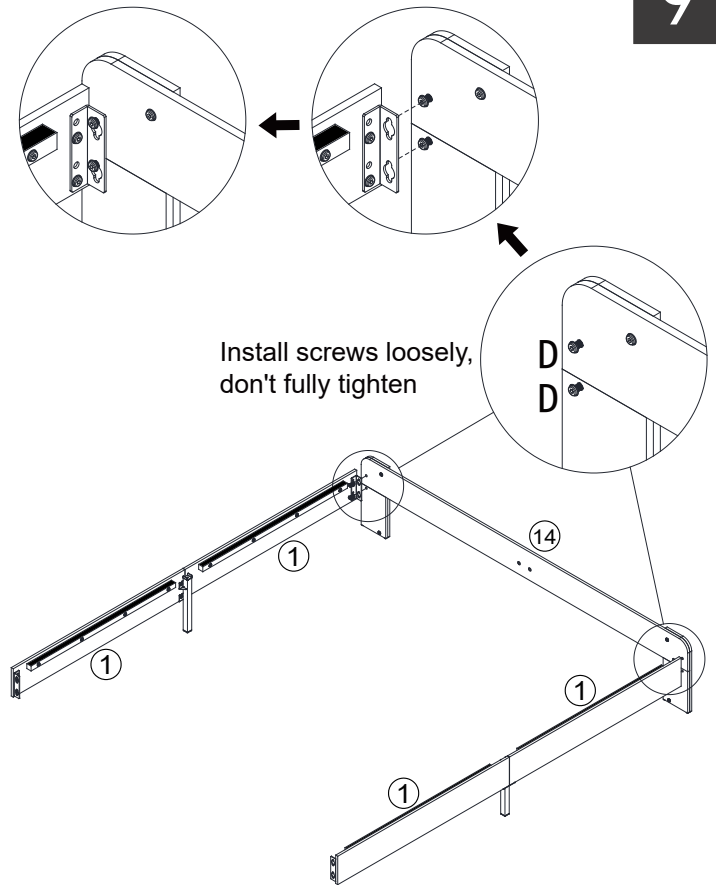


D		4pcs	white zinc
M8x25			

10

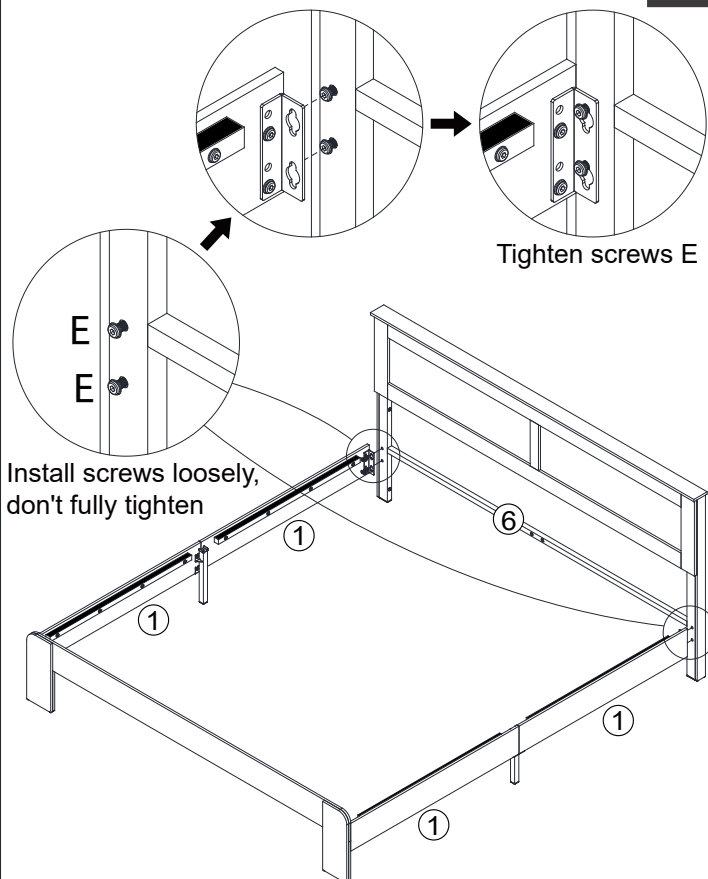

E		4pcs	white zinc
M8x33			


11

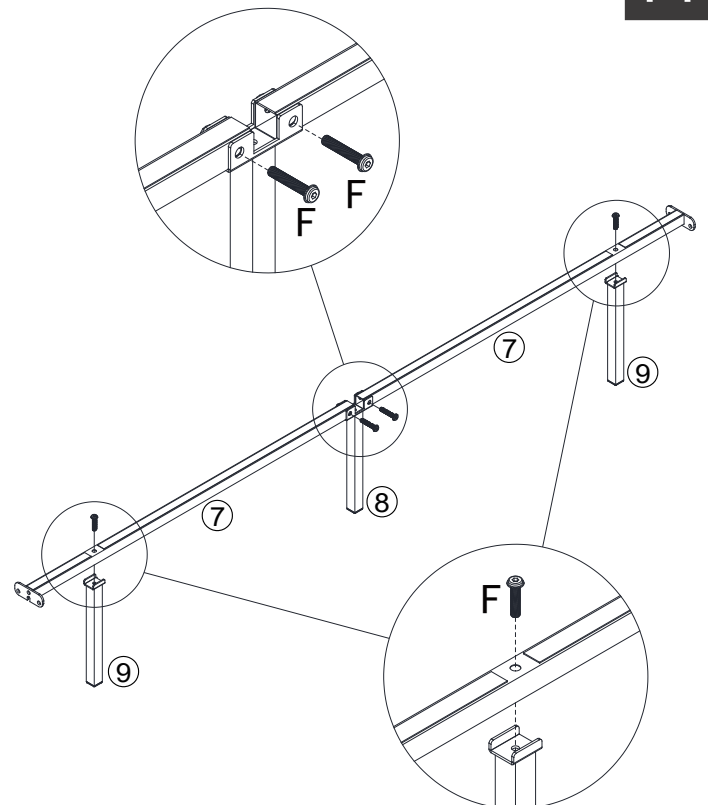

F		4pcs	
M8x38			

Assemble second


12

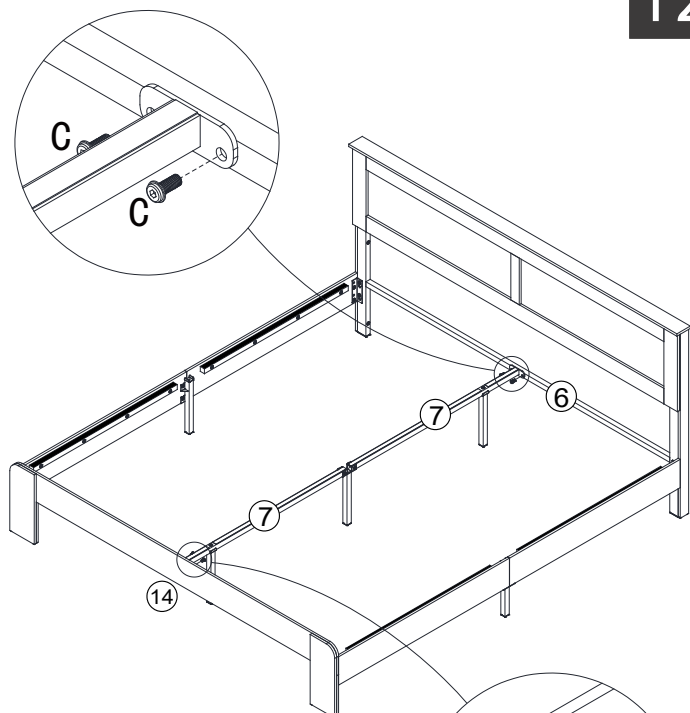

B	 M8x14	2pcs	white zinc
C	 M8x20	2pcs	



to Assemble first

13

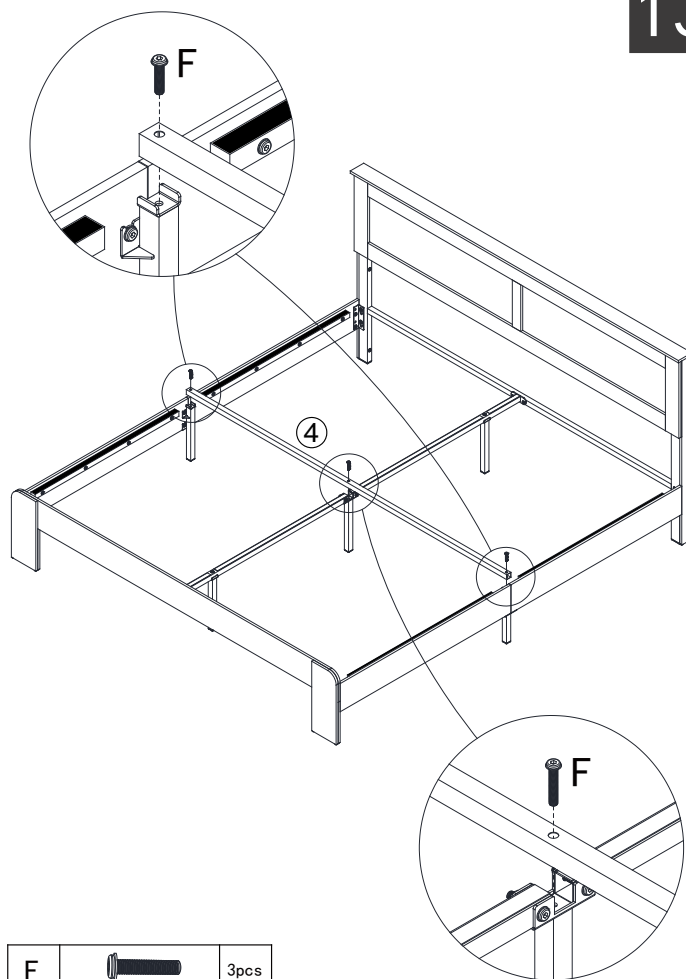

F	 M8x38	3pcs	
---	---	------	--

14

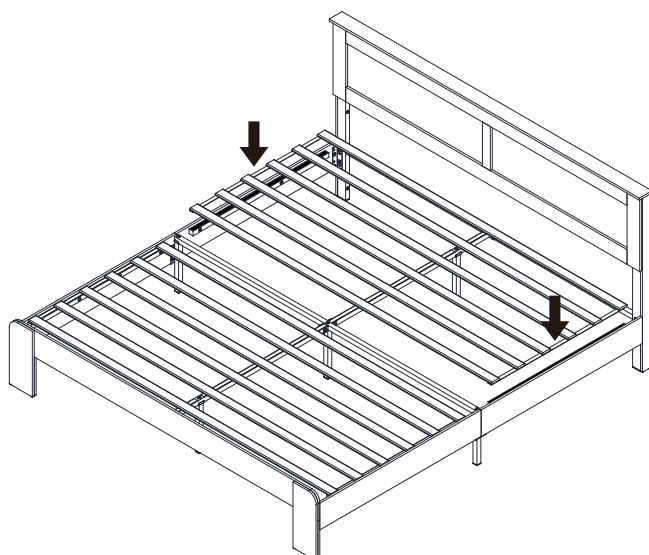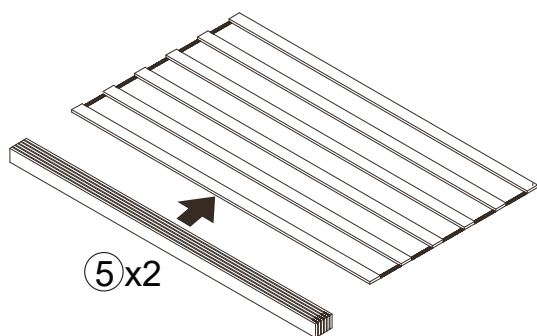

Finish

15

