



1


FULL OVERLAY

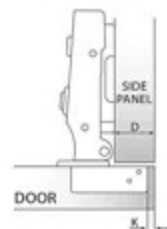

PARTIAL OVERLAY

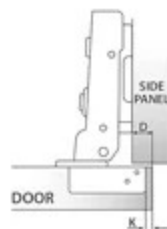

INSET


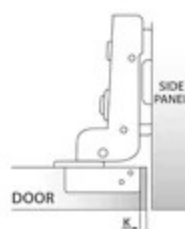


2


Mounting Instructions.

Recommended Tools:
 Cabinet Hinge Drilling Jig
 Drill, 1/16" Drill Bit (for #6 screws) or 8mm
 Drill Bit (for dowels)
 Boring Bit 35mm for Hinge Cup


Drilling Pattern Dimensions for new cabinet door (mm):

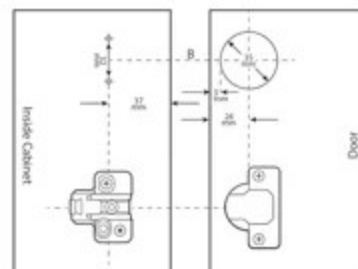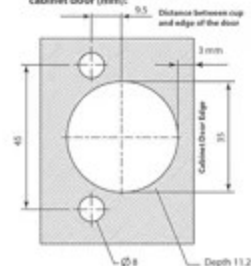


3

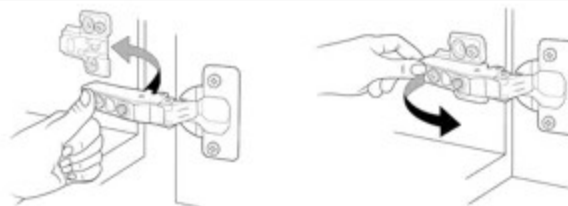


4

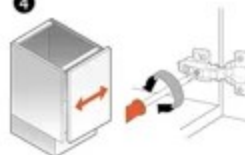

LEFT | RIGHT
 Rotate front screw
 to increase or decrease
 door overlay (+2mm).

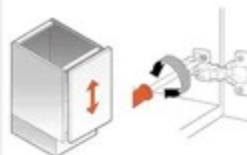

UP | DOWN
 Rotate cam screw on mounting plate to
 adjust door position (+2mm). On non-cam
 mounting plates, loosen screws, adjust
 door and retighten screws.

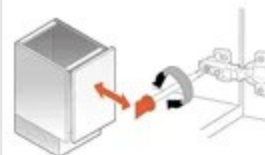

IN | OUT
 Rotate rear cam screw
 to adjust door position
 (+3mm, -2mm).