



Assembly instructions

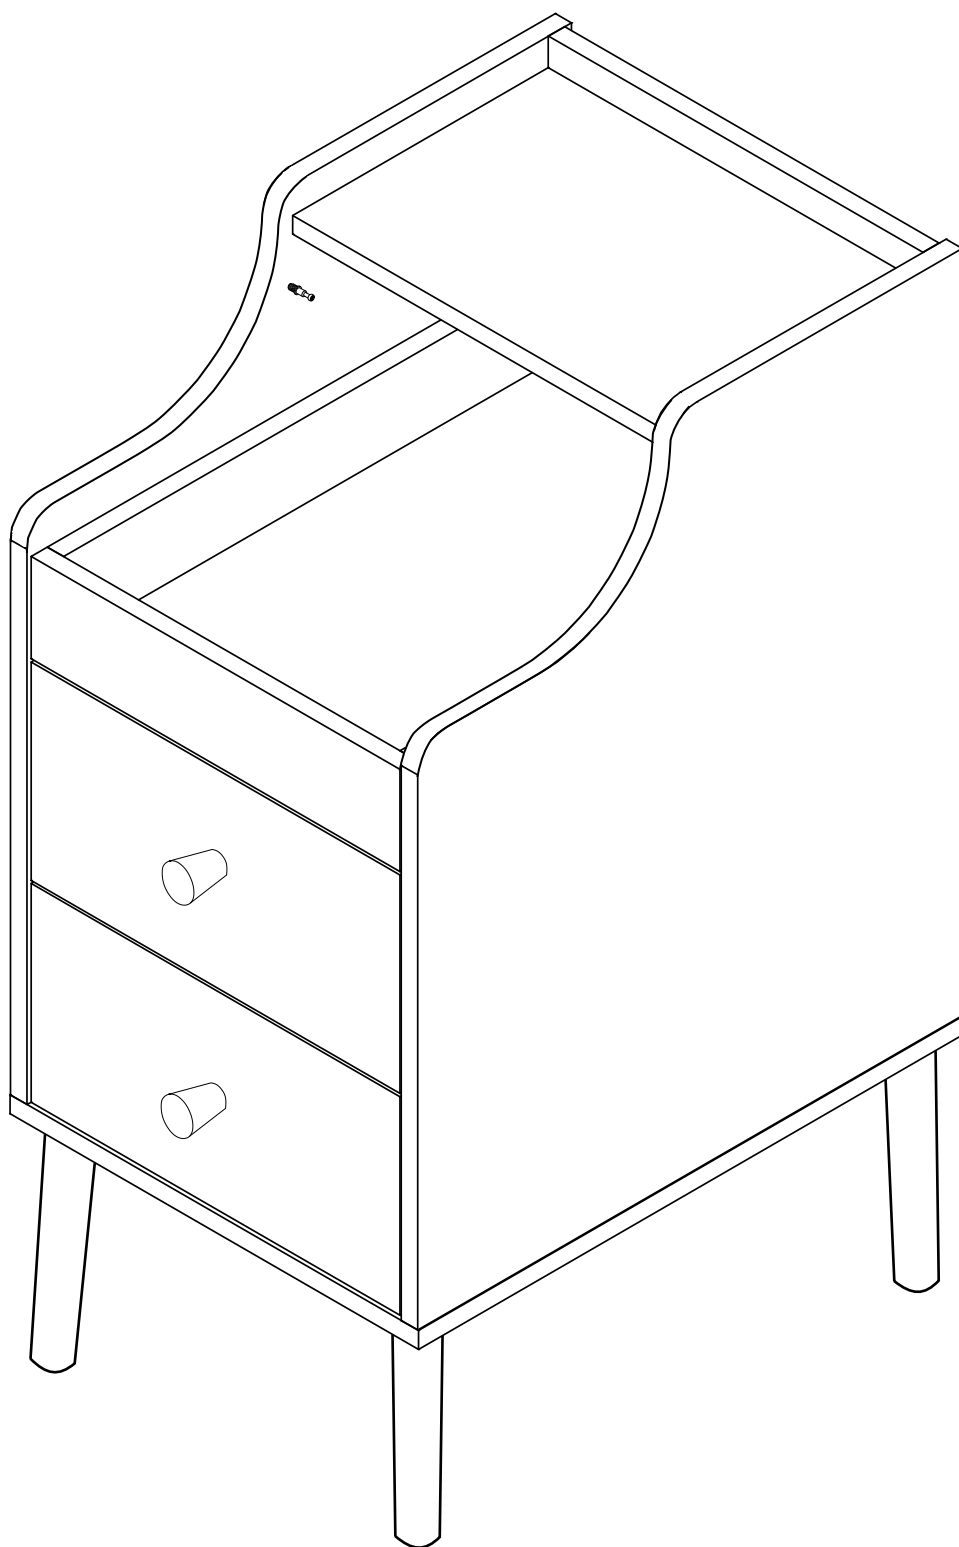


Board Identification

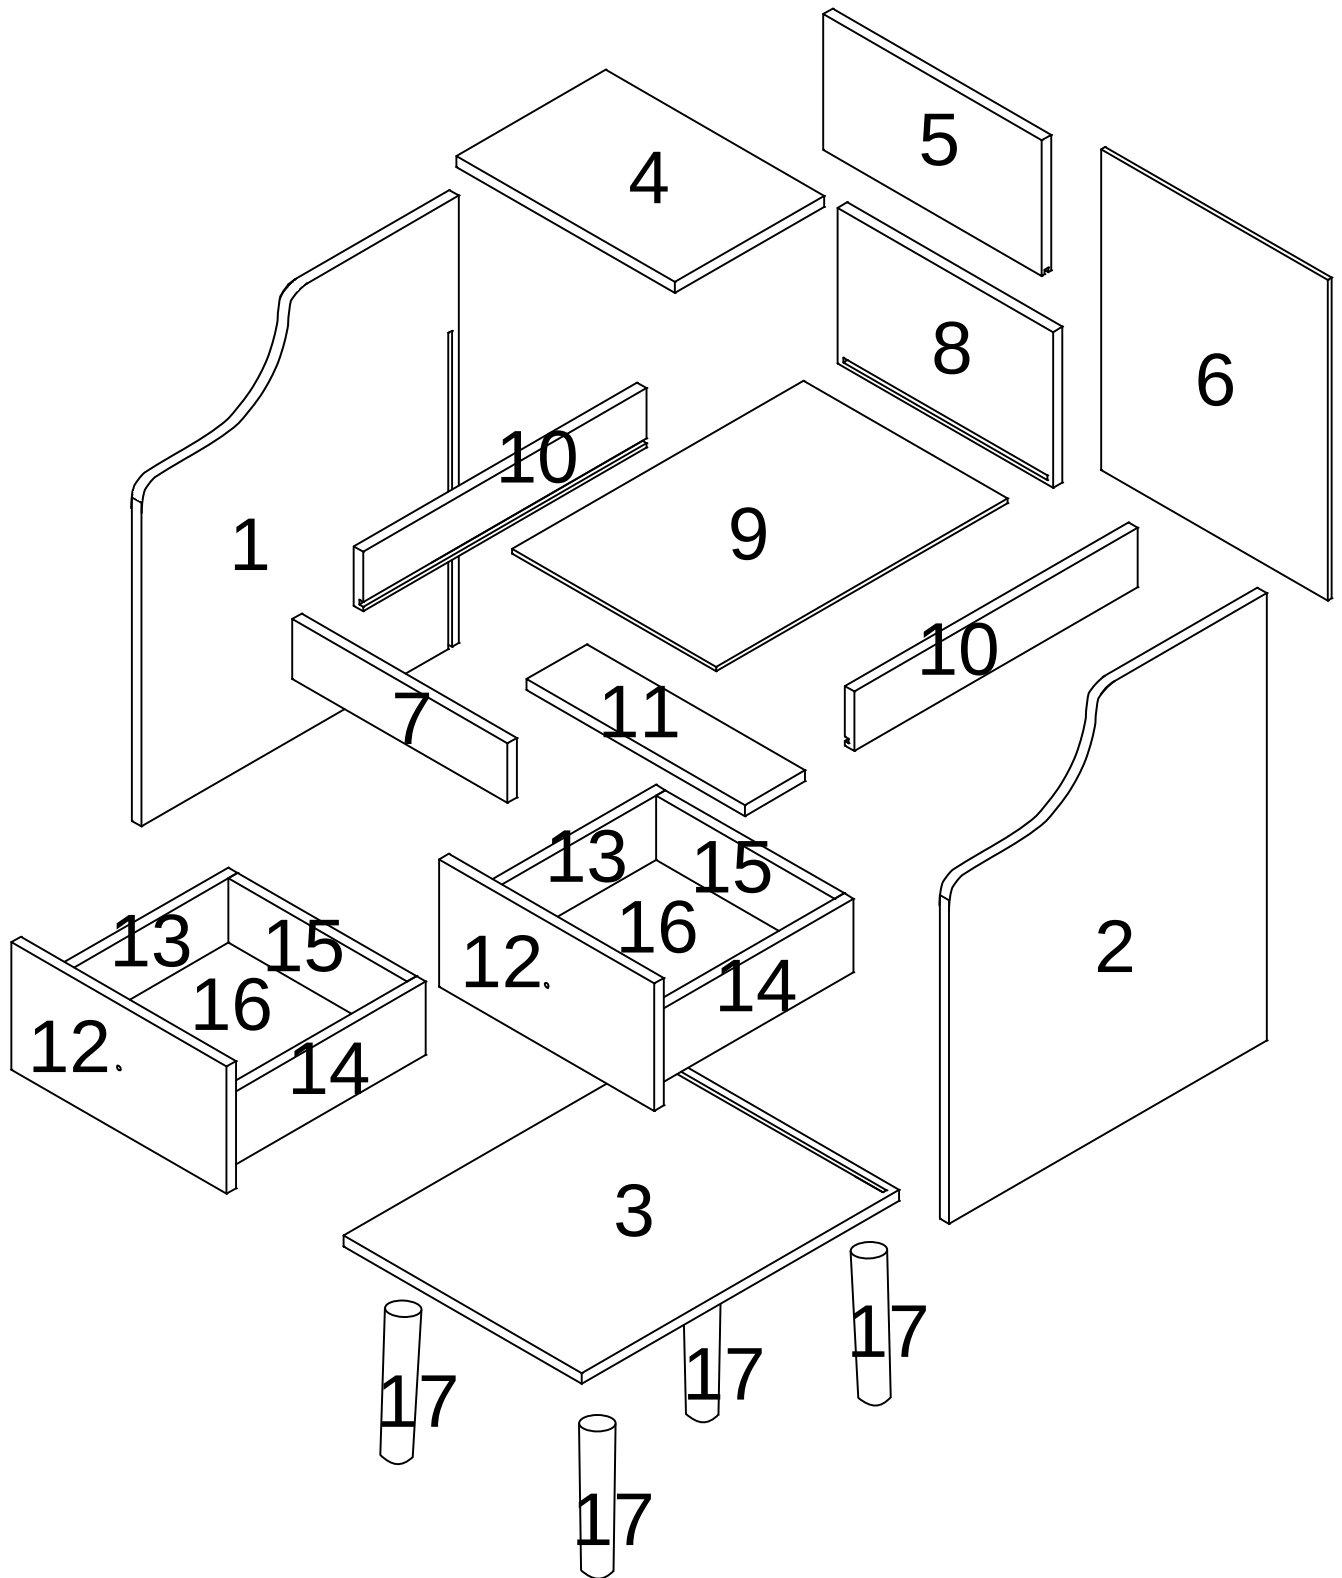

50 mins

Approximate Assembly Time

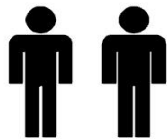

2 person assembly


Floor Area:

1.5X1.5 meters


Required Assembly Space




Before you start...

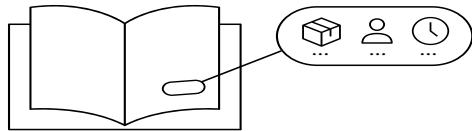


Ensure you have received all cartons and familiarize yourself with the workload. Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.

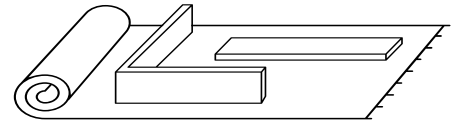


Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

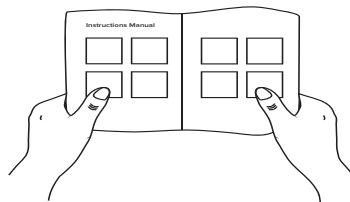


Read instructions carefully and check no parts are missing.

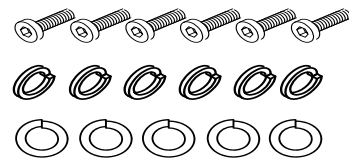


Lay out all hardware on a soft surface so you can easily identify them.

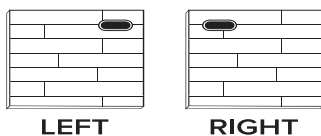

Carefully identify all components in order to differentiate which pieces are left and right.


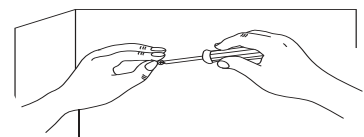


Install your new product carefully following the instructions. Don't skip ahead!

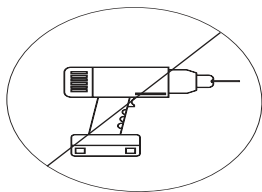


DO NOT over tighten screws or use a drill. It will damage the product.

Please prepare the following tools

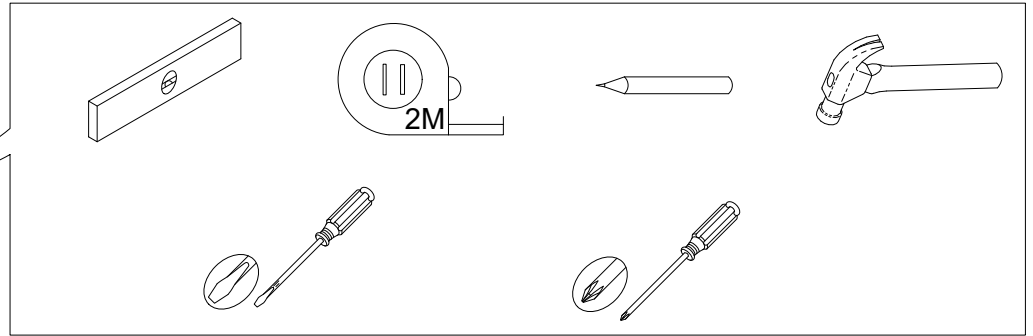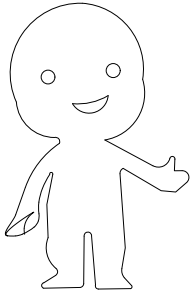

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Part List




(A)

x41



(B)


x41



3.5X12


(C)

x 36

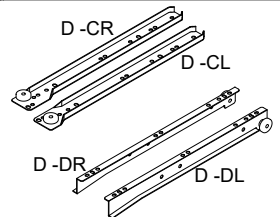


(D)

x4

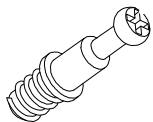

(E)


x2



3X20


(F)

x4

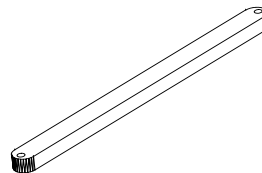

(G)

x2

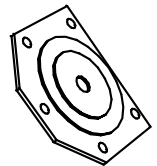

(H)


x4



4X16


(I)

x2



(J)

x2

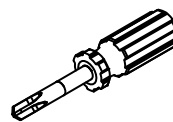


(K)


x1

USING CAM LOCK AND QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

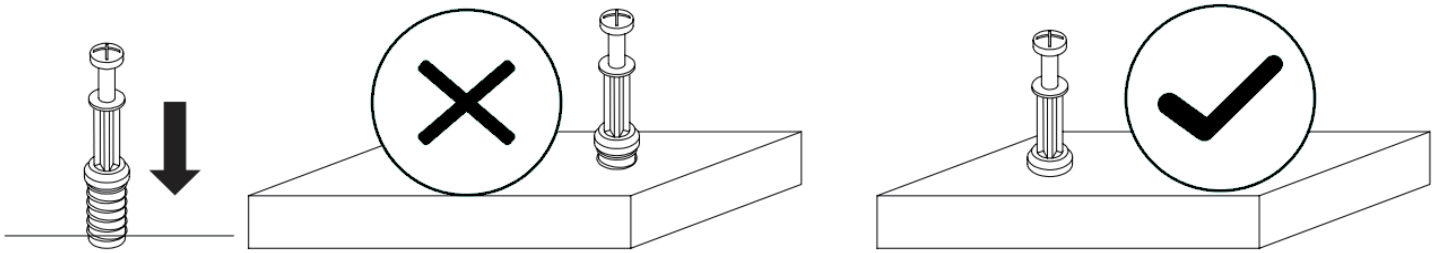


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

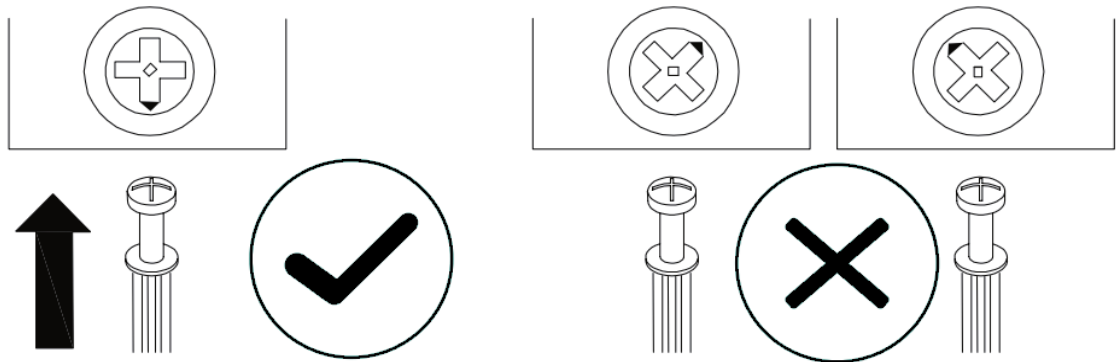





Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.








Turn cam lock clockwise to tighten.

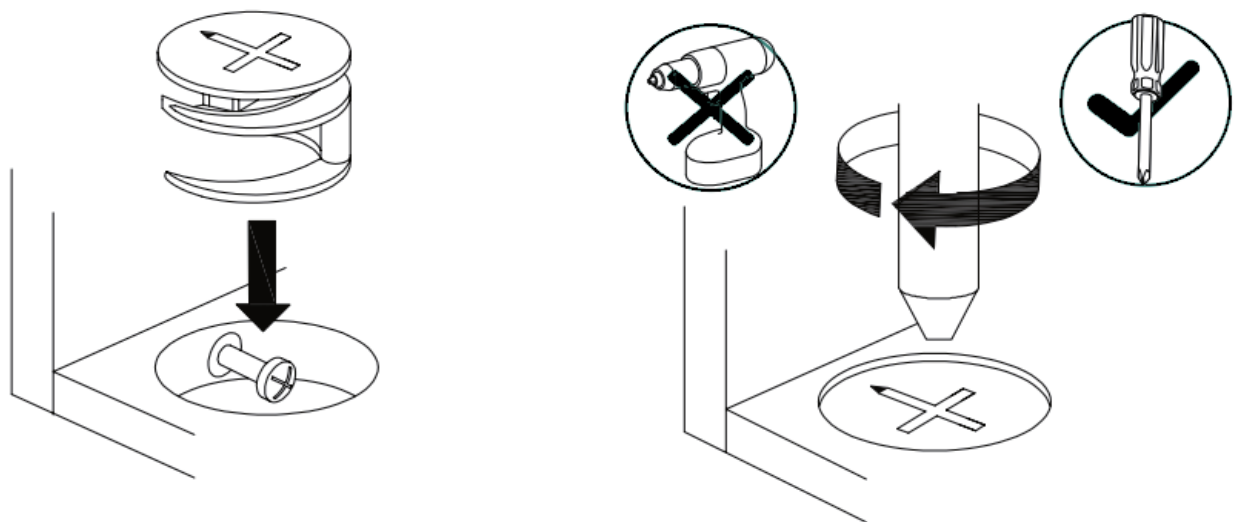




step 1

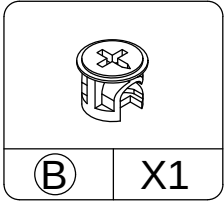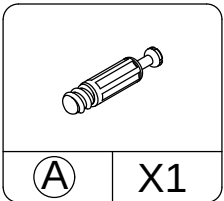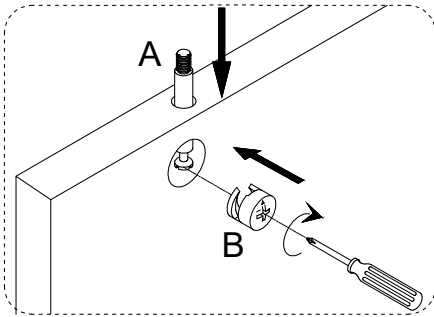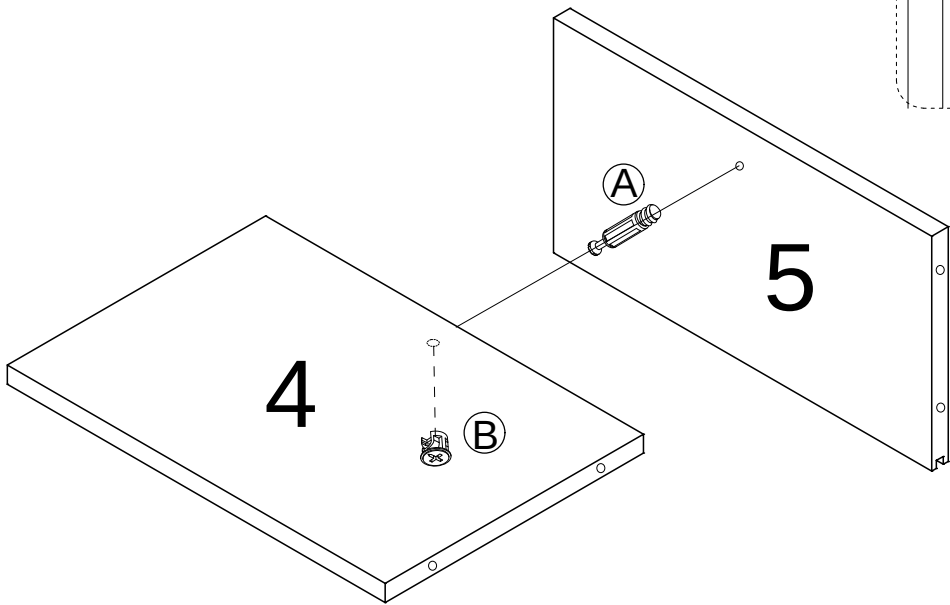

step 2

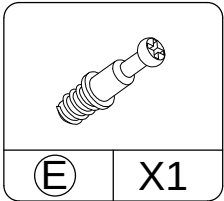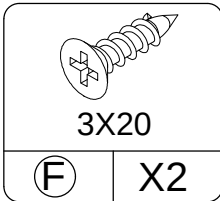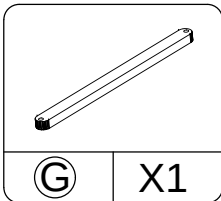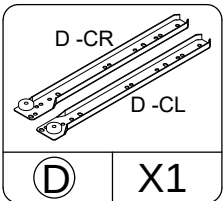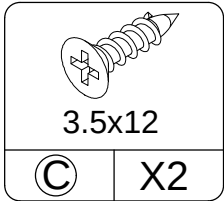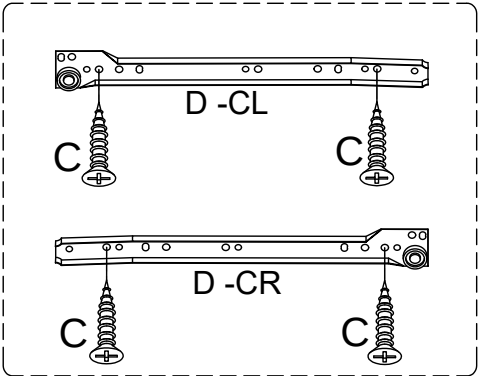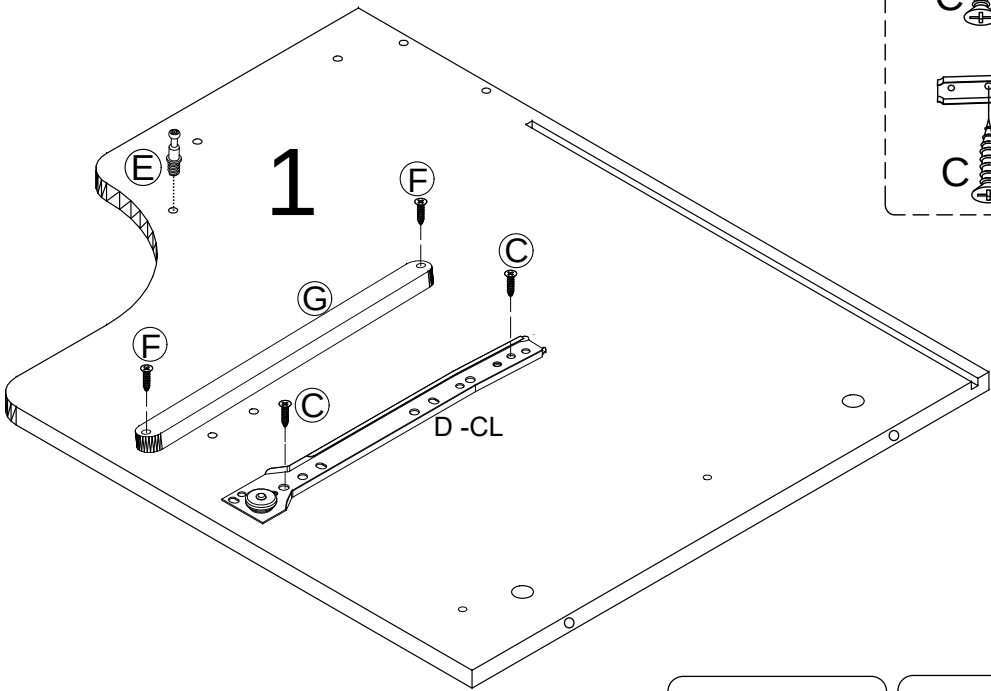


step 3

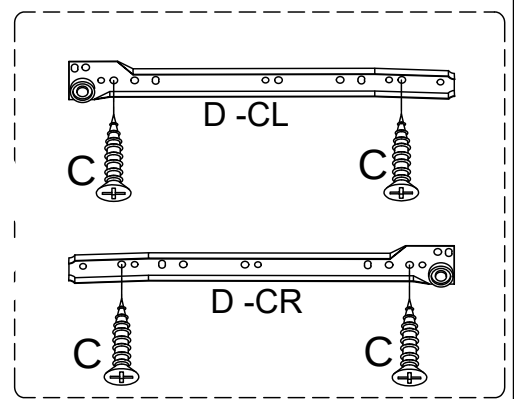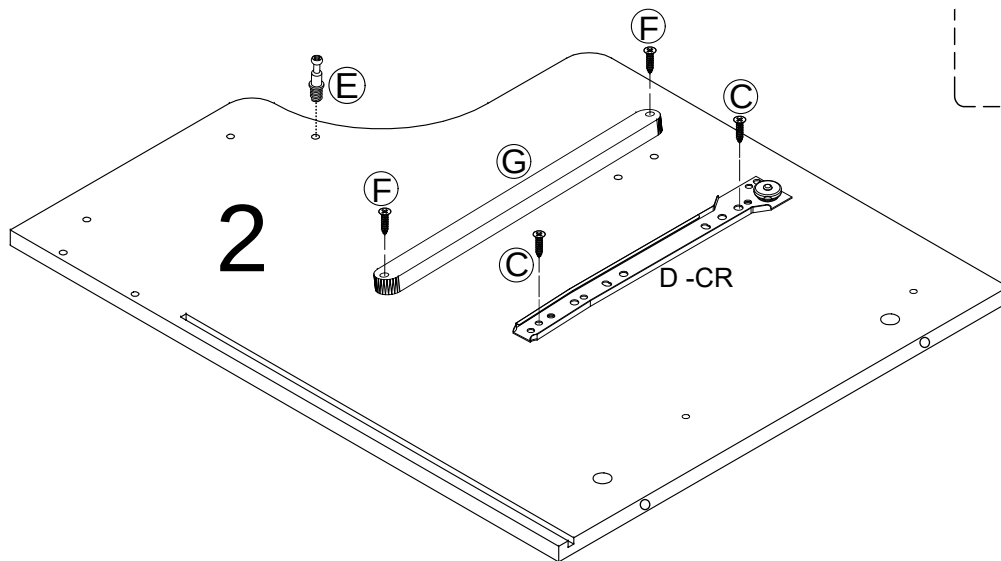

3.5x12


(C)

X2

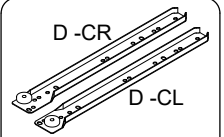


(D)

X1

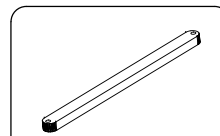

(G)


X1



3X20

(F)



X2



(E)

X1

step 4

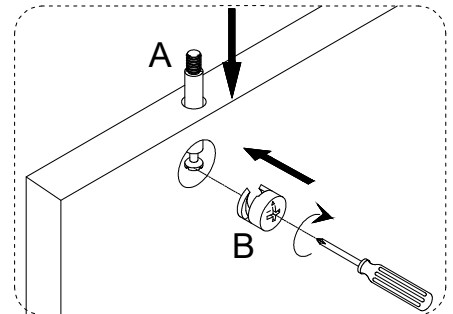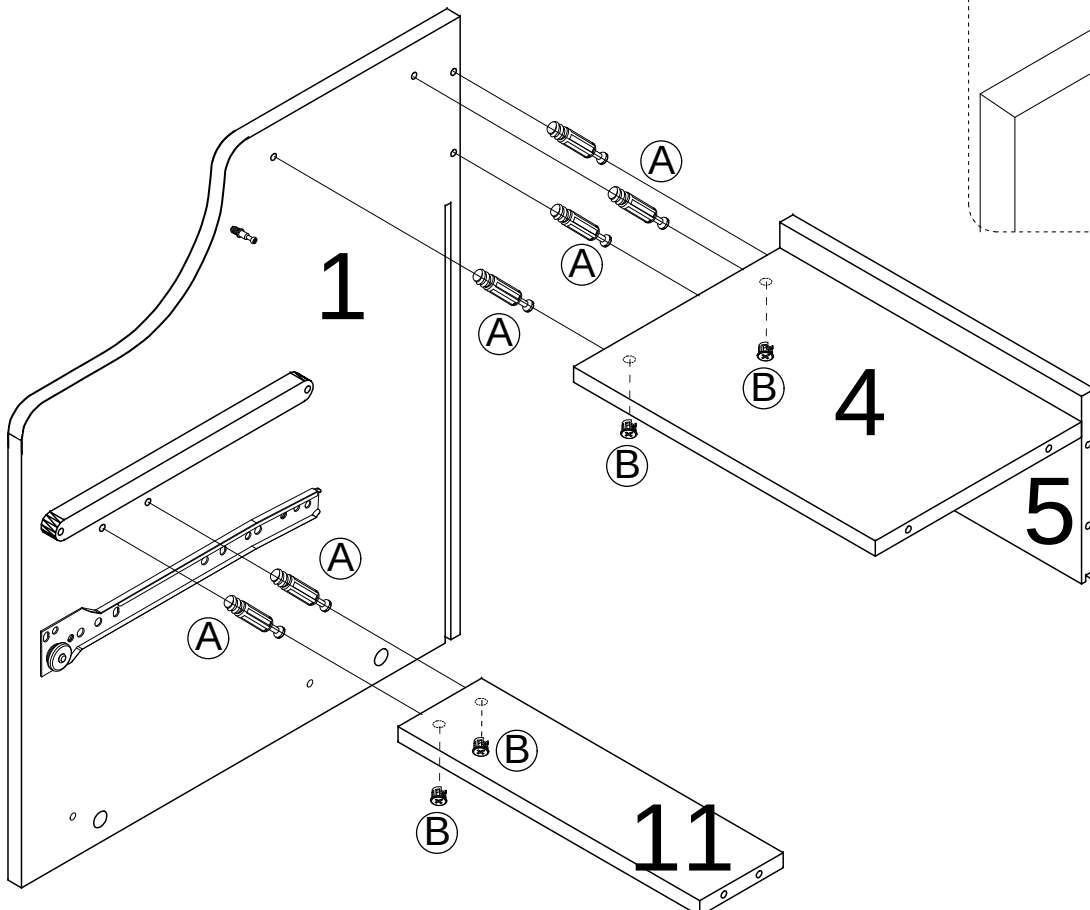

(A)



X6




(B)

X6





step 5

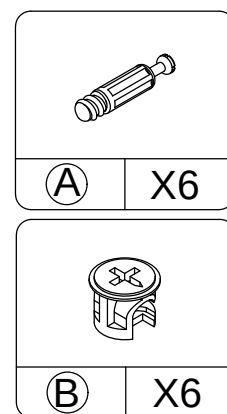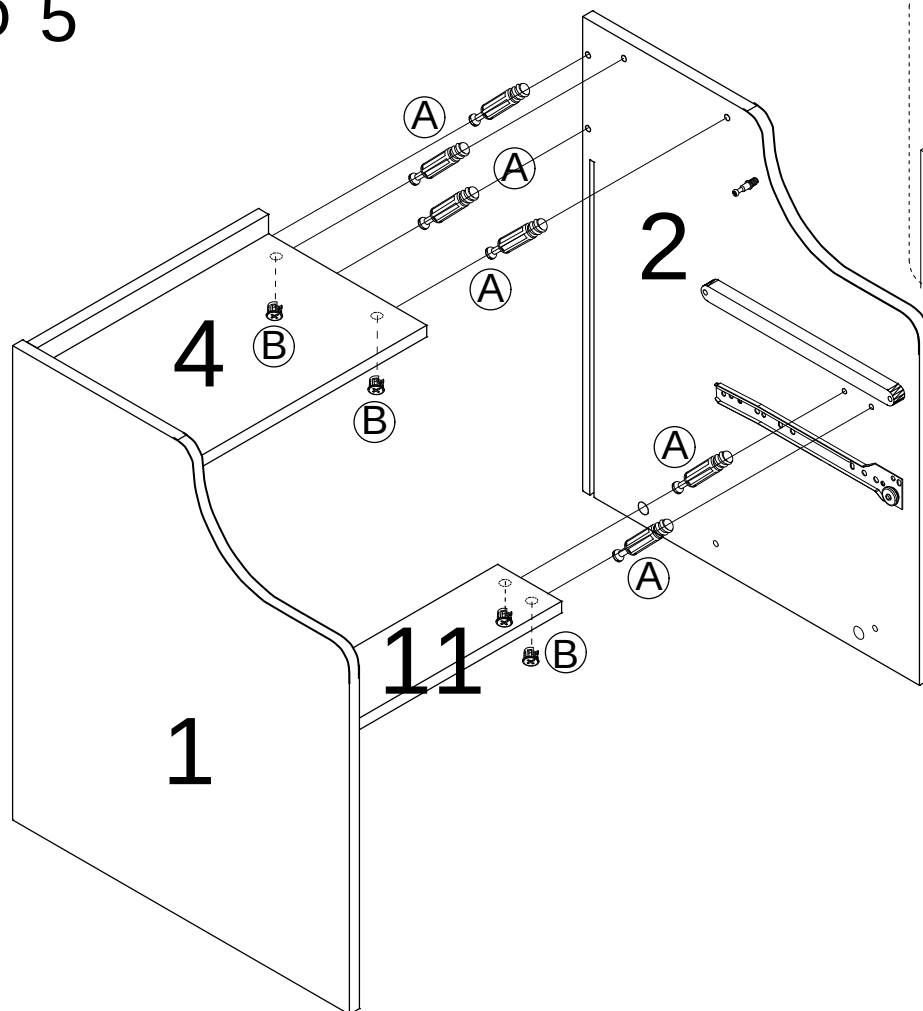





step 6

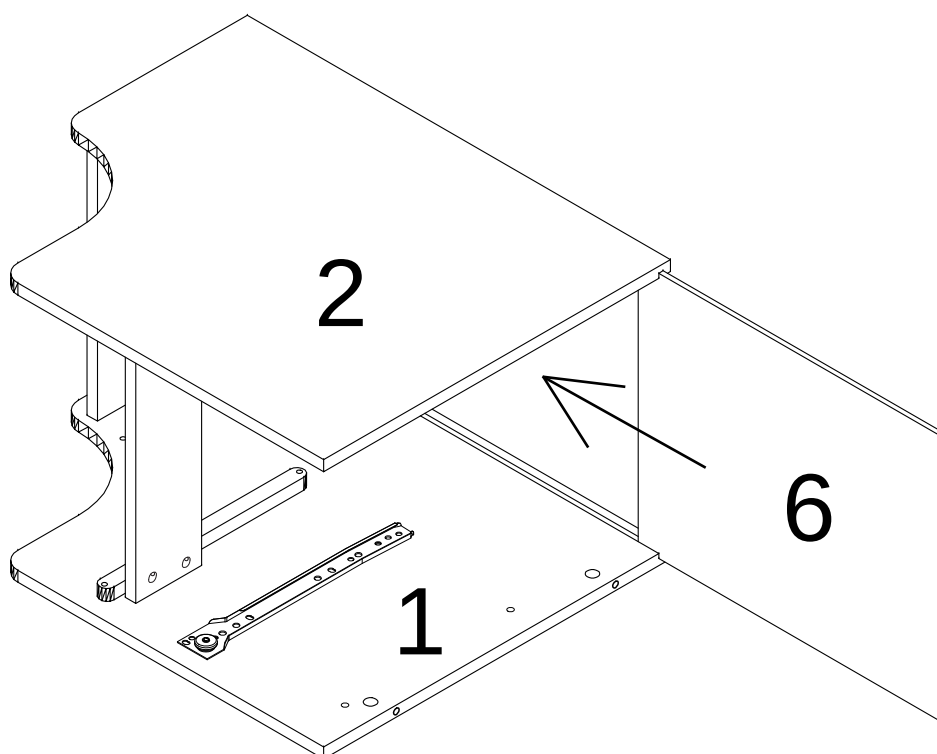

step 7

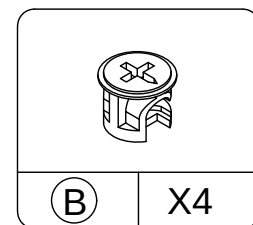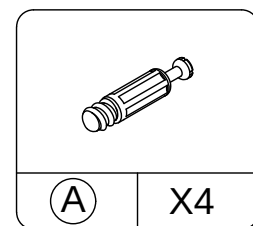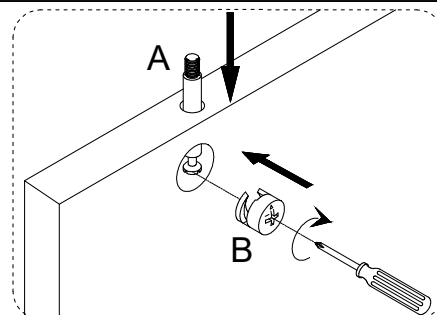
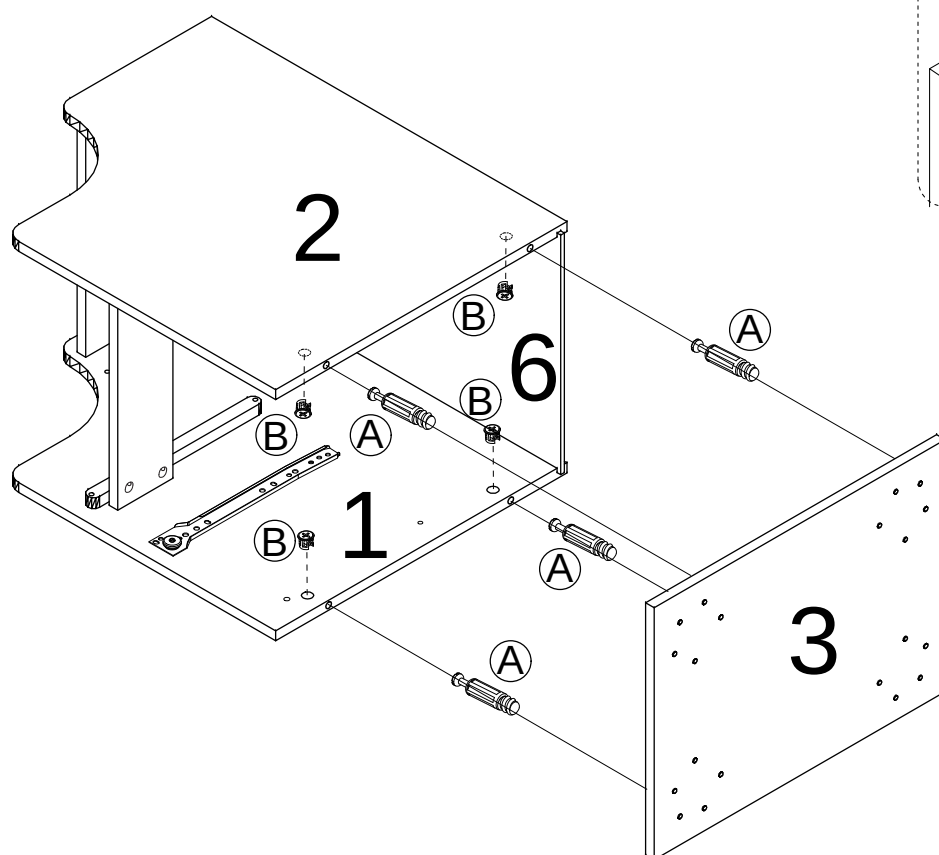


step 8

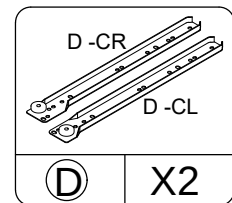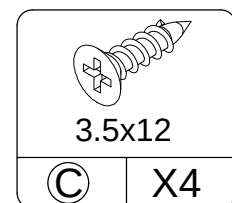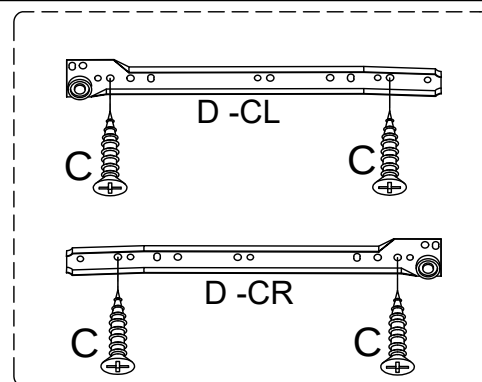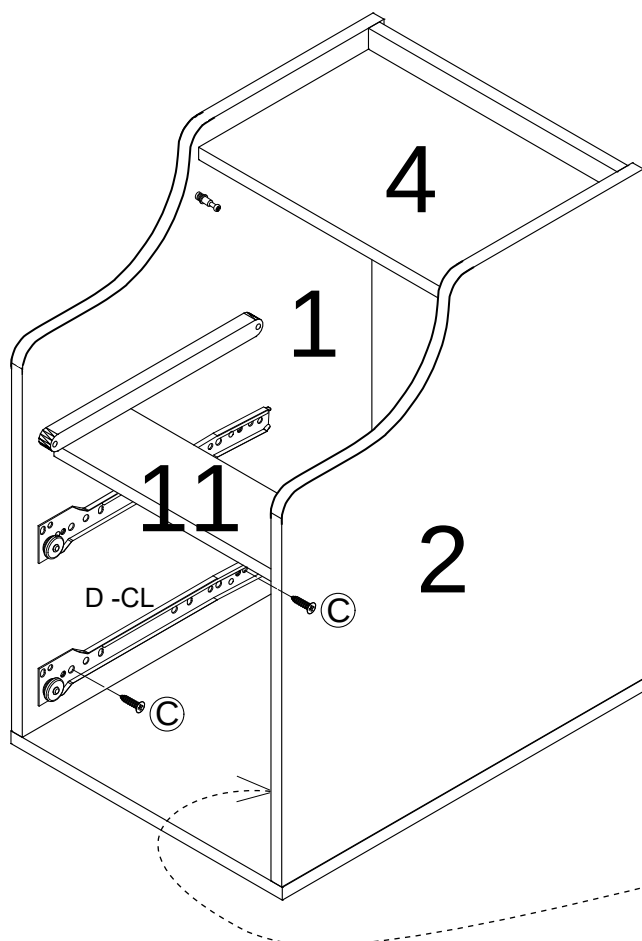


step 9

Warm Tip: Align the holes of accessory H with the five pilot holes on the bottom of Panel 3, then tighten using C screws.

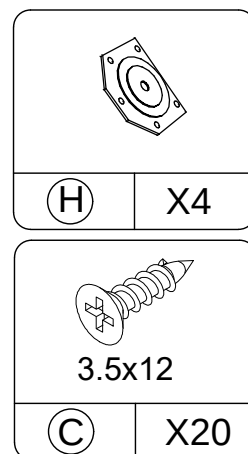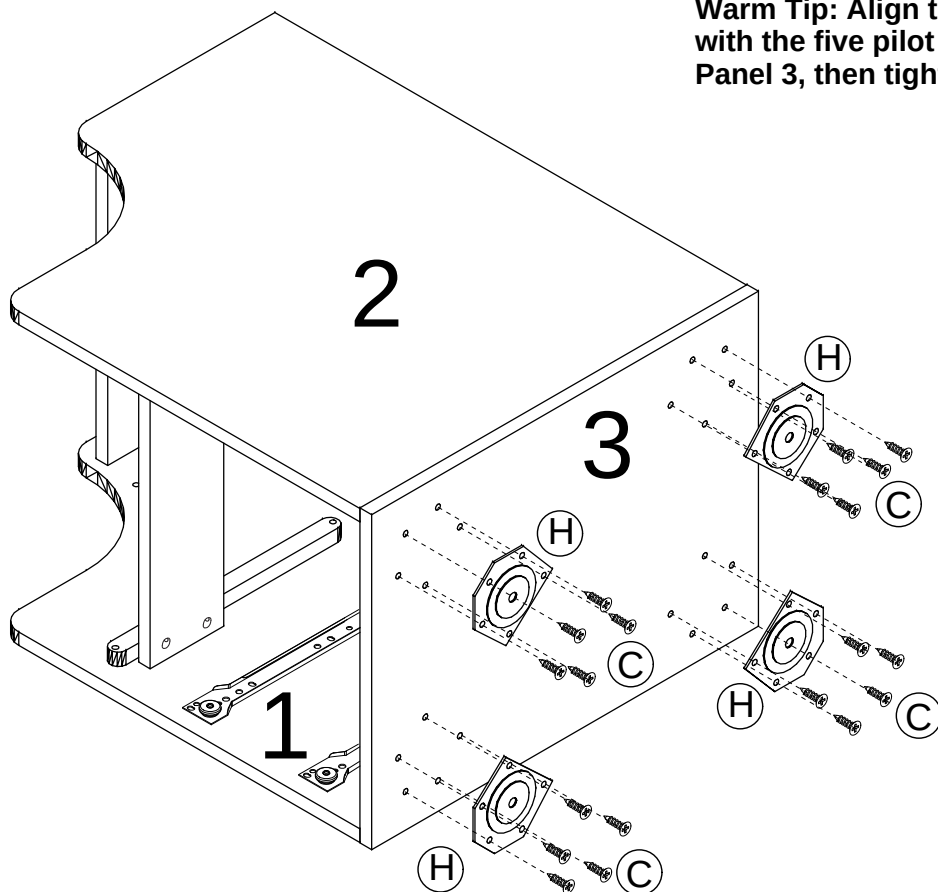



step 10

Warm Tip: Tighten Table Leg No.17 clockwise toward the middle hole of the iron sheet.

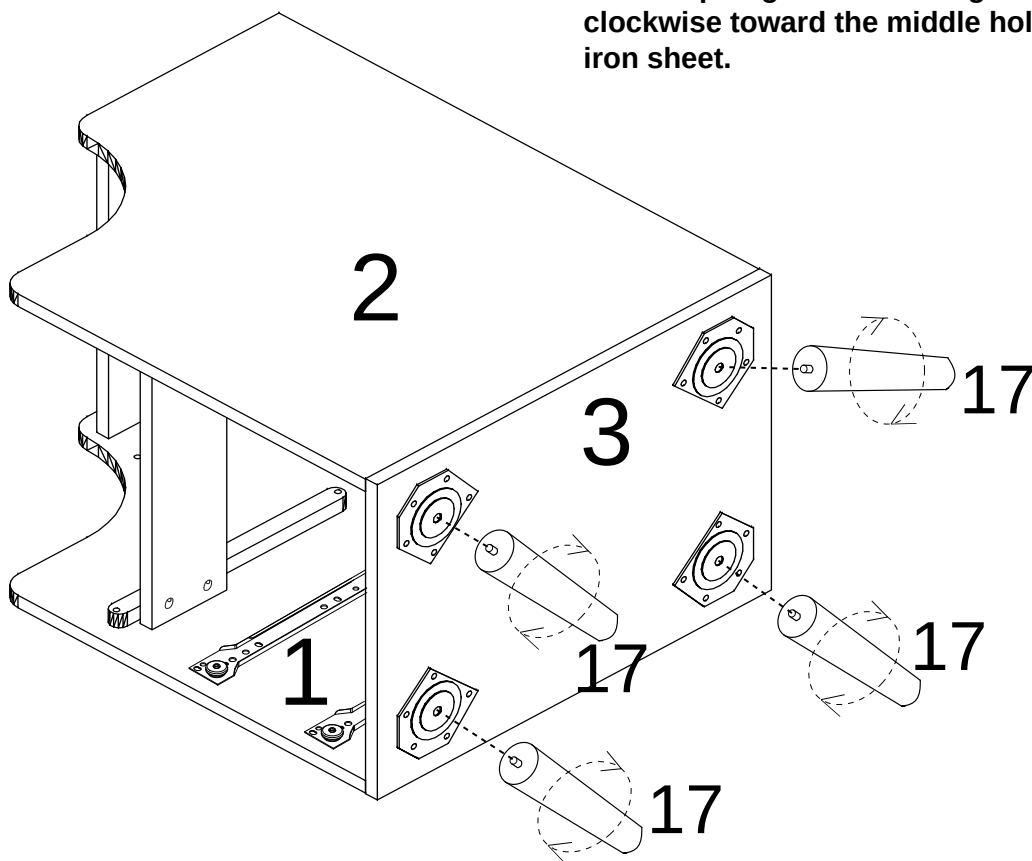


step 11

Warm Tip: Complete assembly in sequence according to the arrow directions and step instructions.

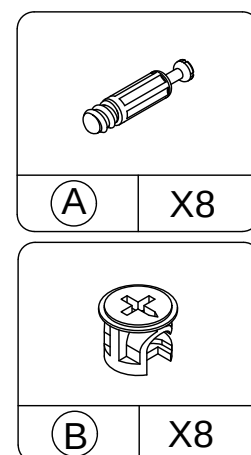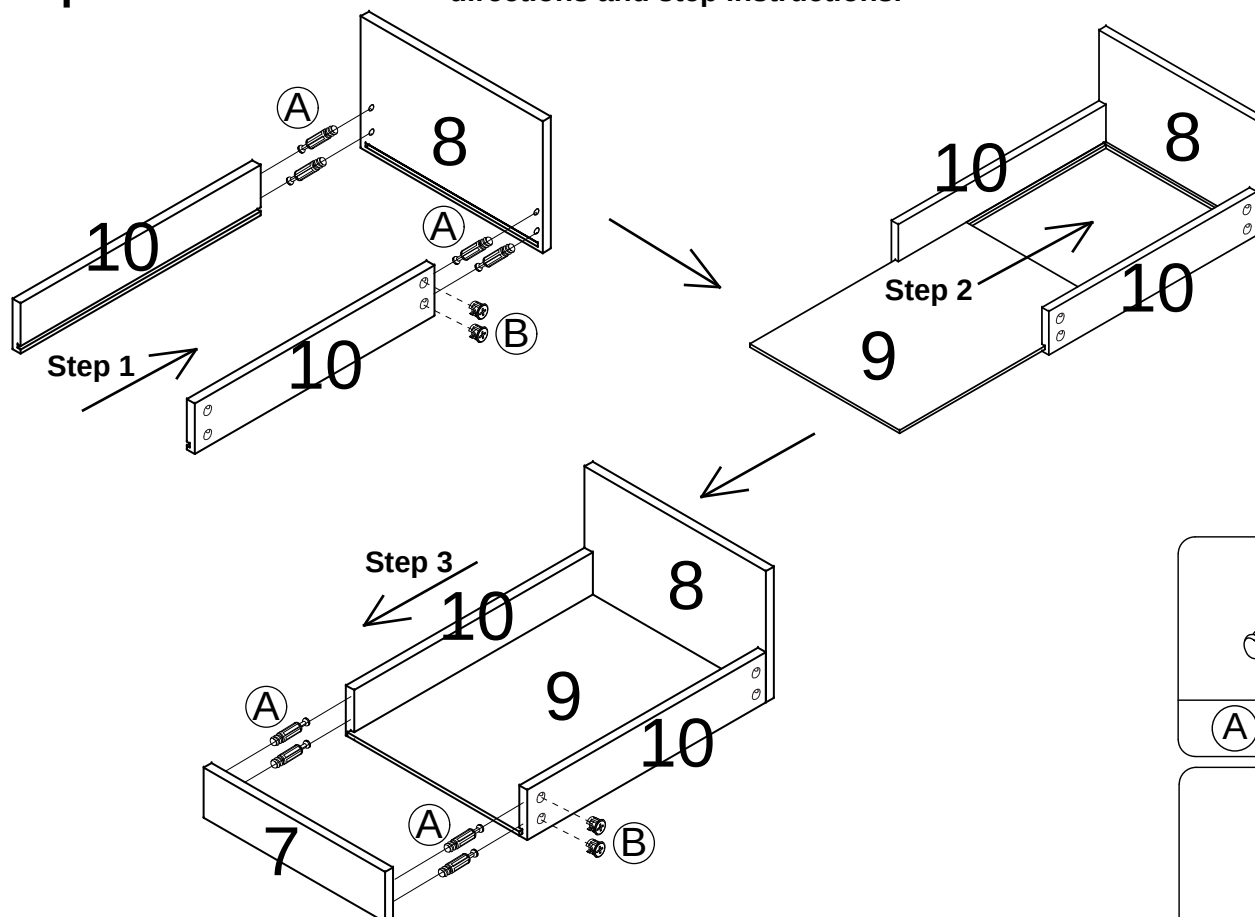


step 12


Warm Tip: Assemble in sequence following the arrow directions and step descriptions.

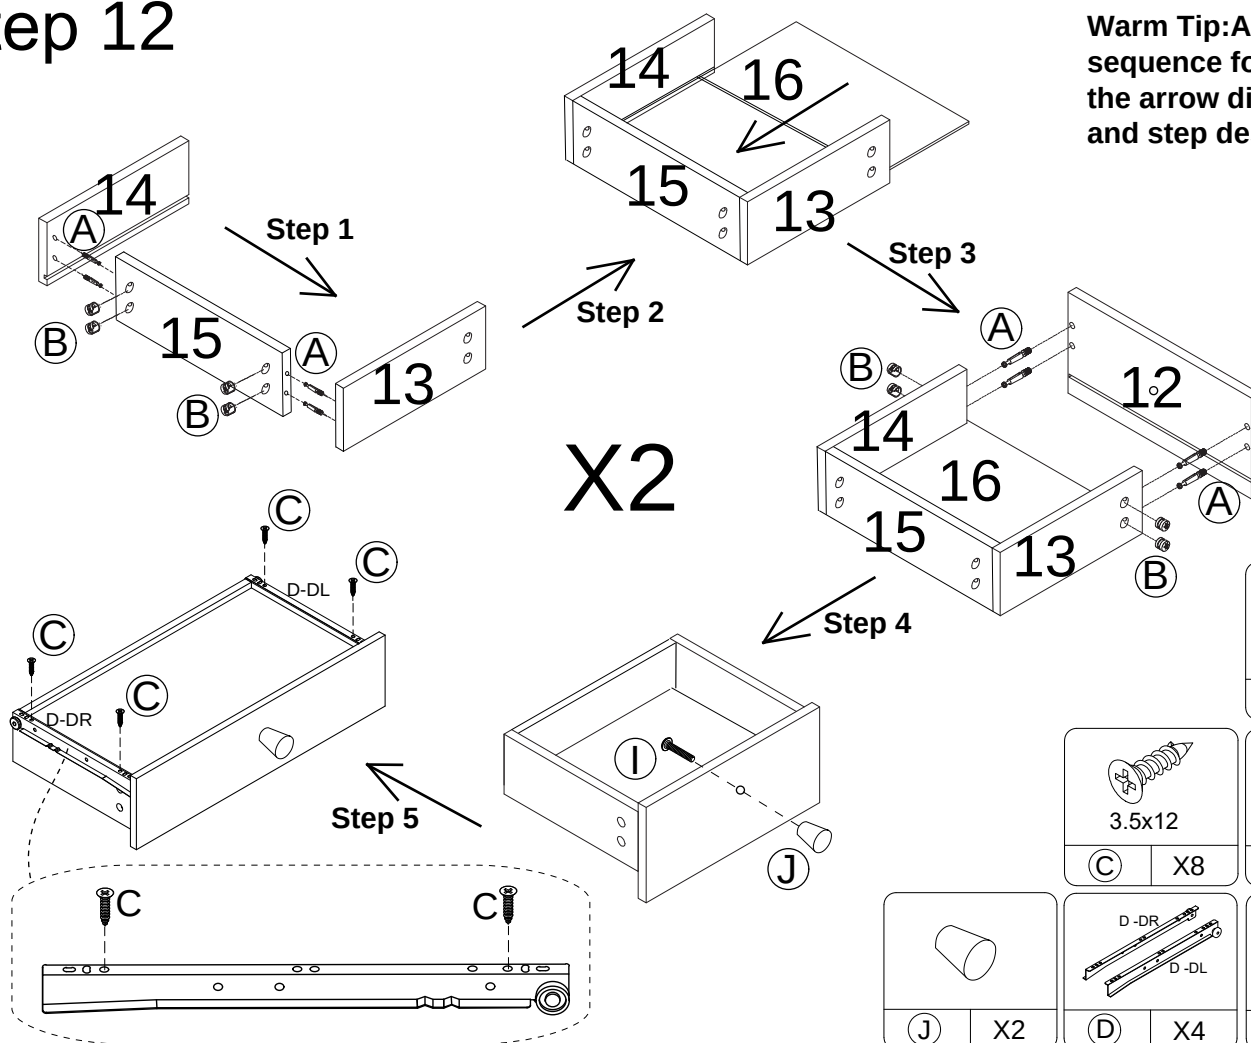

X2

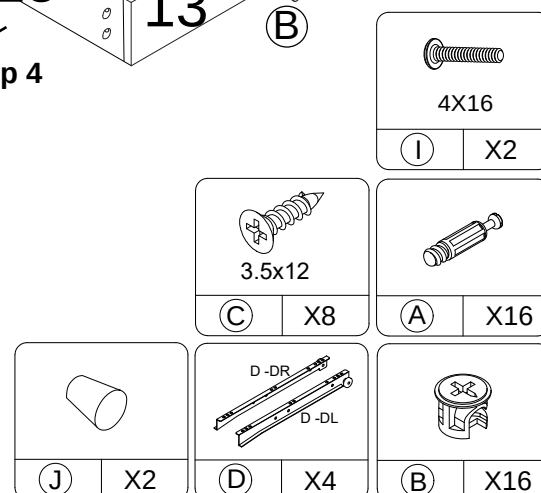

step 13

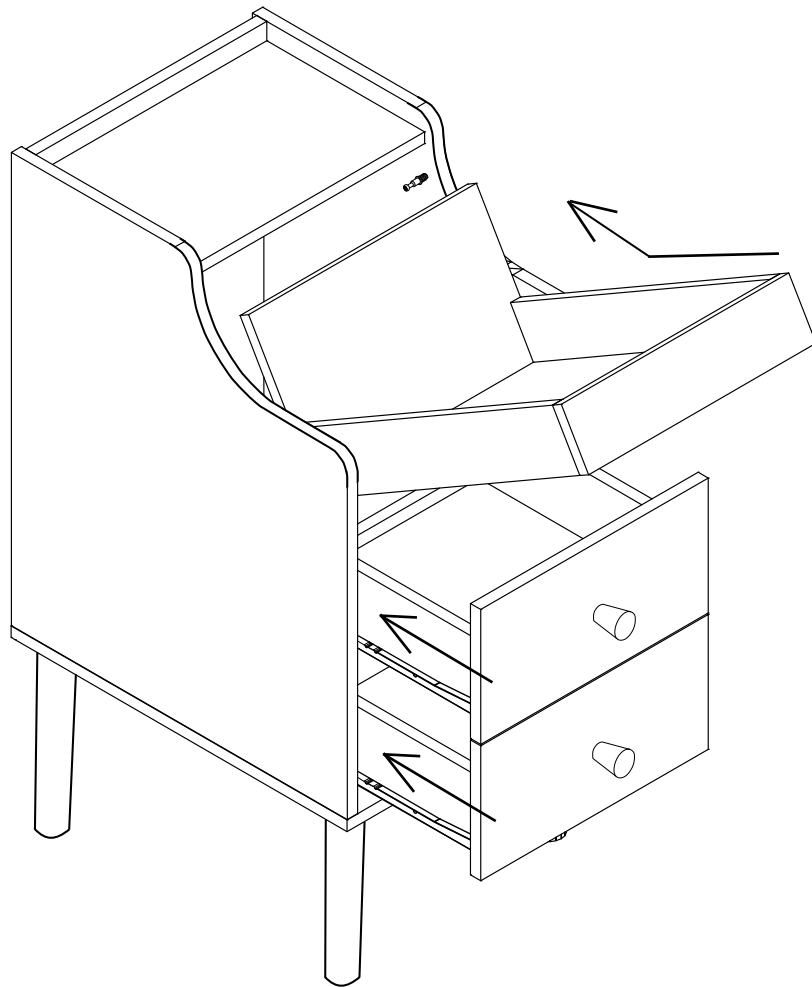

step 14

