


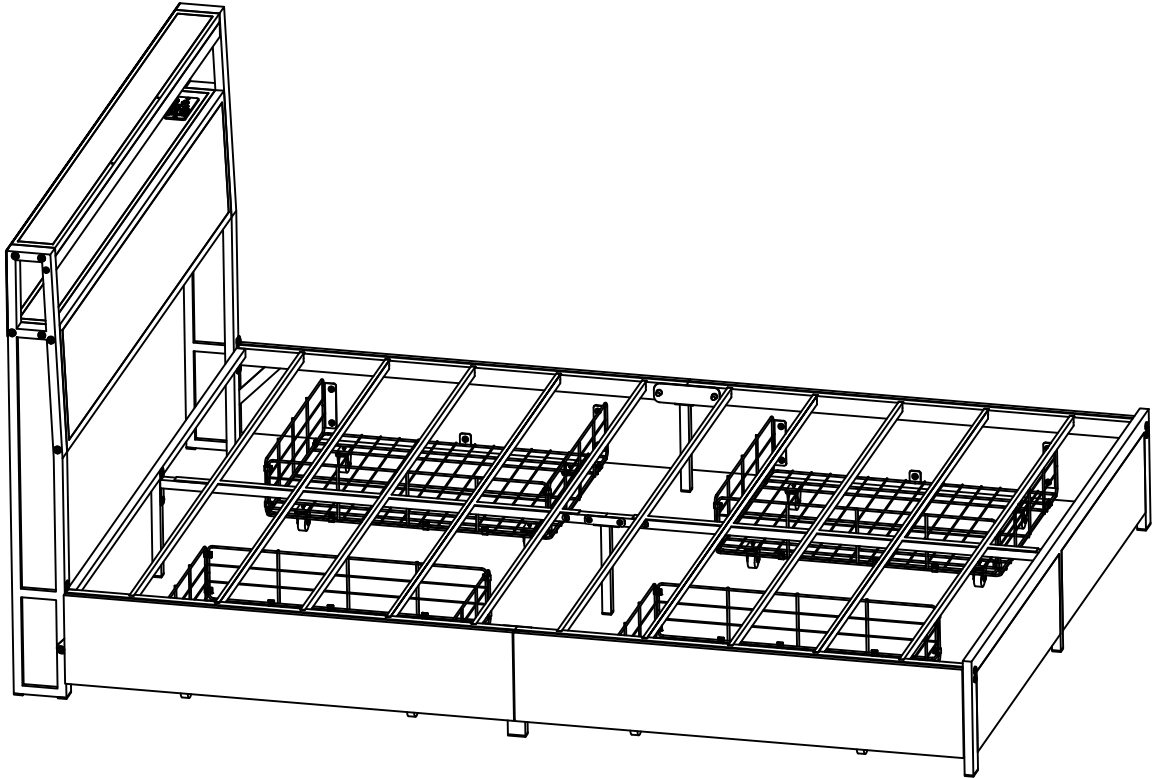


Model:T3963P483019

PRODUCT GUIDE AND INSTALLATION MANUAL


Scan the QR code to watch the installation video




Parts List:

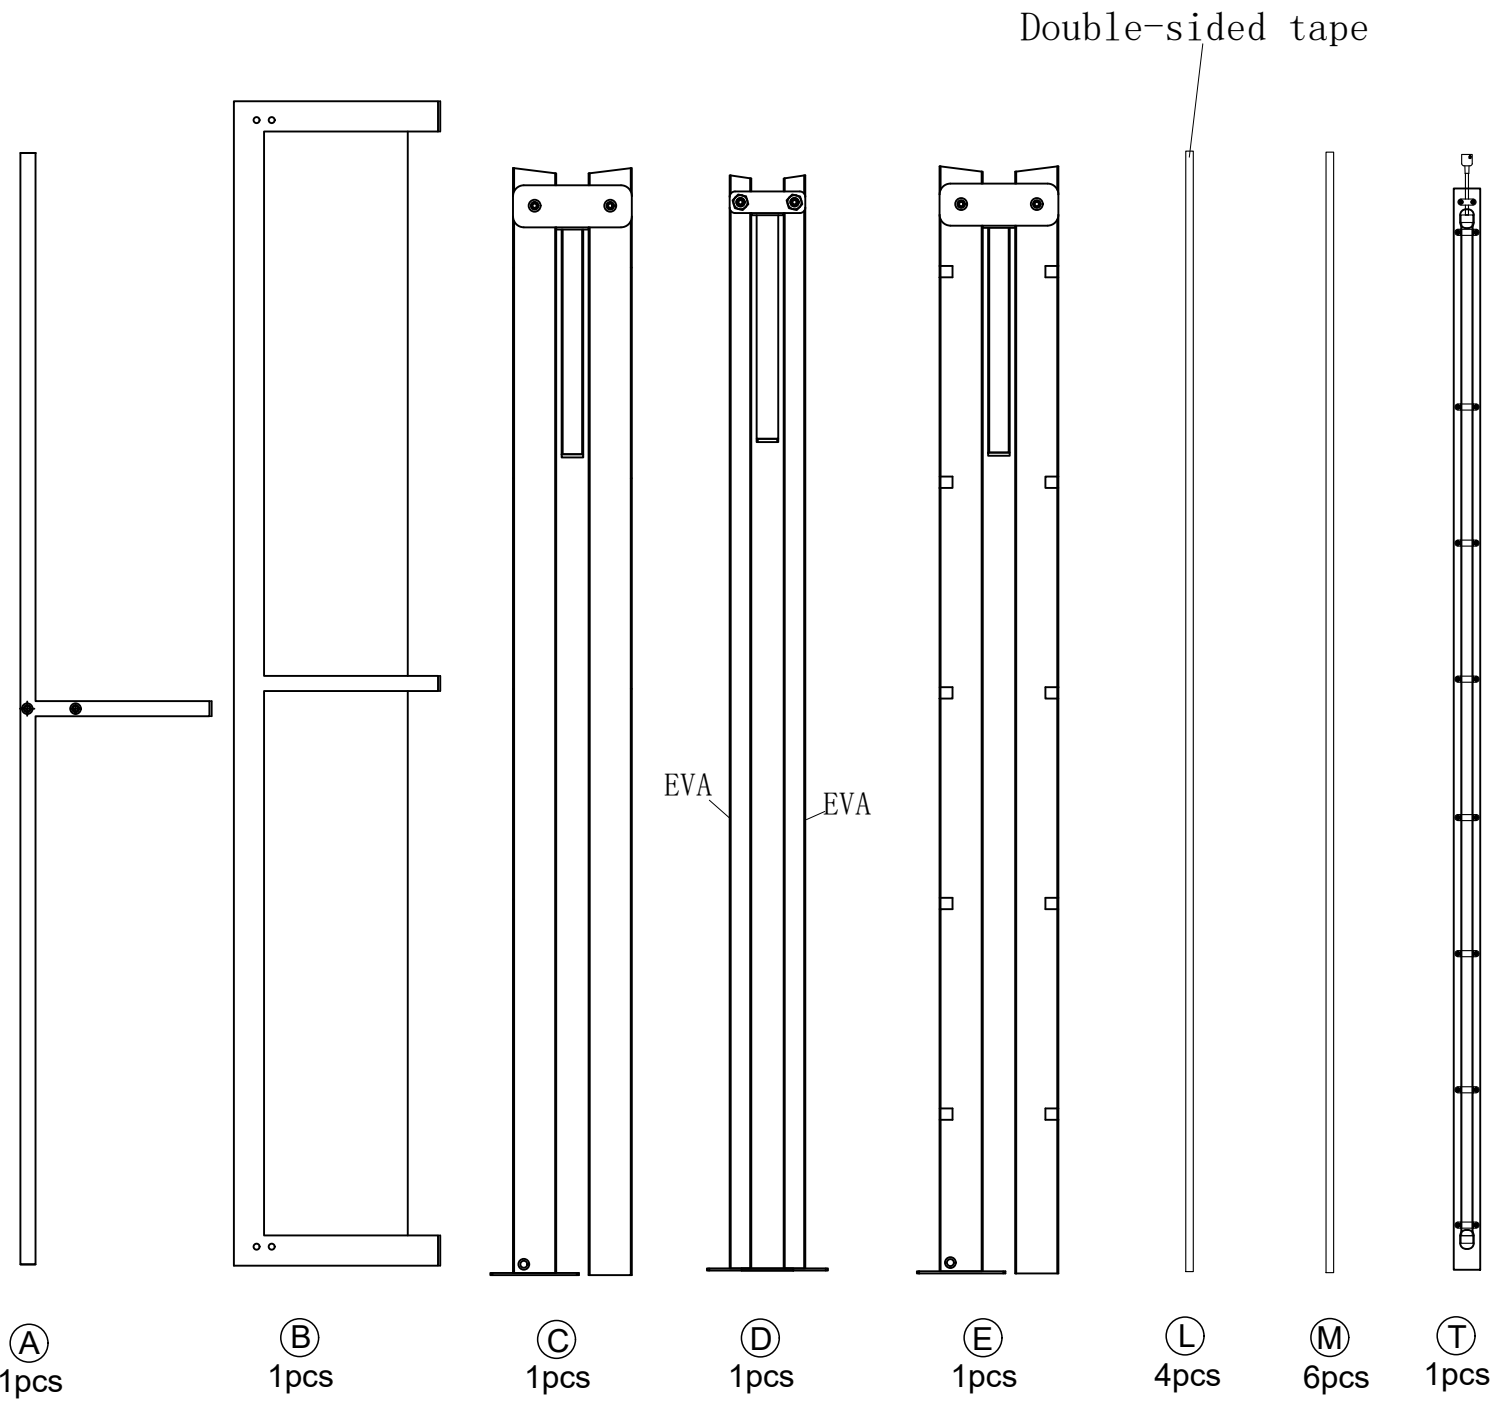

Parts List:

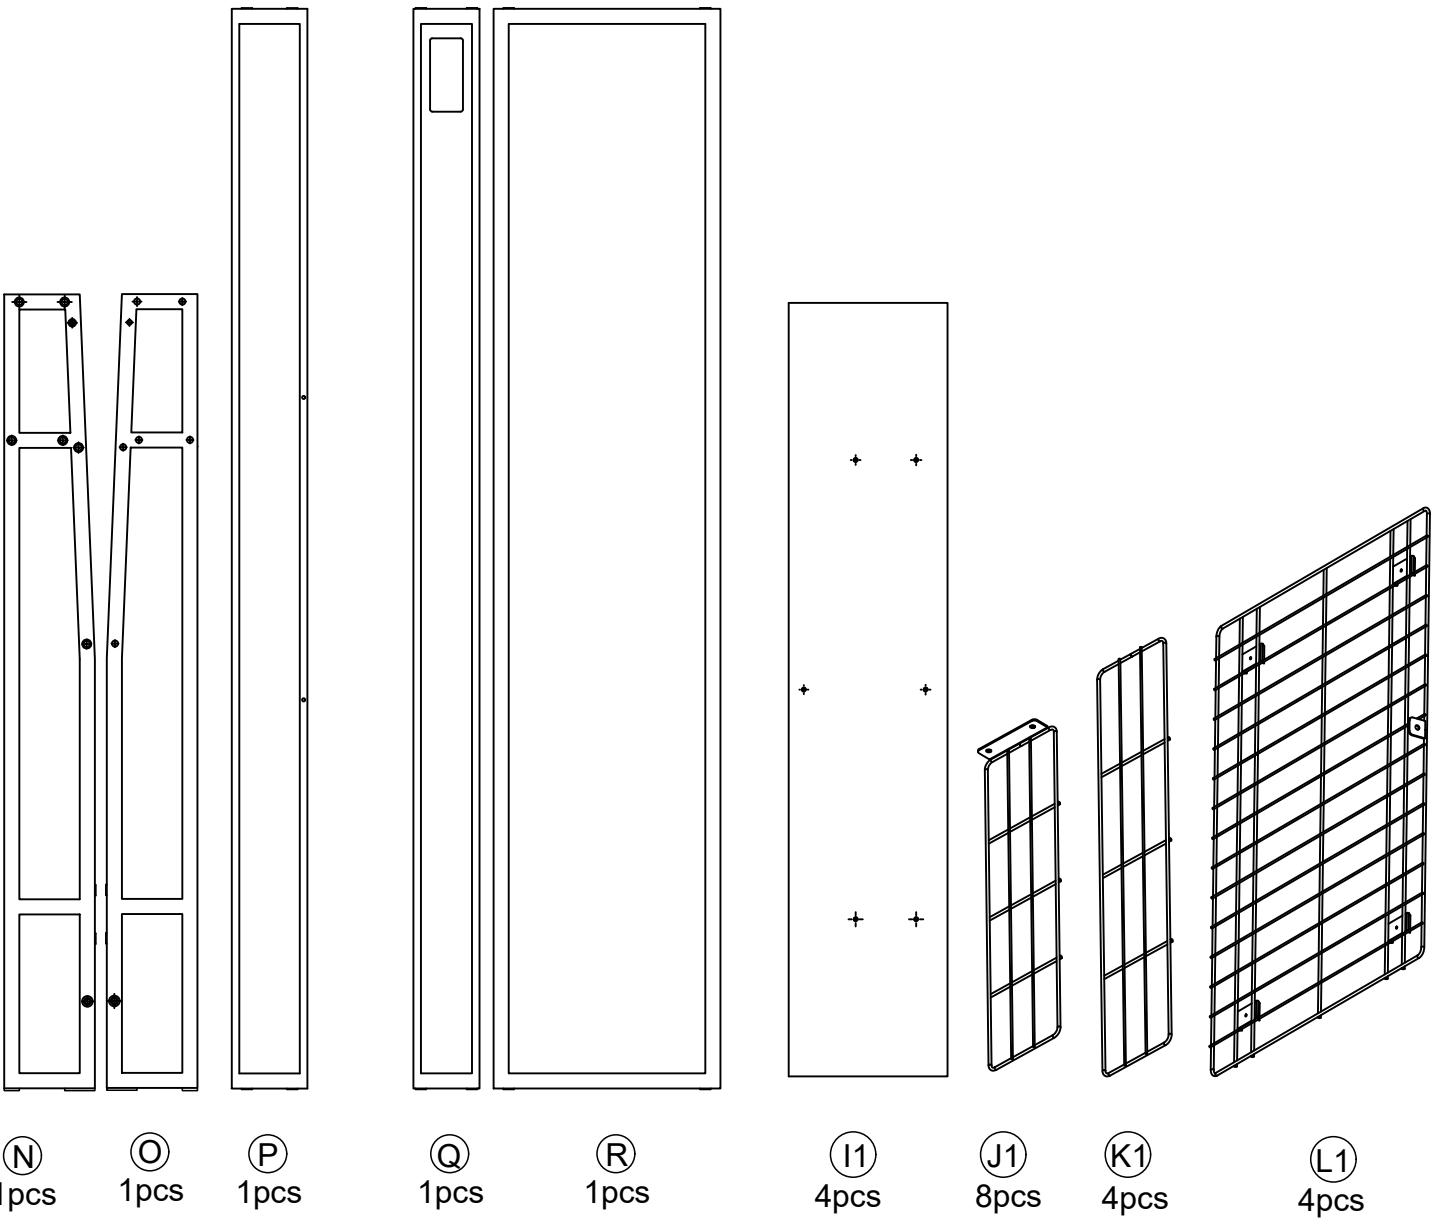


Parts List:

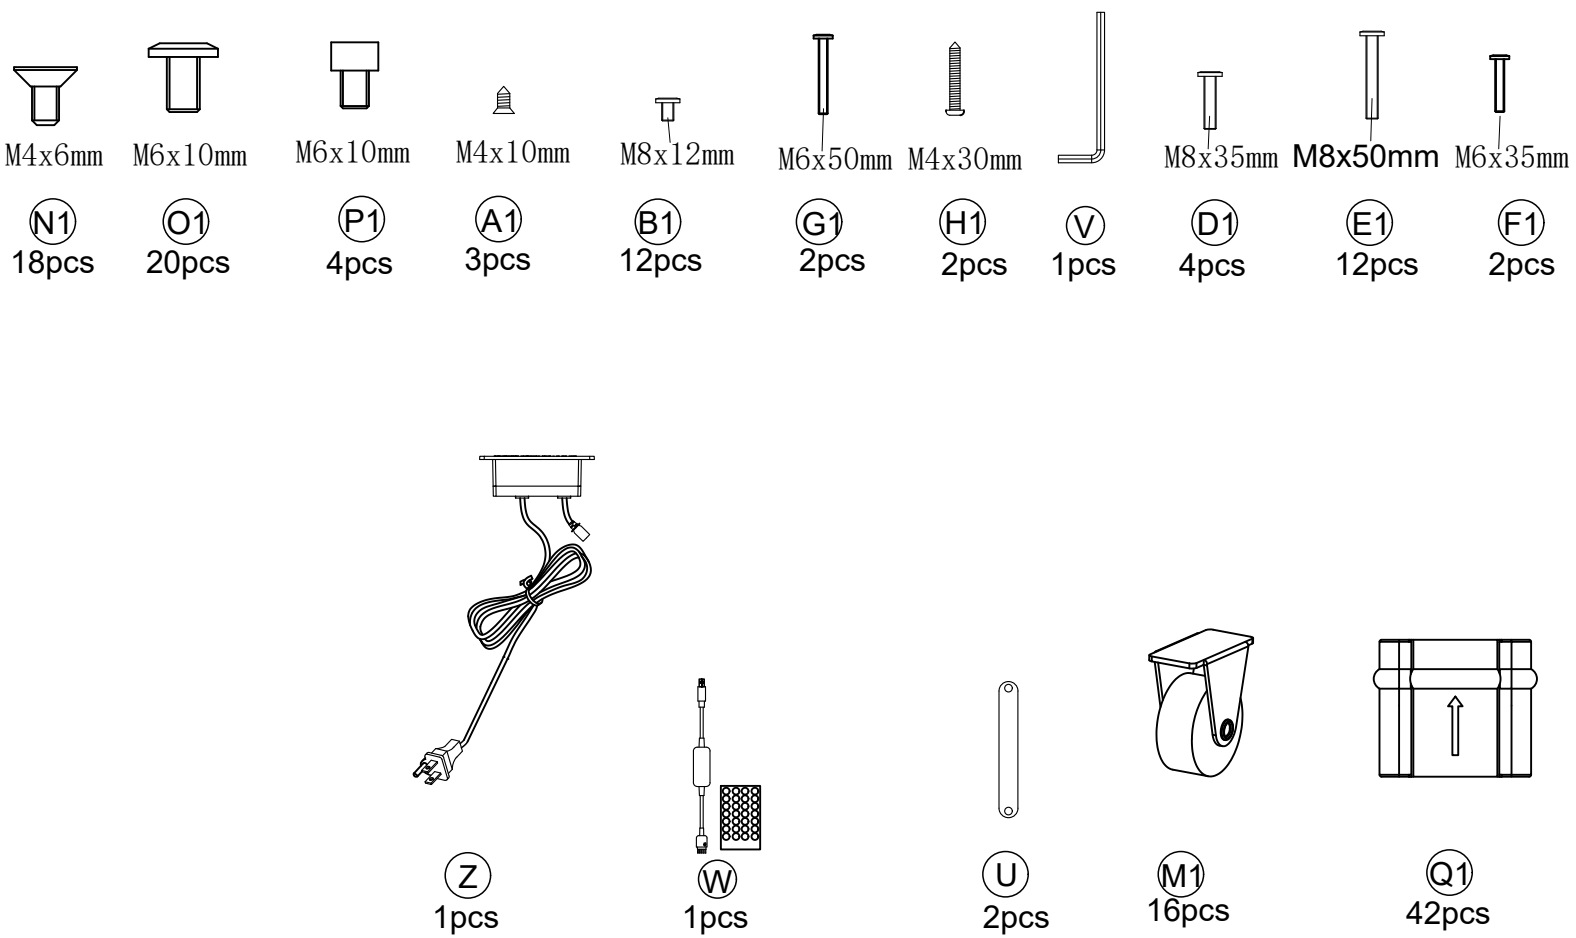


STEP 1

1.1

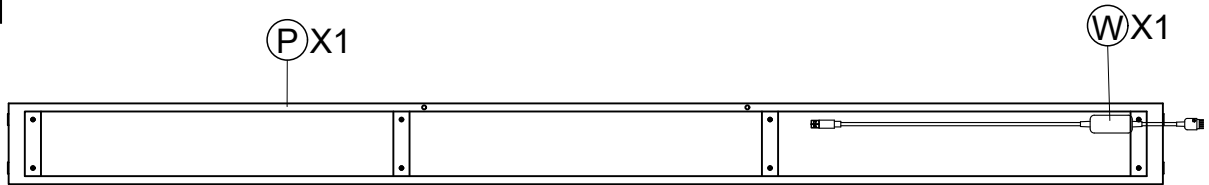

Tear off the double-sided adhesive tape of the "W" and then stick it to "P"

1.2

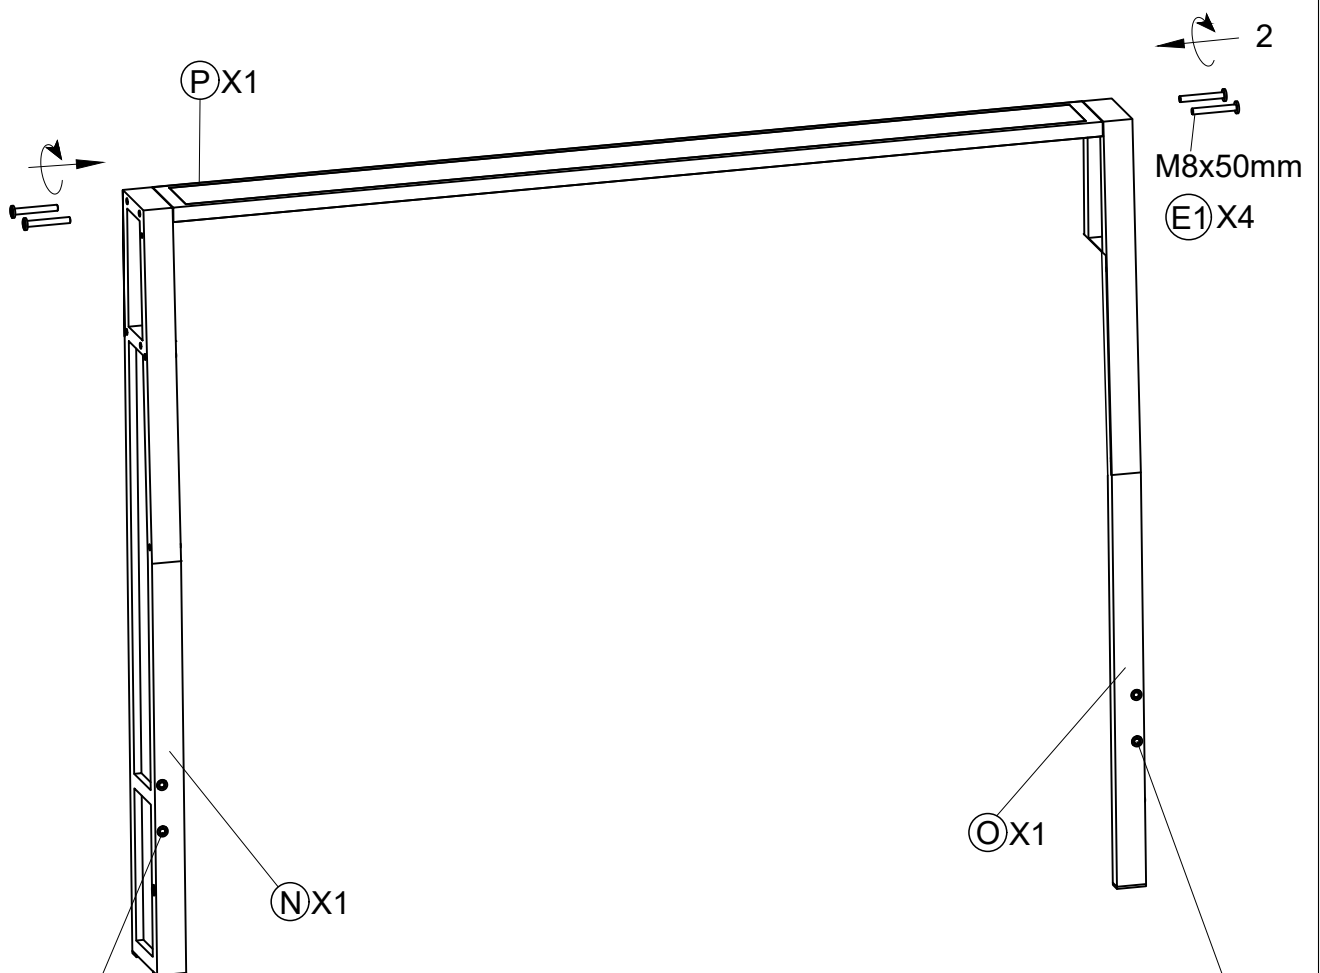


Note: The two holes are near the outside

Note: The two holes are near the outside


STEP 2

We suggest using drill machine to install A1 screws

*Note: no holes on the board is normal

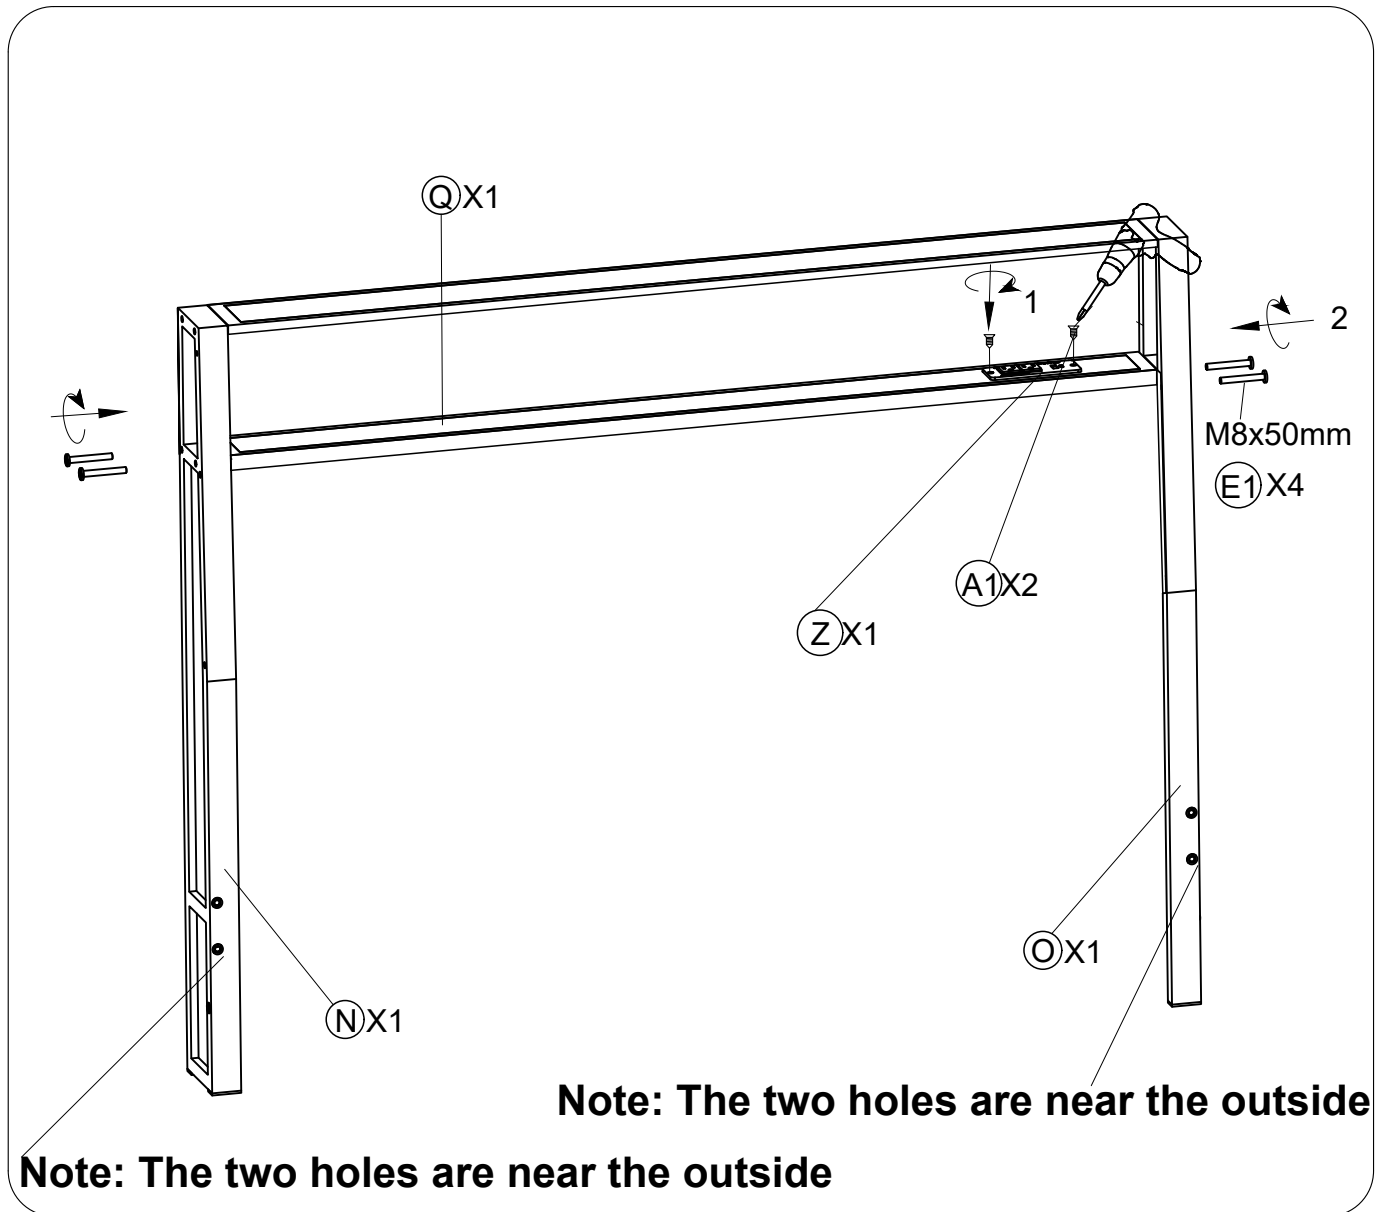

STEP 3

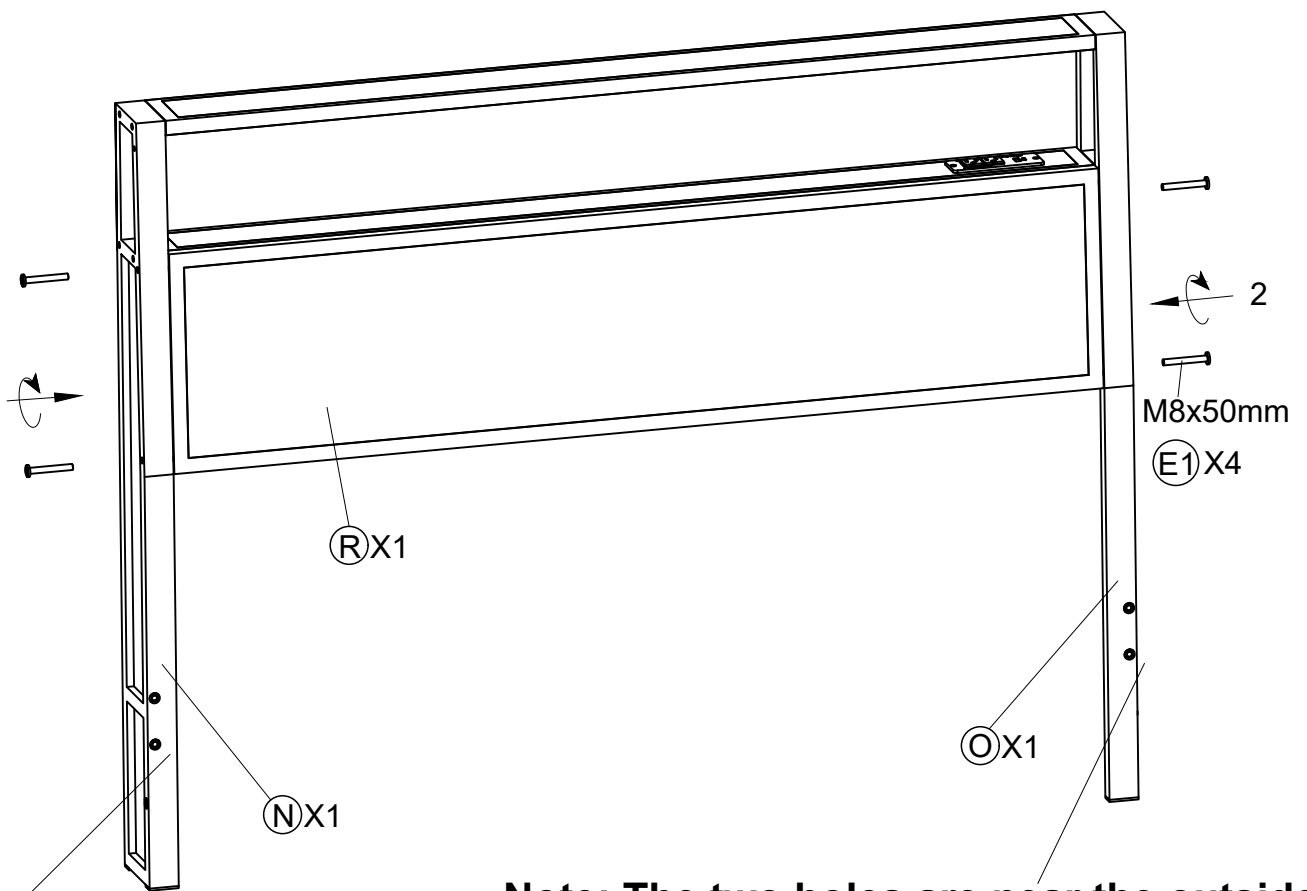


Note: The two holes are near the outside




Note: The two holes are near the outside

STEP 4

We suggest using drill machine to install H1 screws

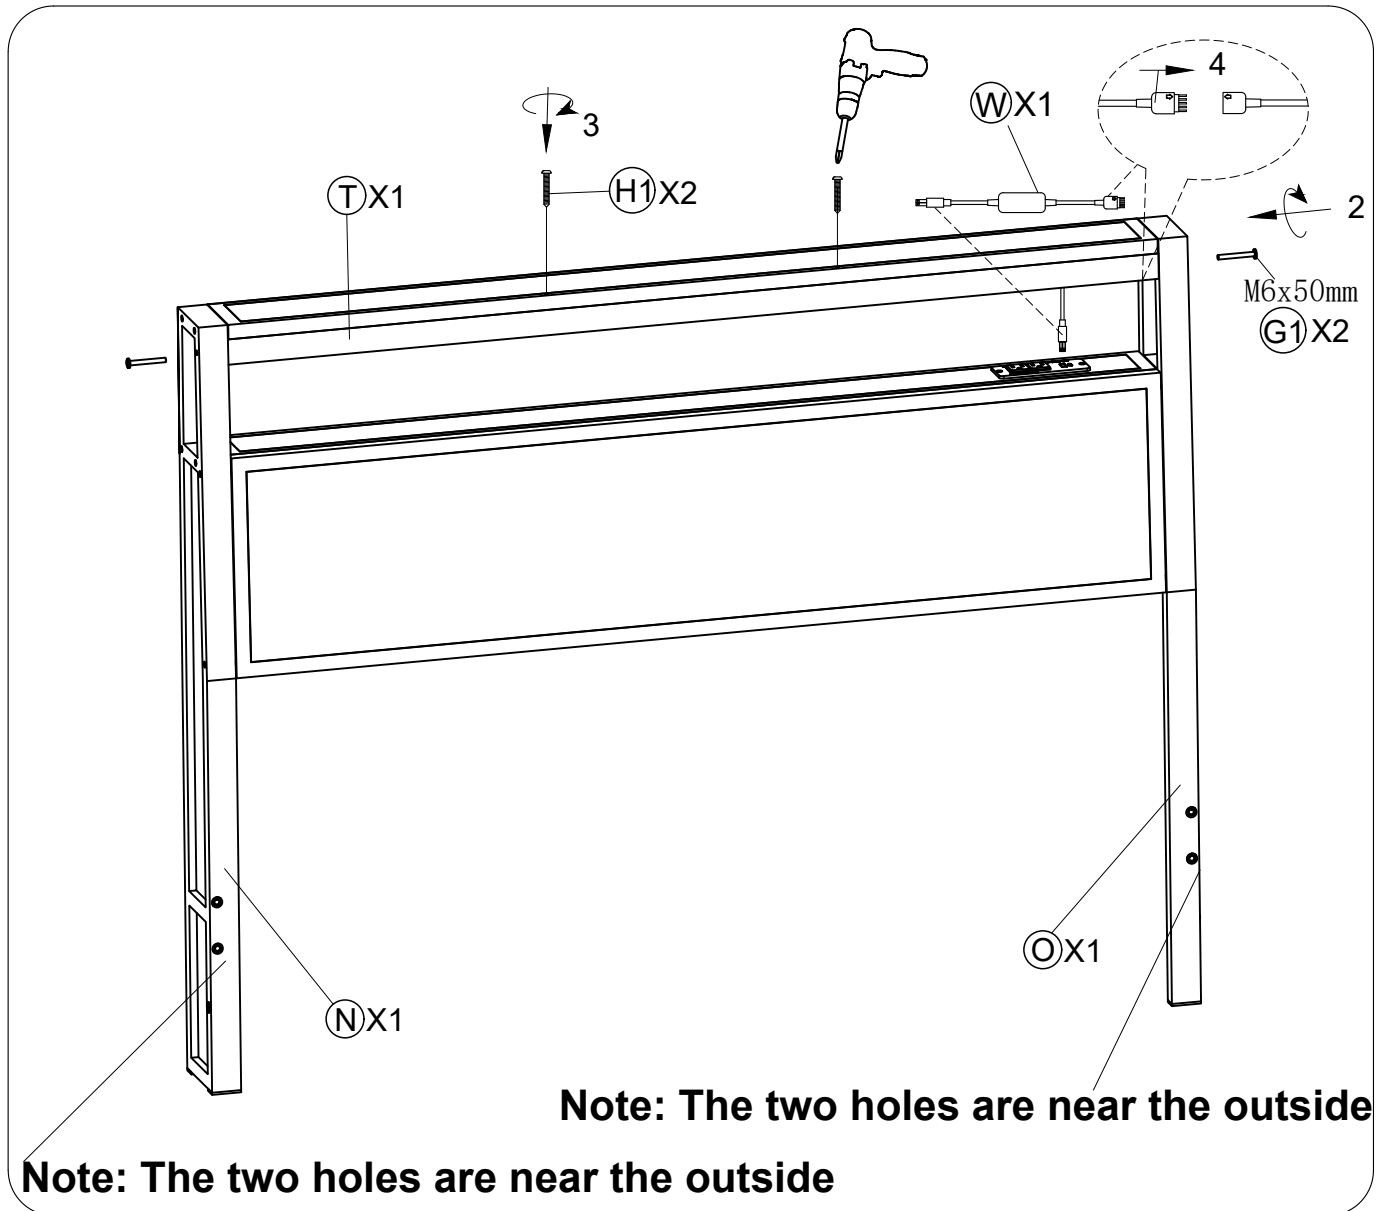


STEP 5

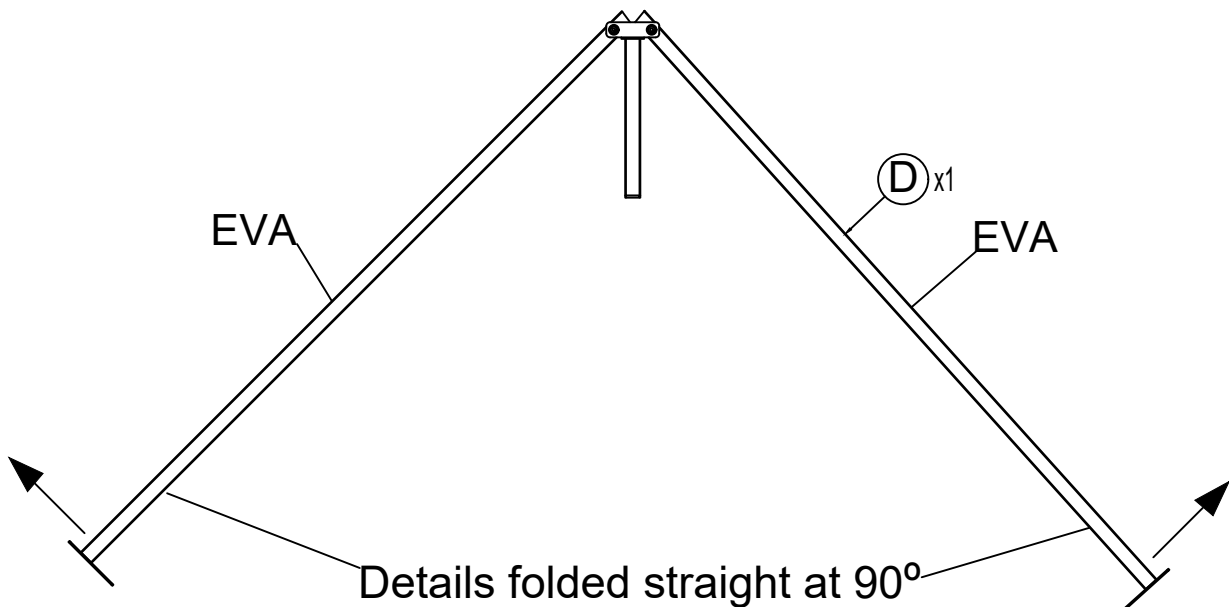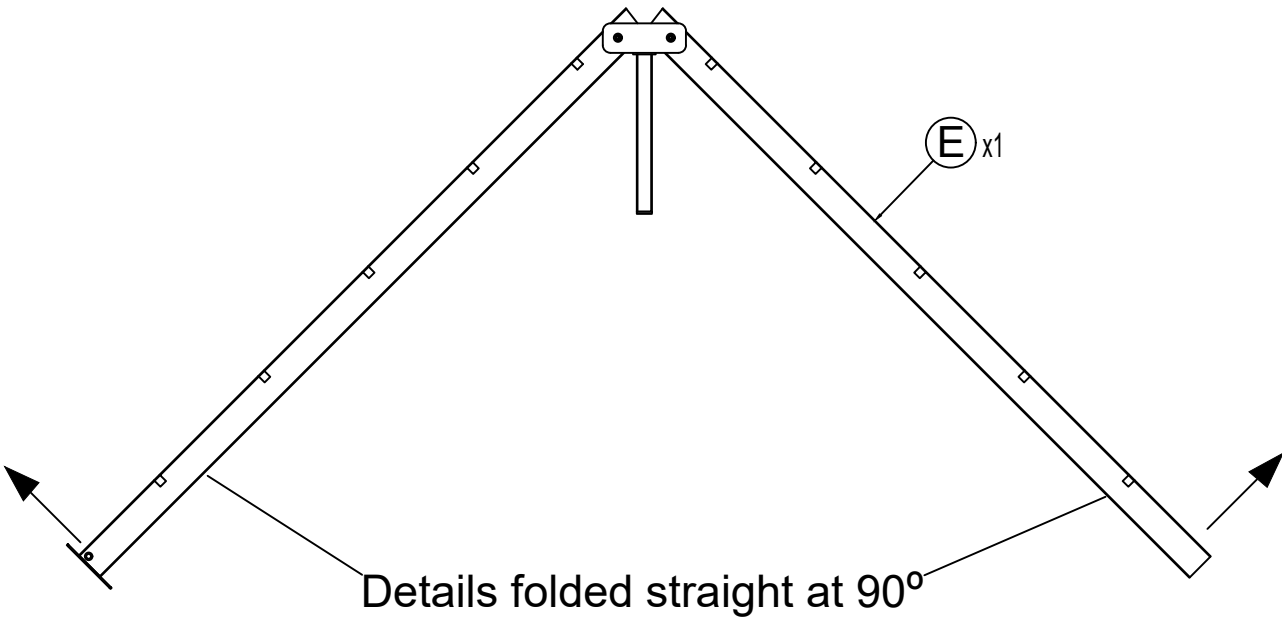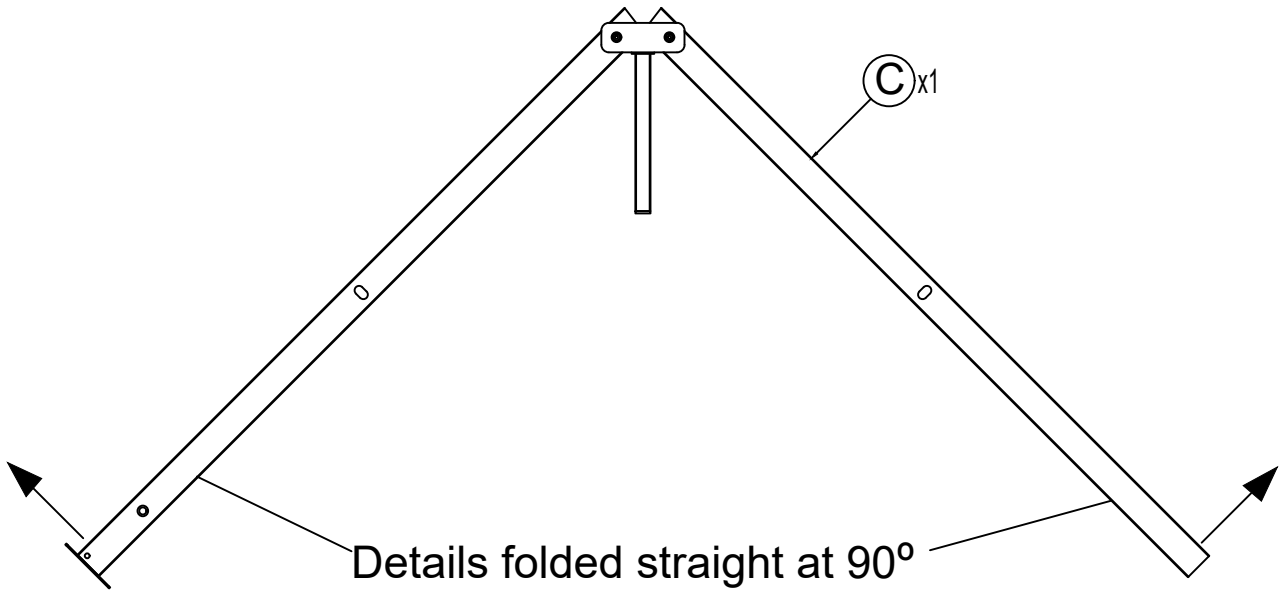


STEP 6

6.1

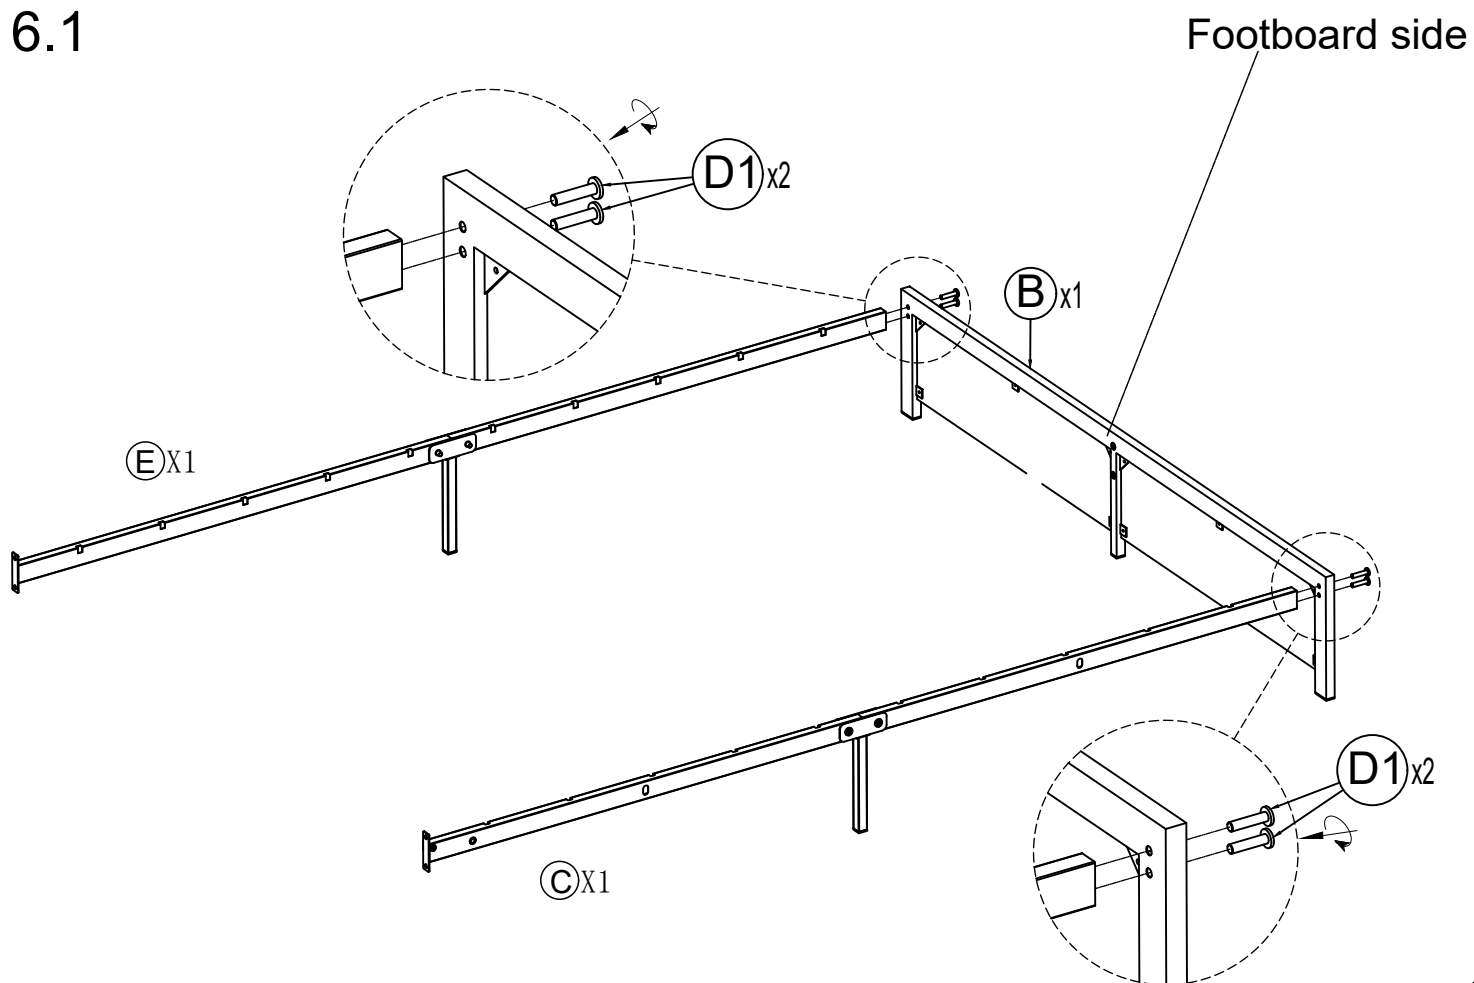


6.2

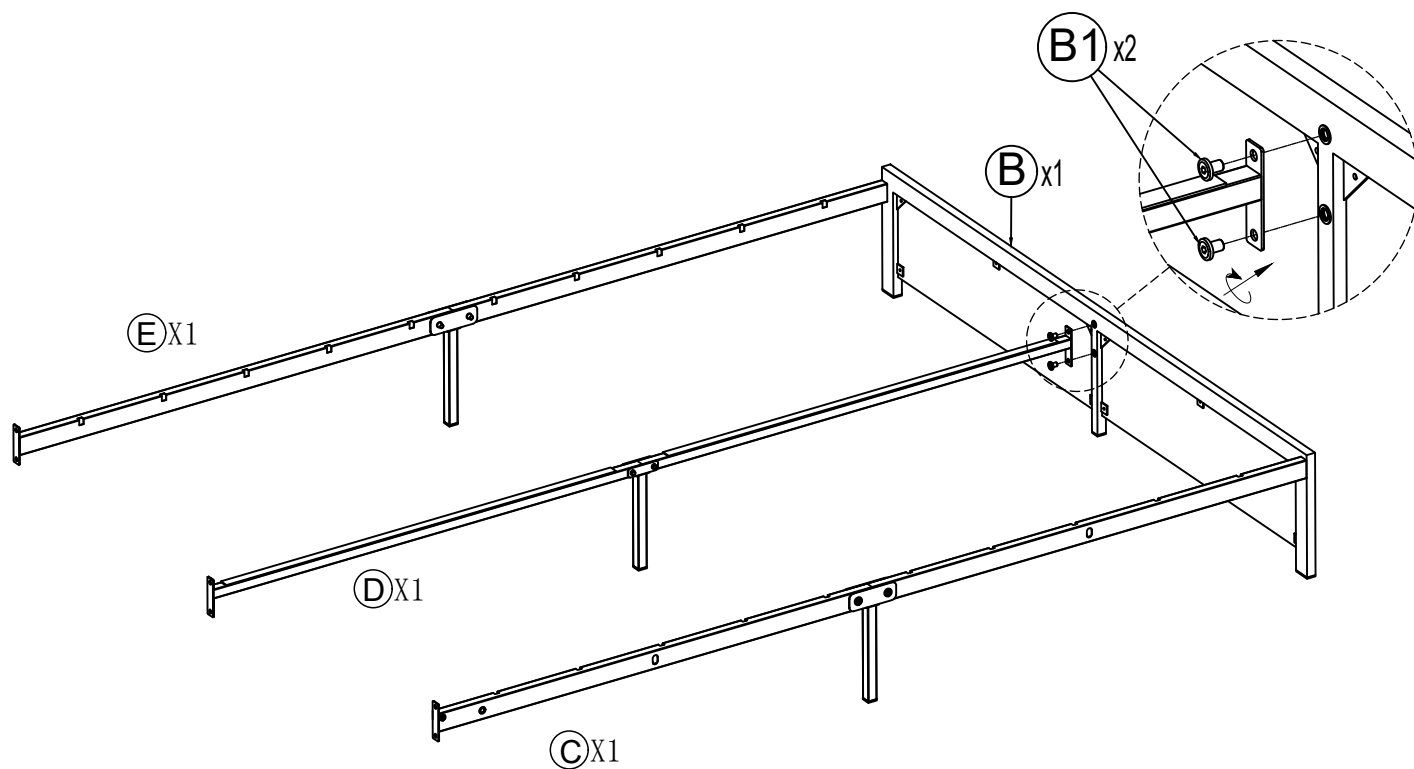


STEP 7

7.1

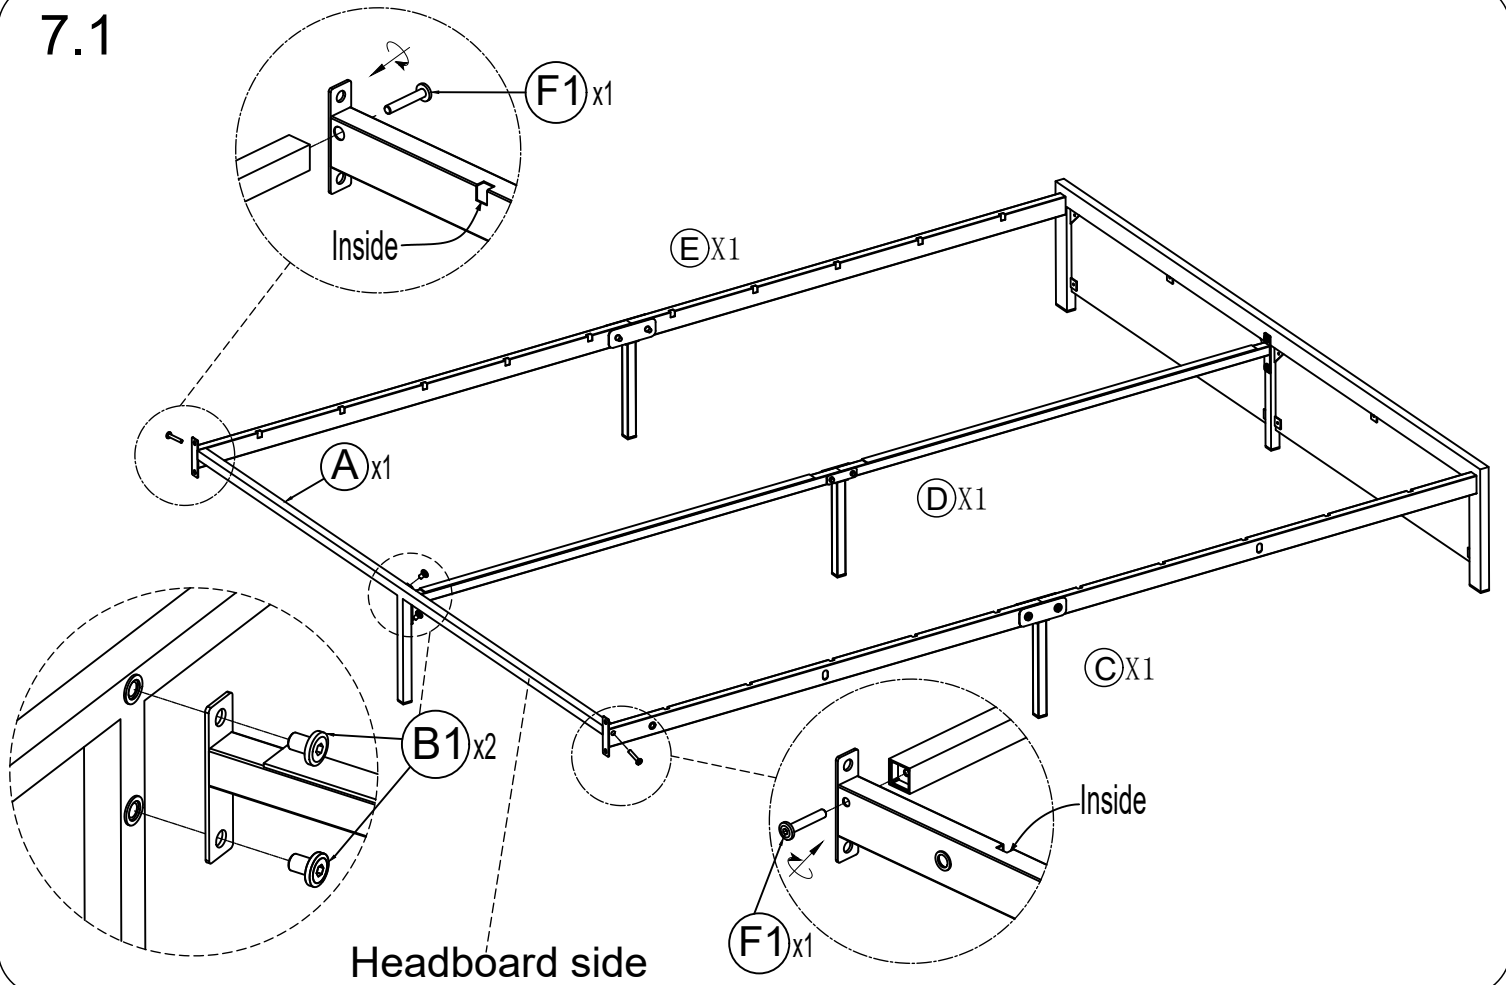


7.2

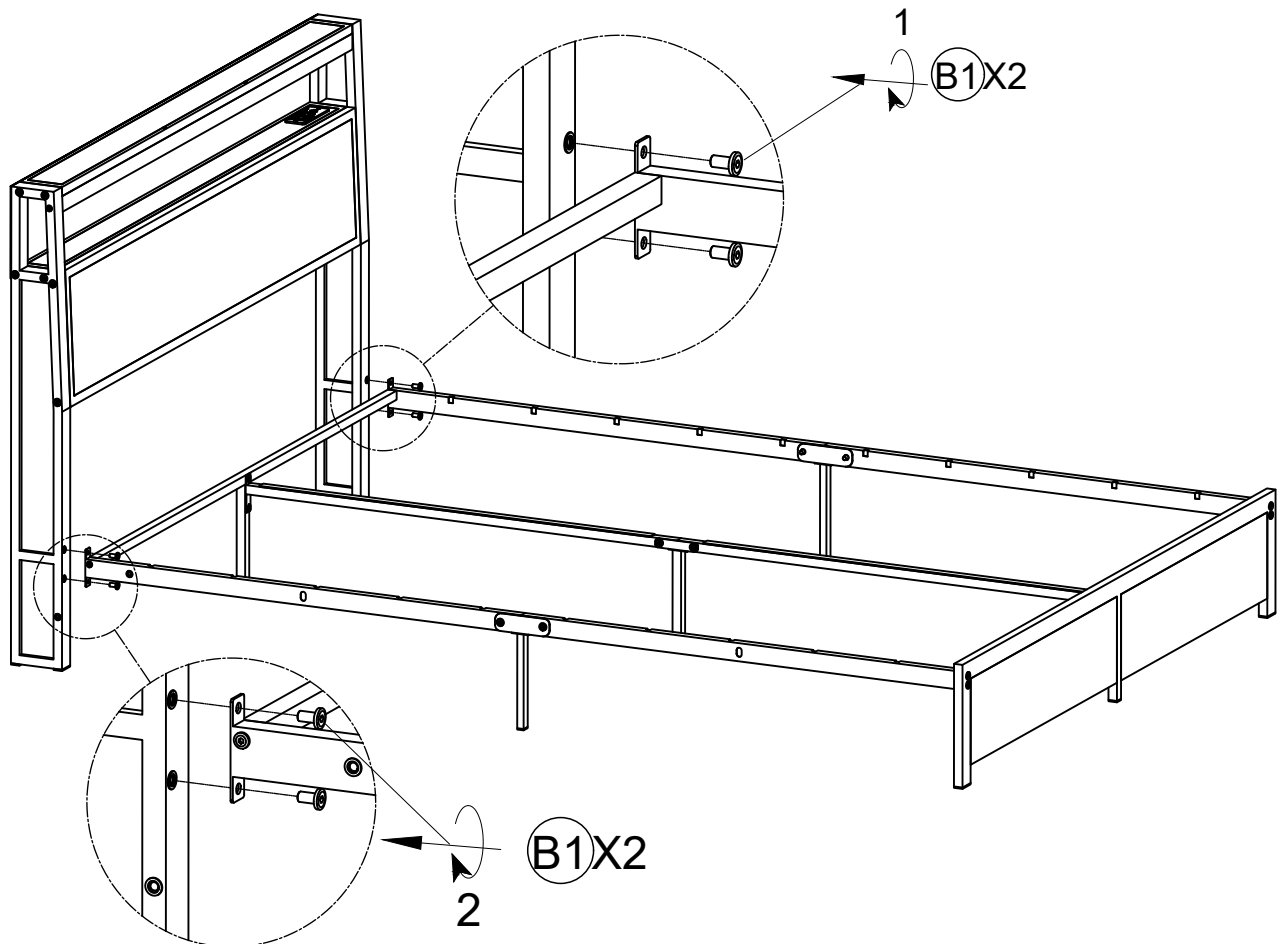


STEP 8

8.1

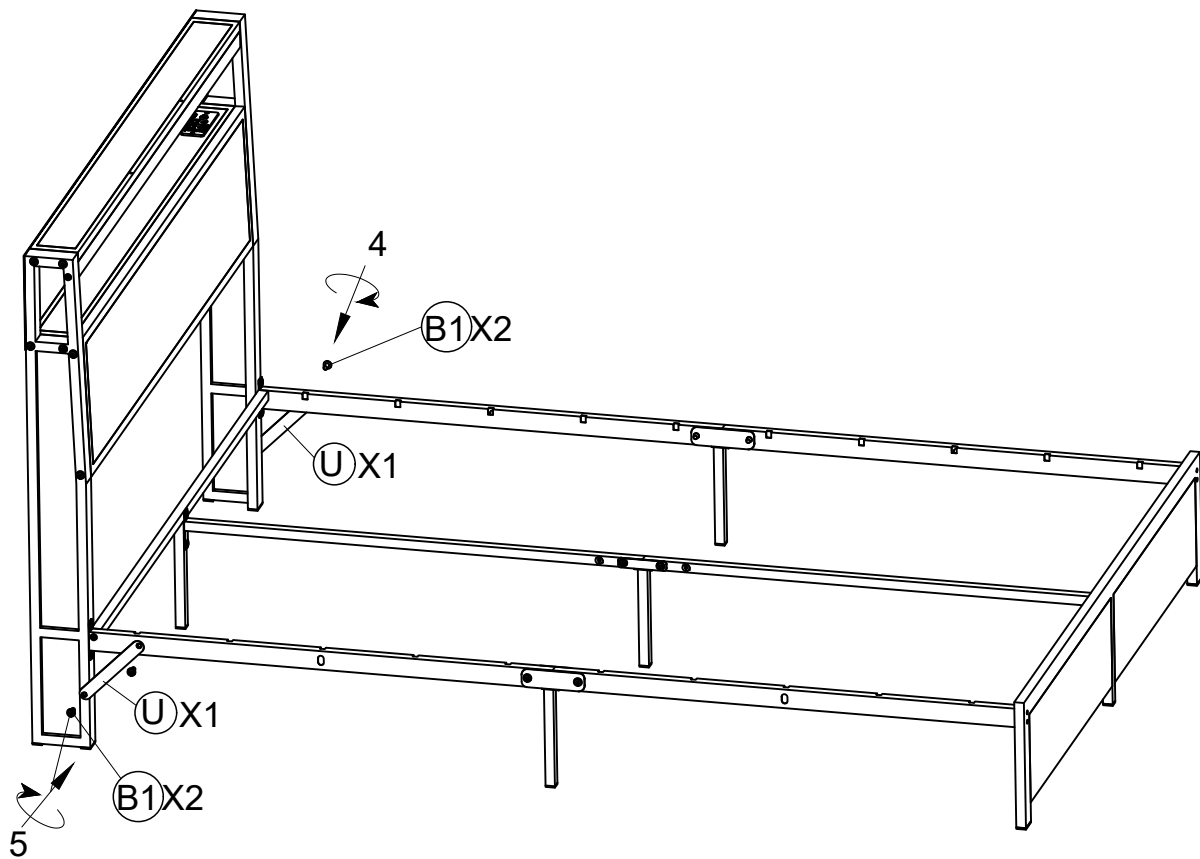


8.2

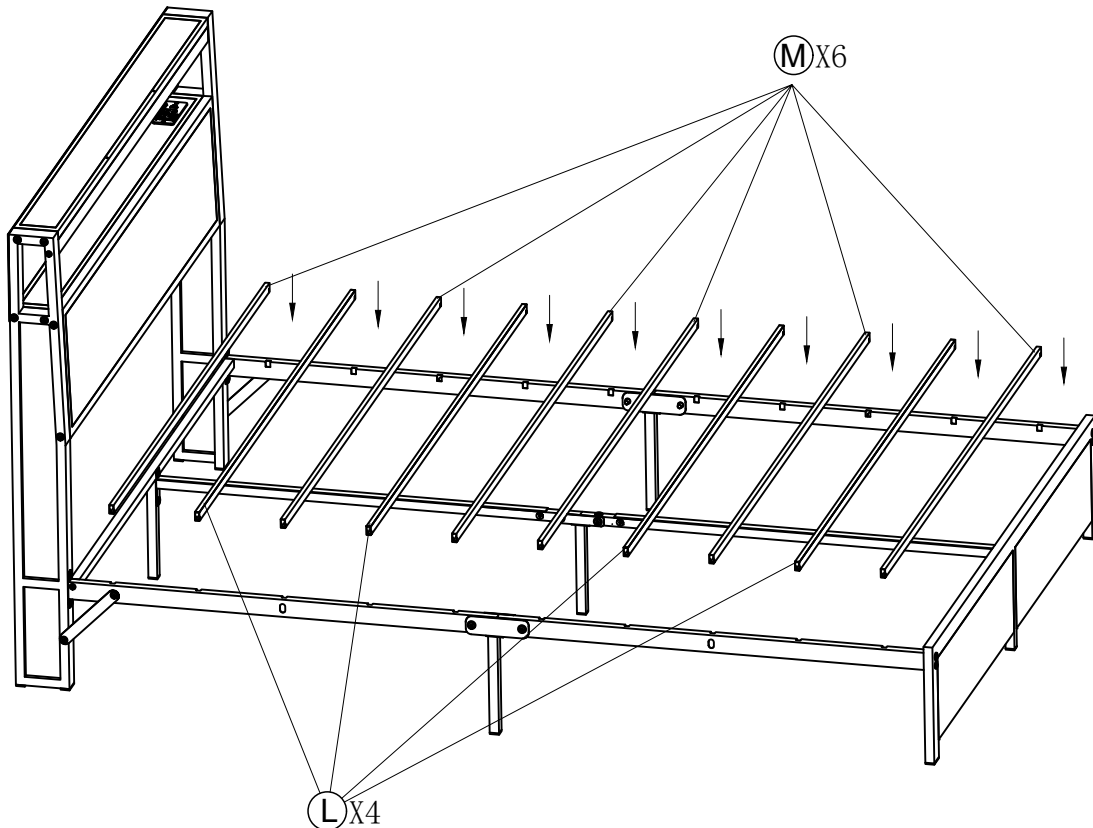

Tear off the double-sided adhesive tape before place the mattress.


STEP 9

Put all the screw in but not tighten, don't let the screws get through all the wheel's holder"

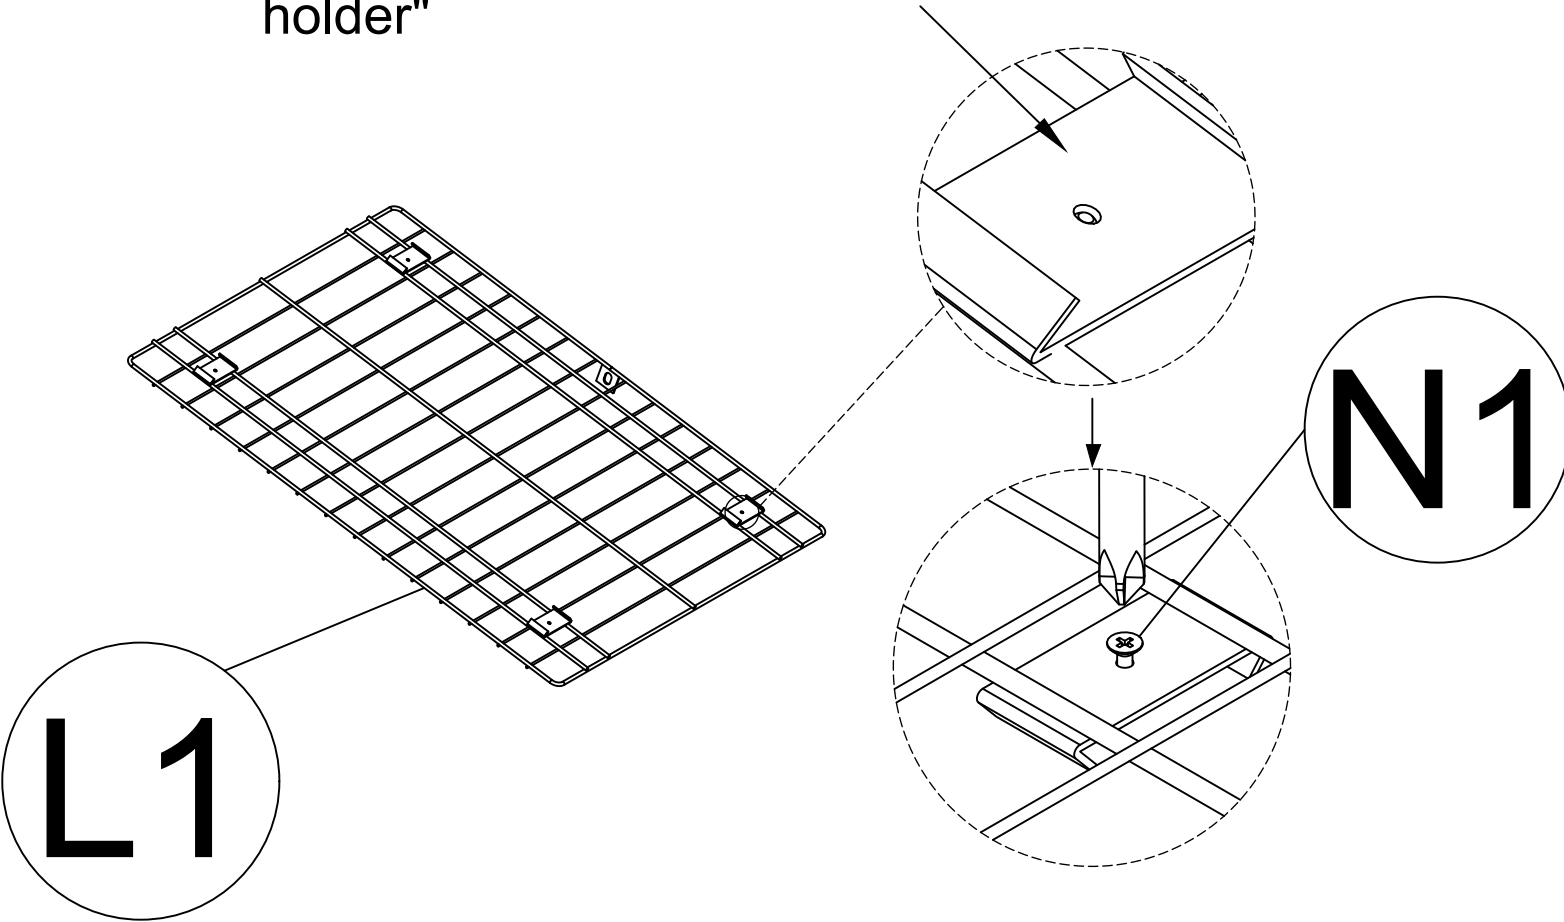


STEP 10

Slide in

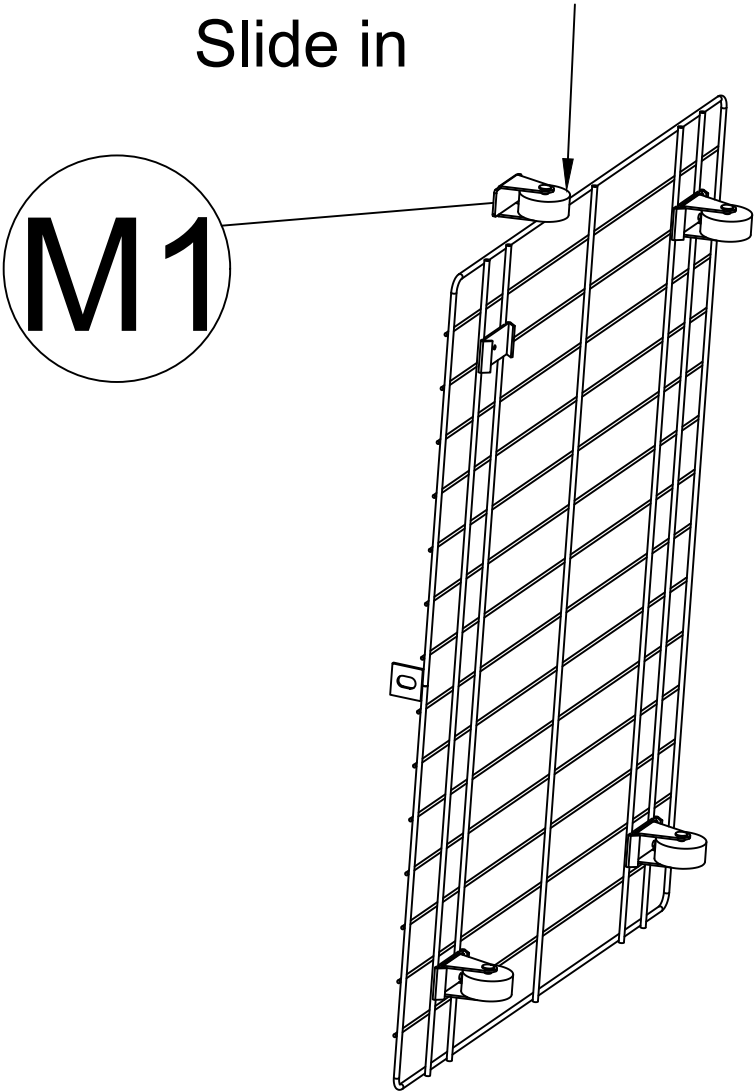

STEP 11




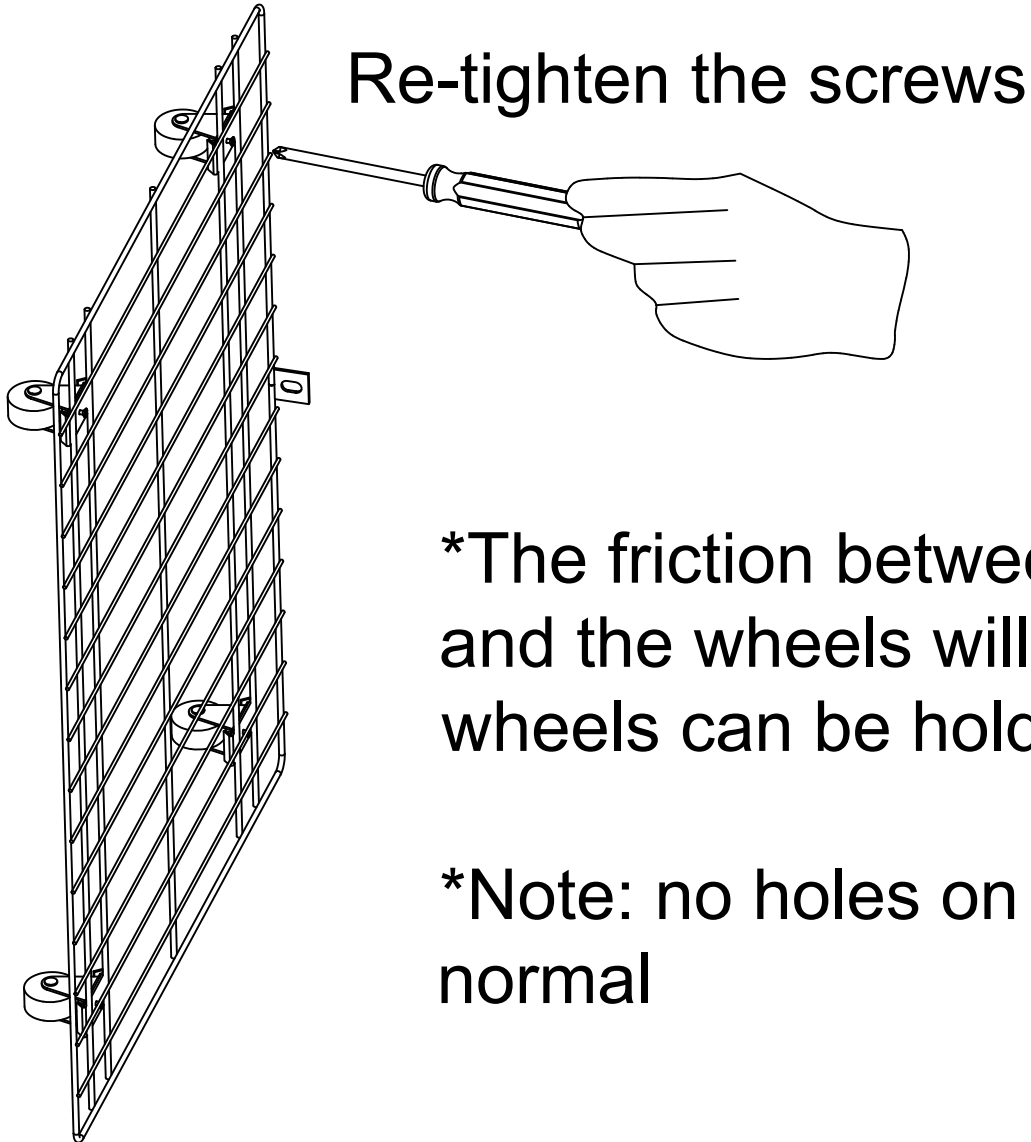


*The friction between the screw and the wheels will make the wheels can be holded


*Note: no holes on the wheels is normal

Detailed assembly instructions Q1


these two lines
on Q1.1 and
Q1.2 need to
be matched

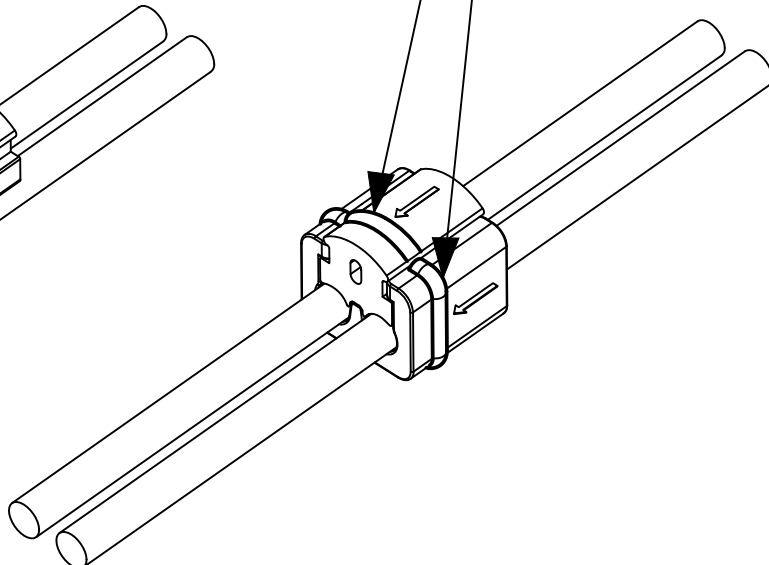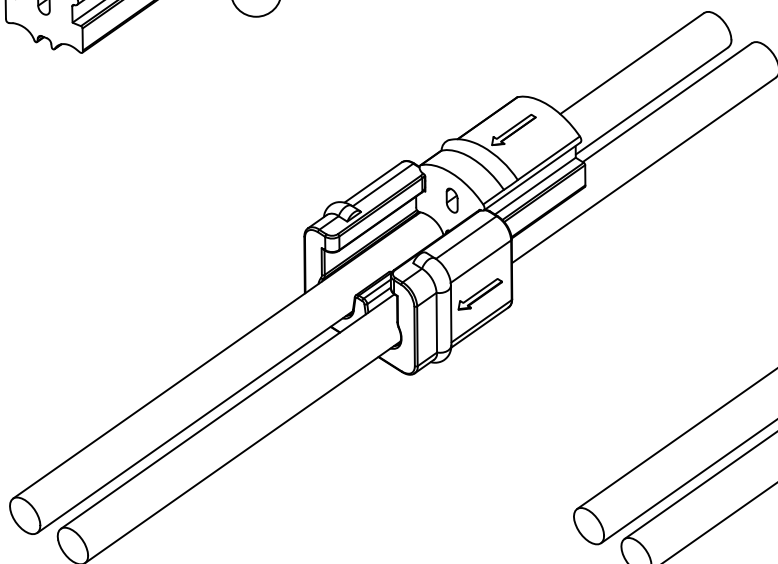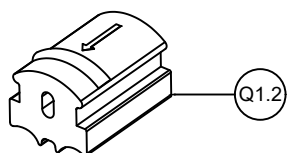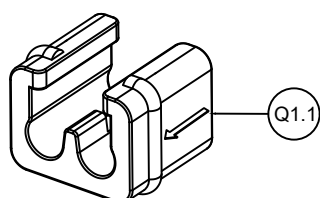


STEP 12

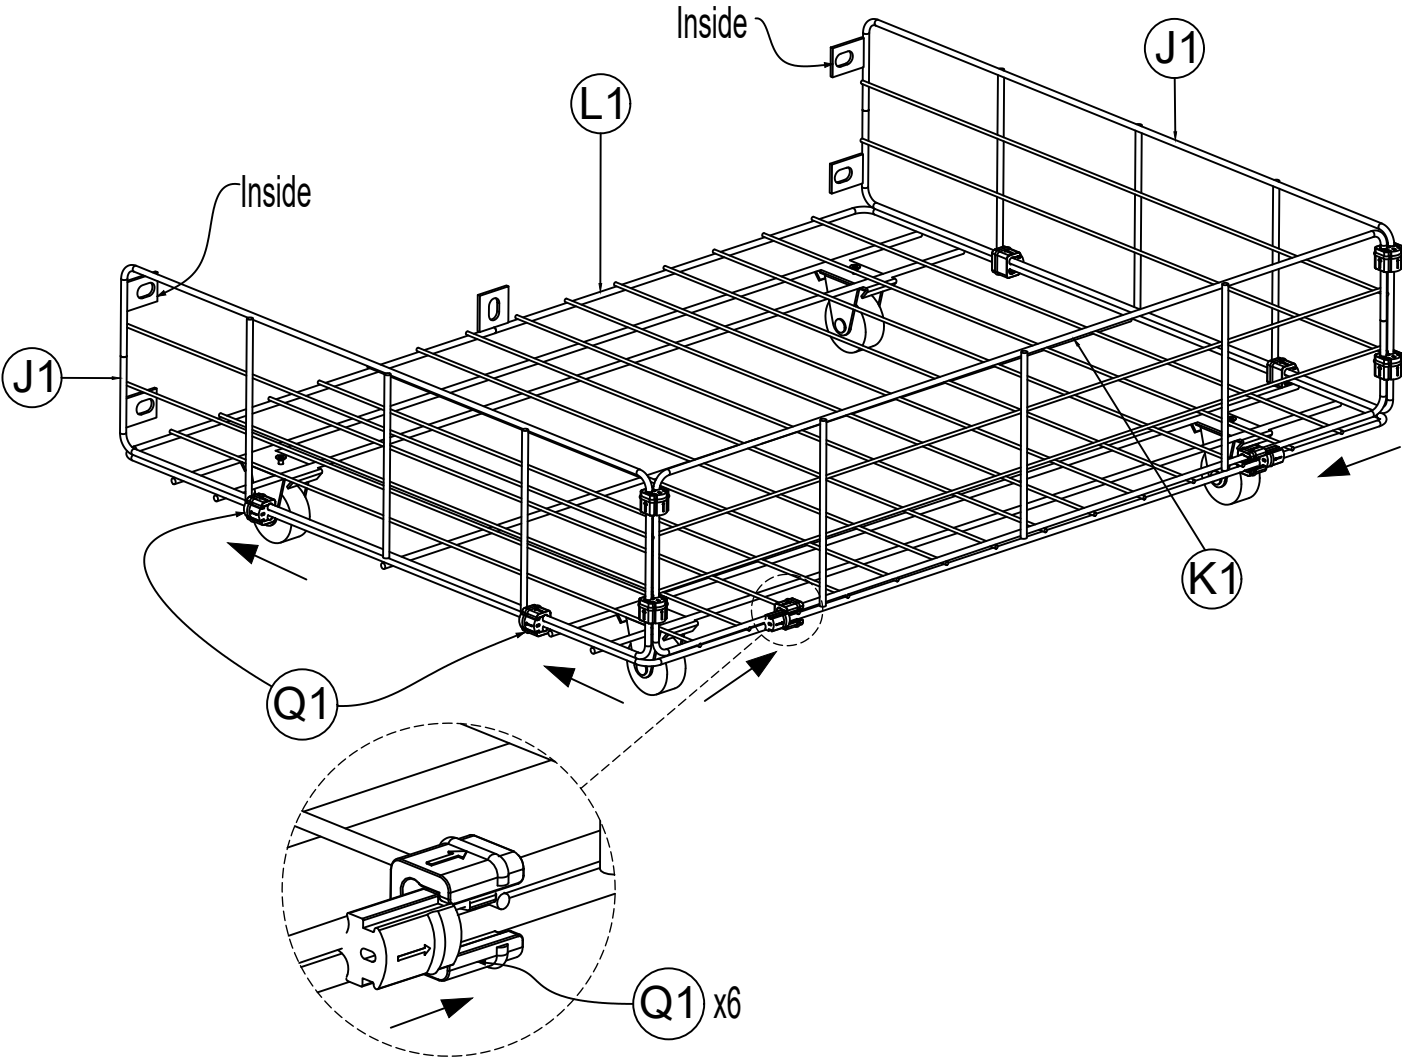

STEP 13

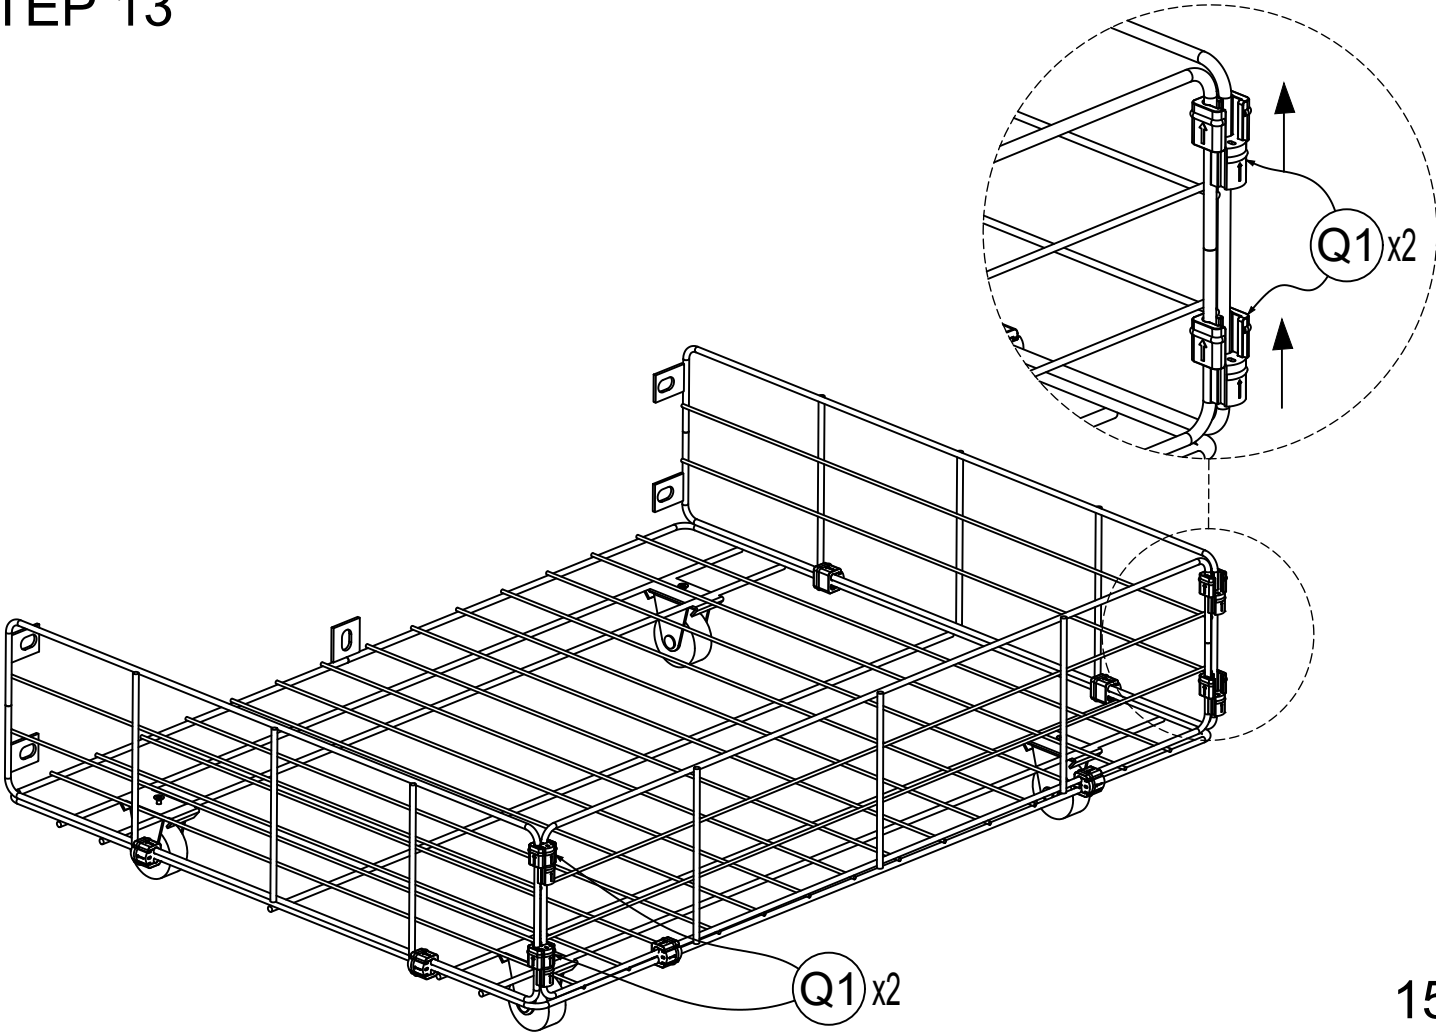


STEP 14

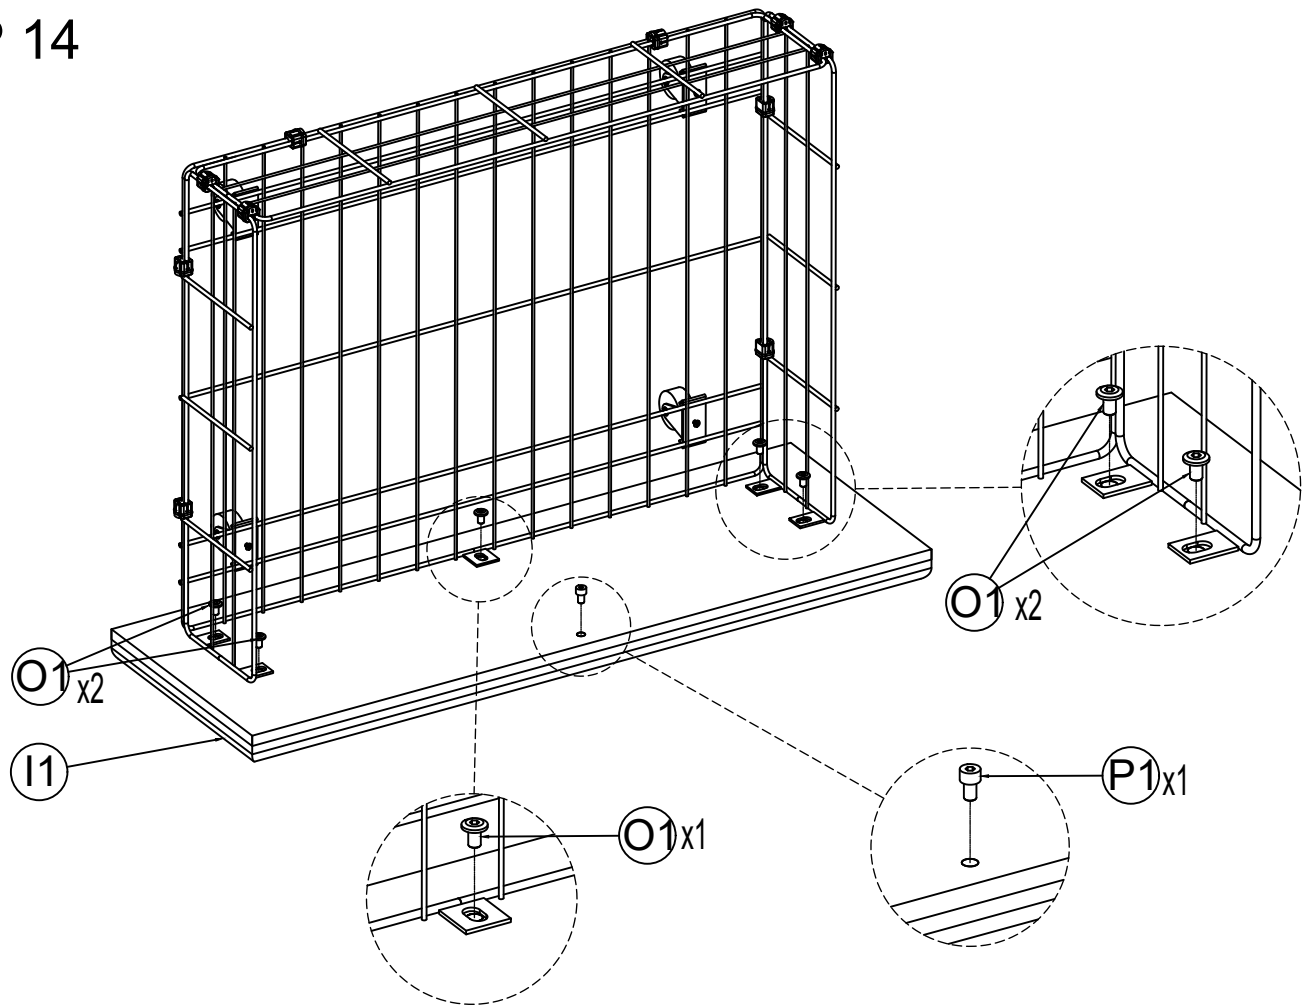


STEP 15

4pcs

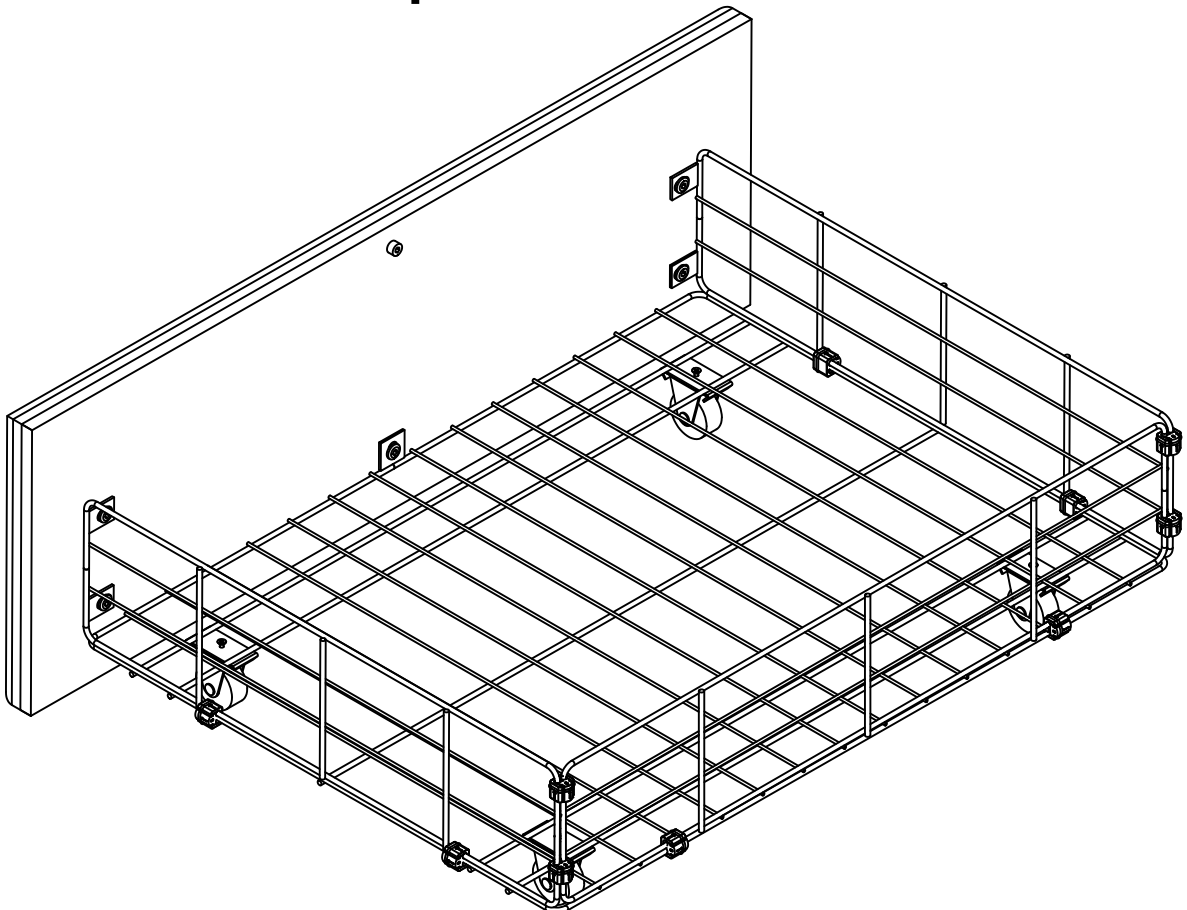

STEP 16

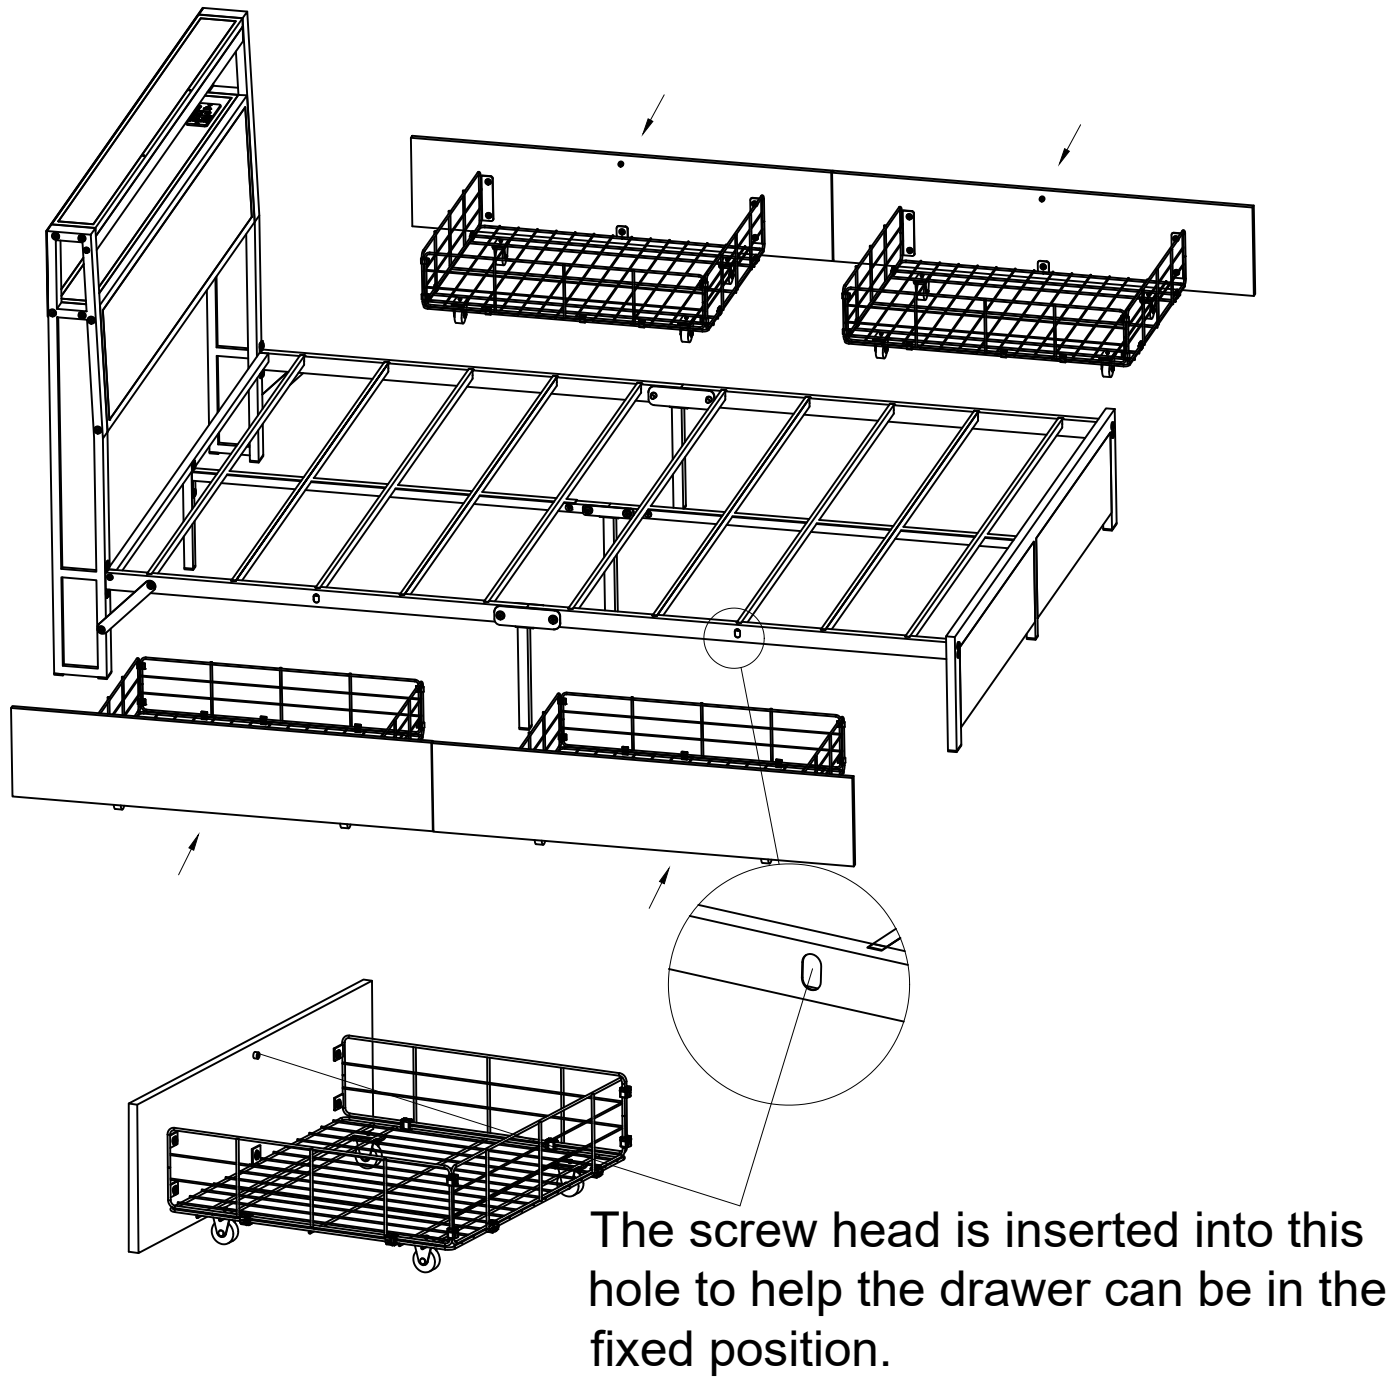

REMOTE CONTROL

