





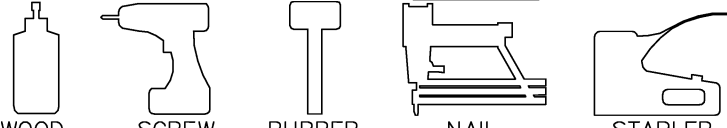


ASSEMBLY INSTRUCTIONS - LAZY SUSAN CORNER CABINET

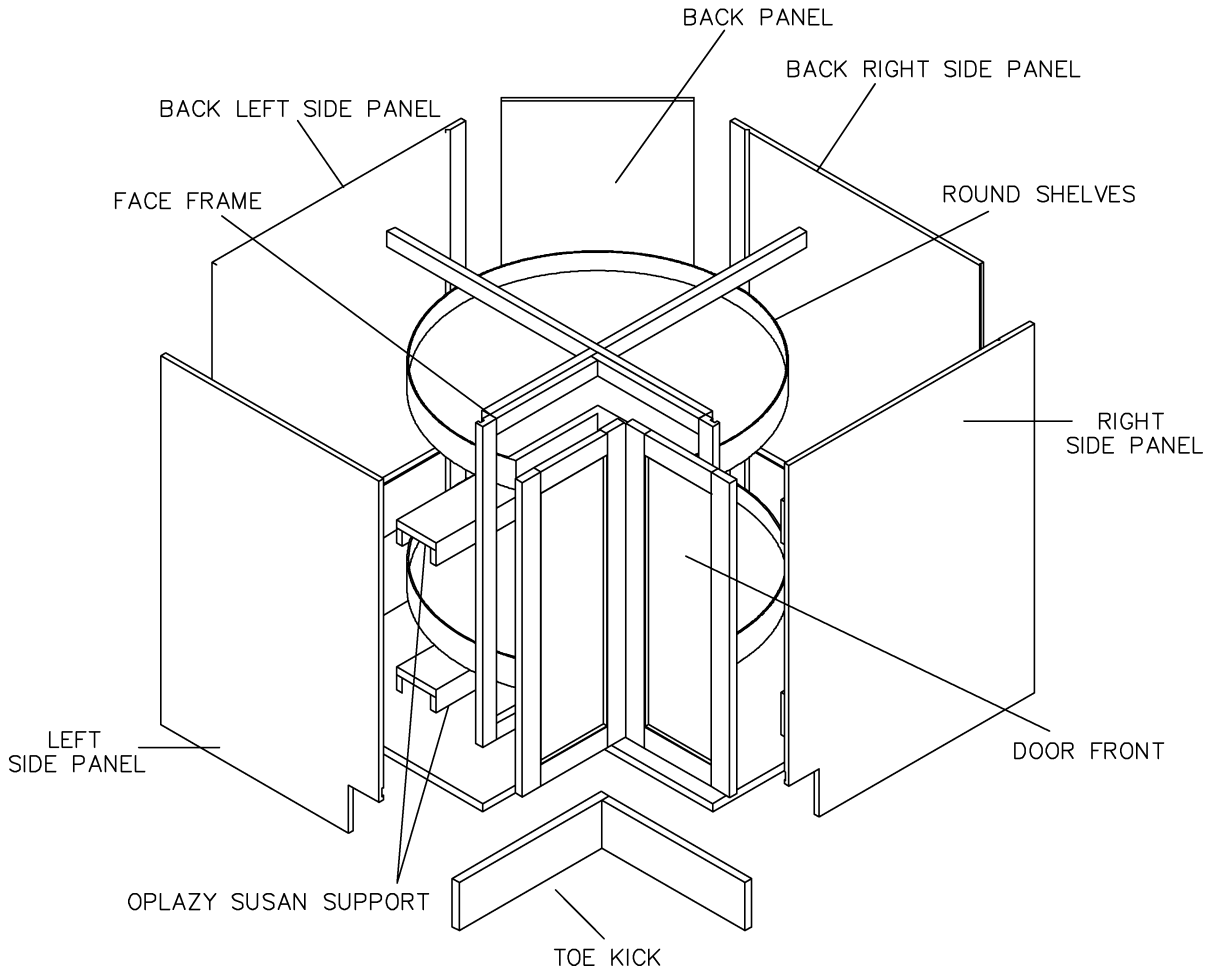

<p>METAL BRACKETS</p> 	<p>METAL BRACKETS</p> 	<p>BIFOLD HINGE</p>  <p>ES/DS/SG</p>	<p>170 HINGE</p> 	<p>SCREWS</p> 
---	---	---	--	---


TOOLS




WOOD GLUE SCREW DRIVER RUBBER MALLET NAIL GUN STAPLER

This instruction applies to the following items:
LZS33, LZS3612


STEP 1

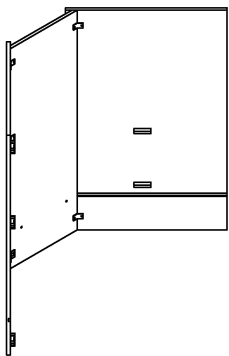


STEP 2

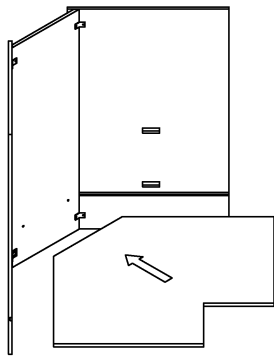


STEP 3

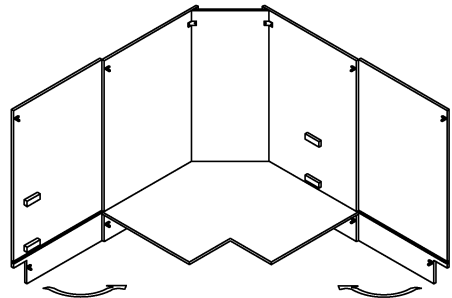


STEP 4

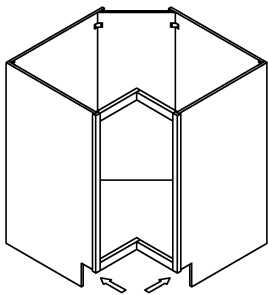


STEP 5

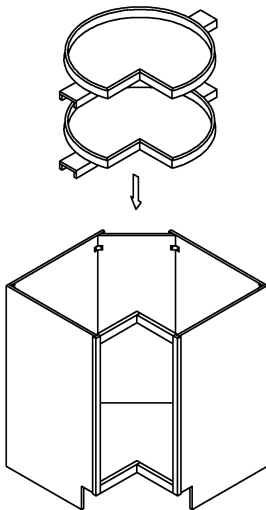

STEP 6

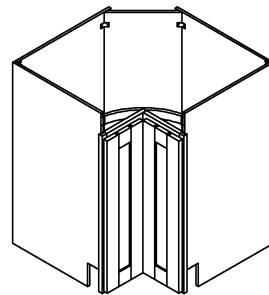

STEP 7

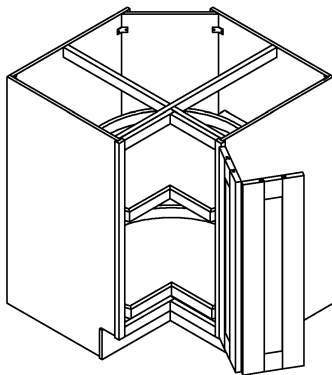

STEP 8

