

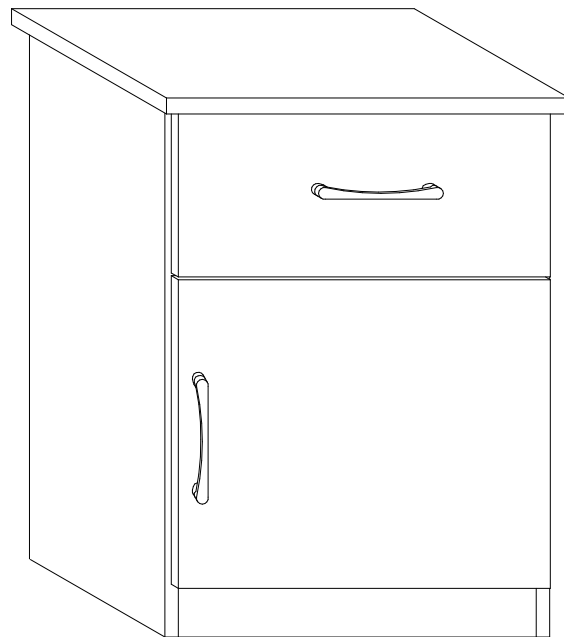



NIGHT STAND

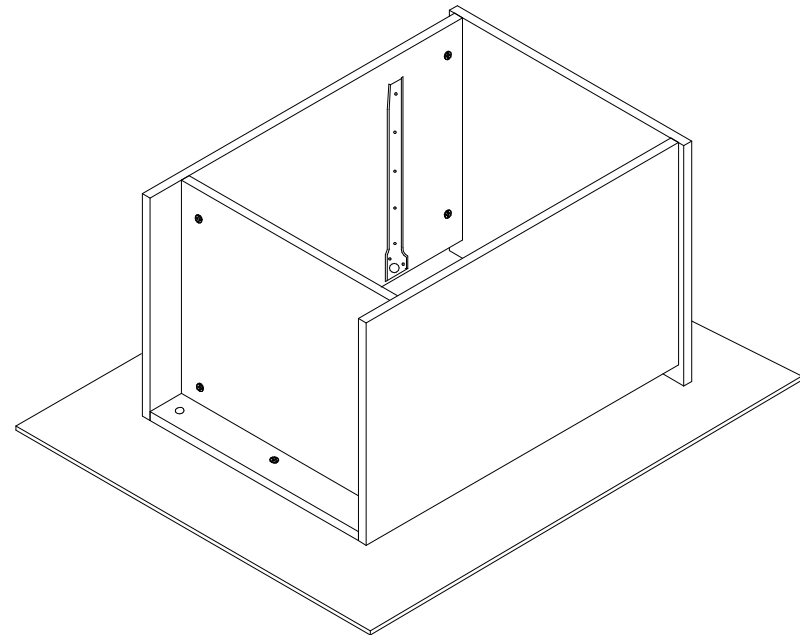

Required Tools : Screwdriver & Hammer

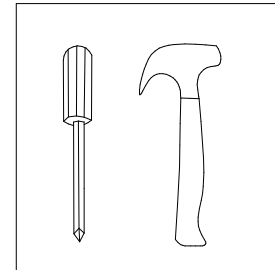


Please place on the carton while installing to prevent damage or scratches.

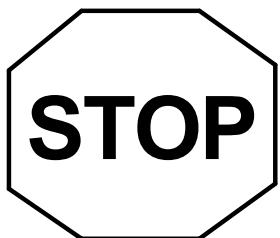

ASSEMBLY INSTRUCTION (PART & HARDWARE LIST)


NIGHT STAND

1.

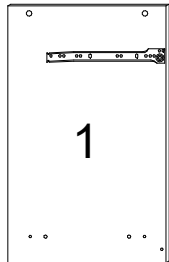

SIDE PANEL (R)

2.

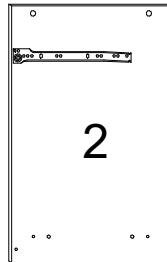

SIDE PANEL (L)

3.


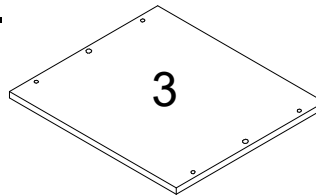



TABLE TOP

4.

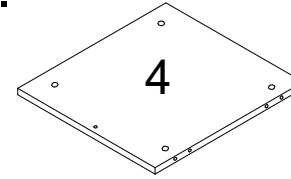


BOTTOM

5.

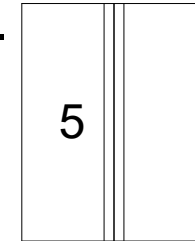


BACK PANEL

6.

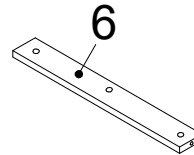


APRON PANEL

7.



DRAWER TOP

8.



DRAWER BACK PANEL

11.




DRAWER PANEL

9.




DRAWER SIDE PANEL
R

10.



DRAWER SIDE PANEL
L



12.

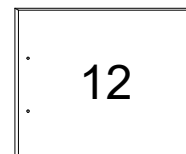

DOOR

NO	HARDWARE DESCRIPTION	QTY
A.	Plastic Handle 	2
B.	Handle Screw M4 X 40mm 	2
C.	Handle Screw M3.5 X 25mm 	2
D.	JCBC Bolt M6 X 50mm 	2
E.	Nail 	22
F.	Wood Dowel M8 X 30mm 	6
G.	Allen Key 	1
H.	Cam Screw 	15
I.	Wood Dowel M6 X 30mm 	6
J.	Hinges 	2
K.	Screw M4 X 16mm 	8
L.	Magnet  	1SET
M.	Screw M3 X 12mm 	2
N.	Screw M3 X 16mm 	2
O.	Cam Lock 	15
P.	Barrel Nut M6 X 13mm 	2
*Screw Driver and Hammer Not Provided		


NIGHT STAND

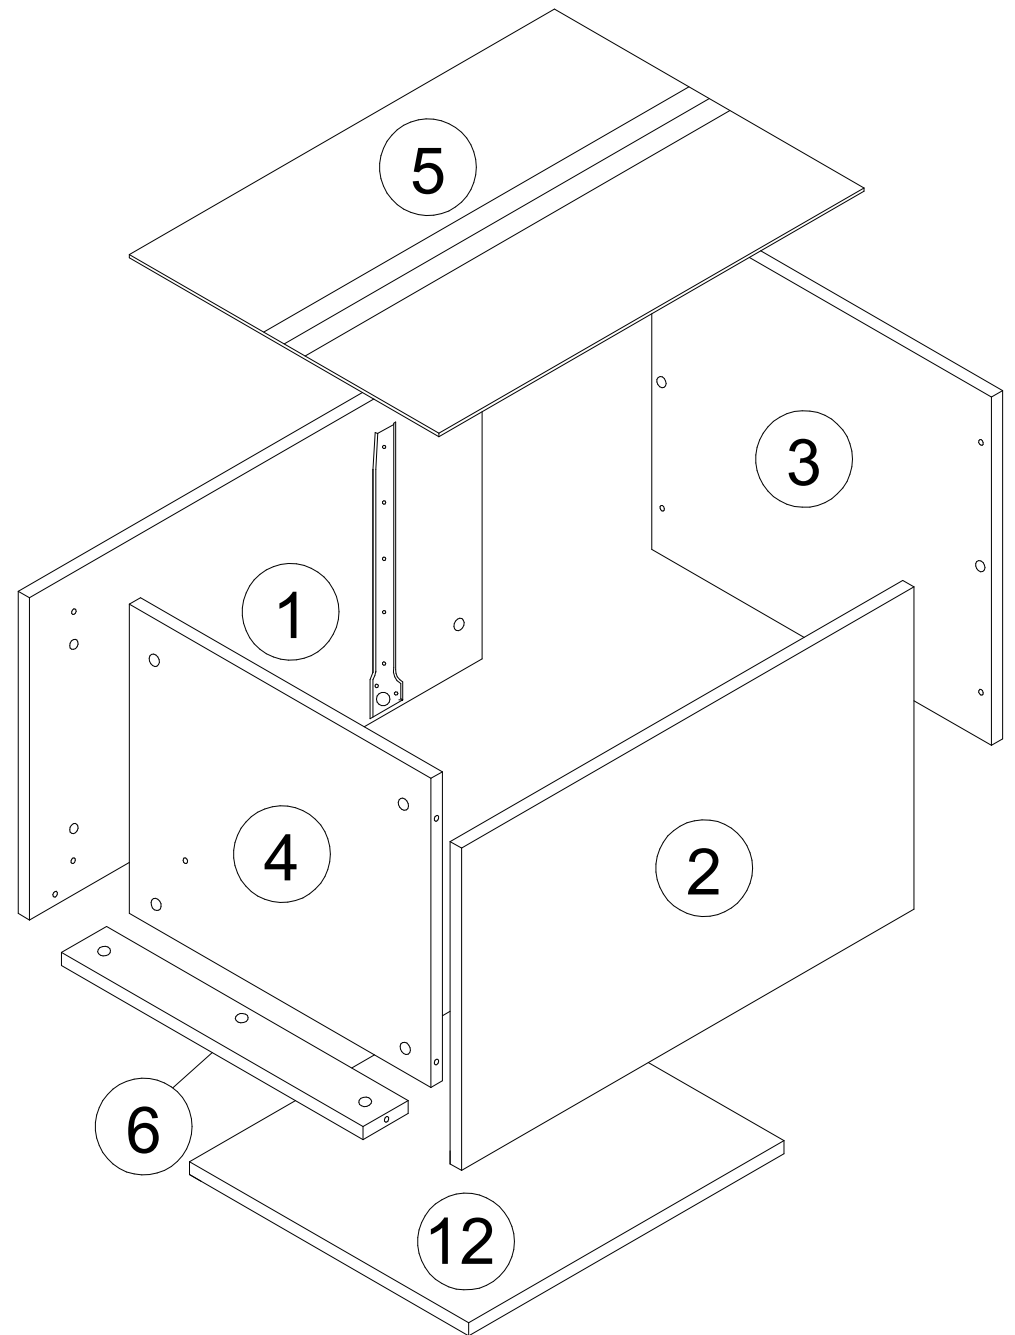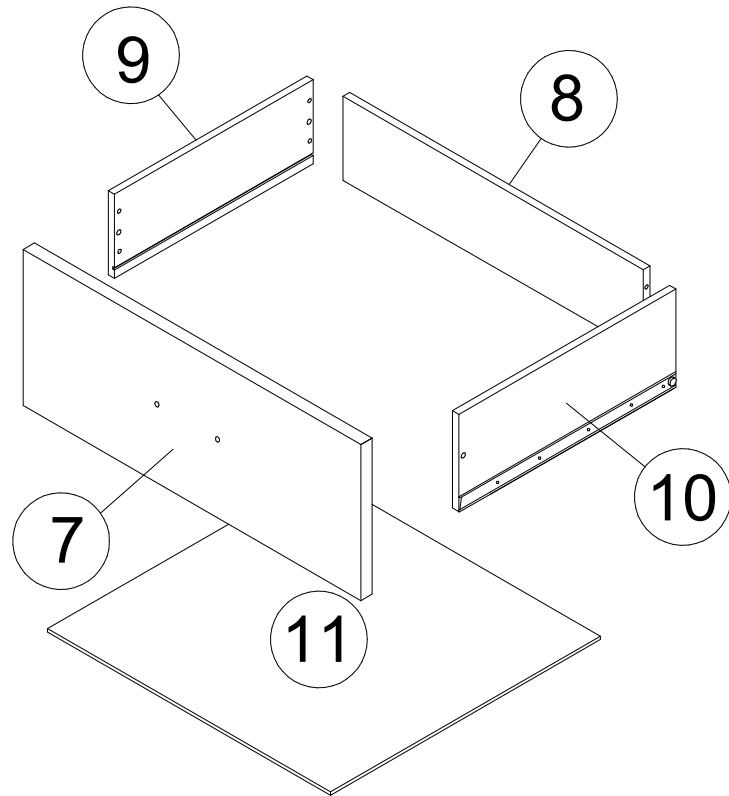

ASSEMBLY INSTRUCTION


NIGHT STAND

STEP 1.

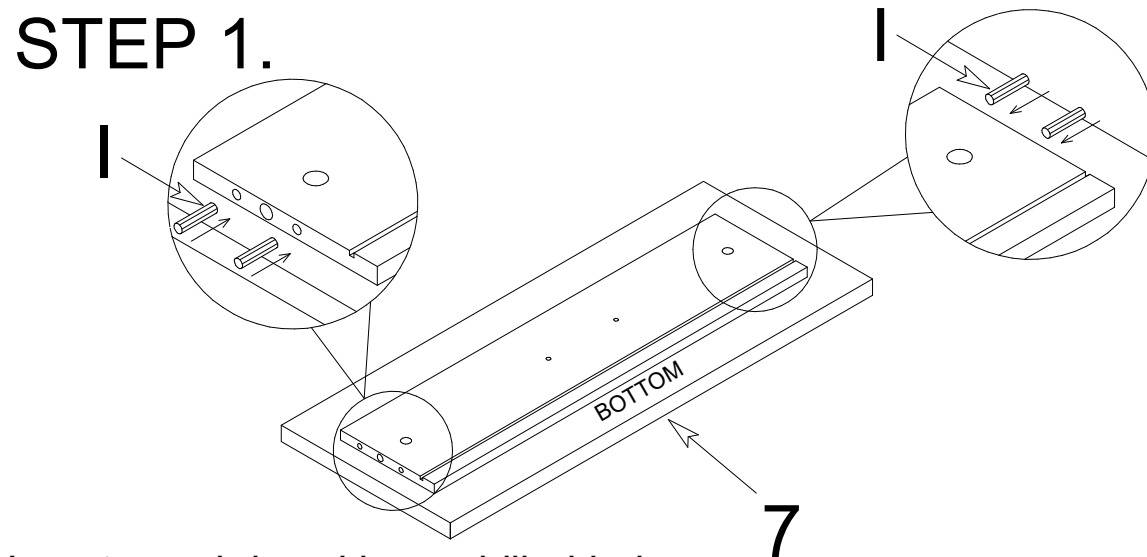


Insert wood dowel in predrilled hole.

STEP 2.

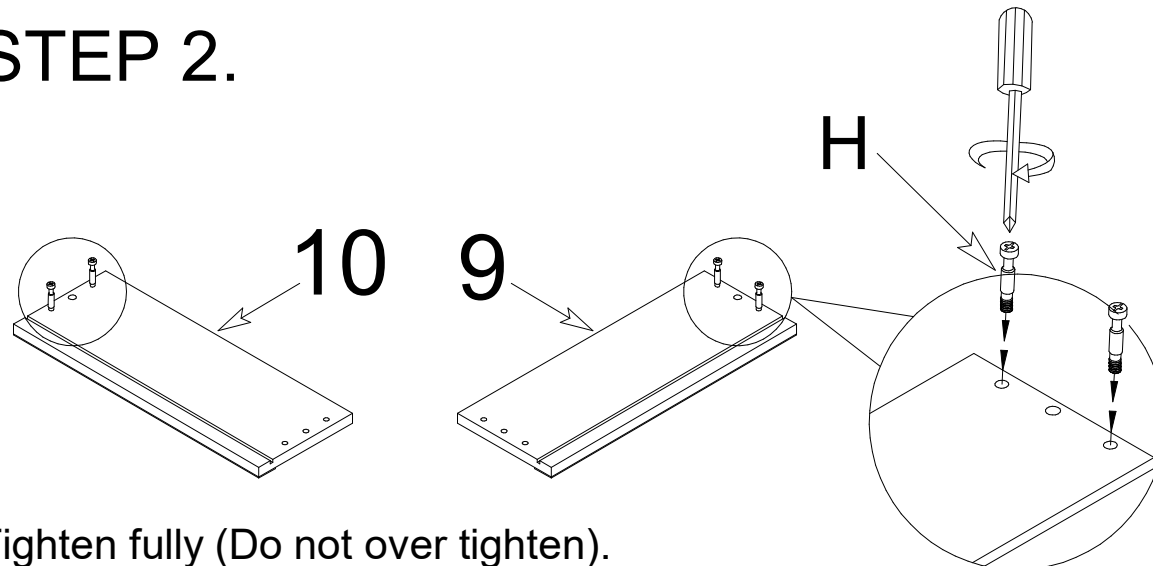

Tighten fully (Do not over tighten).


STEP 3.

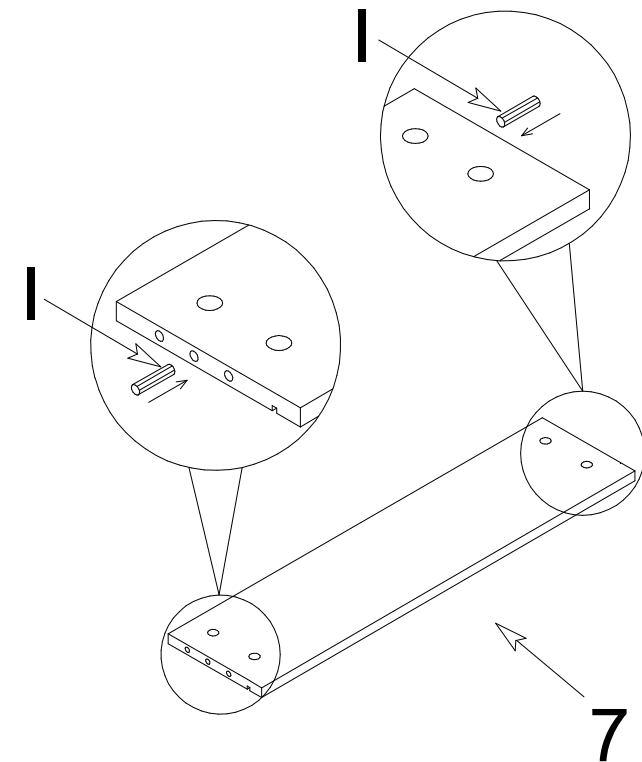


Insert wood dowel in predrilled hole.

ASSEMBLY INSTRUCTION NIGHT STAND


STEP 4.

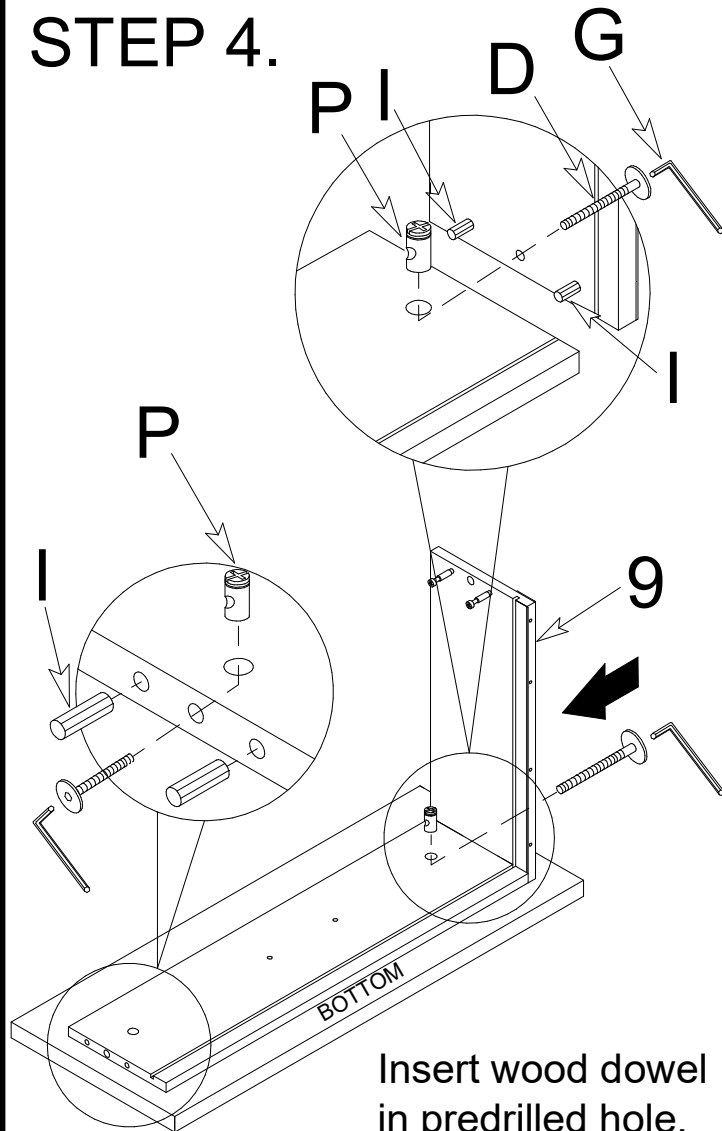

STEP 5.

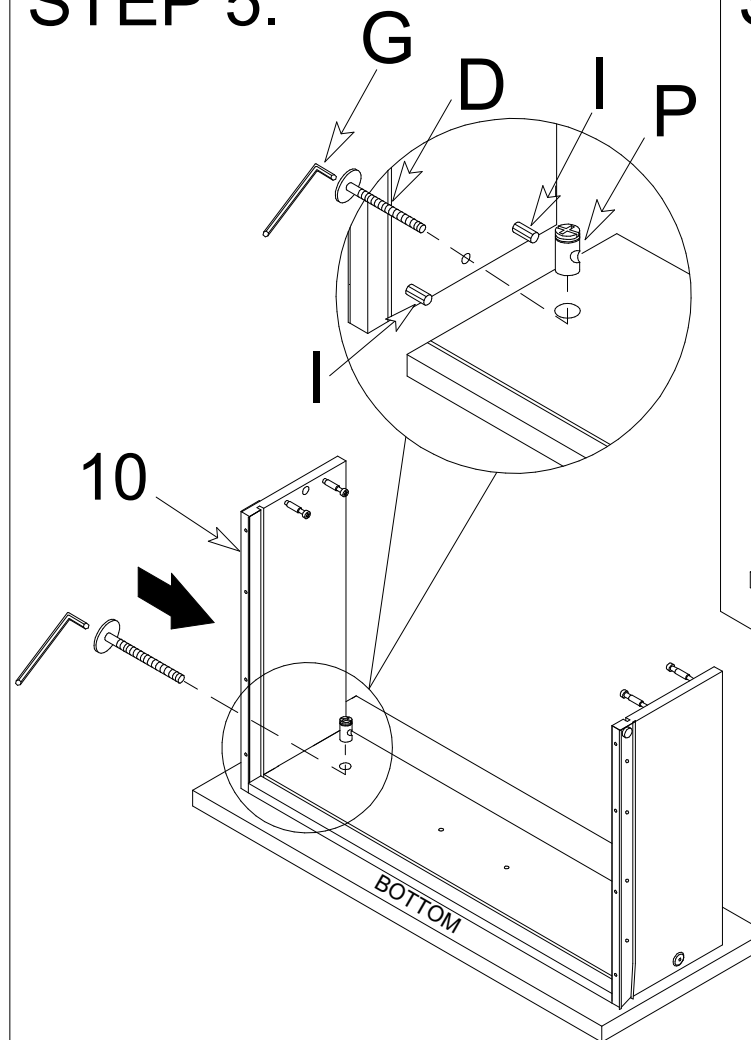


STEP 6.

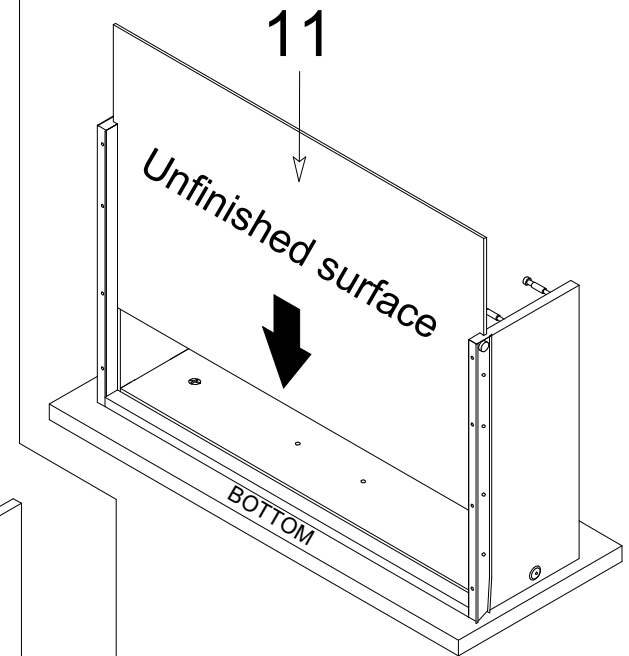

ASSEMBLY INSTRUCTION


NIGHT STAND

STEP 7.

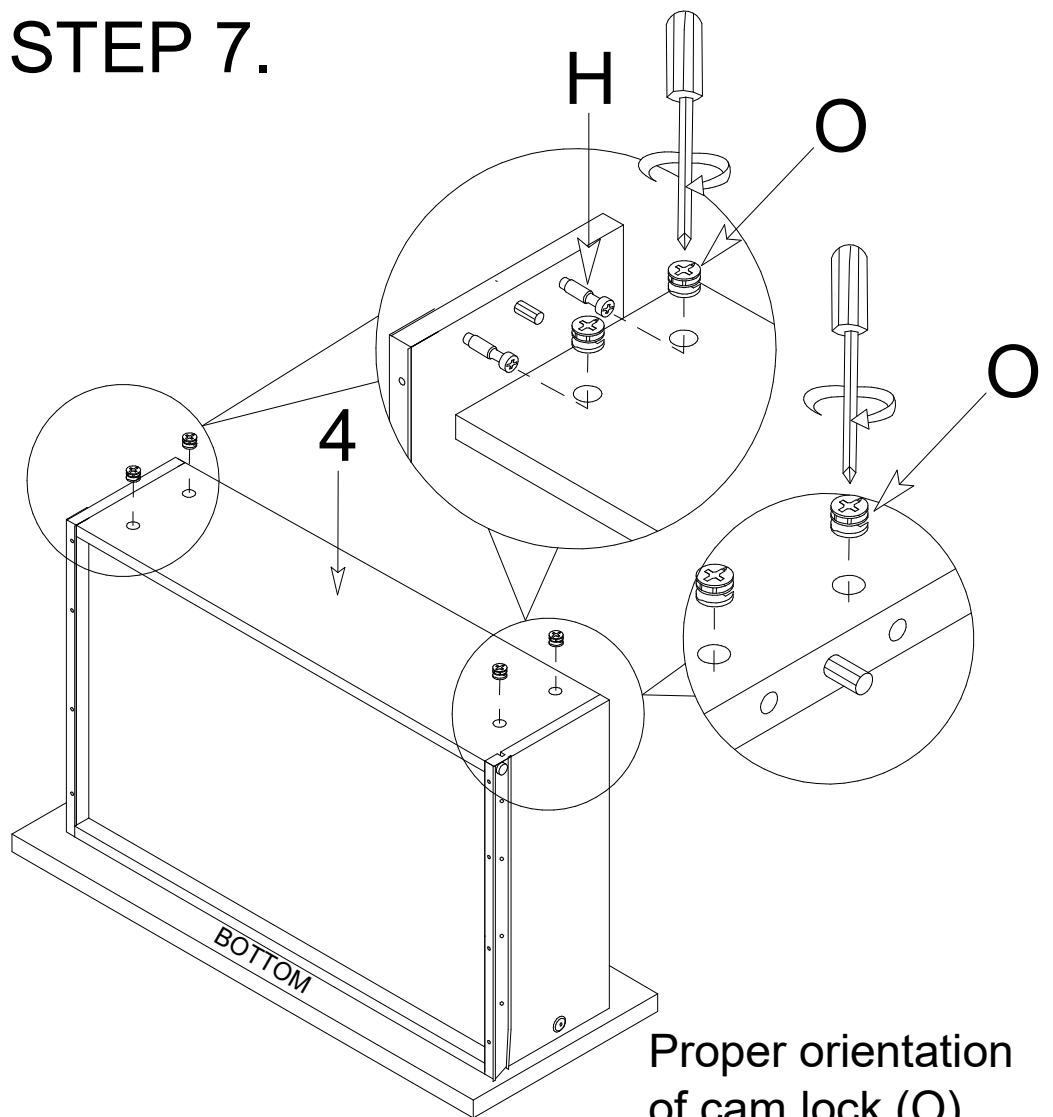

Proper orientation
of cam lock (O).
1/2 turn to fully lock.


STEP 8.

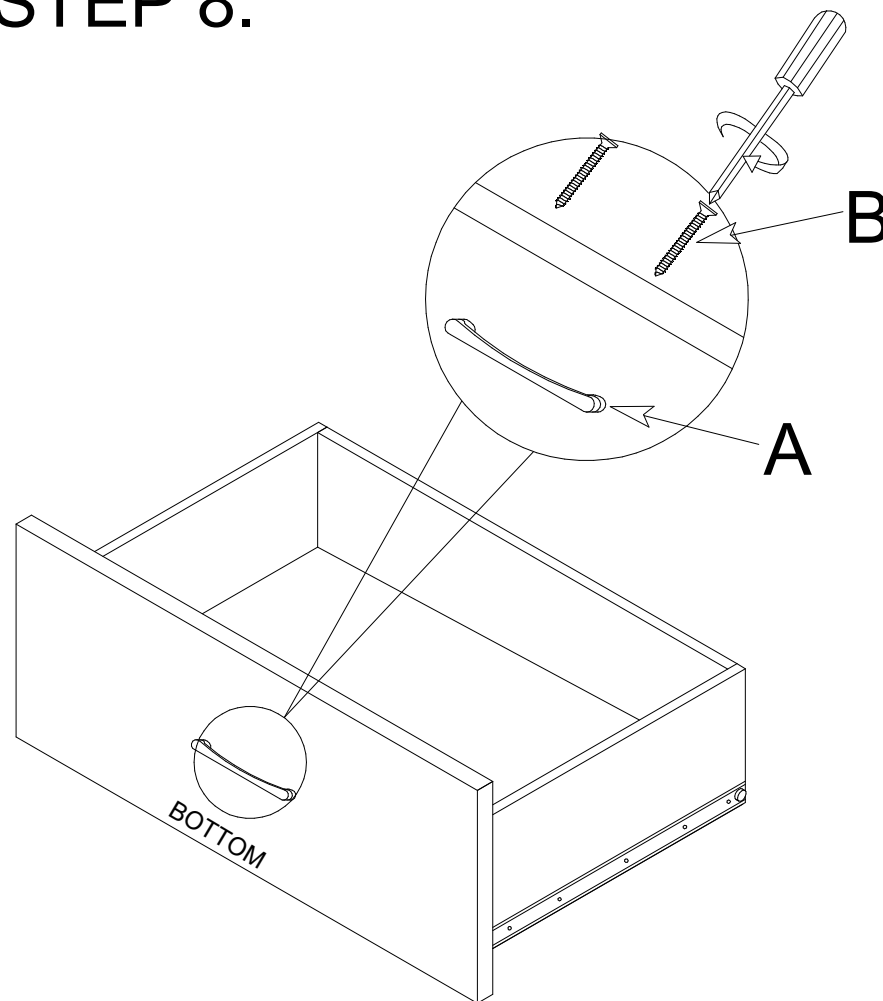

Attach handle using handle screw (B).

ASSEMBLY INSTRUCTION NIGHT STAND


STEP 9.

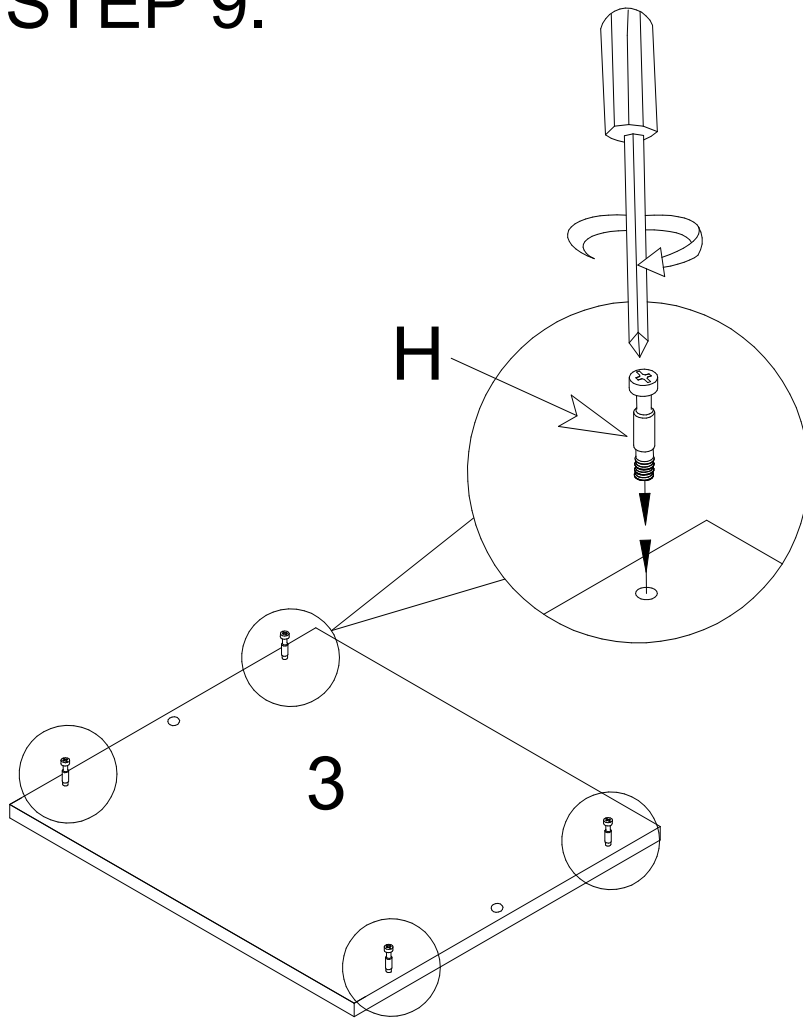

Tighten fully. (Do not over tighten).

STEP 10.

Tighten fully.
(Do not over tighten).

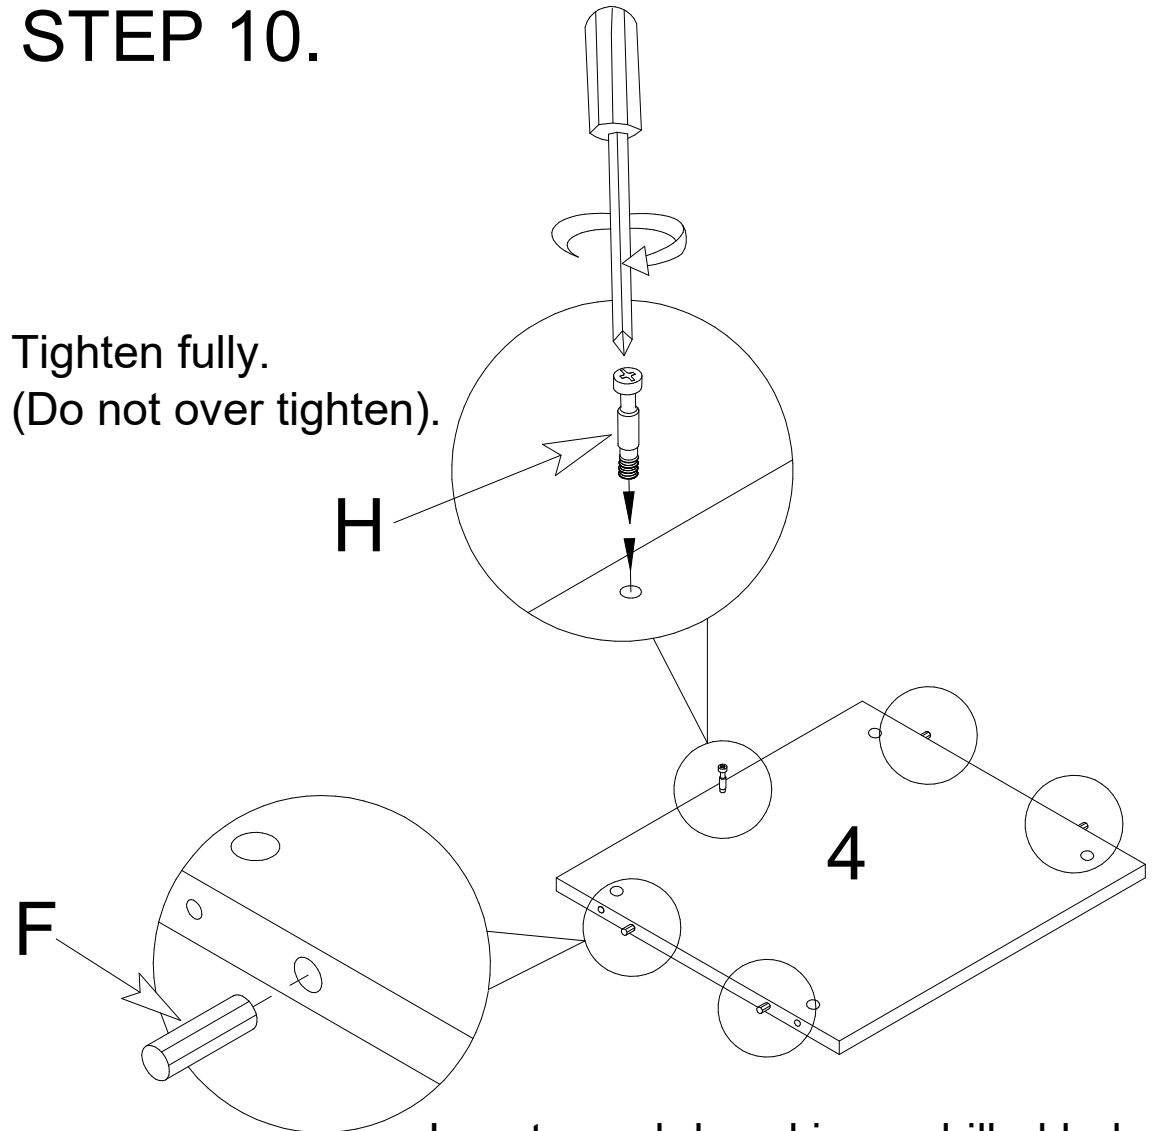


Insert wood dowel in predrilled hole.

ASSEMBLY INSTRUCTION

NIGHT STAND

STEP 11. Tighten fully.
(Do not over tighten).


Insert wood dowel
in predrilled hole.

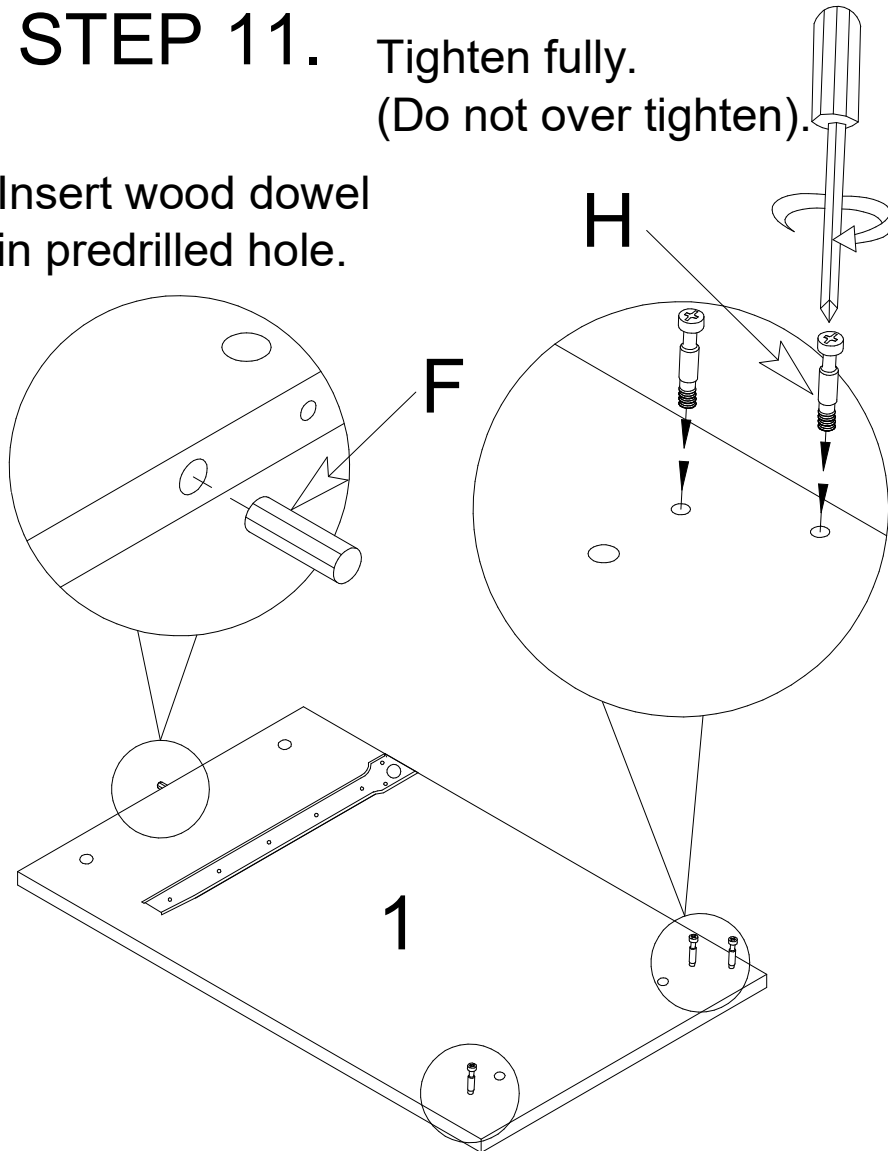

STEP 12.


Tighten fully. (Do not over tighten).

Insert wood dowel
in predrilled hole.

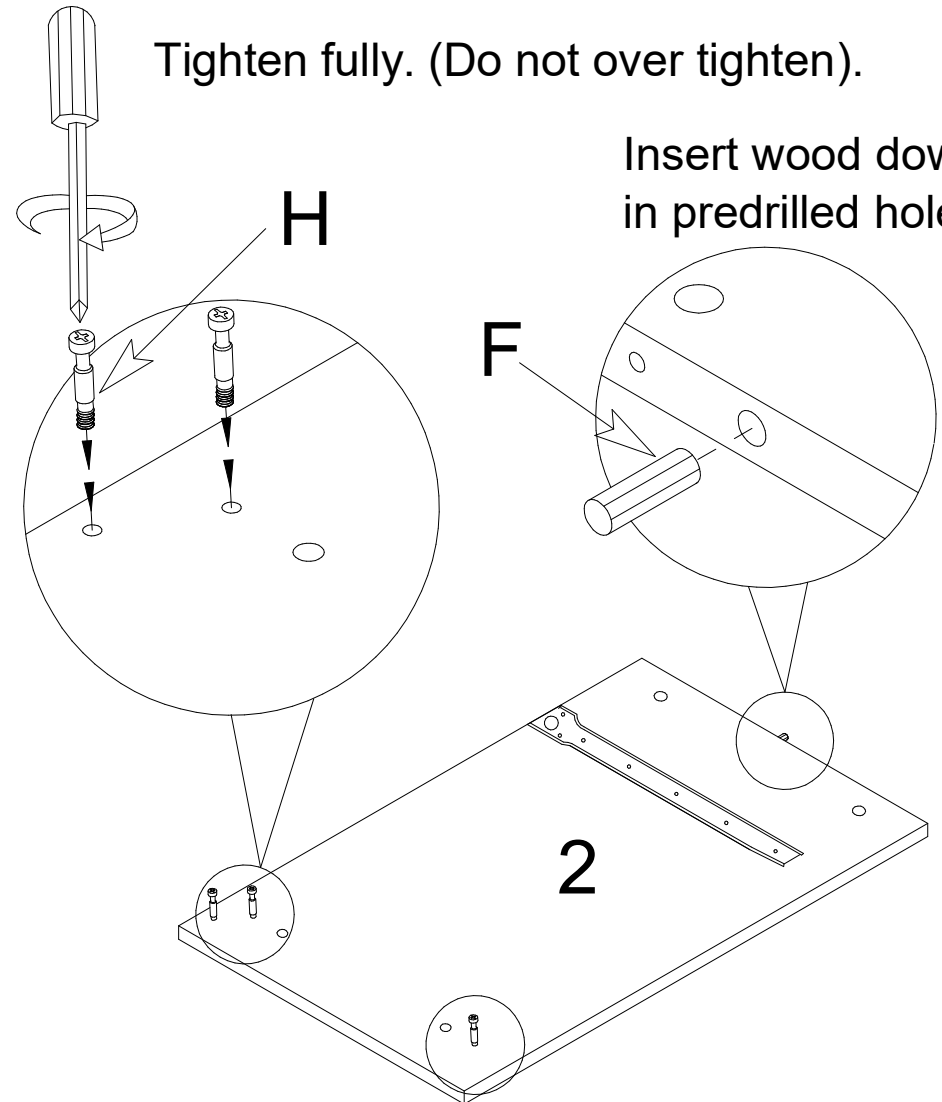


ASSEMBLY INSTRUCTION NIGHT STAND

STEP 13.

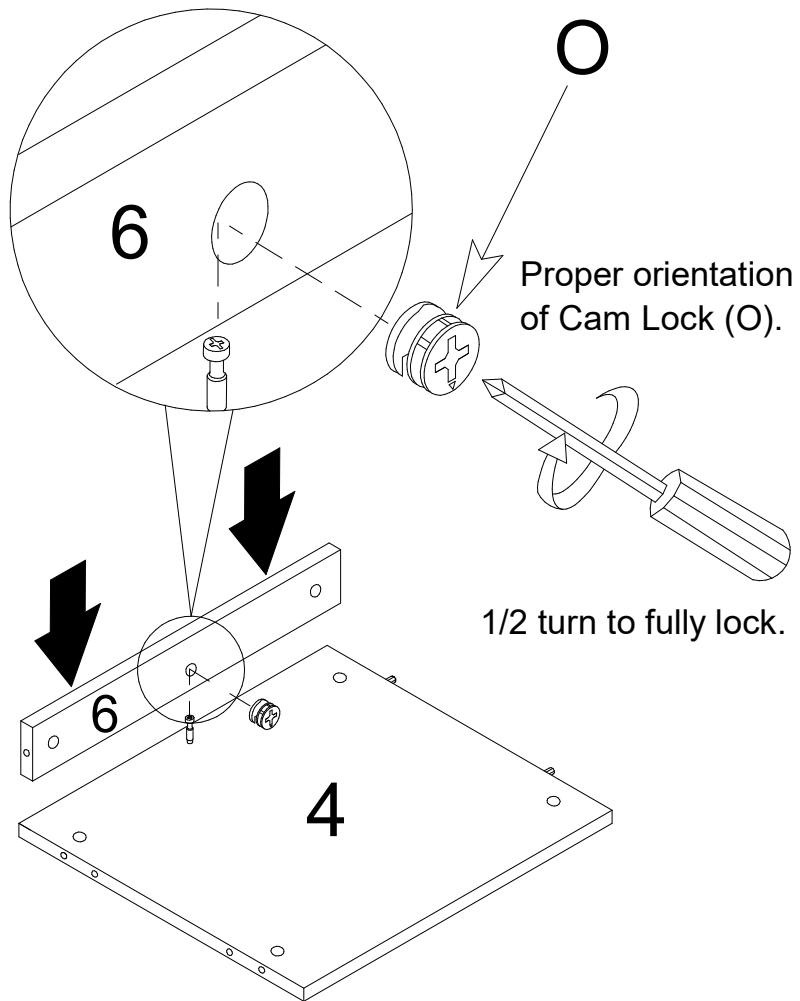


STEP 14.

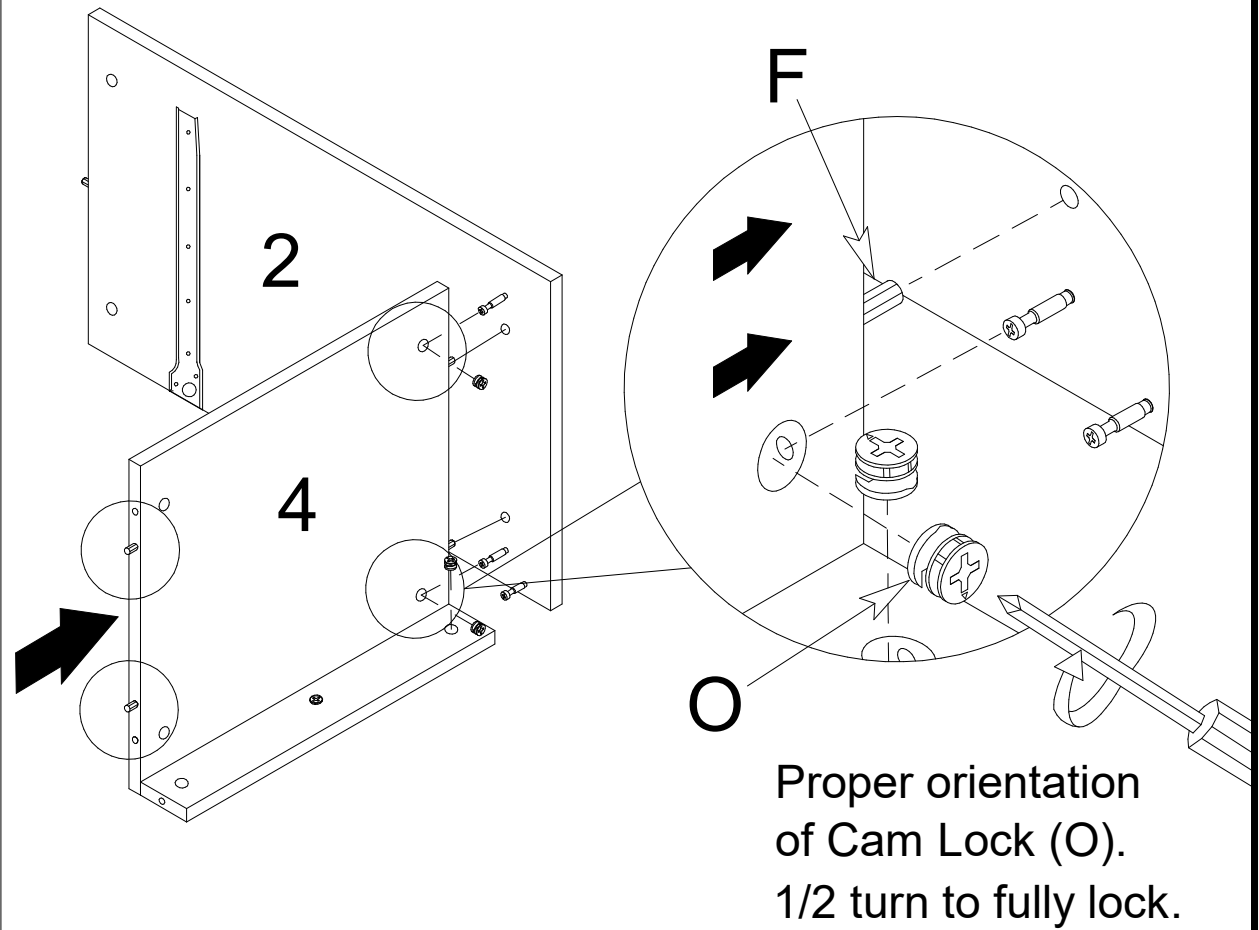


ASSEMBLY INSTRUCTION

NIGHT STAND

STEP 15.

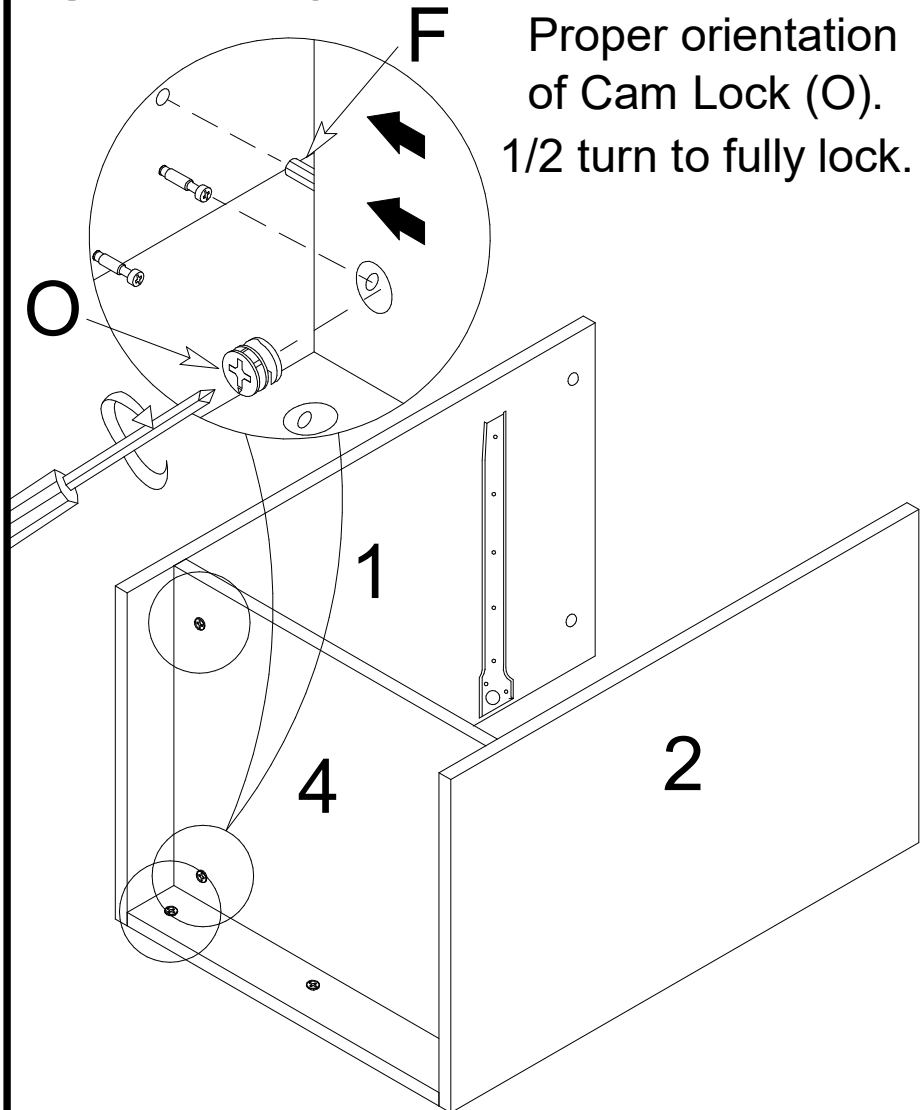


STEP 16.

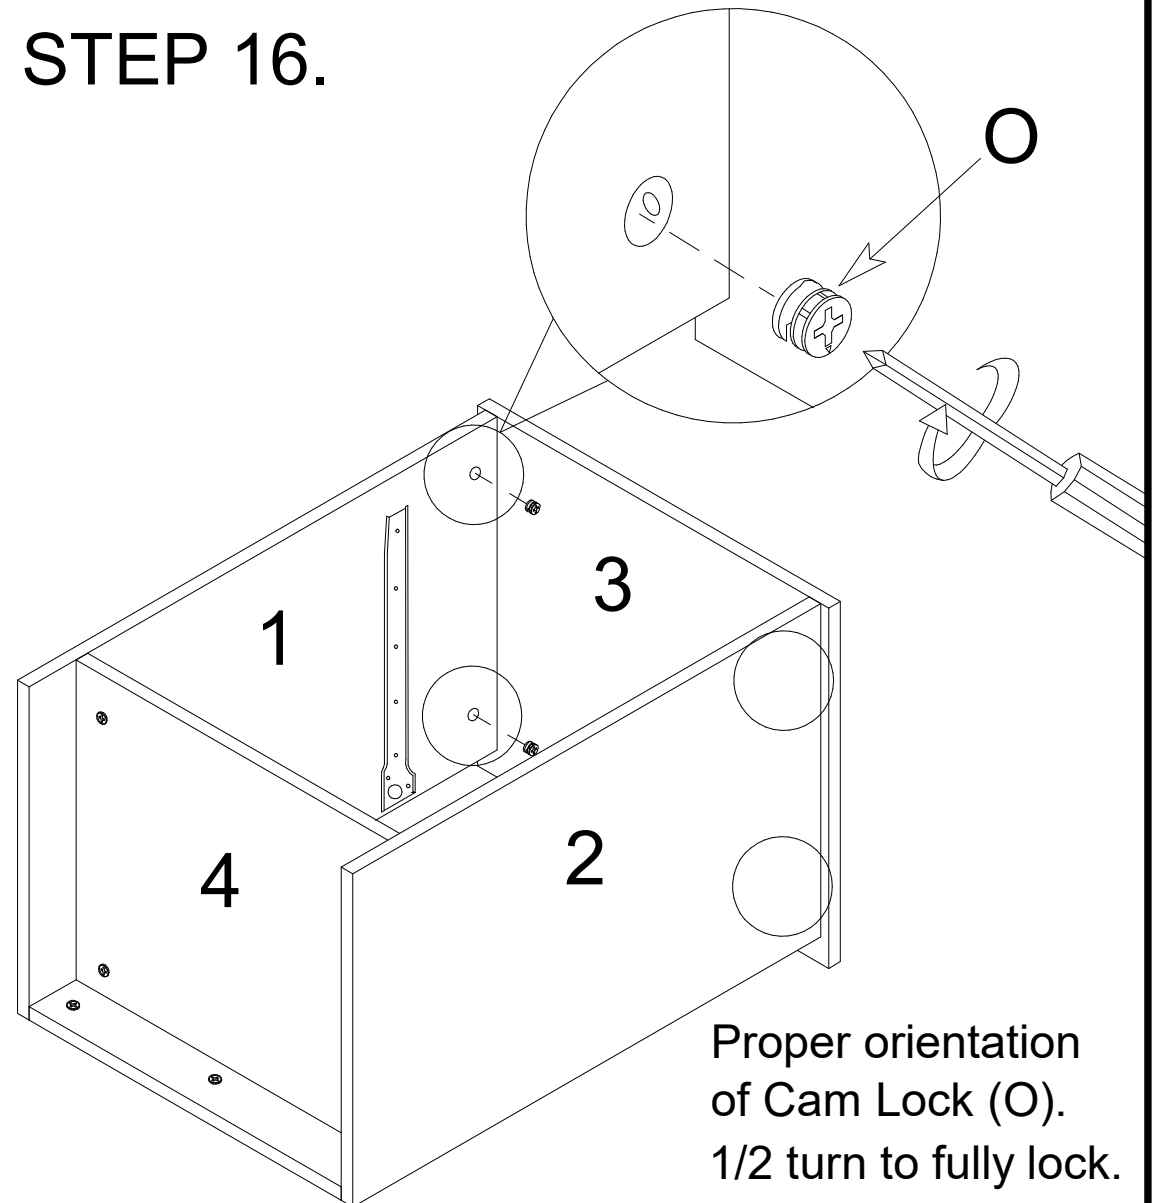

ASSEMBLY INSTRUCTION


NIGHT STAND

STEP 17.

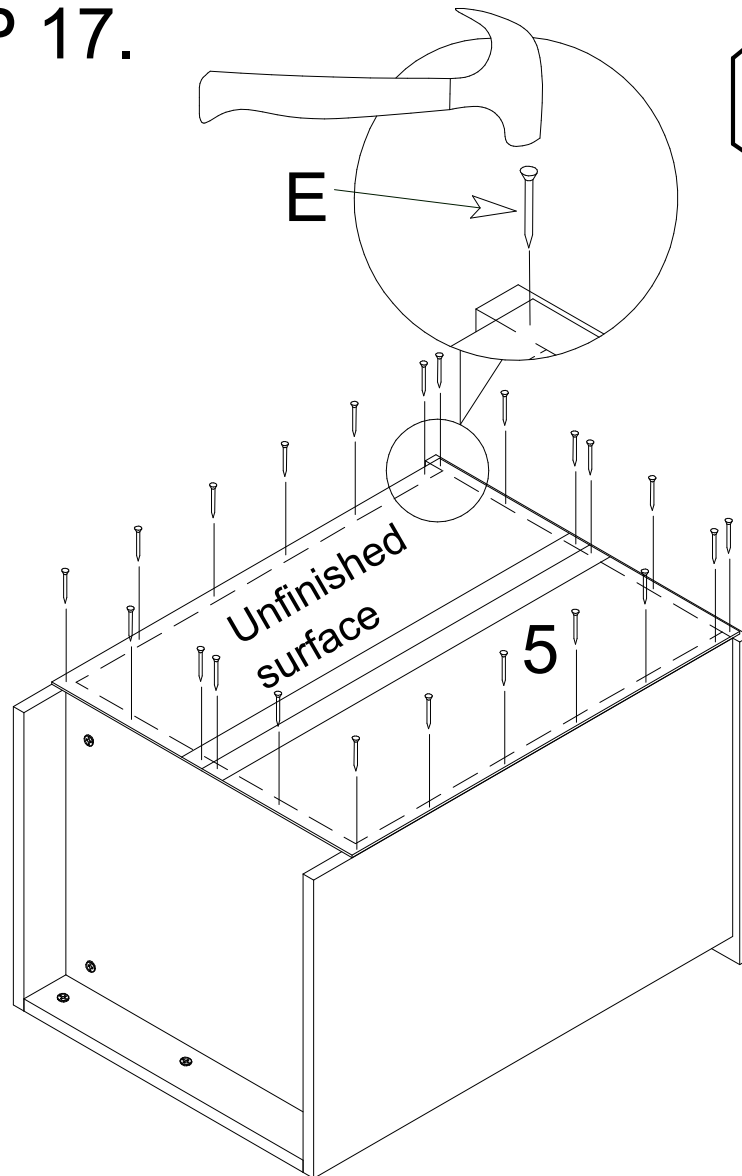

Please make sure unfinished surface facing upwards before hammering the nails.

STEP 18.

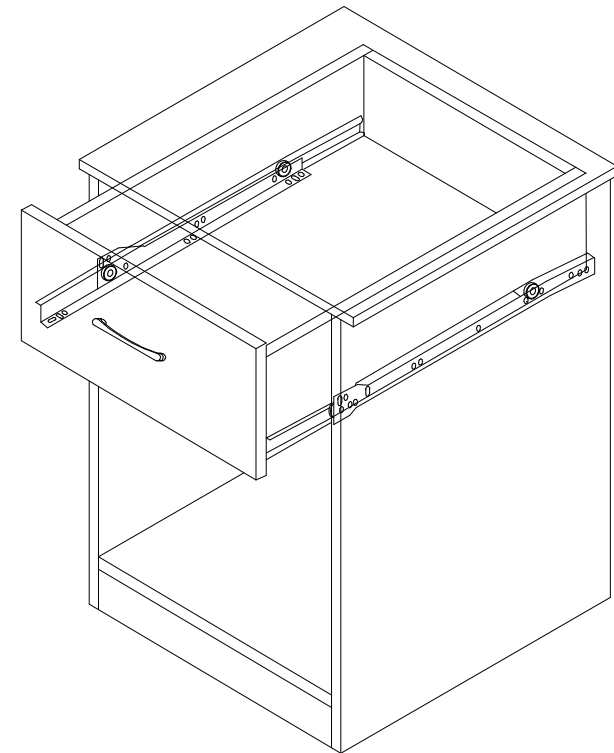


Put in drawer on the track.

ASSEMBLY INSTRUCTION

NIGHT STAND


STEP 19.

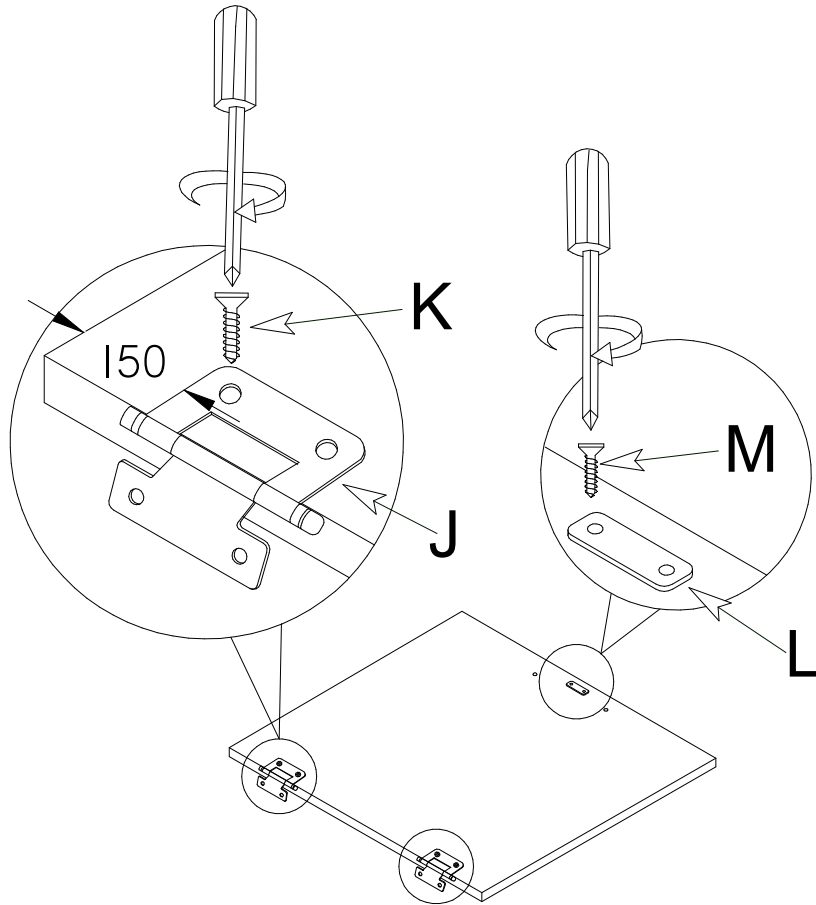

Attach Hinges on pre-hole using Screw K and Magnet Plate on pre-hole using Screw M.

STEP 20.

Attach handle using handle screw (C).

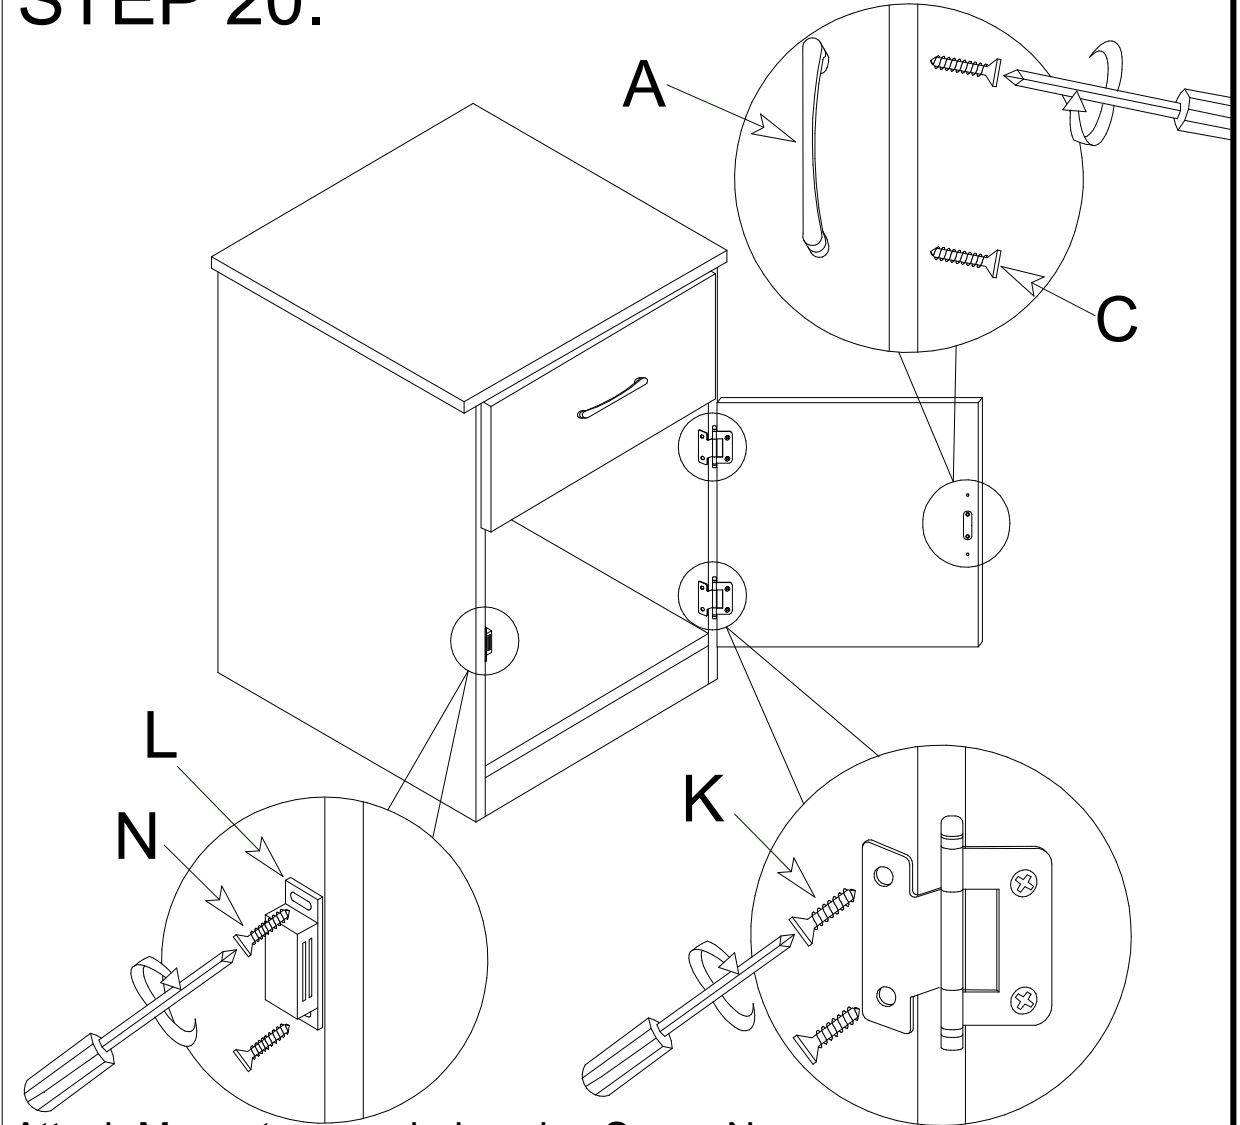

Attach Magnet on pre-hole using Screw N.