



ASSEMBLY INSTRUCTION

(BOX 1) #5324OT/GD/GR/LG/MV-ARM BOX OF ARM & SLAT			
B	 B1 Arm B2	2 pcs	
E	 997mm Upper Slat Roll	1 pc	
F	 997mm Bottom Slat Roll	1 pc	
H	 Trundle Side Panel	2 pcs	
(BOX 2) #5324OT/GD/GR/LG/MV-BACK BOX OF BACK REST & SR			
A	 Back Panel	1 pc	
C	 Side Rail Back Panel	1 pc	
D	 Side Rail Front Panel	1 pc	
G	 Trundle Front Panel	1 pc	
I	 Trundle Back Panel	1 pc	
J	 Center Rail 1950mm	1 pc	
K	 Center Rail 1900mm	1 pc	
L	 Wooden Block	4 pcs	
(BOX 1) #5324OT/GD/GR/LG/MV-ARM HARDWARE LIST			
1	 M3 x 70mm	1 pc	
2	 M4 x 65mm	1 pc	
3	 JCBB M8 X 20	16 pcs	
4	 JCBC M6 X 60 with Spring Washer, Flat Washers	4 pcs	
5	 Roller	6 pcs	
6	 CSK M3.5 x 16mm	26 pcs	
7	 CSK M4 x 25mm	2 pcs	
8	 CSK M4 x 32mm	32 pcs	


Step 1 : Attach Side Rails (C & D) to Arms (B1 and B2) by pushing the bracket down to fit. Secure with #3 Bolts using #1 Allen Key.

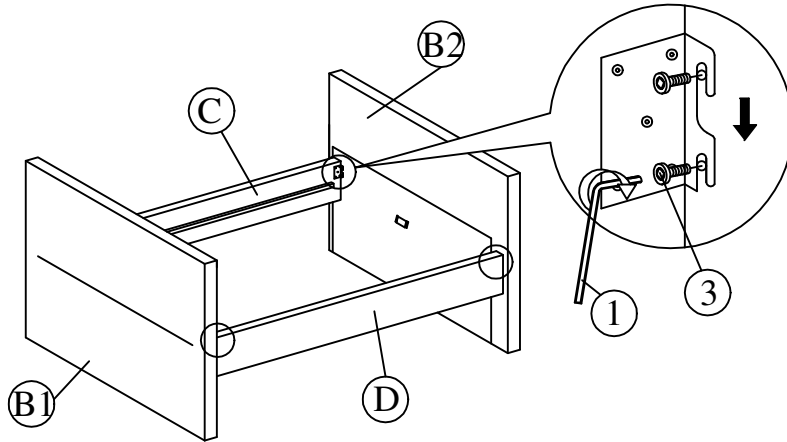

Step 3 : Slide the Center Rail (J) into Arms (B1 and B2) and secure it with #7 CSK screws using a screw driver (not included).

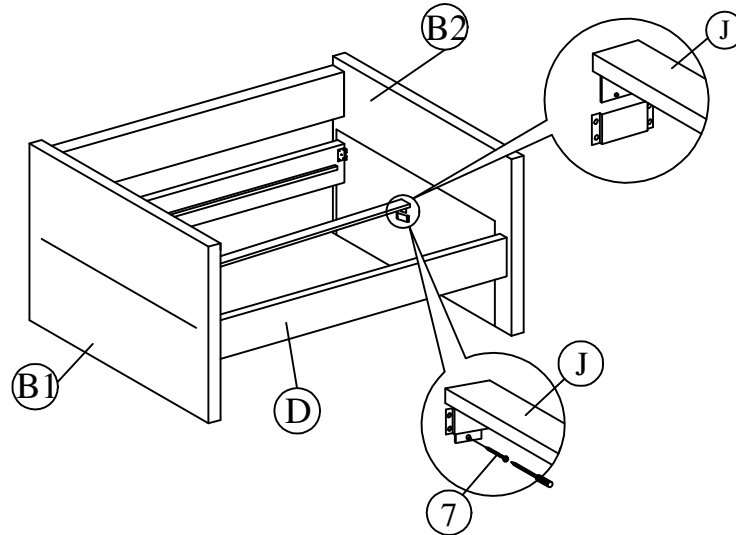


Step 2 : Open the zippers on the back of Back Panel (A) to expose the pre-drilled holes. Attach the Back Panel (A) to Arms (B1 and B2) and tighten using #4 Bolts and the #2 Allen Key.

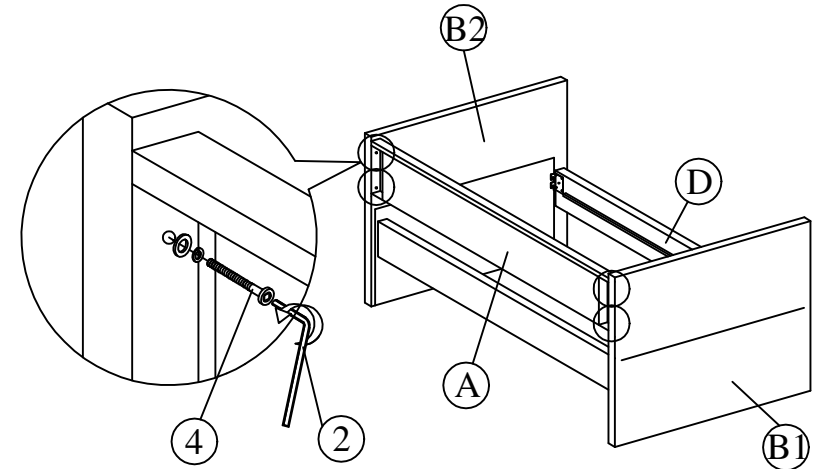


BACK VIEW

Step 4 : Tighten all 4 corners using #1 Allen Key. Install the Upper Slat Roll (E) onto the Side Rails. Secure the Upper Slat Roll (E) and Center Rail (J) with #8 CSK screws. The spacing of the slats should provide the desired bed stability.

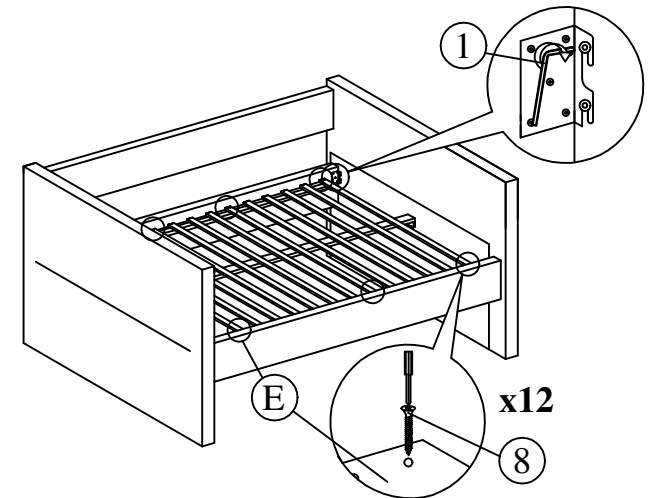


THE HARDWARE IS LOCATED IN THE BOX OF ARMS


Step 5 : Attach the two Trundle Sides (H) to Trundle Front Panel (G) and then to Trundle Back Panel (I) by pushing the bracket down to fit. Secure with #3 Bolts using the #1 Allen Key.

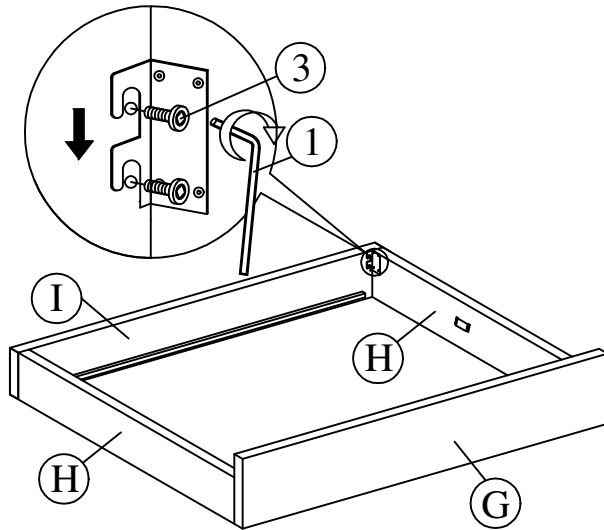


Step 6 : Slide the Center Rail (K) into Trundle Sides (H) and secure it using #6 CSK screws and a screwdriver.

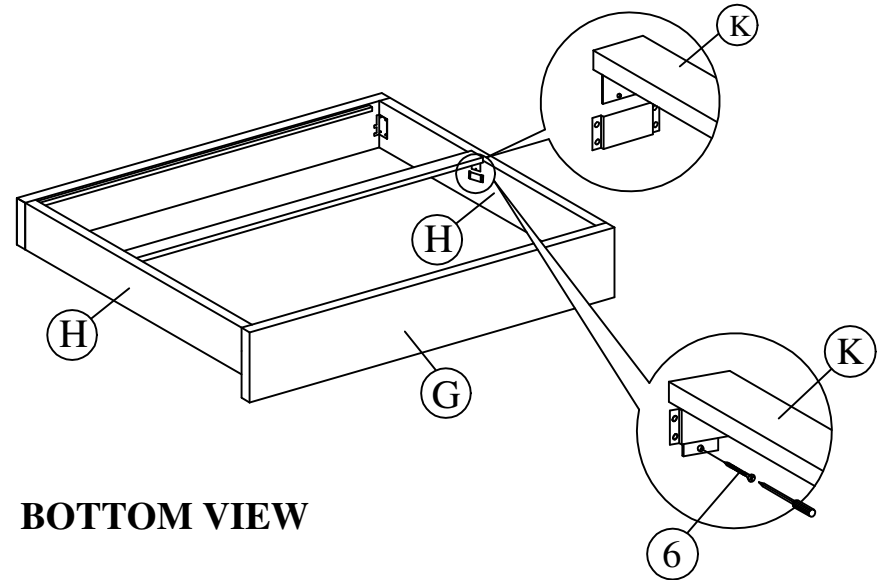


Step 7 : Attach 6 rollers (#5) to the Bottom Slat Roll (F), following the markings, and secure with #6 CSK screws.

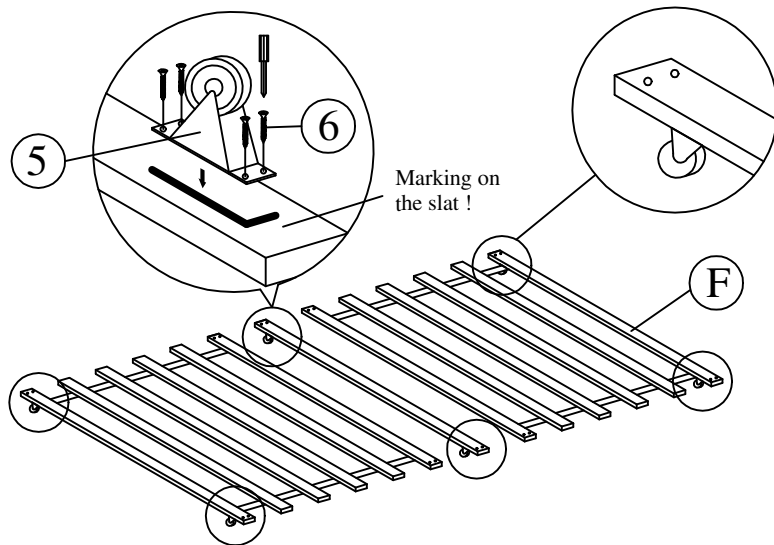

Step 8 : Tighten all 4 corners using #1 Allen Key. Secure the Bottom Slat Roll (F) and Trundle Front and Back Panels (G & I) using #8 CSK screws.

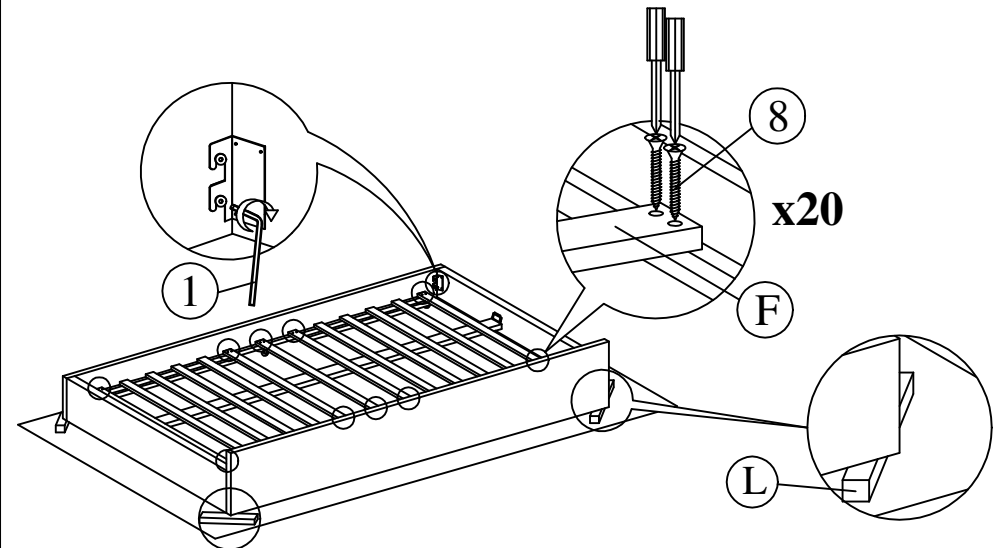

Assembly is complete.

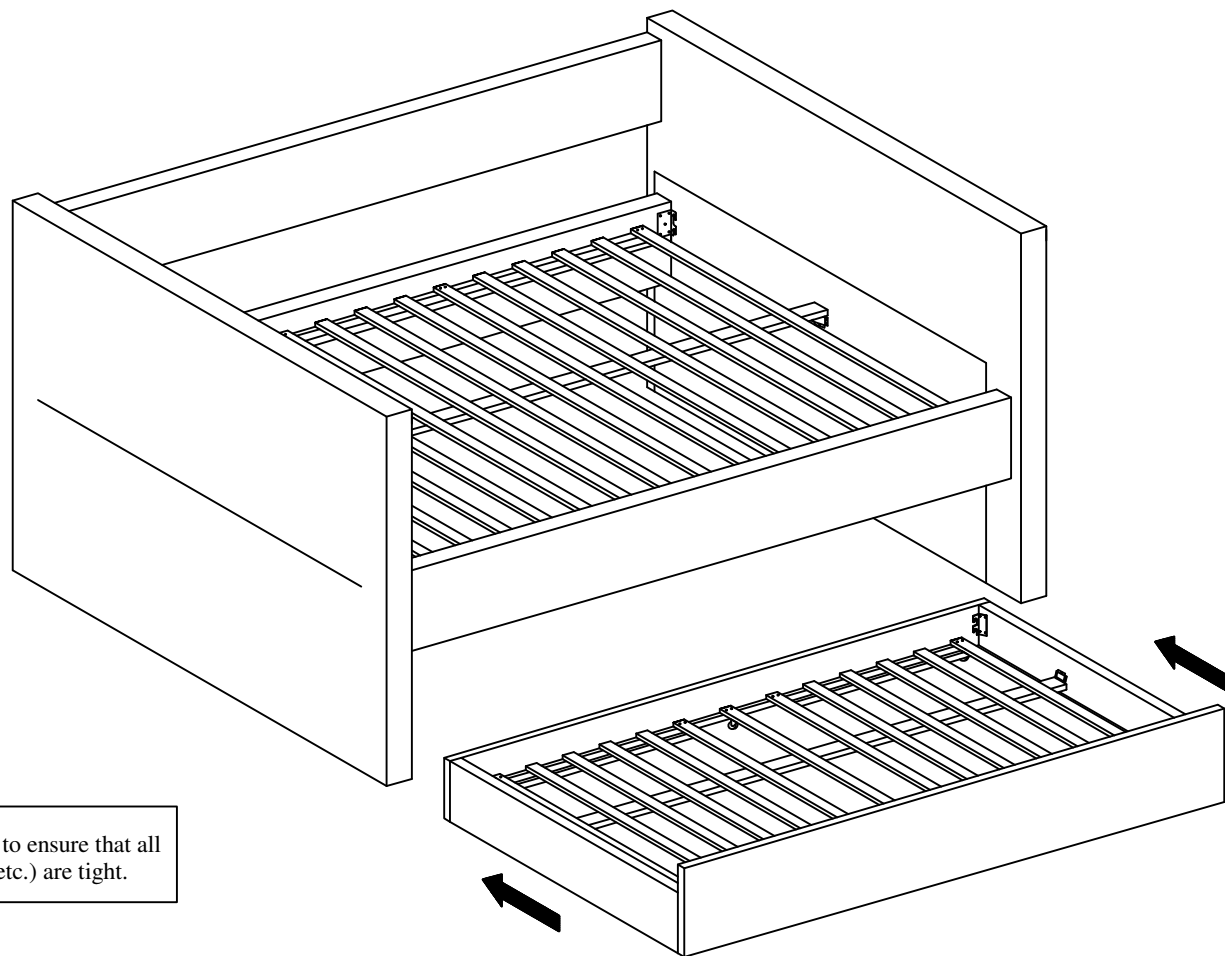

NOTE: Periodically check to ensure that all connectors (bolts, screws, etc.) are tight.

THE HARDWARE IS LOCATED IN THE BOX OF ARMS