


PARTY TENT

6X6 M  
20X20 FT

SKU:E-YHPT2366-G019-1  
E-YHPT2366-G019-2  
E-YHPT2366-G019-3

# ASSEMBLY INSTRUCTIONS

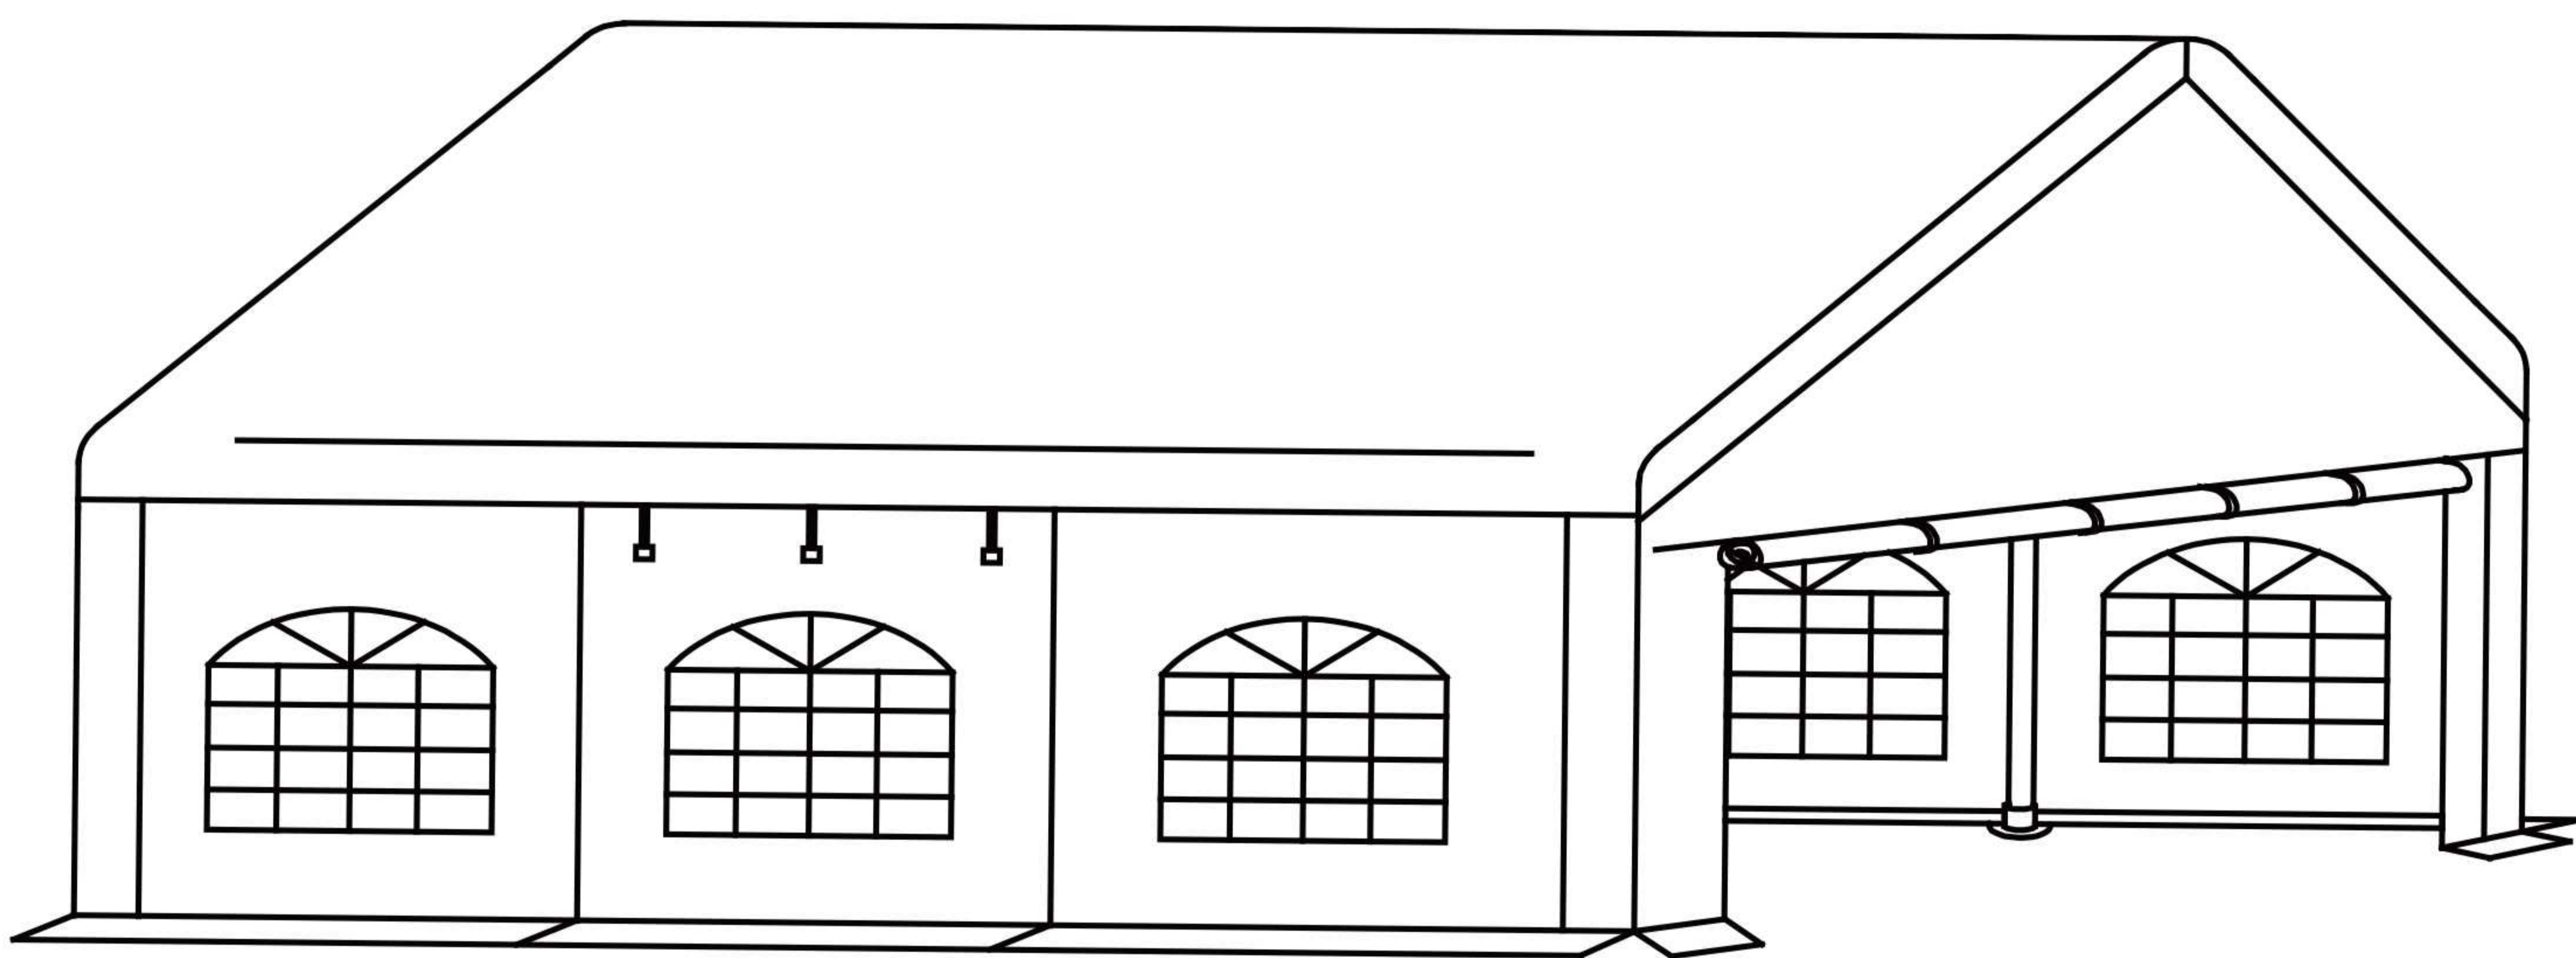

Please check the number of parts in the following accessory catalogue when unpacking. We have sent you more small parts for spare. If there is any missing or any questions about the installation. Please feel free to contact us. We will reply within 24 hours.



E-mail: [cs.helper01@gmail.com](mailto:cs.helper01@gmail.com)

## TOOLS RECOMMENDED

\*NOTE: The recommended tools are not included in boxes and need to be prepared by yourself.



DRILL



RUBBER Mallet




STEPLADDER  
(6.5Ft Or More)



SAFETY HAT




GLOVES

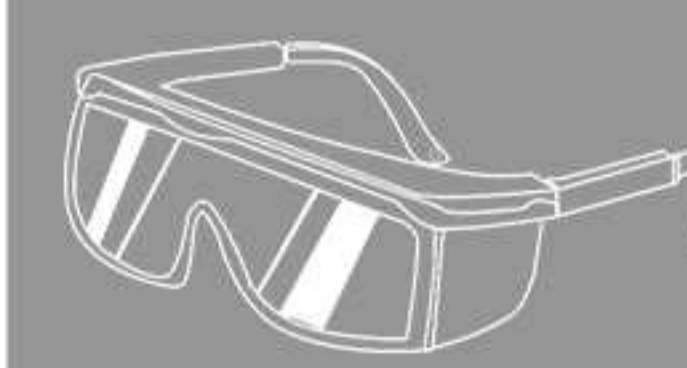

SAFETY GOGGLES



## ATTENTIONS

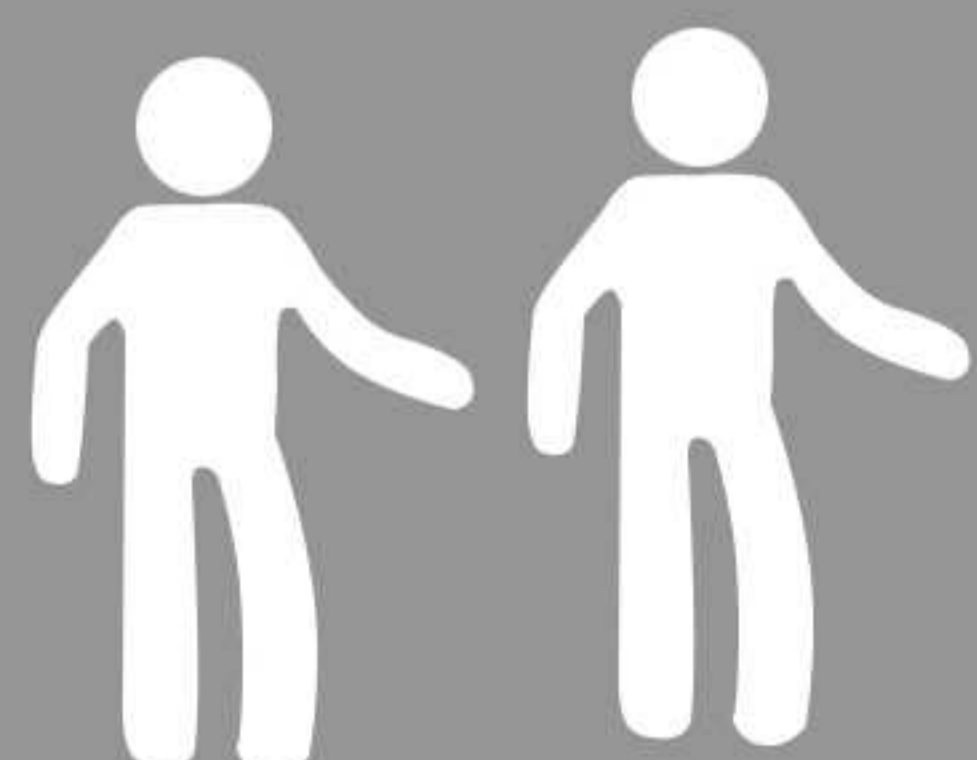

Two or more people are required for assembly



To better align the screws for practical situations, do not fully tighten screws initially



Please reinforced the Gazebo and do not use in heavy winds or inclement weather



Make sure all screws are tightened before use and check all screws, buckles and straps every 90 days



Since it is easy to lose many small accessories during the installation, please collect all the the screw accessories before the assembly is completed


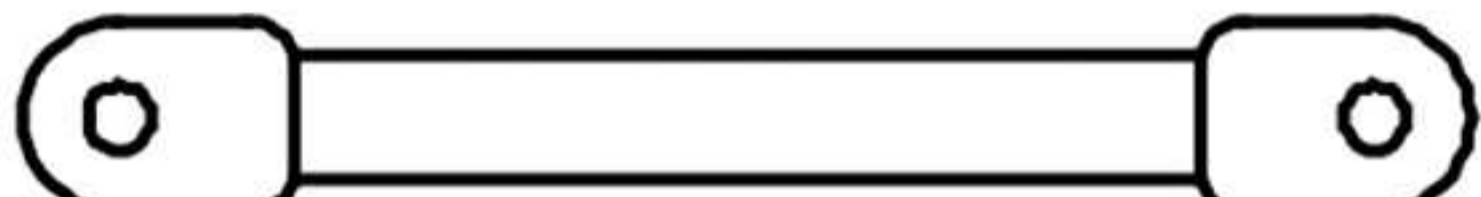

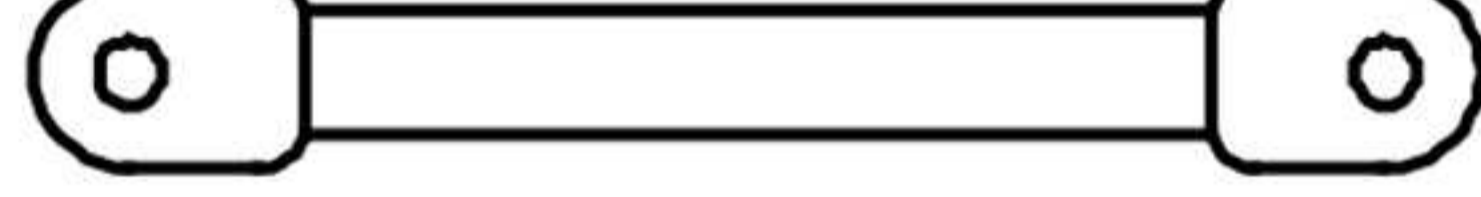


Please clear the snow off the roof in time for the heavy snowfall and do not use it

# ACCESSORY CATALOGUE


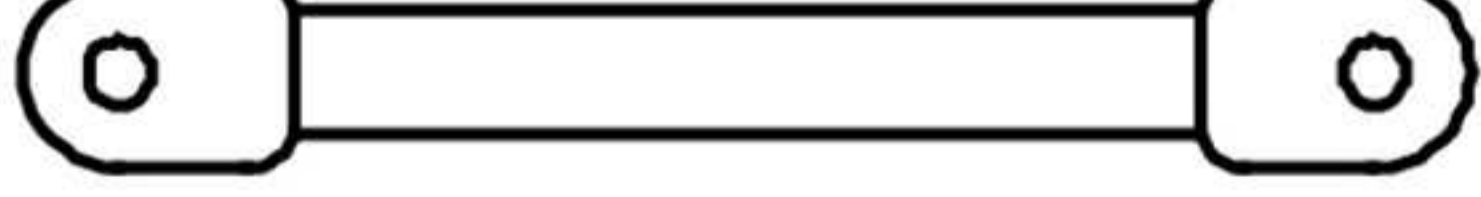
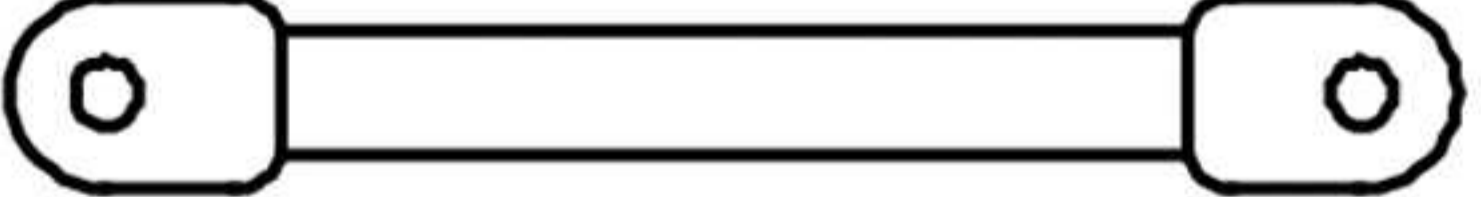
## BOX 1

SKU:E-YHPT2366-G019-1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
2		9	4		6
3		8	7		6





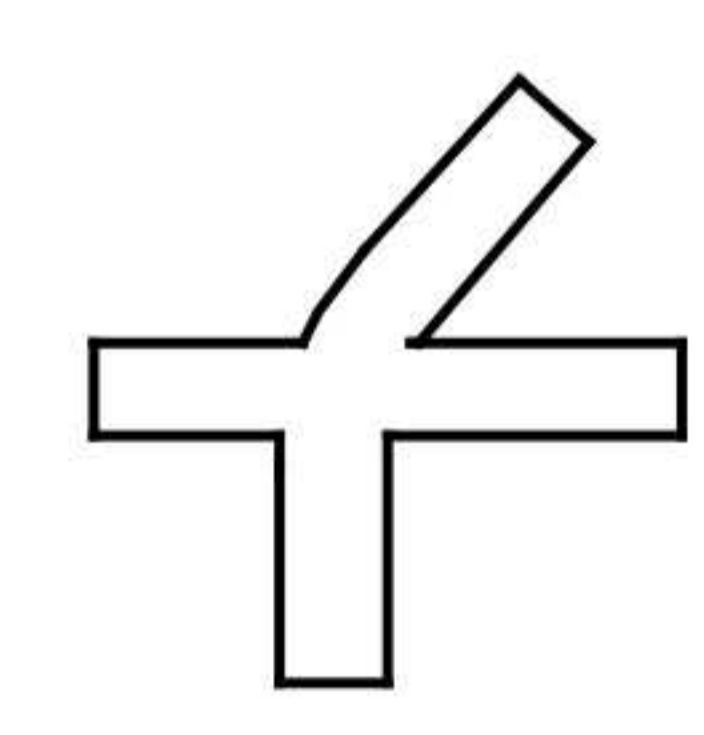
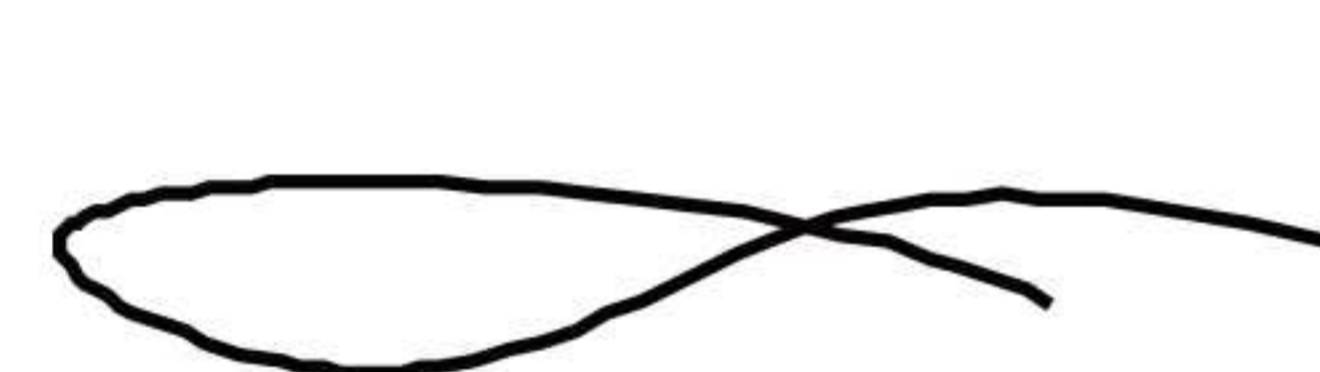
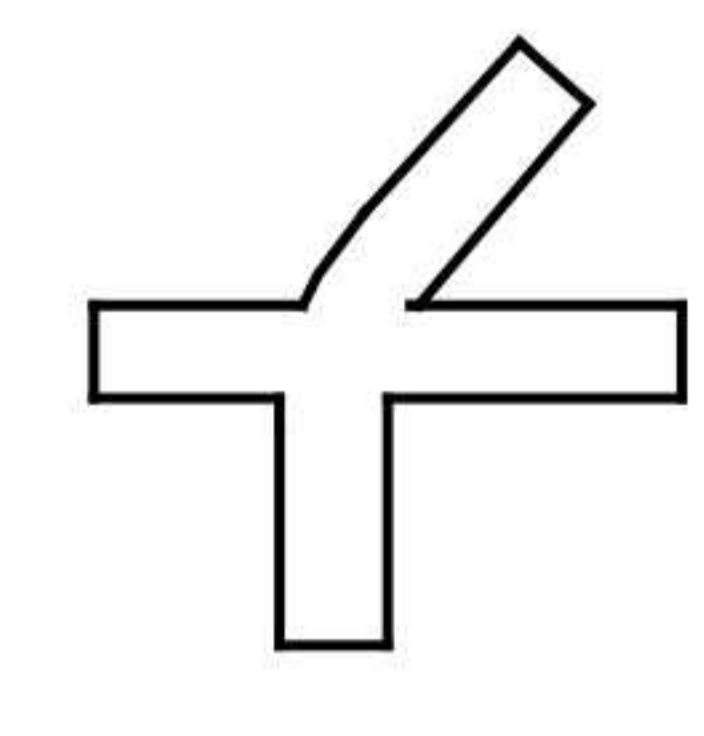

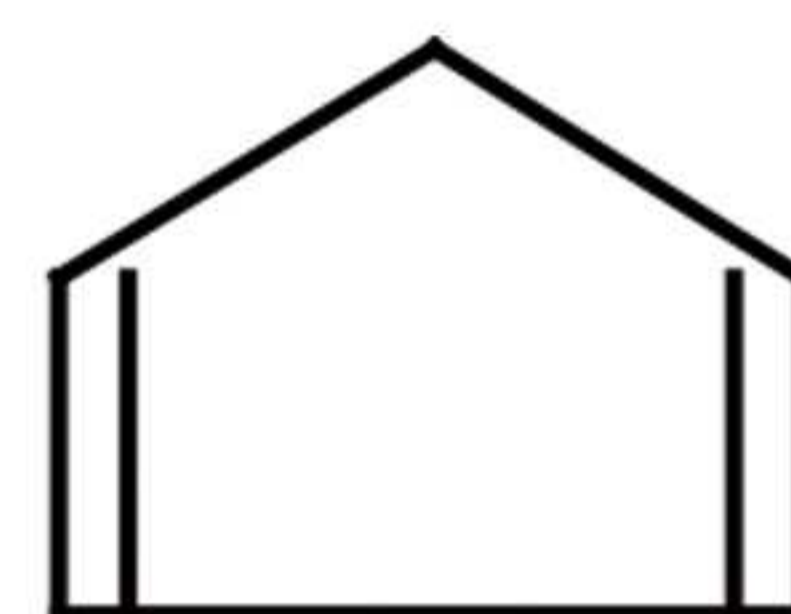

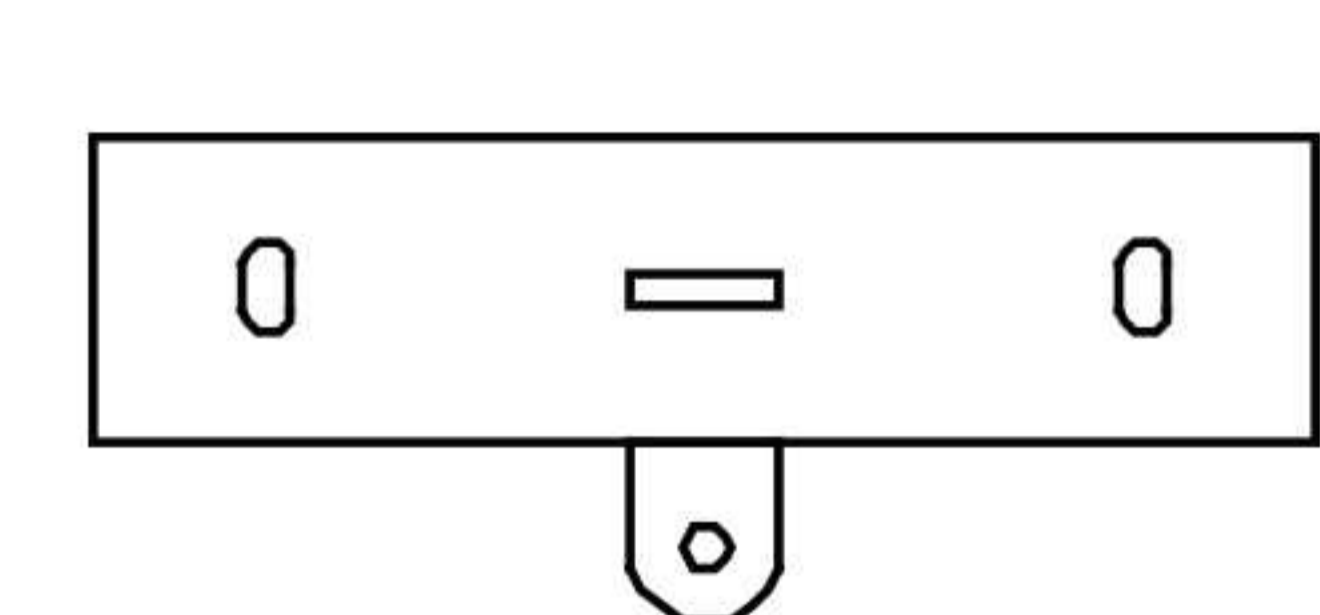
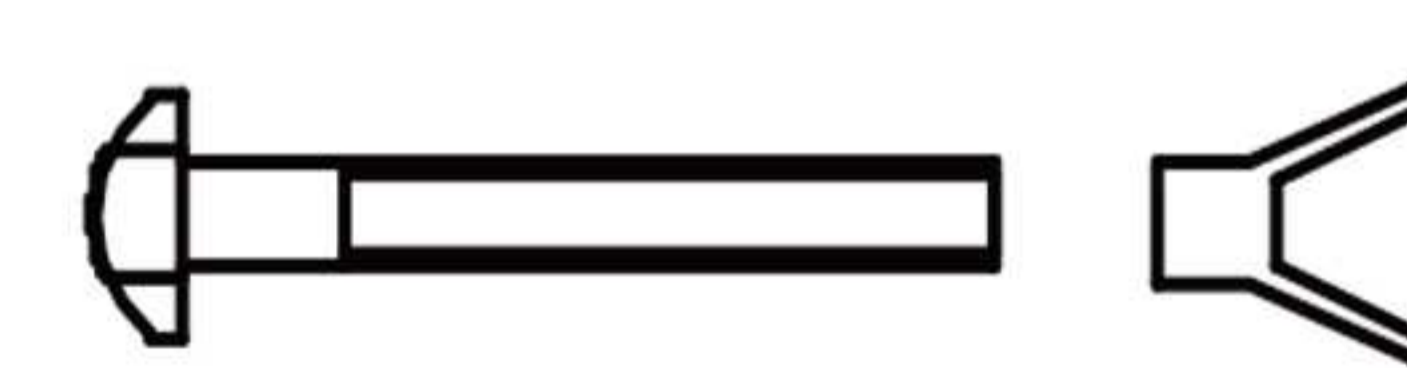
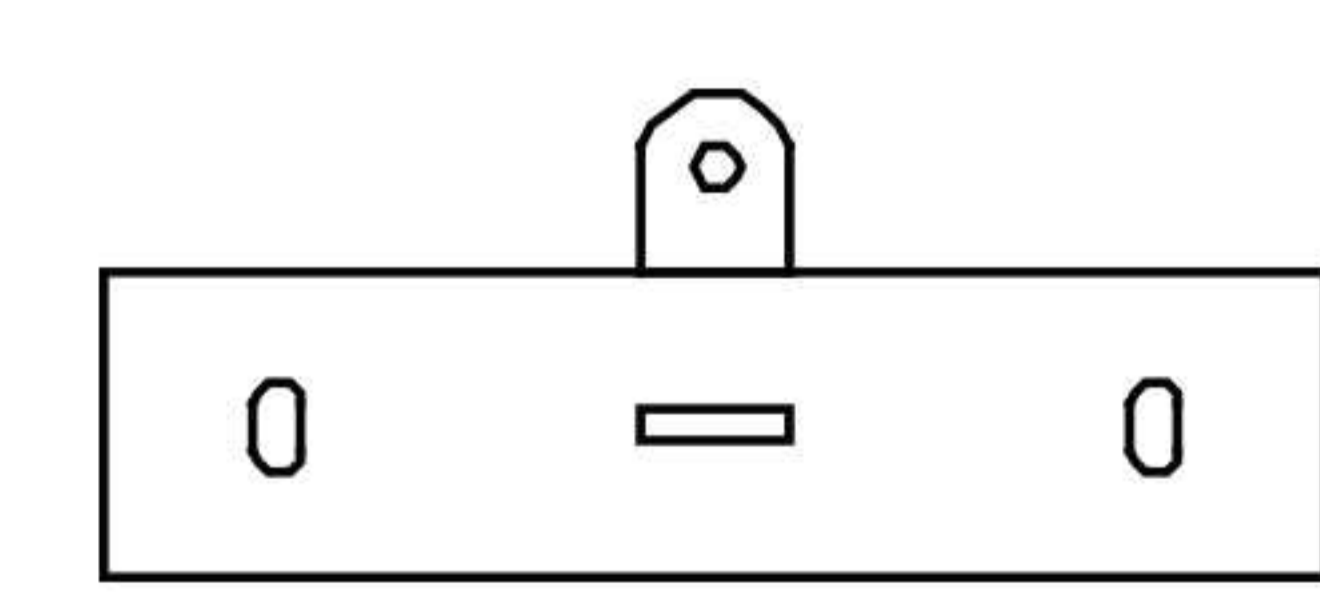
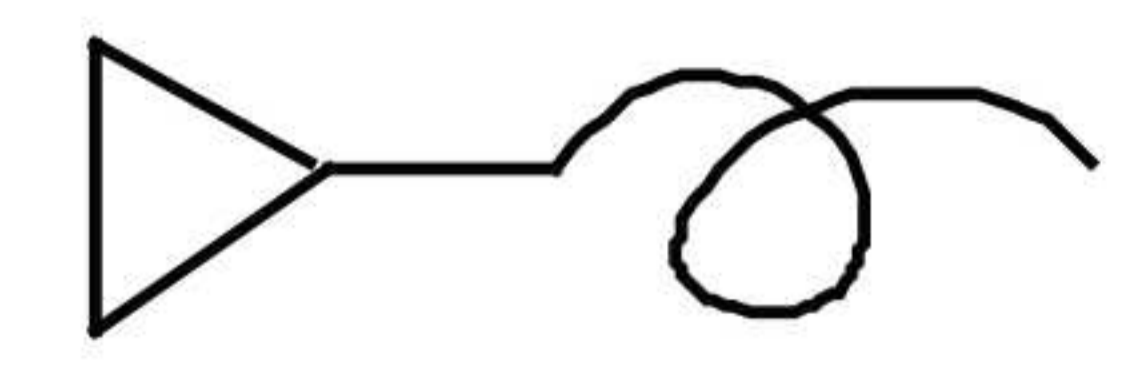
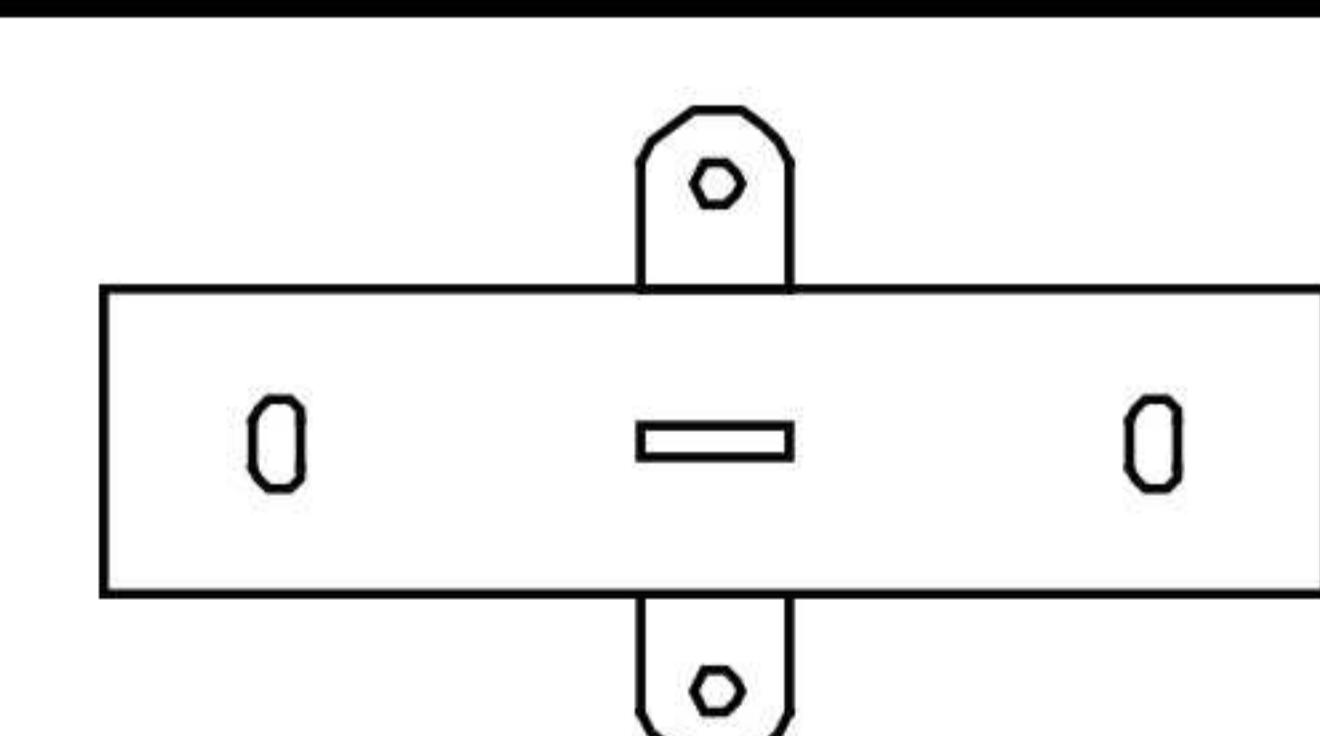

## BOX 2

SKU:E-YHPT2366-G019-2




Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		16	6		4
5		8			


# ACCESSORY CATALOGUE

## BOX 3 SKU:E-YHPT2366-G019-3

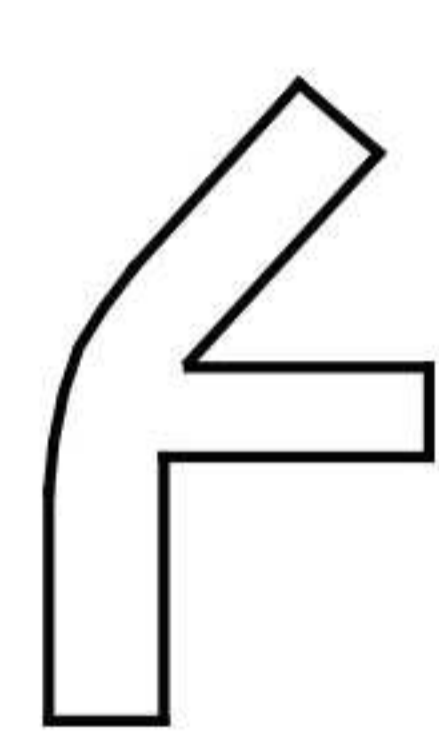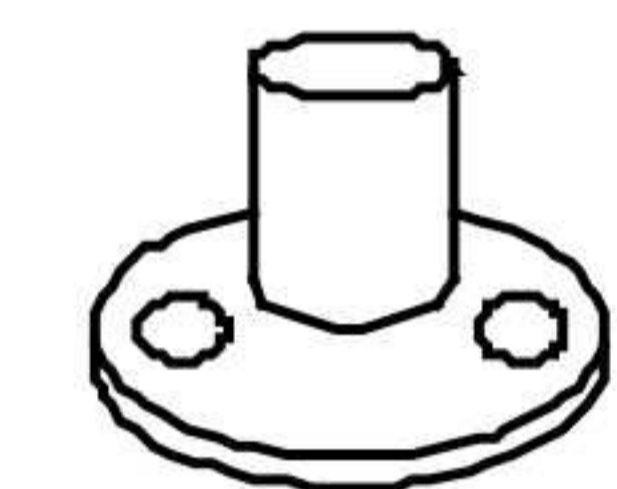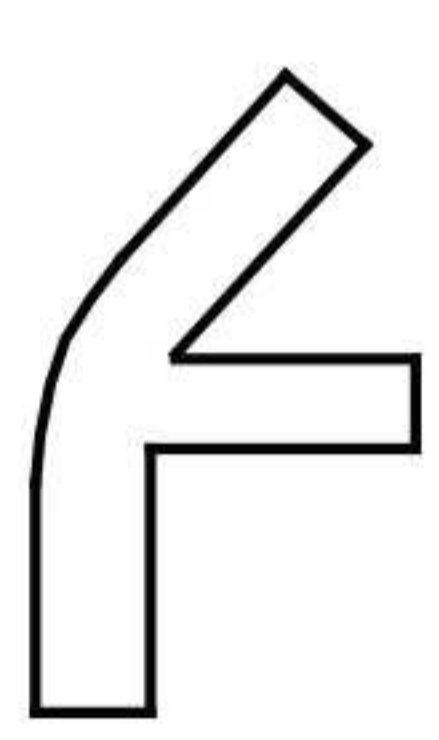Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
<b>A</b>		2	<b>F</b>		8
<b>A1</b>		4	<b>G</b>		100
<b>B</b>		2	<b>H</b>		4
<b>B1</b>		4	<b>K</b>	 M6x16	28
<b>E</b>		2	<b>L</b>	 M8x55	8
<b>C1</b>		2	<b>M</b>	 M8x50	16
<b>C</b>		2	<b>N</b>	 ø4*150mm	14
<b>D</b>		4	<b>O</b>		4

# ACCESSORY CATALOGUE

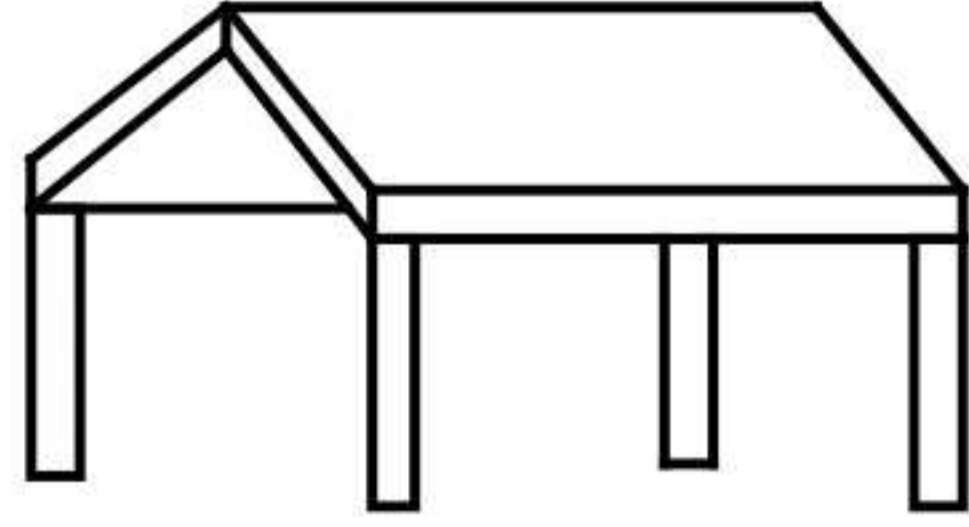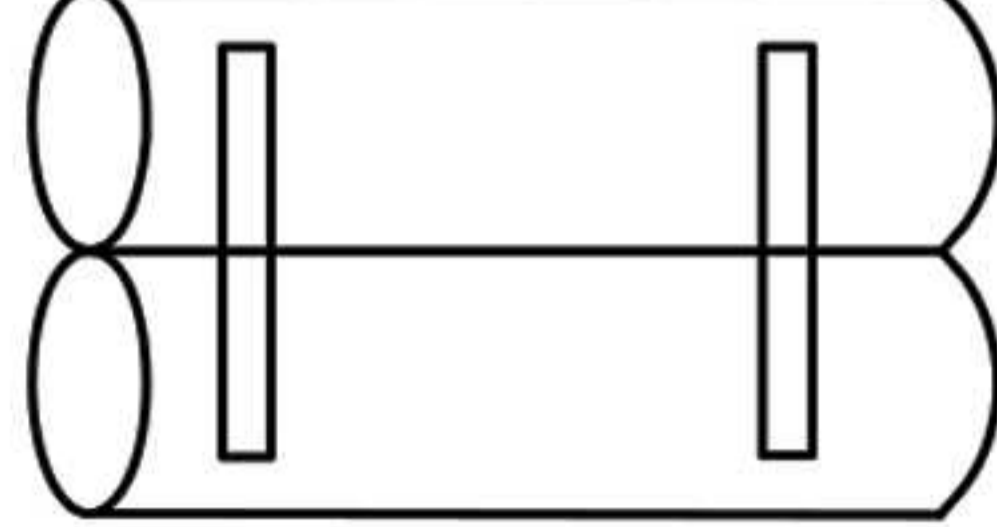


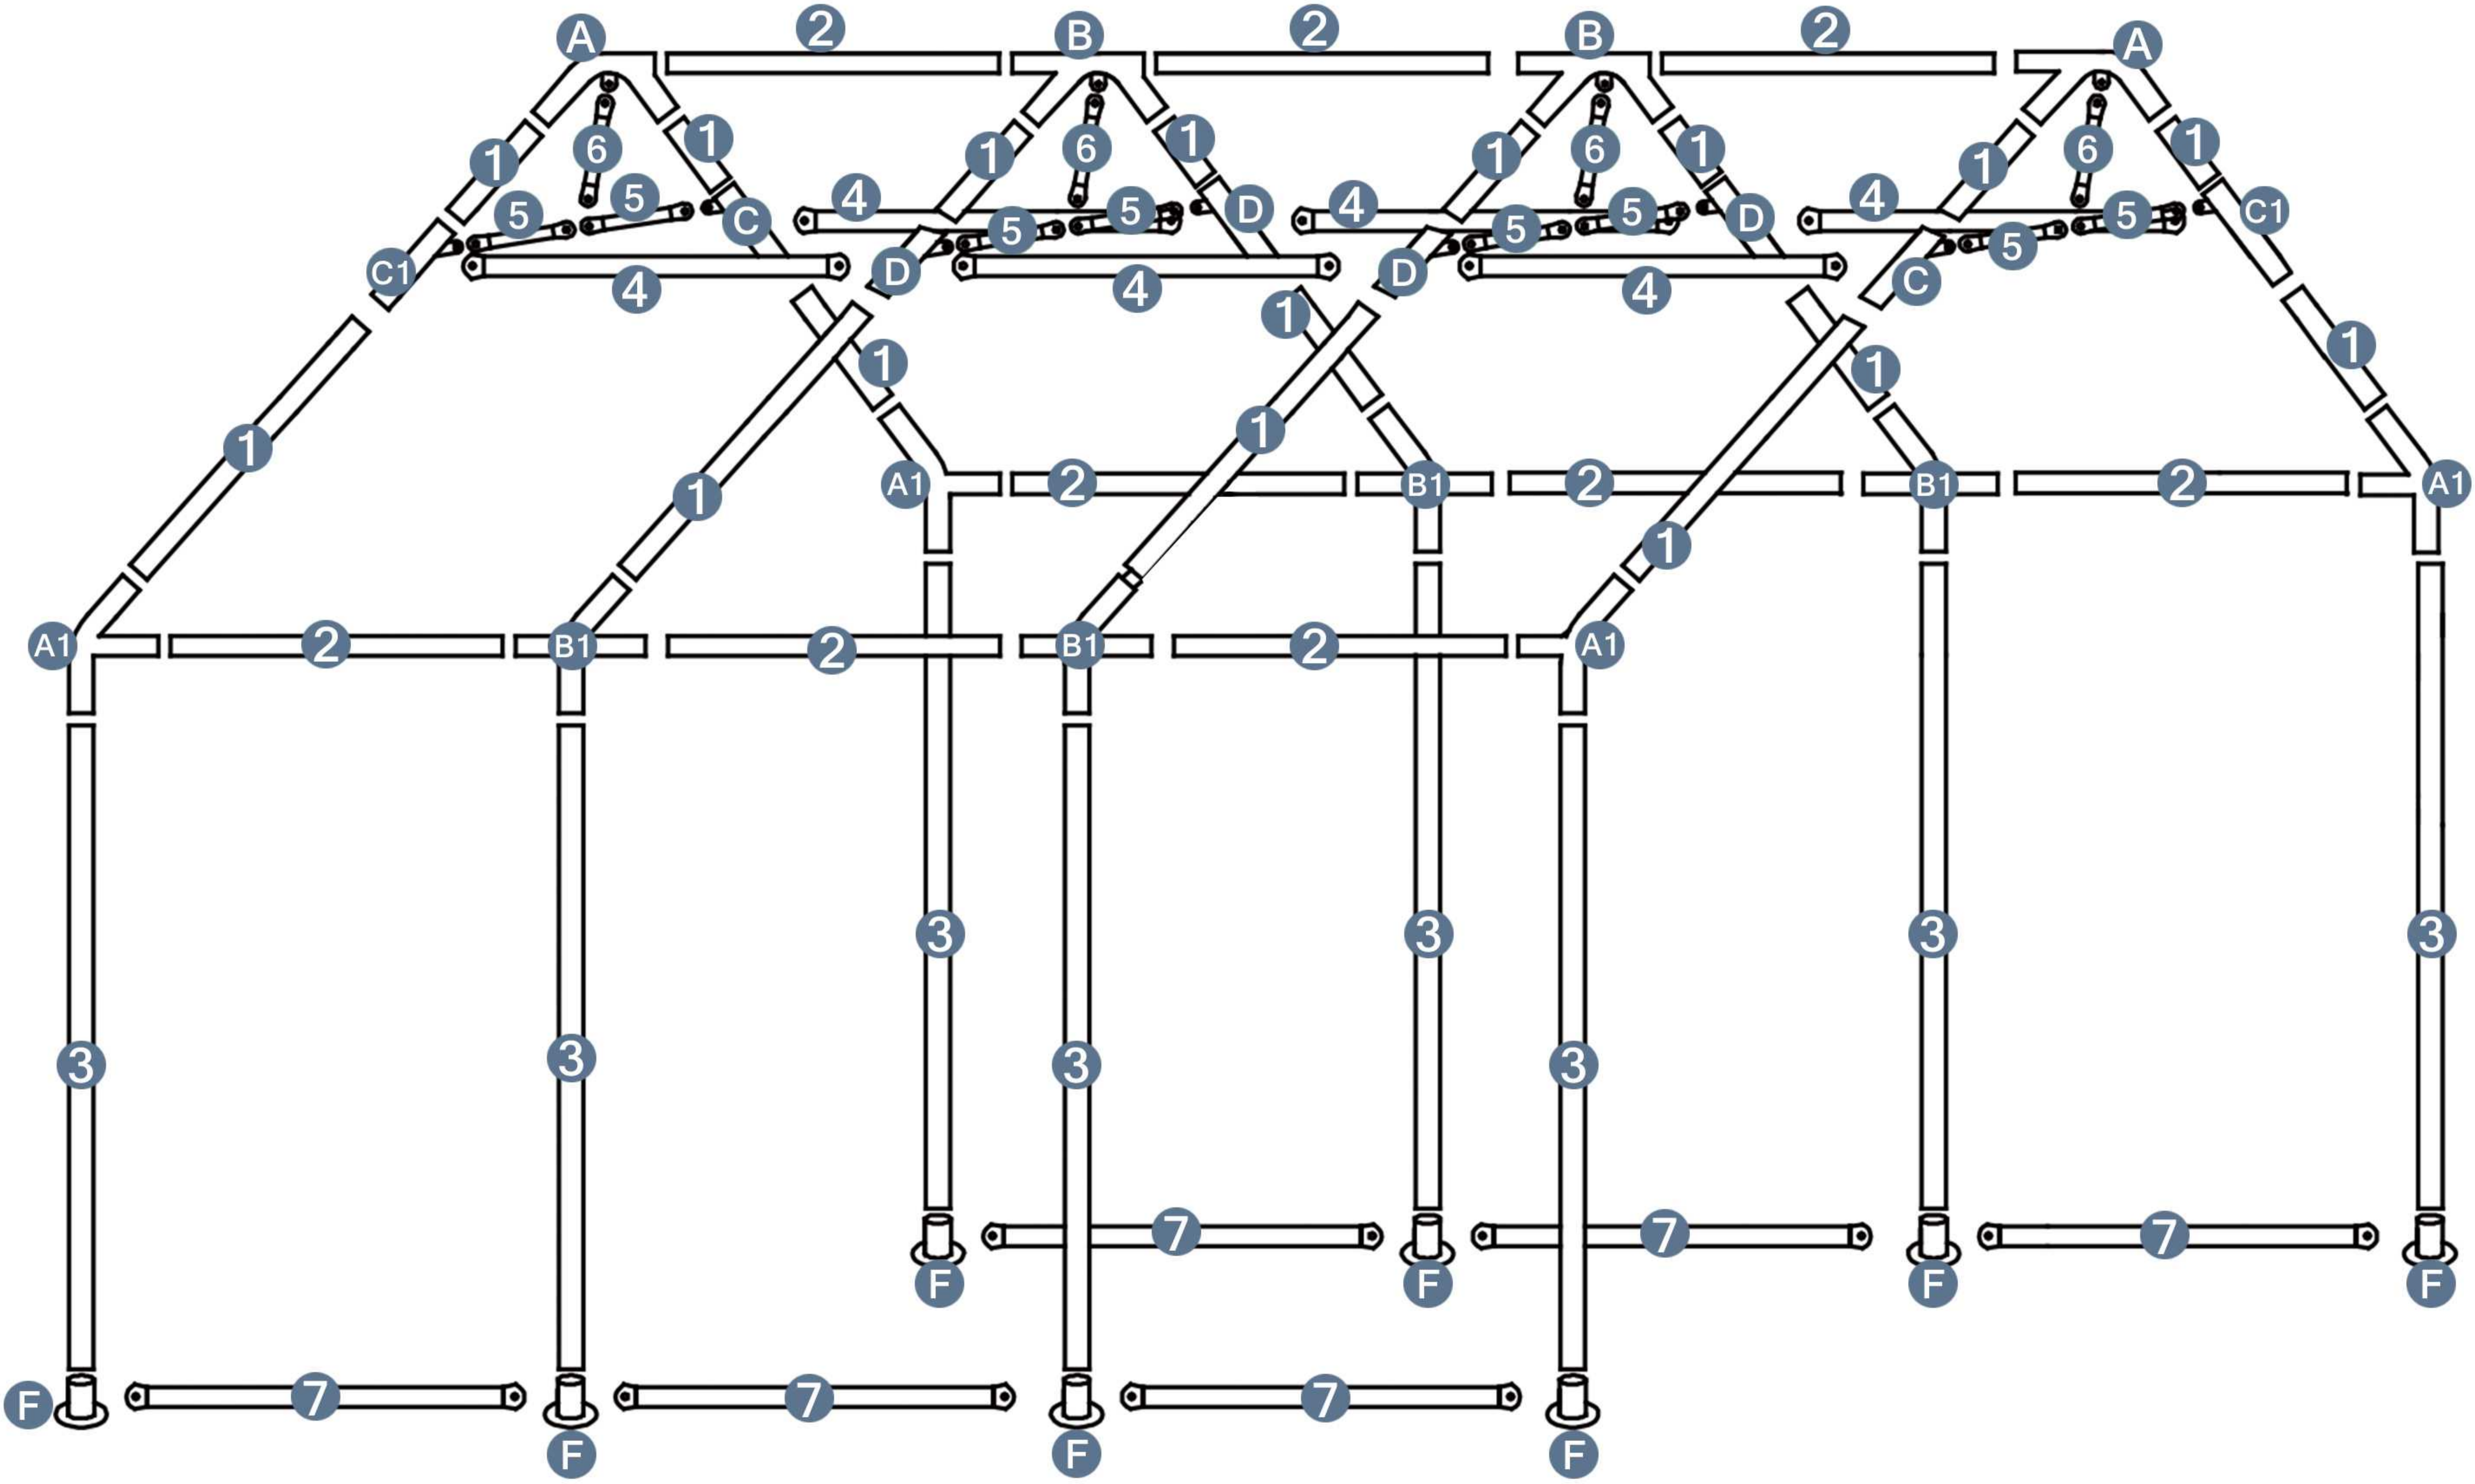







Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
<b>P</b>		<b>1</b>	SANDBAG		<b>4</b>
<b>Q</b>		<b>2</b>			

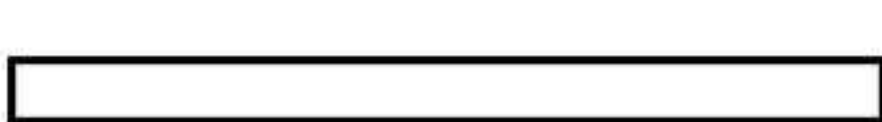



**P1-1**
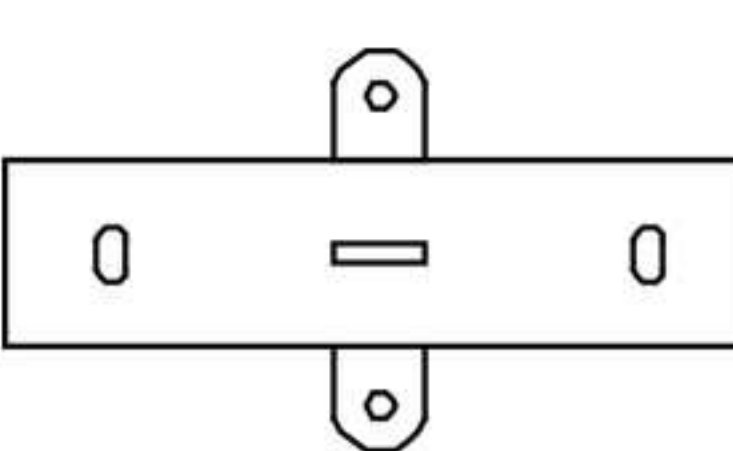
# STEP 1

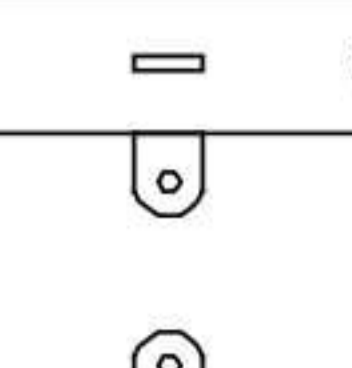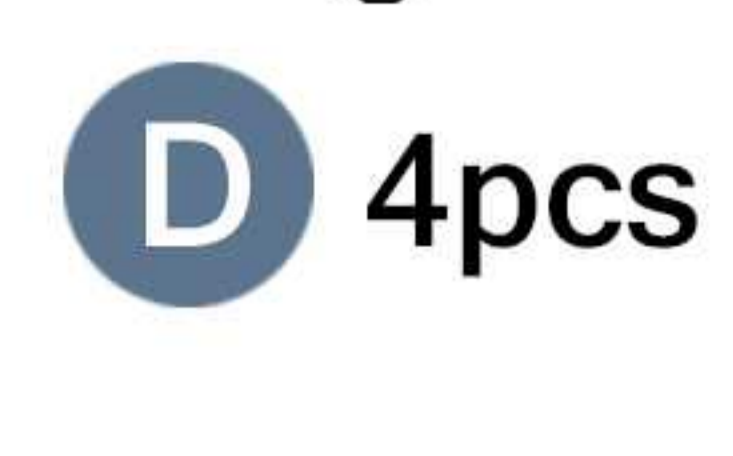Parts required

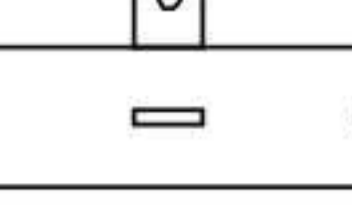 1 16pcs	 A 2pcs	 B1 4pcs	 C1 2pcs
 2 9pcs	 A1 4pcs	 B 2pcs	 D 4pcs
 4 6pcs	 B 2pcs	 C 2pcs	



For convenience, please place each accessory according to the position shown in the figure, and then start to build.

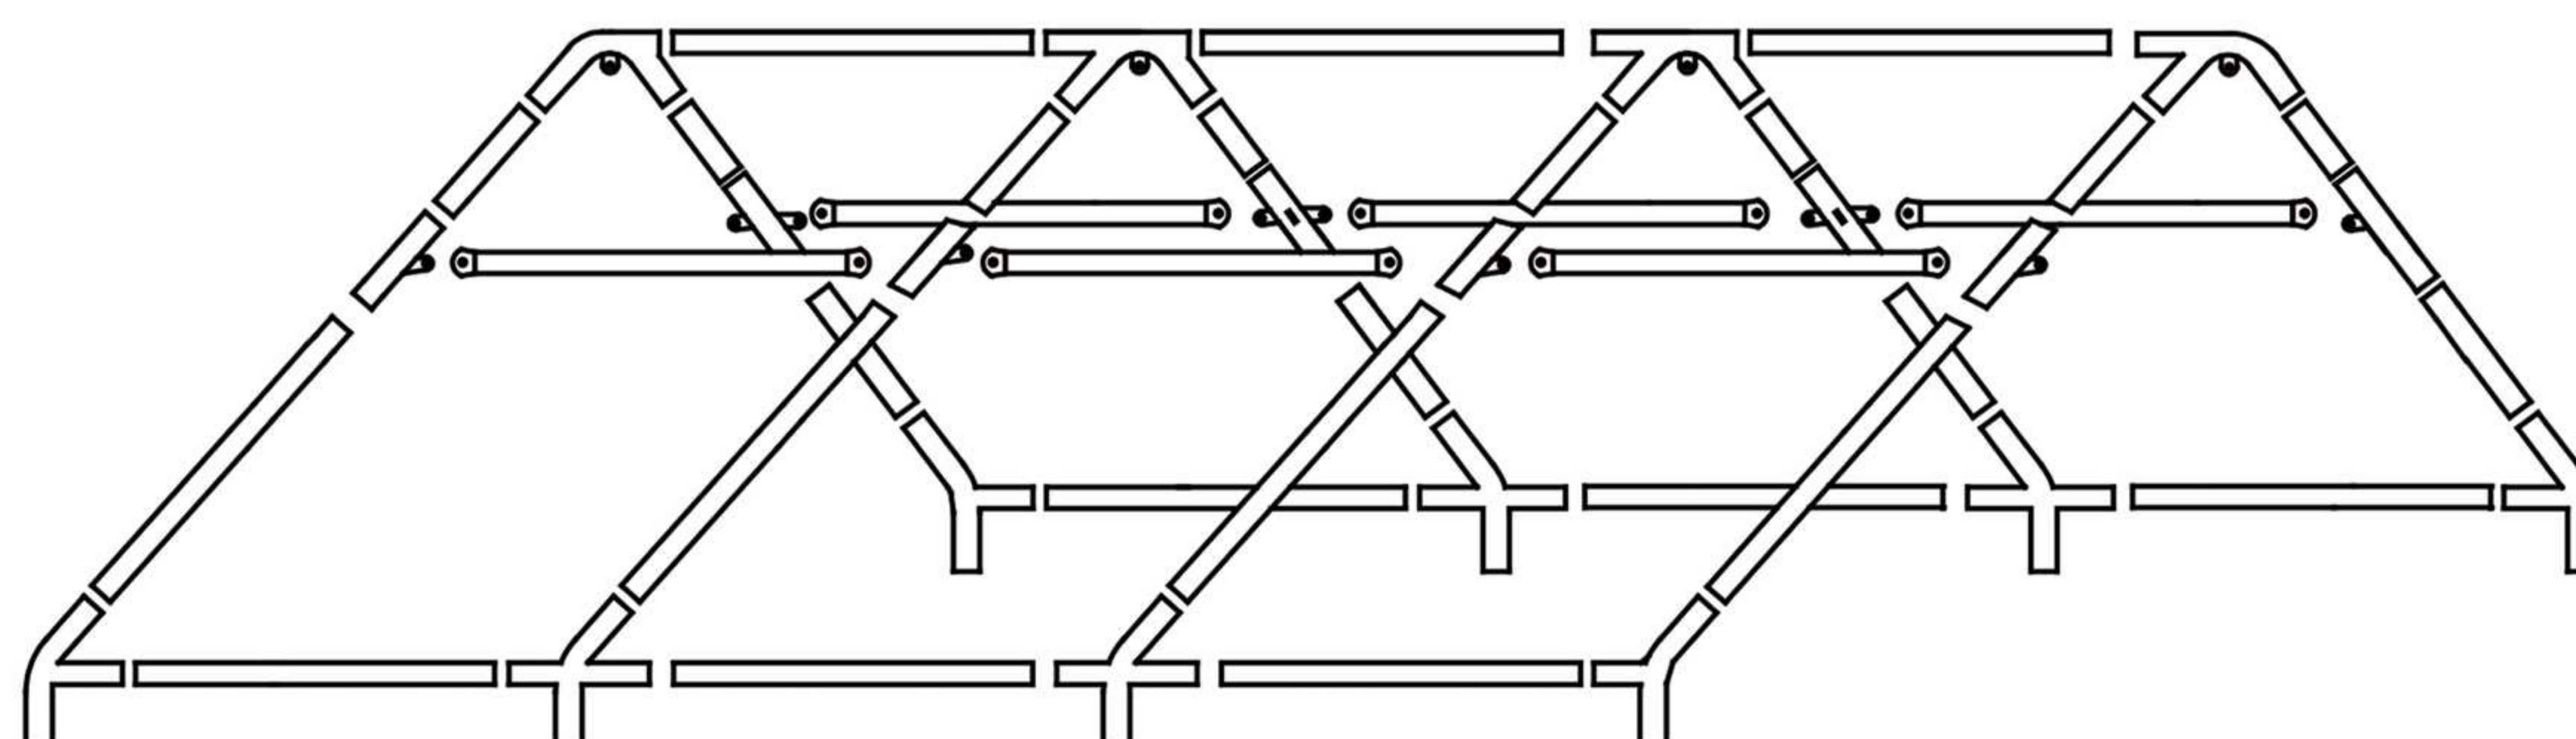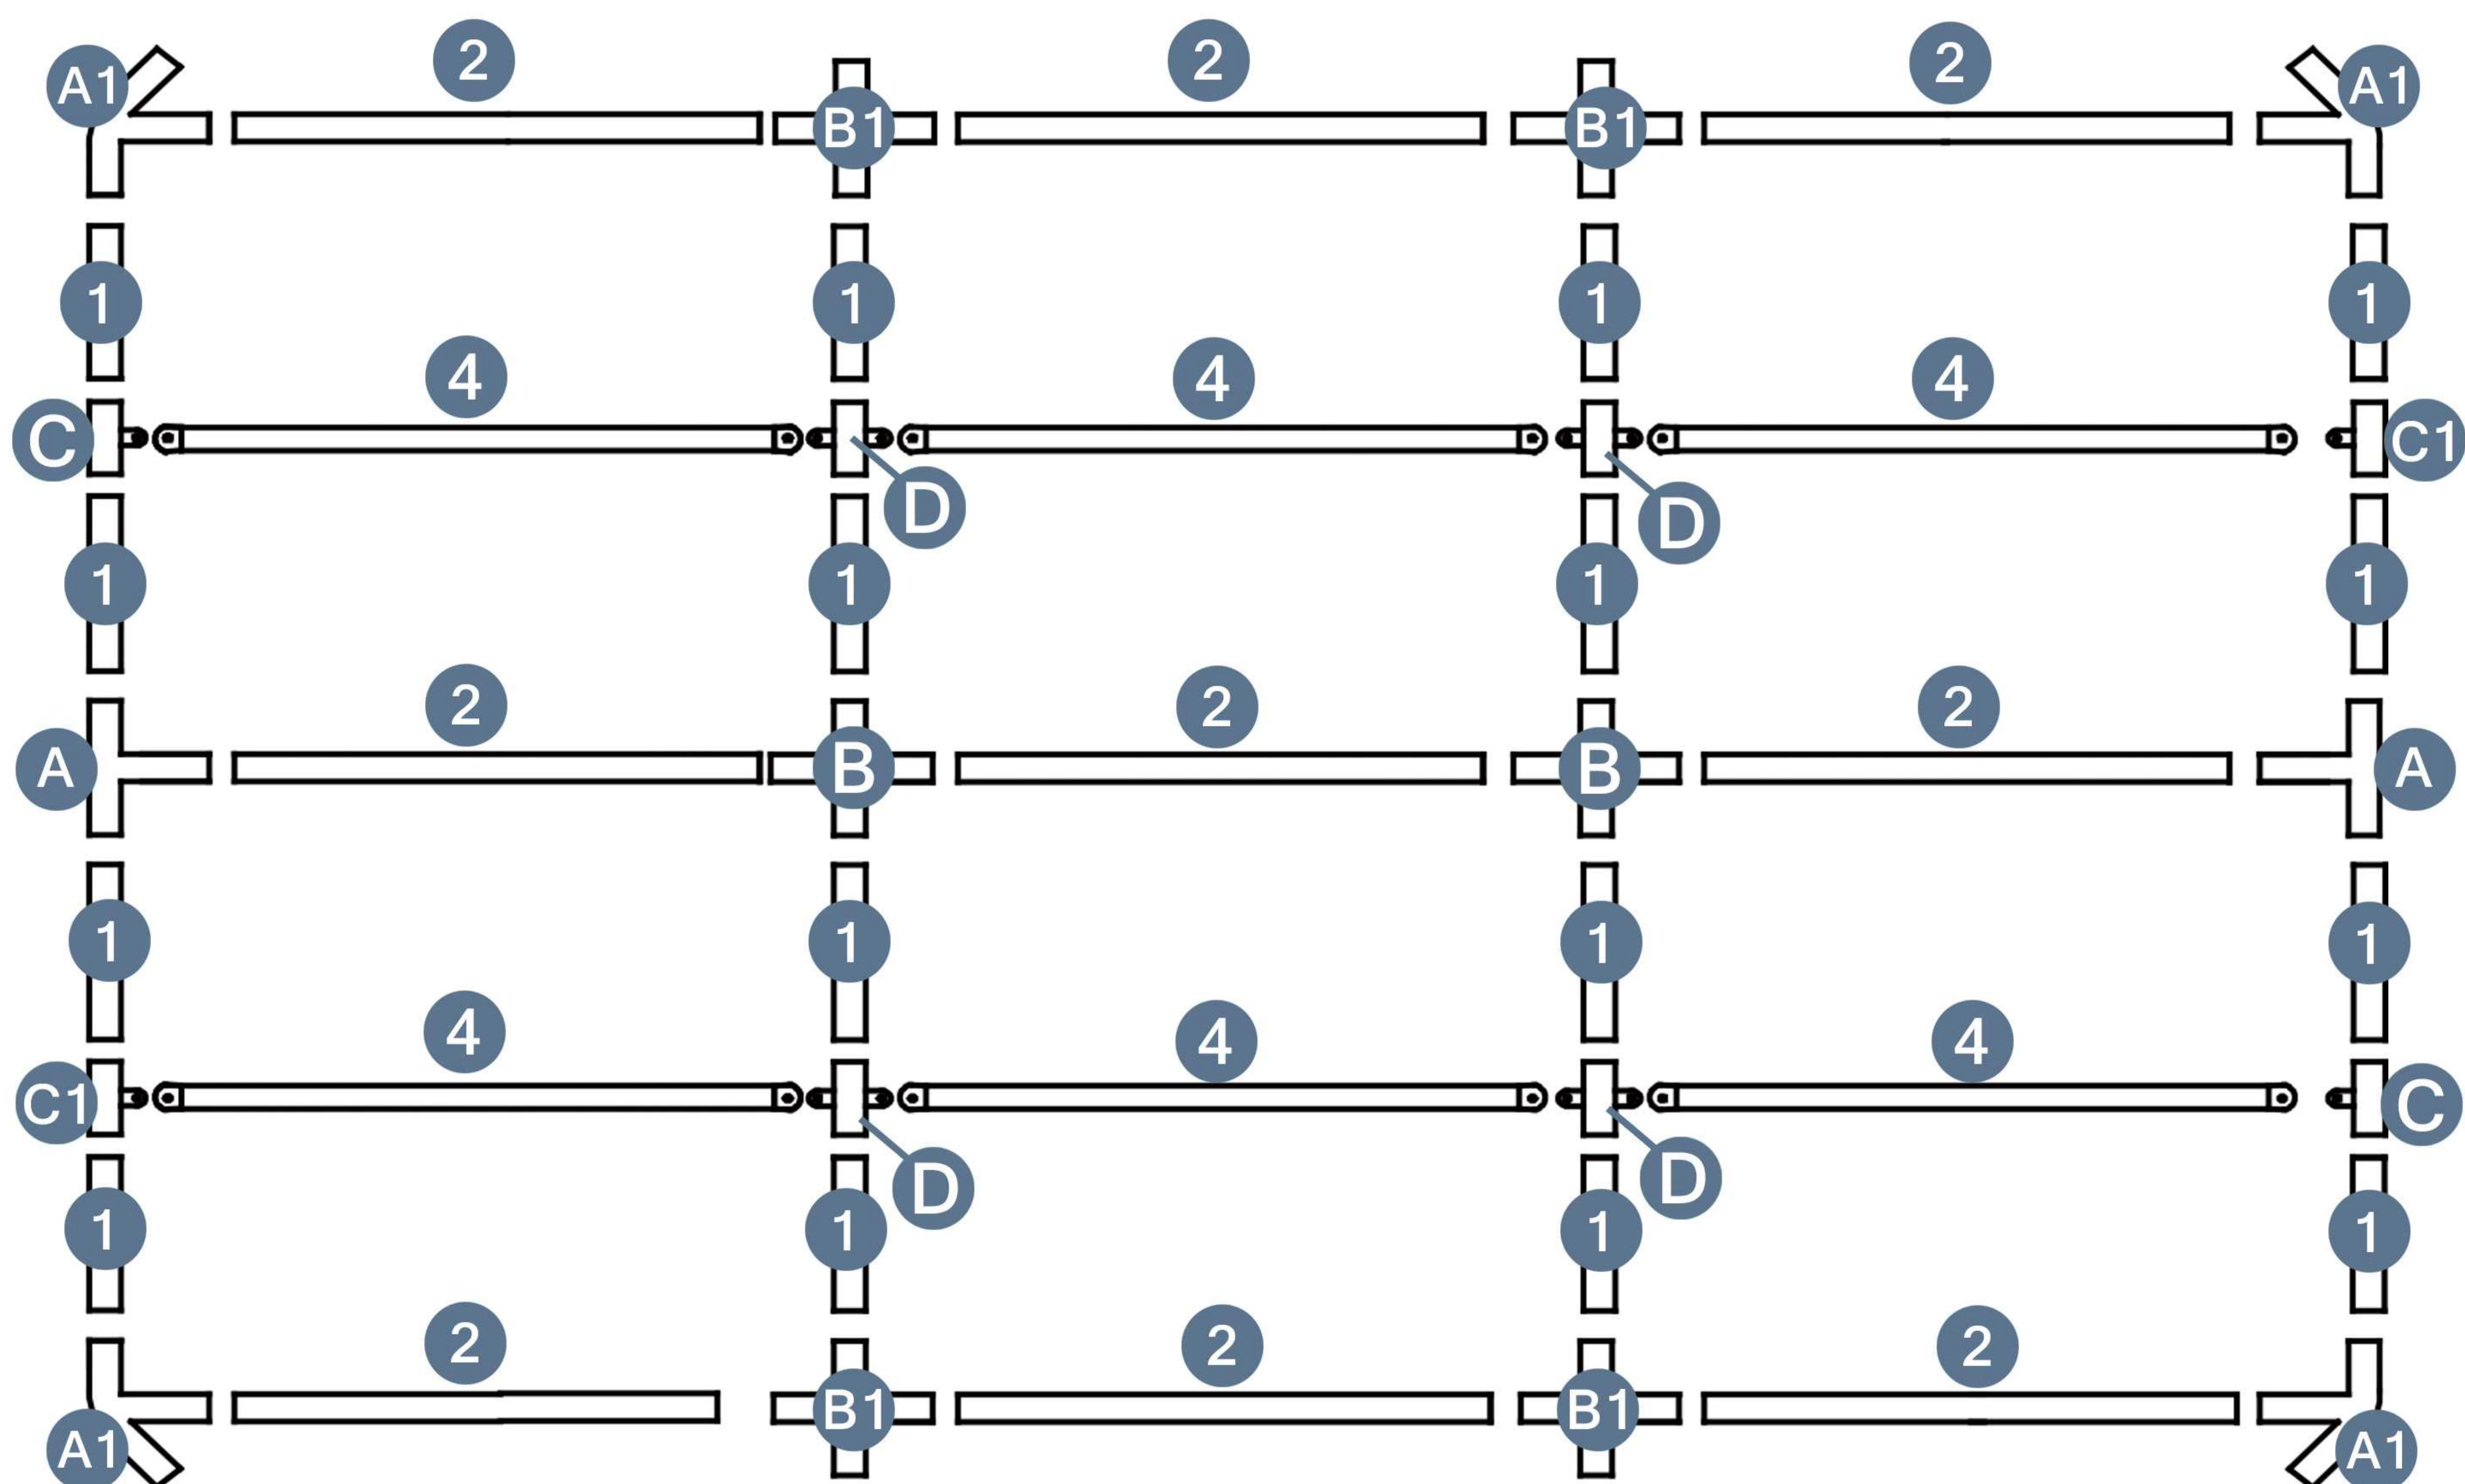




What it looks like after it is set up

# STEP 2

Parts required

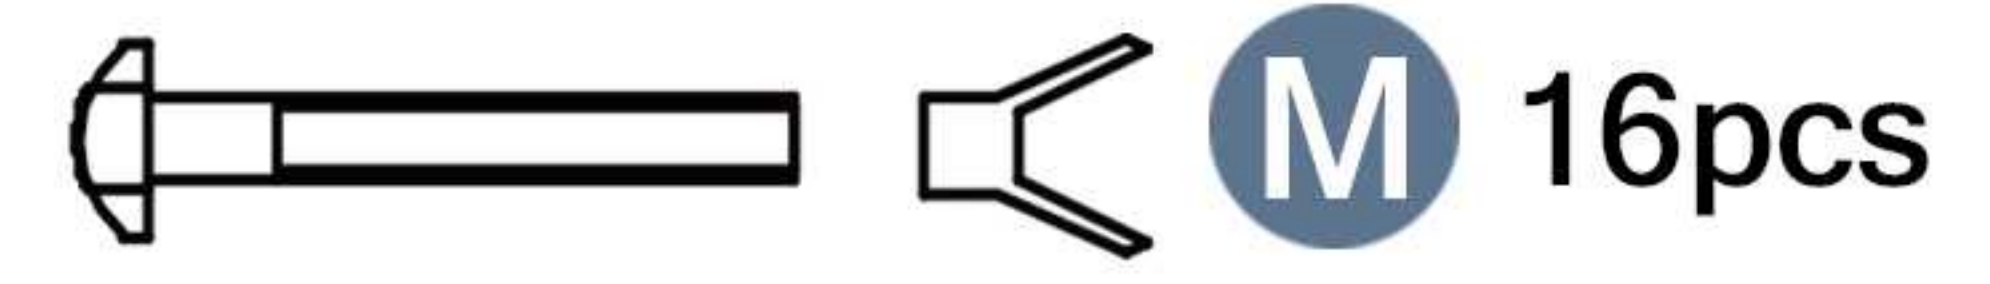
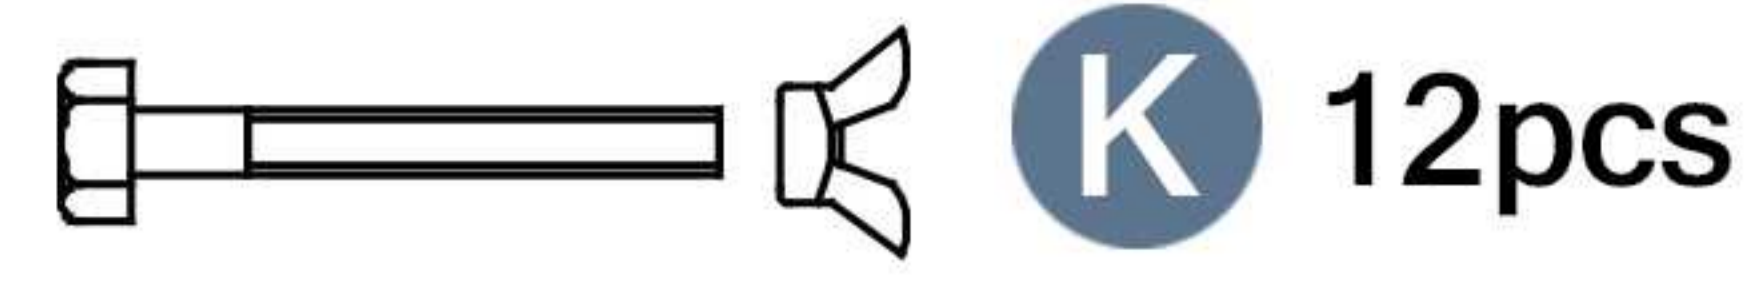



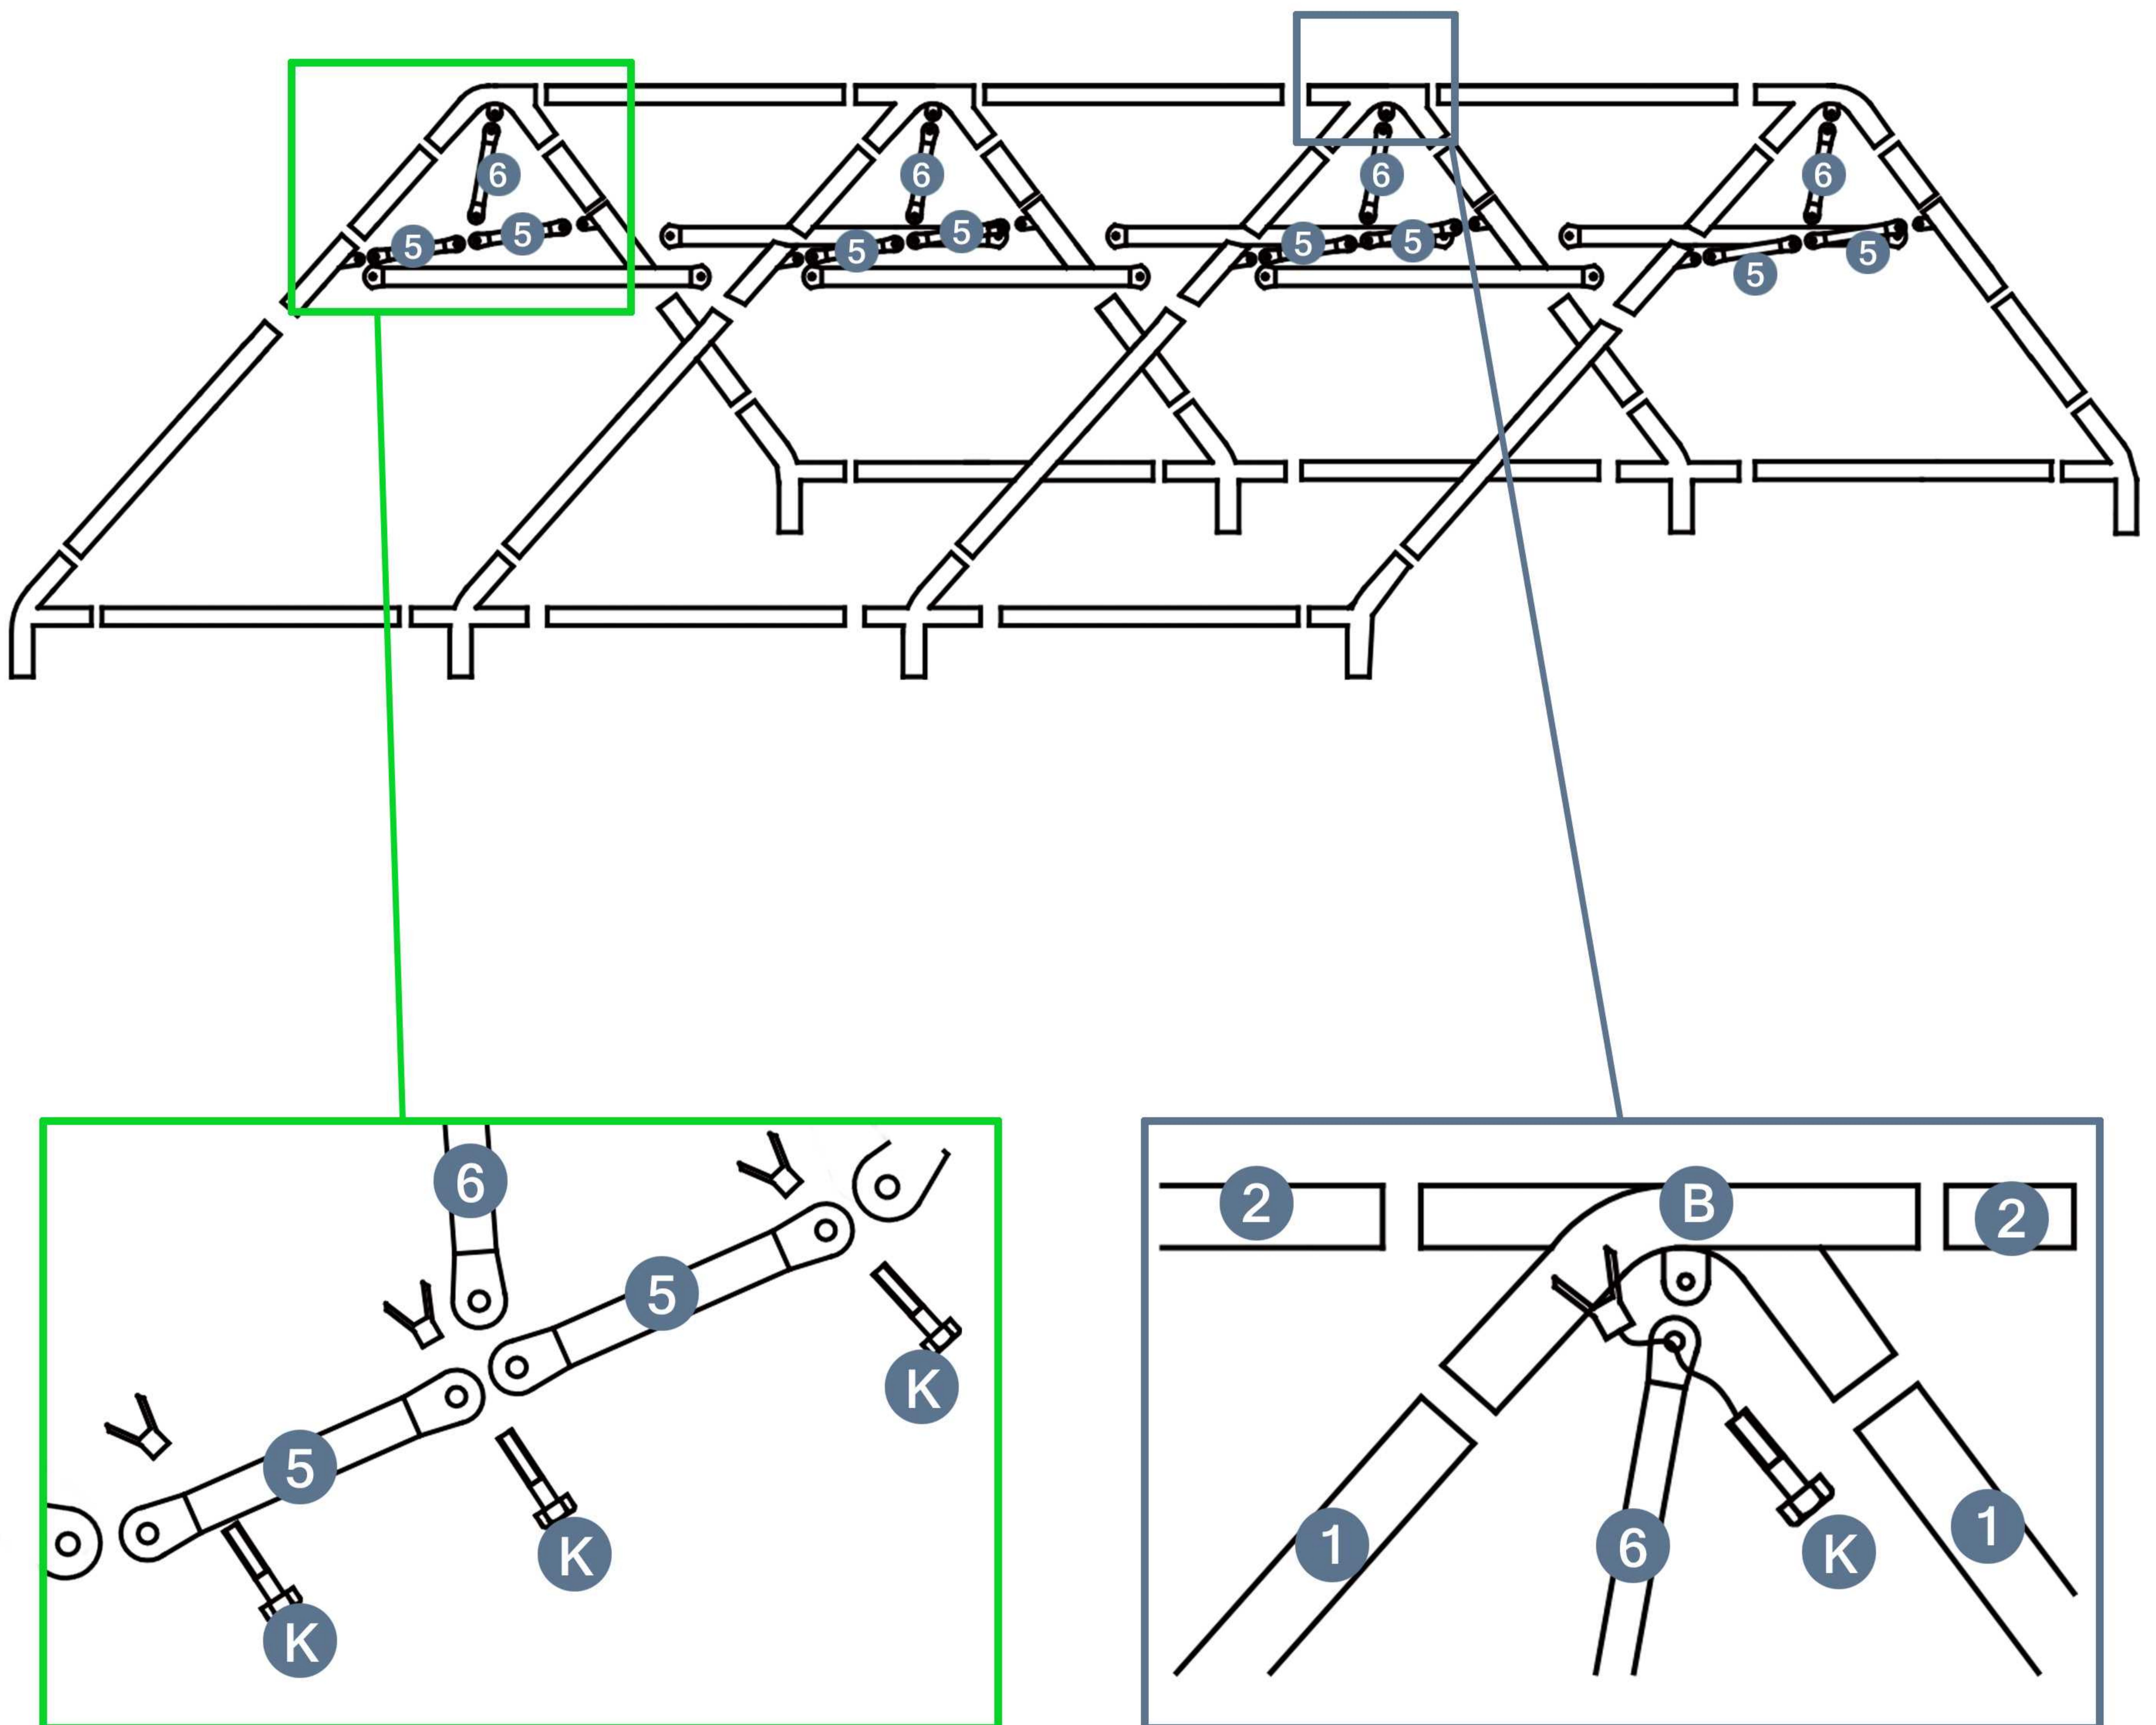
Note that  and  are different screws.

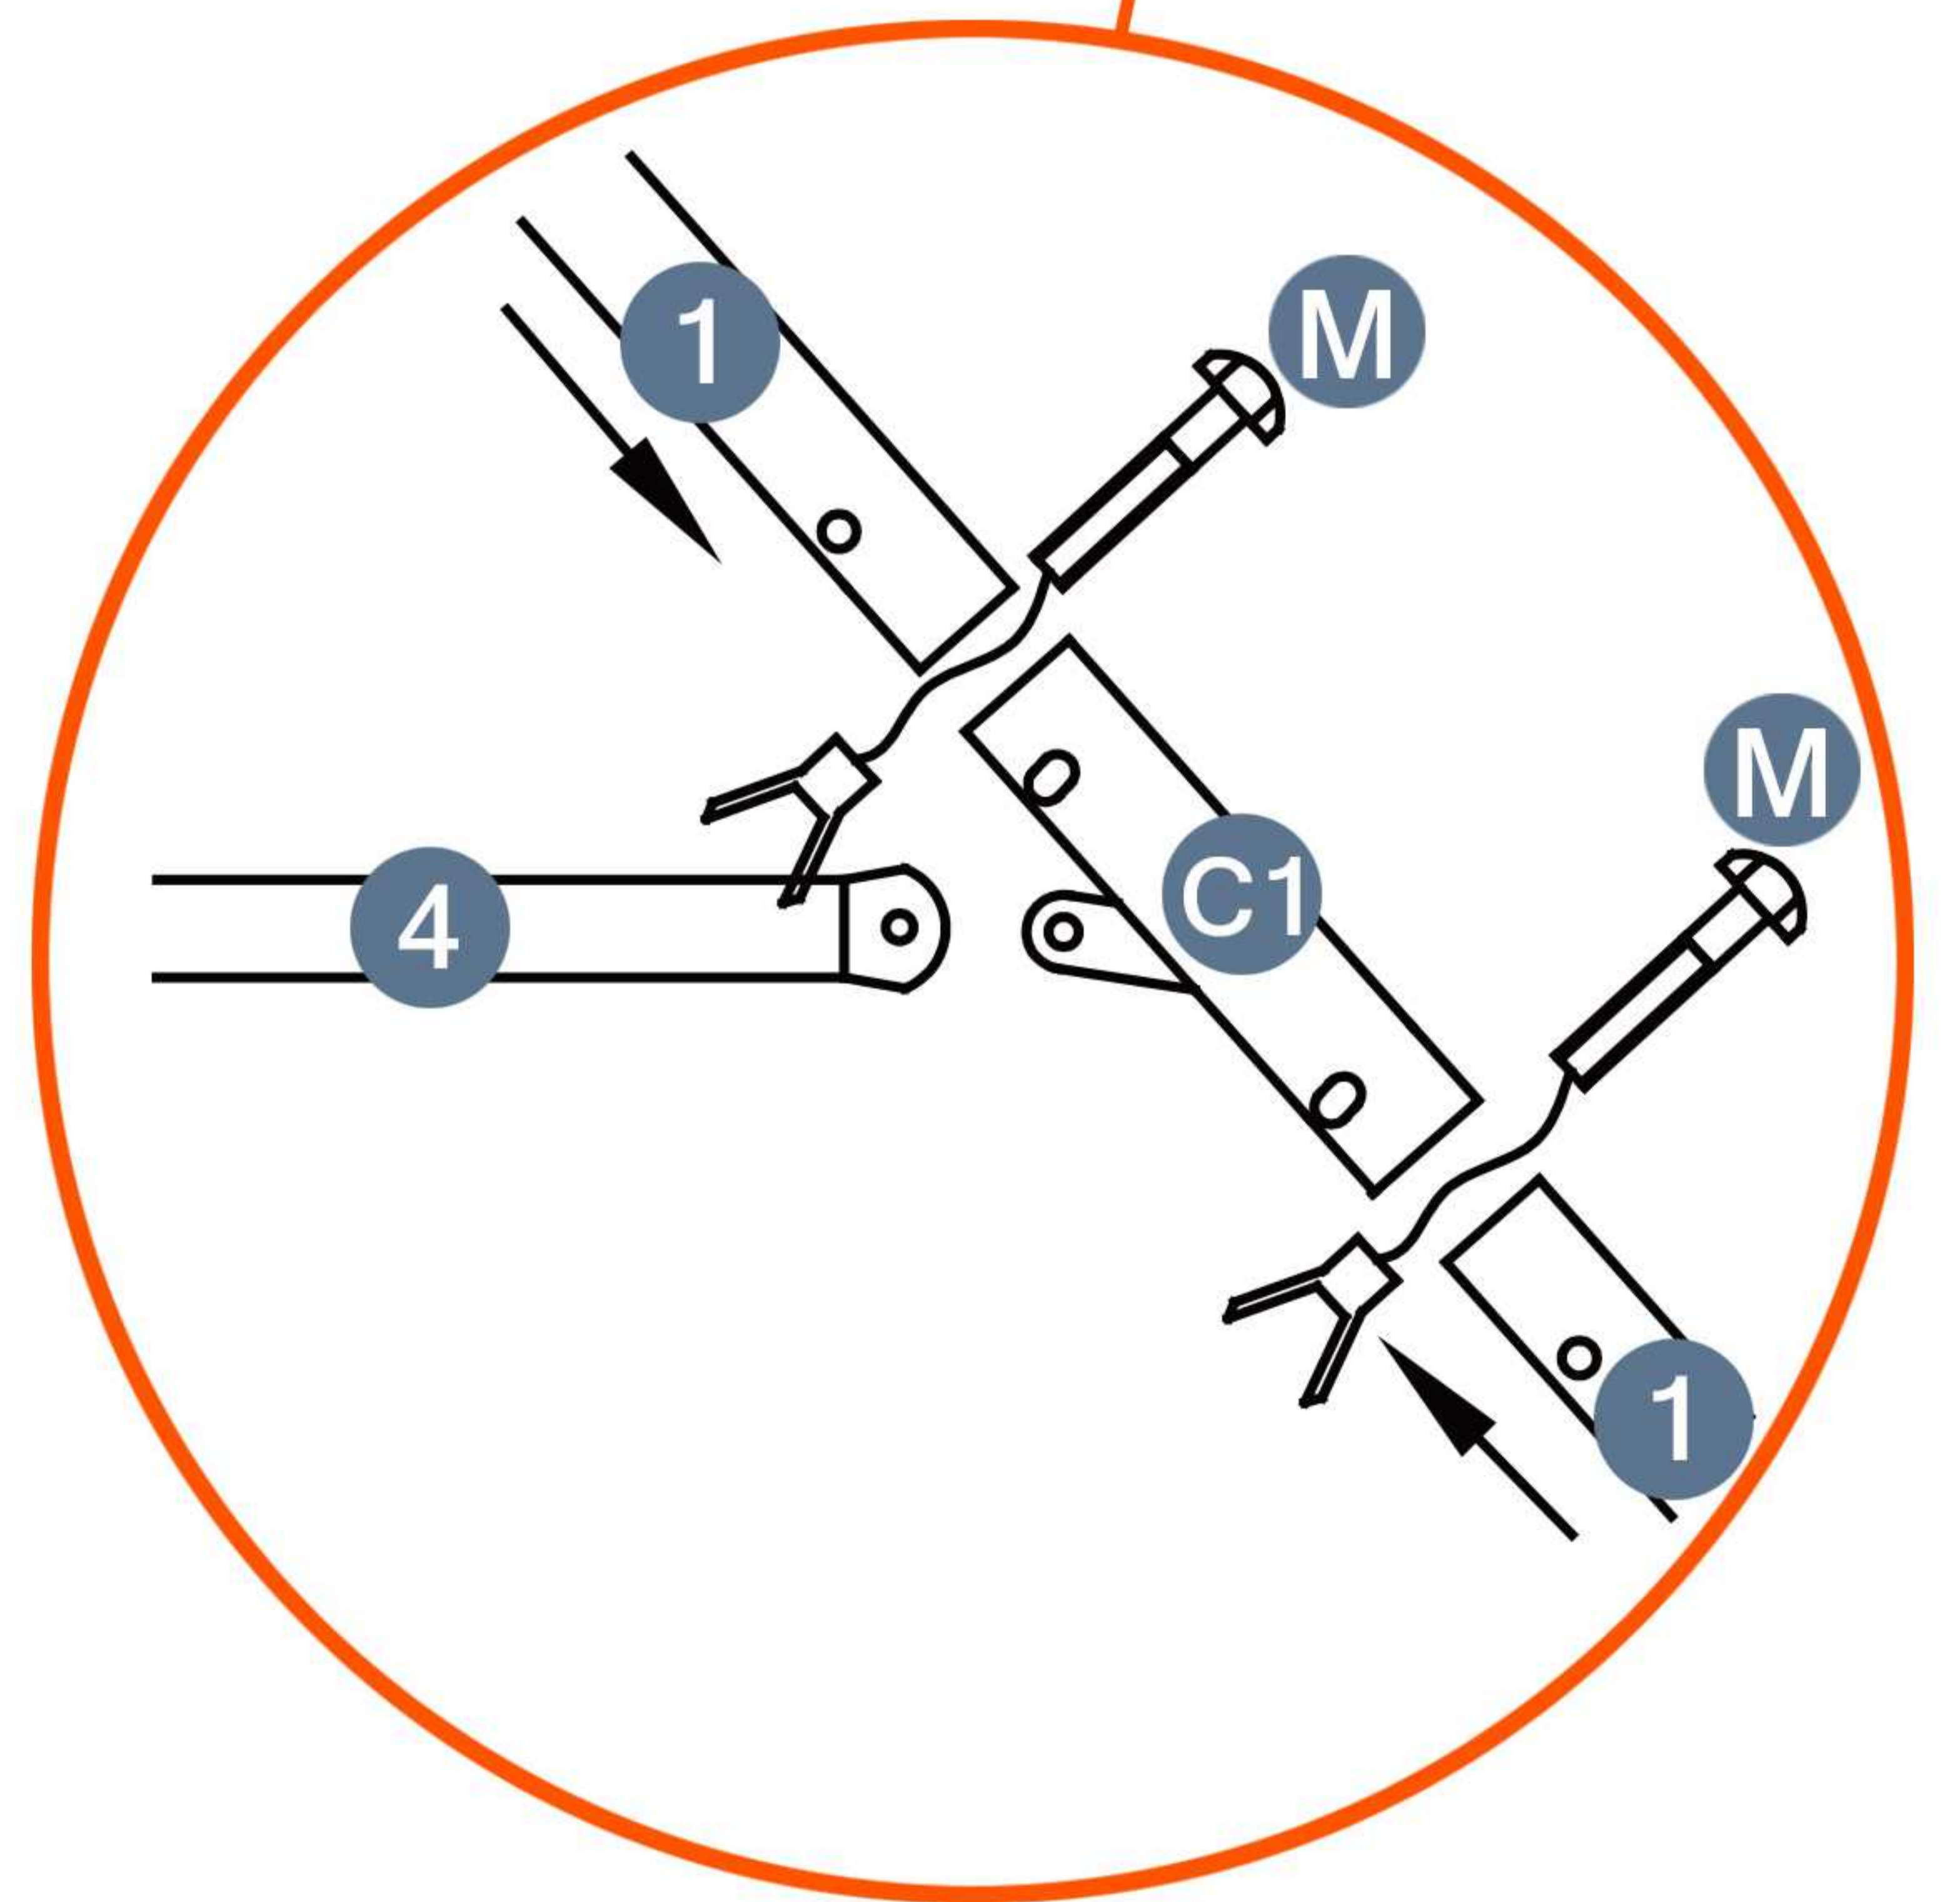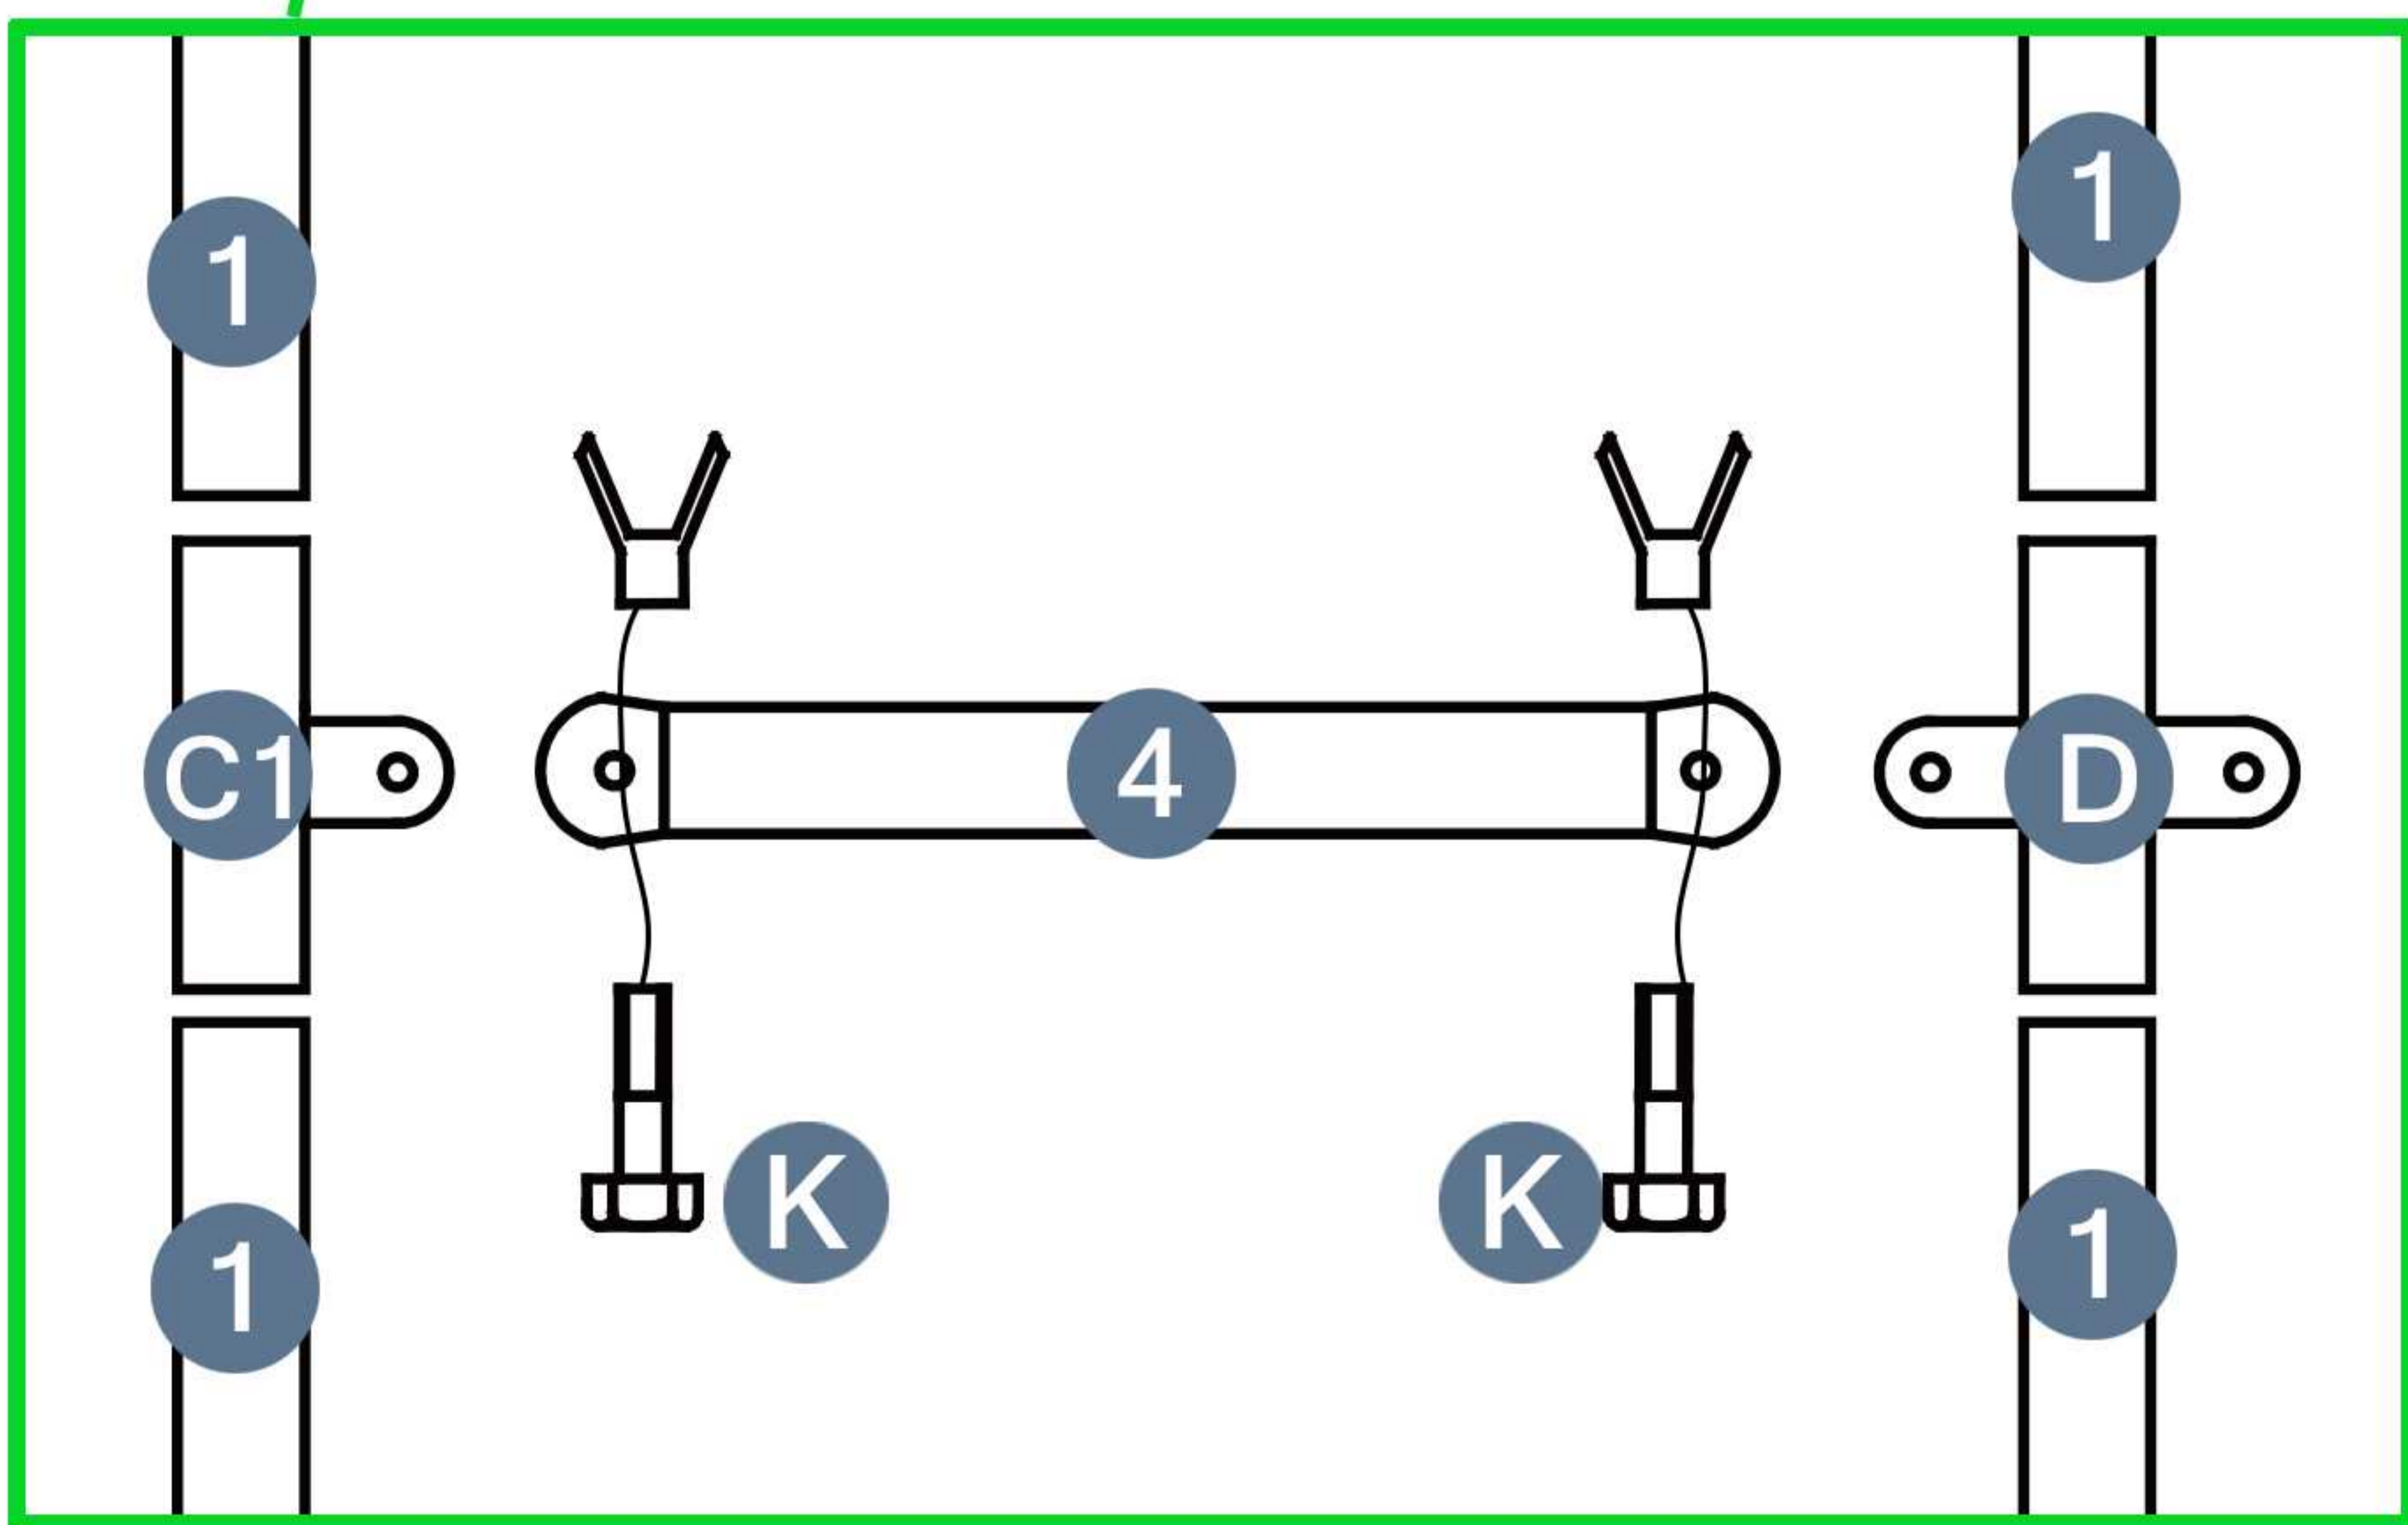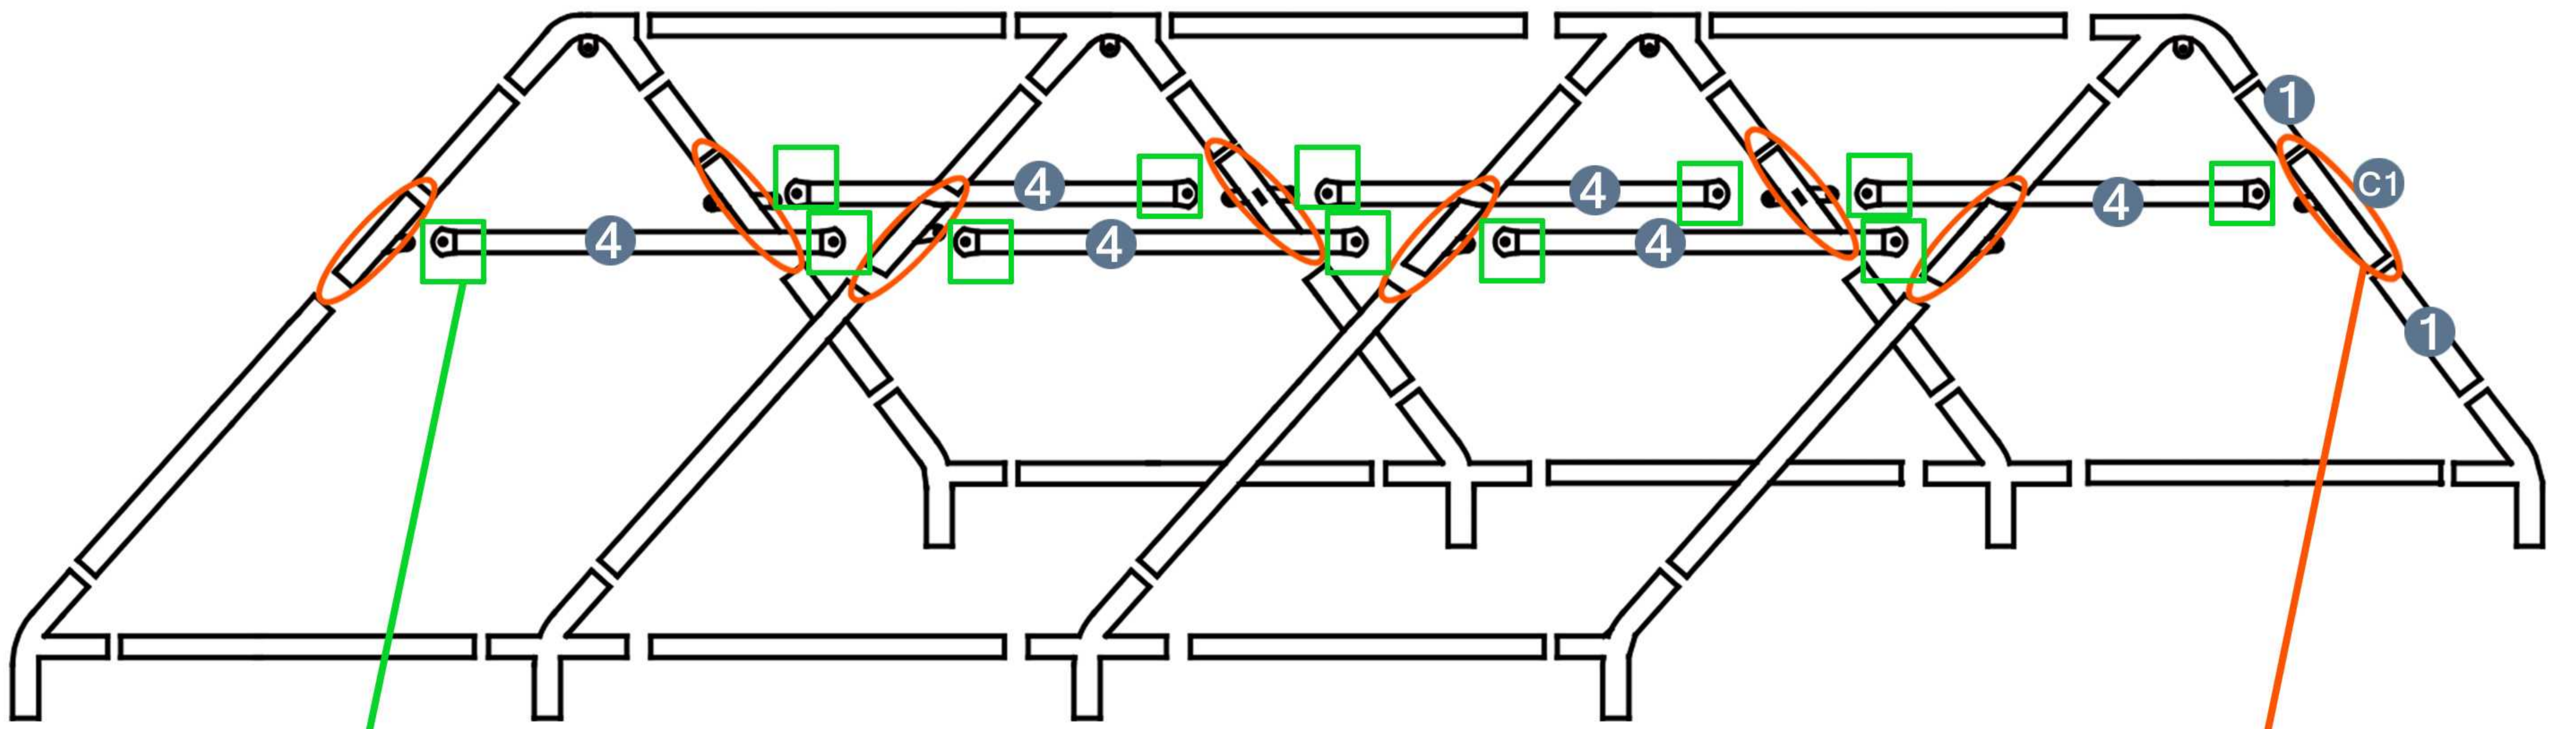

# STEP 3


Parts required

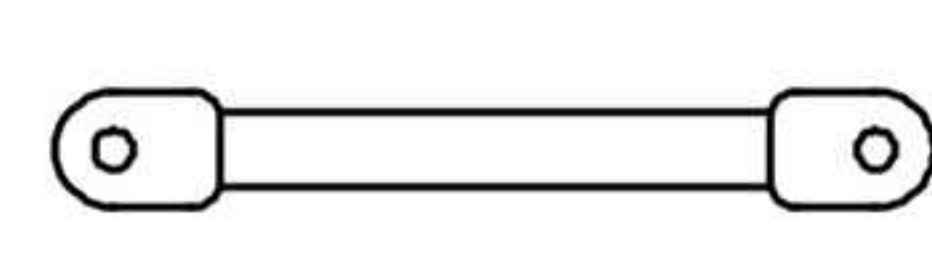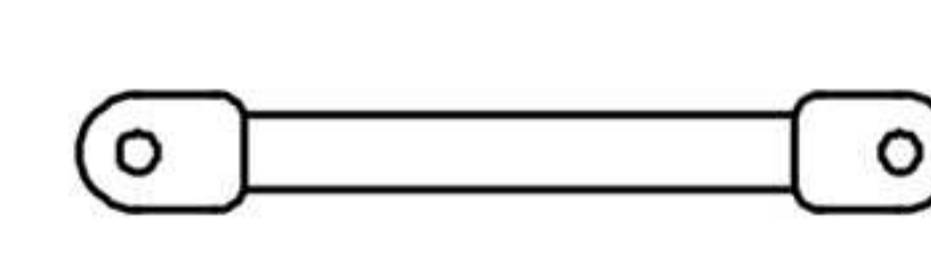 **5** 8pcs  **6** 4pcs  **K** 16pcs




# STEP 4

Parts required

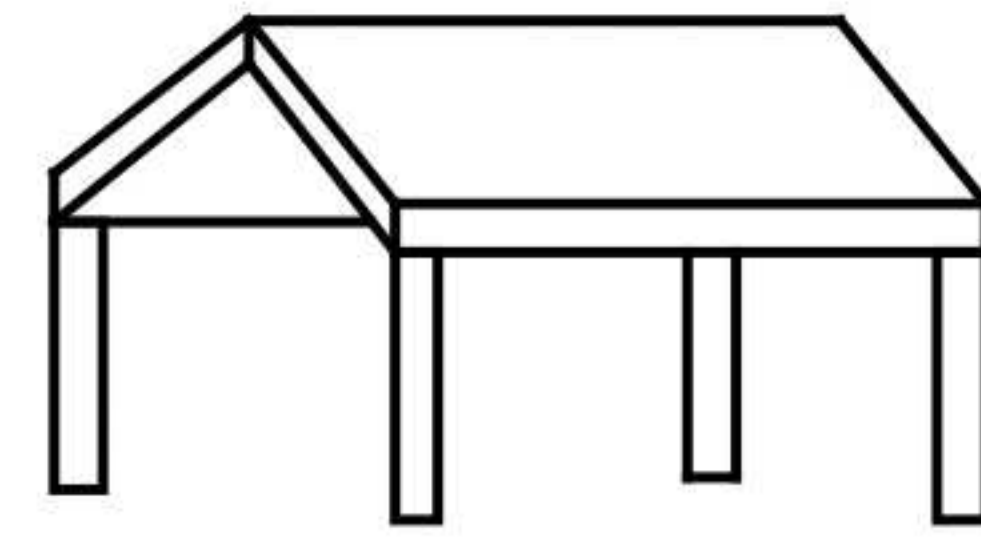


P 1pcs



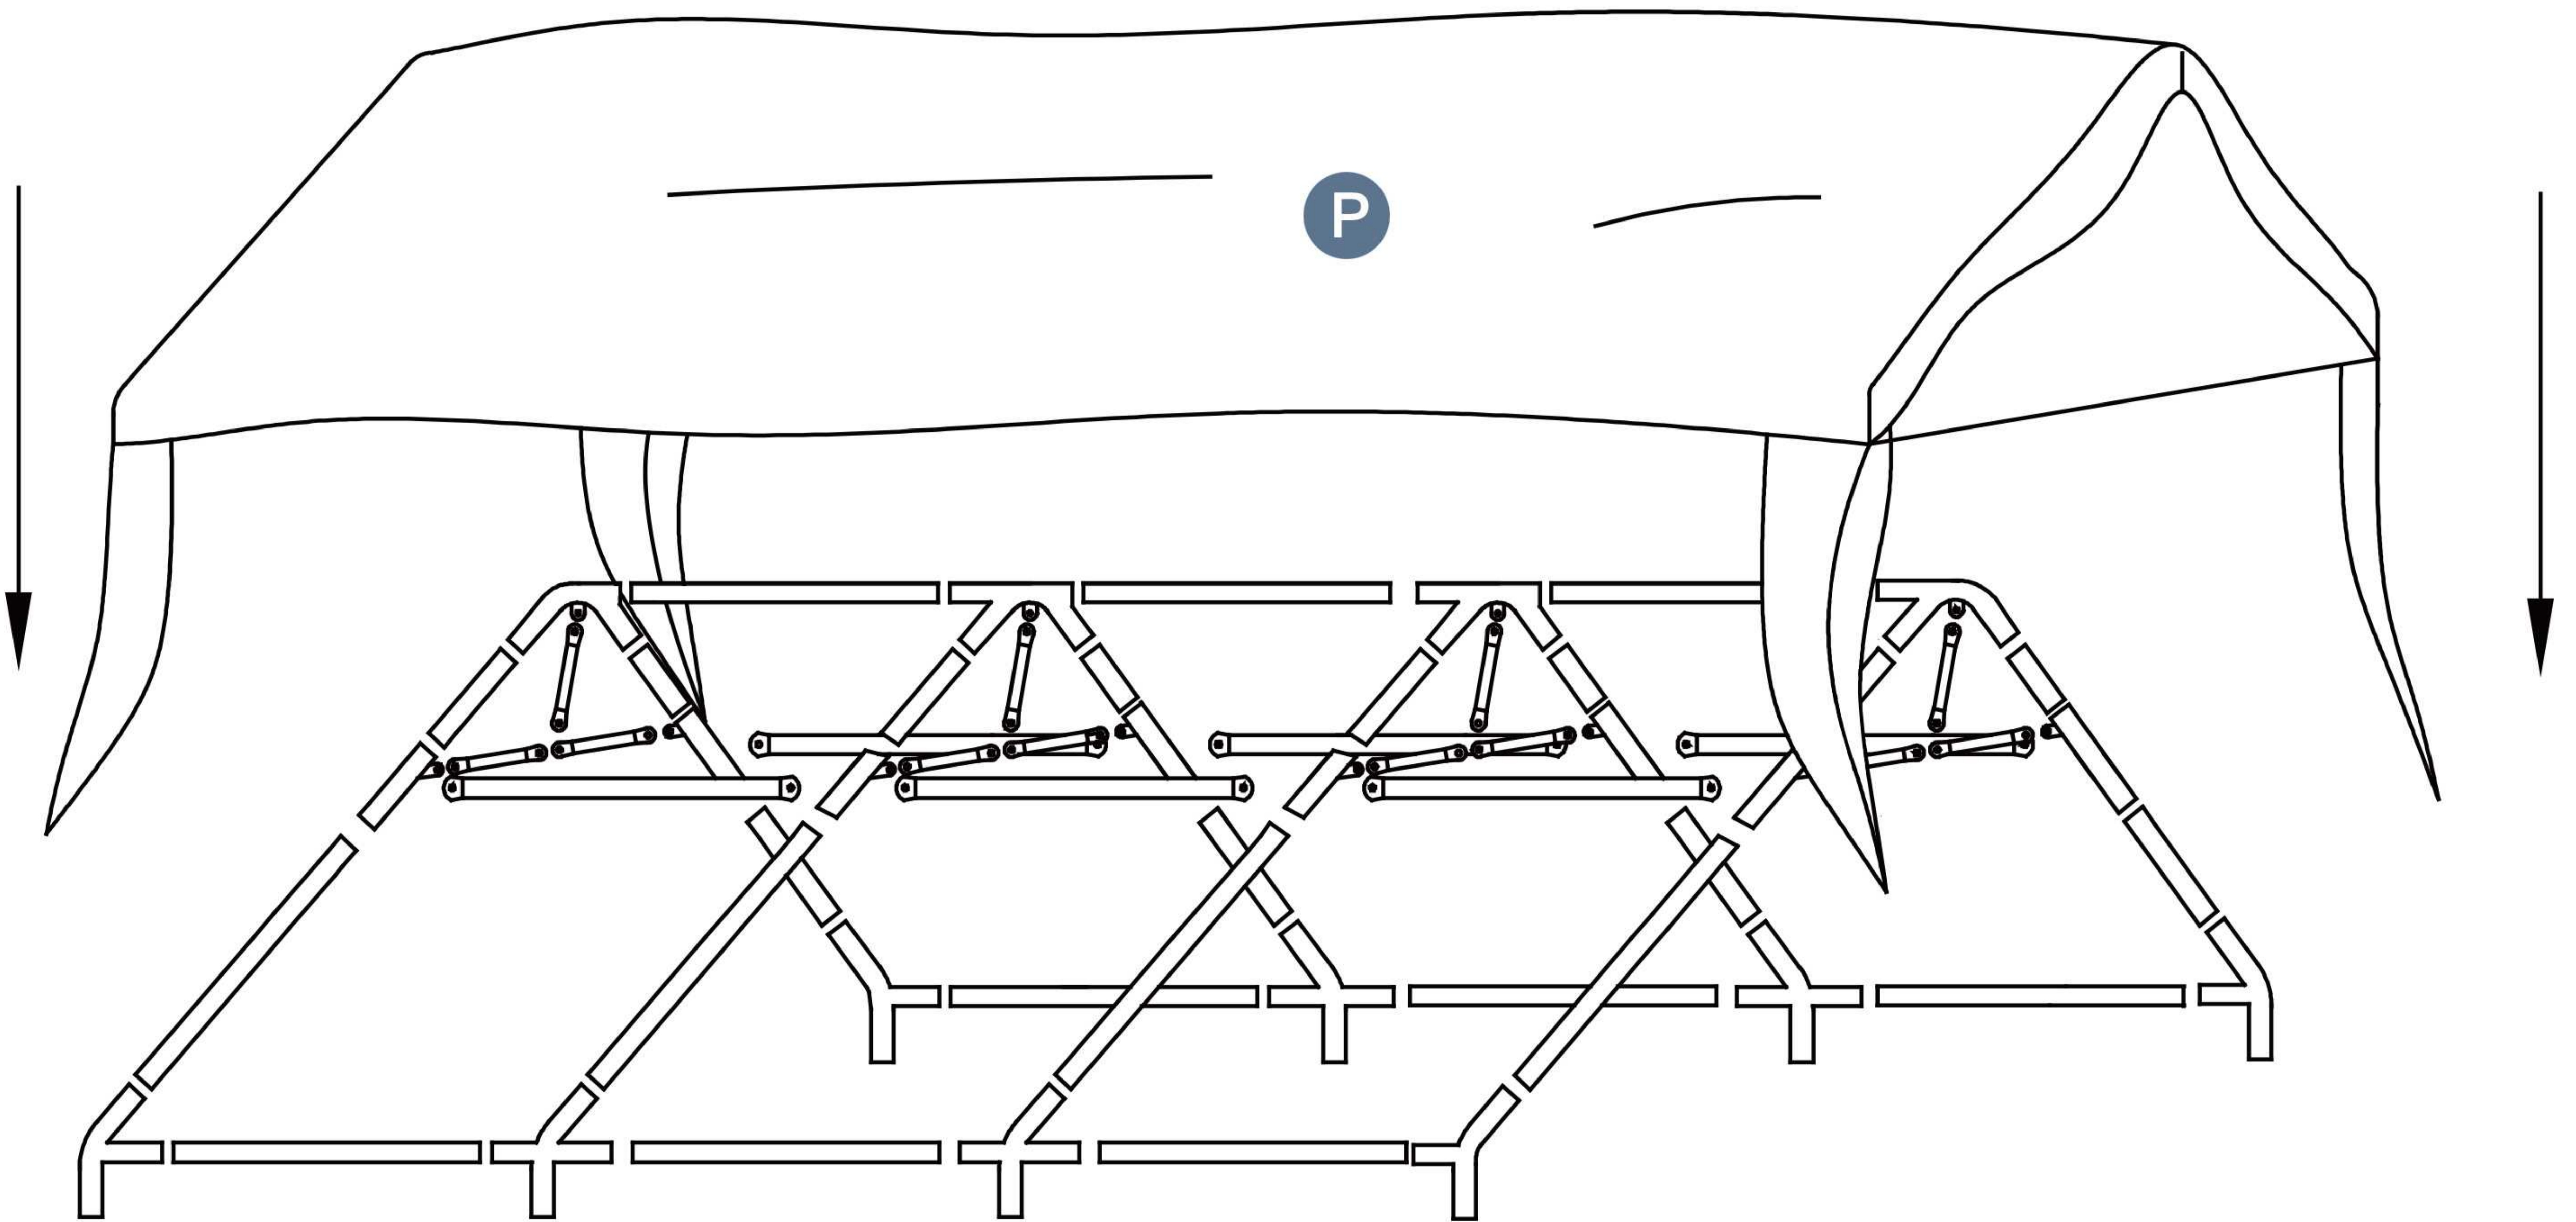


# STEP 5

Parts required

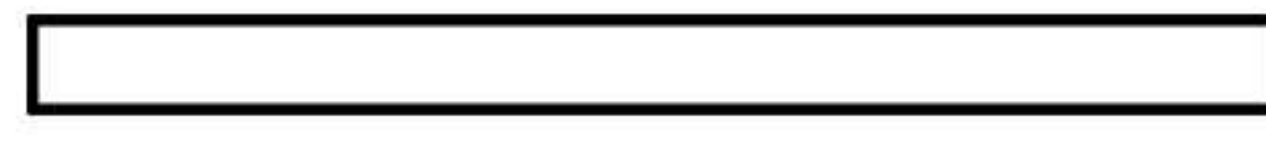





3 8pcs

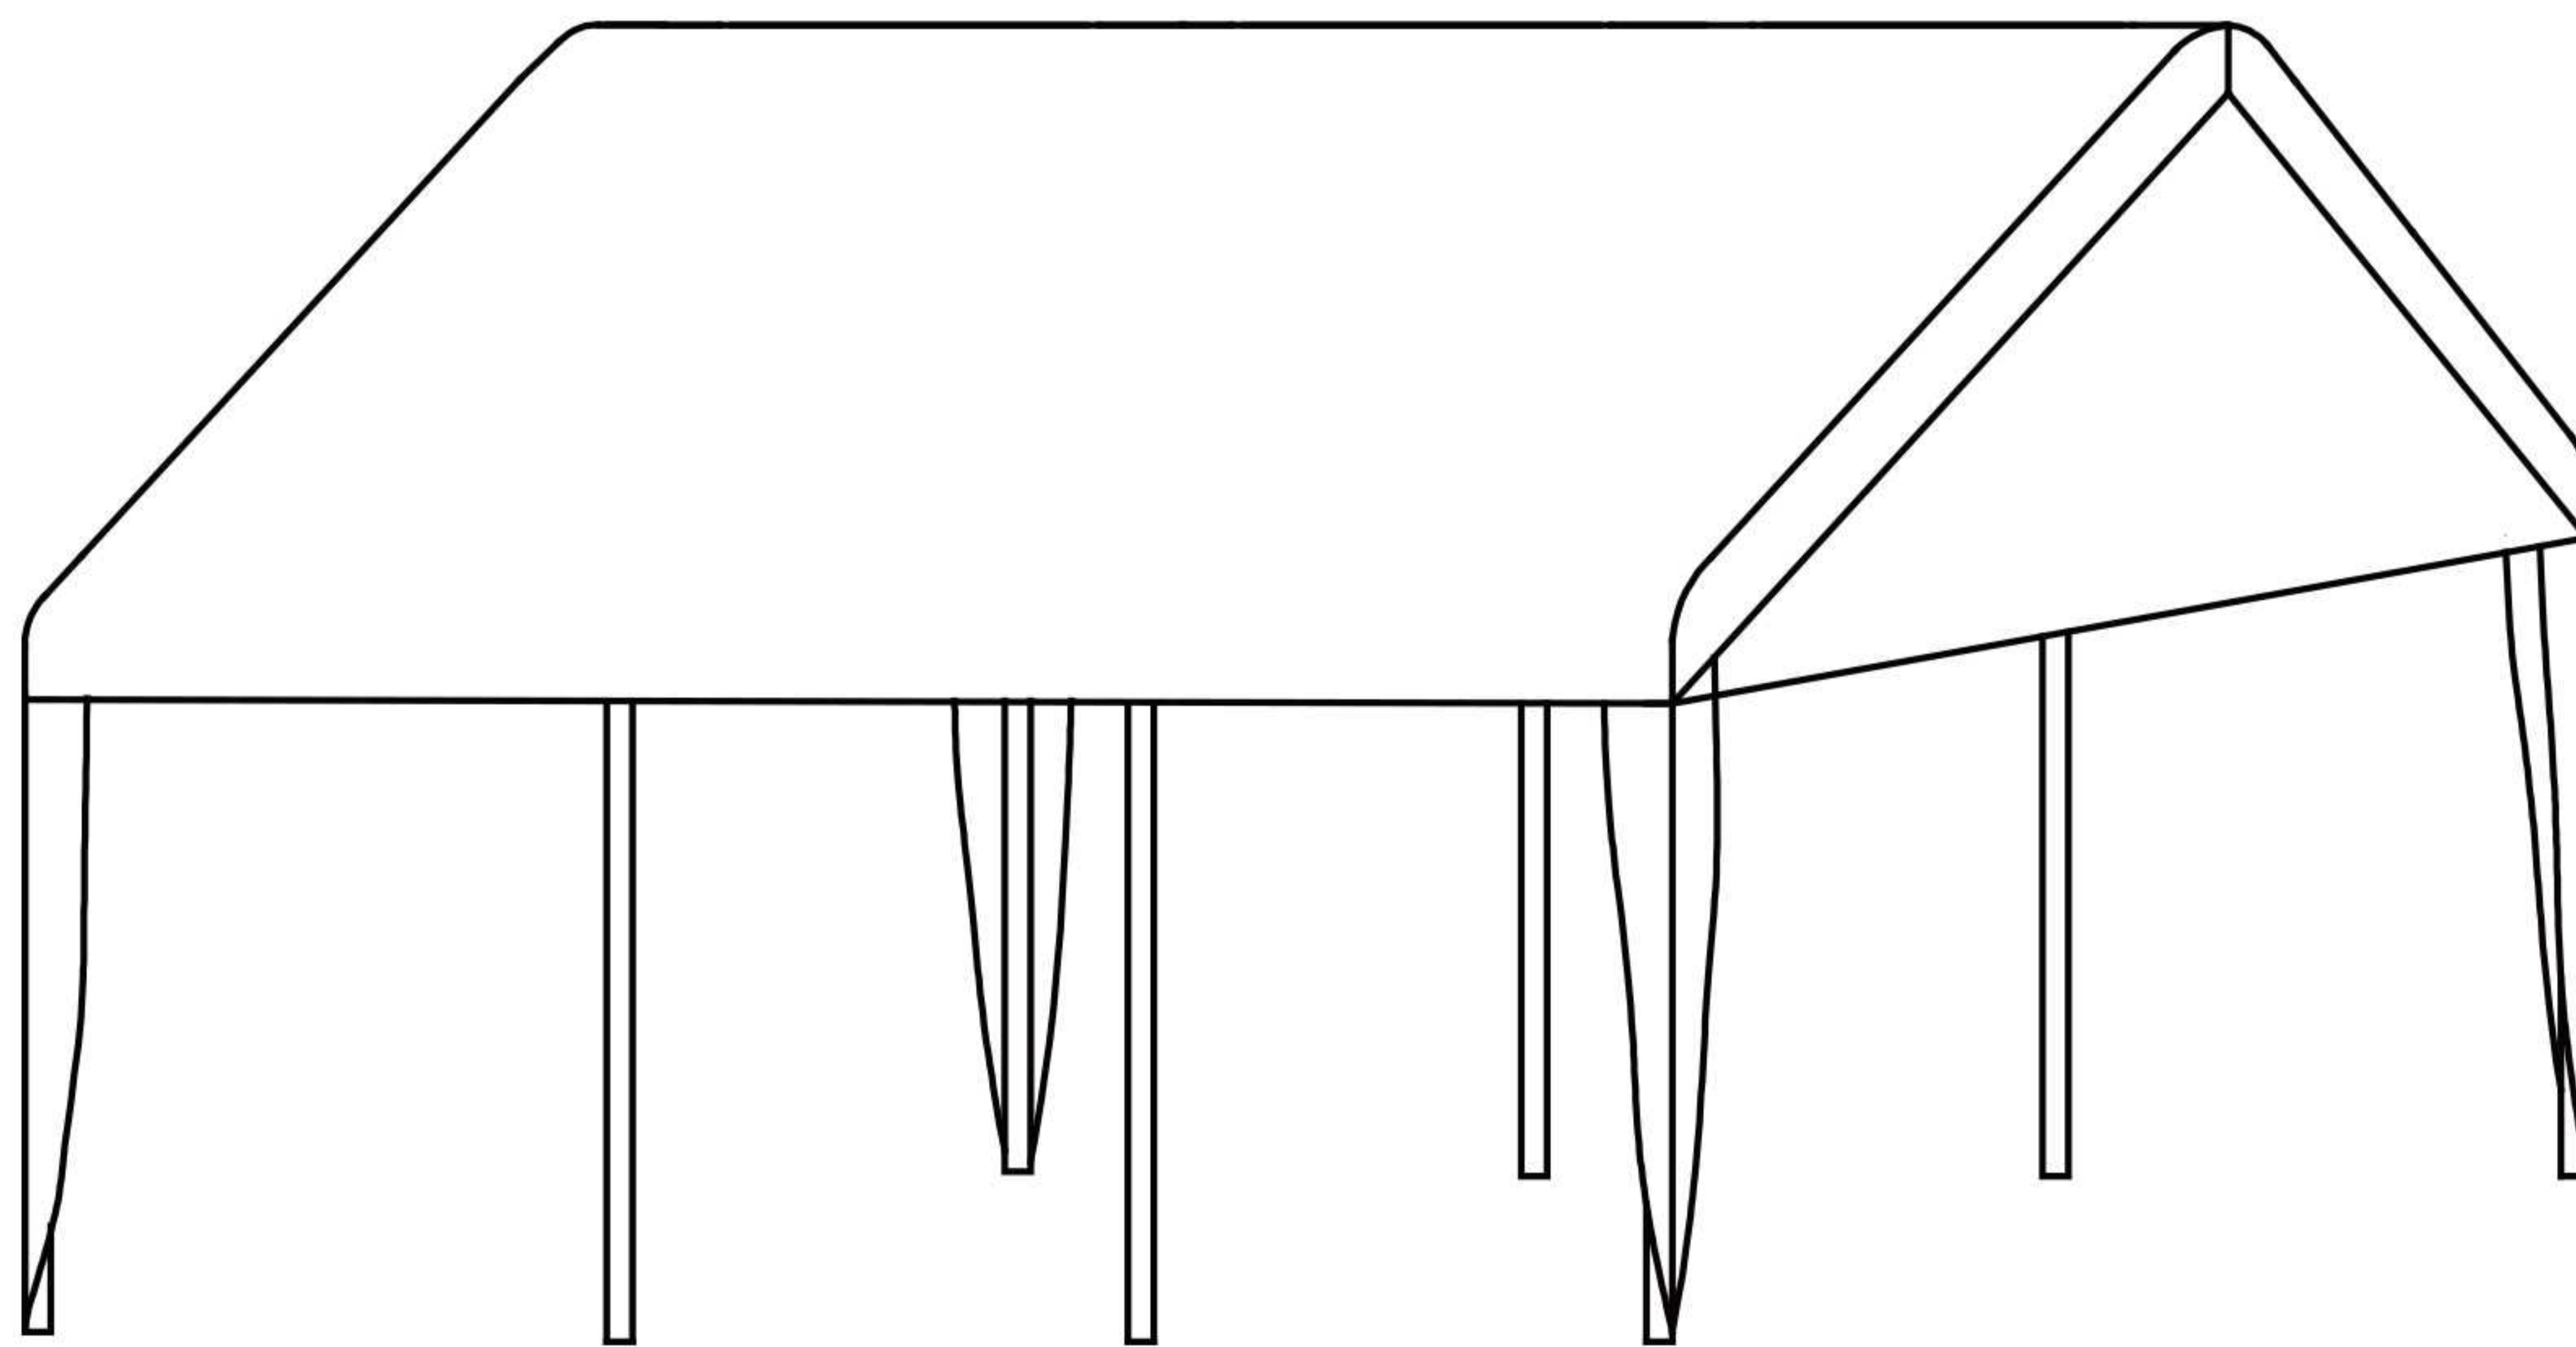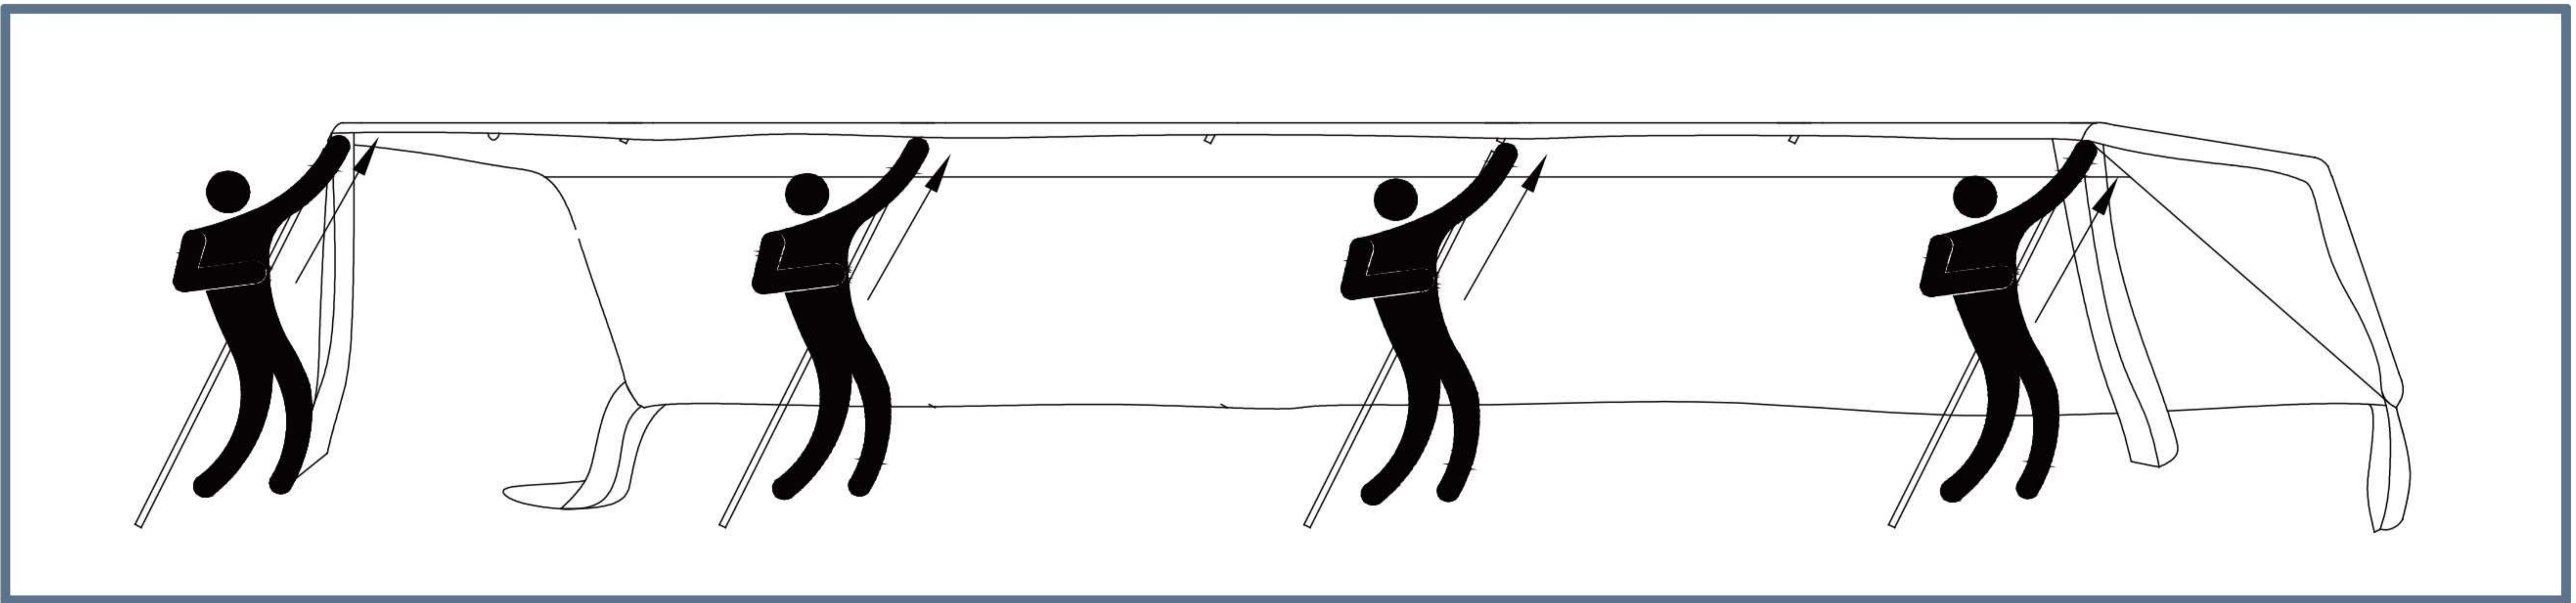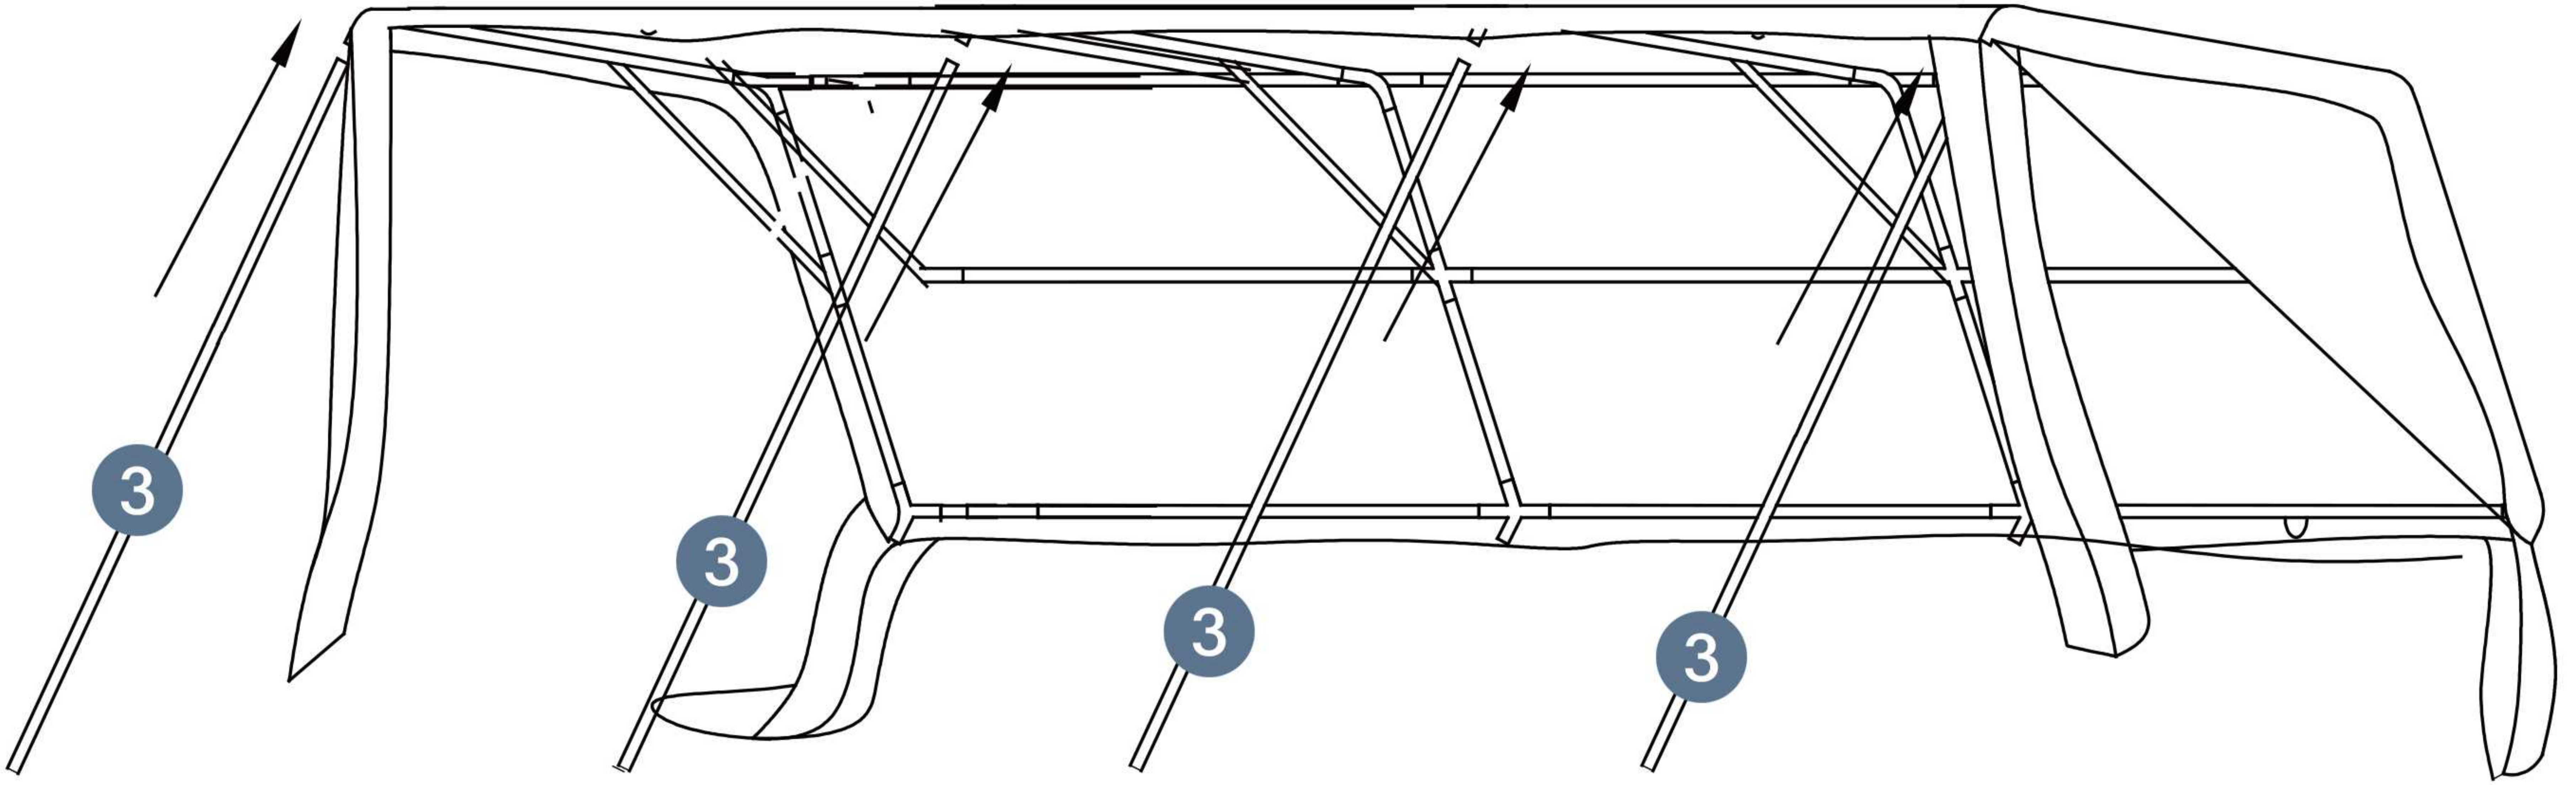

What it looks like after it is set up



# STEP 6

Parts required

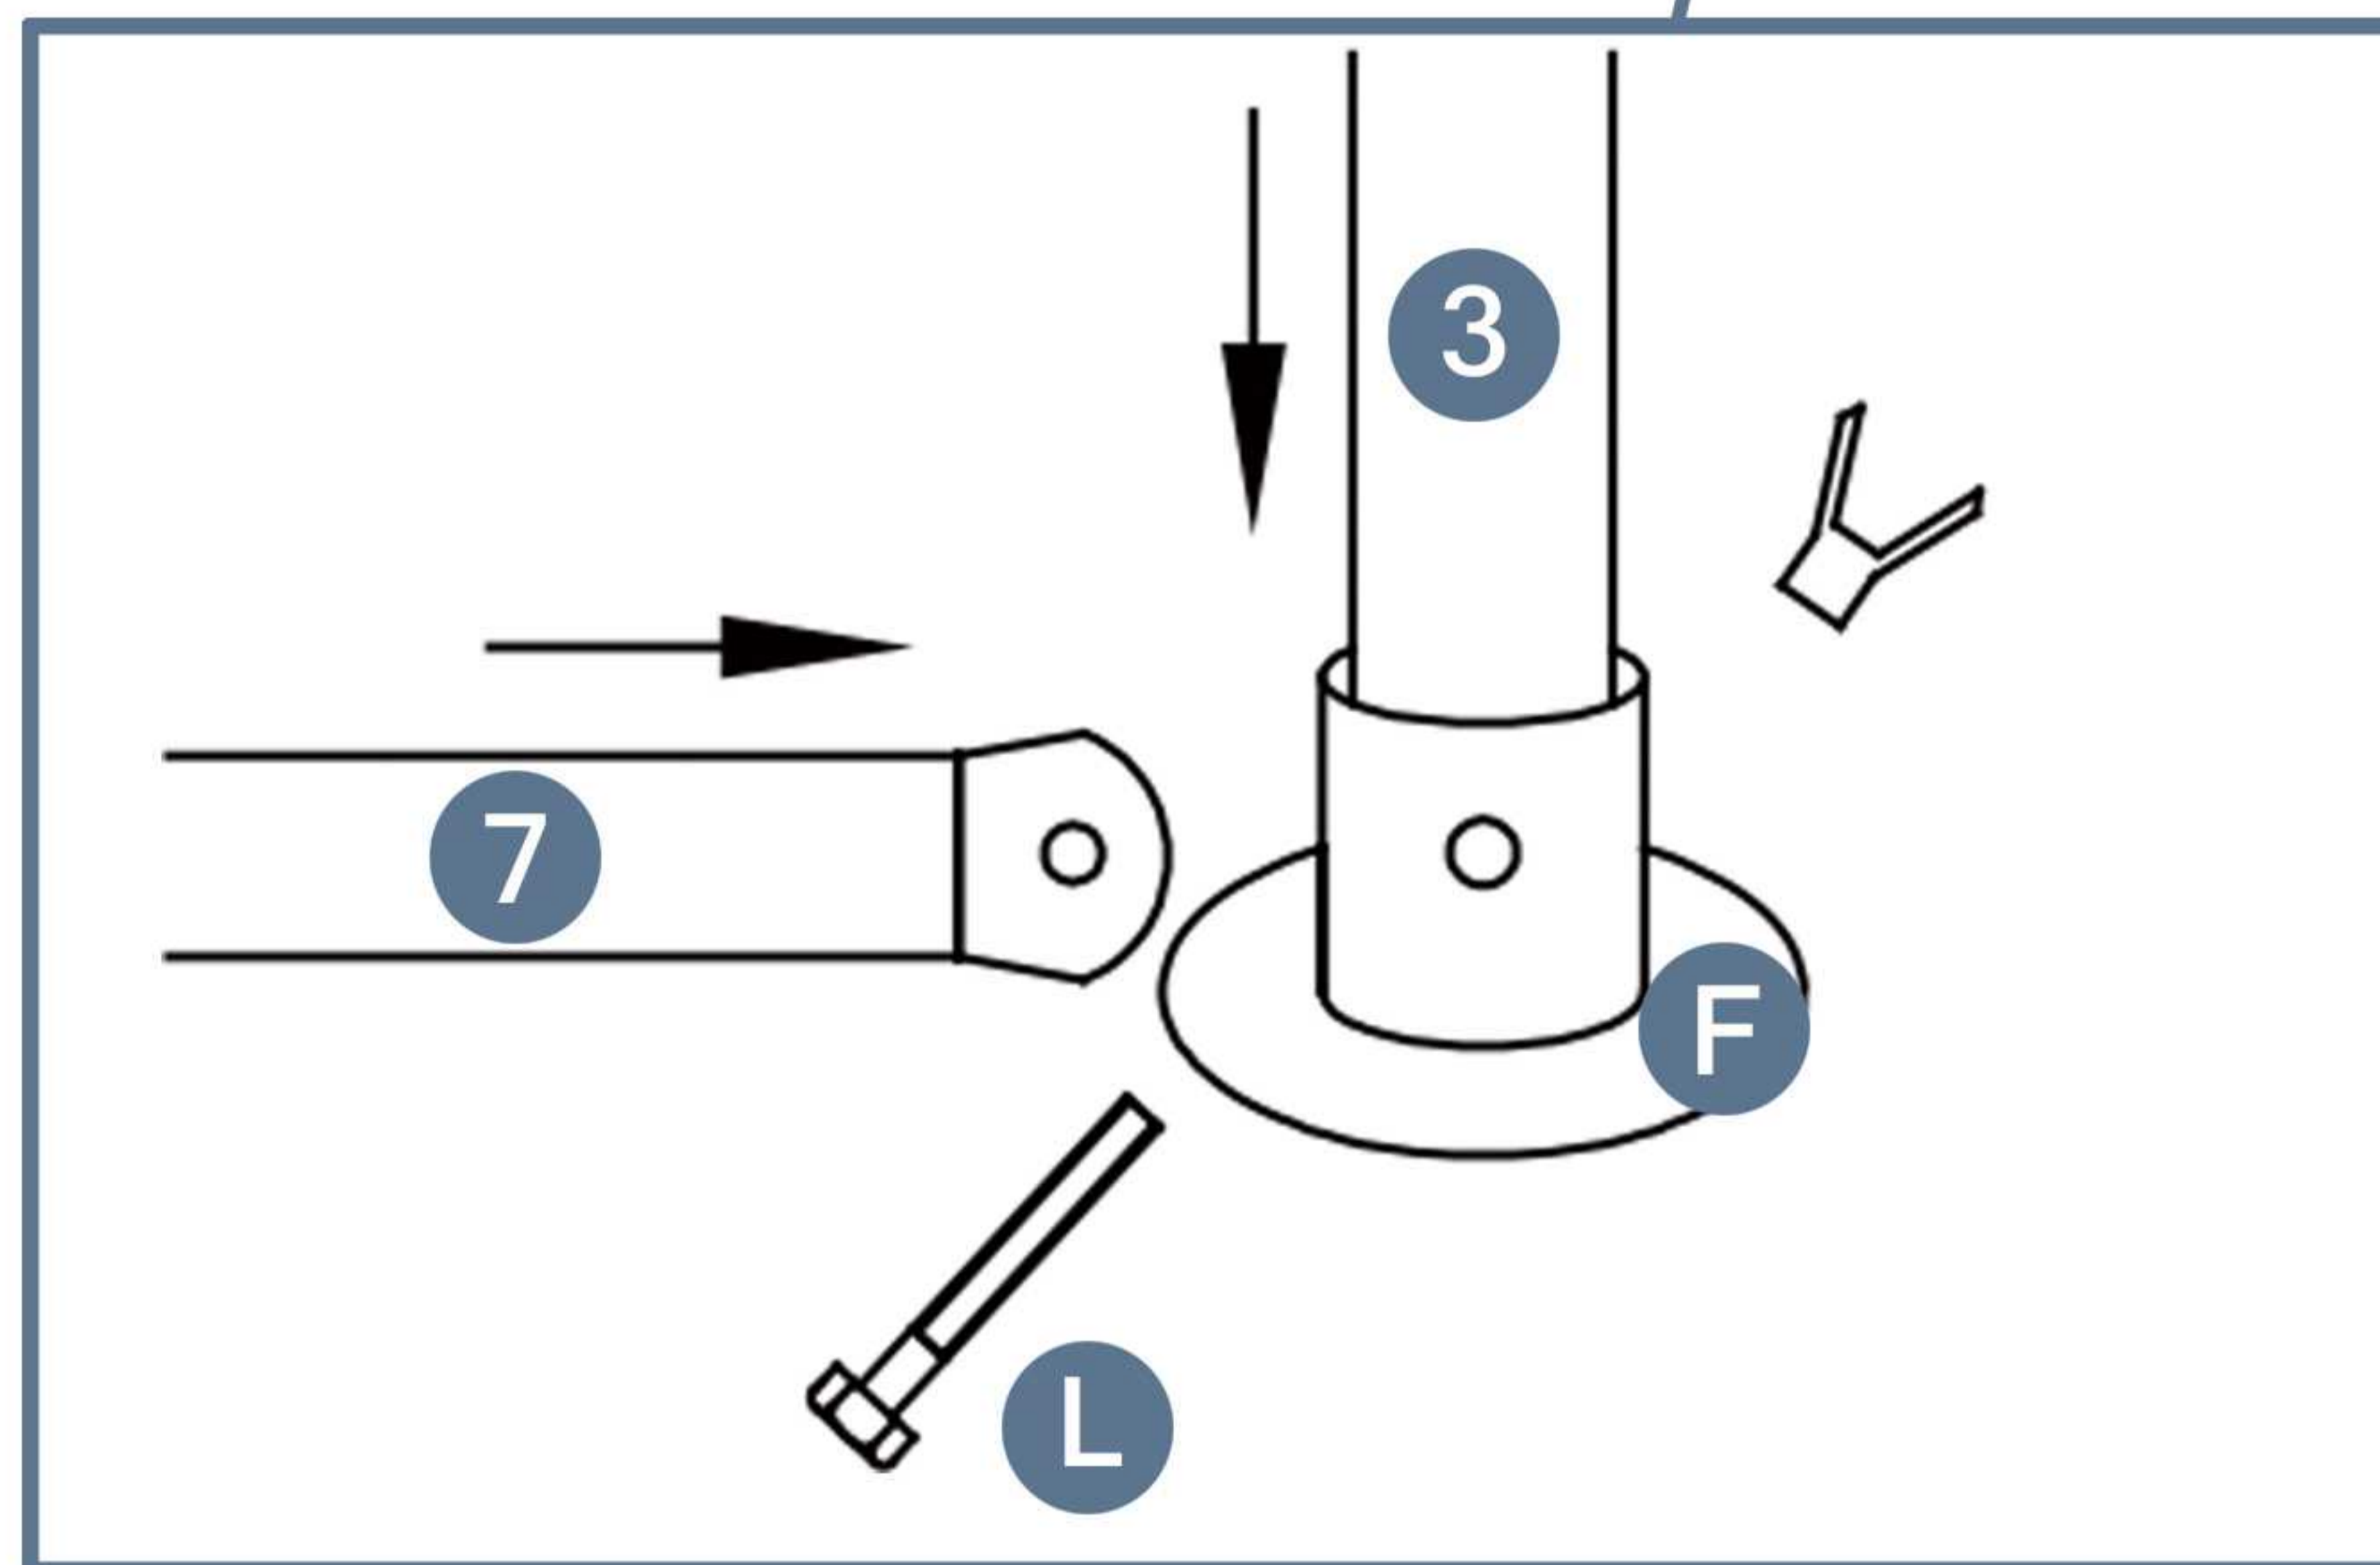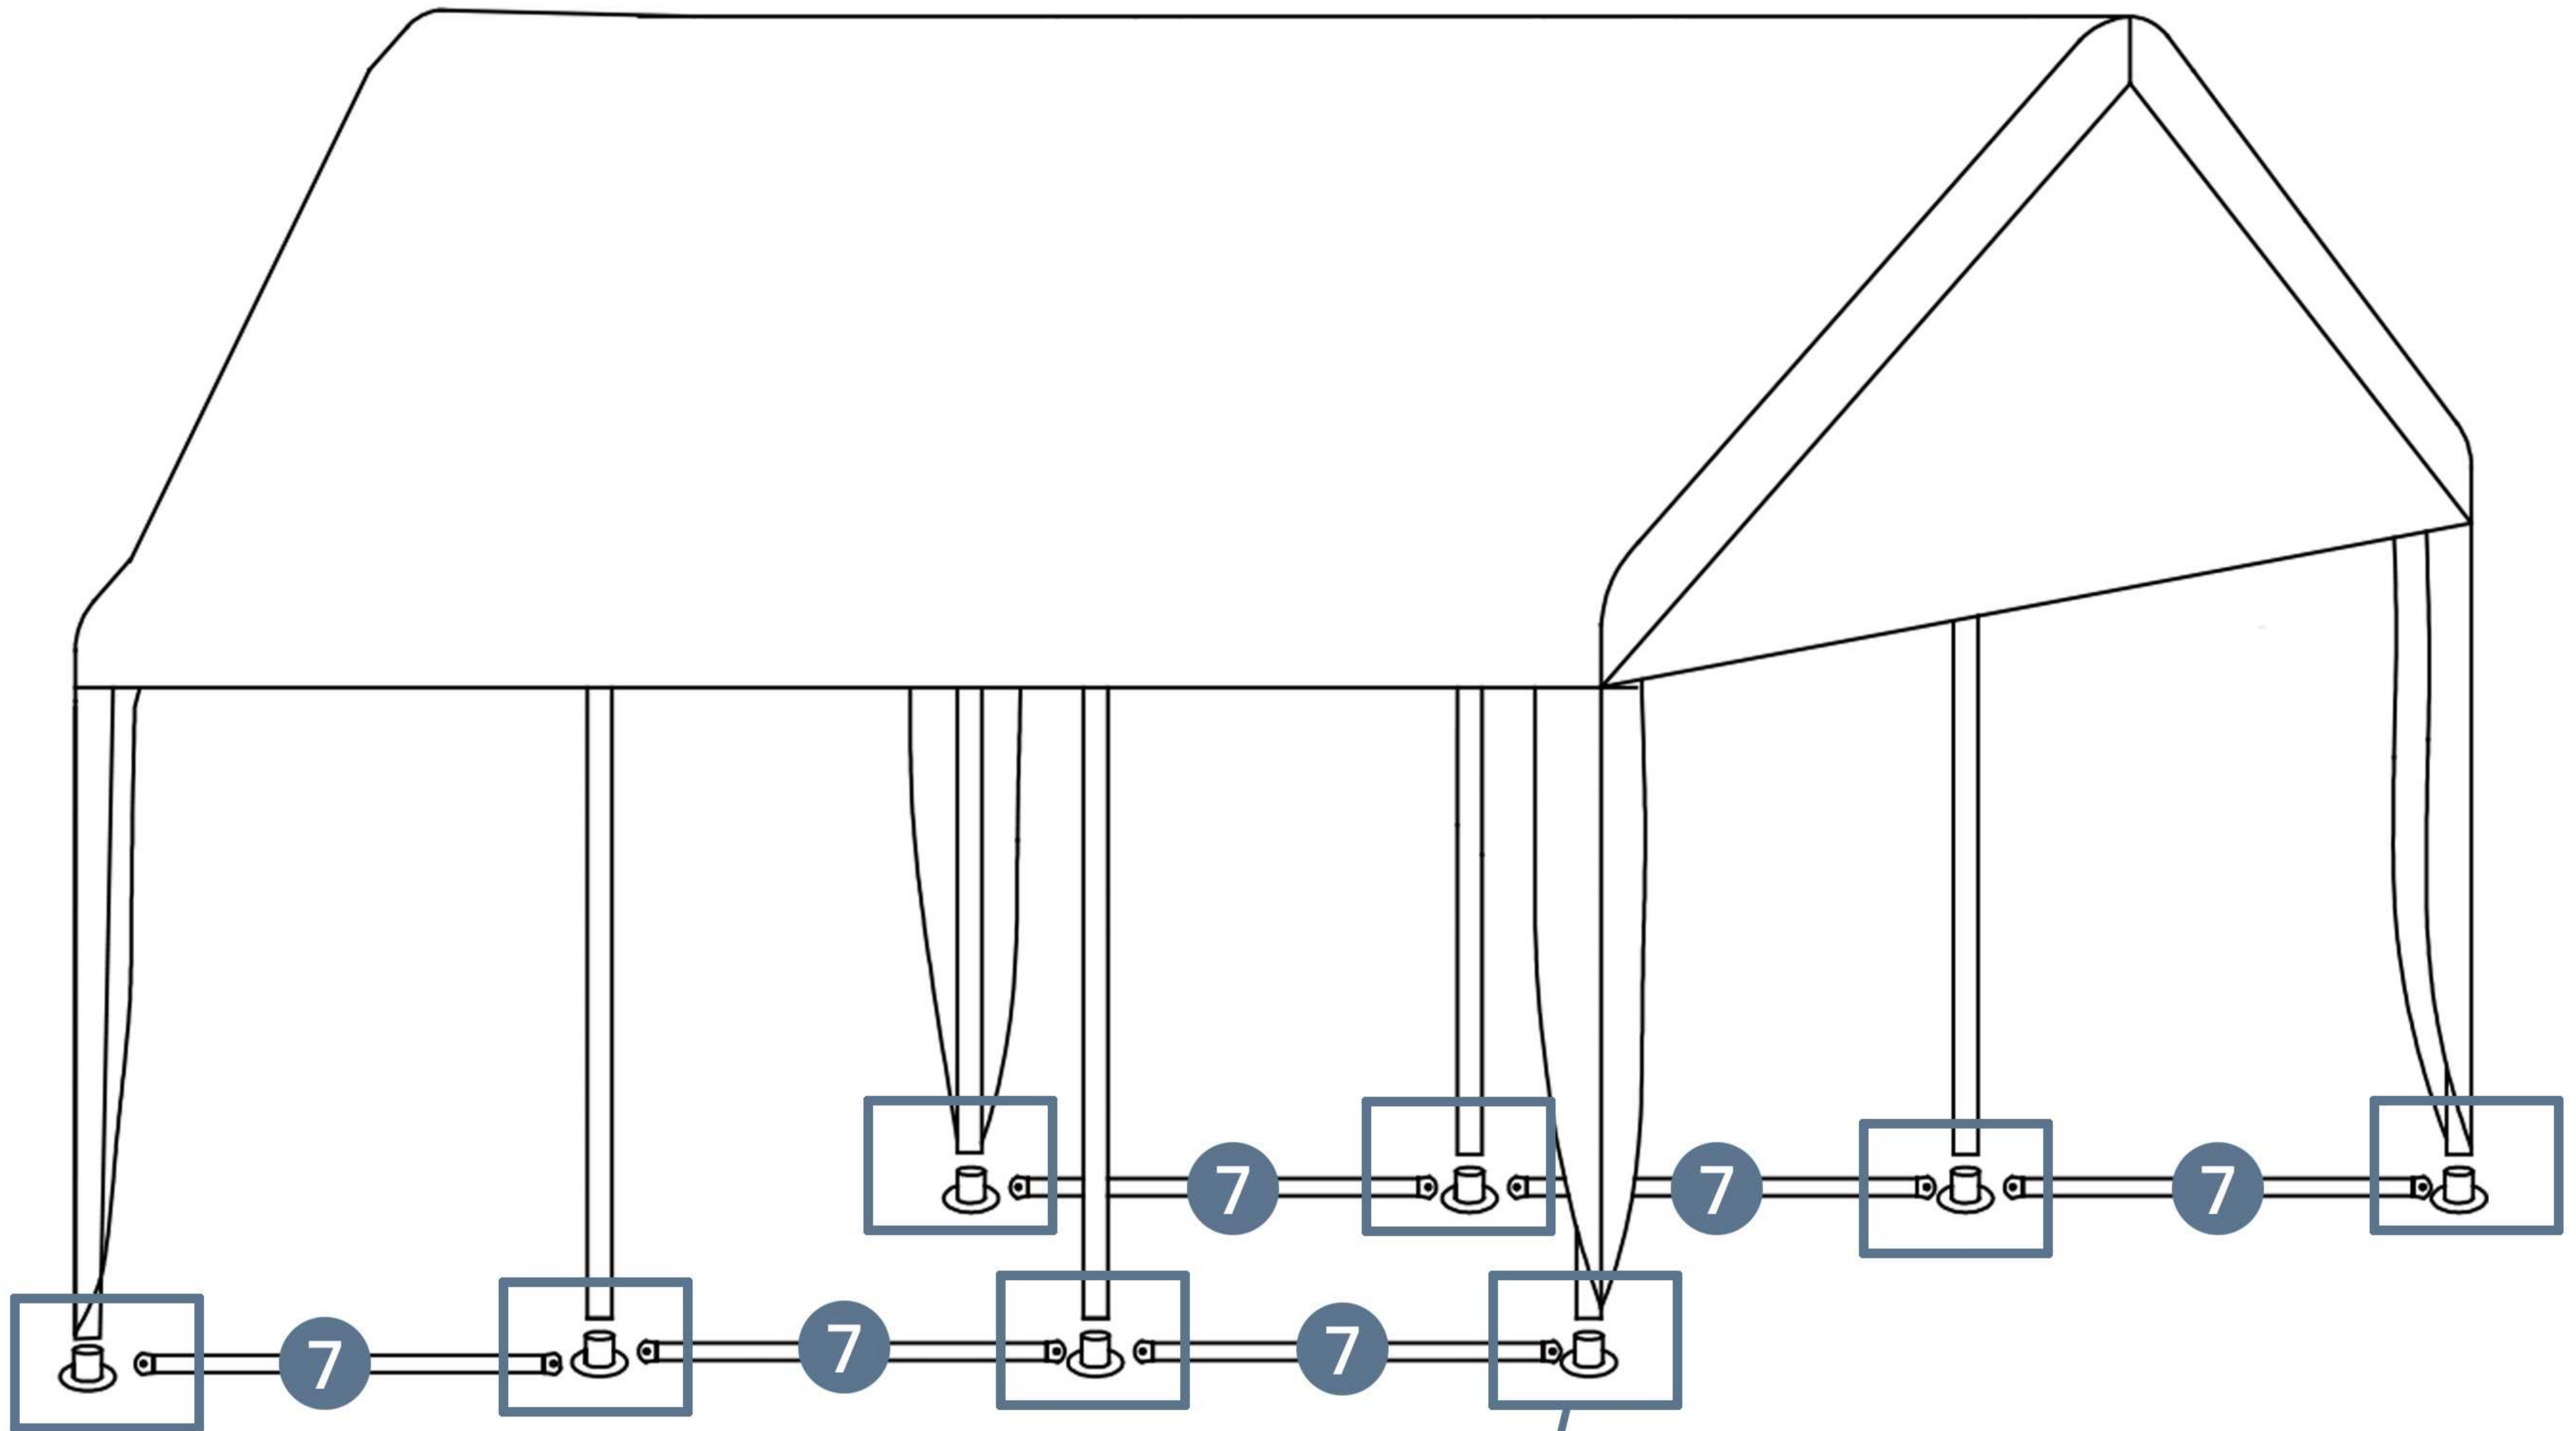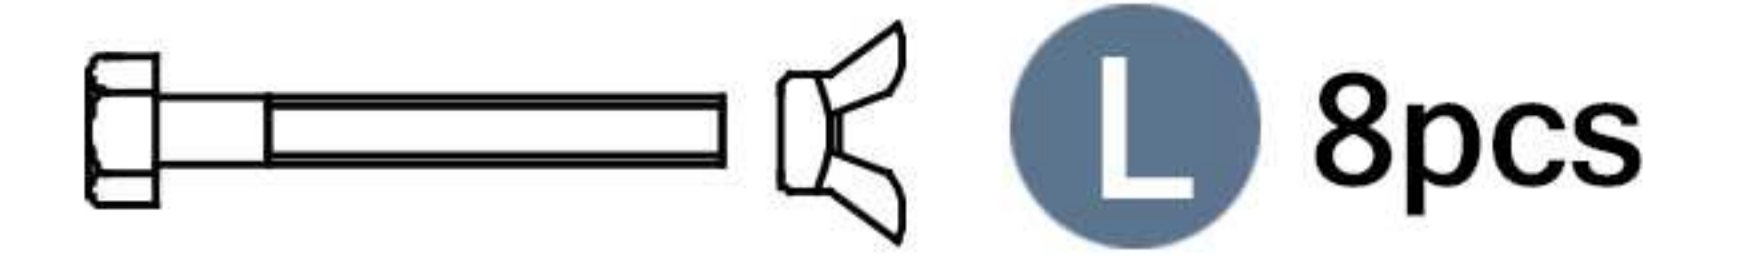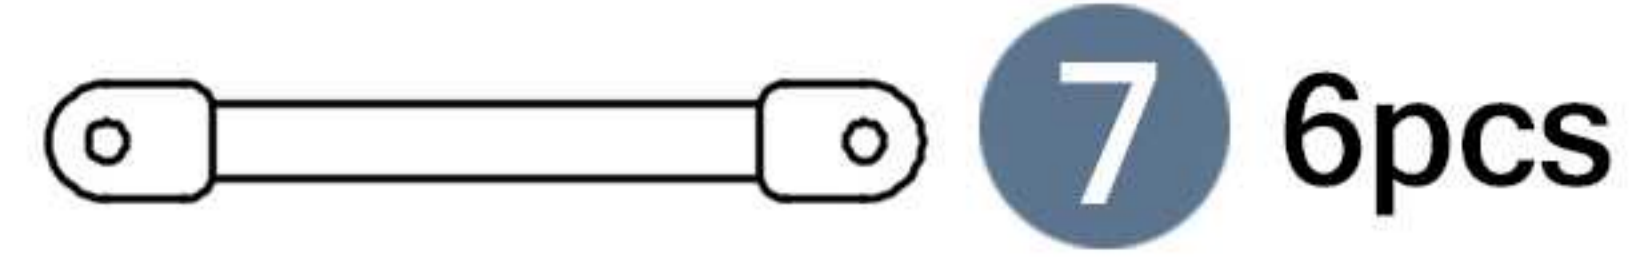

# STEP 7

Parts required

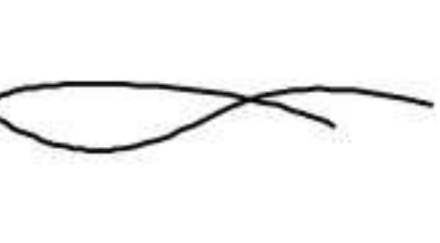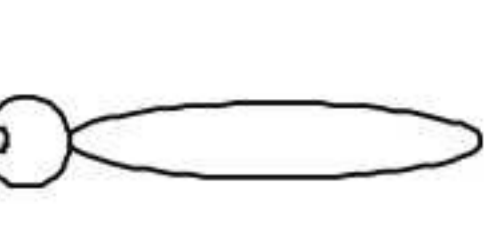-  **N** 14pcs
-  **H** 4pcs
-  **E** 2pcs
-  **O** 4pcs
-  **Q** 2pcs
-  **G** 100pcs
-  **SANDBAG** 4pcs



Please install all the G first, and then install the remaining steps.

