

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com







PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List





PIECE	DESCRIPTION	PICTURE	QUANTITY
A	CUSHION		1X
B	LEG FRAME 1		1X
C	LEG FRAME 2		1X
D	VERTICAL RAIL		2X
E	SHELF FRAME		1X
F	BASE FRAME		1X

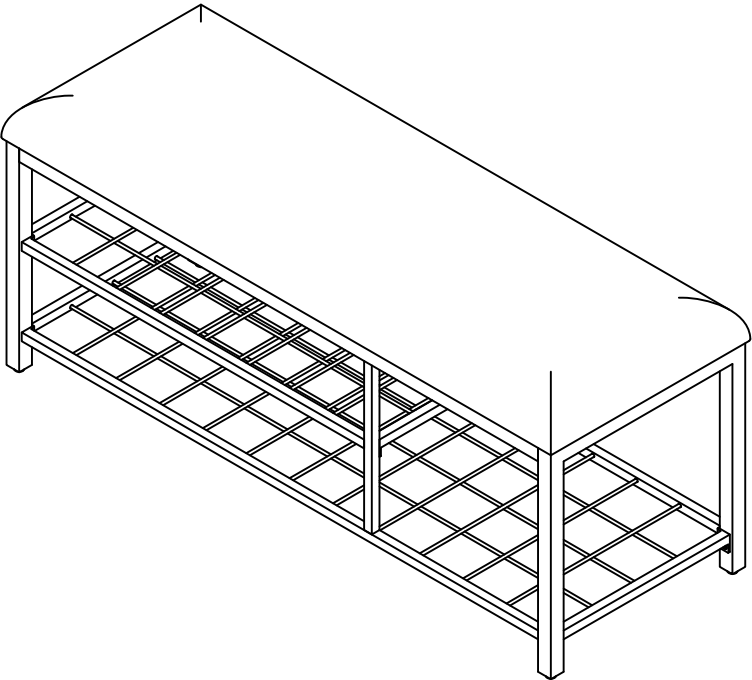

Model# BCH5003
Product Dimensions: 42"W x 15"D x 18"H






⚠ WARNING ⚠
WEIGHT CAPACITY: 300 LBS (SEAT); 40 LBS (SHELF)
WARNING: DO NOT STAND ON THE BENCH
WARNING: DO NOT OVER TORQUE BOLTS

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	BOLT 6 x 1 x 40 MM		6X
HW2	BOLT 6 x 1 x 30 MM		2X
HW3	BOLT 6 x 1 x 15 MM		10X
HW4	ALLEN KEY		1X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

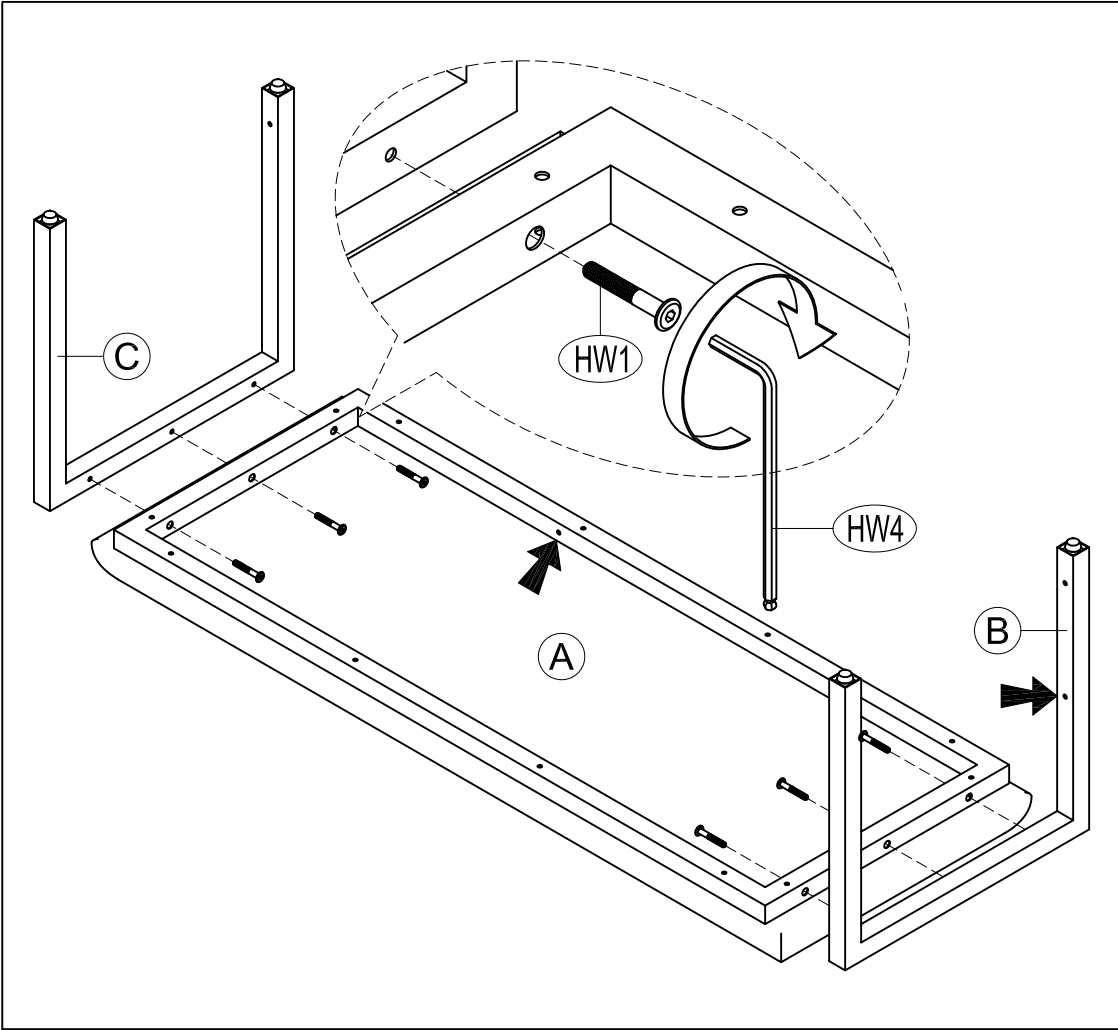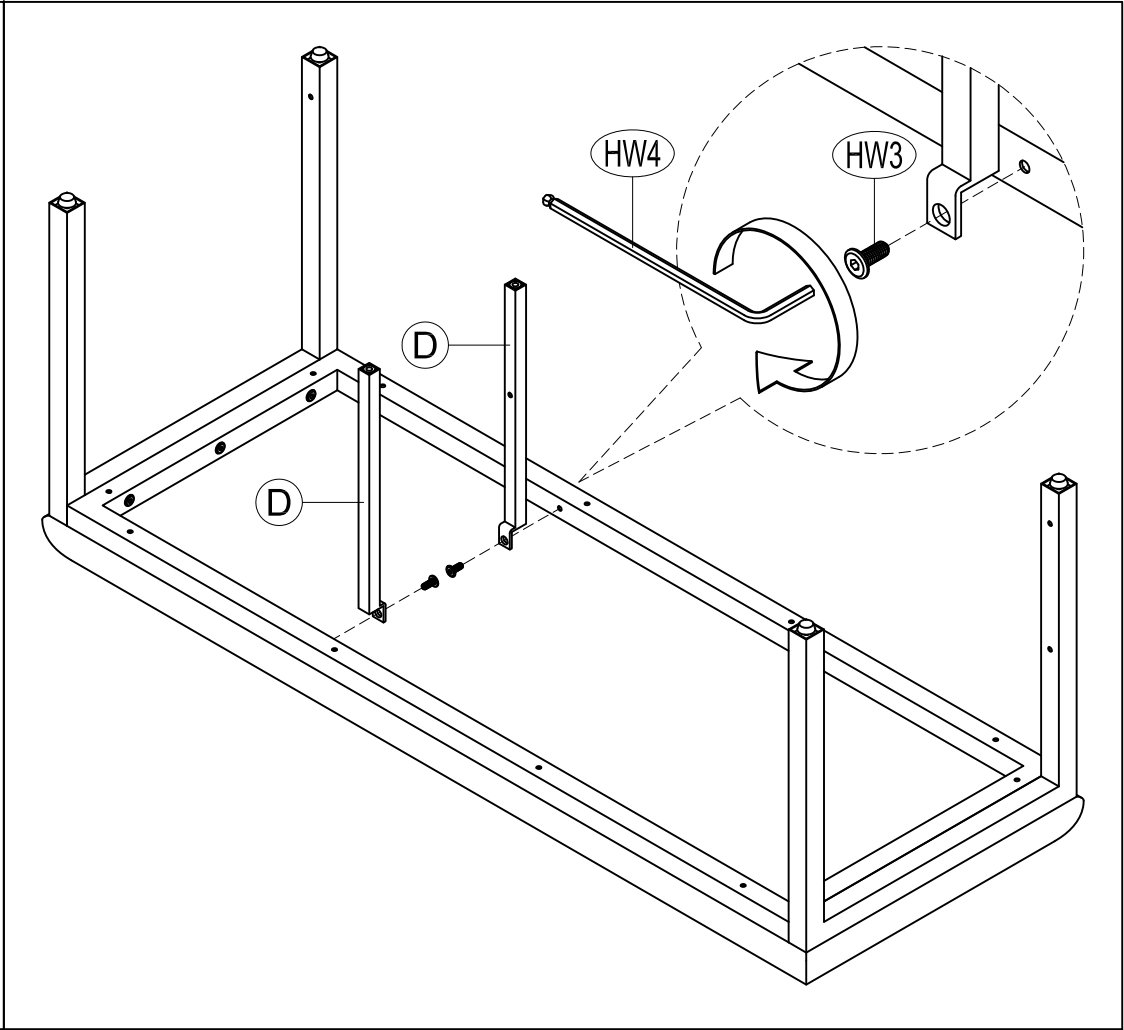
	
<p>STEP 1 ATTACH LEG FRAMES 1 AND 2 (B AND C) TO CUSHION (A) USING BOLTS 40 MM (HW1). TURN BOLTS USING ALLEN KEY (HW4); NOTE: ATTACH BOLTS ONLY HALFWAY THIS TIME.</p>	<p>STEP 2 ATTACH VERTICAL RAILS (D) TO UNIT USING BOLTS 15 MM (HW3). TURN BOLTS USING ALLEN KEY (HW4); NOTE: ATTACH BOLTS ONLY HALFWAY THIS TIME.</p>

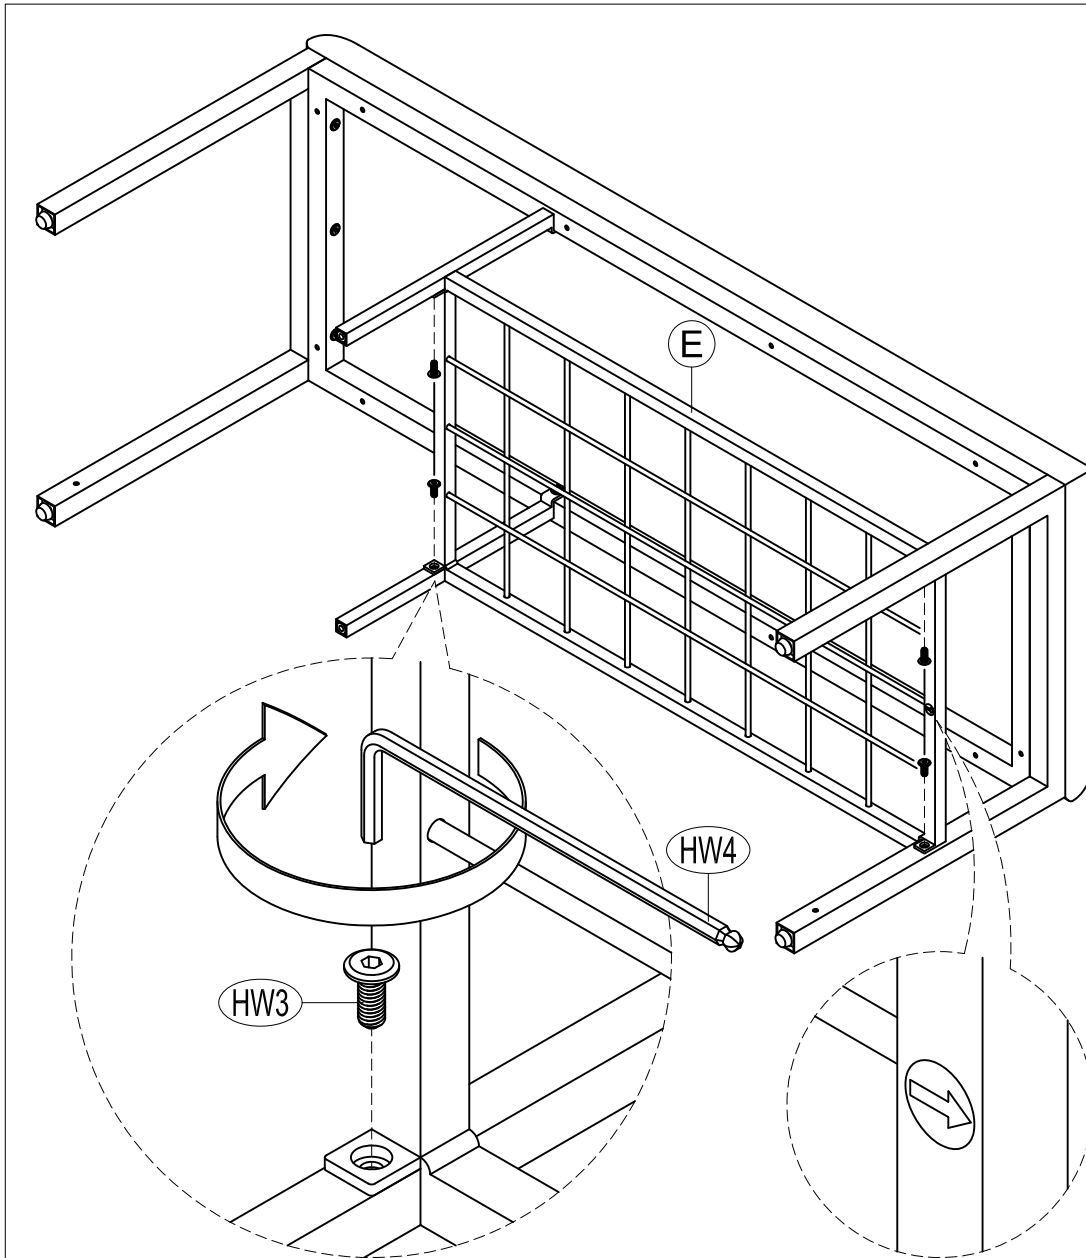


STEP 3 ATTACH SHELF FRAME (E) TO UNIT USING BOLTS 15 MM (HW3). TURN BOLTS USING ALLEN KEY (HW4); NOTE: ATTACH BOLTS ONLY HALFWAY THIS TIME.

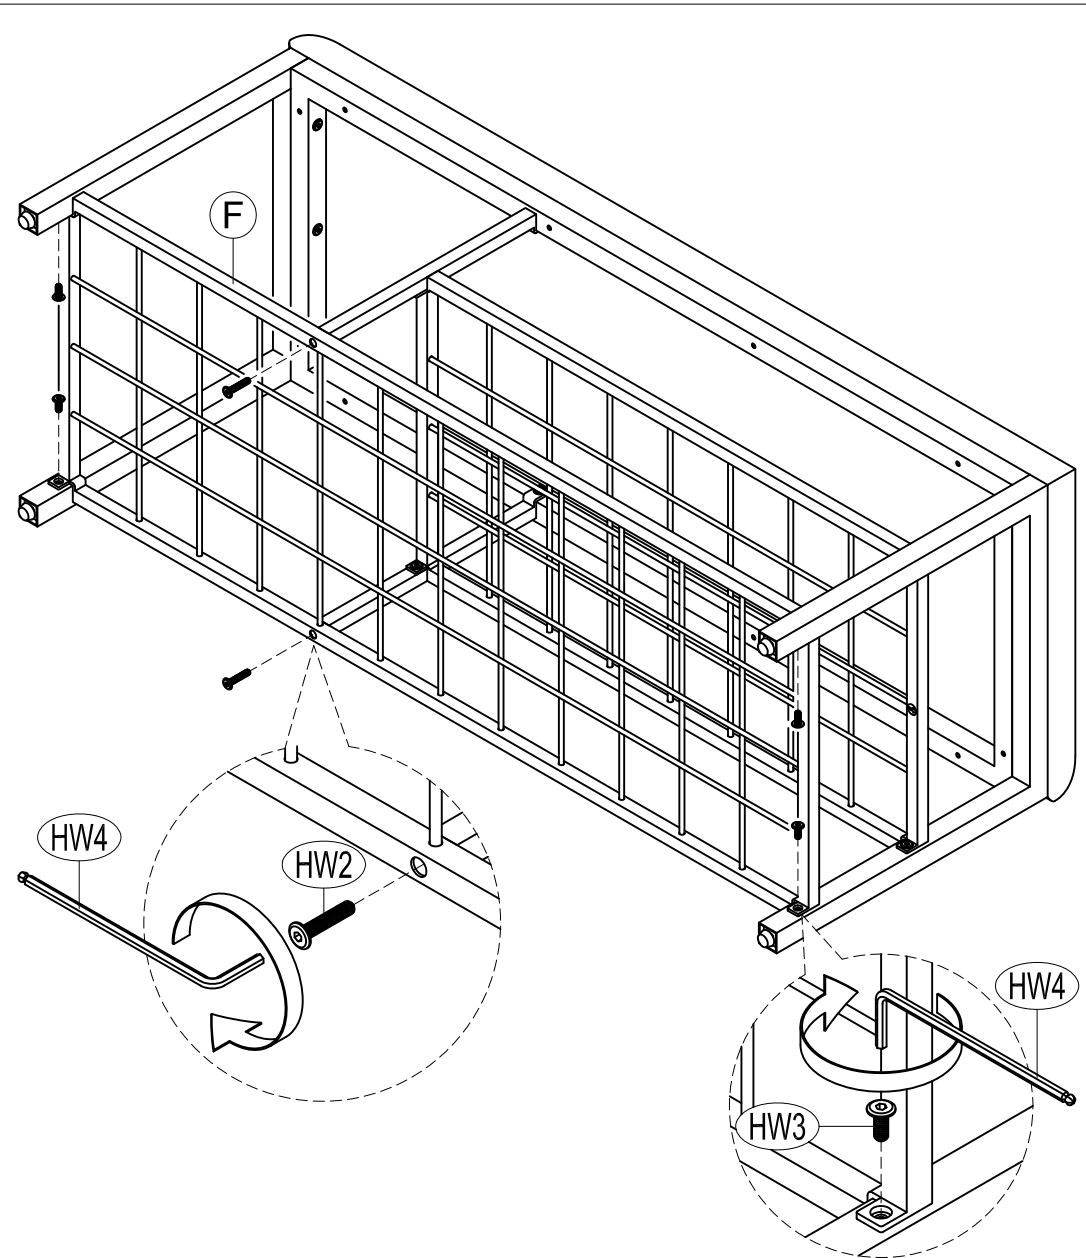

STEP 4 ATTACH BASE FRAME (F) TO UNIT USING BOLTS 30 MM AND 15 MM (HW2 AND HW3). TURN BOLTS USING ALLEN KEY (HW4); NOTE: ATTACH BOLTS ONLY HALFWAY THIS TIME.

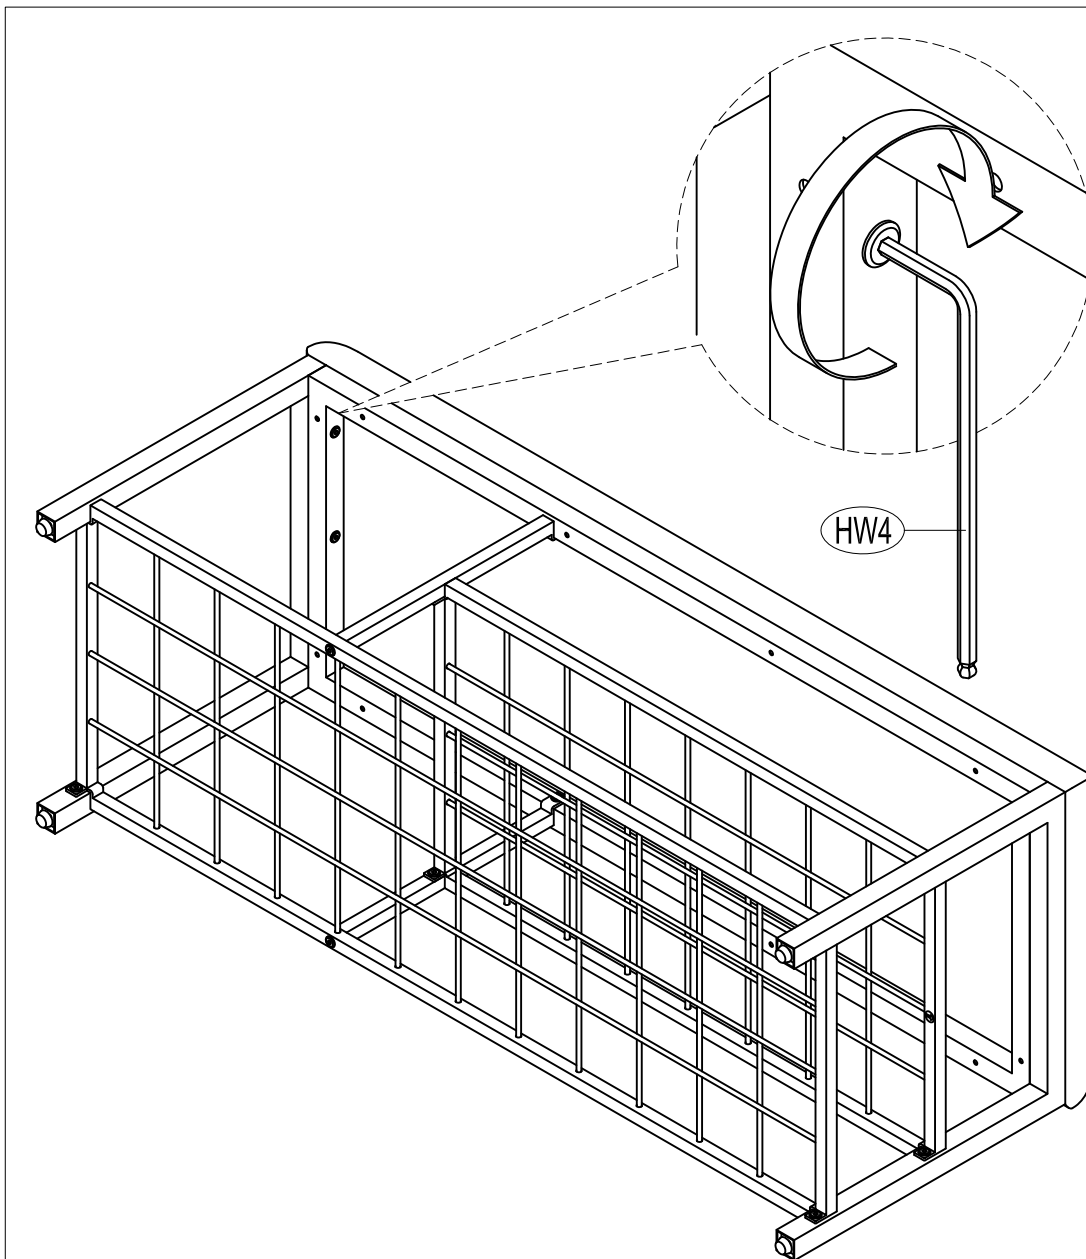

STEP 5 TIGHTEN ALL BOLTS USING ALLEN KEY (HW4); NOTE: TIGHTEN BOLTS SEQUENTIALLY STARTING FROM STEP 1.

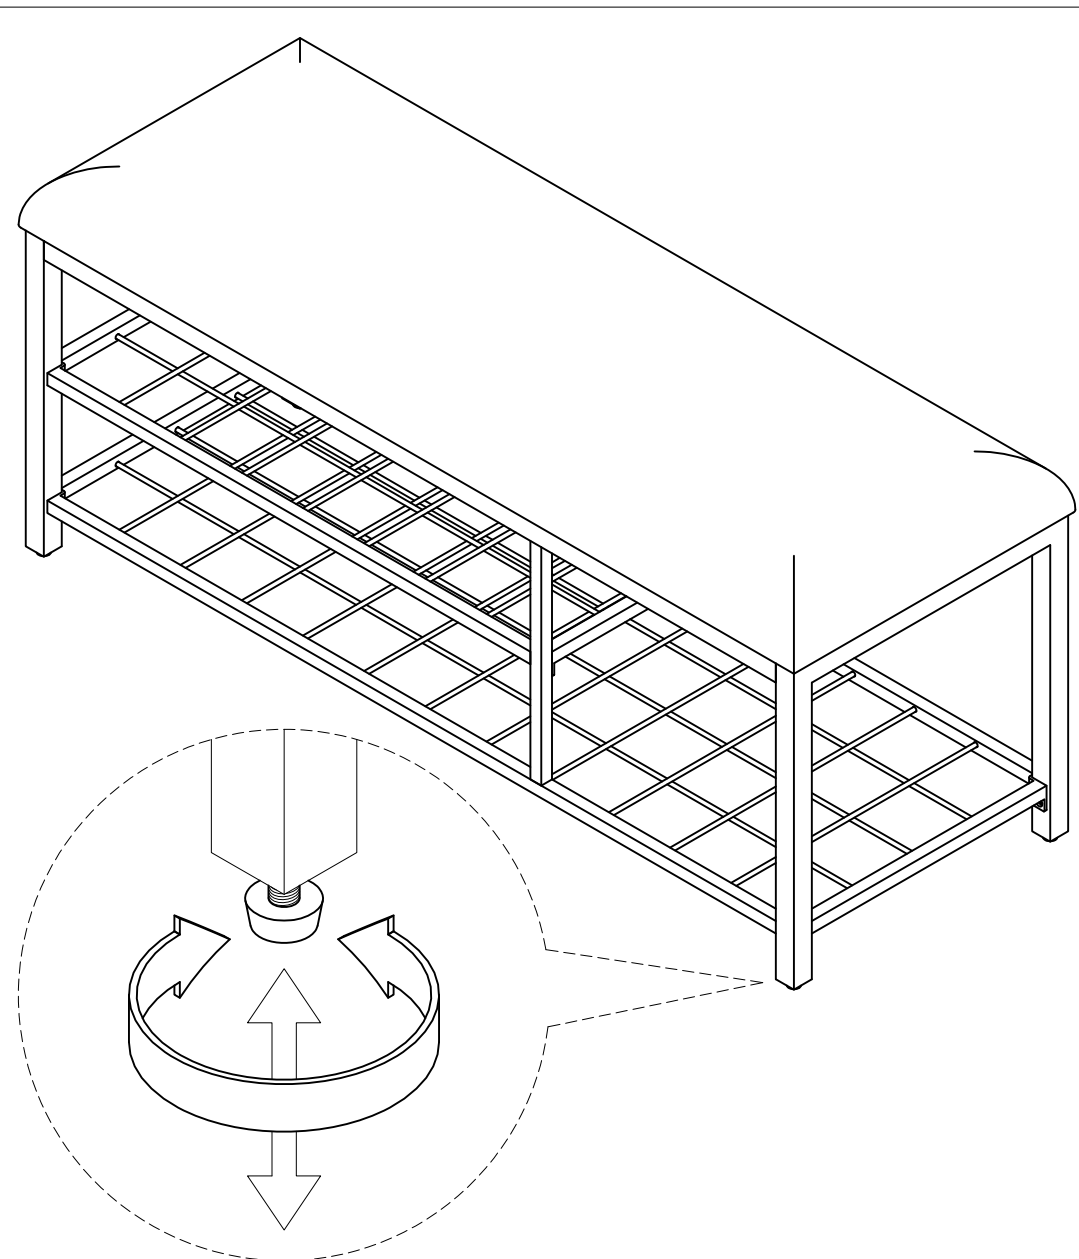

STEP 6 ADJUST THE ADJUSTER BOLT THAT HAS ALREADY ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT