



SELF-ADHESIVE • ROUND • WALLPAPER

EASY INSTALLATION & ASSEMBLY

7 STEPS TO MAKE IT

1) Delivery safety margin.

We know that packages are thrill-seekers on their journey across the ocean, hopping between courier trucks, soaring on airplanes, and even sailing on ships!

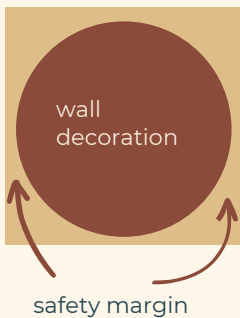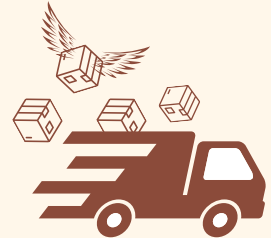

That is why each of the prints we send comes with its very own 'safety margin.' Think of it as a protective barrier, just in case the package gets a bit carried away and gives your print's edges a playful squeeze. So, even if your package had a whirlwind adventure, your wallpaper decoration will still be ready to stick up and transform your space into a jaw-dropping masterpiece!

2) What about the wall?

Freshly plastered, freshly primed, or painted walls need their own time to dry and strut their stuff for about three weeks. Your wall should be smooth, dry, and clean. Our self-adhesive decorations prefer not to mingle with ceramic, latex, stain-resistant, washable paints, or any surfaces with commitment issues, as it might (though not necessarily) cause the decorations to lose their grip. And we do not want it.



clean



dry

FREE

latex/satin
free



3) Temperature.

It is best to keep your room temperature dancing between +18°C and +25°C, with wall humidity staying below 12% during the installation of the wallpaper. Wallpapers are intended for interiors at room temperature.



4) Better Together.

It's always more fun to team up with a buddy when applying the wallpaper, but solo missions are totally doable too. Let's dive in, shall we?

SELF-ADHESIVE • ROUND • WALLPAPER

EASY INSTALLATION & ASSEMBLY

7 STEPS TO MAKE IT




5) Find the perfect place.

Unroll the wallpaper on a clean surface and inspect it for any manufacturing defects before applying. Hold up the print against the wall to make sure you've found the perfect place for it.

6) Start with a few centimeters.


Peel back a few centimeters of the top part of the wallpaper and gently stick it to the wall. Make sure you do it straight. Now, the wallpaper is attached to the wall on those few centimeters.

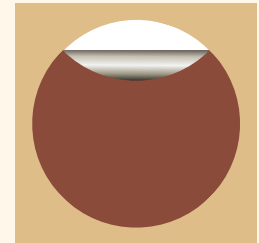

7) Peel and stick in stages.

Gradually peel off the remaining backing from the bottom, while using the included squeegee to lovingly attach the wallpaper to the wall from the front. Take your time.

Peel and stick the wallpaper in stages, a few centimeters after a few centimeters. Be careful when using the squeegee to avoid damaging the material. If air bubbles appear along the way, peel off that section of the wallpaper and reapply.

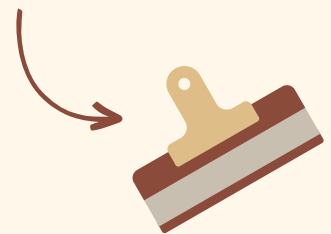


AND THAT IS ALL!



GREAT WORK!

SIZES / MATERIAL / NOTES

AVAILABLE IN TWO SIZES:

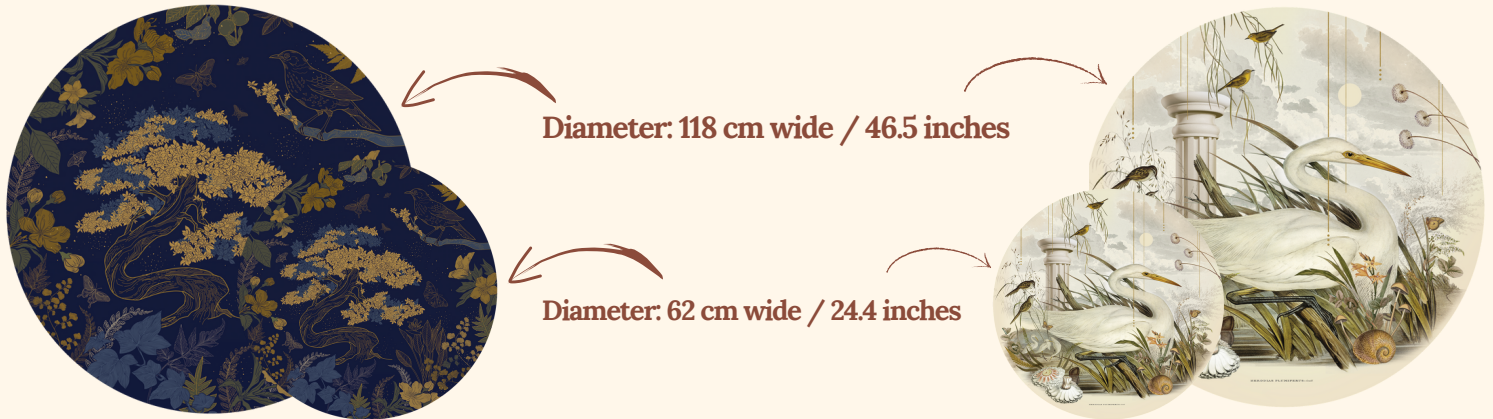

PREMIUM MATERIAL

They are printed on "LINEN" structure wallpaper material to give your wall Premium Look



PLEASE KEEP IN MIND:

- It's important to check the size before placing your order.
- The appearance of the product may vary depending on the lighting conditions (such as natural daylight or warm or cold artificial light), as well as your personal monitor settings and preferences.
- Our wallpaper should not be applied to walls covered with Teflon, latex, or other satin-resistant paints or on wet walls.
- For indoor decoration only, for interiors where room temperature is maintained.