
Aura Lift - Up Storage Bed - King

Assembly Sheet

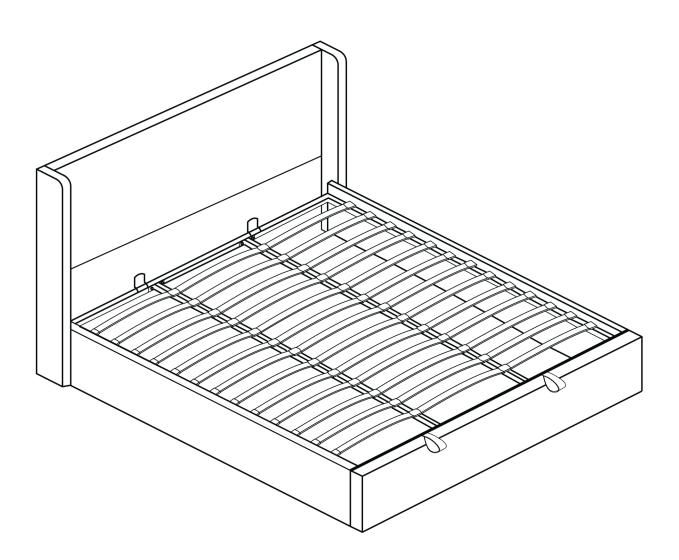







NO power tools required.



Time: 2 hours



Use a damp cloth to clean.



Level of difficulty: 3/4

ASSEMBLY INSTRUCTIONS

Thank you for making a purchase. The goal of this assembly sheet is to help you assemble the product in a safe and accurate way. Kindly follow all the instructions carefully to ensure a safe and accurate assembly process.

A few important things to note:


- Please do not use a power tool to assemble this product. Using one may hinder and/or damage the item and will invalidate any claims for warranty. Depending
- on the amount of use this product receives, it may be recommended to tighten up the fixings from time to time. This is completely normal! Do not drag the bed.
- Always lift with at least two people to avoid injury or damage.

PARTS INVENTORY			
ID	DESCRIPTION	QTY	
A	M8*40 BOLT	46	
B	M8*65 BOLT	6	
0	FLAT WASHER M6	8	
D	SPRING WASHER	4	
	FLAT WASHER M8	58	
	NUT M8	26	
6	M6*10 BOLT	8	
	ALLEN KEY	1	
•	OPEN SPANNER	1	
1	PROTECTIVE PAD 🔷	4	


	PARTS INVENTORY				
ID	DESCRIPTION		QTY		
K	MATTRESS STOPPER				
•	GAS LIFT RIBBON		2		
MP	ROTECTIVE PAD		3		
N	GAP NUT		8		
0	M8*25 BOLT	(9)	14		

	PARTS INVENTORY	
ID	DESCRIPTION	QTY
1	Headboard	1
2	Footboard	1
3	Left Hydraulic	1
4	Right Hydraulic	1
5	Gas Lift	2
6	Left Side Rail	1
7	Right Side Rail	1
8	Wood Slat	45
9	Single Close Ended Clip	30
10	Double Open-Ended Clip 💭	30
•	Right and Left Metal Frame	2

	PARTS INVENTORY			
ID	DESCRIPTION	QTY		
12	Up and Down Metal Frame	2		
13	Side Rail Connecter	2		
14	Center Frame	2		
15	Center Floating Leg	4		
16	Headboard Back Non-woven Cloth	1		
17	Corner Bracket	2		
18	Bottom Non-woven Cloth	1		
19	Footboard Middle Bracket	1		
20	Left Headboard Wing	1		
21	Right Headboard Wing	1		

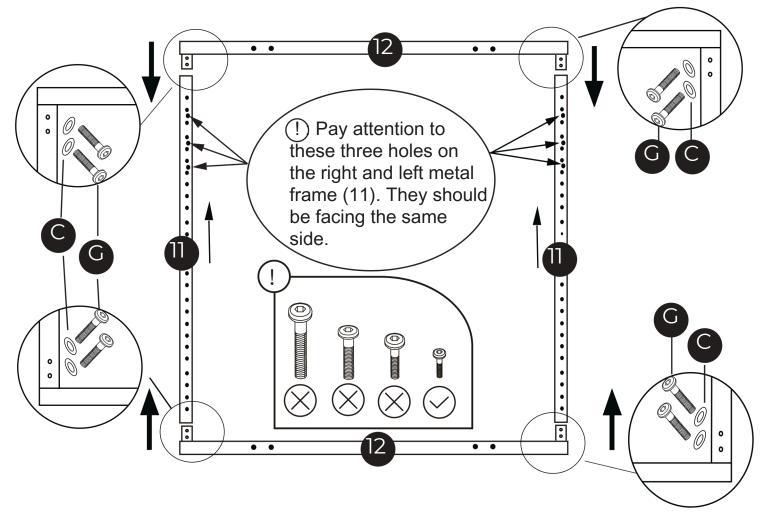

Step 1: Attach parts 11 and 12 using hardware C and G.

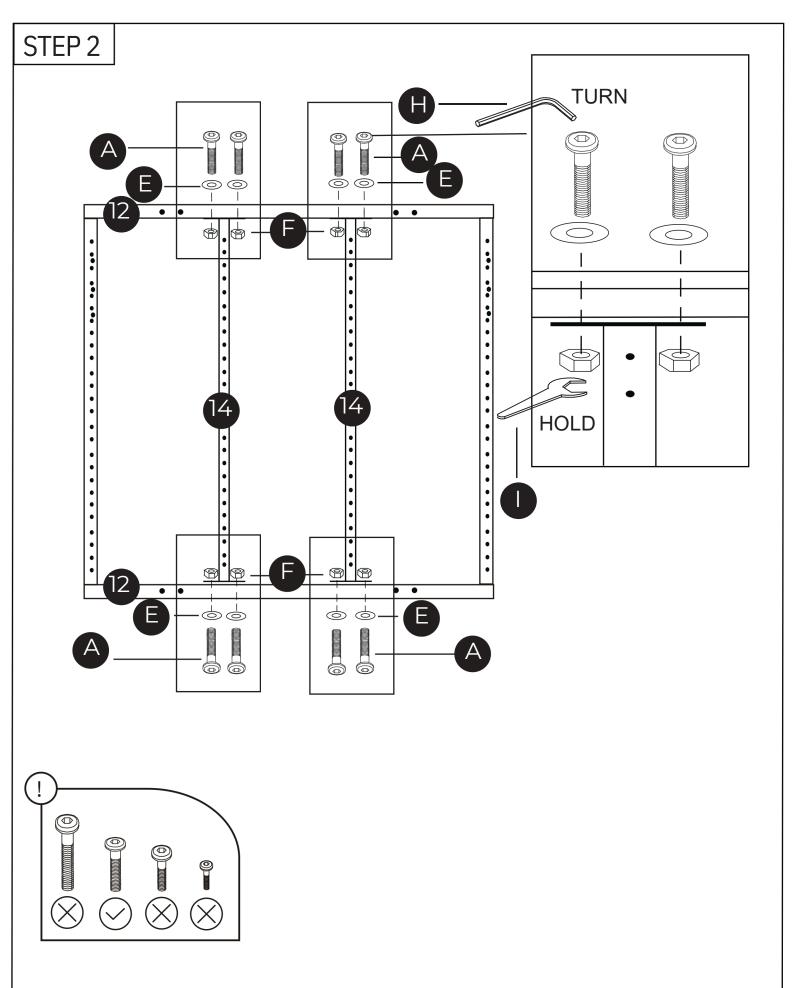


Step 2: Attach part 14 to both sides of part12, using hardware A, E and F.


Step 3:Attach the support legs (15) to the holes in part 14 as shown in the photo, using hardware A, E and F.




Do not fully open the adjustable part of the support legs. Please leave at least 1-2cm of space between the legs and the floor.

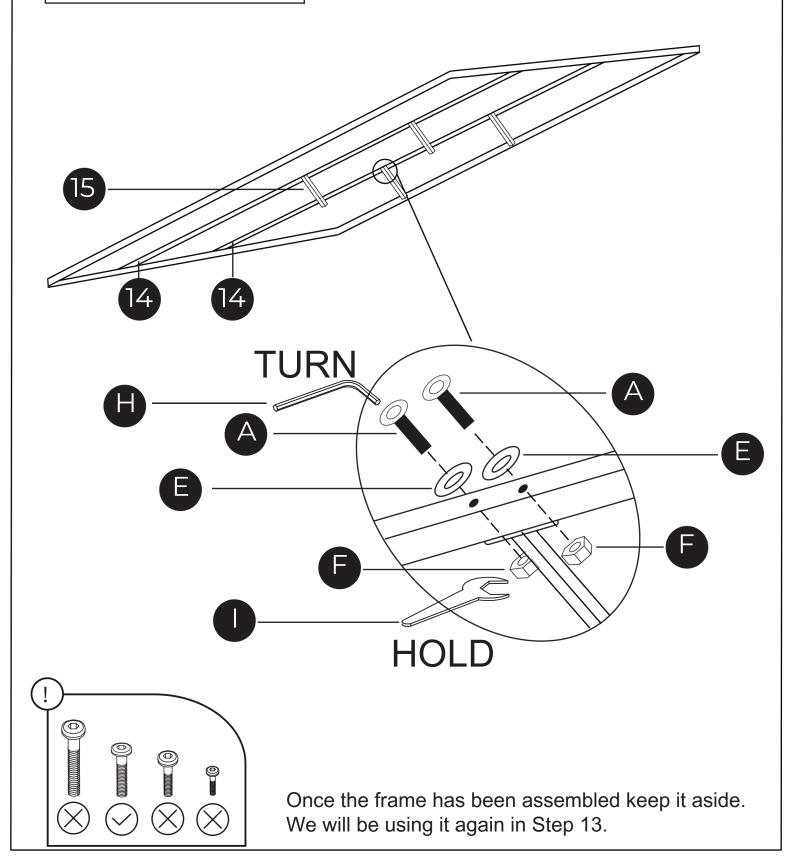


STEP 4 Turn it upside down for more ease.

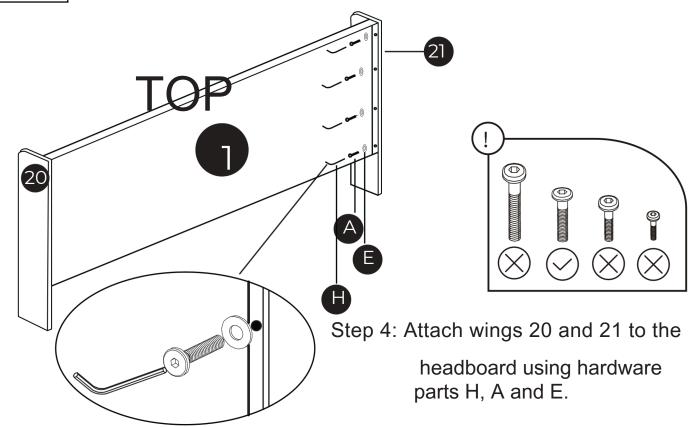



STEP 5 Step 5:Unscrew the nut on the left and right hydraulics (3 and 4) and attach the gas lifts (5). Screw the nut back on. We will now refer to this as the "gas lift mechanism".

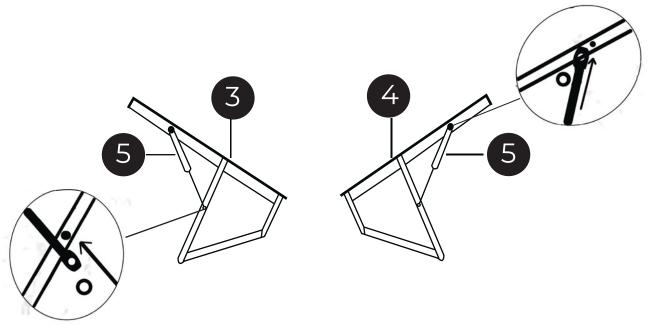


The nut should only be tightened by hand and will not go all the way in. No tools needed.

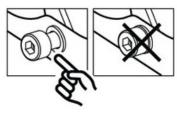

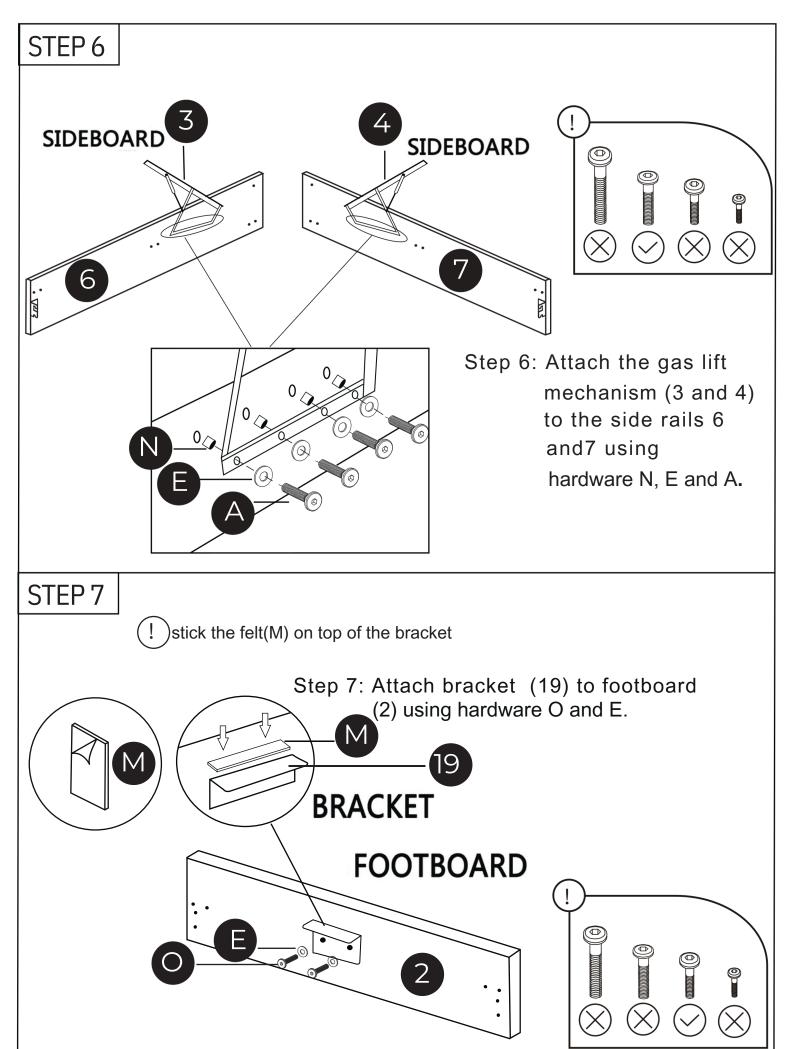


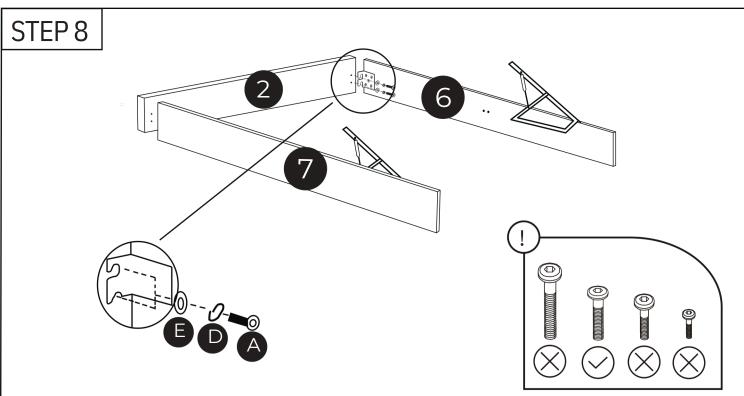


Step 8: Attach the side rails (6 and 7) to the footboard (2), using hardware E, D and A.

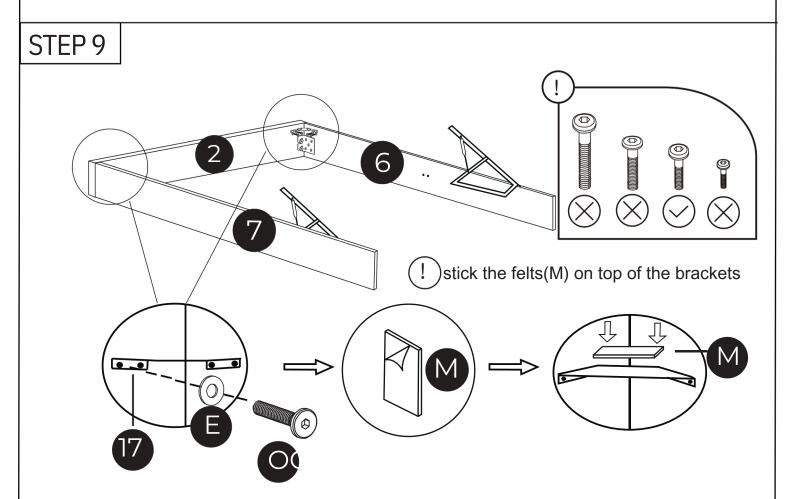


Step 9: Attach the corner brackets (17) to connect the side rails (6 and 7) to the footboard (2), using hardware E and O .

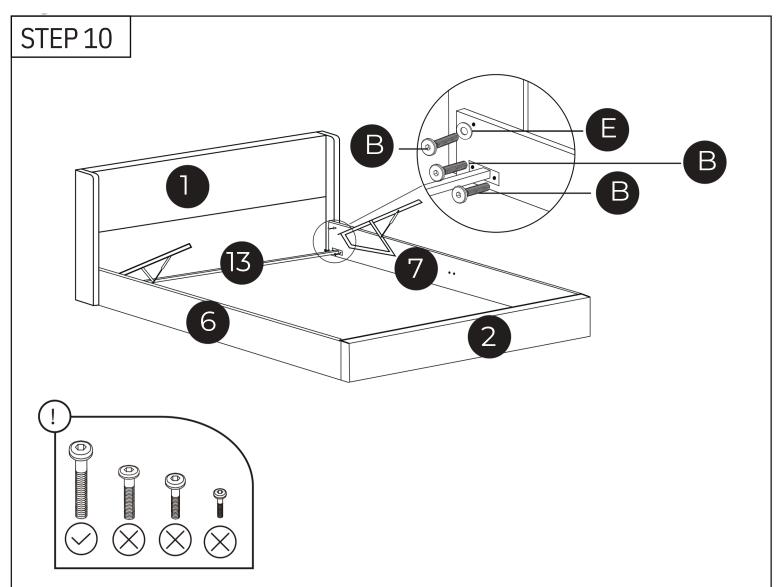

Step 10: Attach side rail connector (13) to the side rails (6 and 7) and headboard (1) using parts B and E.

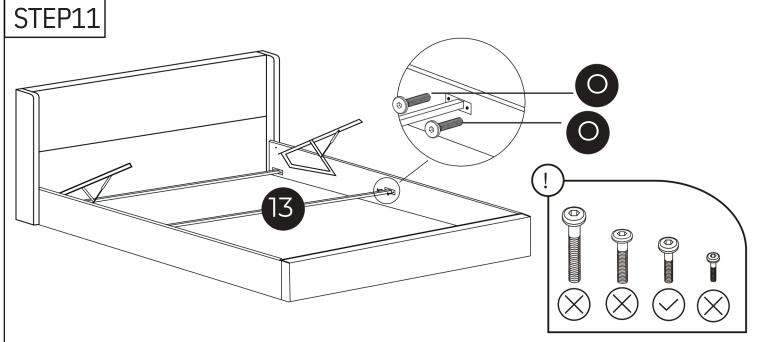


Step 11:Attach the second side rail connector (13) to the centre of both side rails (6 and 7) using hardware O.

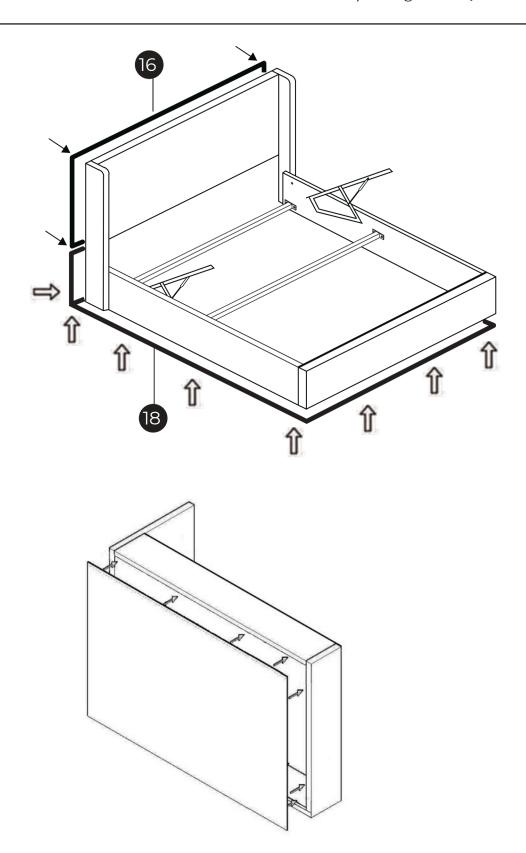


Step 12a: Attach the non-woven fabric (18) to the bed. Start from the bottom of the bed and go halfway behind the headboard.

Step 12b :Attach the non-woven fabric (16)to the back of the headboard.

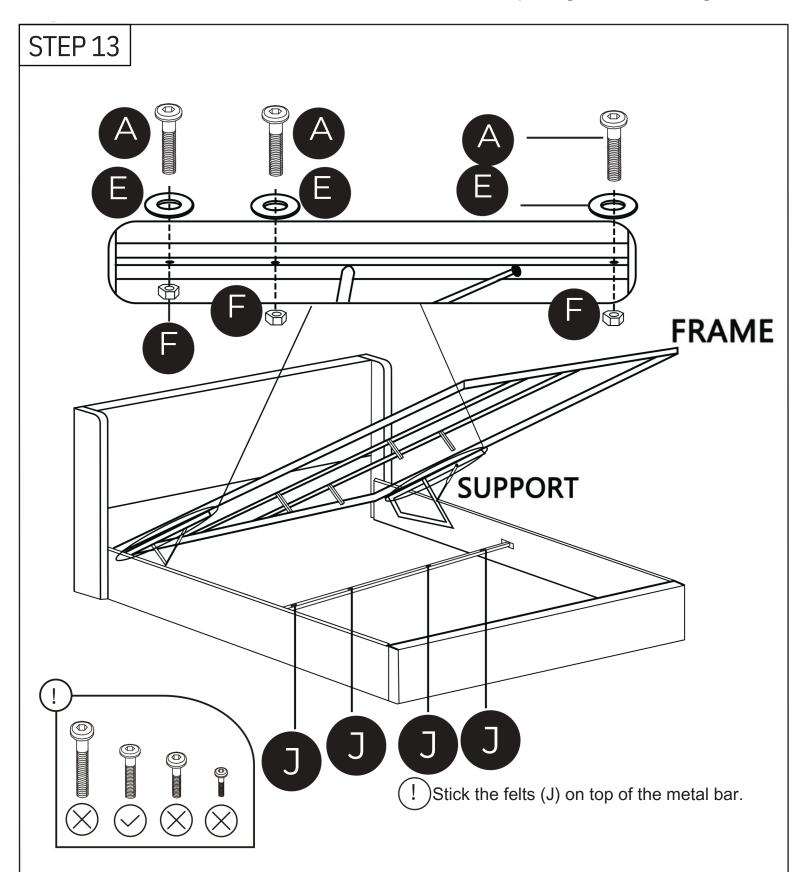

Step 13: Attach the frame that you built in the previous steps to the gas lift mechanism at a 45° angle (meaning it should be slanted as shown in the picture) using hardware A, E and F.

ONCE THE MATTRESS IS ON TOP, YOU CAN OPEN & CLOSE THE BED SAFELY

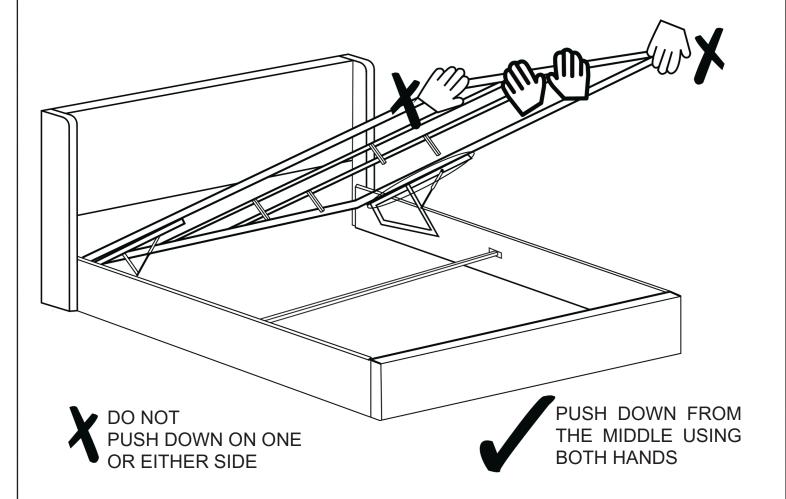

Step 14:

Once all the nuts and bolts are tightened firmly, the first time you close the lifting mechanism, push down with extra pressure to force open the seals on the pistons.


This will feel like a lot of pressure, so be firm and it will close!

NOTE: The gaslift function works when you have a mattress on it. If you don't have a mattress on it, there is a possibility it will not stay down.

TURN

×2 HOLD


Step 15: Attach the gas lift ribbons (L) to the metal frame (12) using parts A,E and F. Use part I to hold bolts F in place and use part H(allen key) to tighten the screws.

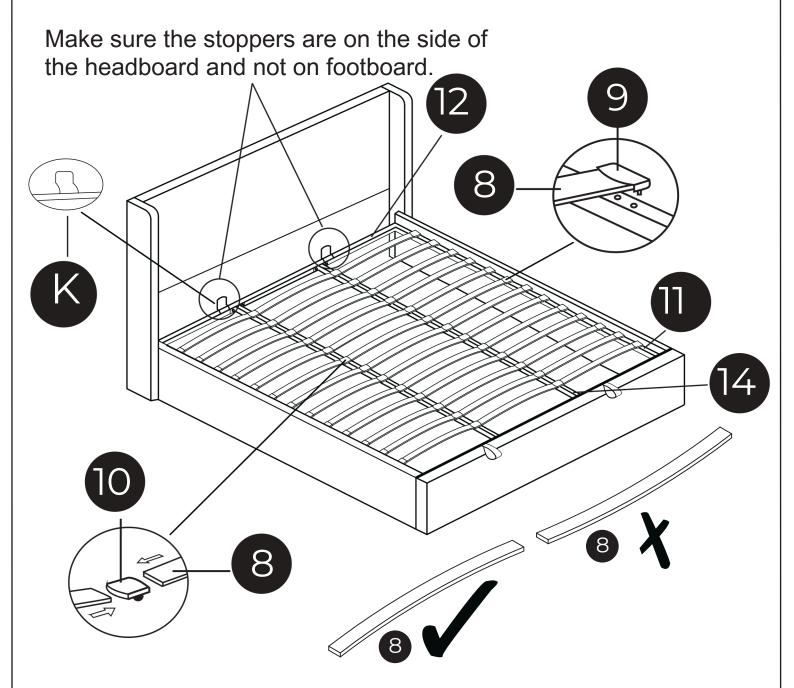

Step 16(a): Attach the slats (8) to the plastic clips and insert them into the holes of the metal bars (11 and 14). Clips open from both sides (10) will be attached to the middle bar (14), and clips open from one side (9) will be attached to the side bars (11).

Step 16(b): Attach the mattress stoppers part K to part 12.

NOTE: Ensure the slats are curved upwards when attaching them to the clips. Incorrect attachment may lead to breakage.

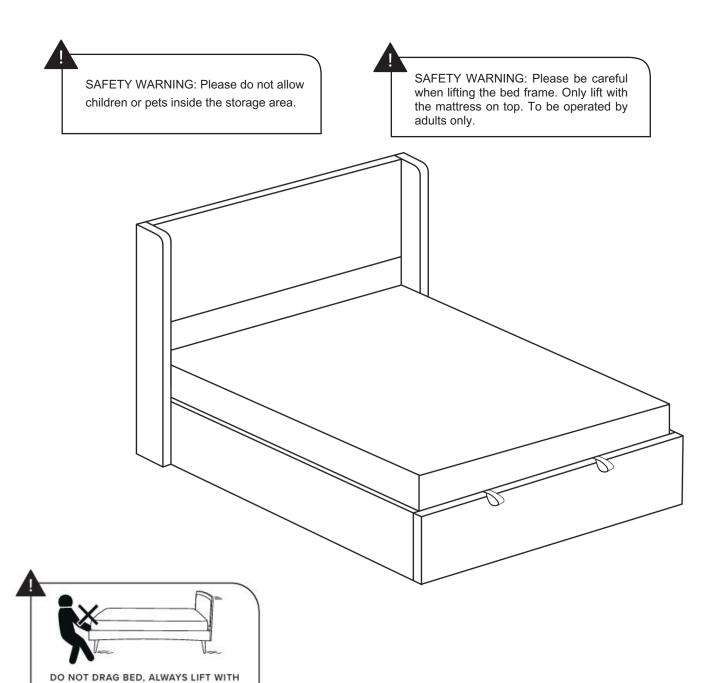



SAFETY WARNING: Please do not press down on the mattress when the bed frame is in the lift up position. The bed frame top must only be closed by using both center handles.

AT LEAST TWO PEOPLE BEFORE MOVING

