


PACKING LIST


NO.	PART		NO.	PART	
1	138CM 	10	A		2
a	149.5CM 	1	B		2
2	166.6CM 	1	C		4
3	166.6CM 	1	D		1
b	149.5CM 	1	E		2
4	149CM 	6	F		4
5	140.7CM 	2	G		1
6	103.5CM 	2	H		1
7	102.3CM 	6	J		1
8	56.5CM 	1	K		2
9	64.5CM 	1	L		2
10	58.5CM 	1	P		1
11		1	M1	 6x40mm	4
12		1	M2	 6x50mm	2
		1260"	M3	 4x16mm	12
		200			9
		1			1

PRODUCT ASSEMBLY 1


1.

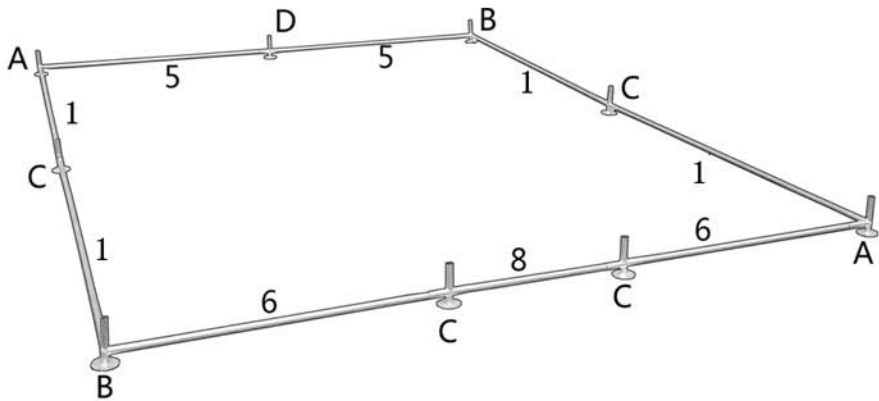


2.

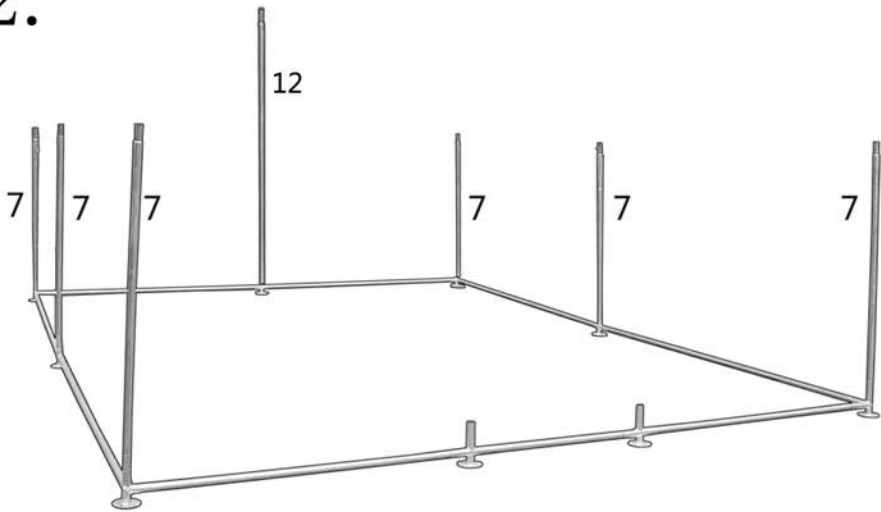

3.

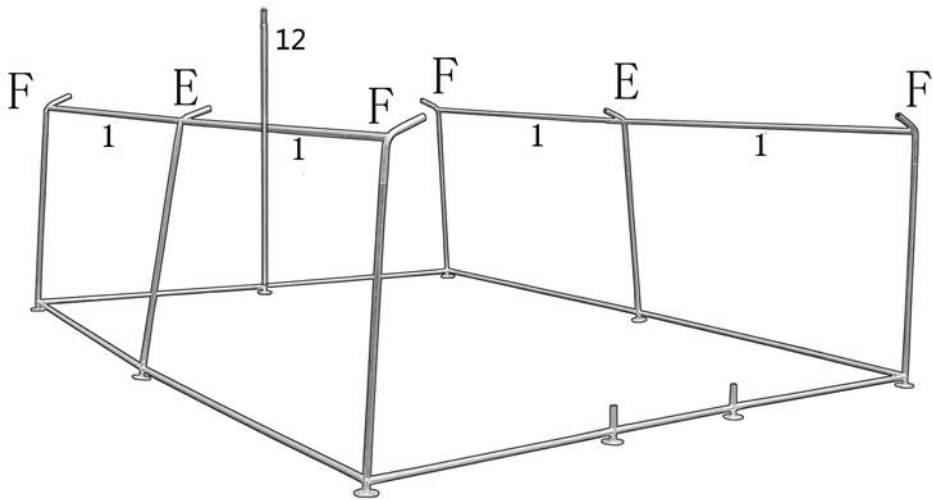

4.


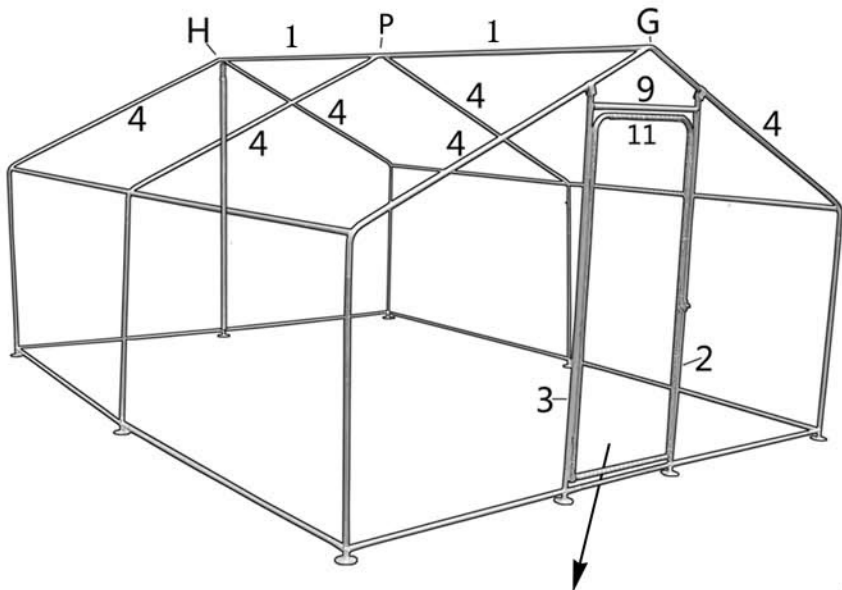


Door assembly drawing on page 4

Wiremesh diagram (pictures below for reference only, please follow the actual measurement,


Please be sure to calculate the total length of the wire mesh, the size we provided is :1260" L x 39.3" W).

6.

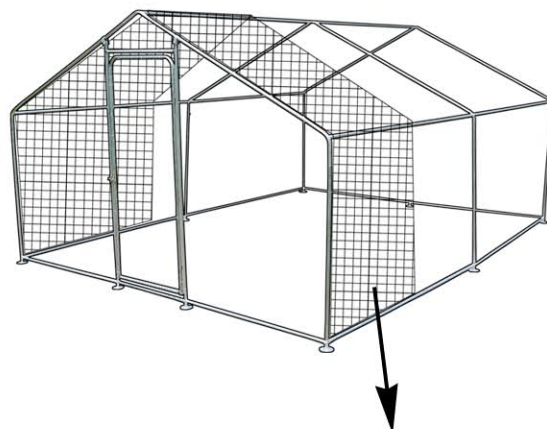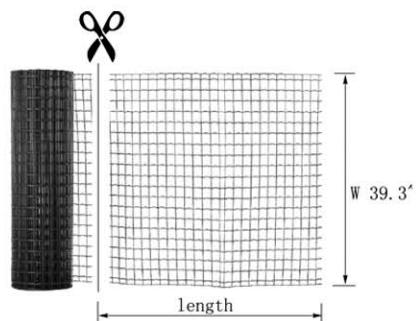


L226" x W39.3"

7.

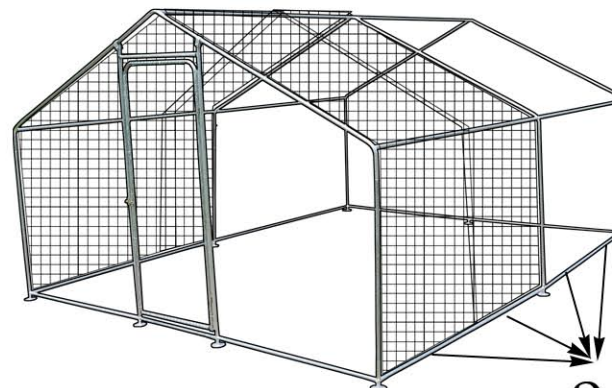


L226" x W39.3" x 3

8.

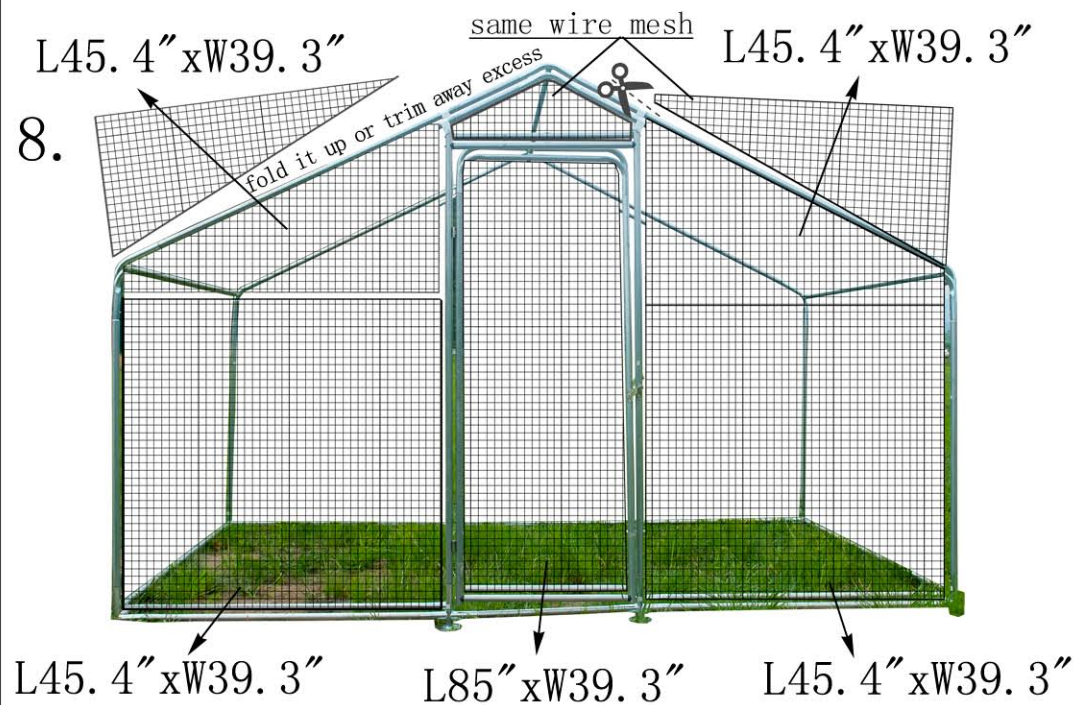


9.

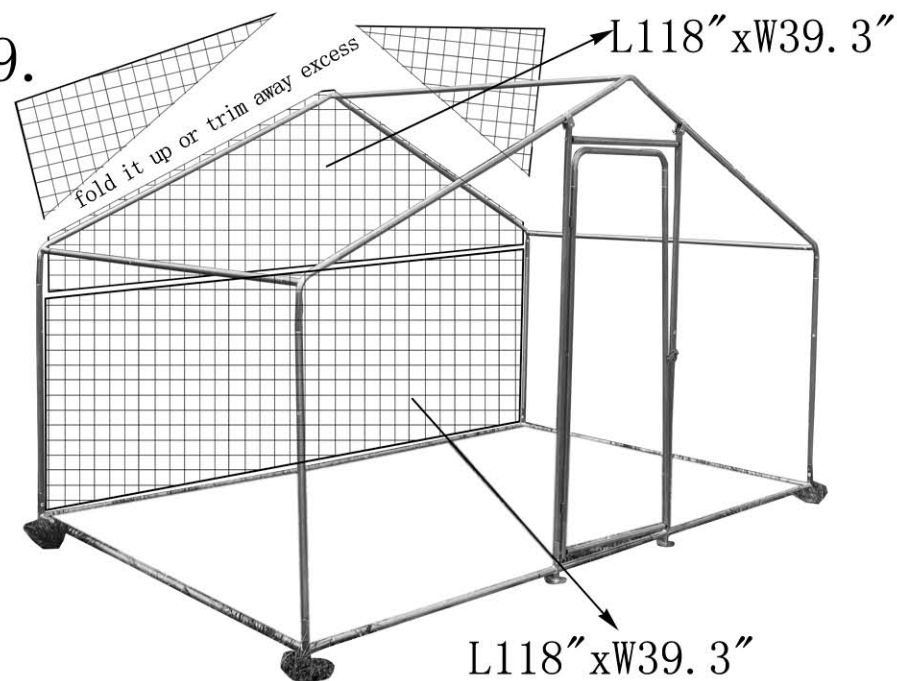

10.

PRODUCT ASSEMBLY 3

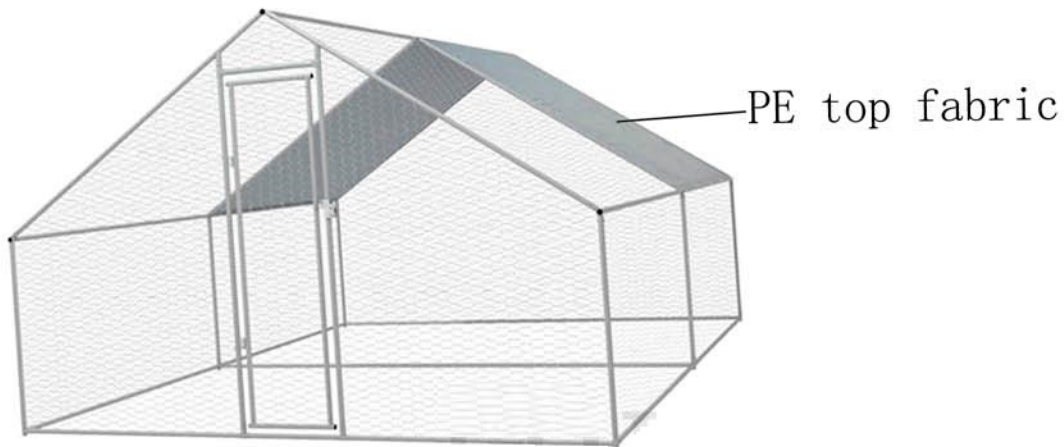

Note:

1. The length of the wire mesh can be appropriately adjust according to the actual length, but the total length can not exceed 1260".
2. Set up the wire mesh on the frame and tie it well.
3. Always be careful of the sharp wire.
4. Put the PE top fabric on the wire mesh, tied it with the pole.
5. Do not forget the ground peg when complete the installation.

Door assembly:

