

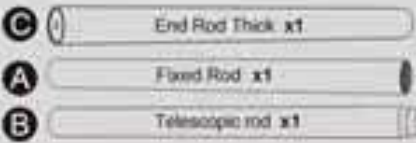

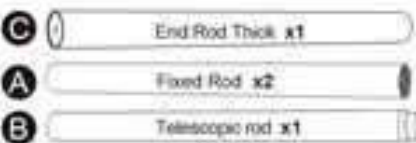


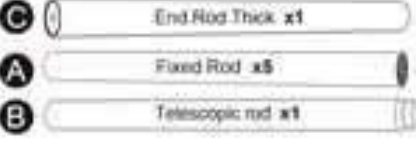

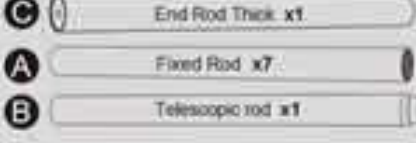



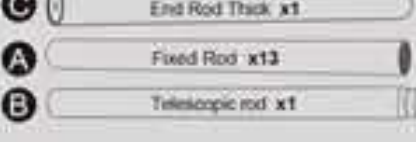



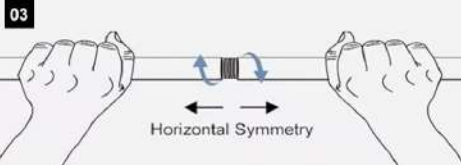
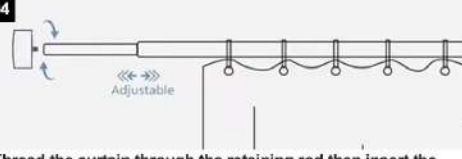
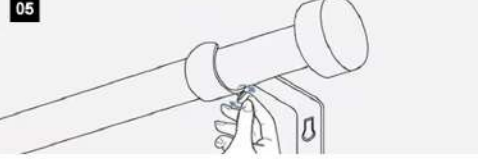
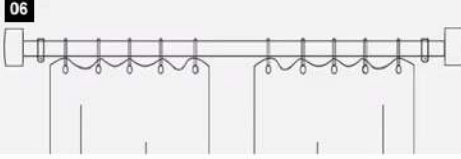


Package includes









<p>16"- 28"</p>	 <p>End Rod Thick x1 End Rod Thin x1</p>	 <p>Brackets x2 Decorative Finials x2 Screws x4 Anchors x4</p>
<p>32"- 48"</p>	 <p>C End Rod Thick x1 A Fixed Rod x1 B Telescopic rod x1</p>	 <p>Brackets x2 Decorative Finials x2 Splice Nuts x2 Screws x4 Anchors x4</p>
<p>32"- 72"</p>	 <p>C End Rod Thick x1 A Fixed Rod x2 B Telescopic rod x1</p>	 <p>Brackets x3 Decorative Finials x2 Splice Nuts x3 Screws x6 Anchors x6</p>
<p>32"- 86"</p>	 <p>C End Rod Thick x1 A Fixed Rod x3 B Telescopic rod x1</p>	 <p>Brackets x3 Decorative Finials x2 Splice Nuts x4 Screws x6 Anchors x6</p>
<p>32"- 120"</p>	 <p>C End Rod Thick x1 A Fixed Rod x5 B Telescopic rod x1</p>	 <p>Brackets x3 Decorative Finials x2 Splice Nuts x6 Screws x6 Anchors x6</p>
<p>32"- 144"</p>	 <p>C End Rod Thick x1 A Fixed Rod x7 B Telescopic rod x1</p>	 <p>Brackets x3 Decorative Finials x2 Splice Nuts x8 Screws x6 Anchors x6</p>
<p>32"- 168"</p>	 <p>C End Rod Thick x1 A Fixed Rod x8 B Telescopic rod x1</p>	 <p>Brackets x4 Decorative Finials x2 Splice Nuts x9 Screws x8 Anchors x8</p>
<p>32"- 240"</p>	 <p>C End Rod Thick x1 A Fixed Rod x13 B Telescopic rod x1</p>	 <p>Brackets x5 Decorative Finials x2 Splice Nuts x14 Screws x10 Anchors x10</p>

Tips: If you have any installation questions, please contact us without hesitation.

Curtain rod installation instructions

<p>01</p>  <p>Measuring the window size Drilling for fixing screws</p>	<p>02</p>  <p>Install the brackets with screws and anchors</p>	<p>03</p>  <p>Attach the 1" fixed rod with the connector</p> <p>Horizontal Symmetry</p>
<p>04</p>  <p>Thread the curtain through the retaining rod then insert the 7/8-inch inner rod into the 1-inch retaining rod and screw the finials into the ends.</p>	<p>05</p>  <p>The screws on the bracket need to be manually screwed in to hold the telescopic pole in place</p>	<p>06</p>  <p>You will get a perfect curtain rod to decorate your home</p>

Assembly diagram for all rod sizes

<p>16"- 28"</p>	
<p>32"- 48"</p>	
<p>32"- 72"</p>	
<p>32"- 86"</p>	
<p>32"- 120"</p>	
<p>32"- 144"</p>	
<p>32"- 168"</p>	
<p>32"- 240"</p>	

Tips: You can adjust the length by increasing or decreasing the number of **A** tubes.