


Assembly Manual


ACCENT CHAIR

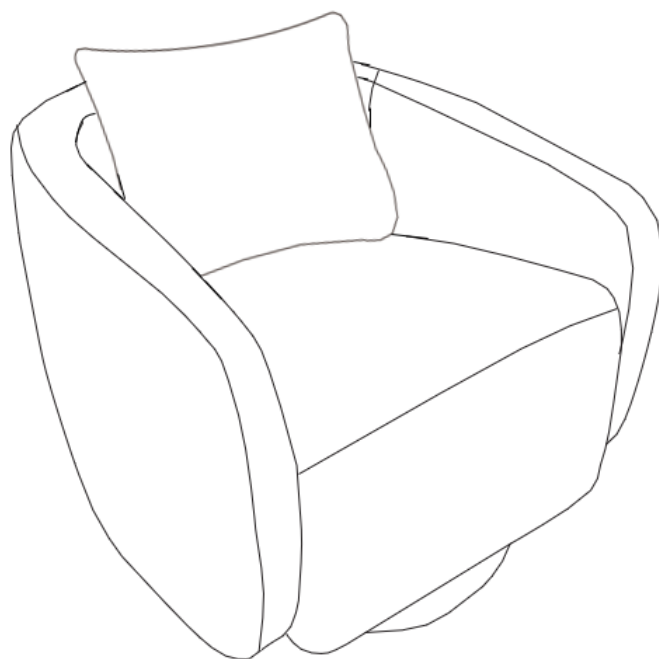


Components List

10_{min}


Assembly Time



Two People

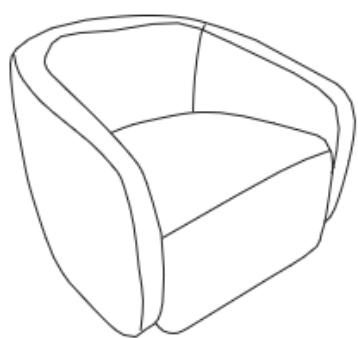


1

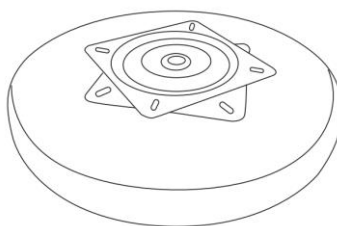

2



4

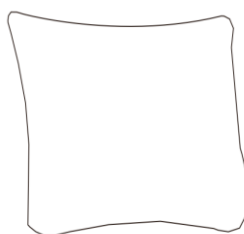

3



5


No.	Component	PCS
1	Seat	1
2	Swivel Base	1
3	Cushion	1
4	M6x20mm Screw	4+1
5	Allen Key	1

Note: Qty after "+" are the extra pieces.

Assembly Instruction


STEP 1

Turn Seat (Part 1) upside down so the bottom is facing you. Align the (top) face of the swivel base (Part 2) towards the bottom of the seat.

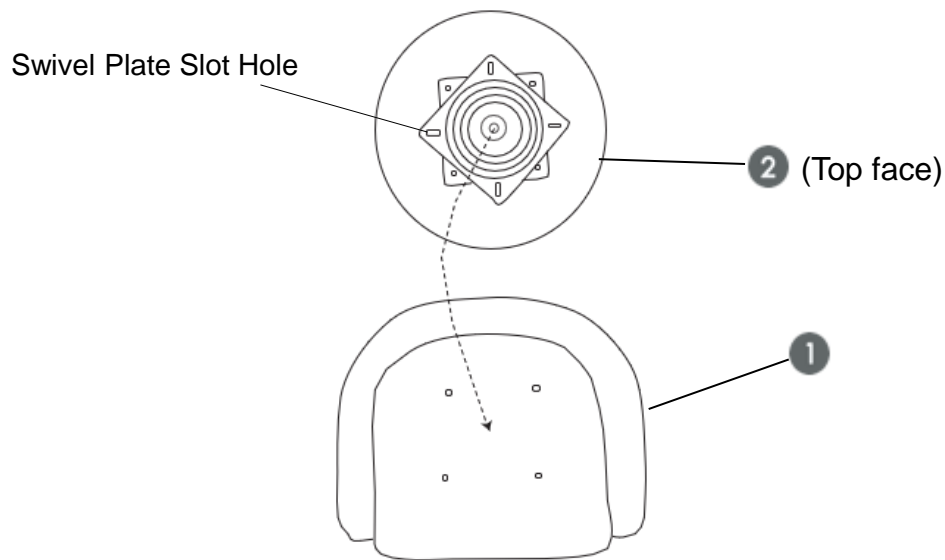

STEP 2


Open the zipper on the bottom of the swivel base (Part 2) and align the slot hole on the metal swivel plate with the screw hole on the bottom of the seat. Fasten with screw (Part 4) 85% of the way with Allen key (Part 5) and repeat with the other hole located diagonally.

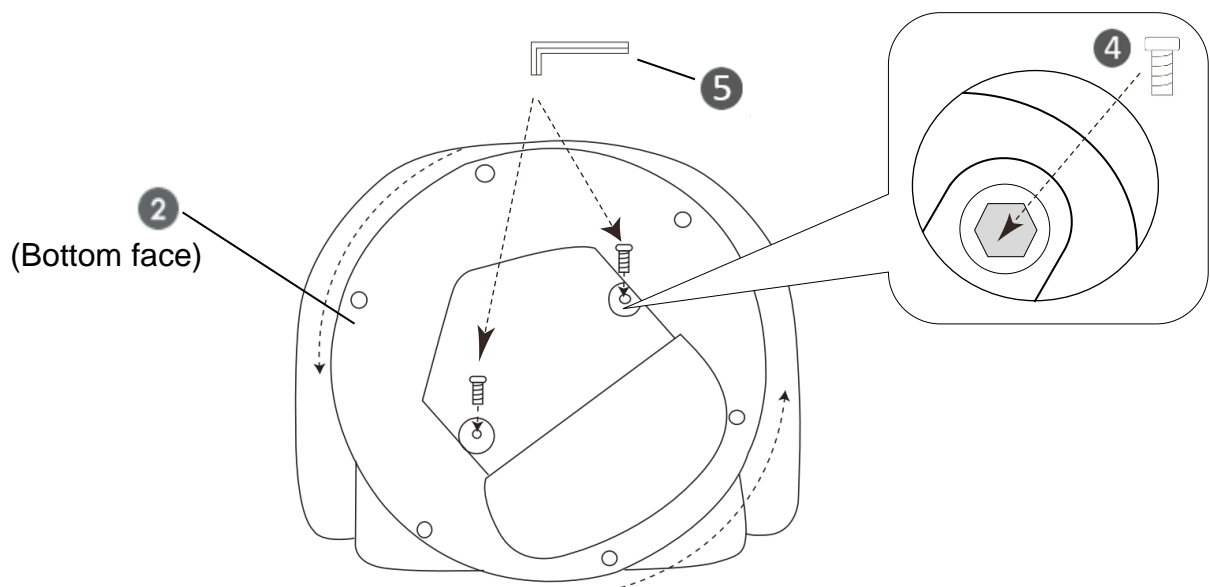

Assembly Instruction


STEP 3

Rotate swivel base 90-degrees to the left. Locate screw hole and install screw (Part 3). Repeat with screw hole located diagonally across. Fully tighten the screws that were installed during "STEP 2" and close the swivel base zipper.

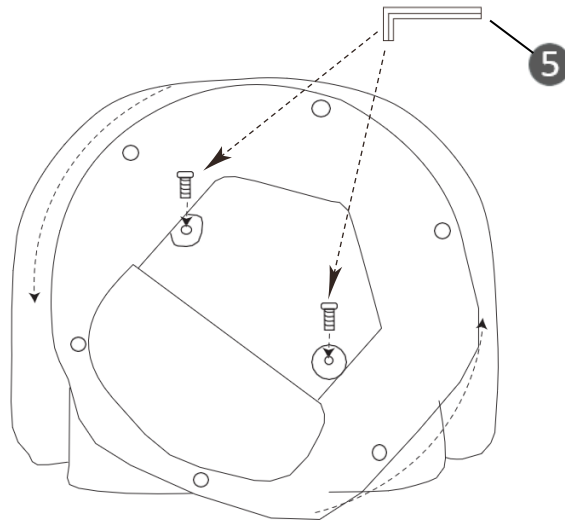

STEP 4

Place cushion (Part 3) on seat.

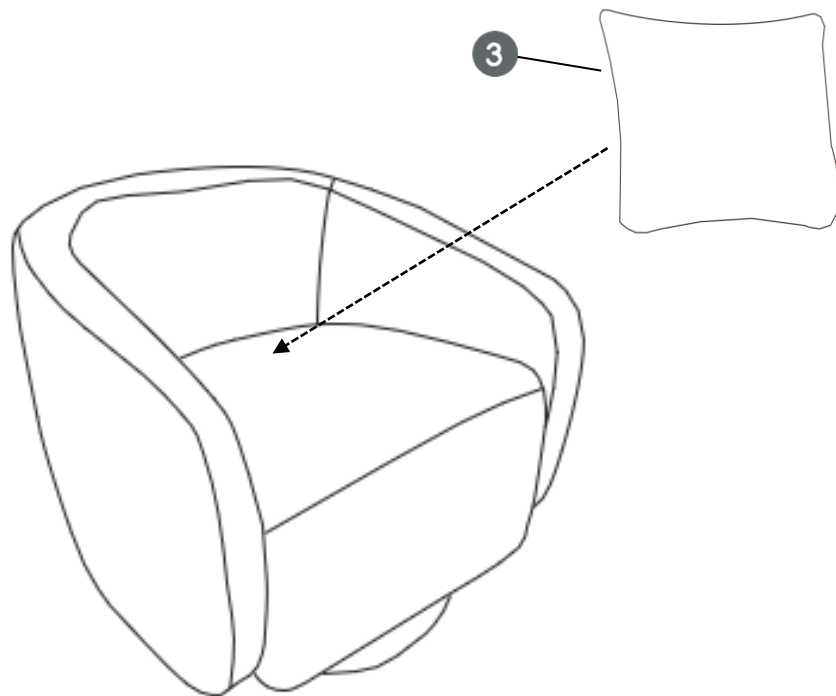

Assembly Instruction

STEP 5

Completed.

