




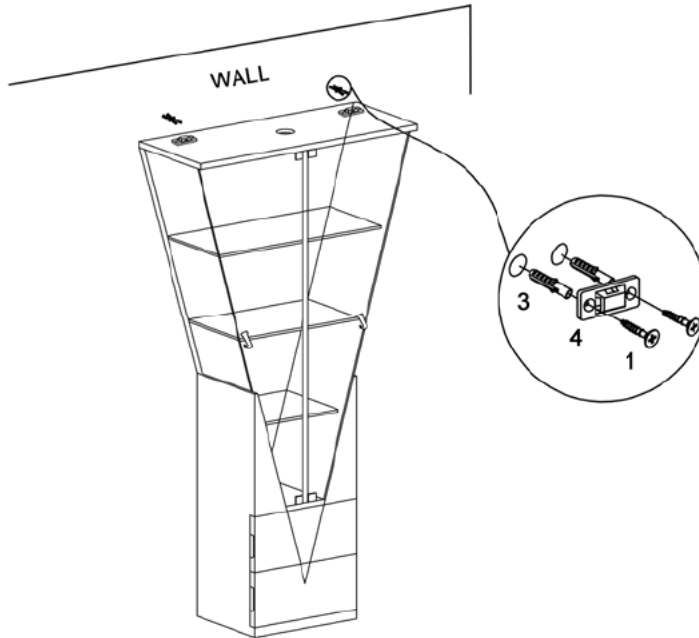

ANTI-TIP STRAP INSTALLATION

STEP 1

Locate and mark on the wall behind the furniture. Position (4)s on the wall and drill holes. Put (3) in the hole then use (1) to attach the panels (4) to the wall.



HARDWARE LIST

NO	DECS	SIZE (MM)	SKETCH	QTY
1	SCREW	M4*25		4PCS
2	CABLE TIES			2PCS
3	EXPANSION SCREW			4PCS
4	MOUNTING PANEL			2PC

STEP 2

Move the furniture to the marked position, then tie them up and fasten (2) to ensure the furniture is well-attached to the wall.

