


Assembly Instructions

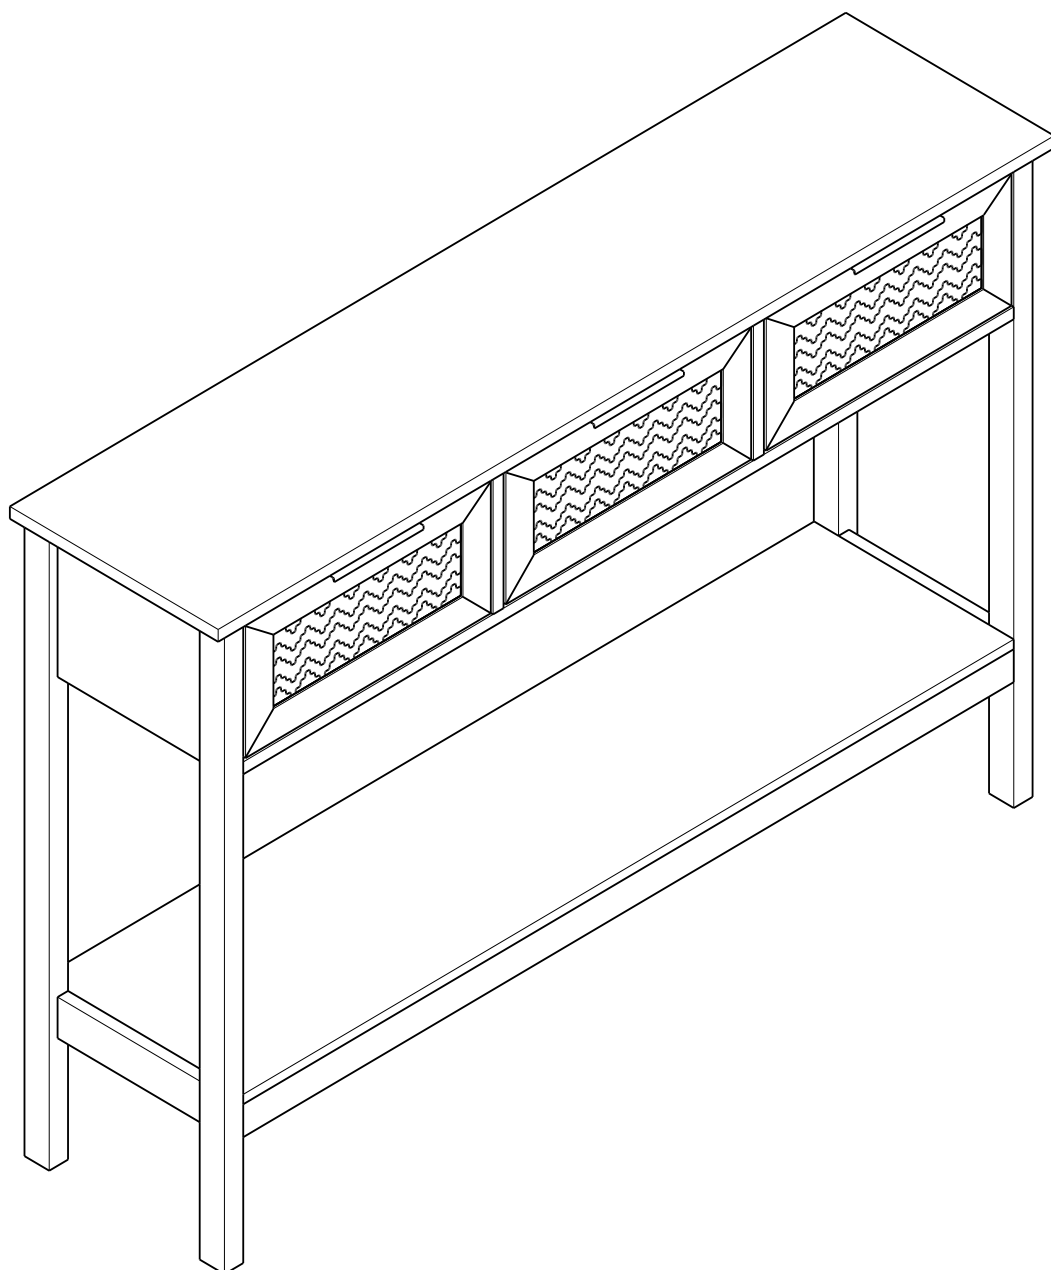

warning notice



- Open your item in the area you plan to keep it for less heavy lifting.



- Identify, sort, and count the parts before attempting assembly.



- Lay all parts on smooth flat surface.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- Do NOT use harsh chemicals or abrasive cleaners on this item.



- Never push, pull, or drag your furniture.

Teamwork



Failure to use 2 people for assembly could result in unit damage or personal injury.

Before You Start


Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process




Have the following tools: Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

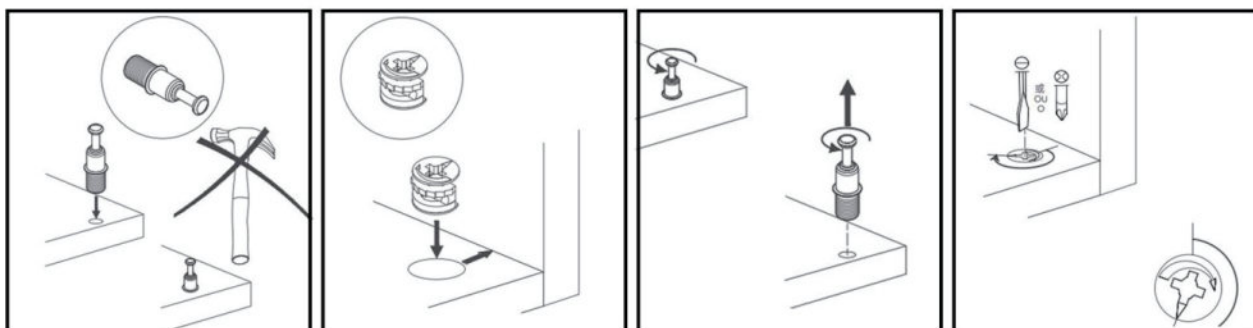


If the door panel is not sitting at a right position or angle, follow the steps below to improve.

- (1) Loosen the hinge, adjust the door panel position (up and down) then fasten the screws to secure the hinge (Step 1), or,
- (2) Loosen the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to secure the hinge (Step 2), or
- (3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of the door panel (left or right) to make the door panel to be vertical.

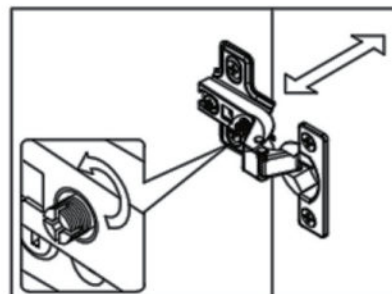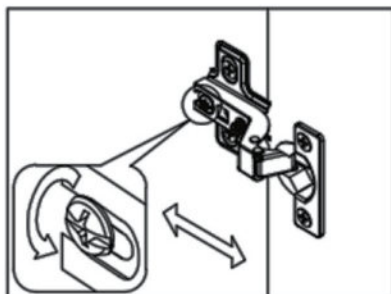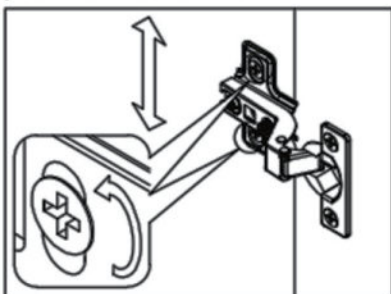


Components

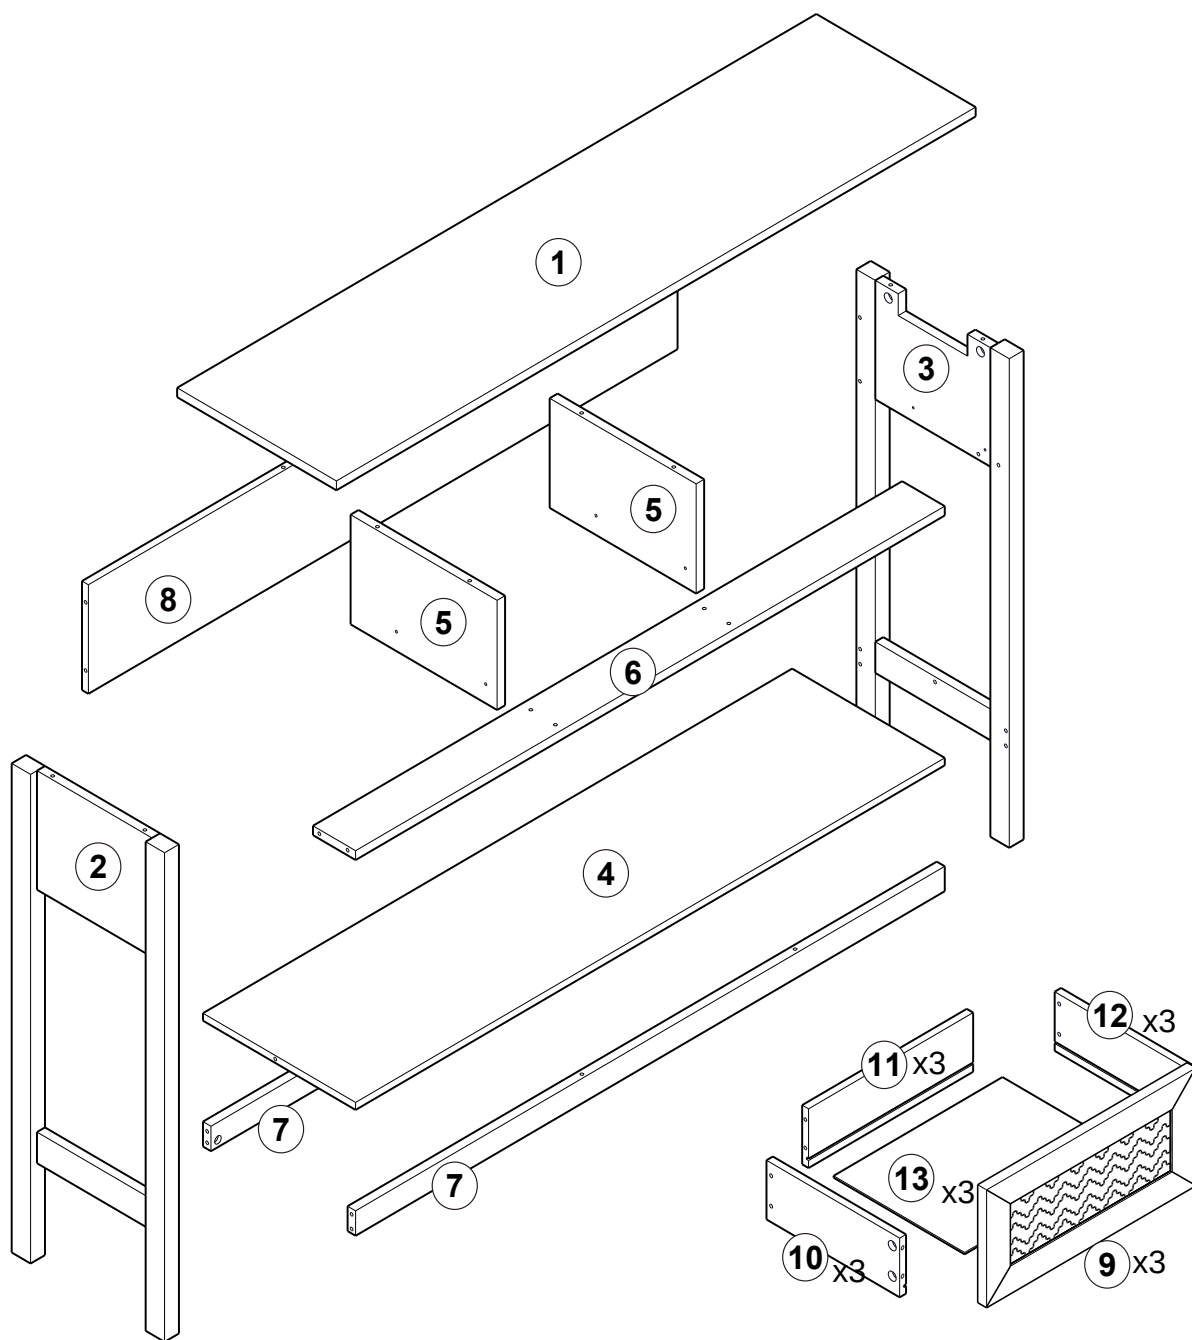


Components


① 1PC

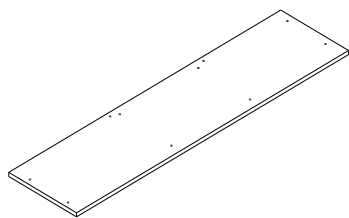


② 1PC

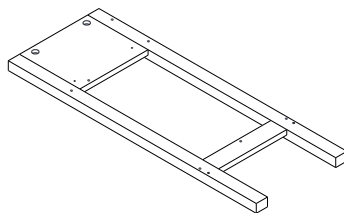


③ 1PC

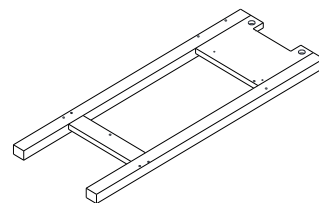


④ 1PC

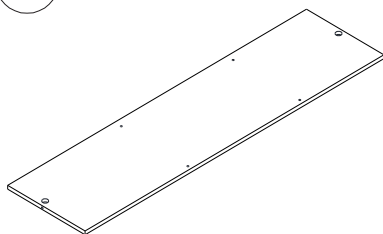


⑤ 2PCS

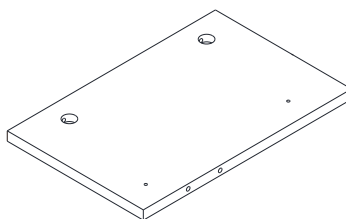


⑥ 1PC

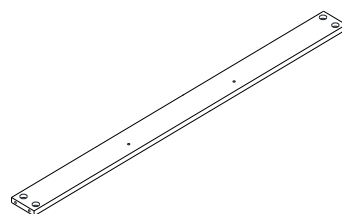


⑦ 2PCS

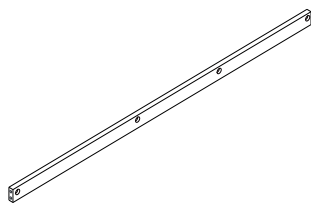


⑧ 1PC

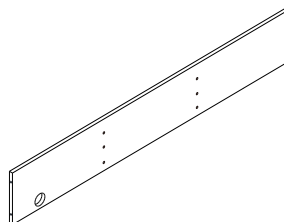


⑨ 3PCS

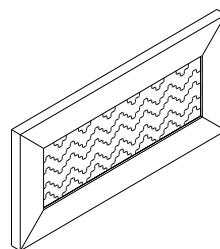


⑩ 3PCS

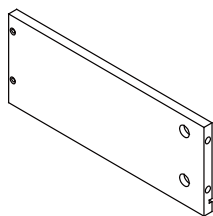


⑪ 3PCS

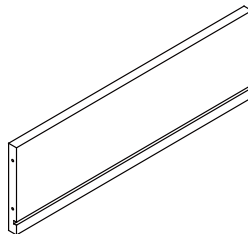













⑫ 3PCS

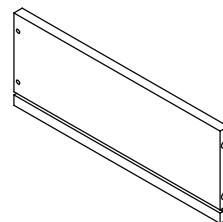

⑬ 3PCS

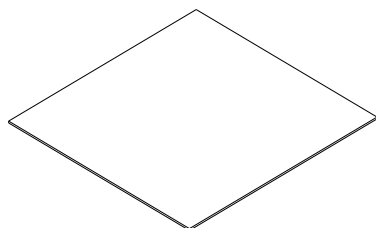




Components

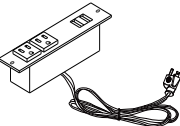A  40 PCS +2(spare)	B  40 PCS +2(spare)	C  8 PCS +1(spare)	D M3.5x12  24 PCS +2(spare)
E M4x35  18 PCS +1(spare)	F  4 PCS	G M3.5x12  2 PCS +1(spare)	H  1 PC
J  2 PCS	K M4x12  6 PCS +1(spare)	L  3 PCS	M  2 PCS
CL  3 PCS	CR  3 PCS	DL  3 PCS	DR  3 PCS

Assembly Instructions

STEP 1

REMARK:

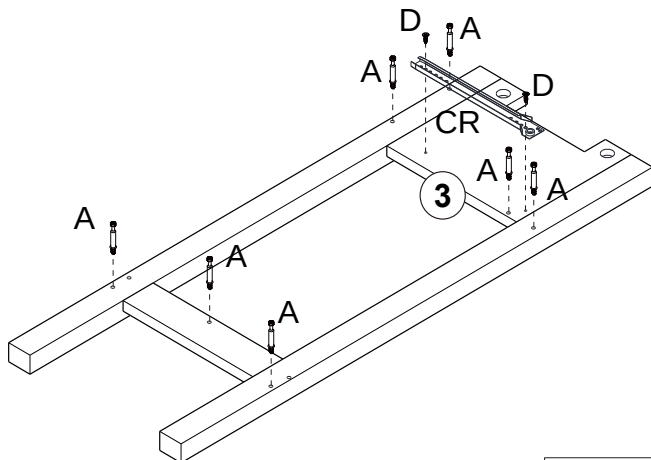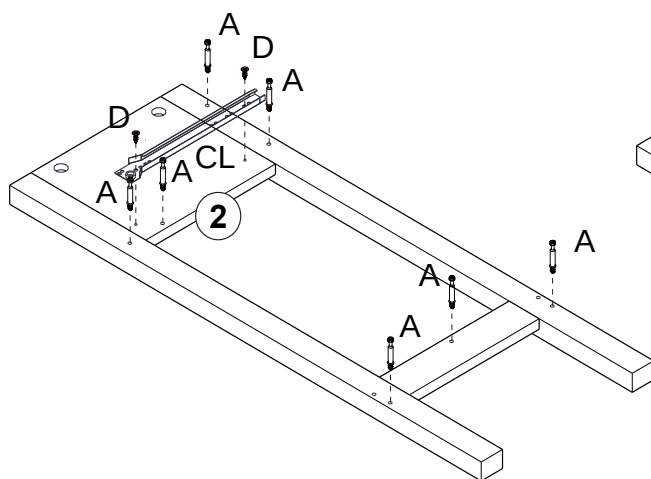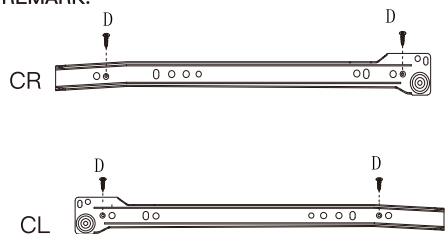

Ax14



Dx4




CLx1




CRx1

STEP 2

X2

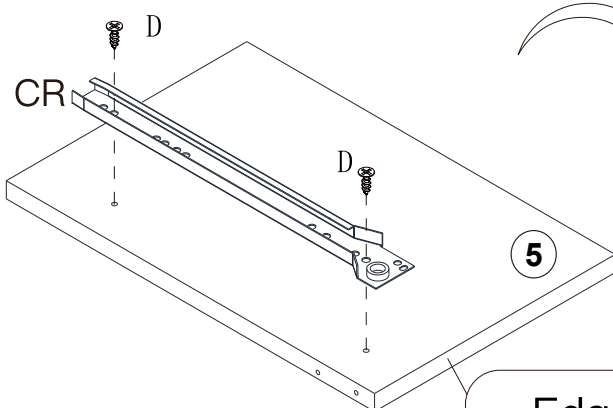


Turn Over
180°

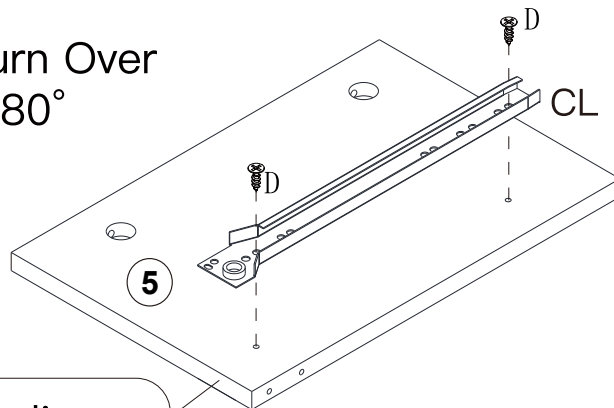

Edge Banding

REMARK:

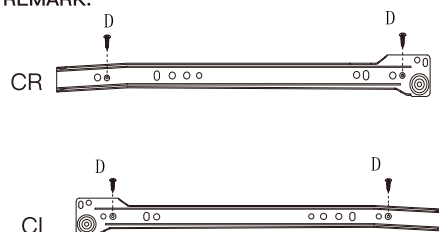

Dx8




CLx2




CRx2

Assembly Instructions

STEP 3

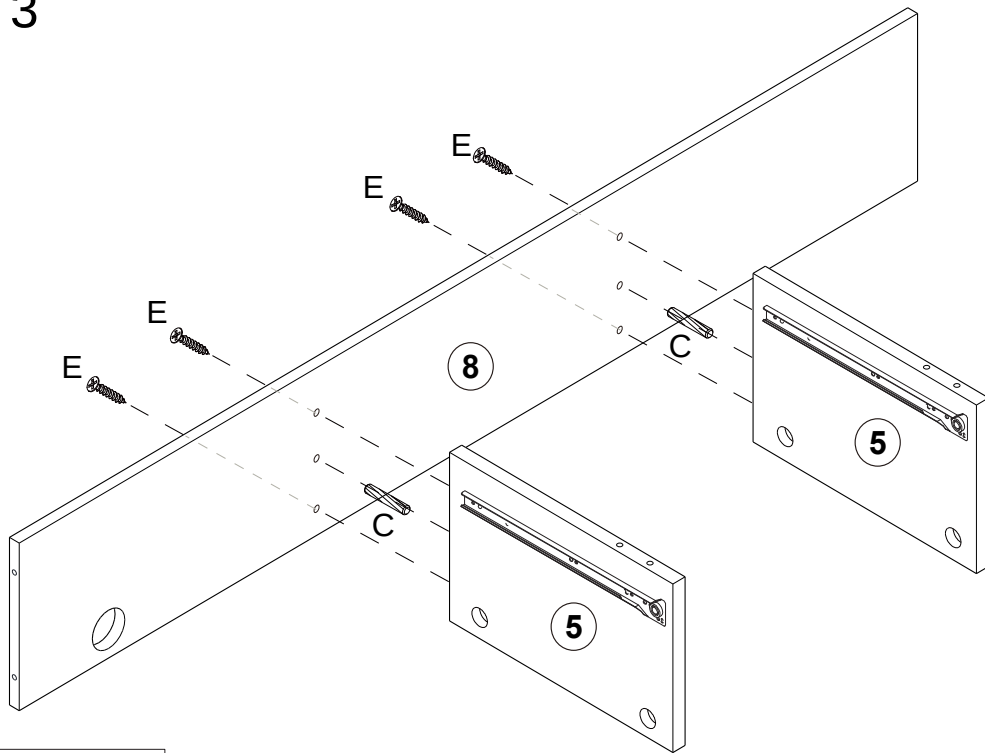


Ex4




Cx2

STEP 4

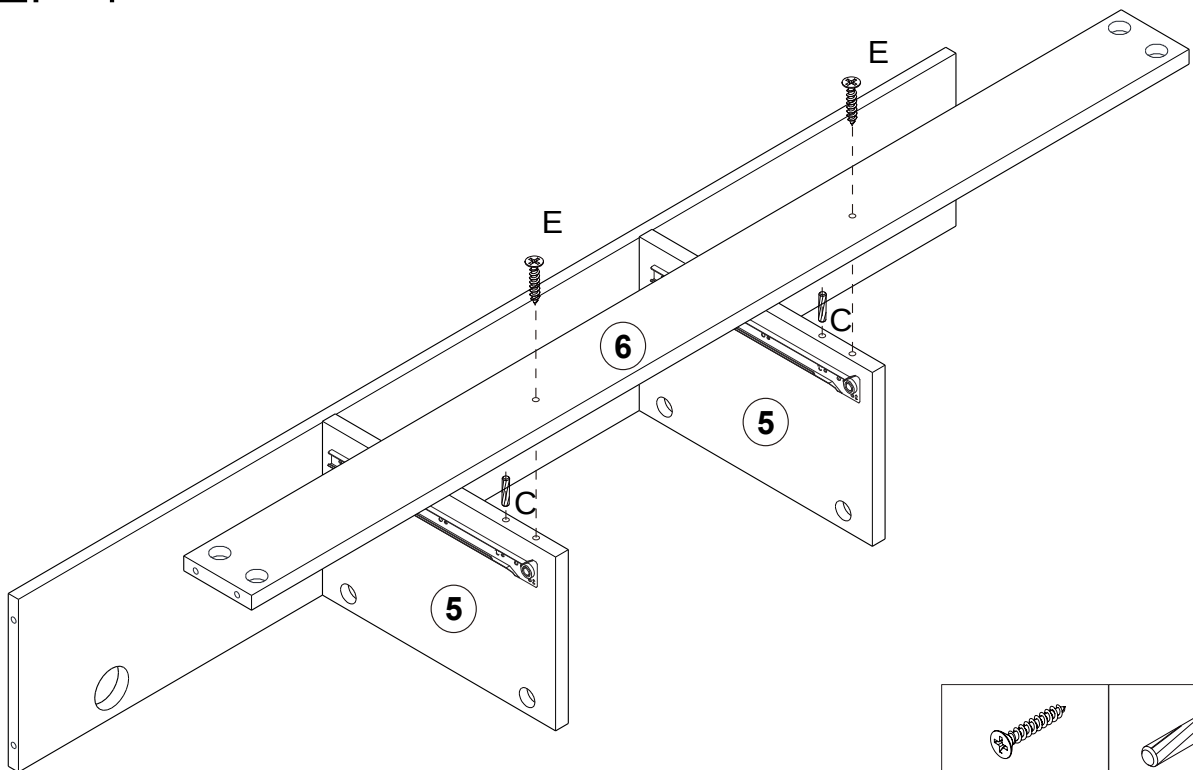


Ex2



Cx2


Assembly Instructions

STEP 5

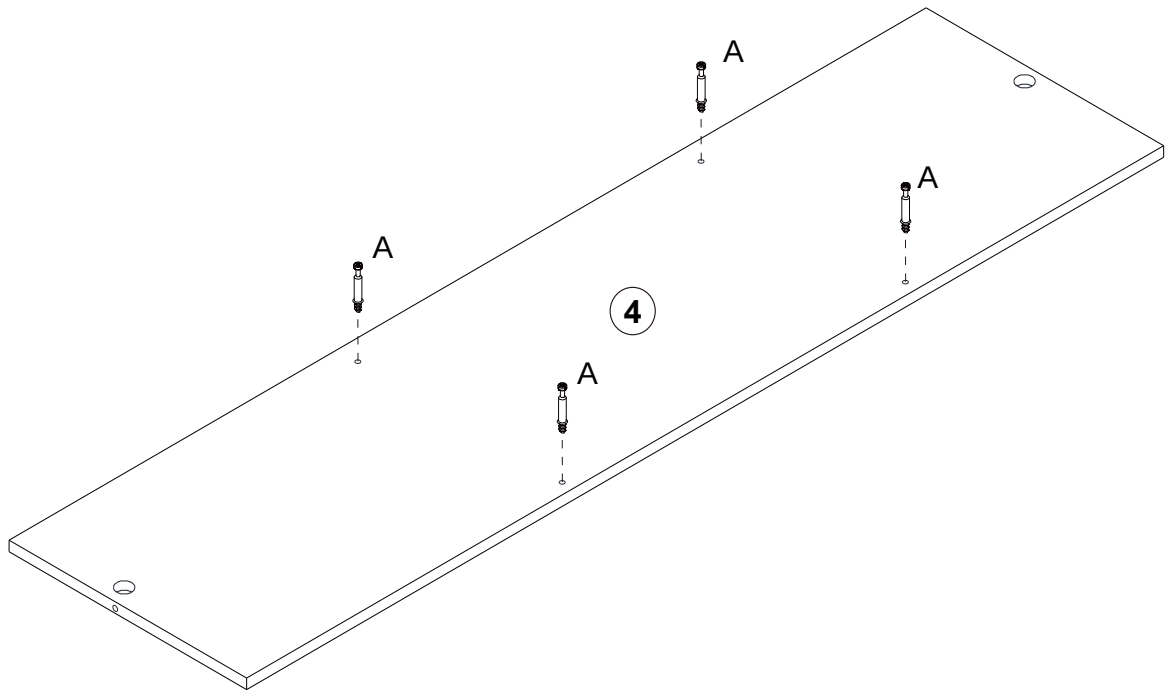

Ax4


STEP 6

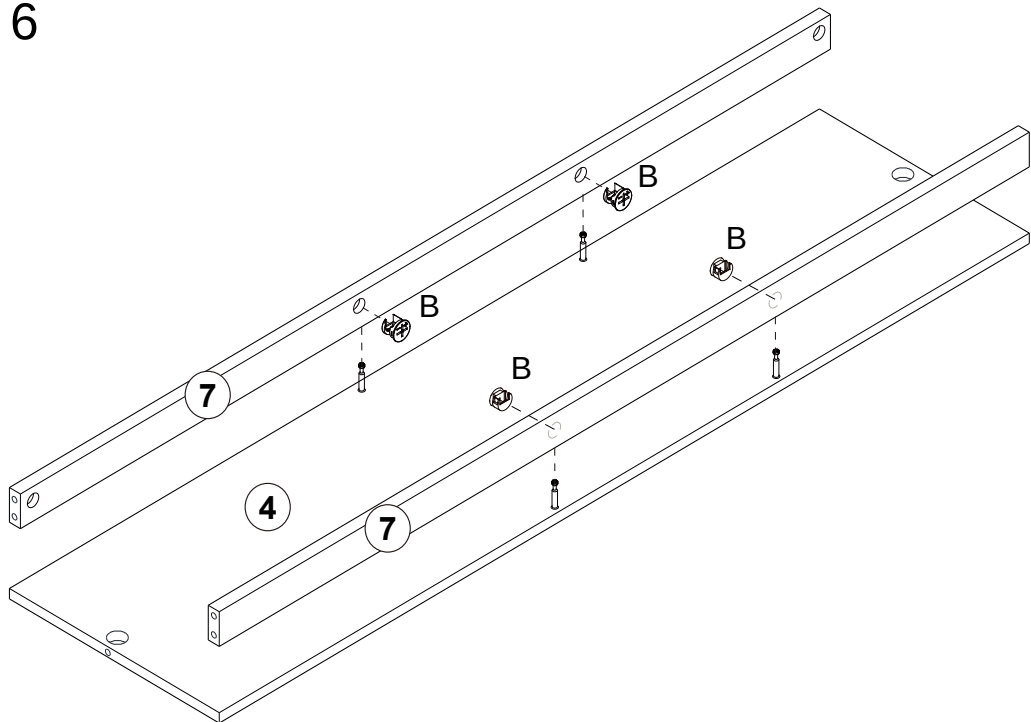

Bx4

Assembly Instructions

STEP 7

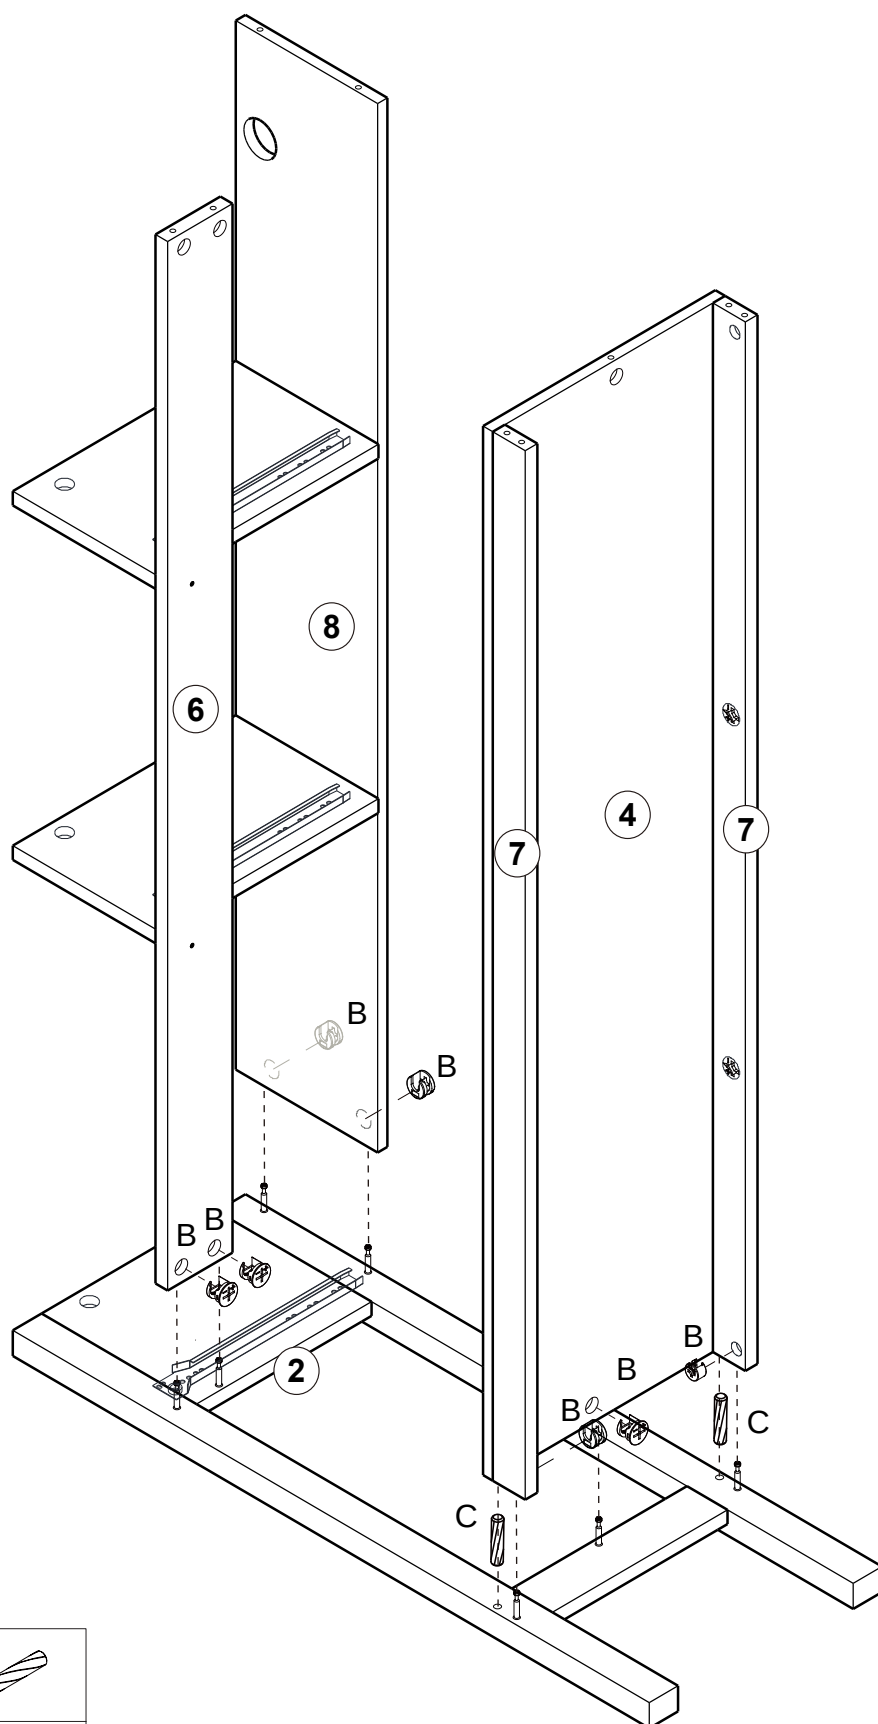


Bx7



Cx2

Assembly Instructions

STEP 8

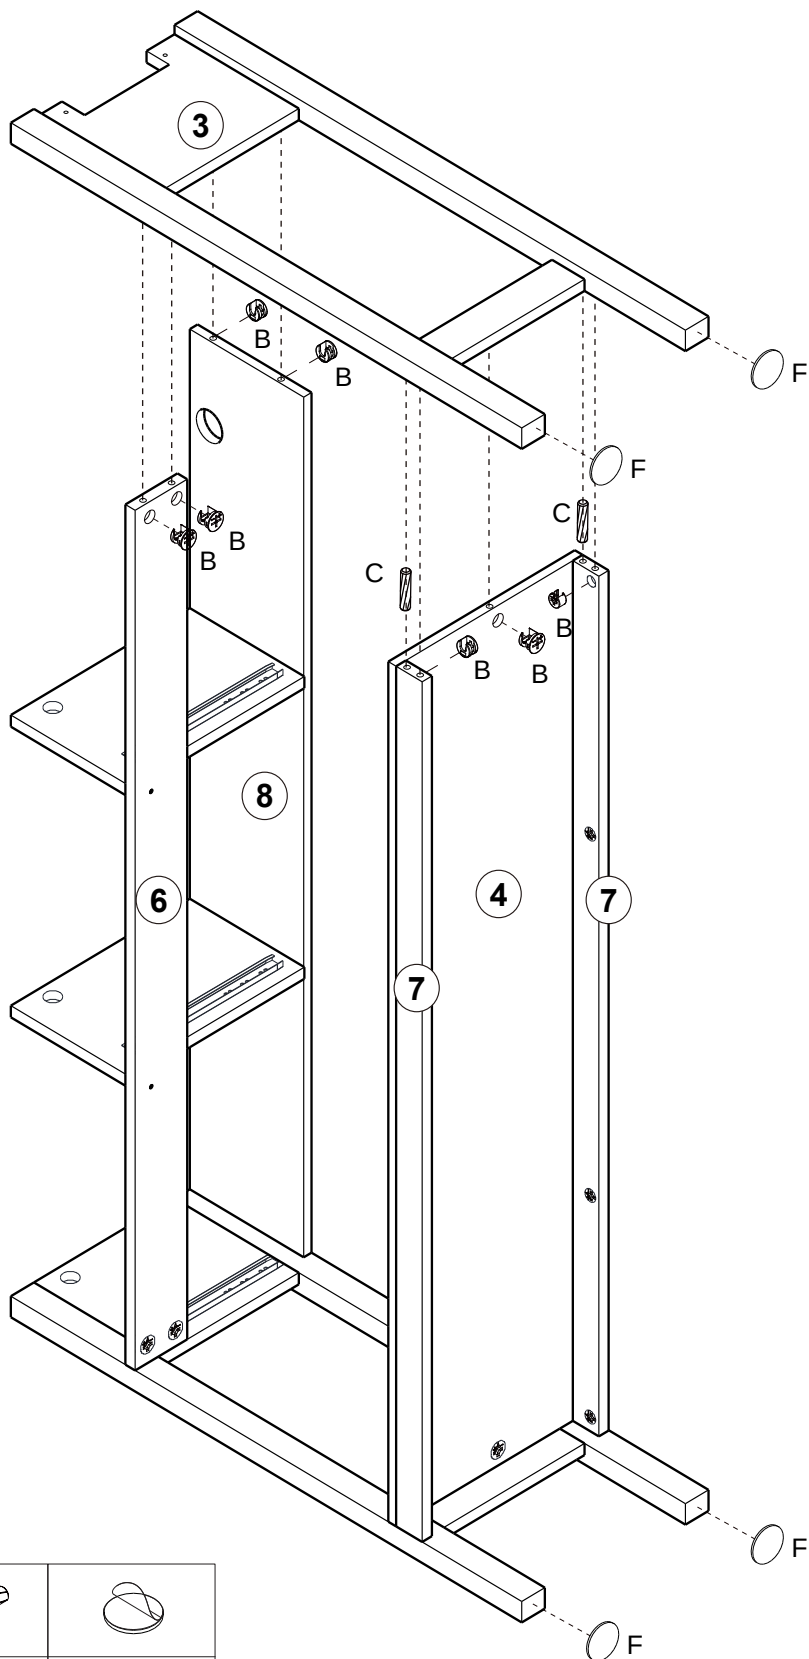

Bx7




Cx2



Fx4


Assembly Instructions

STEP 9

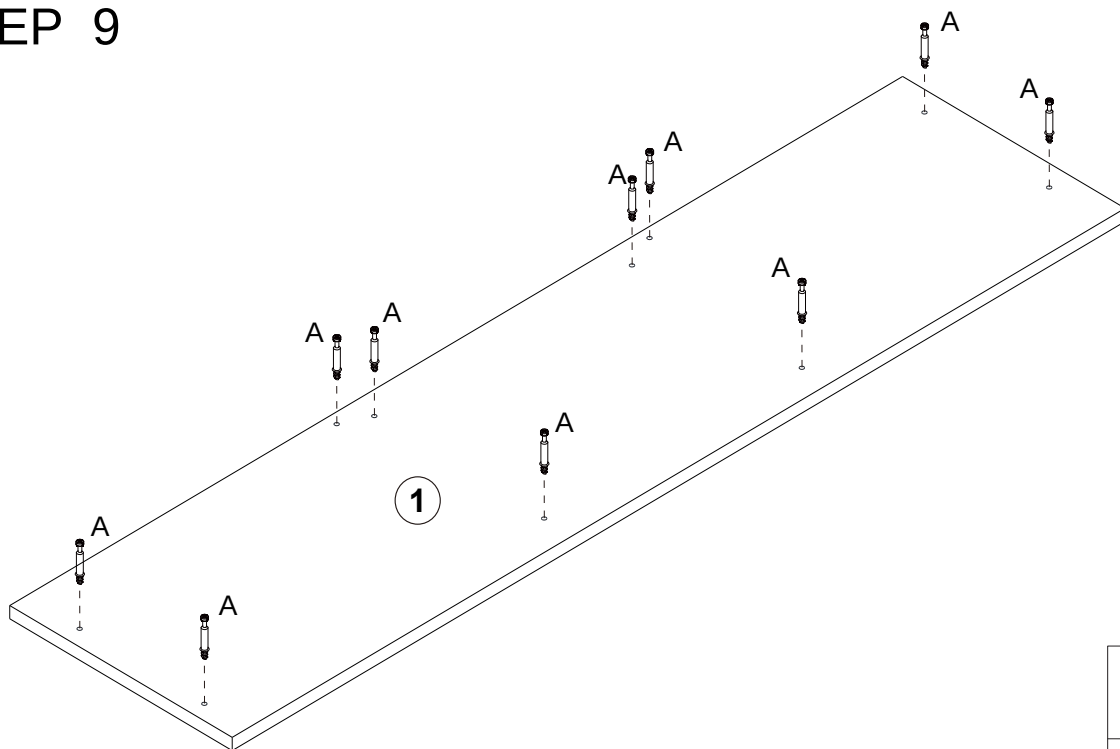

Ax10


STEP 10

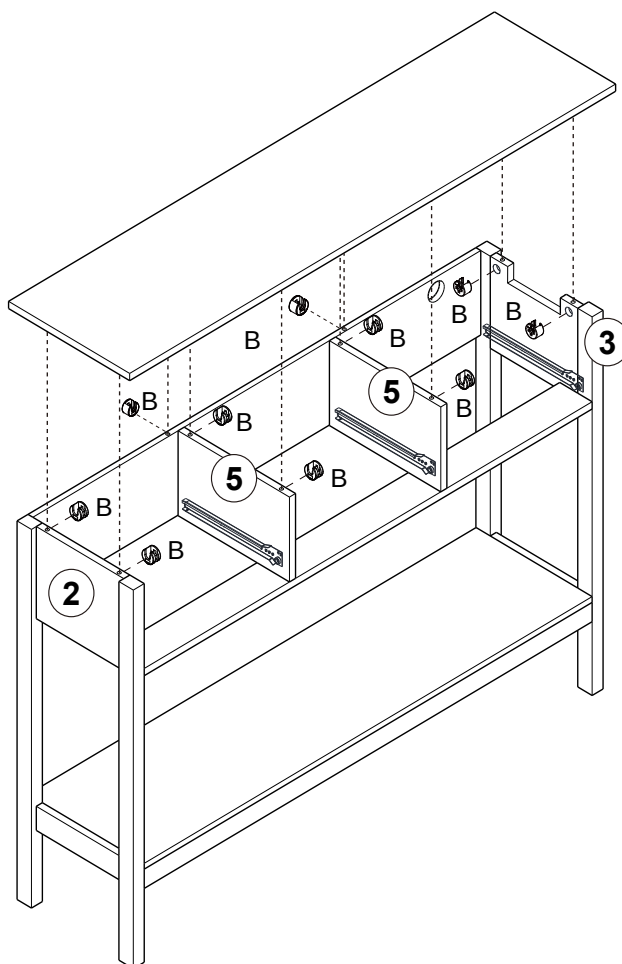

Bx10

Assembly Instructions

STEP 11

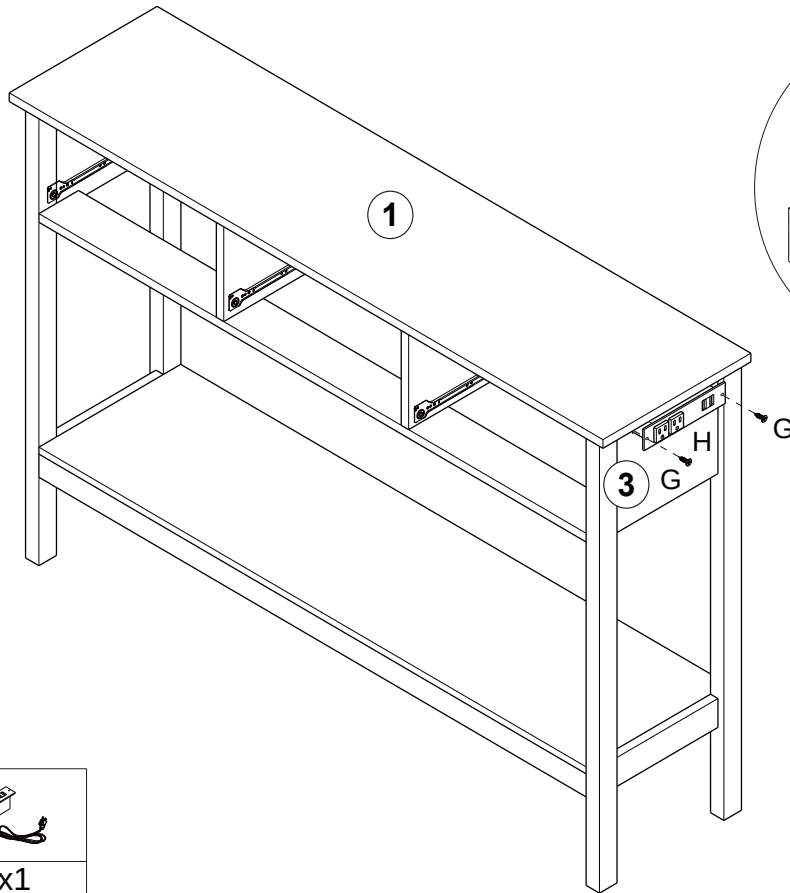


Gx2



Hx1

STEP 12


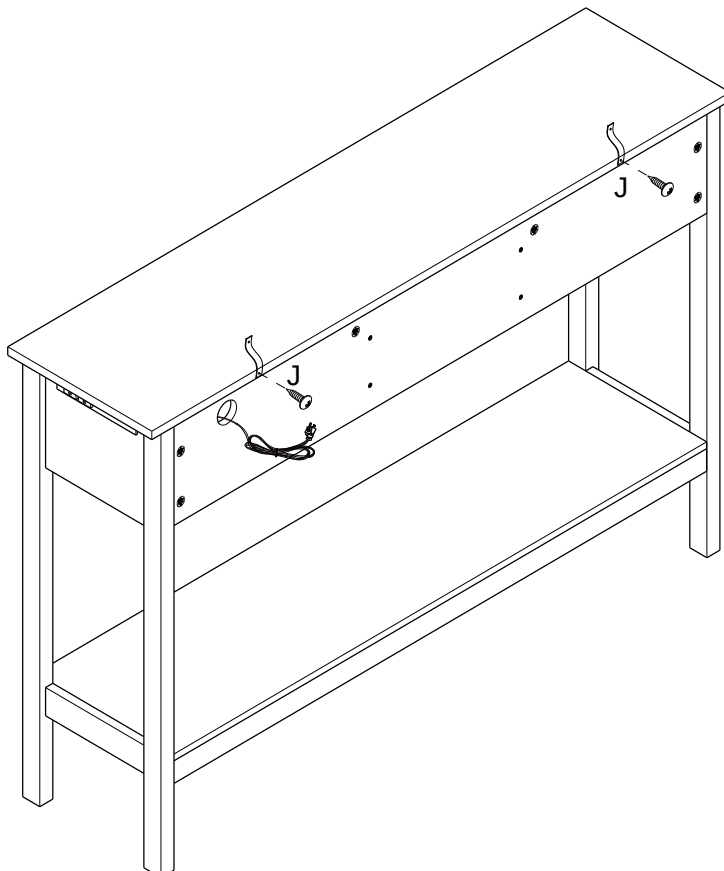


Jx2

Assembly Instructions

STEP 13


X3

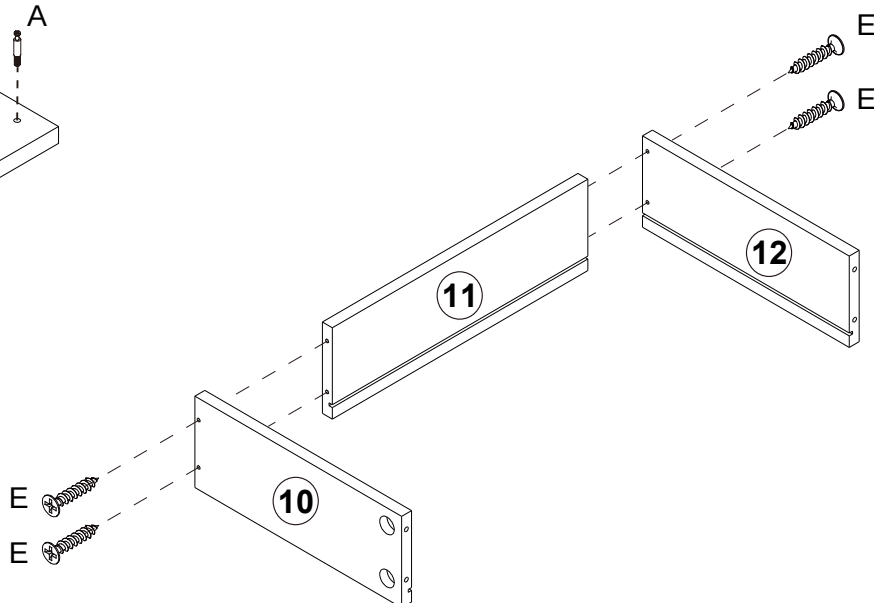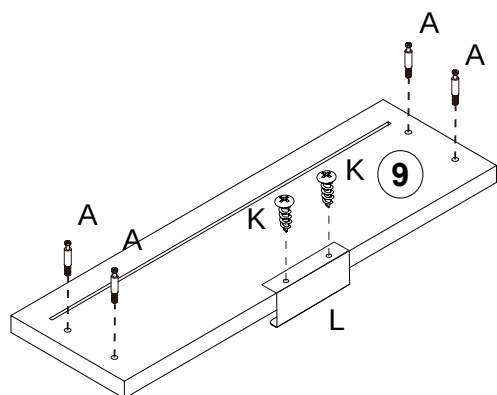

	
Ax12	Lx3
	
Ex12	Kx6

STEP 14


X3

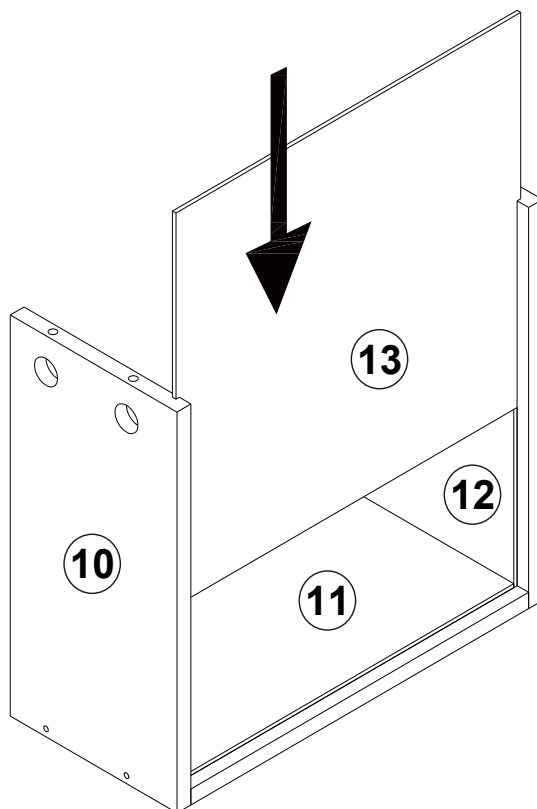

Assembly Instructions

STEP 15


X3

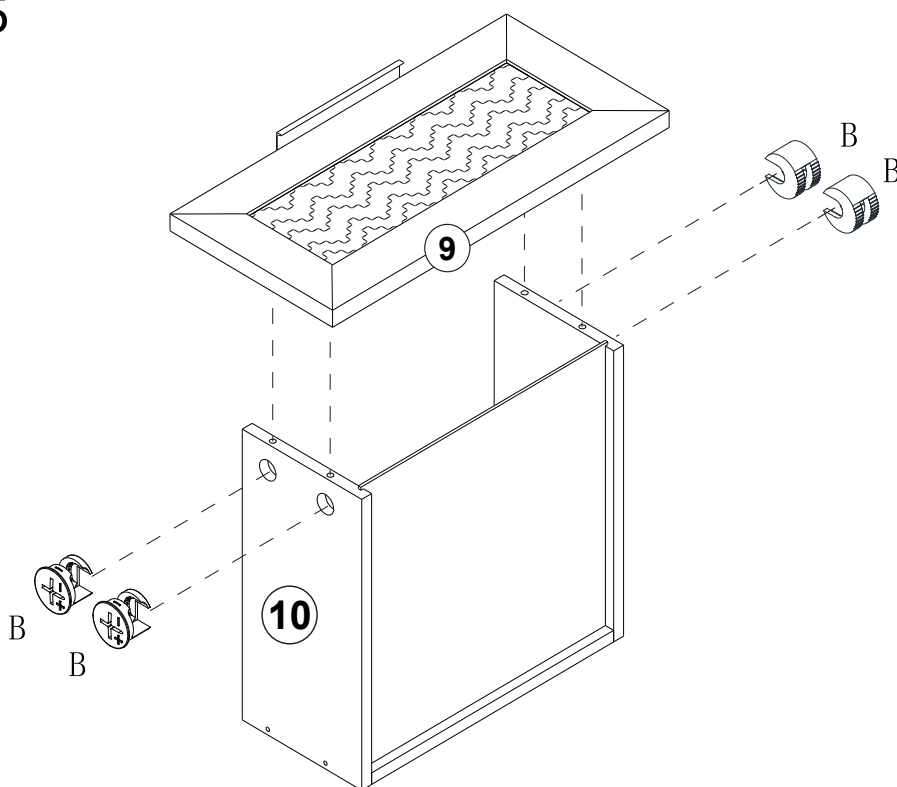

Bx12

STEP 16




X3

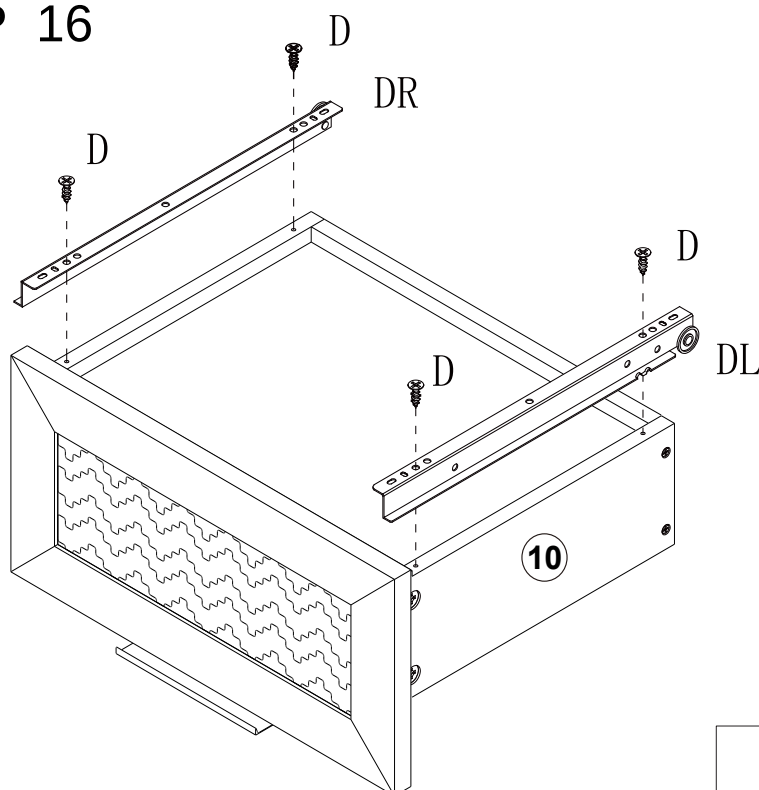

Dx12	DLx3	DRx3

Assembly Instructions

STEP 17

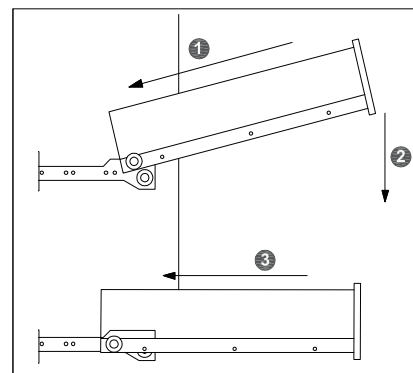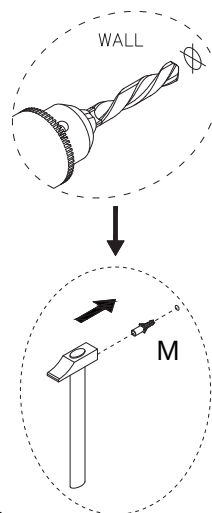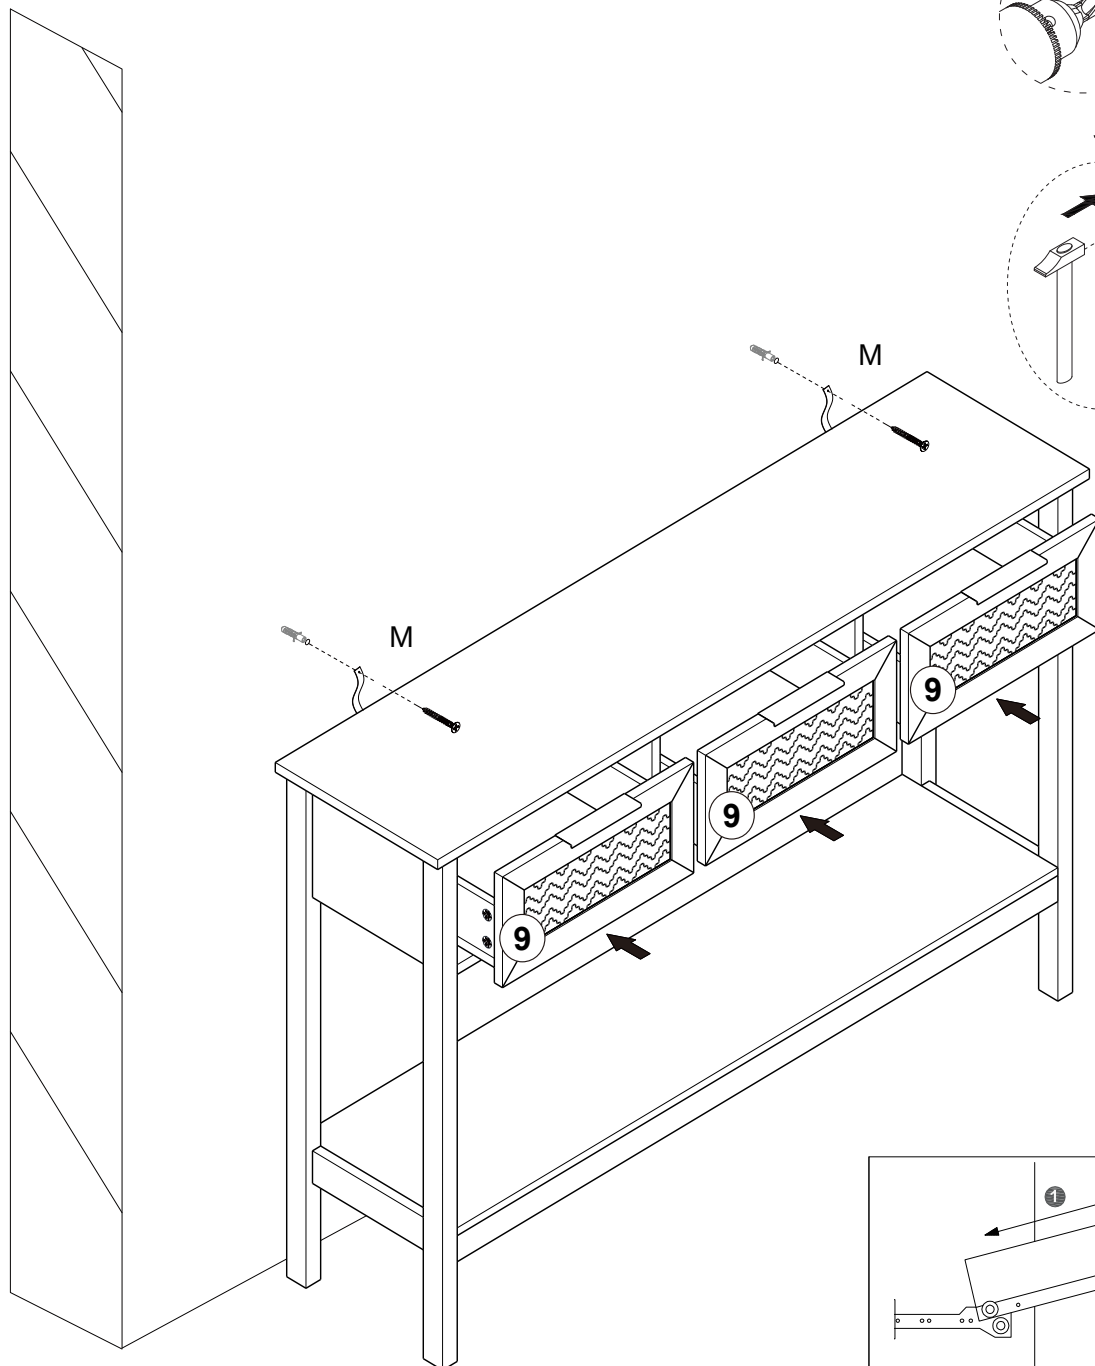

Mx2