


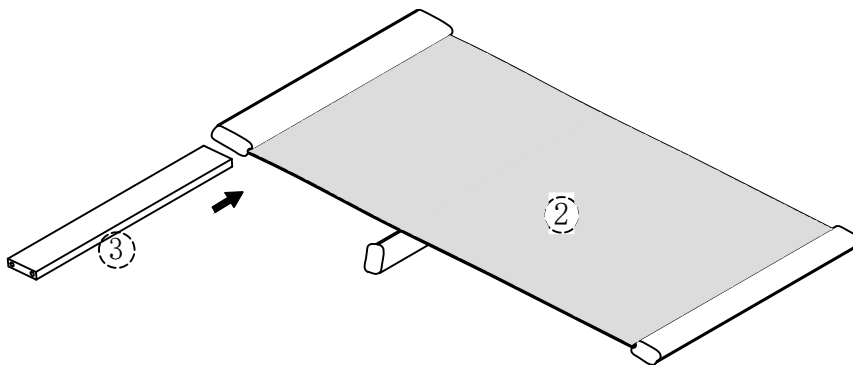



Assembly Instructions

Model NO.		DY026			Product Name		Single Sofa		
Hardware list					Component List				
No.	Part Name	Picture	Dim.	Qty.	No.	Part Name	Picture	Dim.	Qty.
A	Bolt		M8*35mm	12+1	1	Side Frame			2
B	Allen Wrench		5*35*115mm	1	2	Base Cloth			1
					3	Connecting Bar		60*10*2CM	1
					4	Connecting Bar		60*6*2CM	2
					5	Back Cushion		65*45*15CM	1
					6	Seat Cushion		65*68*12CM	1

STEP 1


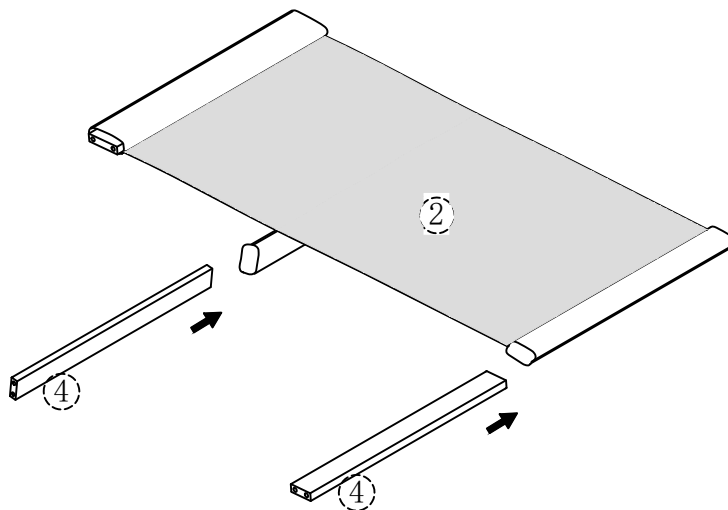


STEP 2

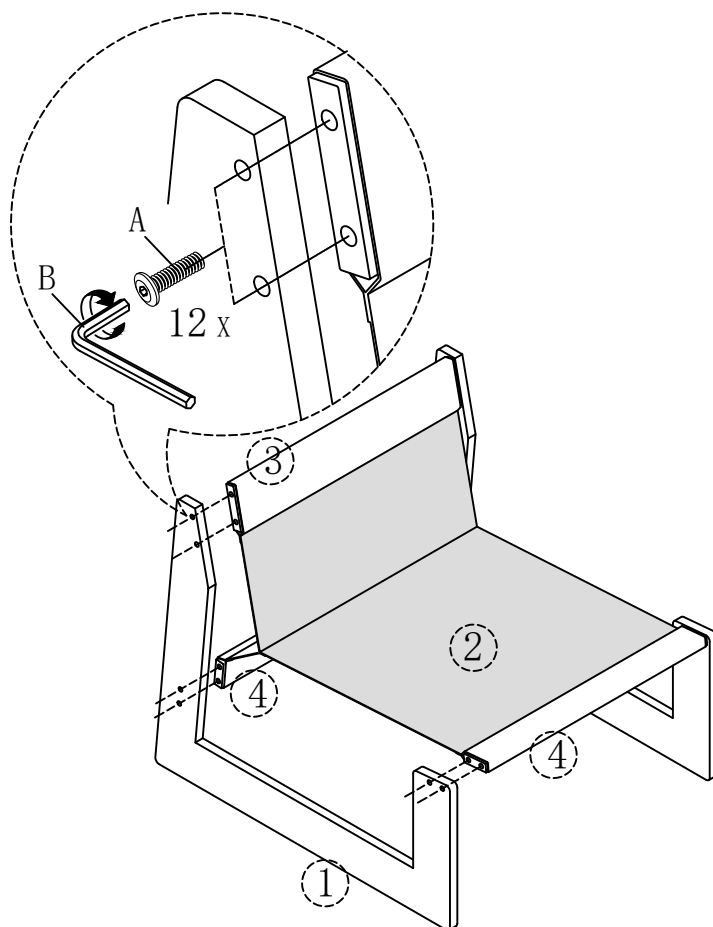


Pass bolt A through side frame 1#, connecting bars 3# and 4# for assembly. Tighten 70% (do not fully tighten). Fully tighten all bolts with Allen Wrench B once assembly is complete.

STEP 3

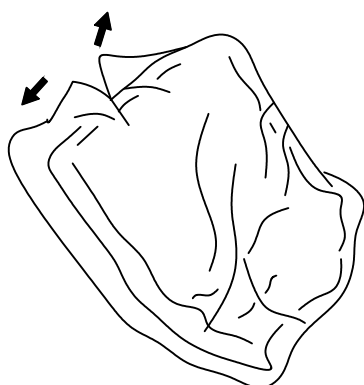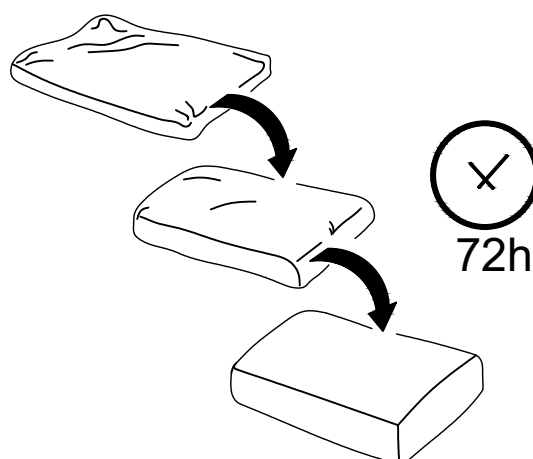


Unzip fabric bag, remove plastic bag containing upholstered part. Tear open plastic bag and take out upholstered component. Avoid scratching upholstery fabric with sharp items. Allow 72 hours for the upholstered component to rebound to original shape.

STEP 4

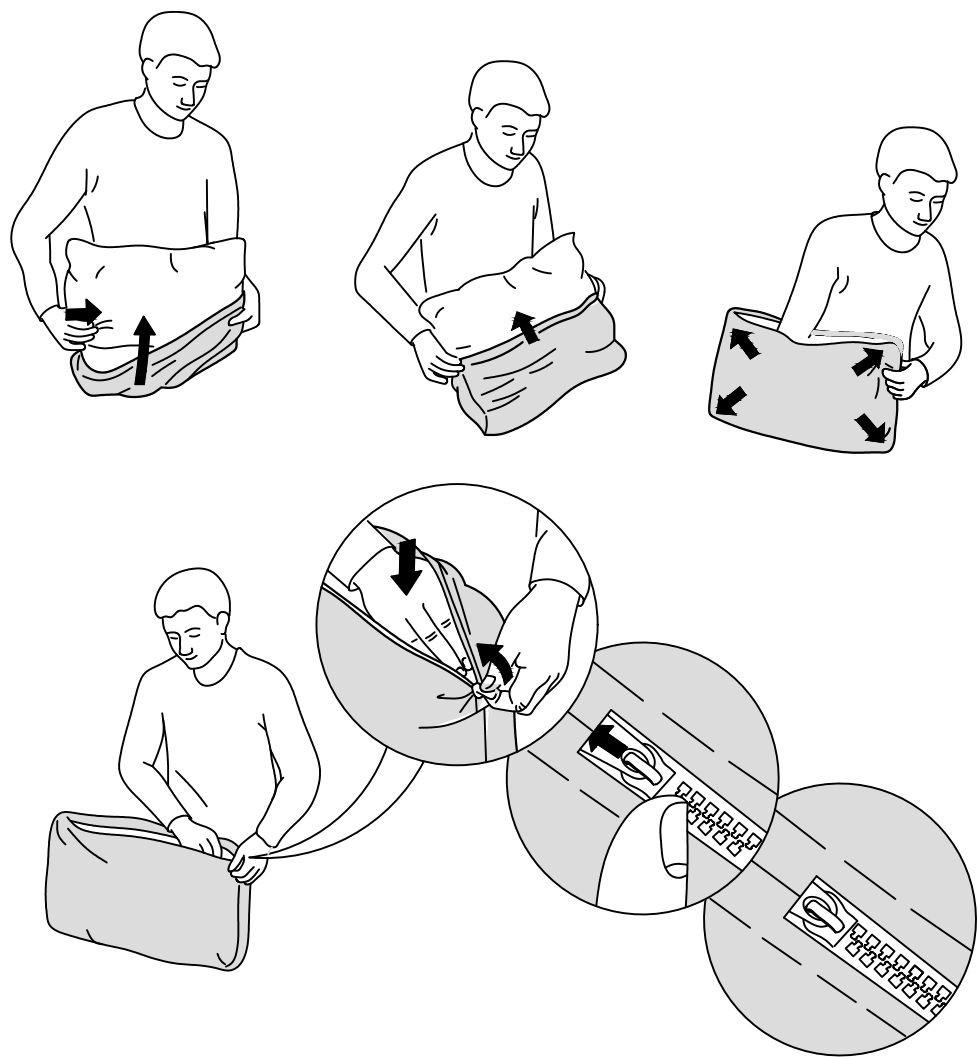

STEP 5

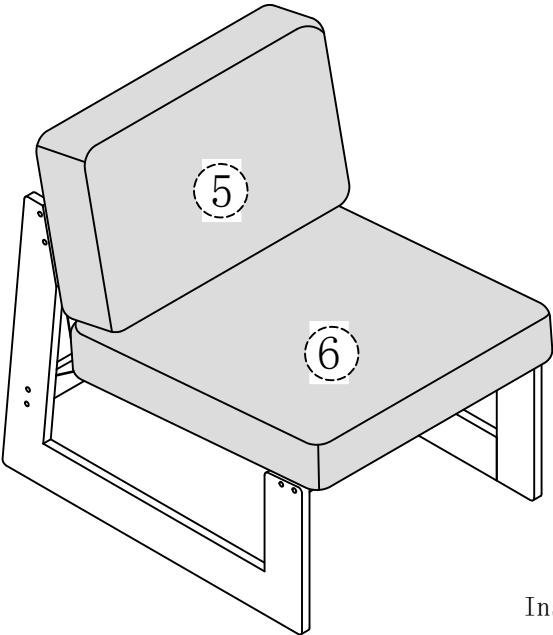

Installation Completed.