



Assembly Instructions


Thanks you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

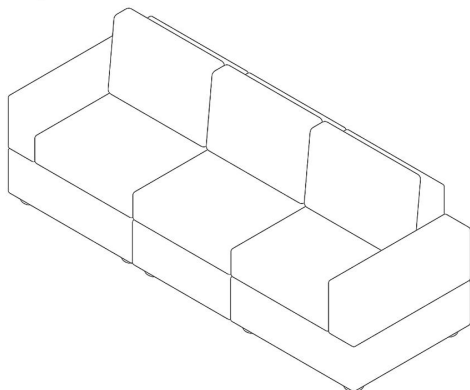


Parts list



X1




X3



X1



X3



X1



X2



X3





X10






X12



1. Check your package quantity, this number should be equal to the number of sofa seats you purchased.

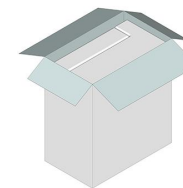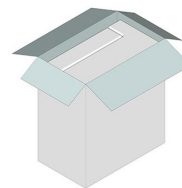



2. Open the carton numbered 1/3 and turn over the sofa base. Open the zipper at the bottom of the sofa seat and take out the armrest, backrest, upholstery and accessory bag.

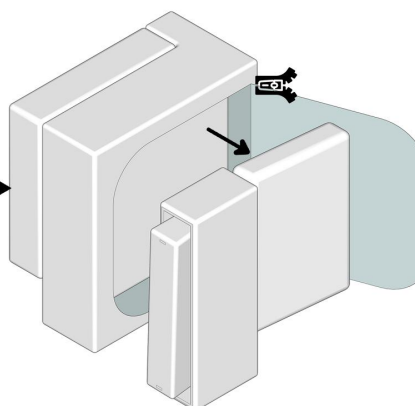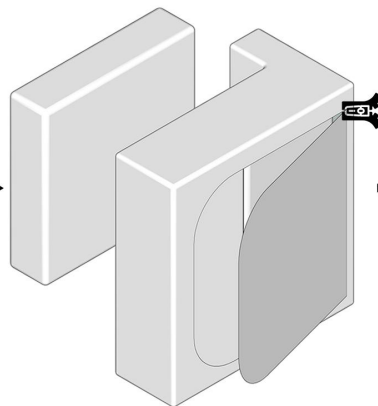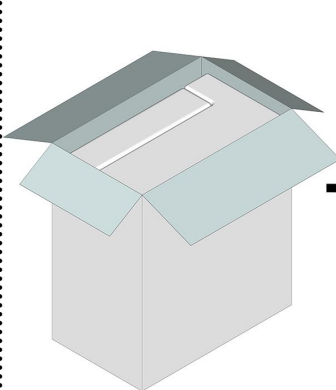

3. Take the foot pad from the accessory bag and screw it onto the nut of the base. Close the zipper and restore the base.

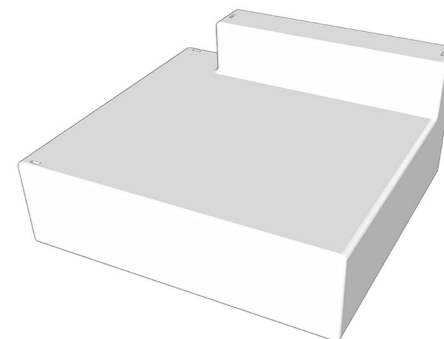
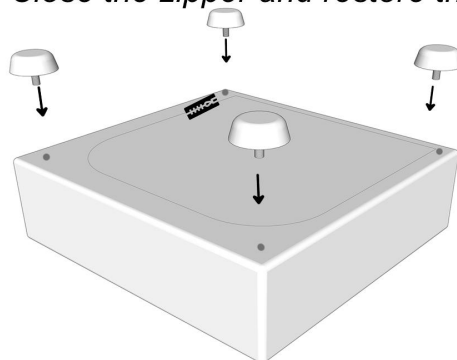


4. Insert the 4 latches into the built-in buckles of the armrest and backrest respectively, and install the armrest to the low position and the backrest to the high position through the latches.

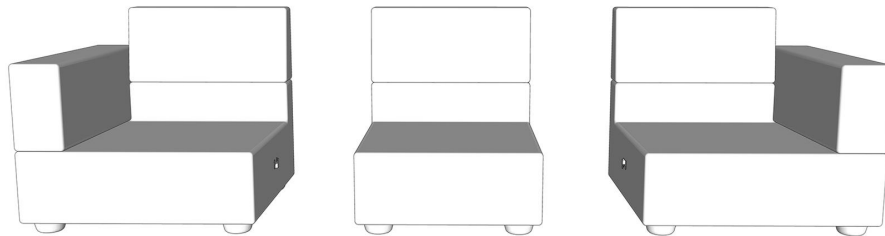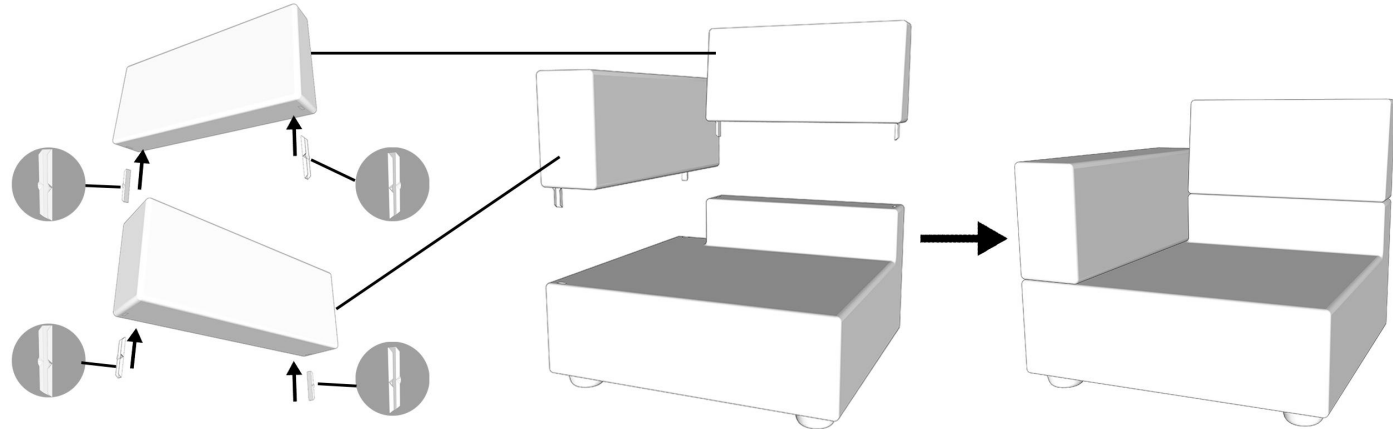

5. Repeat steps 2-4 above for the accessories in other boxes. Box number 2/3 only has one backrest to install. The installation steps for box number 3/3 are the same as those for box number 1/3.

6. According to the diagram, connect the middle position and the right position to the left through the preset hook to complete the installation of the sofa base.

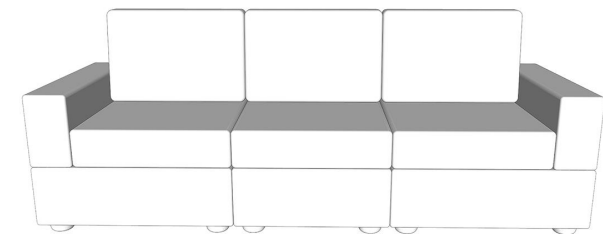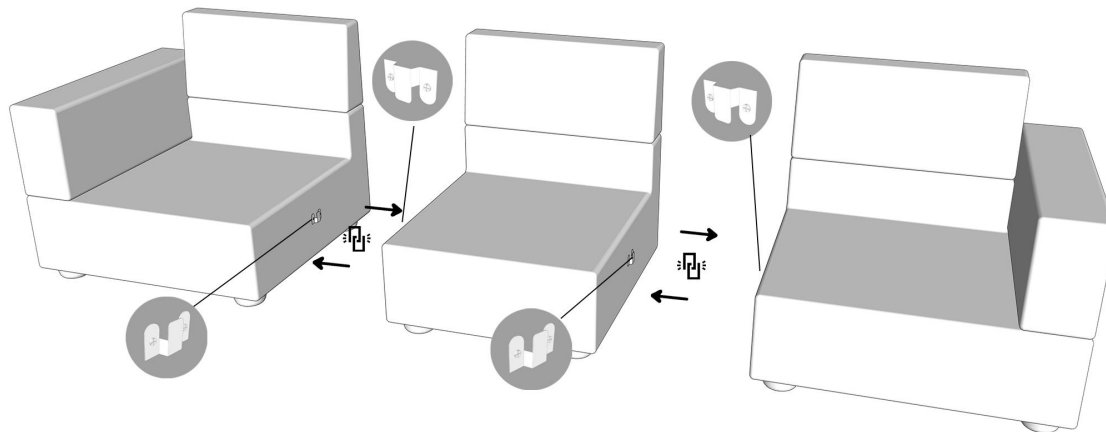

7. Place the corresponding back and seat cushions on the seat.