

Desk

Product ID. 7A5QU




Scan for Support
support@garvee.com



Distributed by
GARVEE.com

V2609140JKC

Assembly Instruction

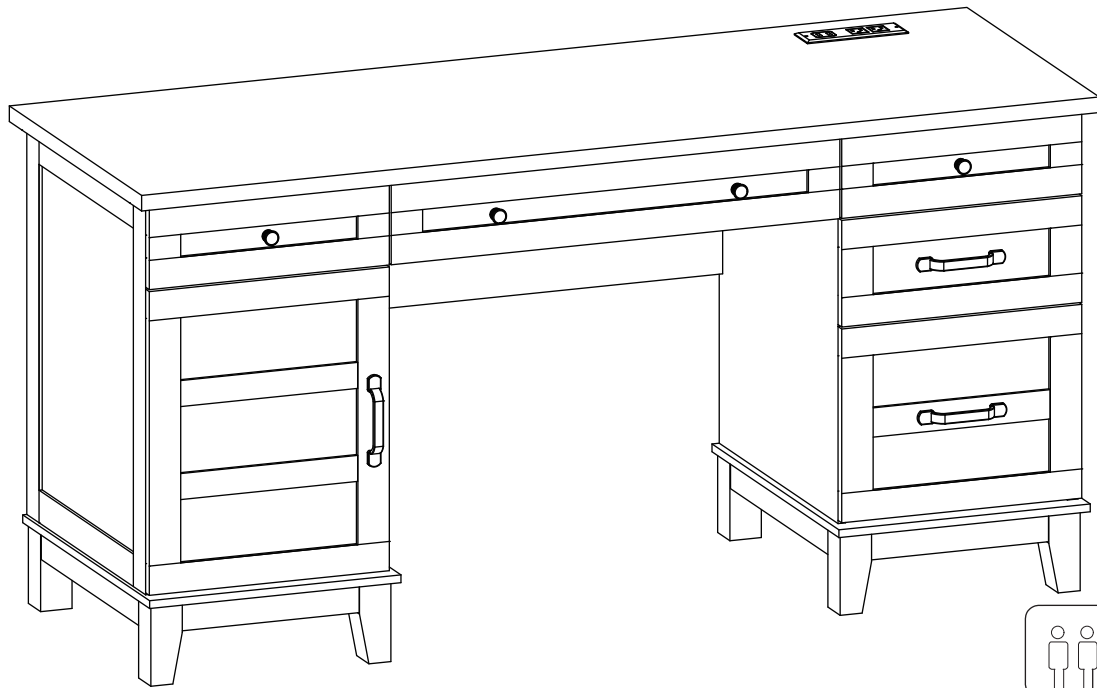

Trouble shooting:

Missing / Wrong / Broken parts and installation issues



Send email with your question pic ,order NO. and screenshot of order details to:

support@garvee.com

Respond within 24 hours



Issue resolved

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

Thank you for purchase on our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name or Order ID so that we can assist you better.

WARNING



Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest drawers or shelves.
6. Never allow children to climb or bang on drawers, doors or shelves.

WARNING	
	Children have died from furniture tip-over. To reduce the risk of furniture tip-over: - ALWAYS anchor the anti-tip device to the wall. Installation is MANDATORY. - DO NOT set TVs or other heavy objects on top of this product. - NEVER allow children to stand, climb or hang on drawers, doors, or shelves. - NEVER open more than one drawer at a time. - Place the heaviest items in the lowest drawers.
	
















Part List











Make sure you received Carton 1/2 and 2/2 before assembling

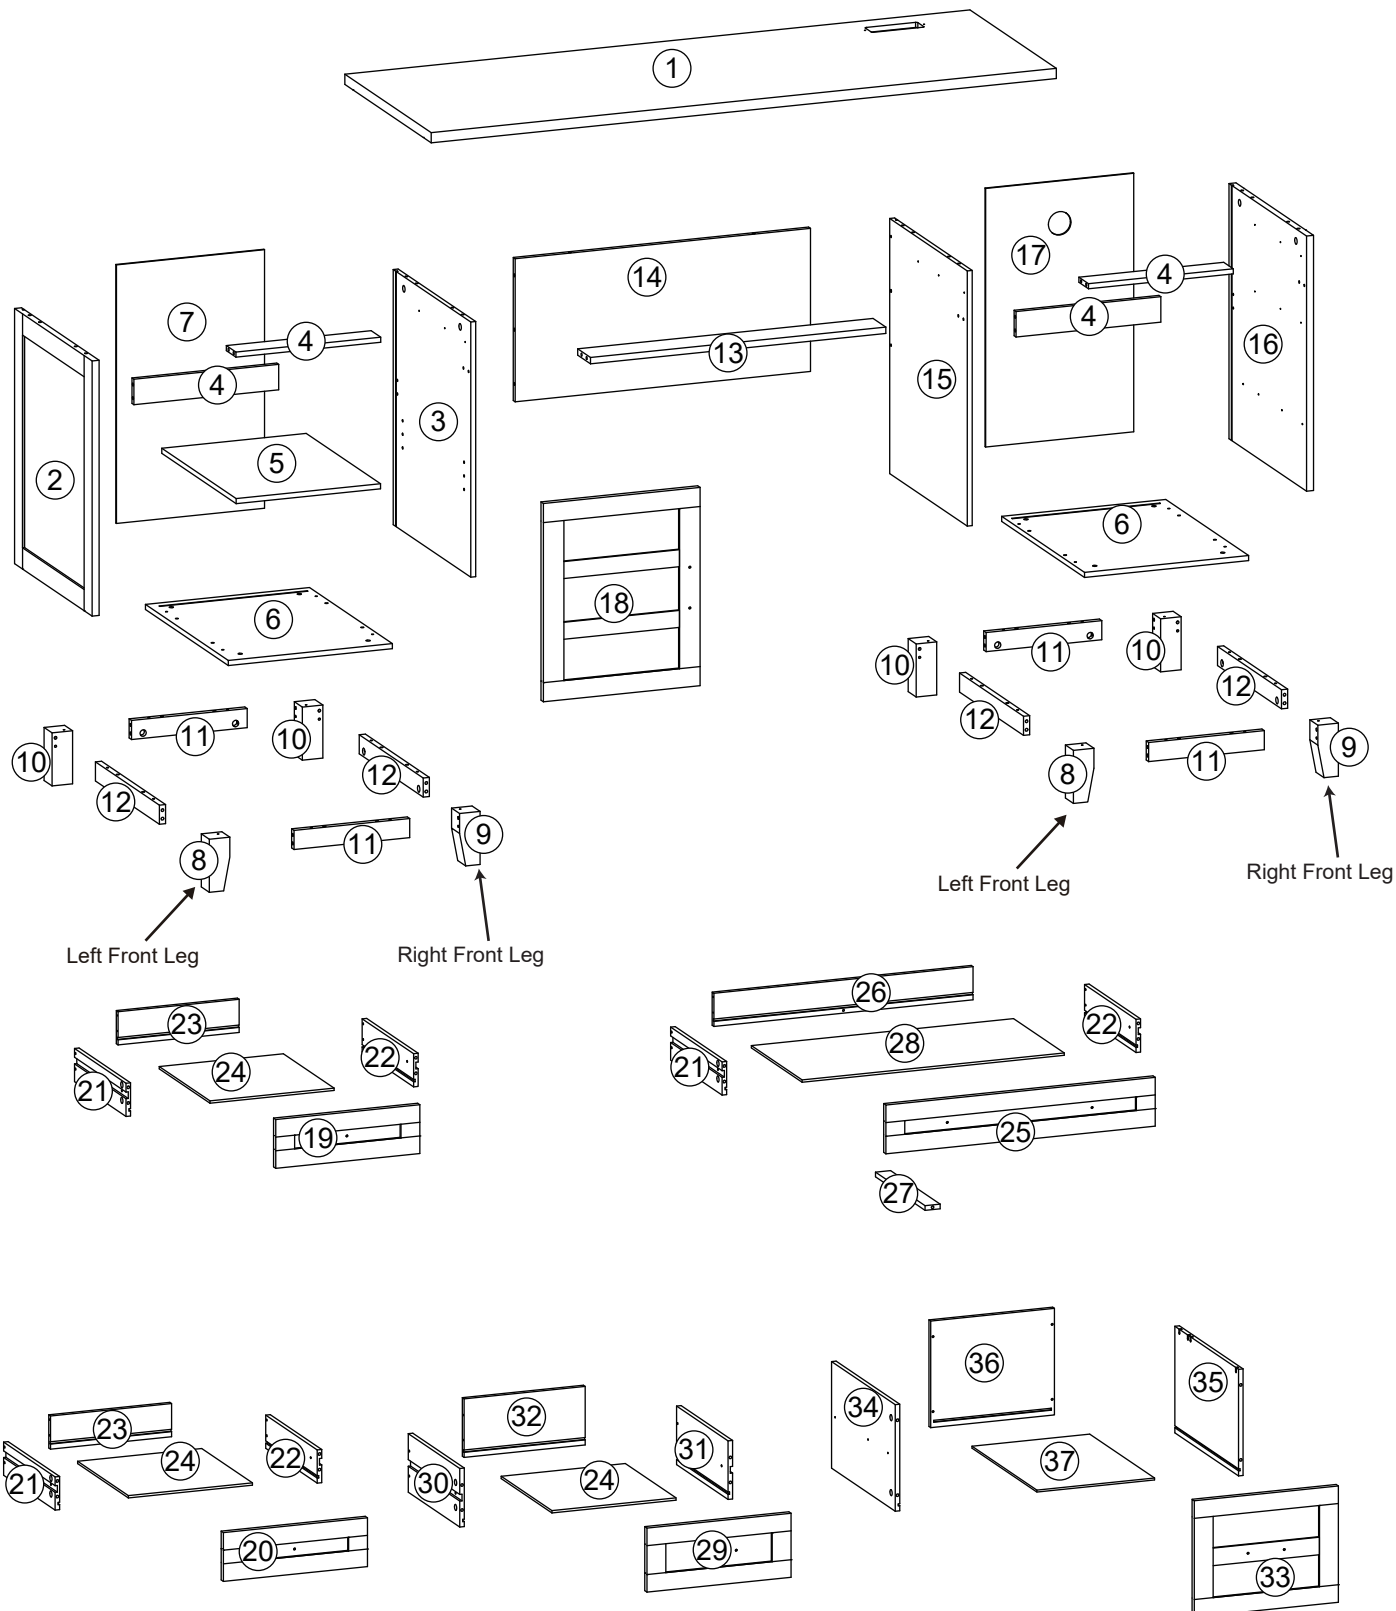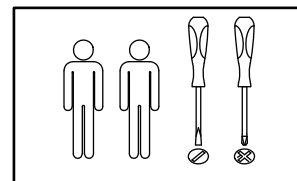

Please cut if you need, but keep for the future use after assembling

Part List

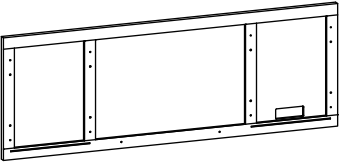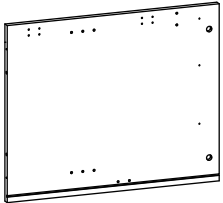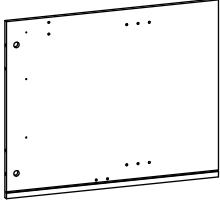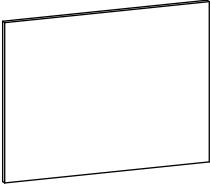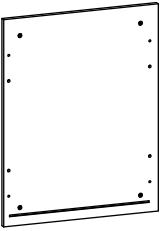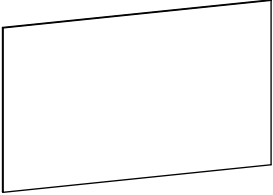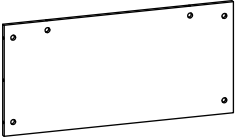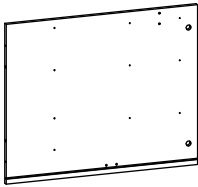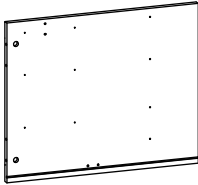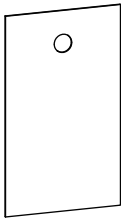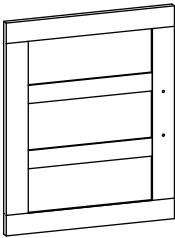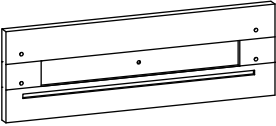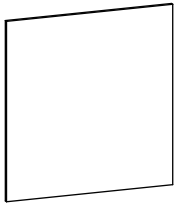① ×1	② ×1	③ ×1	④ ×4
			
⑤ ×1	⑥ ×2	⑦ ×1	⑧ ×2
			
⑨ ×2	⑩ ×4	⑪ ×4	⑫ ×4
			
⑬ ×1	⑭ ×1	⑮ ×1	⑯ ×1
			
⑰ ×1	⑱ ×1	⑲ ×1	⑳ ×1
			
㉑ ×3	㉒ ×3	㉓ ×2	㉔ ×3
			

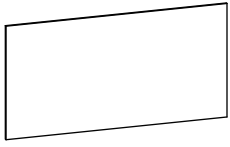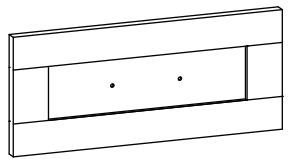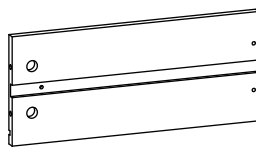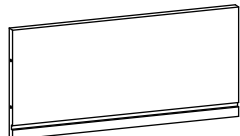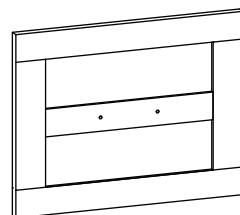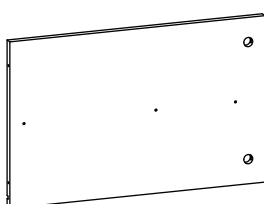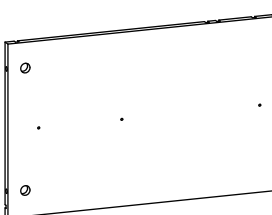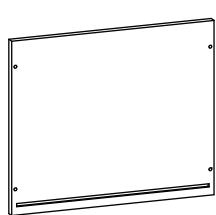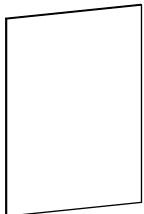Part List			
②⑤ ×1	②⑥ ×1	②⑦ ×1	②⑧ ×1
			
②⑨ ×1	③① ×1	③② ×1	③③ ×1
			
③④ ×1	③⑤ ×1	③⑥ ×1	③⑦ ×1
			
③⑧ ×1			
			

Box A:

① ×1 ⑥ ×2 ⑪ ×4 ⑫ ×4 ⑬ ×1 ⑭ ×1 ⑱ ×1 ⑲ ×1 ⑳ ×1 ㉑ ×3 ㉒ ×3
 ㉓ ×2 ㉔ ×3 ㉕ ×1 ㉖ ×1 ㉘ ×1 ㉙ ×1 ㉚ ×1






Box B:

② ×1 ③ ×1 ④ ×4 ⑤ ×1 ⑦ ×1 ⑧ ×2 ⑨ ×2 ⑩ ×4 ⑮ ×1 ⑯ ×1 ⑰ ×1
 ㉗ ×1 ㉚ ×1 ㉛ ×1 ㉜ ×1 ㉝ ×1 ㉞ ×1 ㉟ ×1 ㊱ ×1

Hardware box x1


Instruction sheet x1

Hardware List


A ×71+7	B ×71+7	C ×50+5	D ×24+2	E ×8
		 6×30	 M3×12	 M3×14
F ×14+1	G ×37+3	H ×16+1	I ×6	J ×8
 M4×12	 M4×35	 M4×50	 M4×6	 M4×10
K ×2	L ×3	M ×4	N ×8	O ×8
 M4×12				
P ×2	Q ×8	R ×2	S ×1	T ×6
				
U ×2	V ×12+1	W ×4	X ×2	Y ×2
	 M4×14		 M4×16	 M3×12

Tools required (Please prepare by yourself before installing)

Phillips Screwdriver


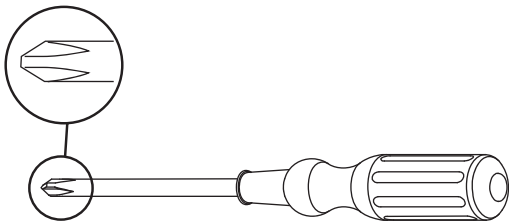


Straight Screwdriver

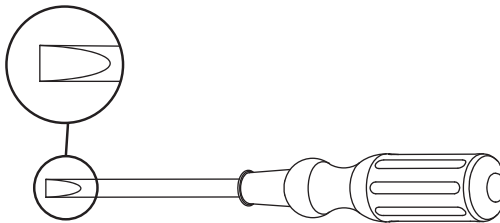


Power Tool NOT Recommended

To ensure proper assembly we have included the following guides:

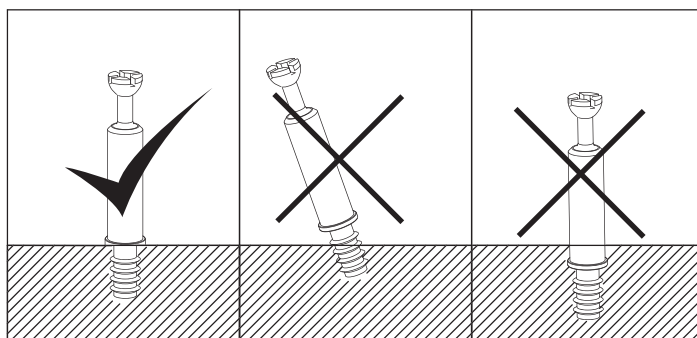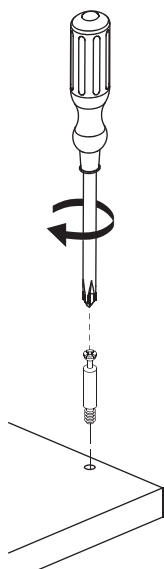


Insert threads of Locking Bolts completely, and stop once threads are no longer visible.

Do NOT overturn.

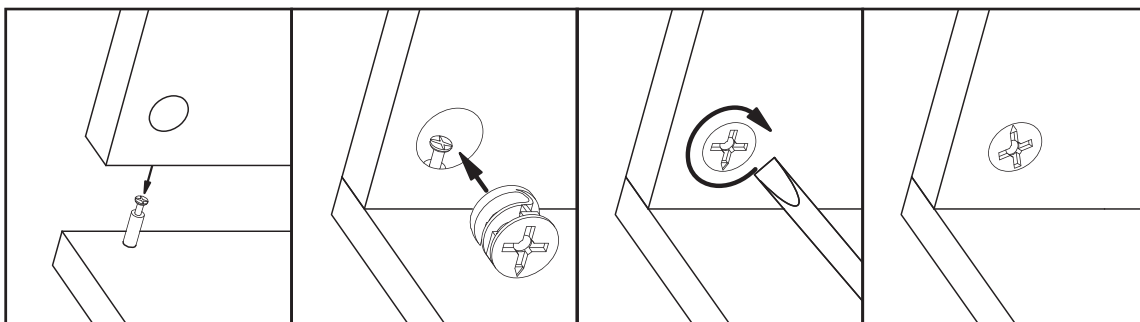


Reference this guide when assembling all Cam Locks.

Do NOT overturn.

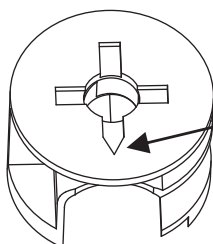


Notice: "pointer arrow" on cam face the Bolt when inserted the cam.



Separate the drawer slider into R-1/R-2

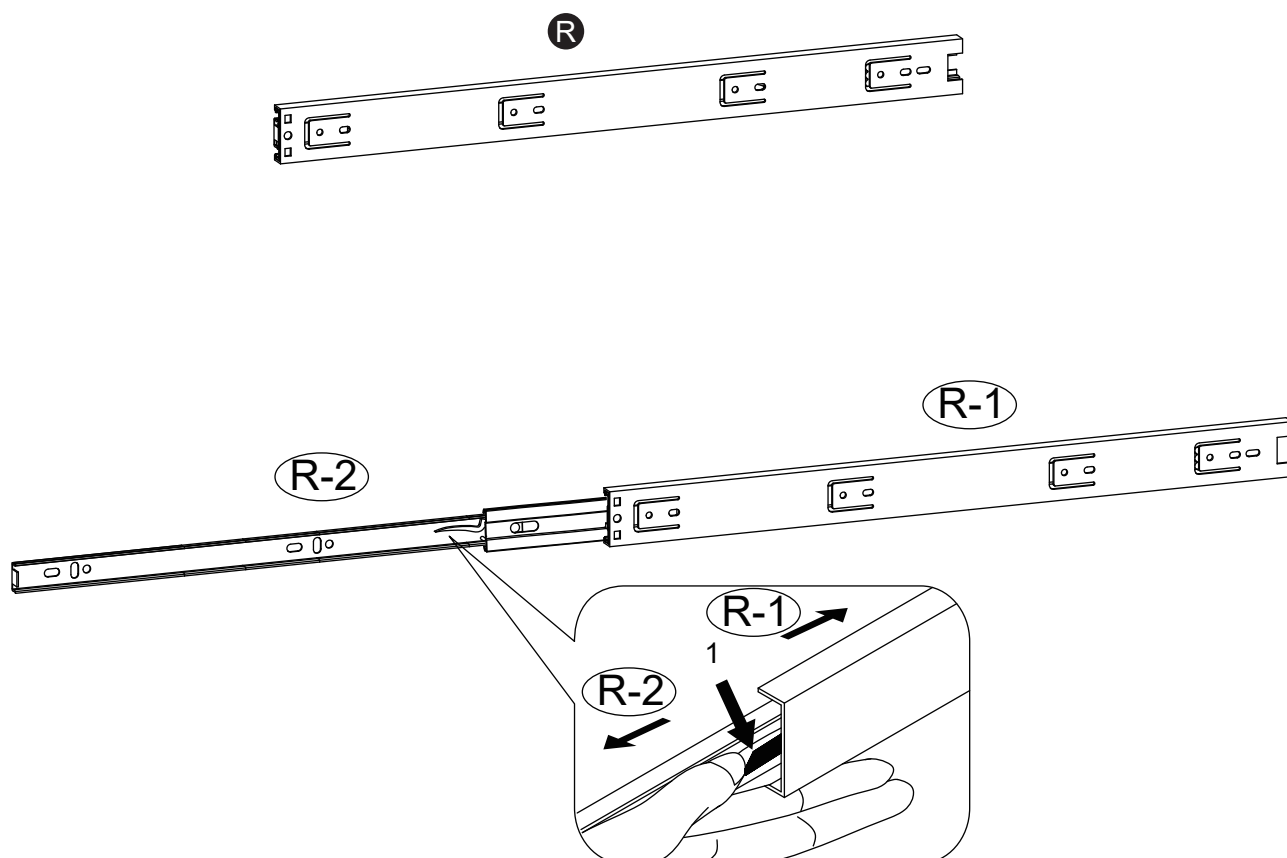


Press here to separate the drawer slider into R-1/R-2



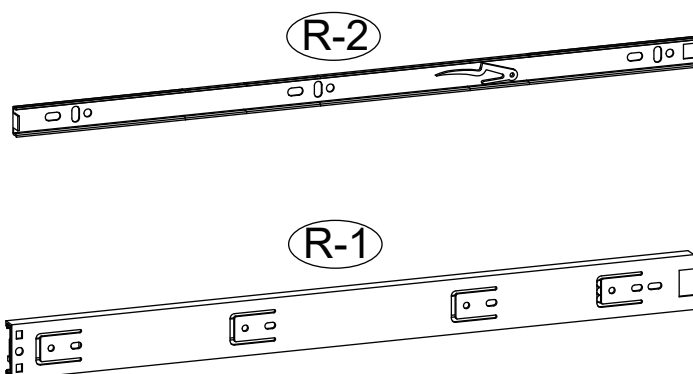


Step 1



A×5	B×5	G×5	I×2	M×2
				

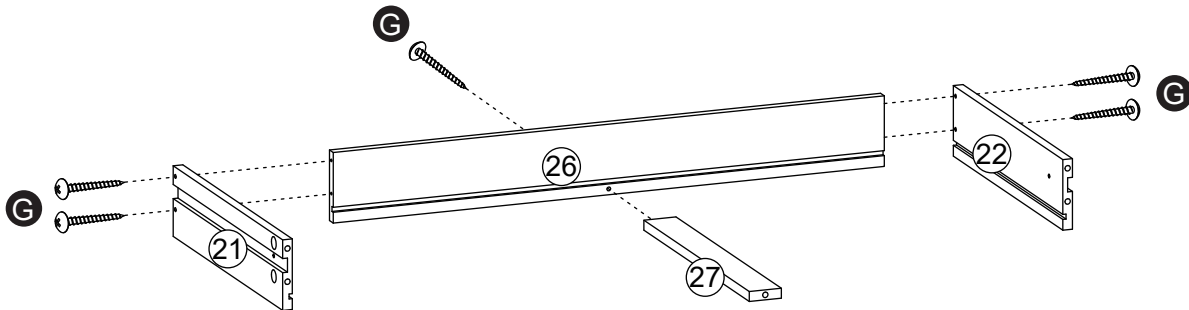


90 °
Rotate the drawer box


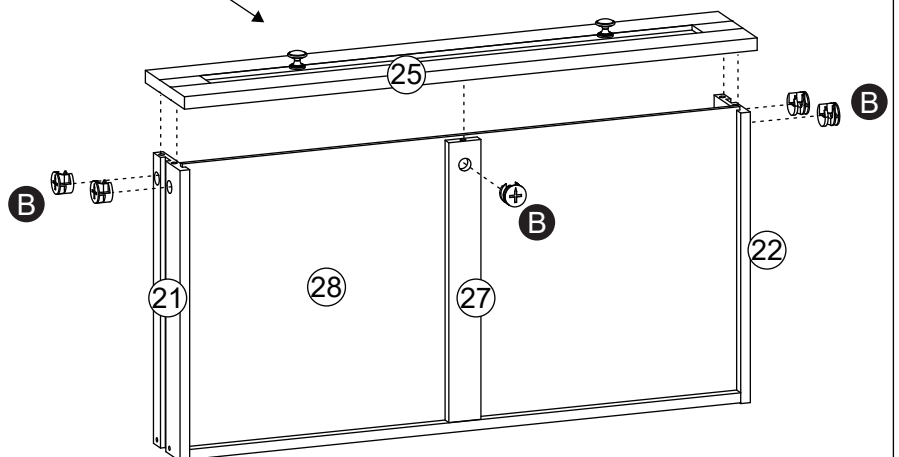
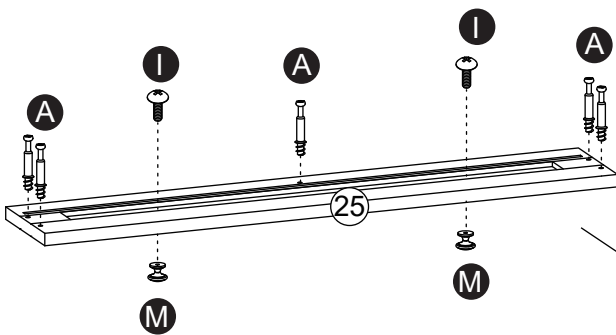
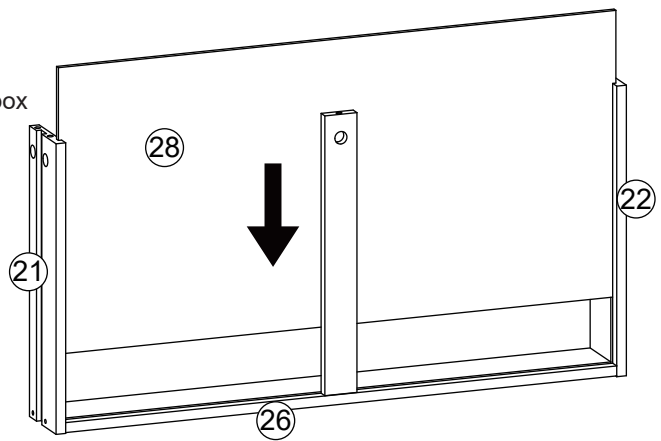


Step 2



A × 4	B × 4	G × 4	I × 1	M × 1
				

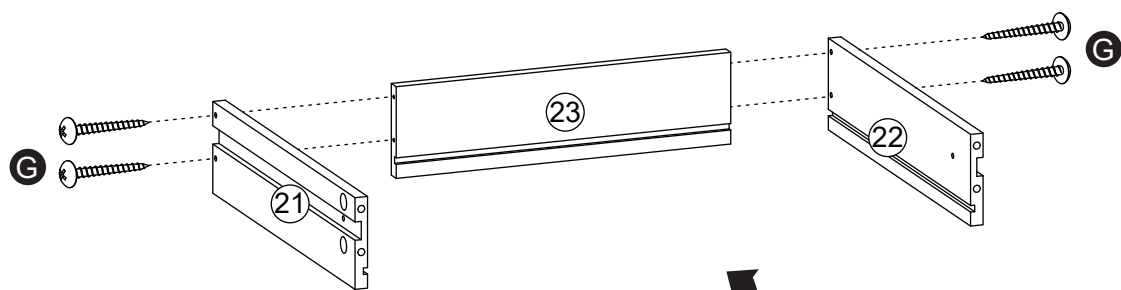


Rotate the drawer box

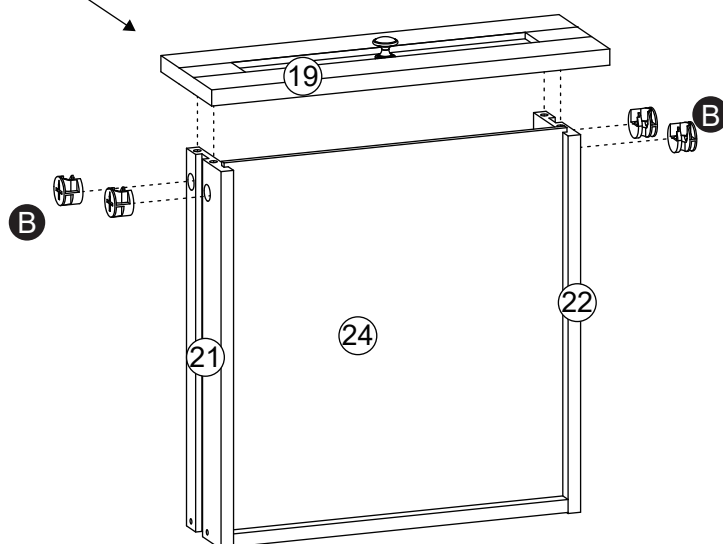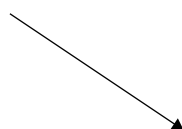
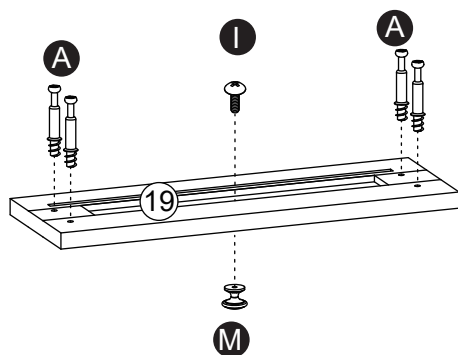
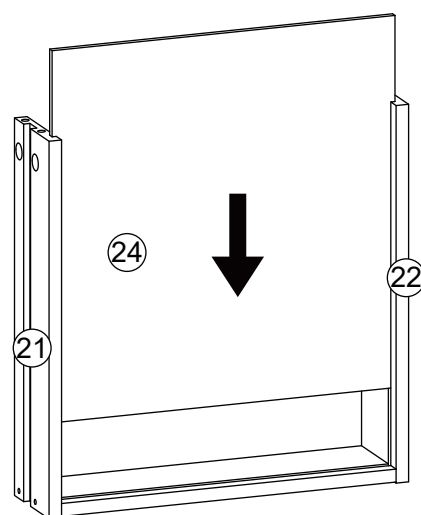


Step 3




A × 4	B × 4	G × 4	I × 1	M × 1
				

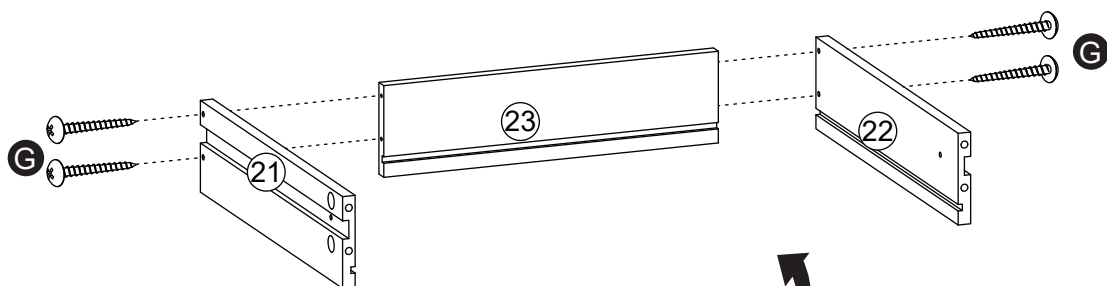


Rotate the drawer box

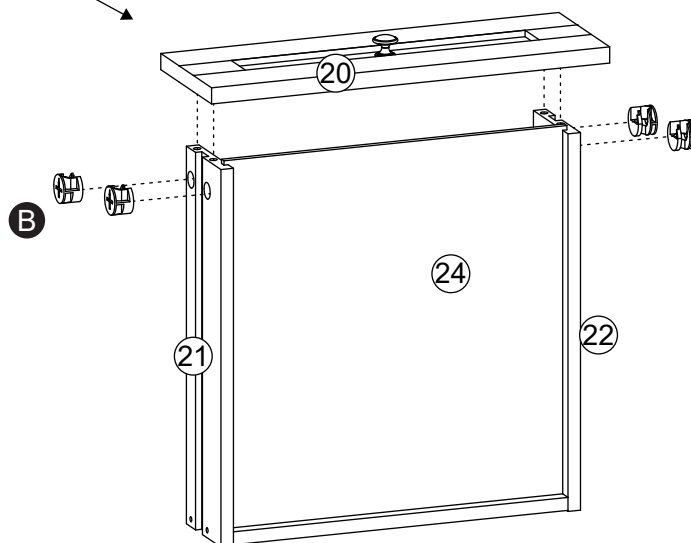
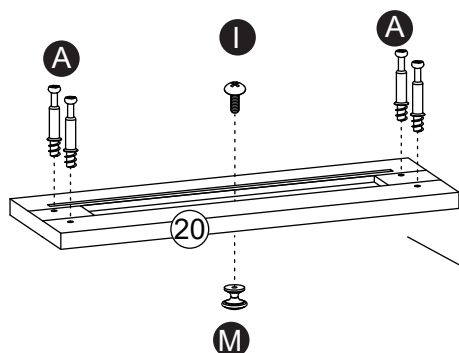
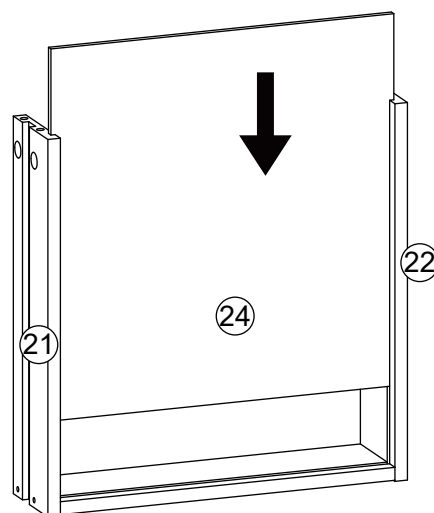


Step 4





A × 4	B × 4	G × 4	I × 2	L × 1
				

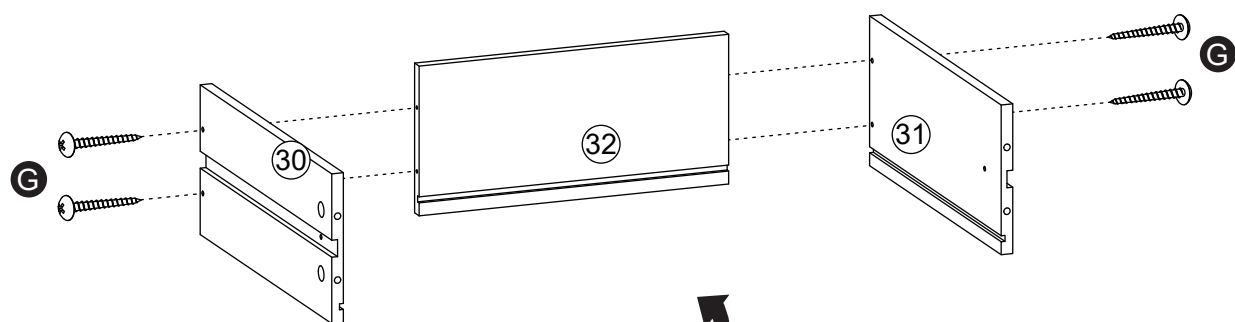


Rotate the drawer box

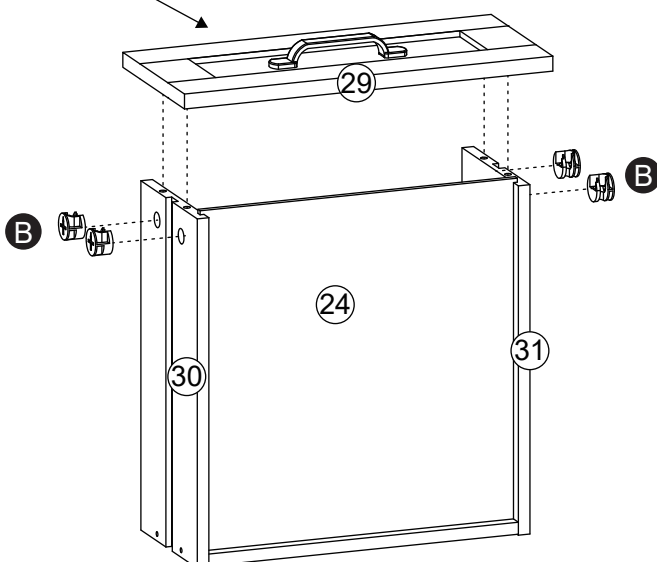
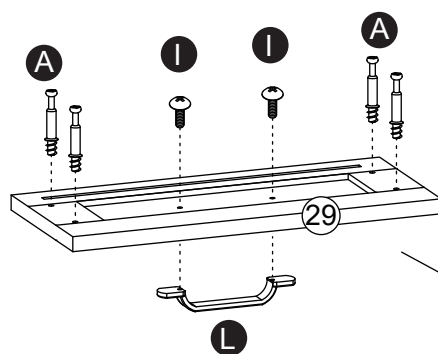
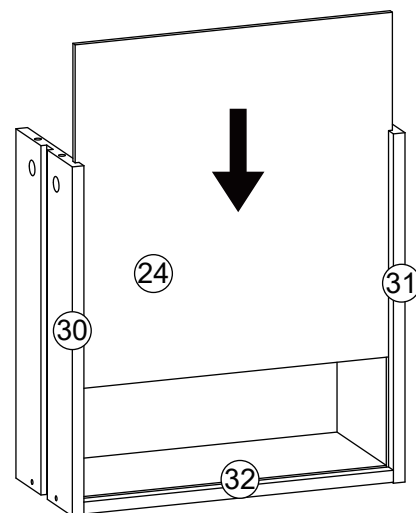


Step 5

A × 4	B × 4	G × 4	K × 2	L × 1
				





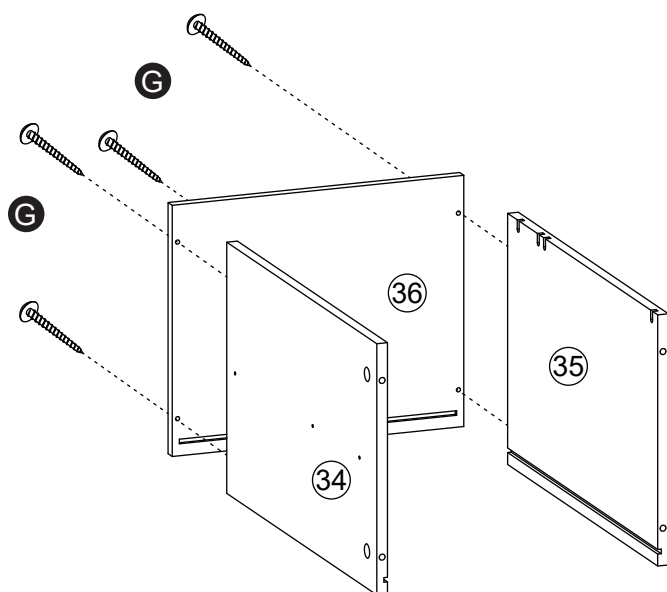


Rotate the drawer box

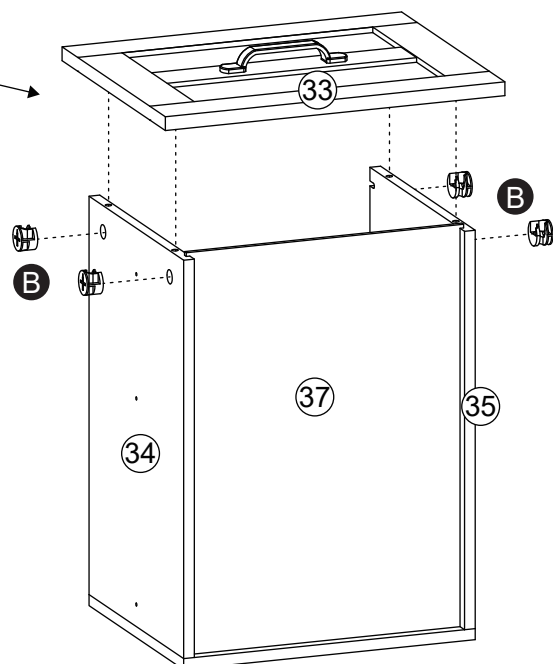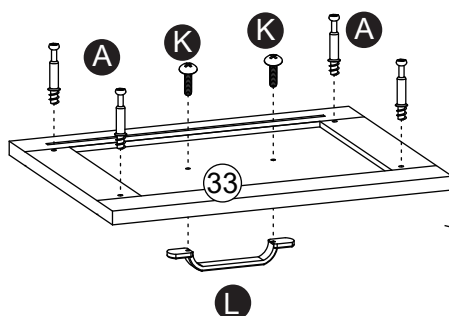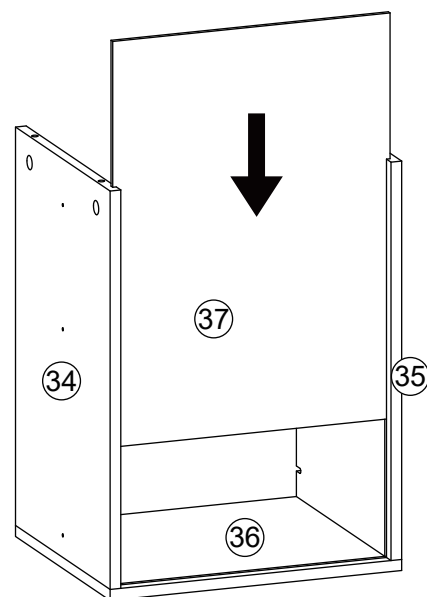


Step 6




F × 6	P × 2	R × 2
		

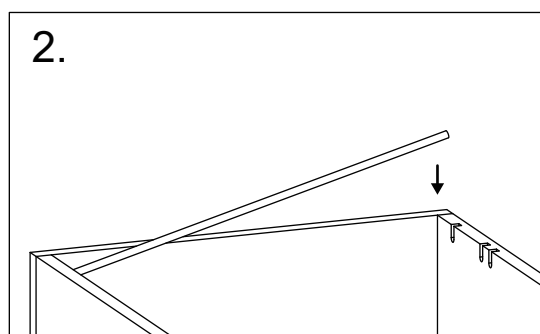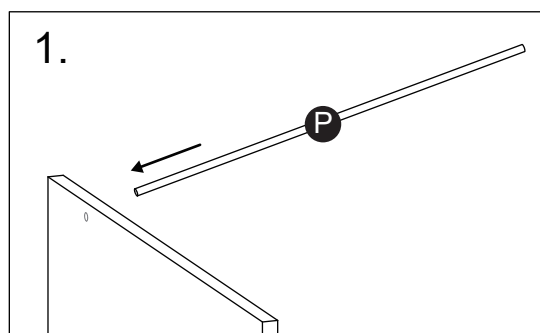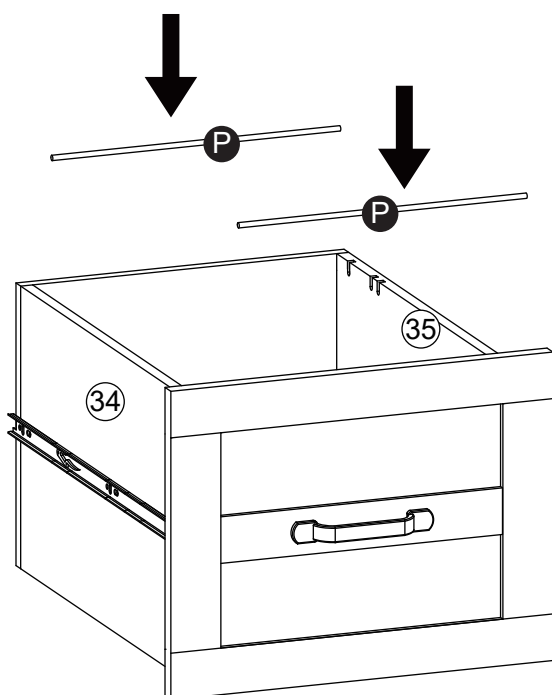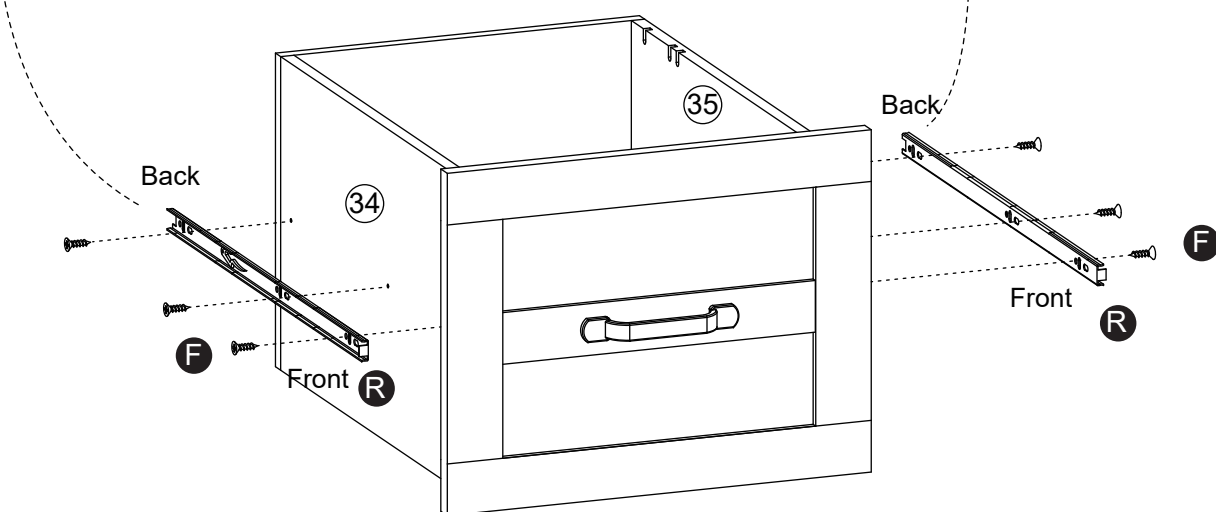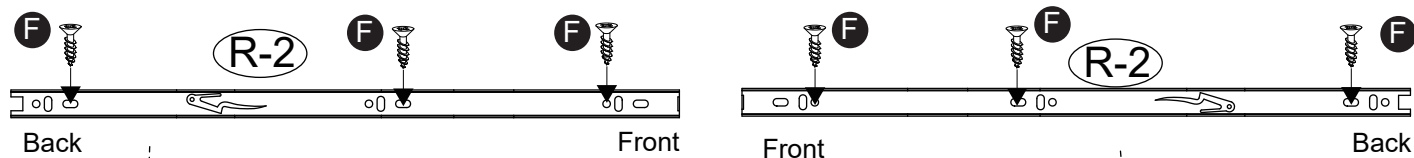


Step 7

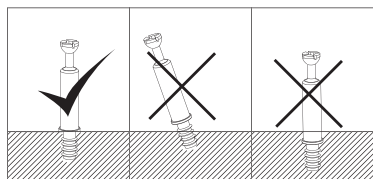


A × 8	D × 6	Q × 2

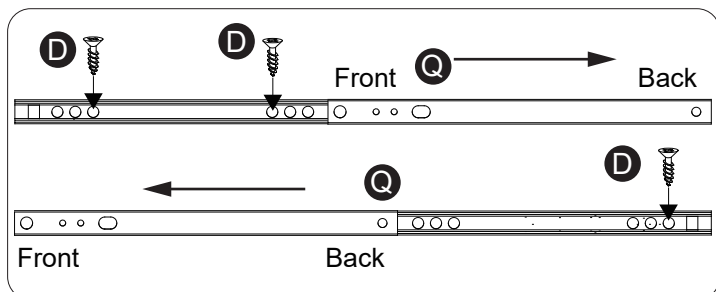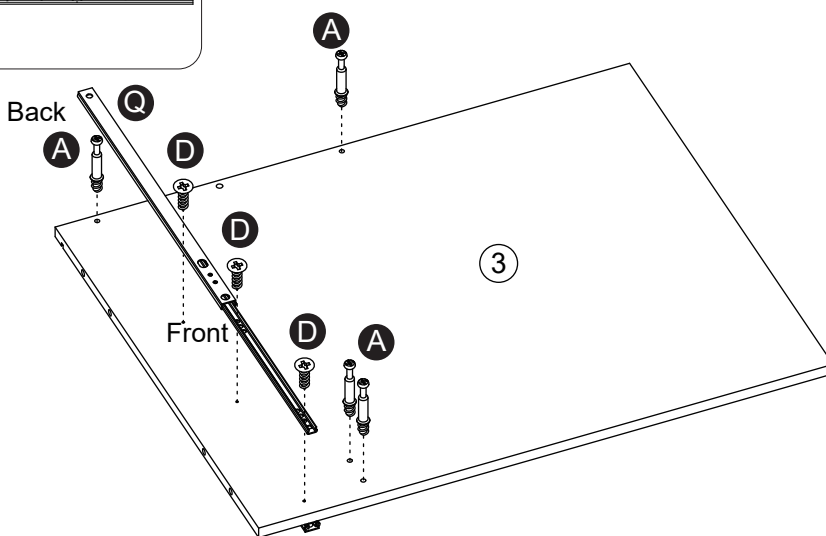
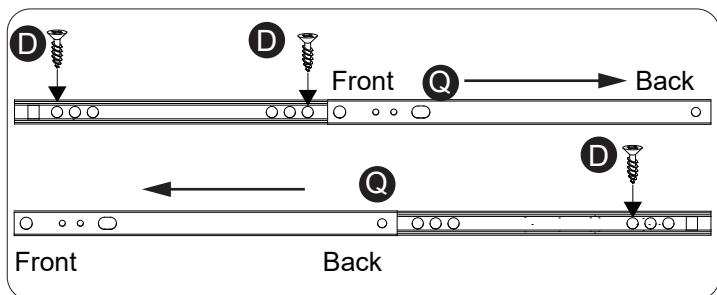


180°
Turn the panel over after this step

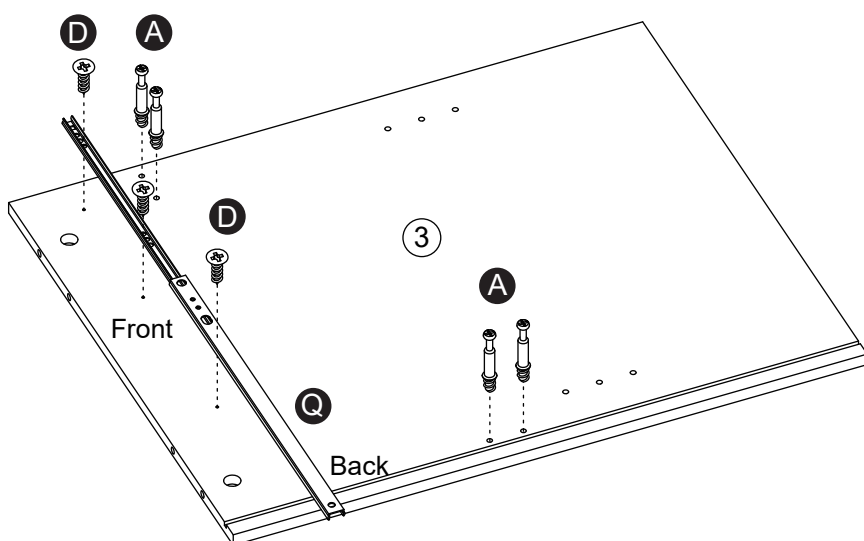


Step 8


A×4	D×3	Q×1
		

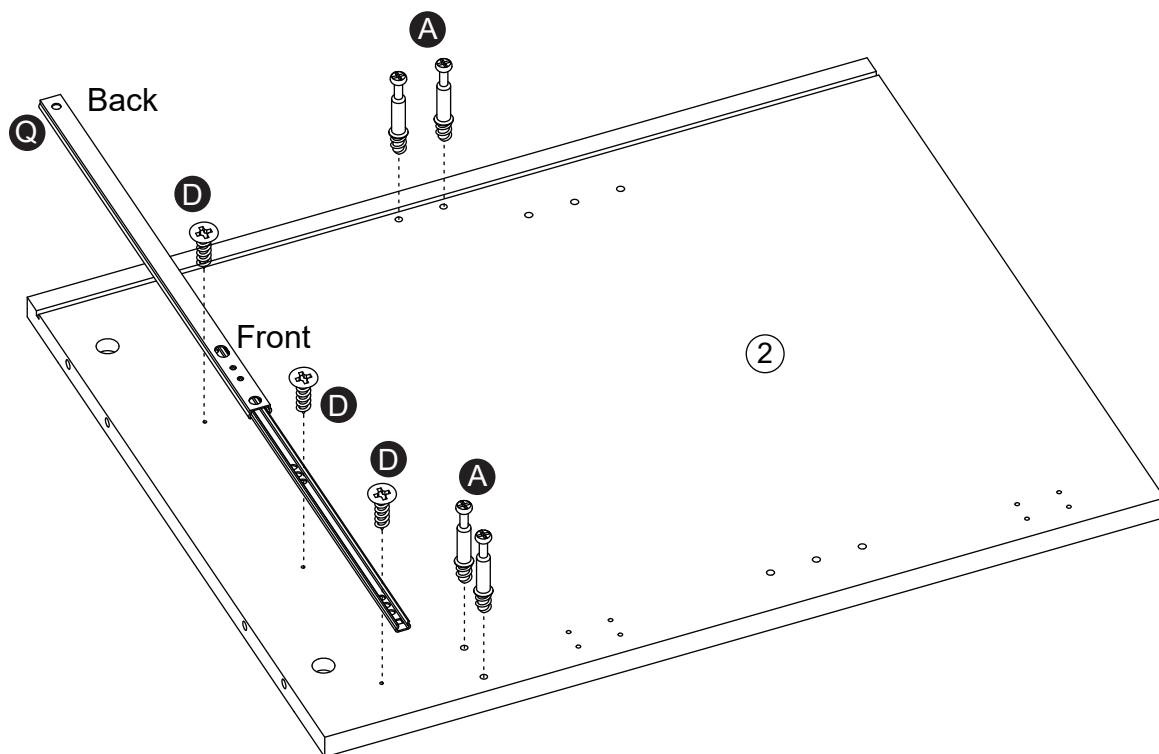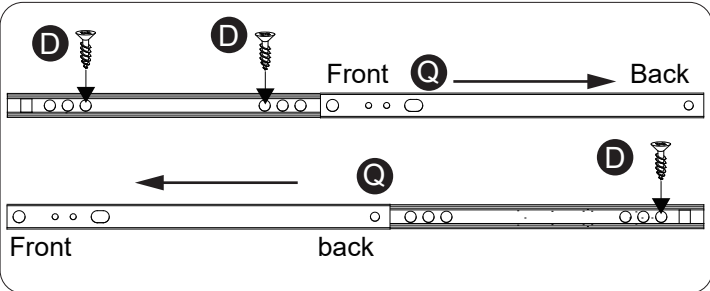


Step 9

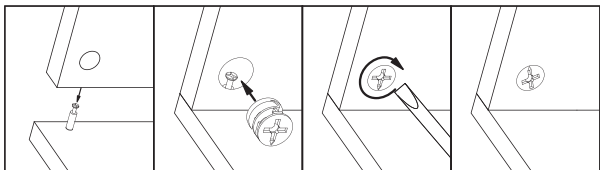


B × 8	C × 4	G × 4

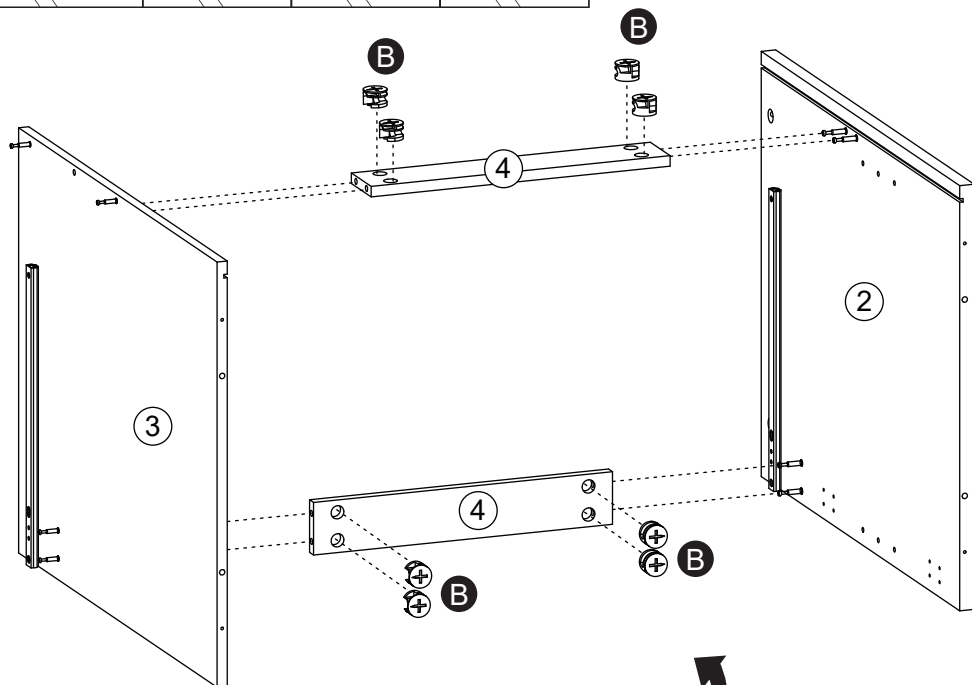


90 °
Rotate the frame

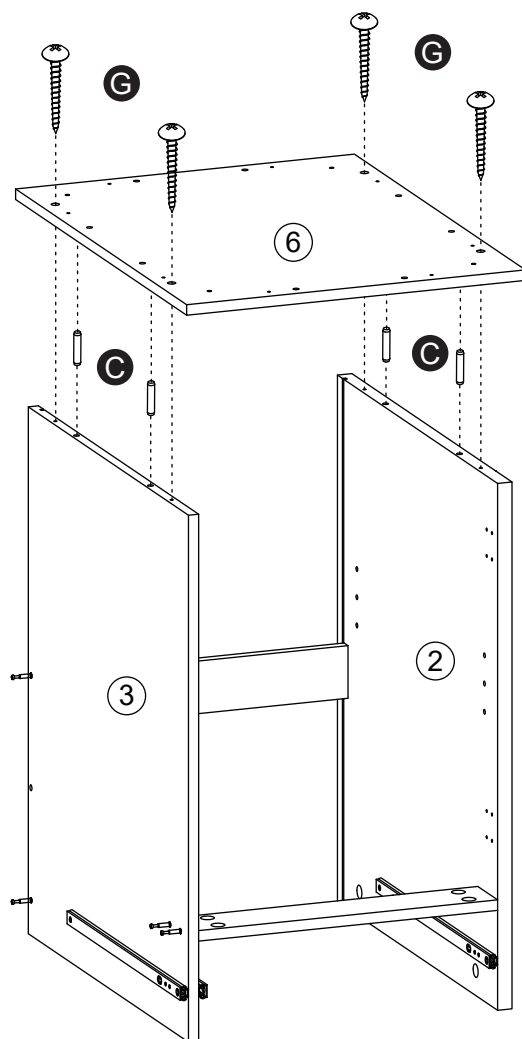


Step 10

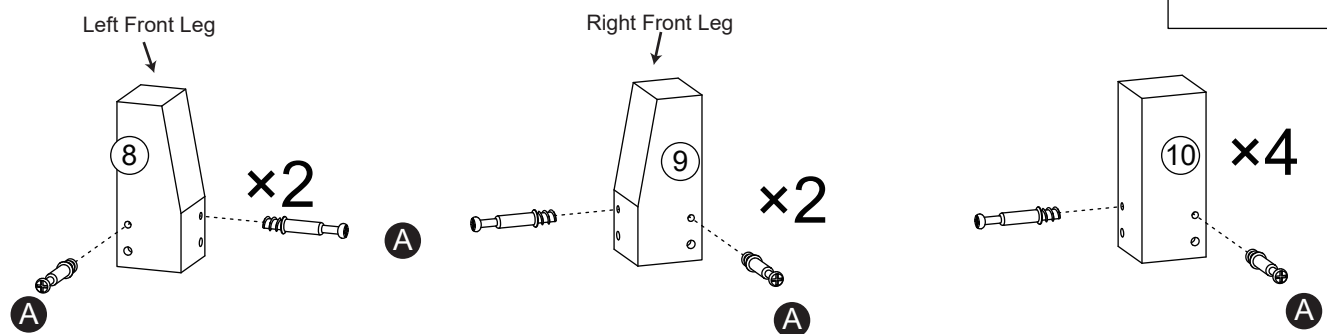

Step 11


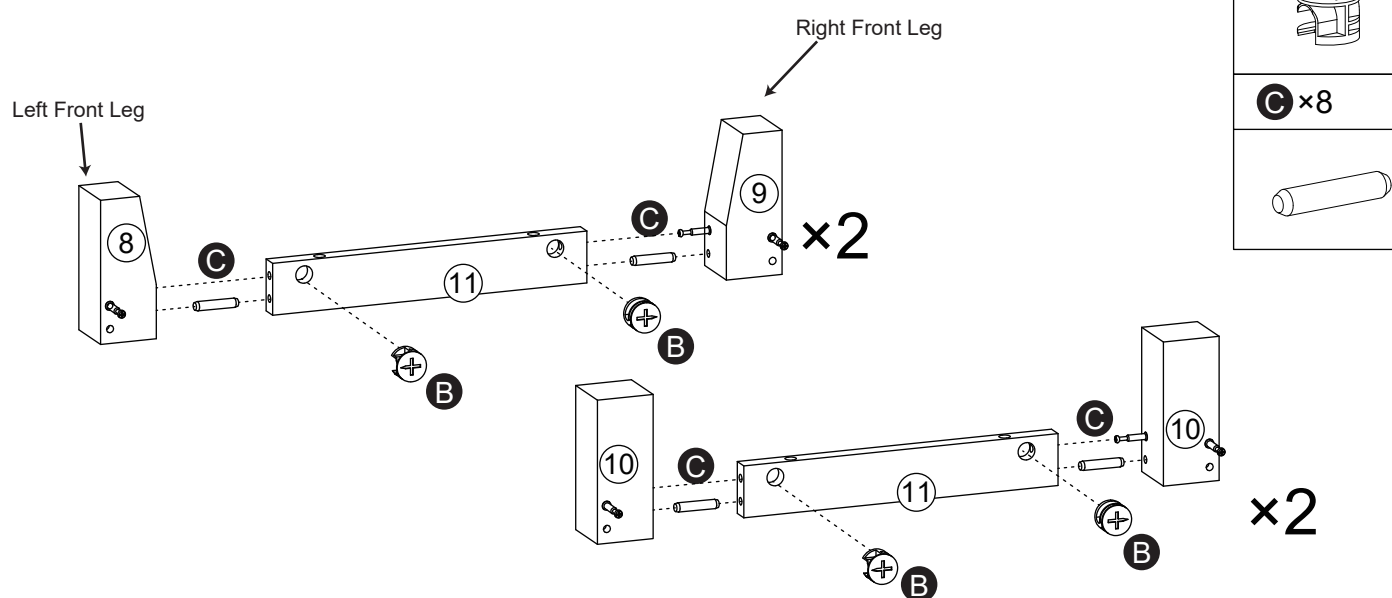


Step 12

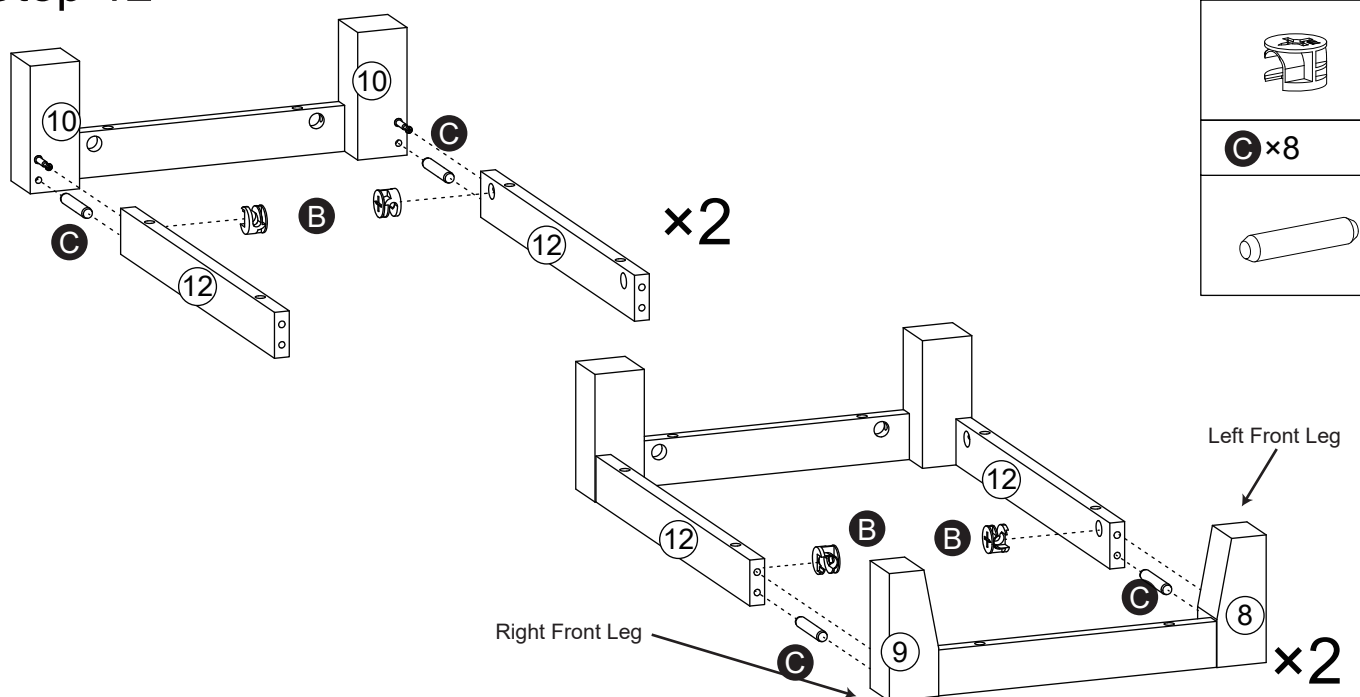

Step 13

⊙ × 8

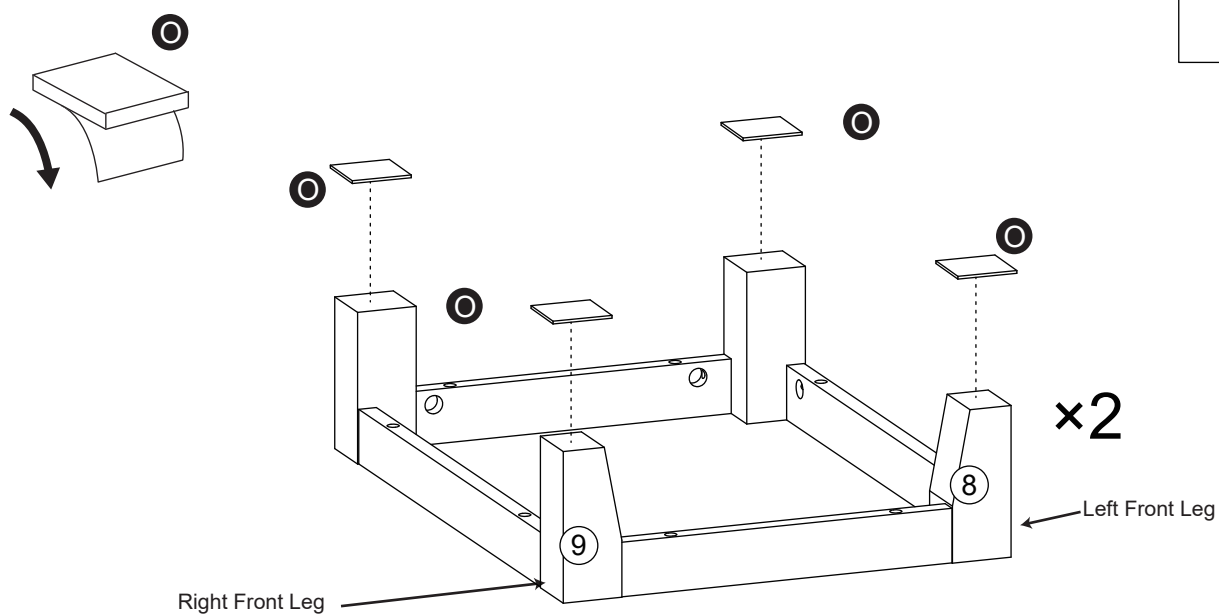



Step 14

⊙ × 8





H × 8

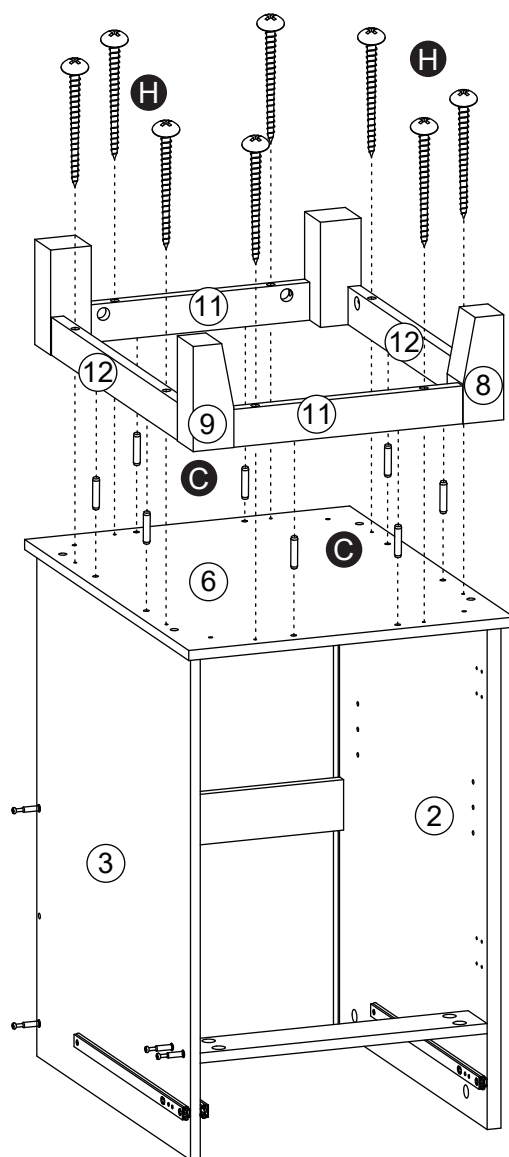


Step 15




G × 4




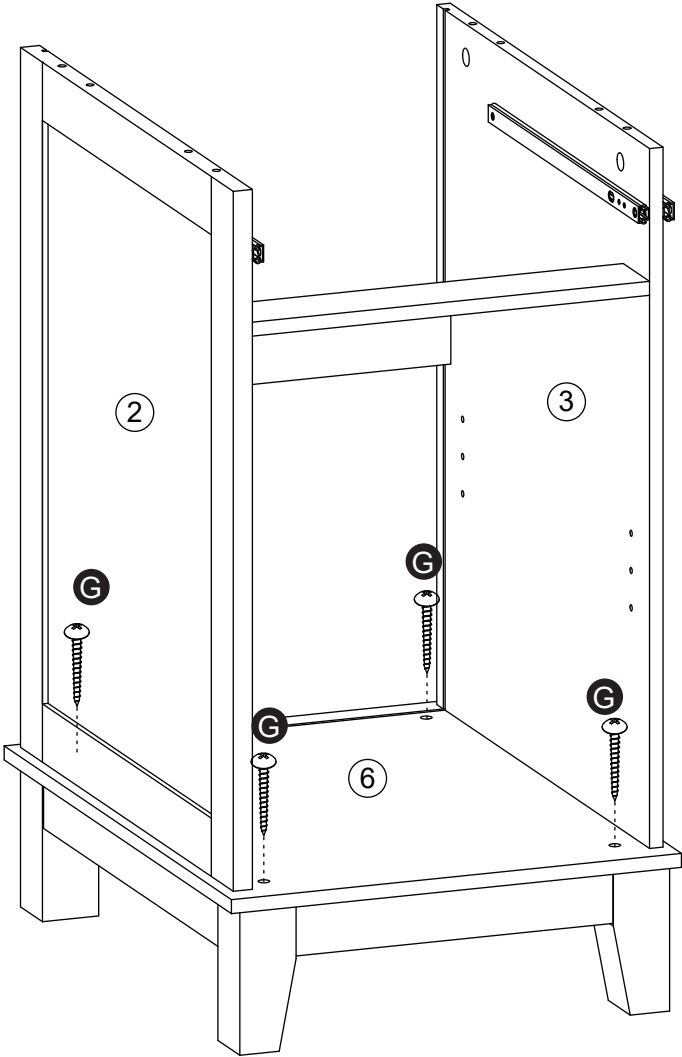


Step 16


A ×8	D ×9	F ×4	Q ×3	R ×1
				

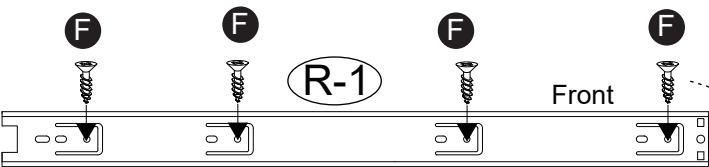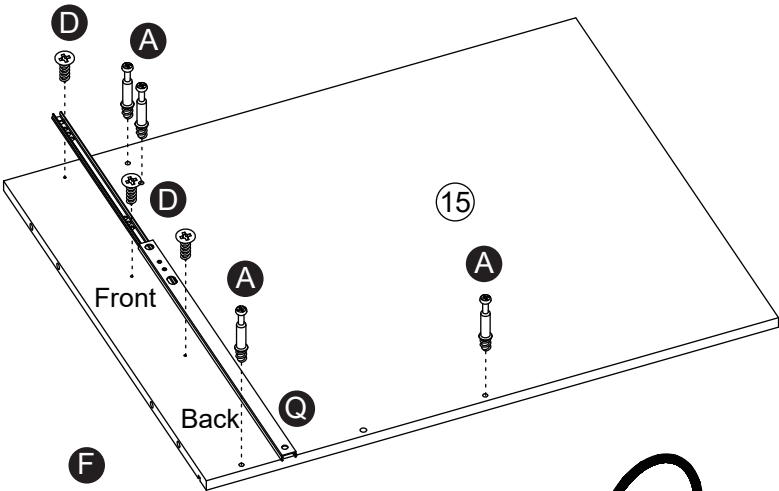
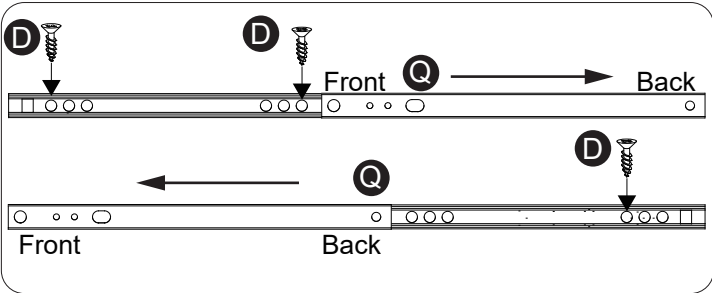


180°
Turn the panel over after this step

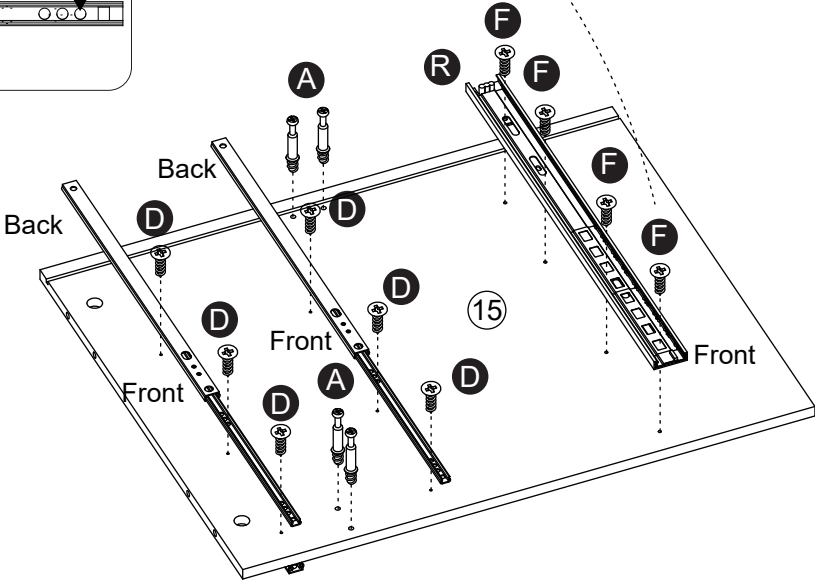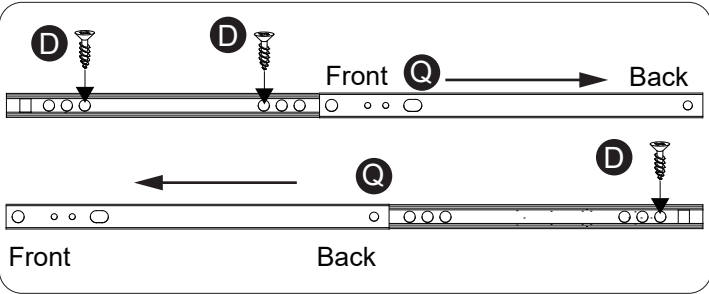



Step 17

A × 4	D × 6	F × 4	Q × 2	R × 1
				

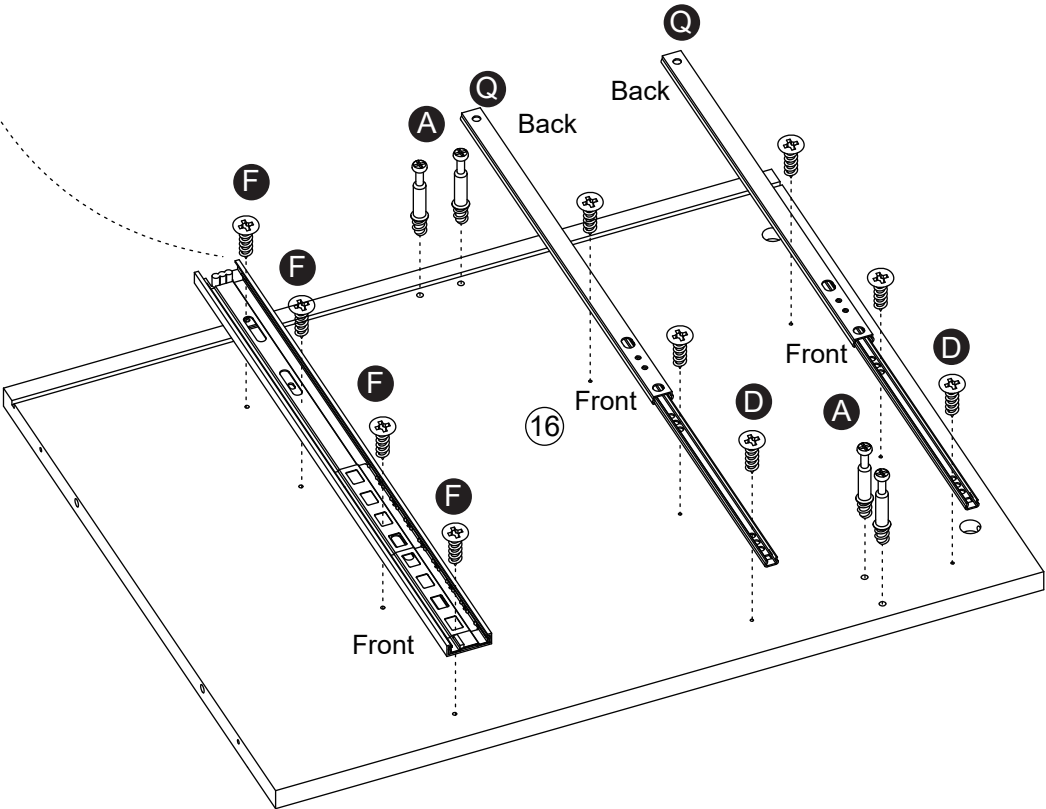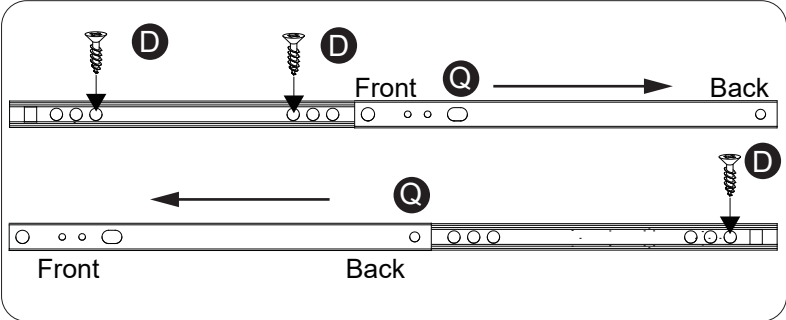


Step 18


B ×8	C ×4	G ×4
		

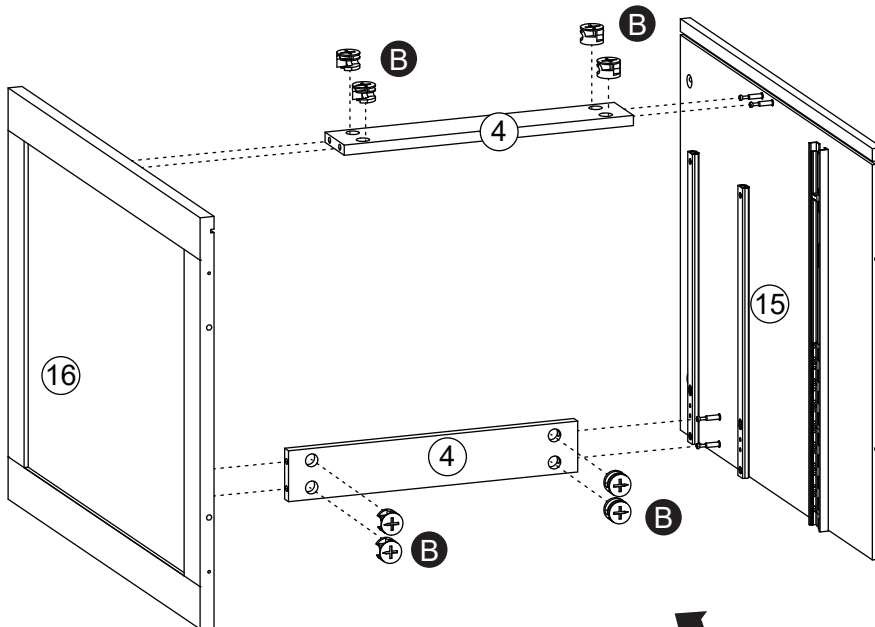

90 °
Rotate the frame

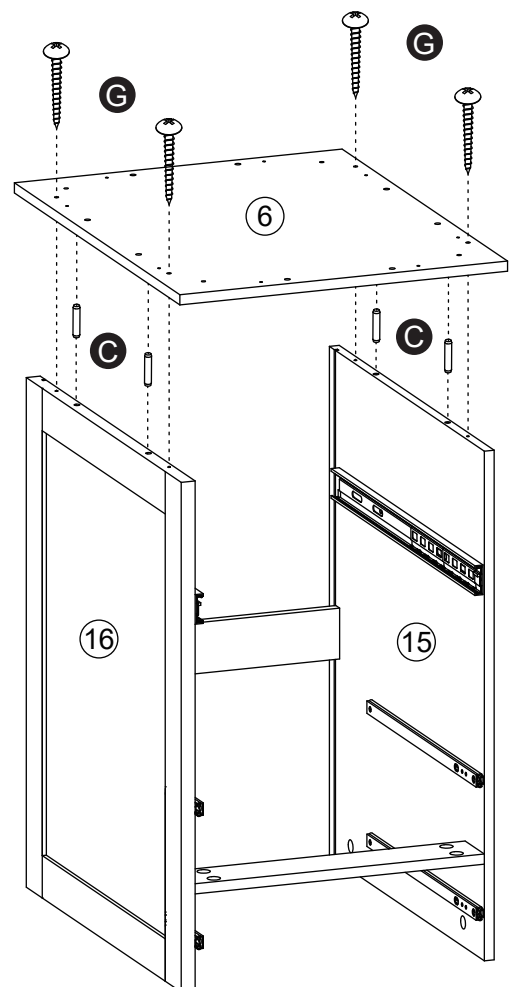


Step 19

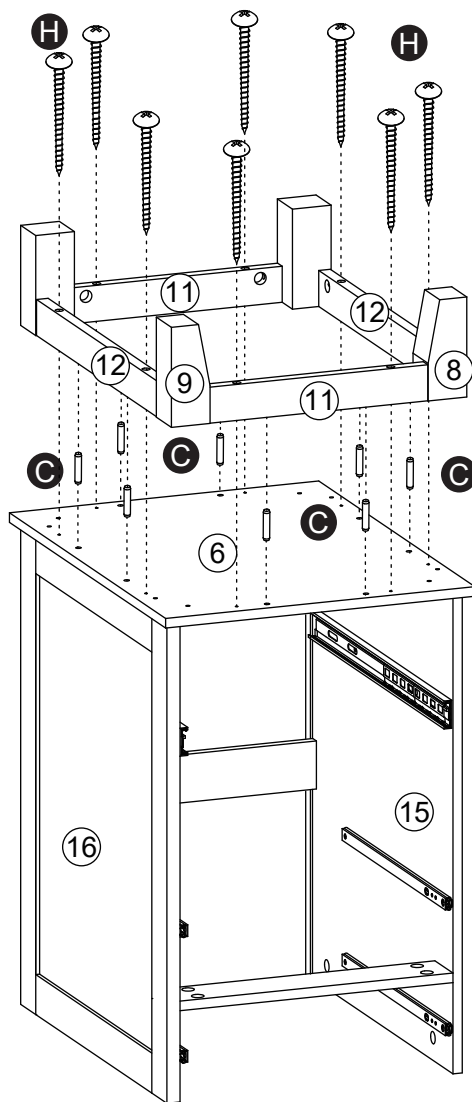


C × 8




H × 8



Step 20

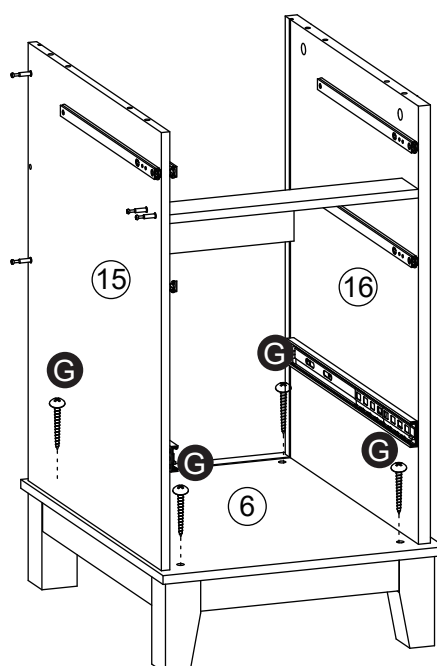


G × 4




Step 21

B × 8

C × 2


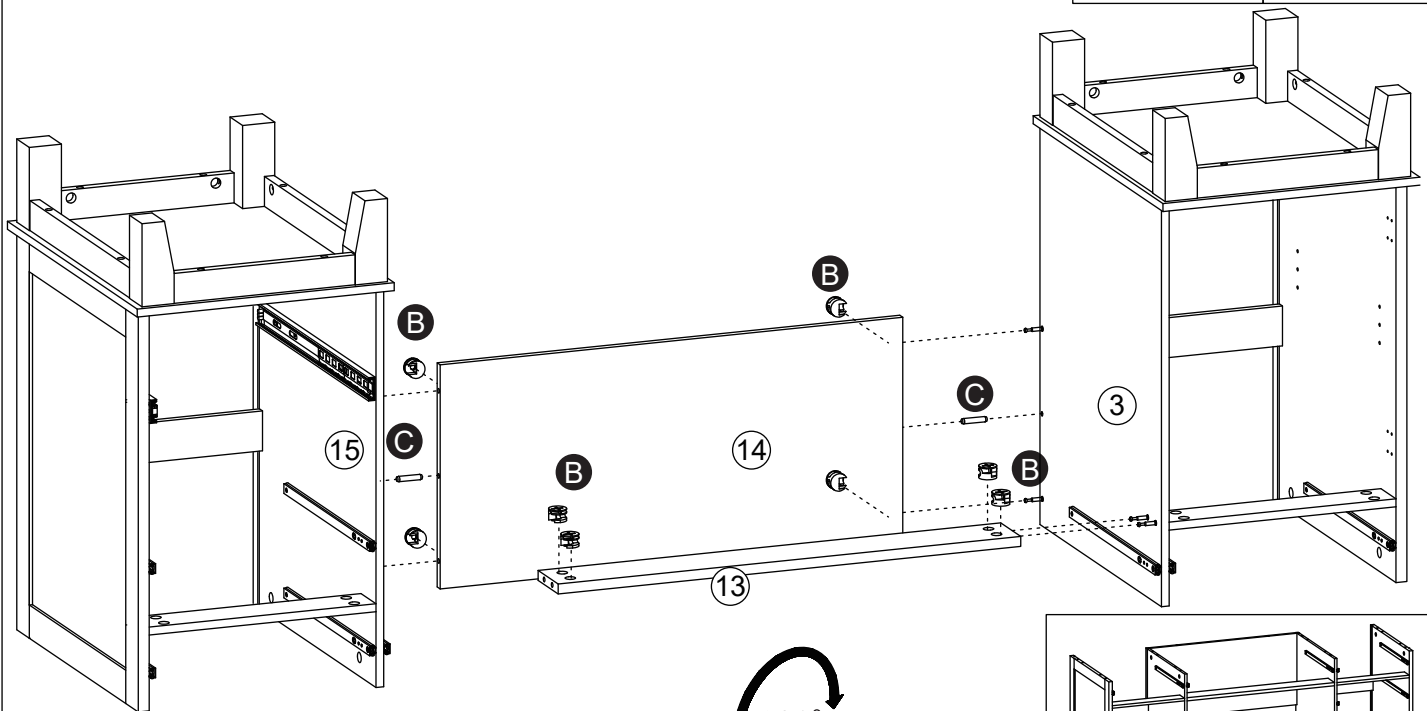


Turn over after this step as step 17

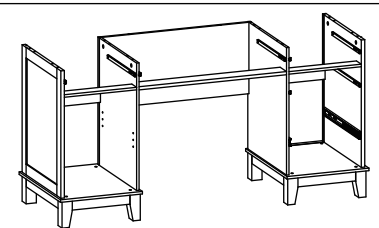




Step 22

A × 10

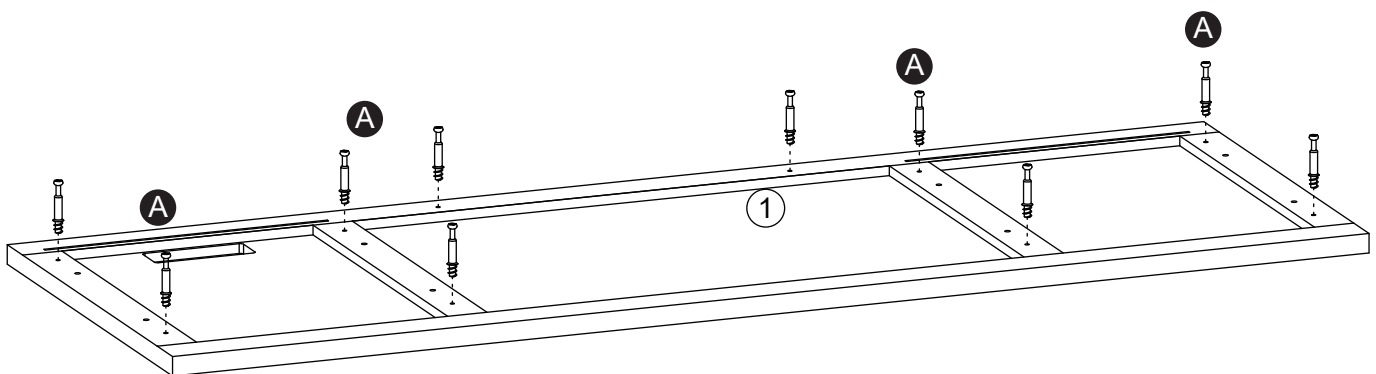


Step 23

B ×10	C ×8	S ×1	Y ×2
			

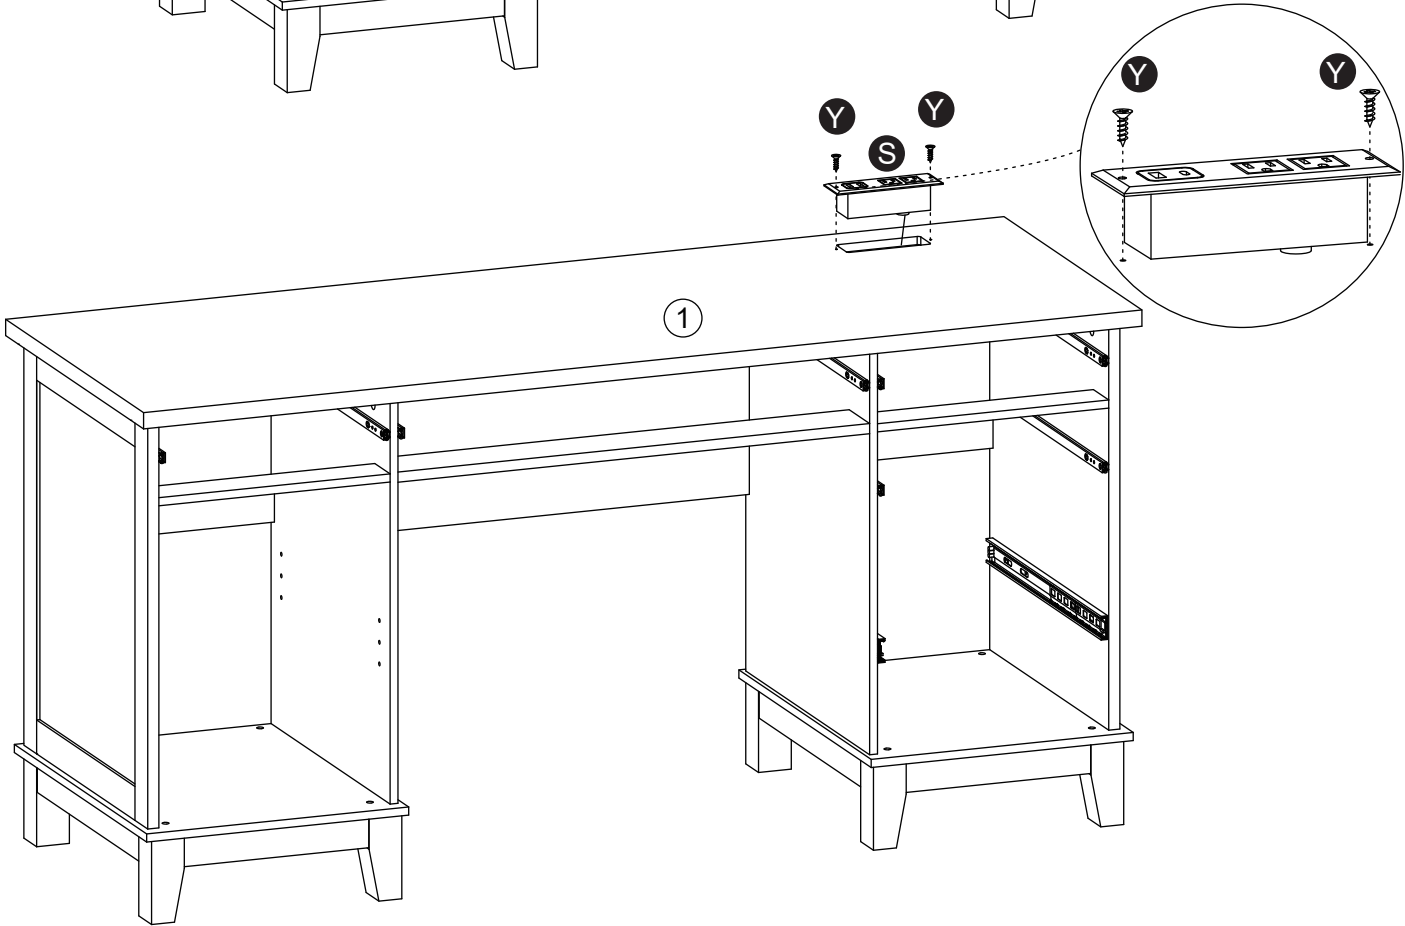
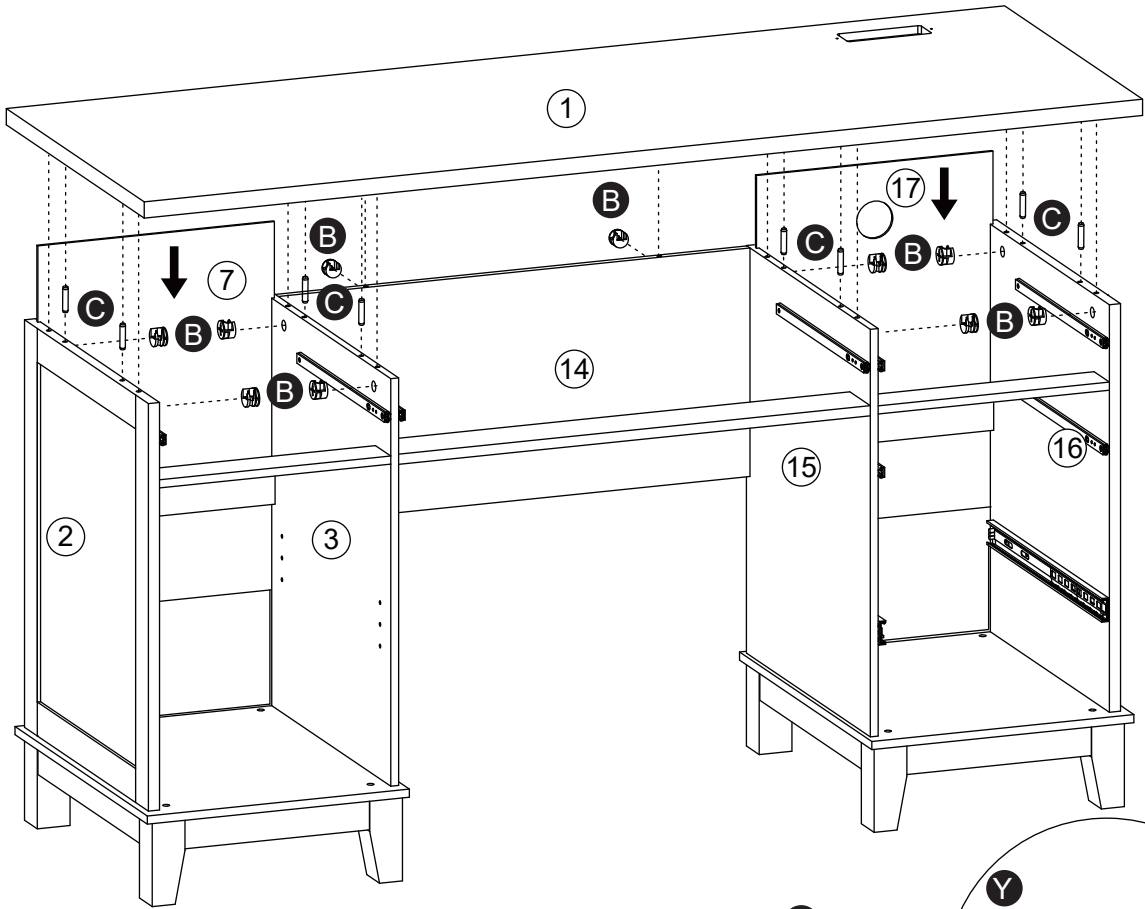


Step 24


E×8	N×8	T×6
		


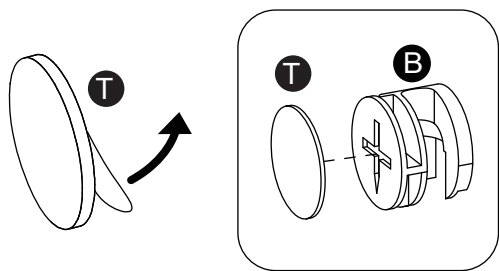


Use the paper sticker (T) to cover the screw and cam holes if needed

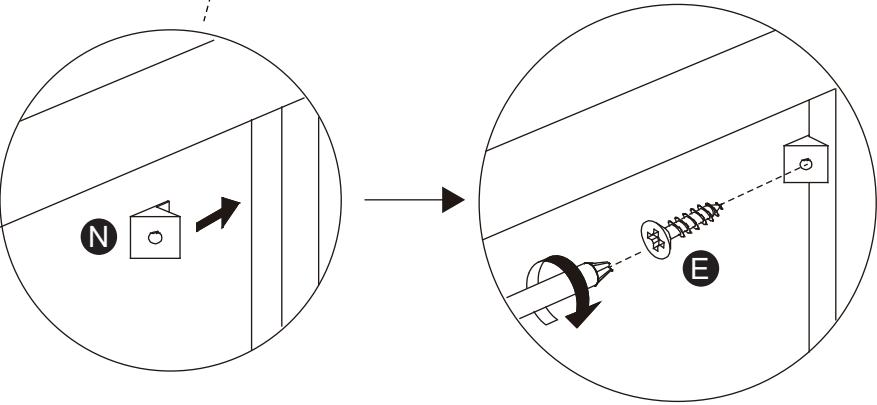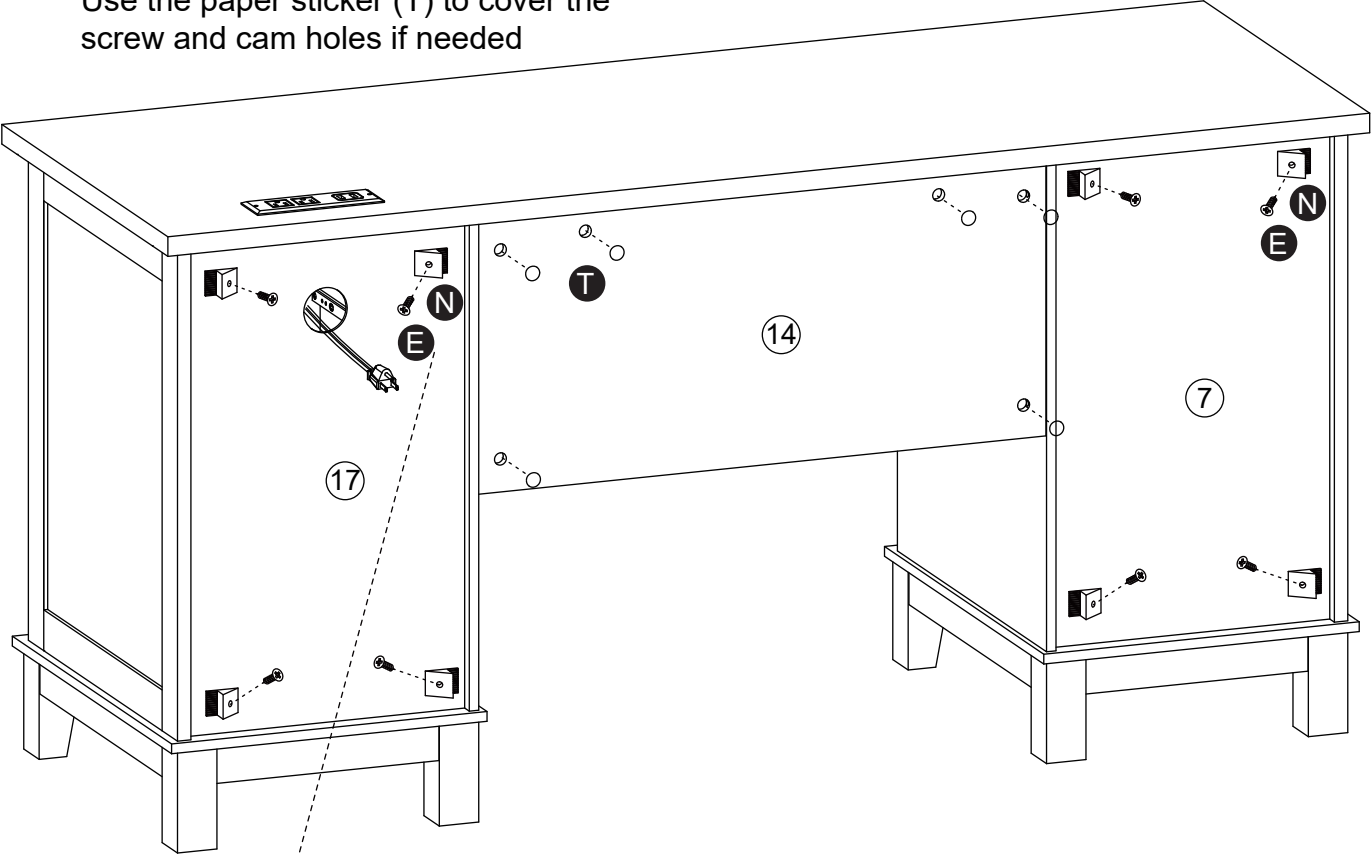



Step 25

U × 2	V × 4	W × 4	L × 1	X × 2
				

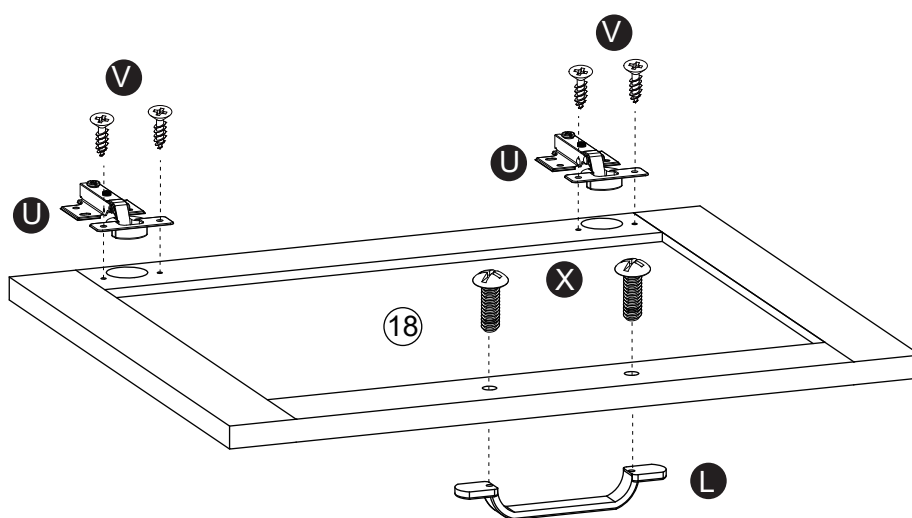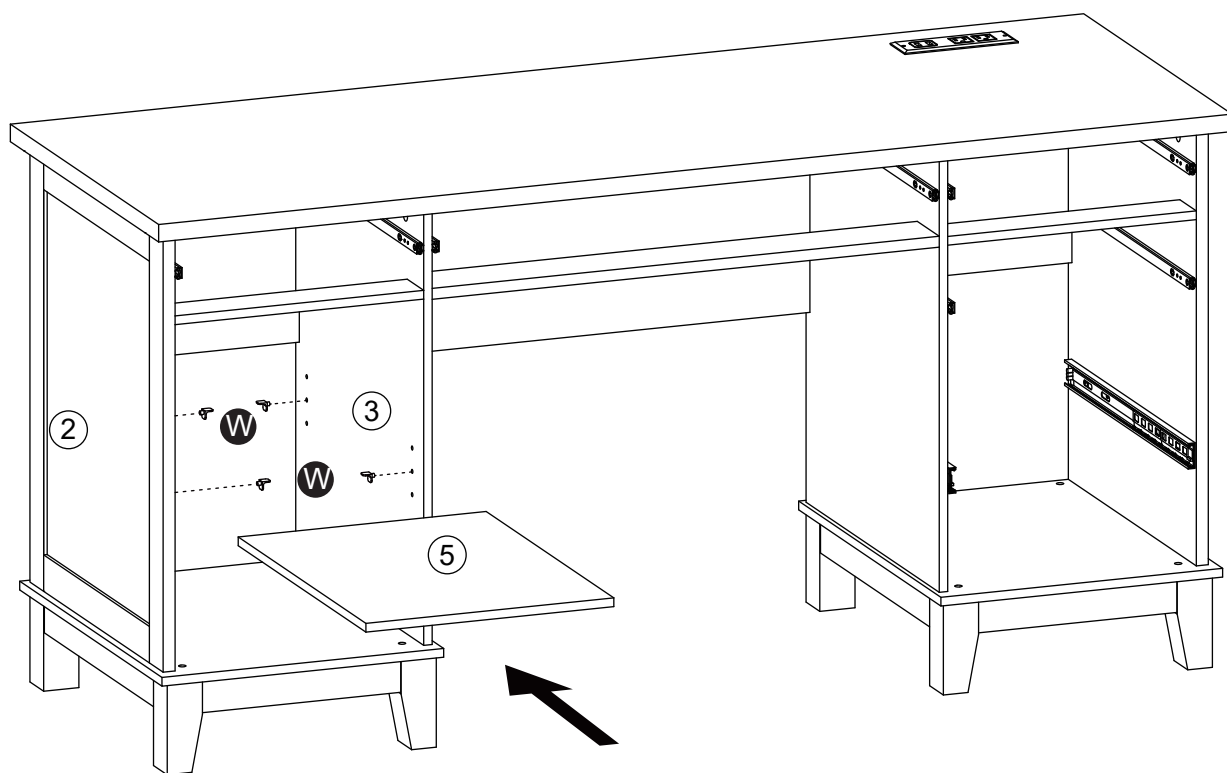


Step 26


V × 8

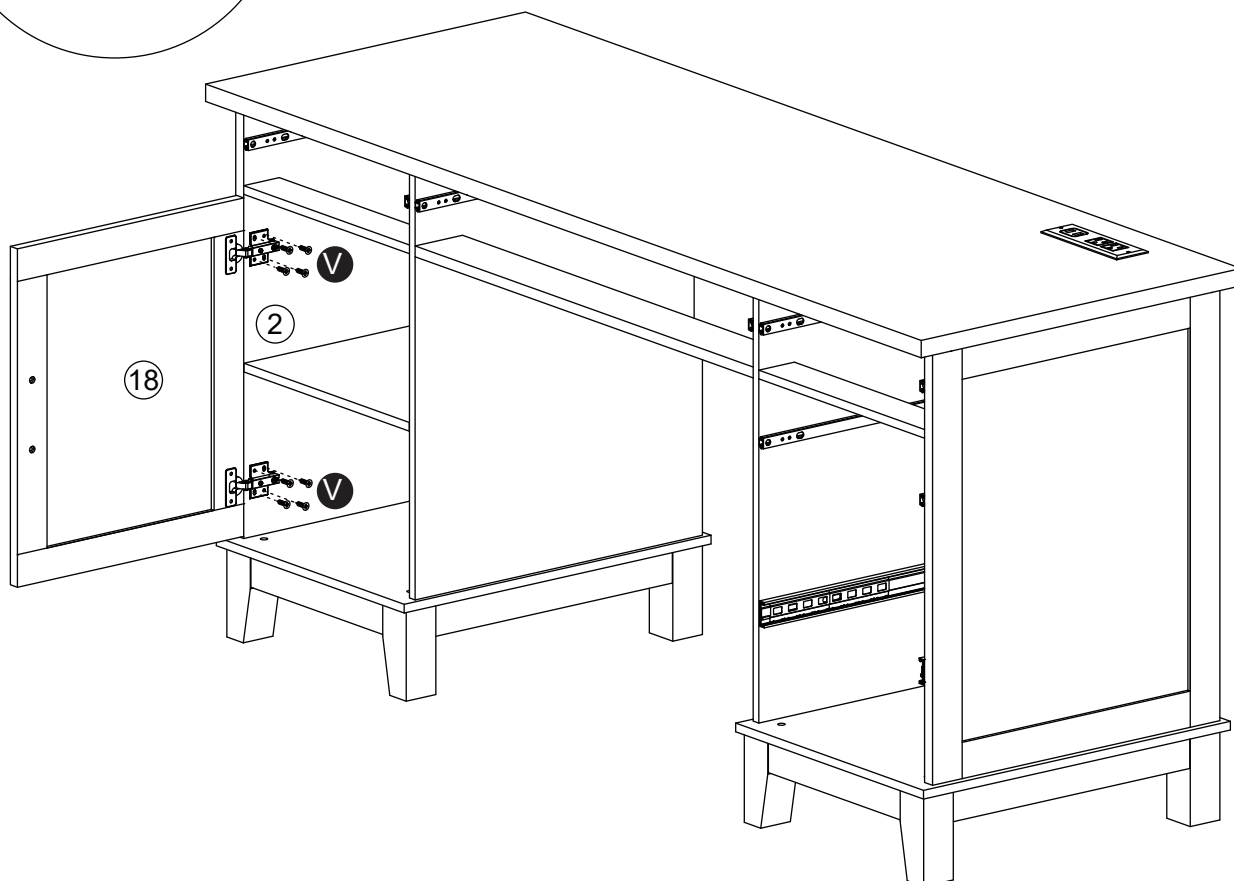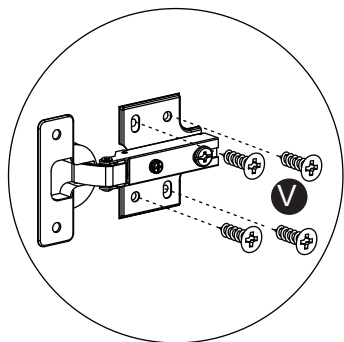


If the door have gap problem,you may need:

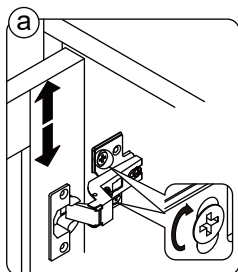


To adjust the door vertically, loosen the screw as shown and move up and down as needed.

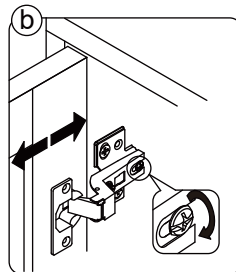

To adjust the gap from the door to the main frame,turn the screw clockwise or anti-clockwise as needed.

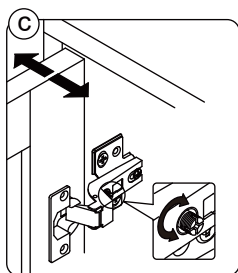




To adjust the door horizontally, adjust the screw as shown by turning clockwise or anti-clockwise.

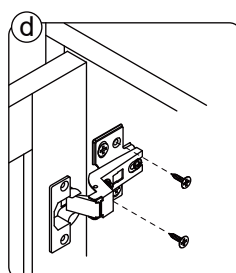

Please fix other screws.


Step 27

J × 8

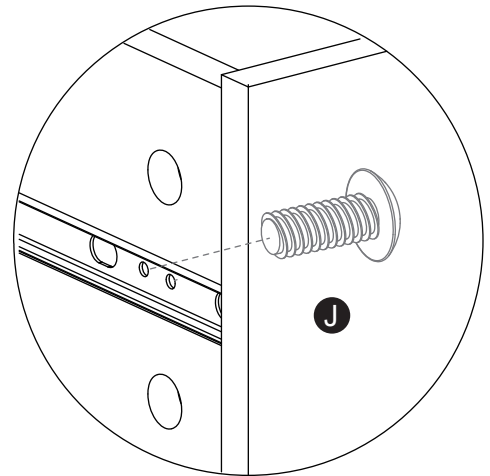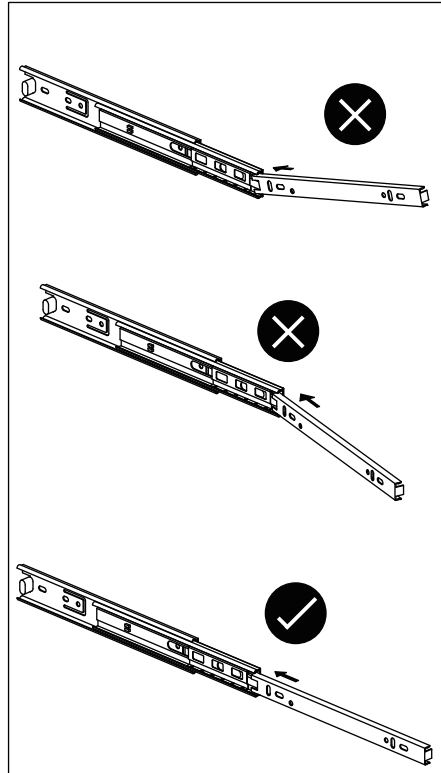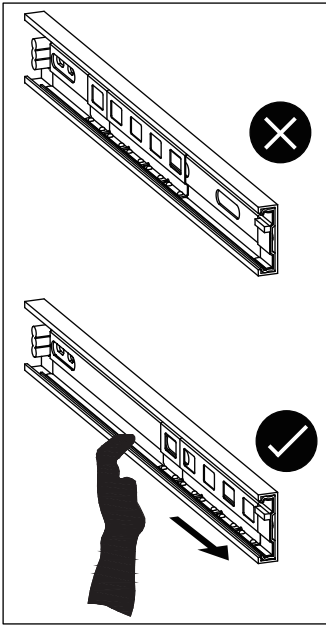

1. Drawers must be horizontally put into the cabinets.

2. Make sure both sides sliders match well to avoid damage.

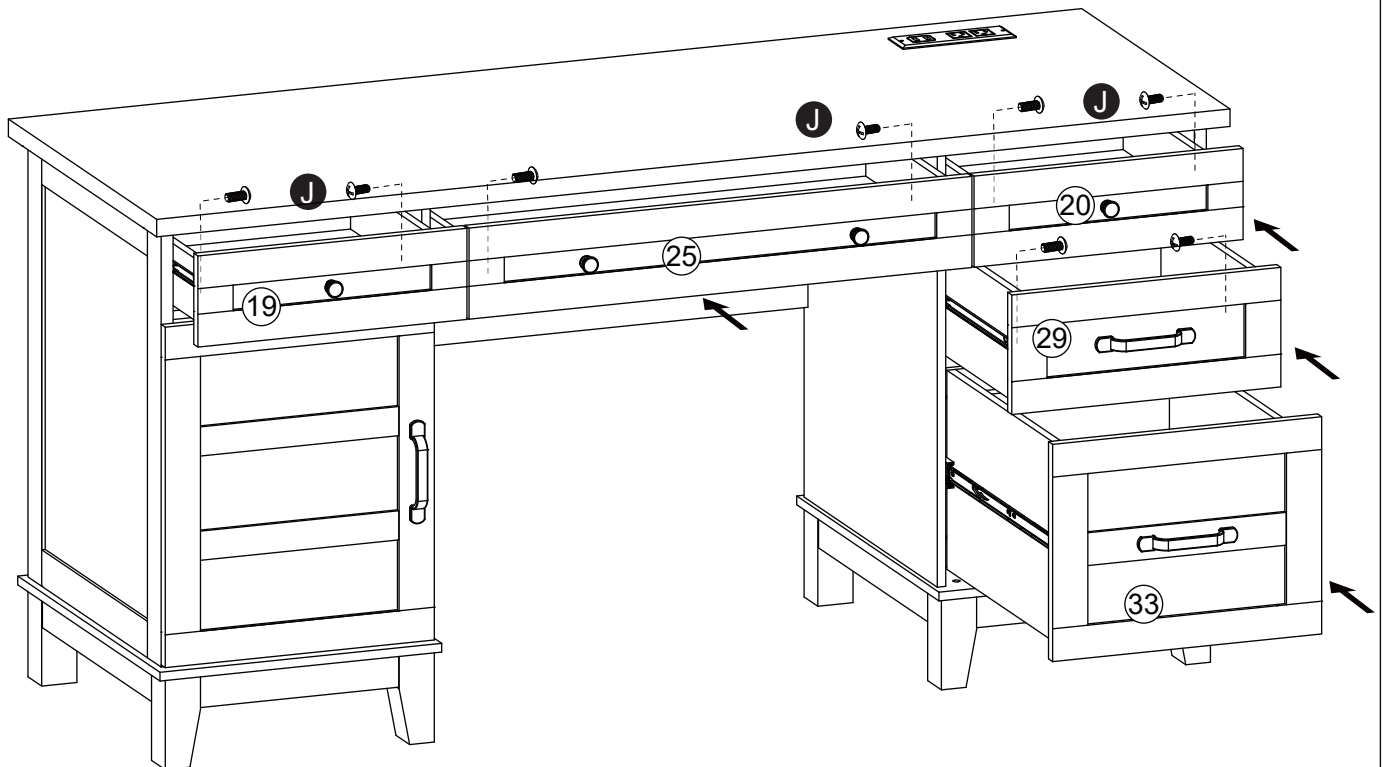

GARVEE
support@garvee.com