

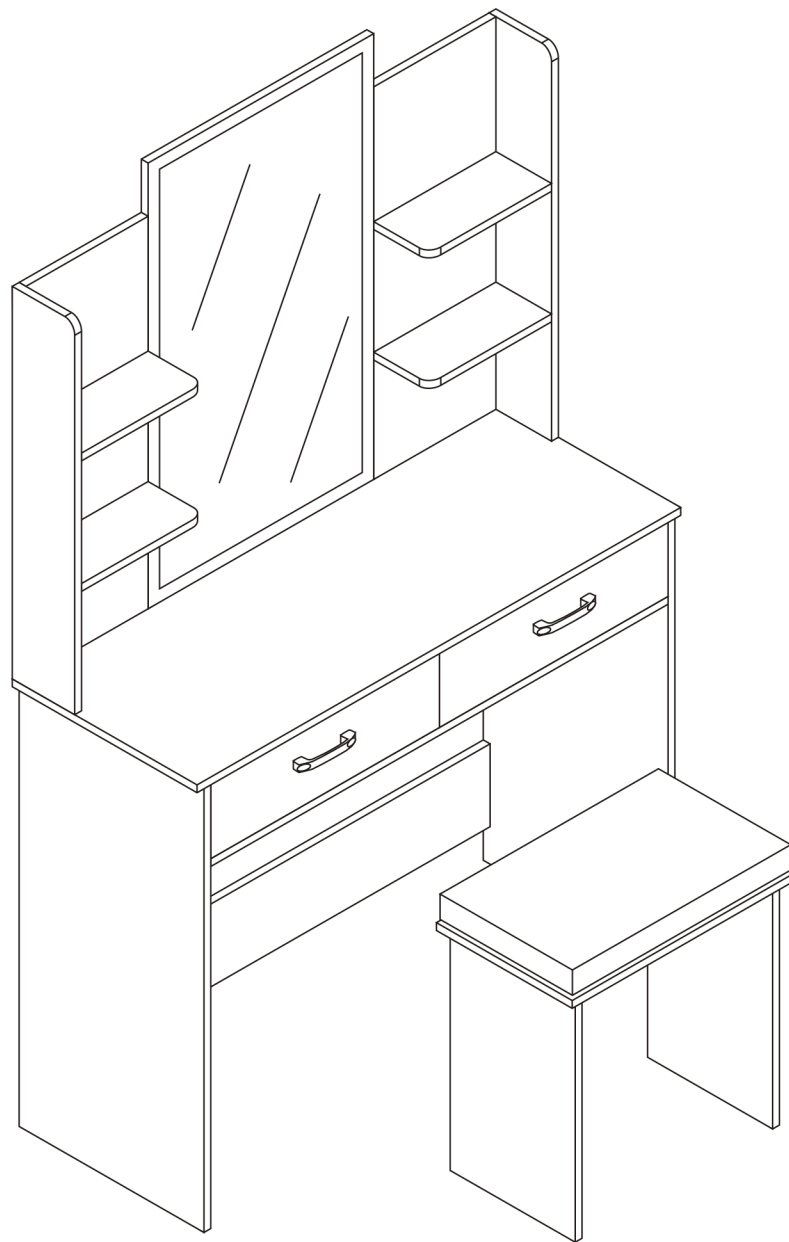




Assembly Instructions

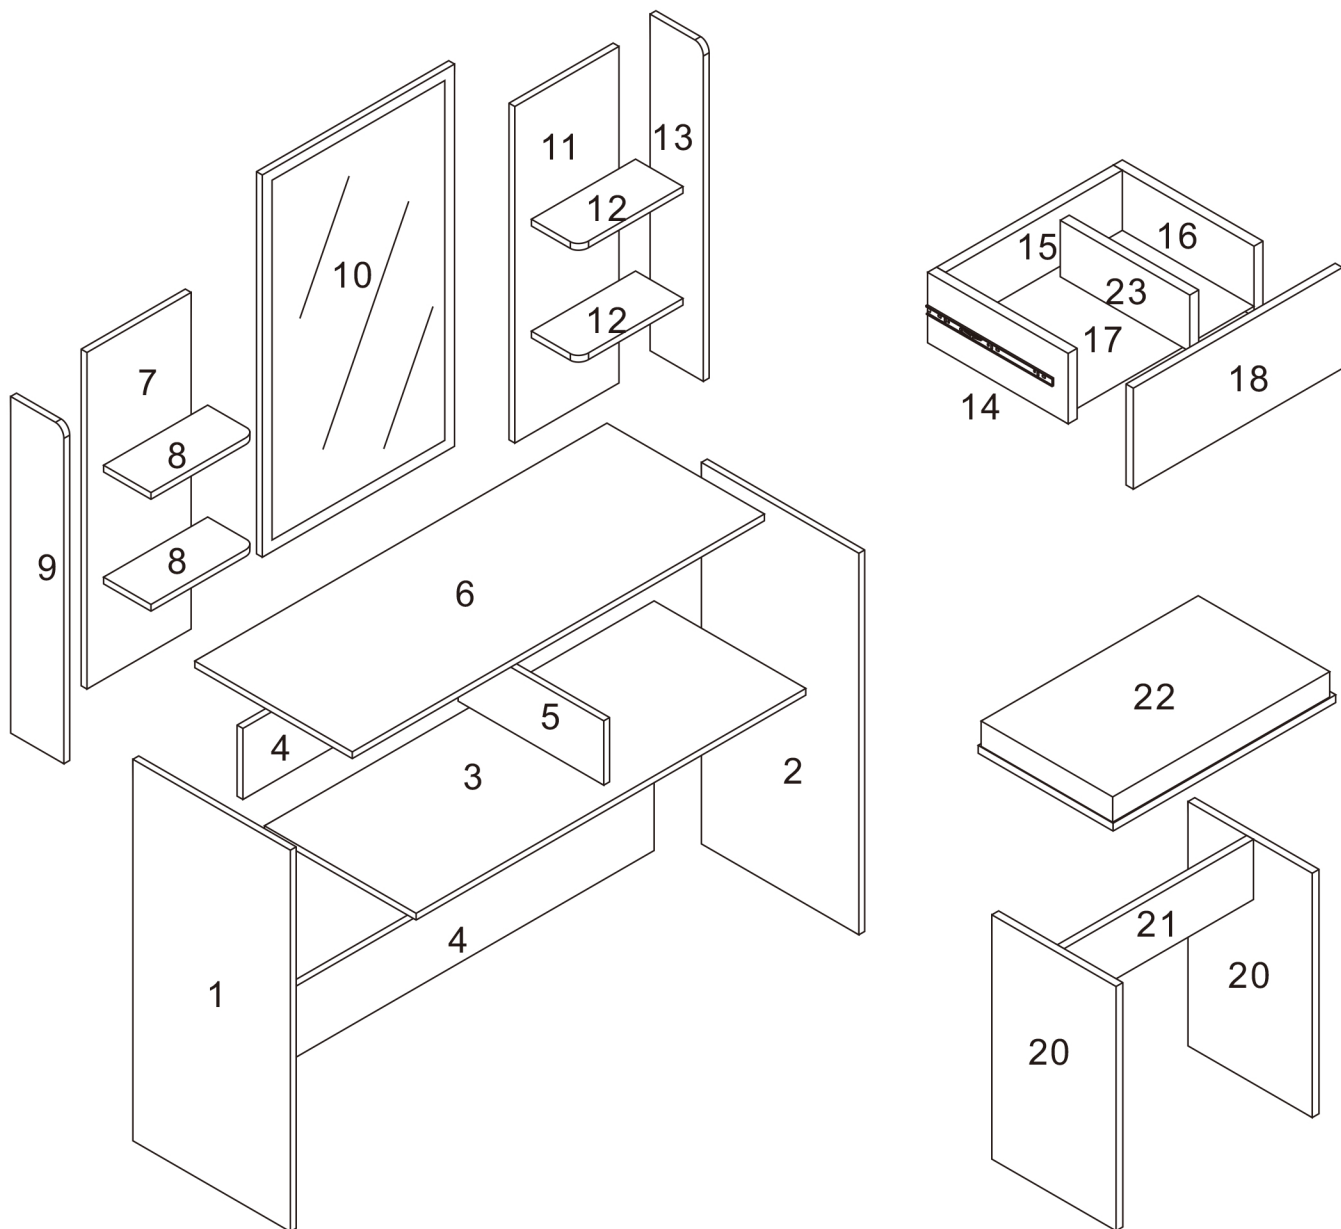


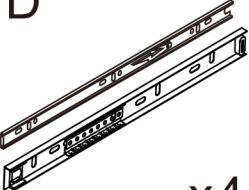


A  x90	B  x90	C  x76	D  x4	E  x6
F  x4	G  x1	H  x2	I  x4	

Installation method
of three in one rod
and buckle

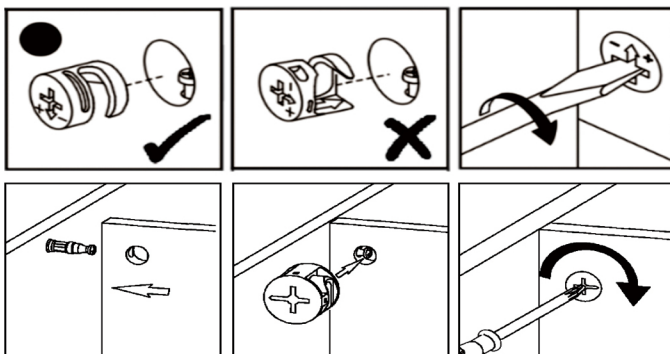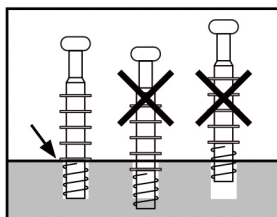


01

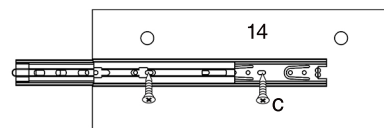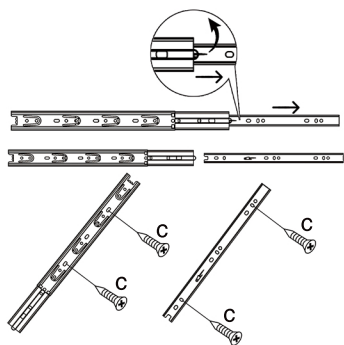


Cx2

1 2
3 4

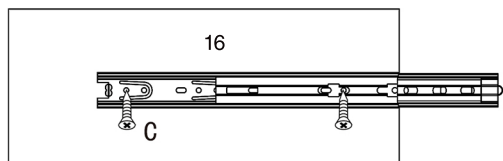


Cx2

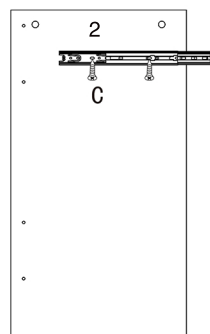


Cx2


02

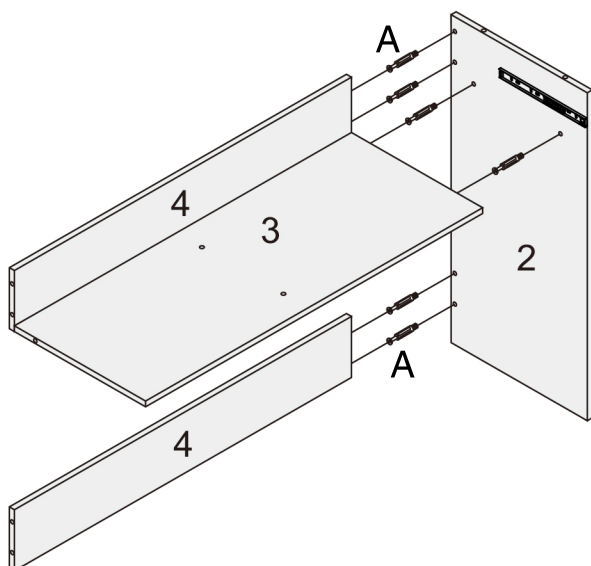


03

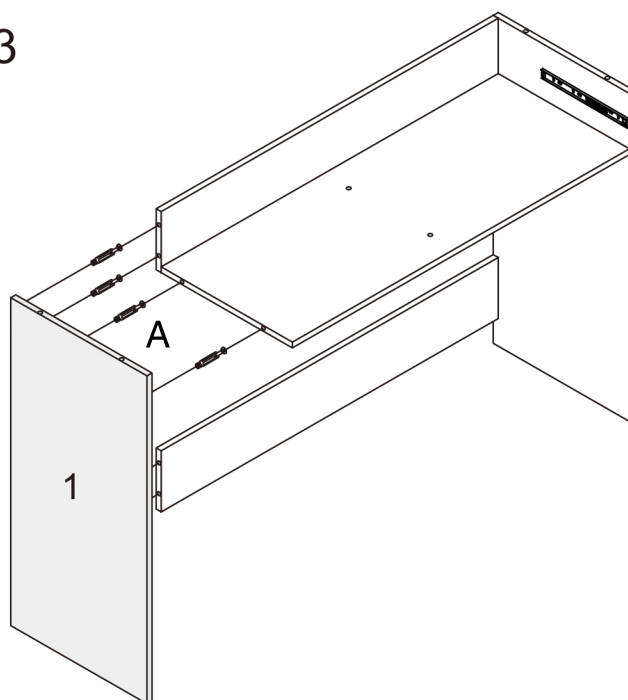



04

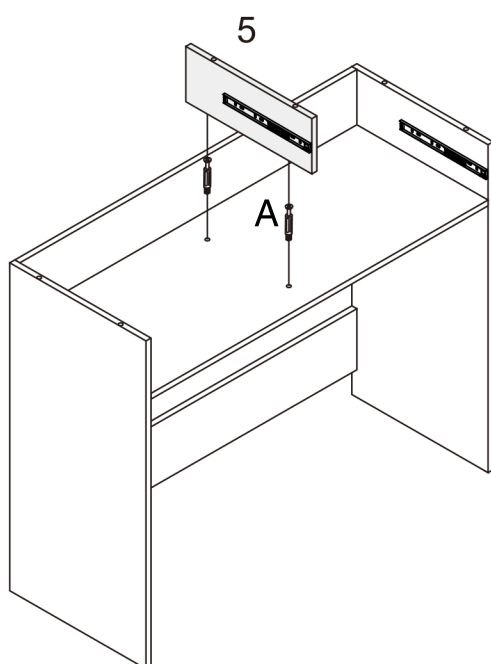



05

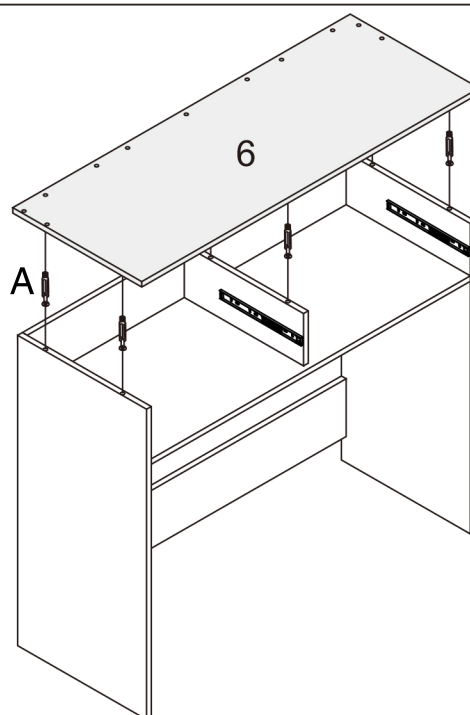


06

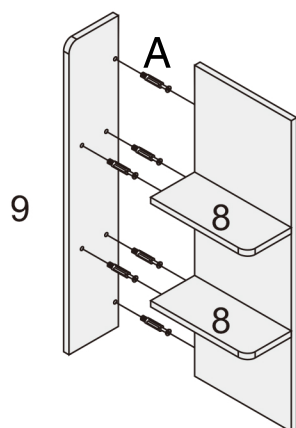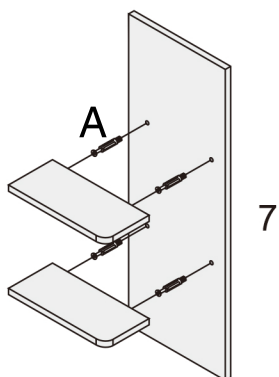


07

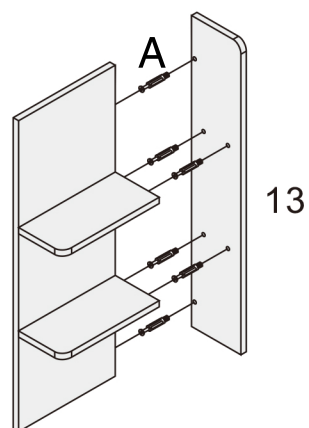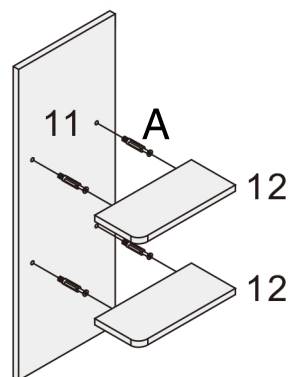


08

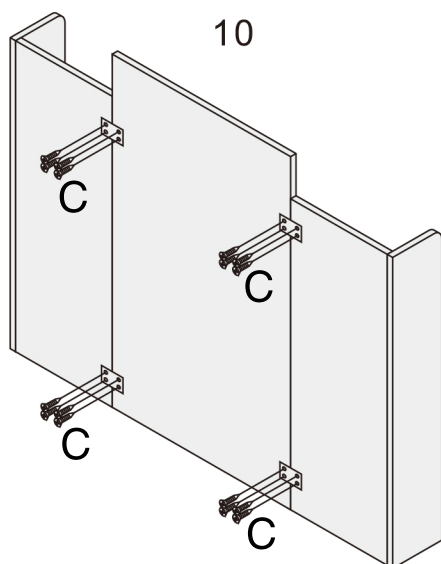


09

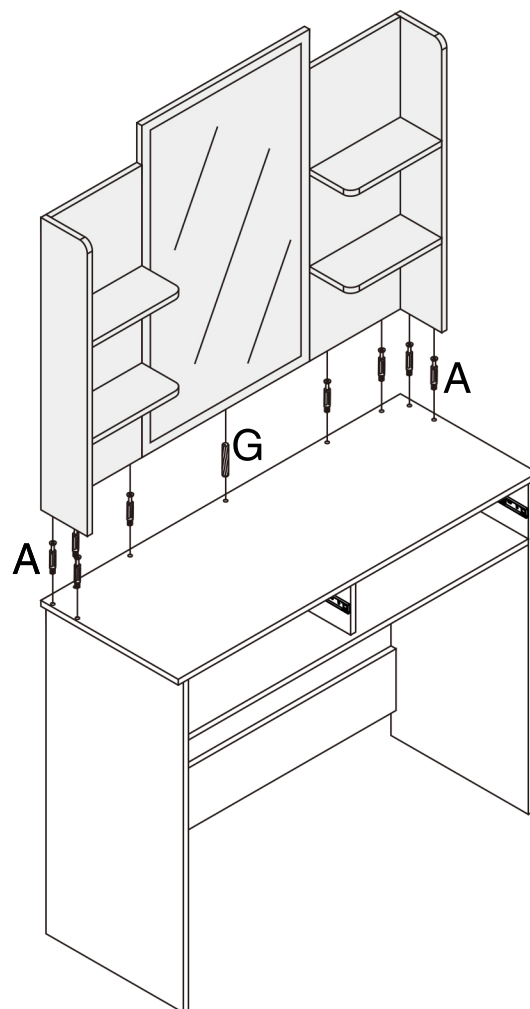


10

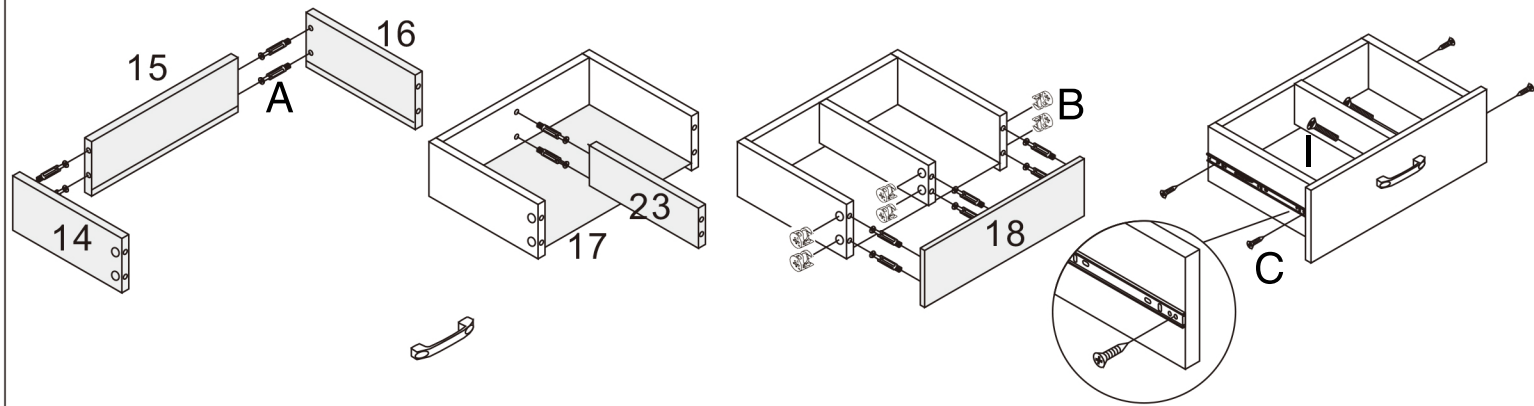

11

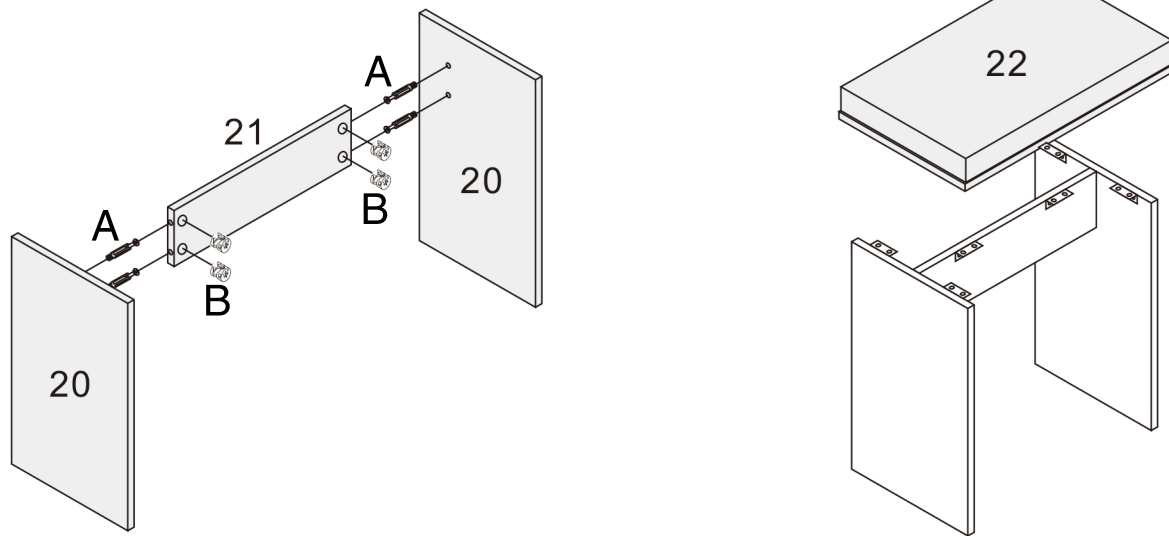

12

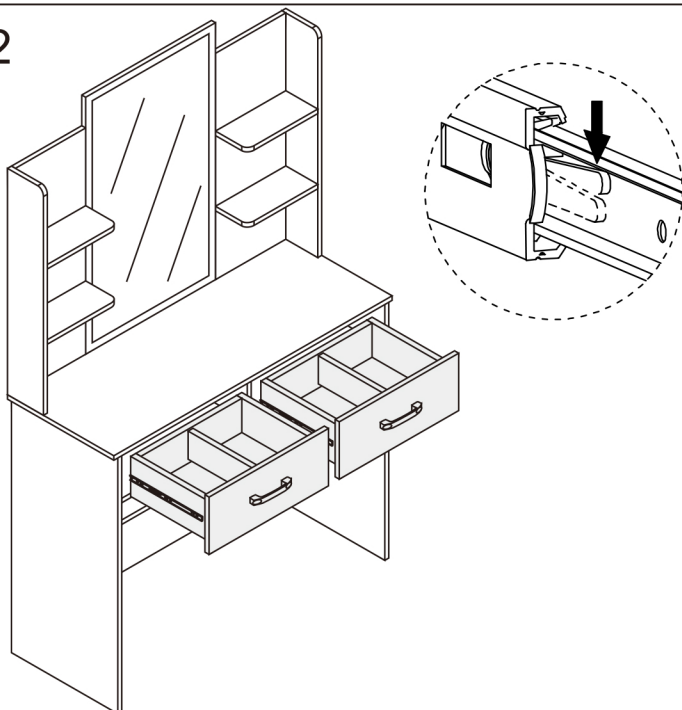

13

