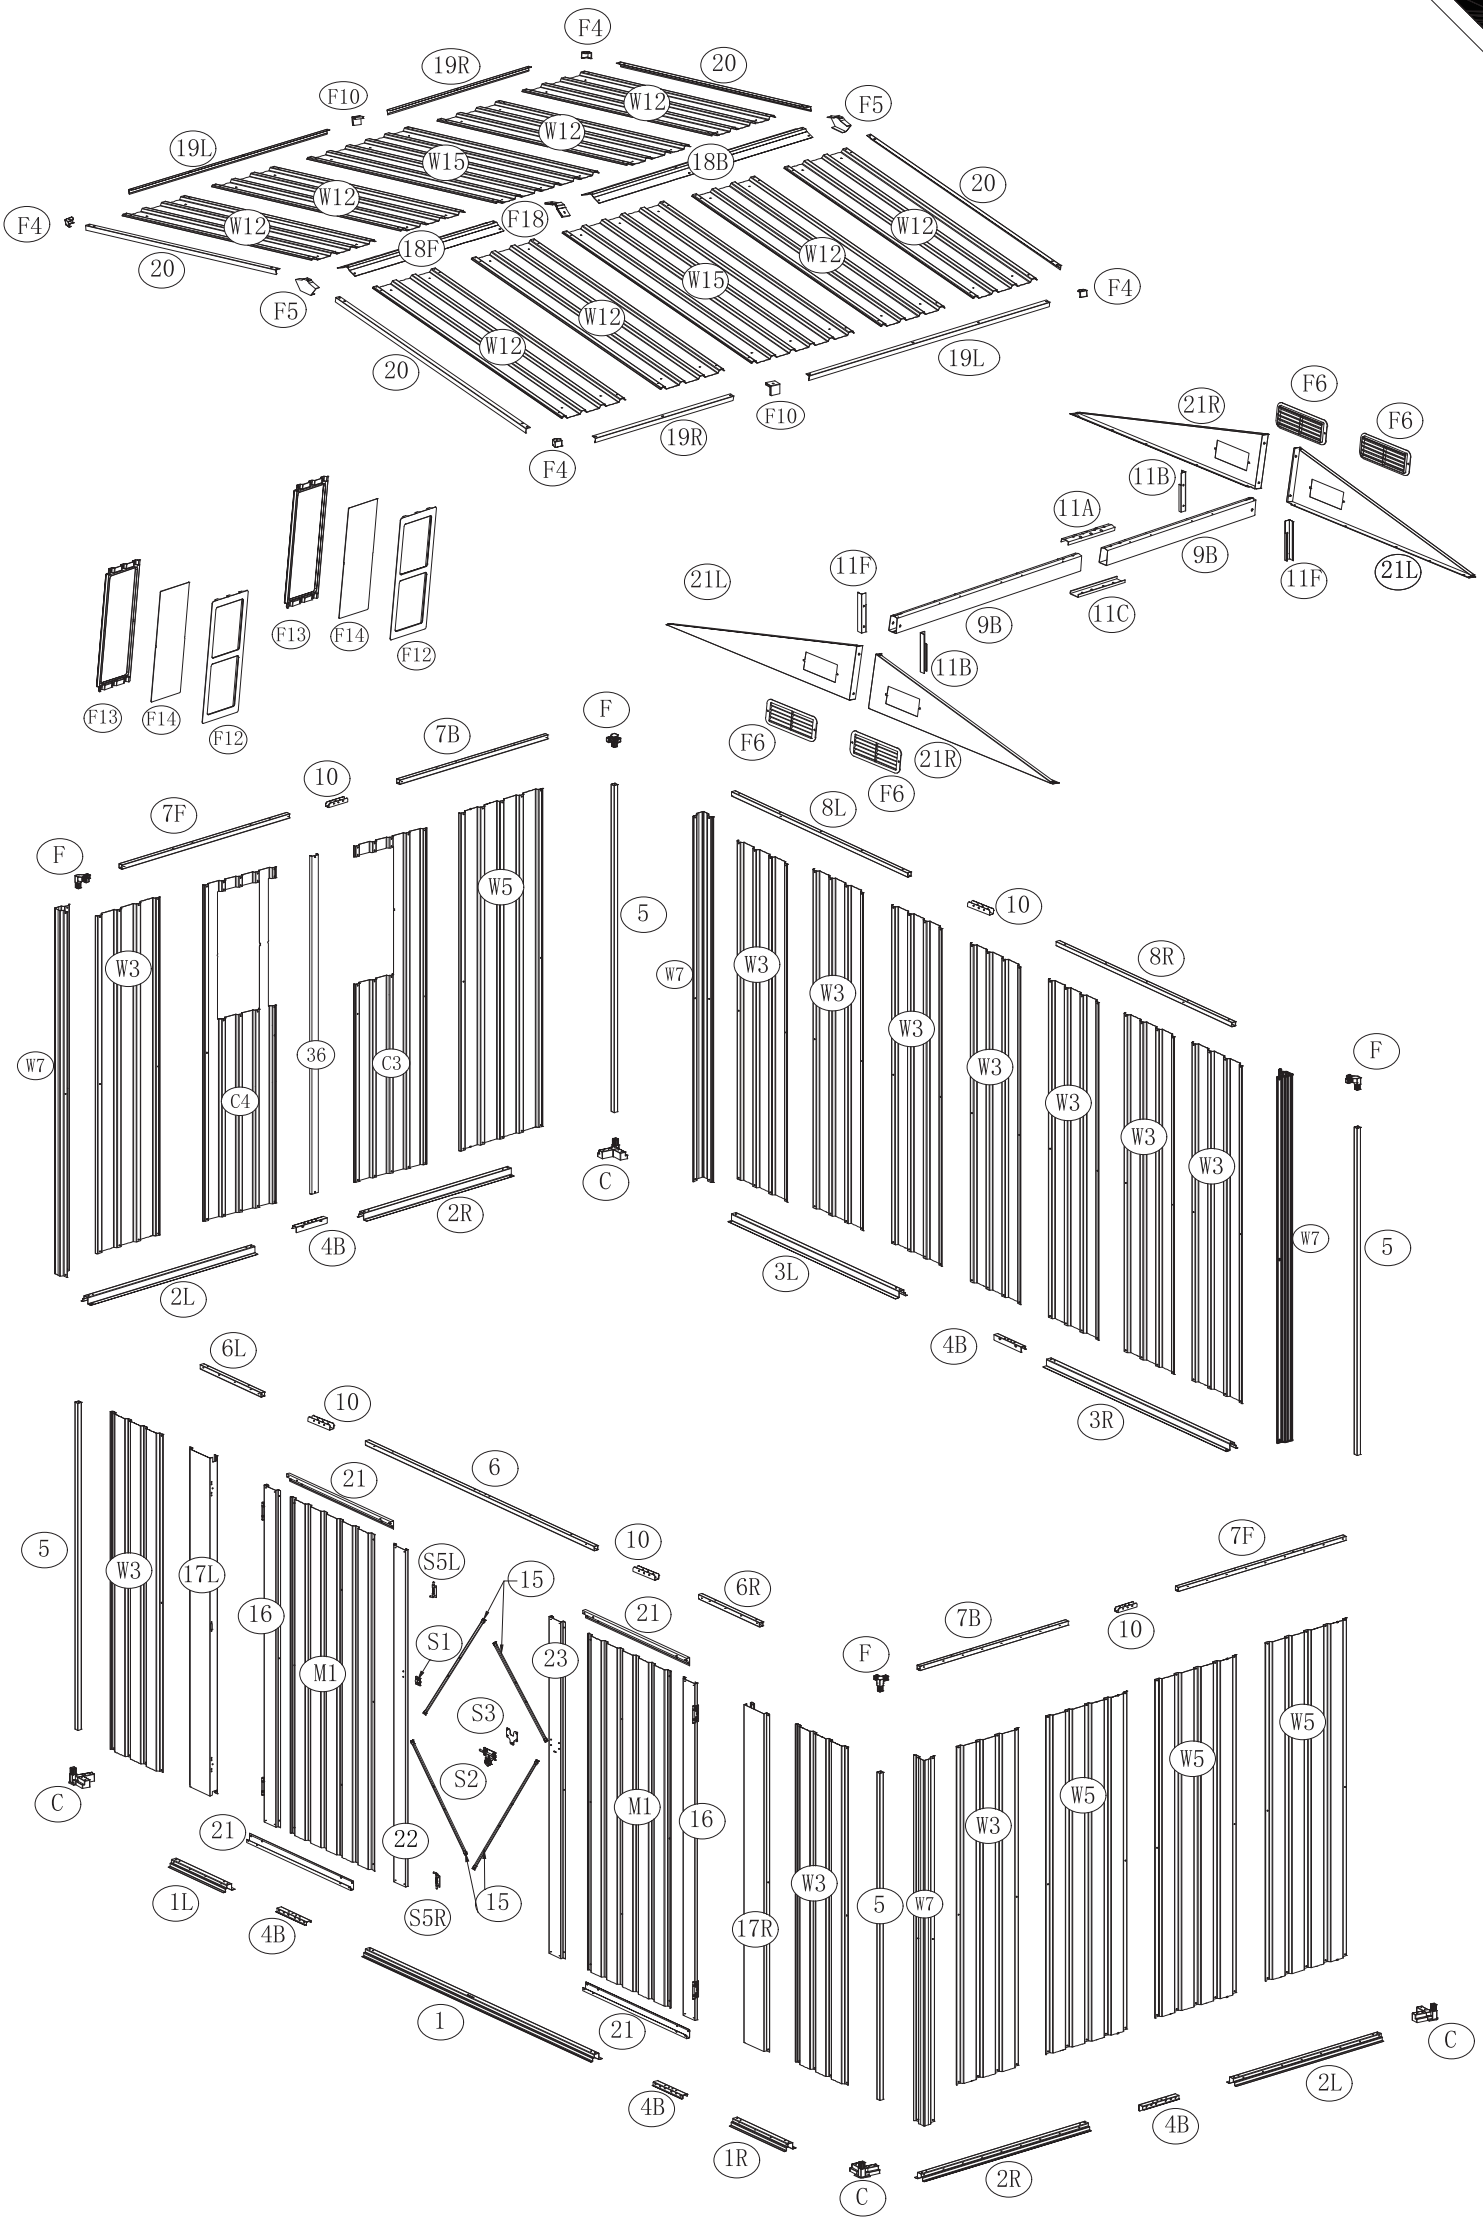
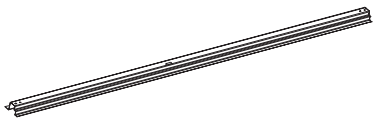



6x8 FT Outdoor Lean to Storage Shed
MS2610











Scan for Installation Video

















PART LIST











F4
19R
20
F10
F5
W12
W15
18B
19L
F18
18F
F6
21R
11B
11A
9B
11F
21L
11C
F13
F14
F12
7B
F
10
7F
8L
W5
5
W3
W7
36
C3
C4
C
2R
4B
2L
8R
3L
3R
6L
6
21
17L
16
S5L
15
S1
S3
S2
S5R
M1
23
22
1L
1
17R
1R





NO.	PART.	Qty.
1L		1
1		1
1R		1
2L		2
2R		2
3L		1
3R		1
4B		5
5		4
6L		1
6		1
6R		1
7F		2
7B		2

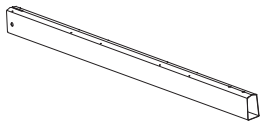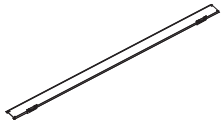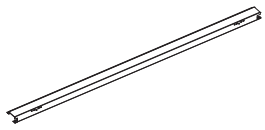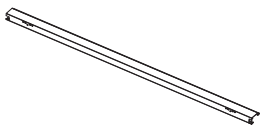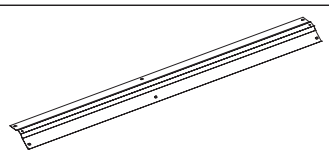NO.	PART.	Qty.
8L		1
8R		1
9B		2
10		5
11A		1
11C		1
11F		2
11B		2
15		4
16		2
17L		1
17R		1
18F		1
18B		1

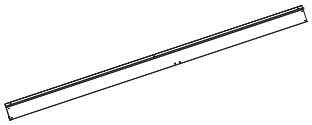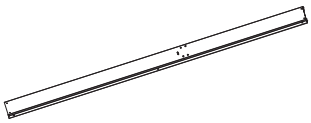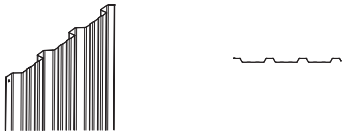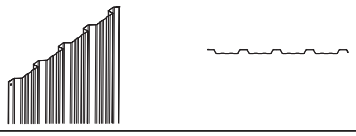NO.	PART.	Qty.
19L		2
19R		2
20		4
21		4
21L		2
21R		2
22		1
23		1
36		1
W3		11
W5		4
W7		4
W12		8
W15		2

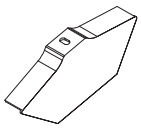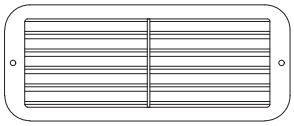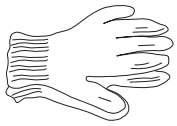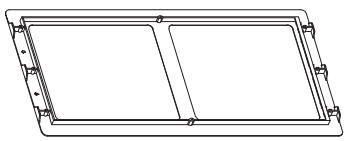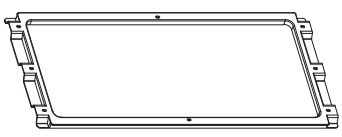NO.	PART.	Qty.
M1		2
C3		1
C4		1
C		4
F		4
F4		4
F5		2
F6		4
F7		94
F8		24
F9		2
F10		2
F12		2
F13		2

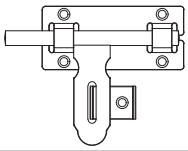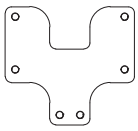NO.	PART.	Qty.
F14		2
F18		1
S1		1
S2		1
S3		1
S4		338
S5L		1
S5R		1
S6		62
S6A		10
S7		66
S8		8
S9		4
Q17		6

NO.	PART.	Qty.
Q20		6
Q26		1
Q37		2
Q58		4
S12		1
S15		1
S35		1

Before You Start

* Preparation: Assembly requires 2 people and takes about 2 - 3 hours. Please check all parts against the list before starting.

* Site Requirements: Install on a flat, hard surface. Leave at least 60cm (2 ft) of clearance around the shed for easy access.

* Safety First: Wear gloves throughout the process—metal edges are sharp. Ensure ladders are stable when working at heights.

* Pro Tip: During frame assembly, tighten screws to about 80% first. Fully tighten them only after the entire frame is squared up to prevent misaligned holes.

Step 1: Build the Base Frame

NO.	PART.	Qty.
1L		1
1		1
1R		1
4B		2
S4		8


NO.	PART.	Qty.
2L		2
2R		2
4B		2
S4		8


X2

NO.	PART.	Qty.
3L		1
3R		1
4B		1
C		4
S4		20


Step 2: Install Posts

NO.	PART.	Qty.
5		4

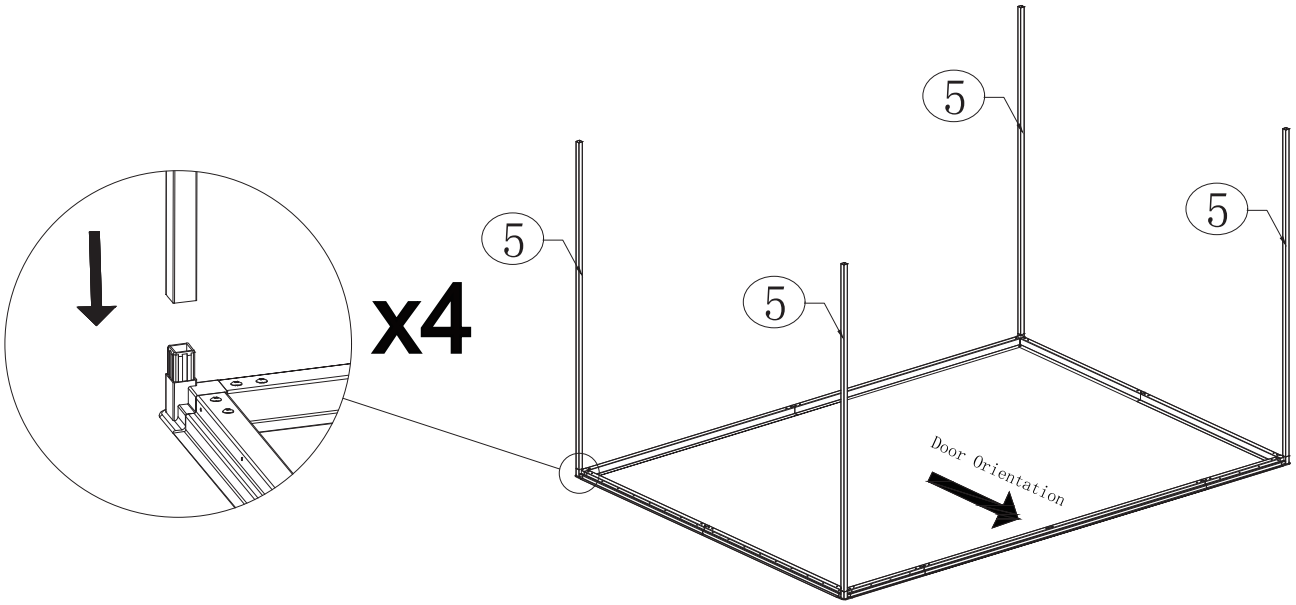


NO.	PART.	Qty.
6L		1
6		1
6R		1
10		2
S4		8

NO.	PART.	Qty.
7F		2
7B		2
10		2
S4		8

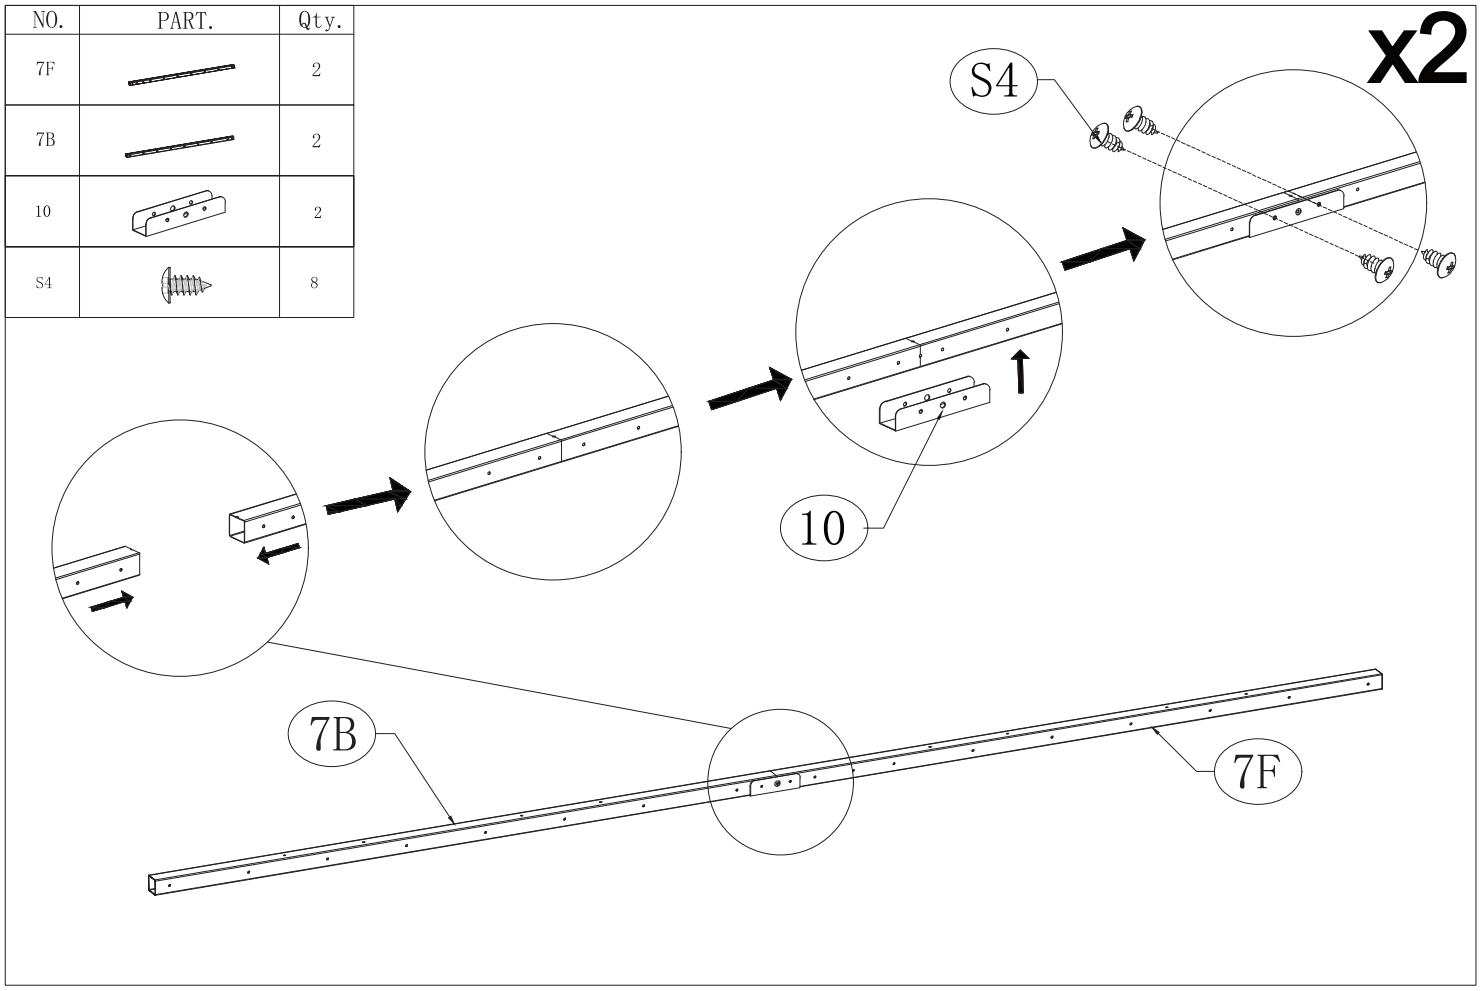


NO.	PART.	Qty.
8L		1
8R		1
10		1
S4		4

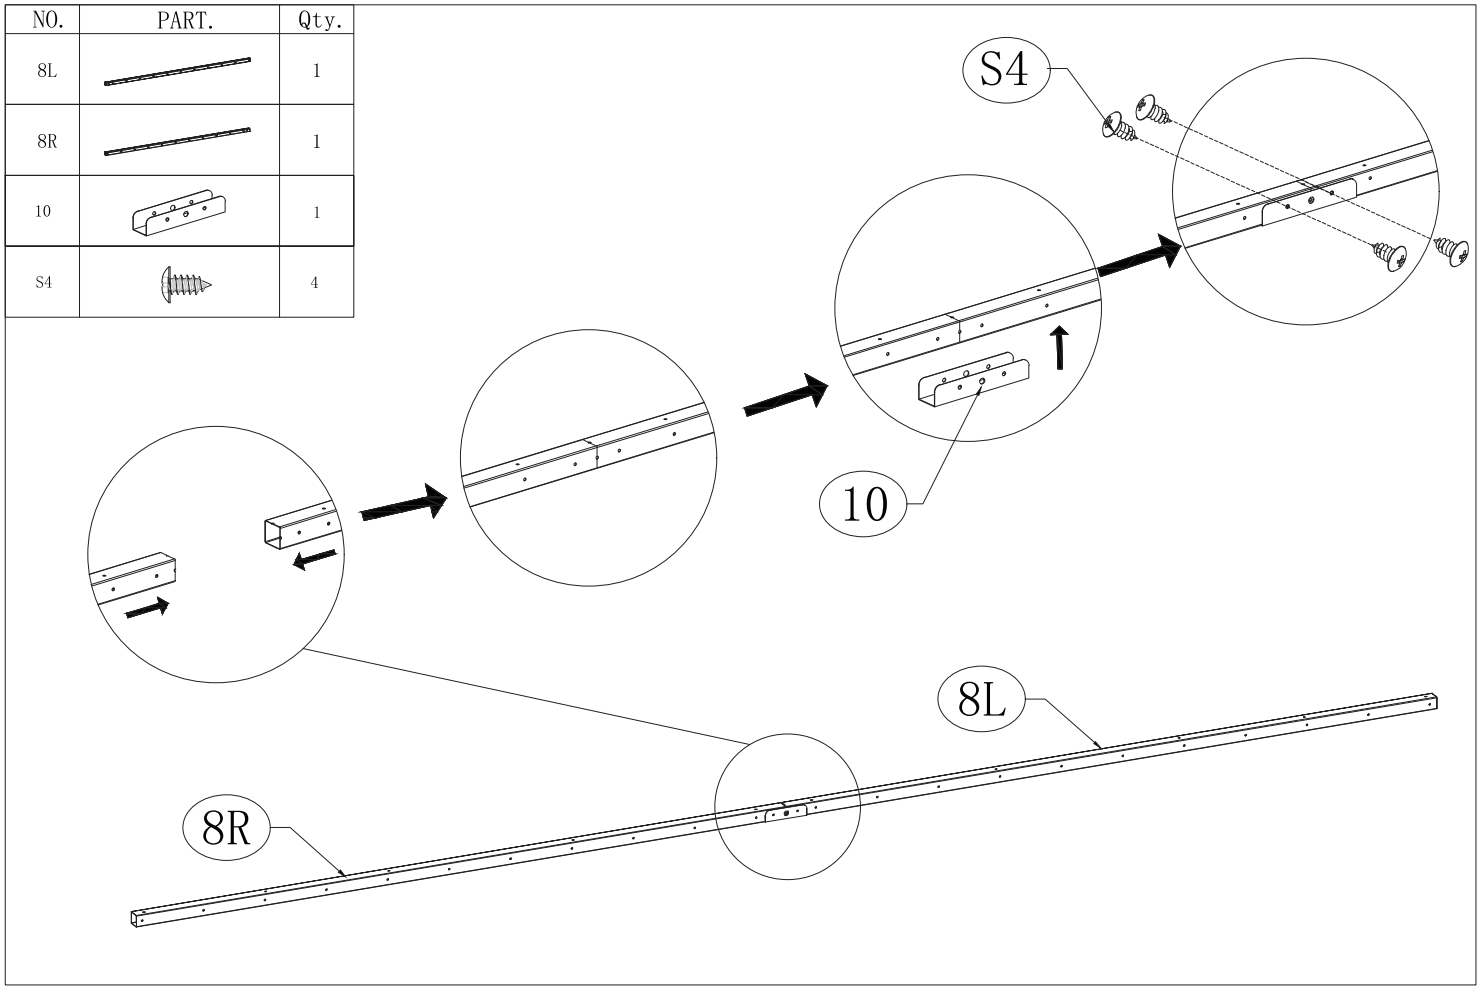

Step 3: Install Top Frame

NO.	PART.	Qty.
F		4
S4		8


NO.	PART.	Qty.
36		1
S4		2

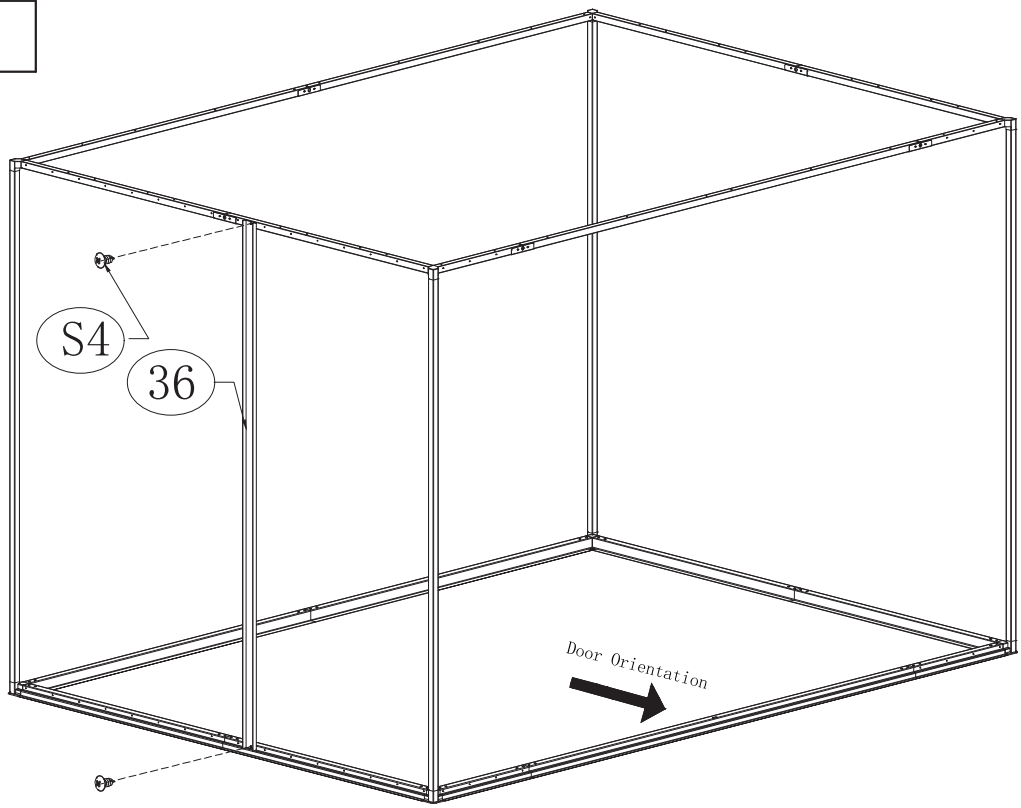


Step 4: Install the Side & Back Wall Panels


NO.	PART.	Qty.	NO.	PART.	Qty.	NO.	PART.	Qty.
W3		1	S4		32	C3		1
W5		1	S6		5	C4		1
W7		2	S7		5			


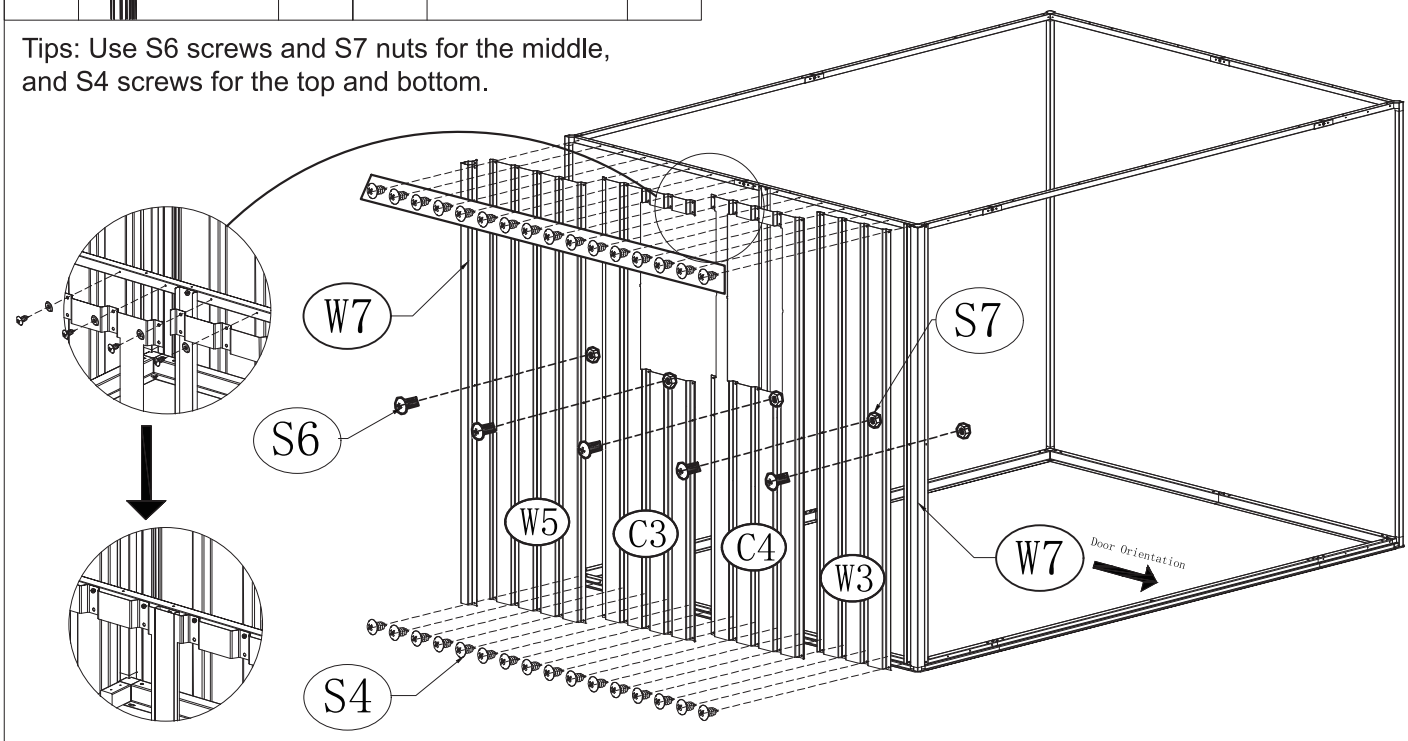
Tips: Use S6 screws and S7 nuts for the middle,
and S4 screws for the top and bottom.




Step 4: Install the Side & Back Wall Panels




NO.	PART.	Qty.	NO.	PART.	Qty.
W3		7	S4		44
W7		1	S6		8
			S7		8

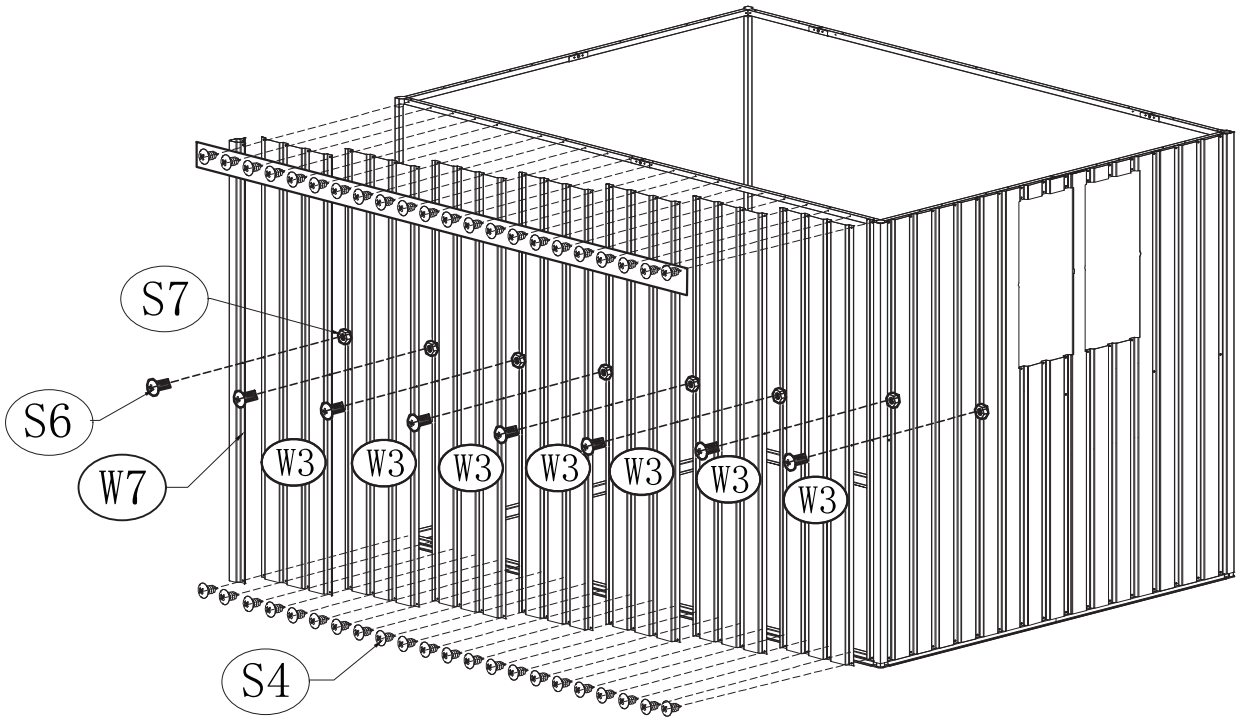



NO.	PART.	Qty.	NO.	PART.	Qty.	NO.	PART.	Qty.
W3		1	S4		32	S7		5
W5		3	S6		5			
W7		1						

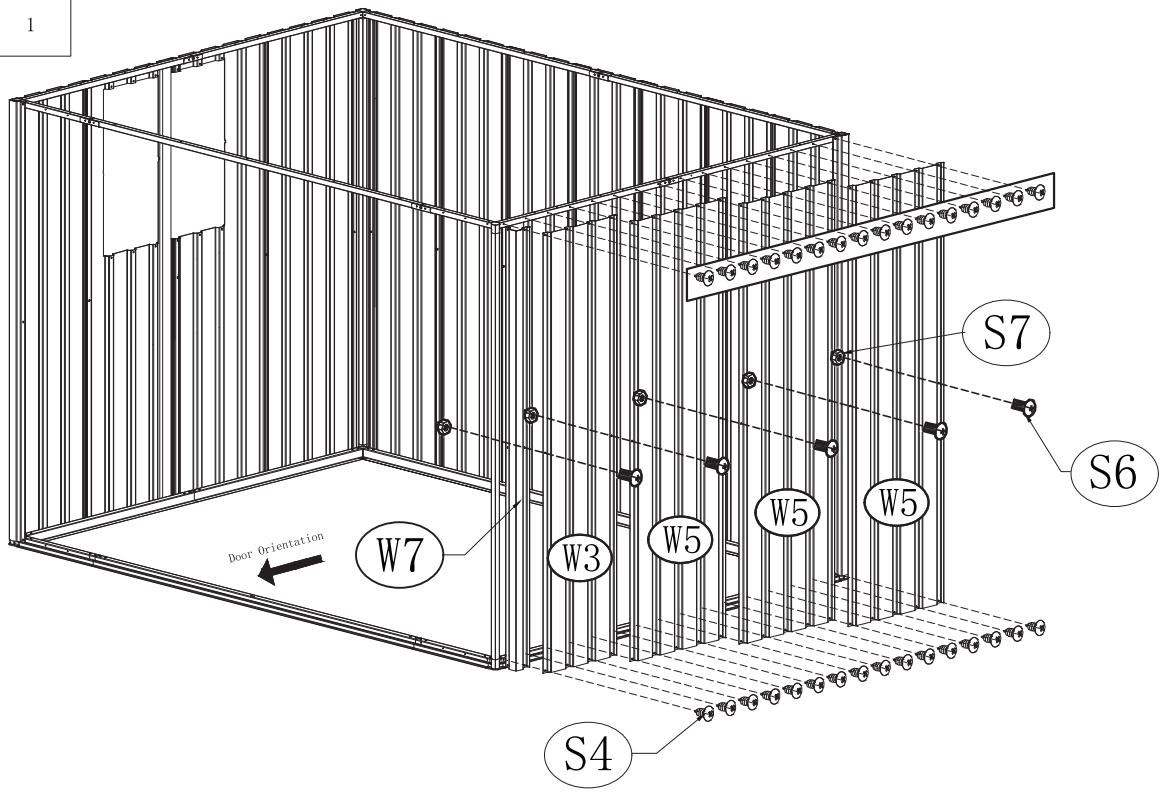



Step 5: Install the Window


NO.	PART.	Qty.
F12		2
F13		2
F14		2
S4		16

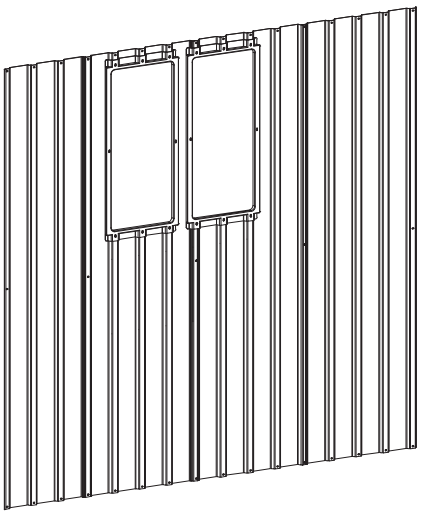

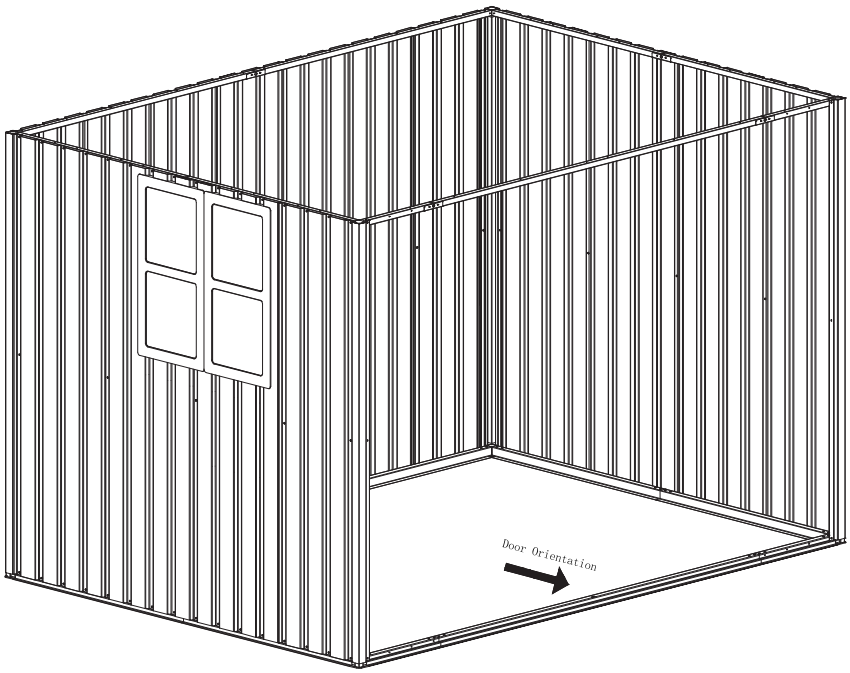


NO.	PART.	Qty.	NO.	PART.	Qty.	NO.	PART.	Qty.
W3		2	17L		1	S6		4
S4		20	17R		1	S7		4

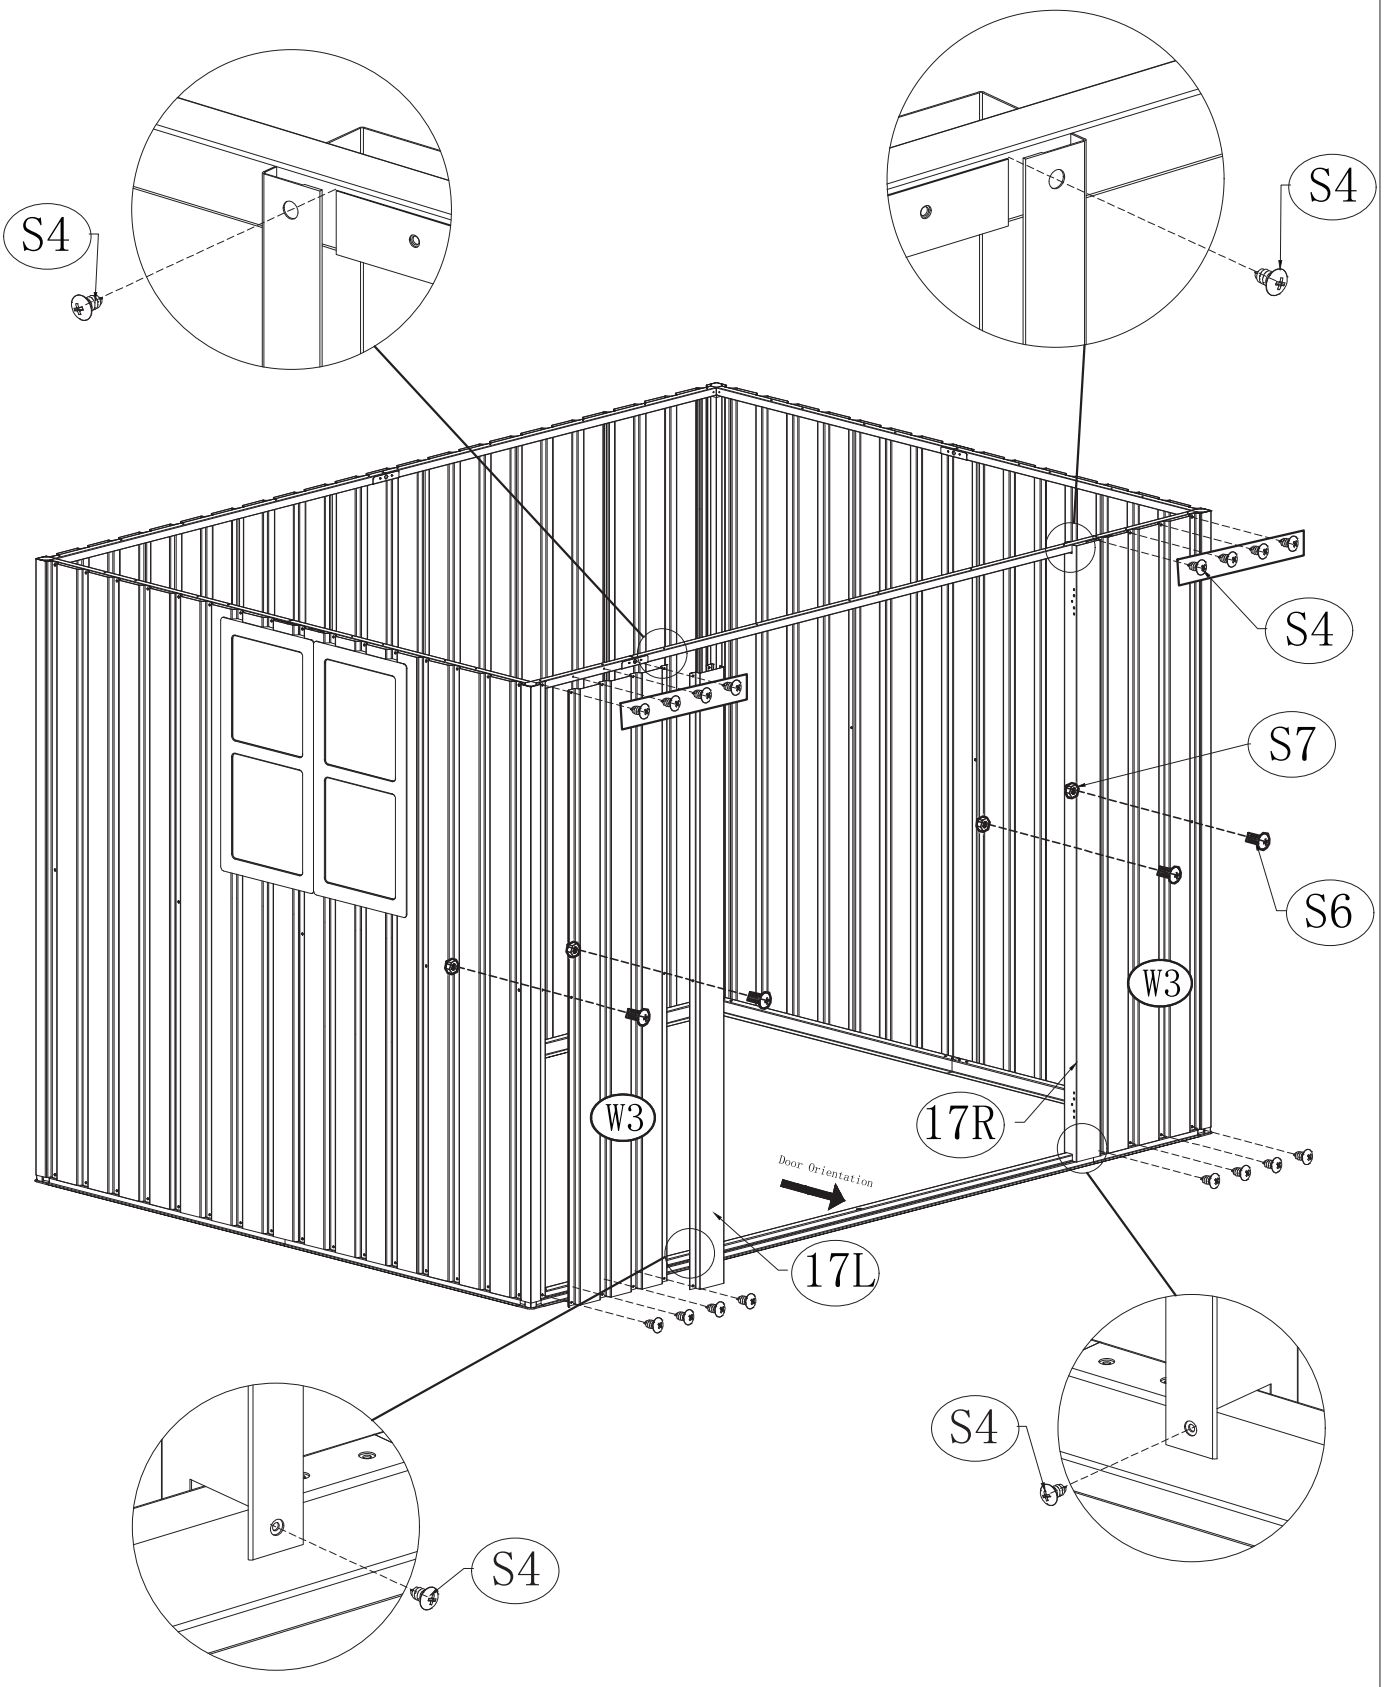

NO.	PART.	Qty.
11F		2
11B		2
21L		2
21R		2
S6		10
S7		10
F6		4

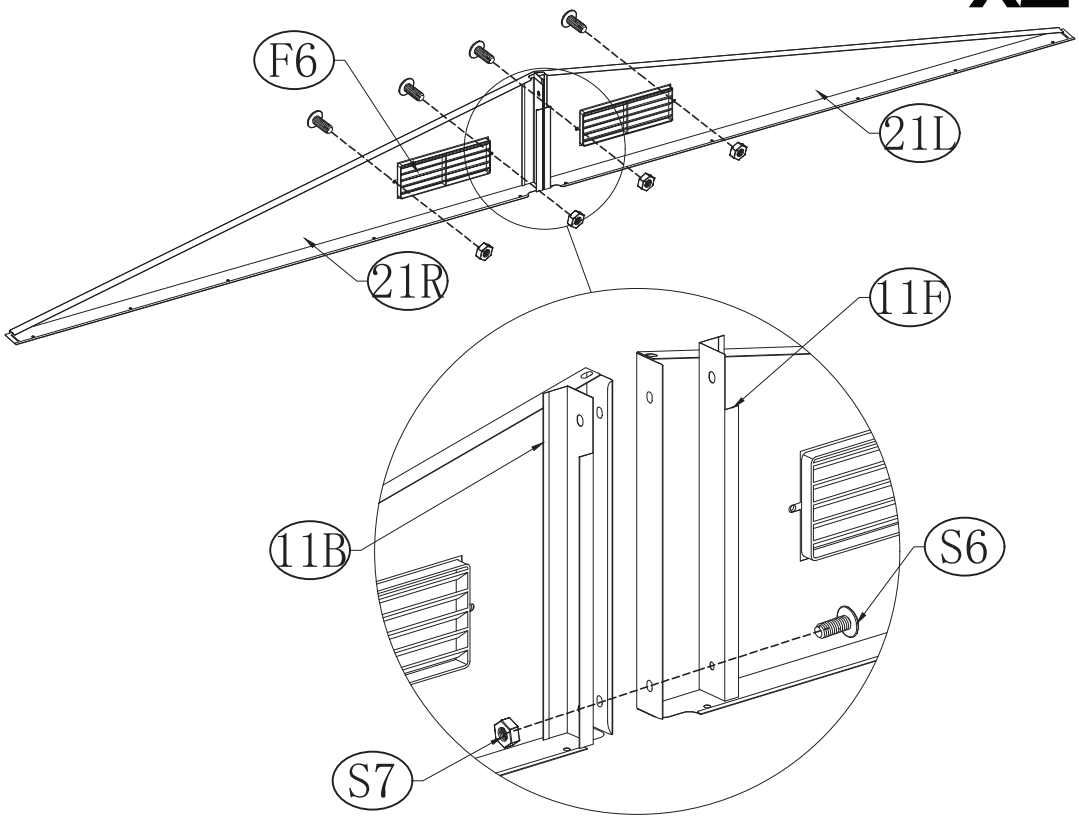
x2




NO.	PART.	Qty.
S4		20

Tips: Use S4 for downward installation.

NO.	PART.	Qty.
9B		2
11A		1
11C		1
Q58		4
Q17		4
Q20		4

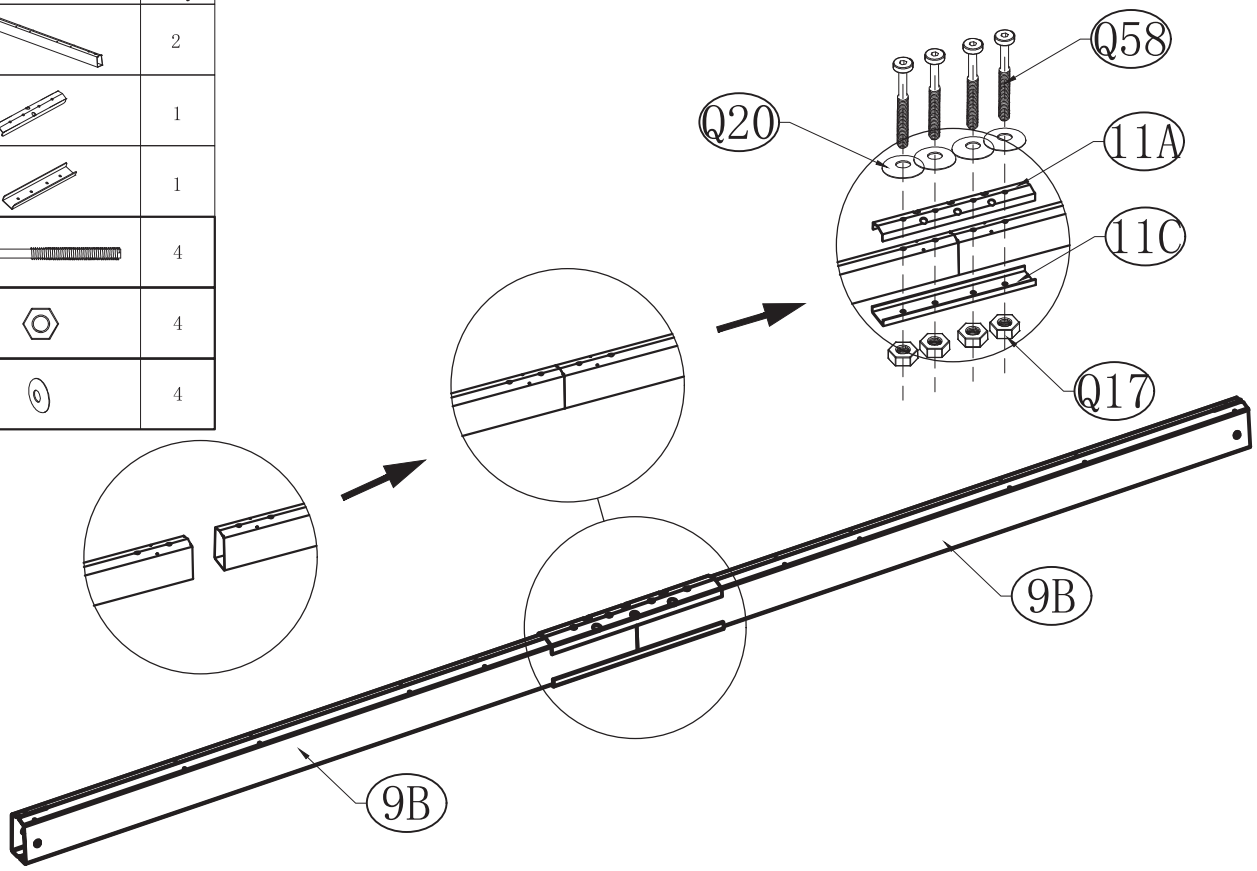

NO.	PART.	Qty.
Q37		2
Q17		2
Q20		2

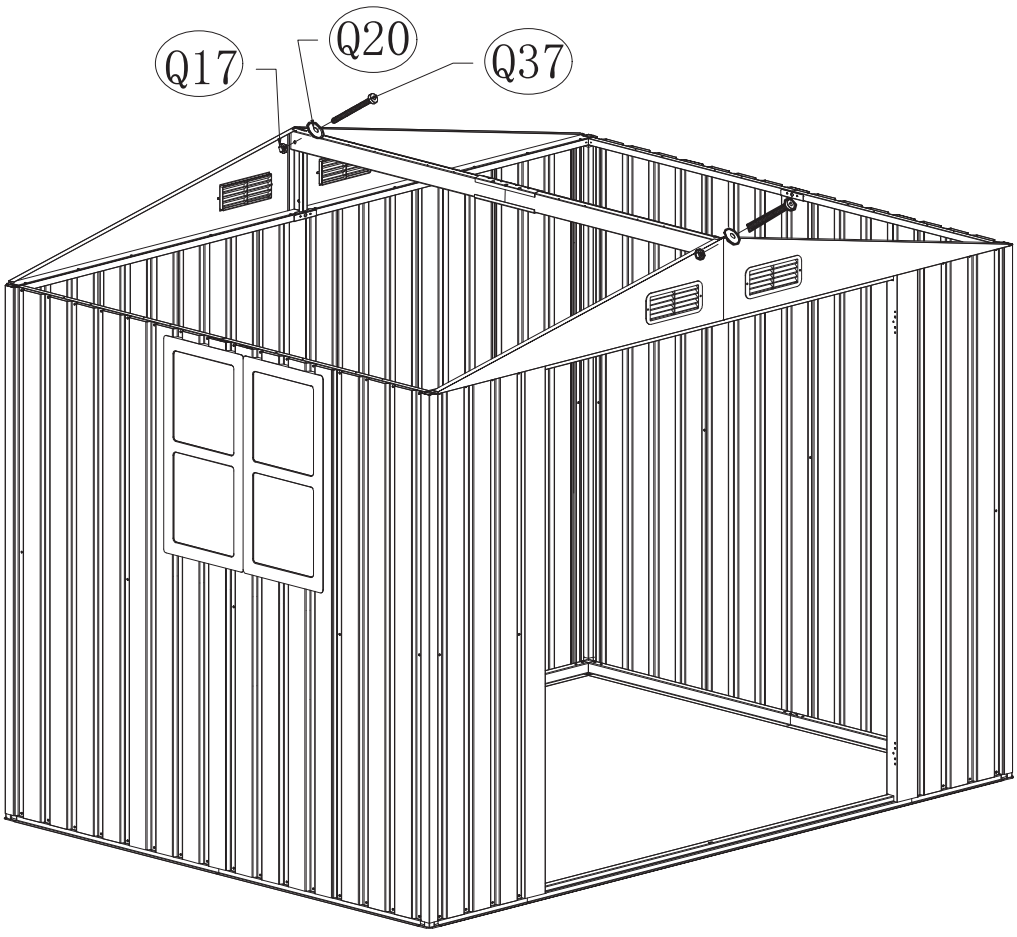


Step 6: Lay the Roof Panels


NO.	PART.	Qty.
W12		4
S4		22
F7		22


Use S4 and F7 for all installations.

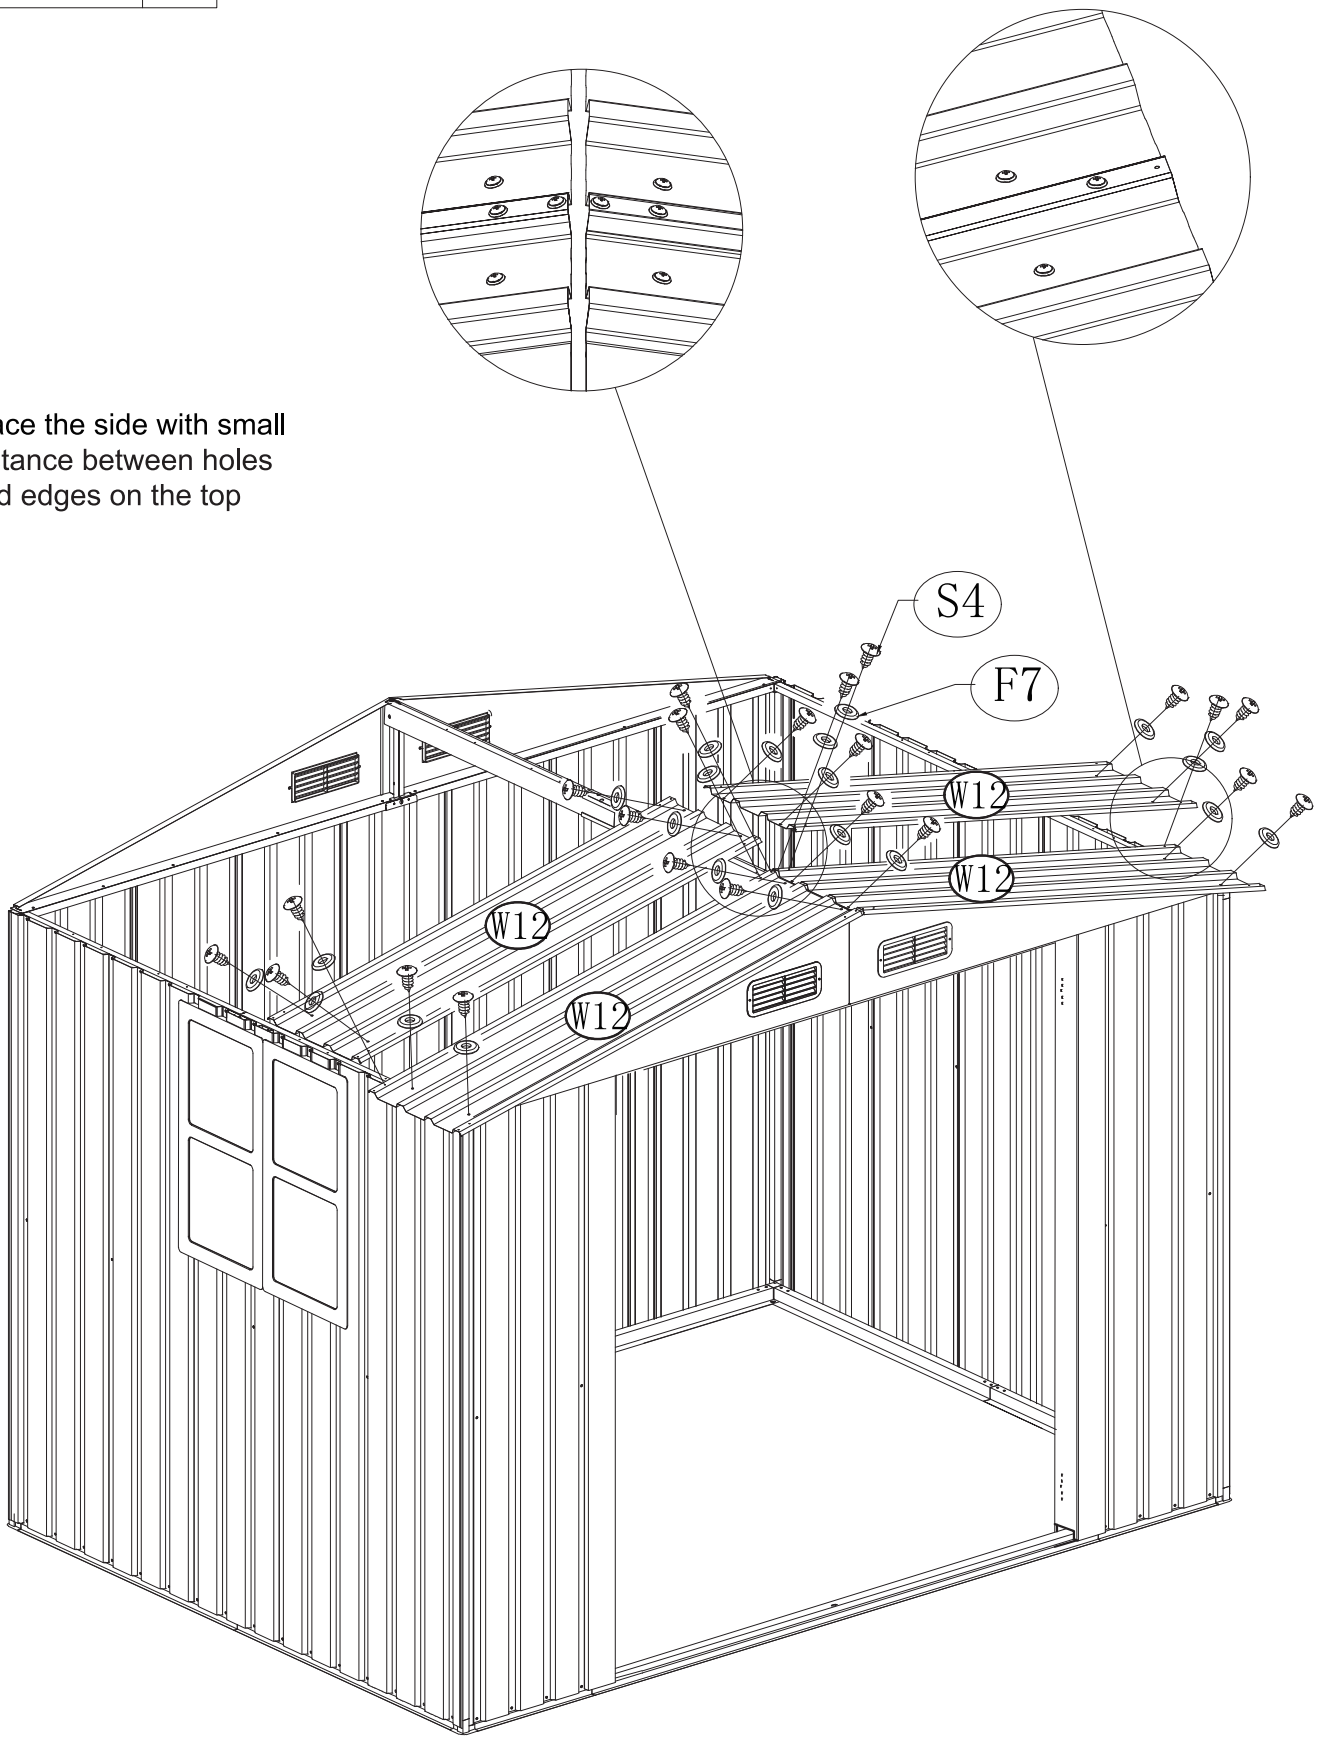Place the side with small distance between holes and edges on the top




NO.	PART.	Qty.
W15		2
S4		16
S8		2
F7		18
F18		1

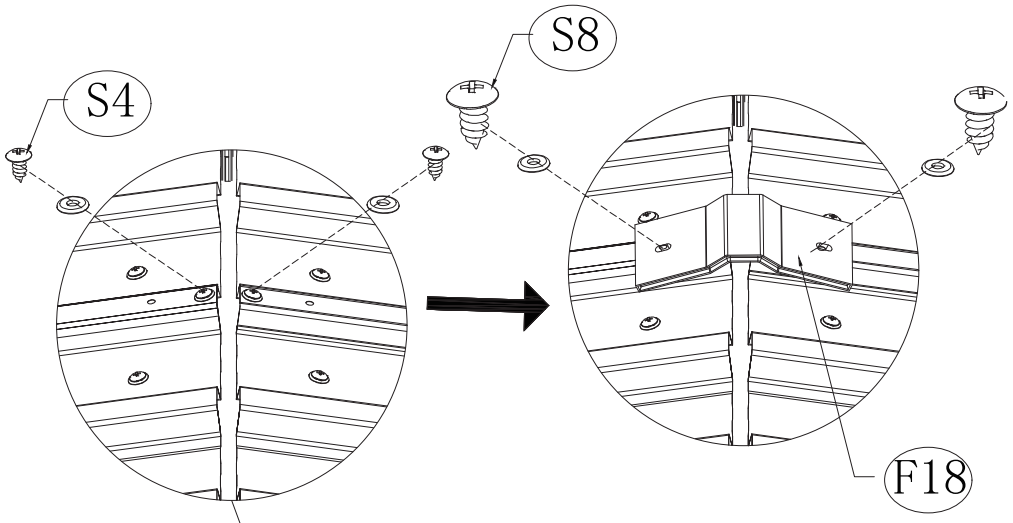

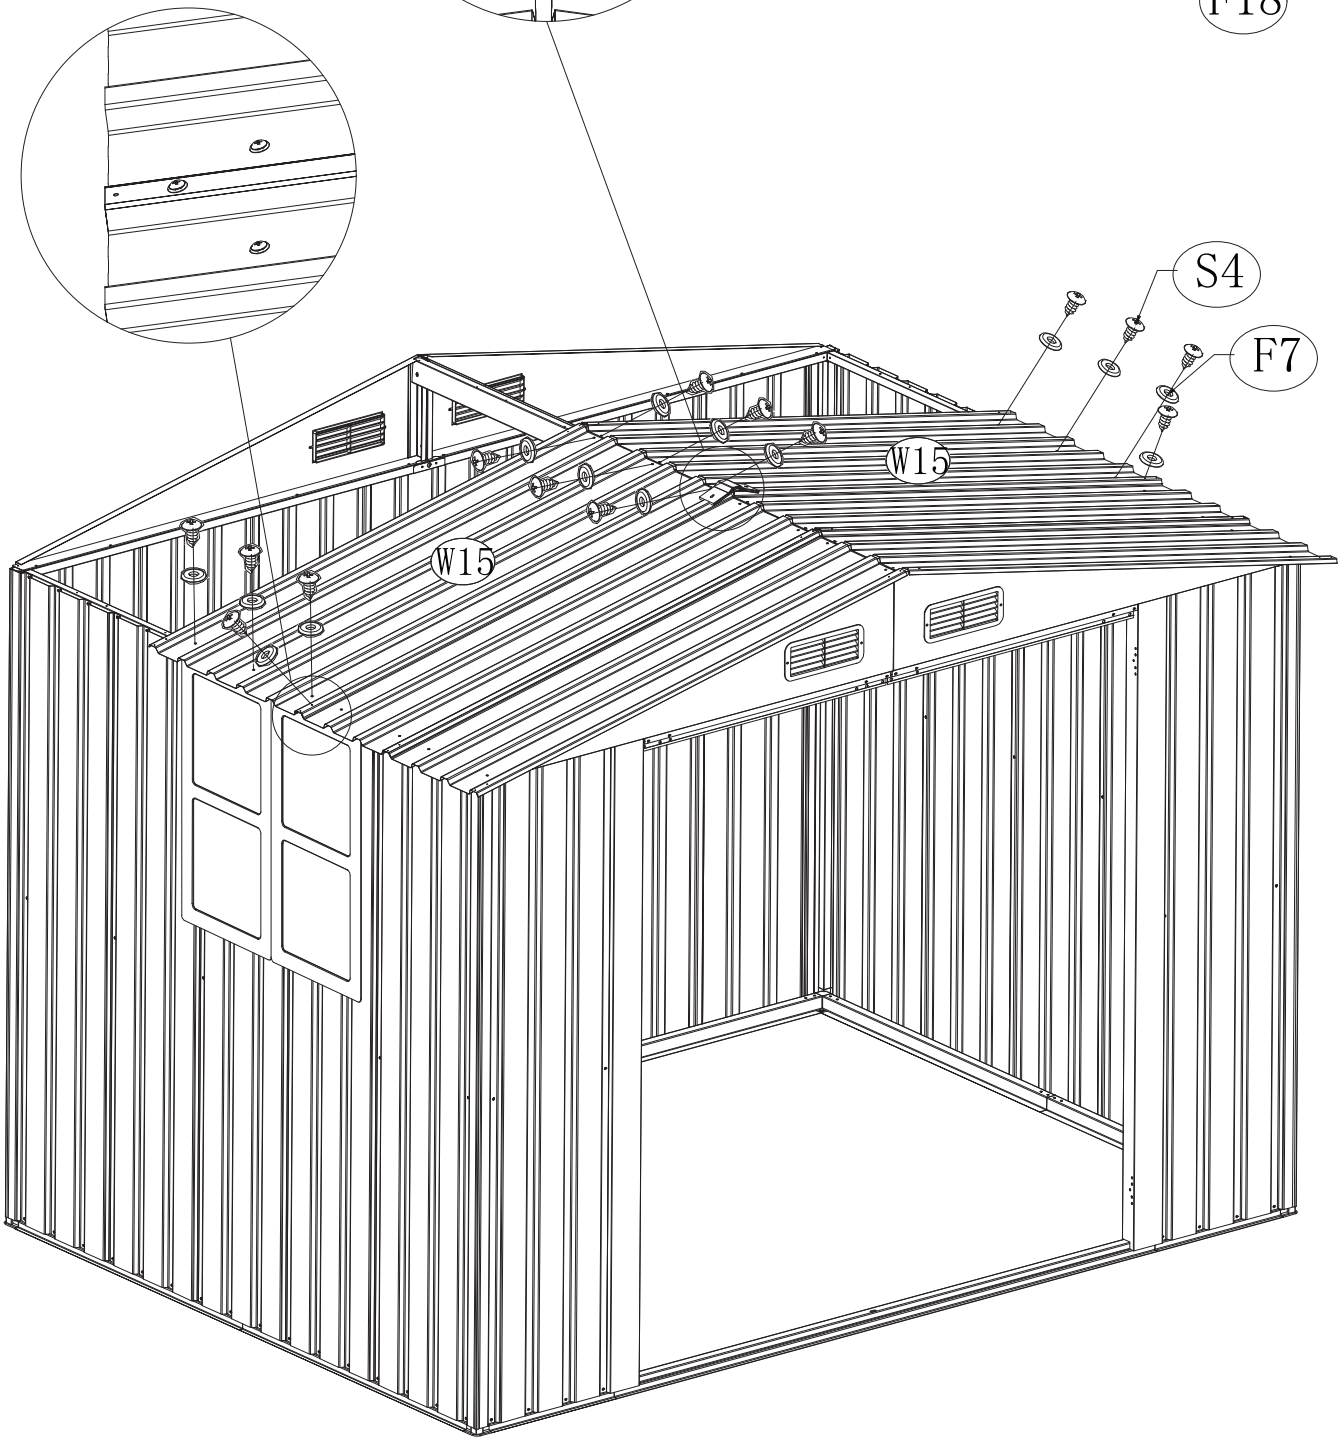


NO.	PART.	Qty.
W12		4
S4		26
F7		26



NO.	PART.	Qty.
19L		2
19R		2
20		4
F4		4
S4		14
S8		6
F7		20
F10		2

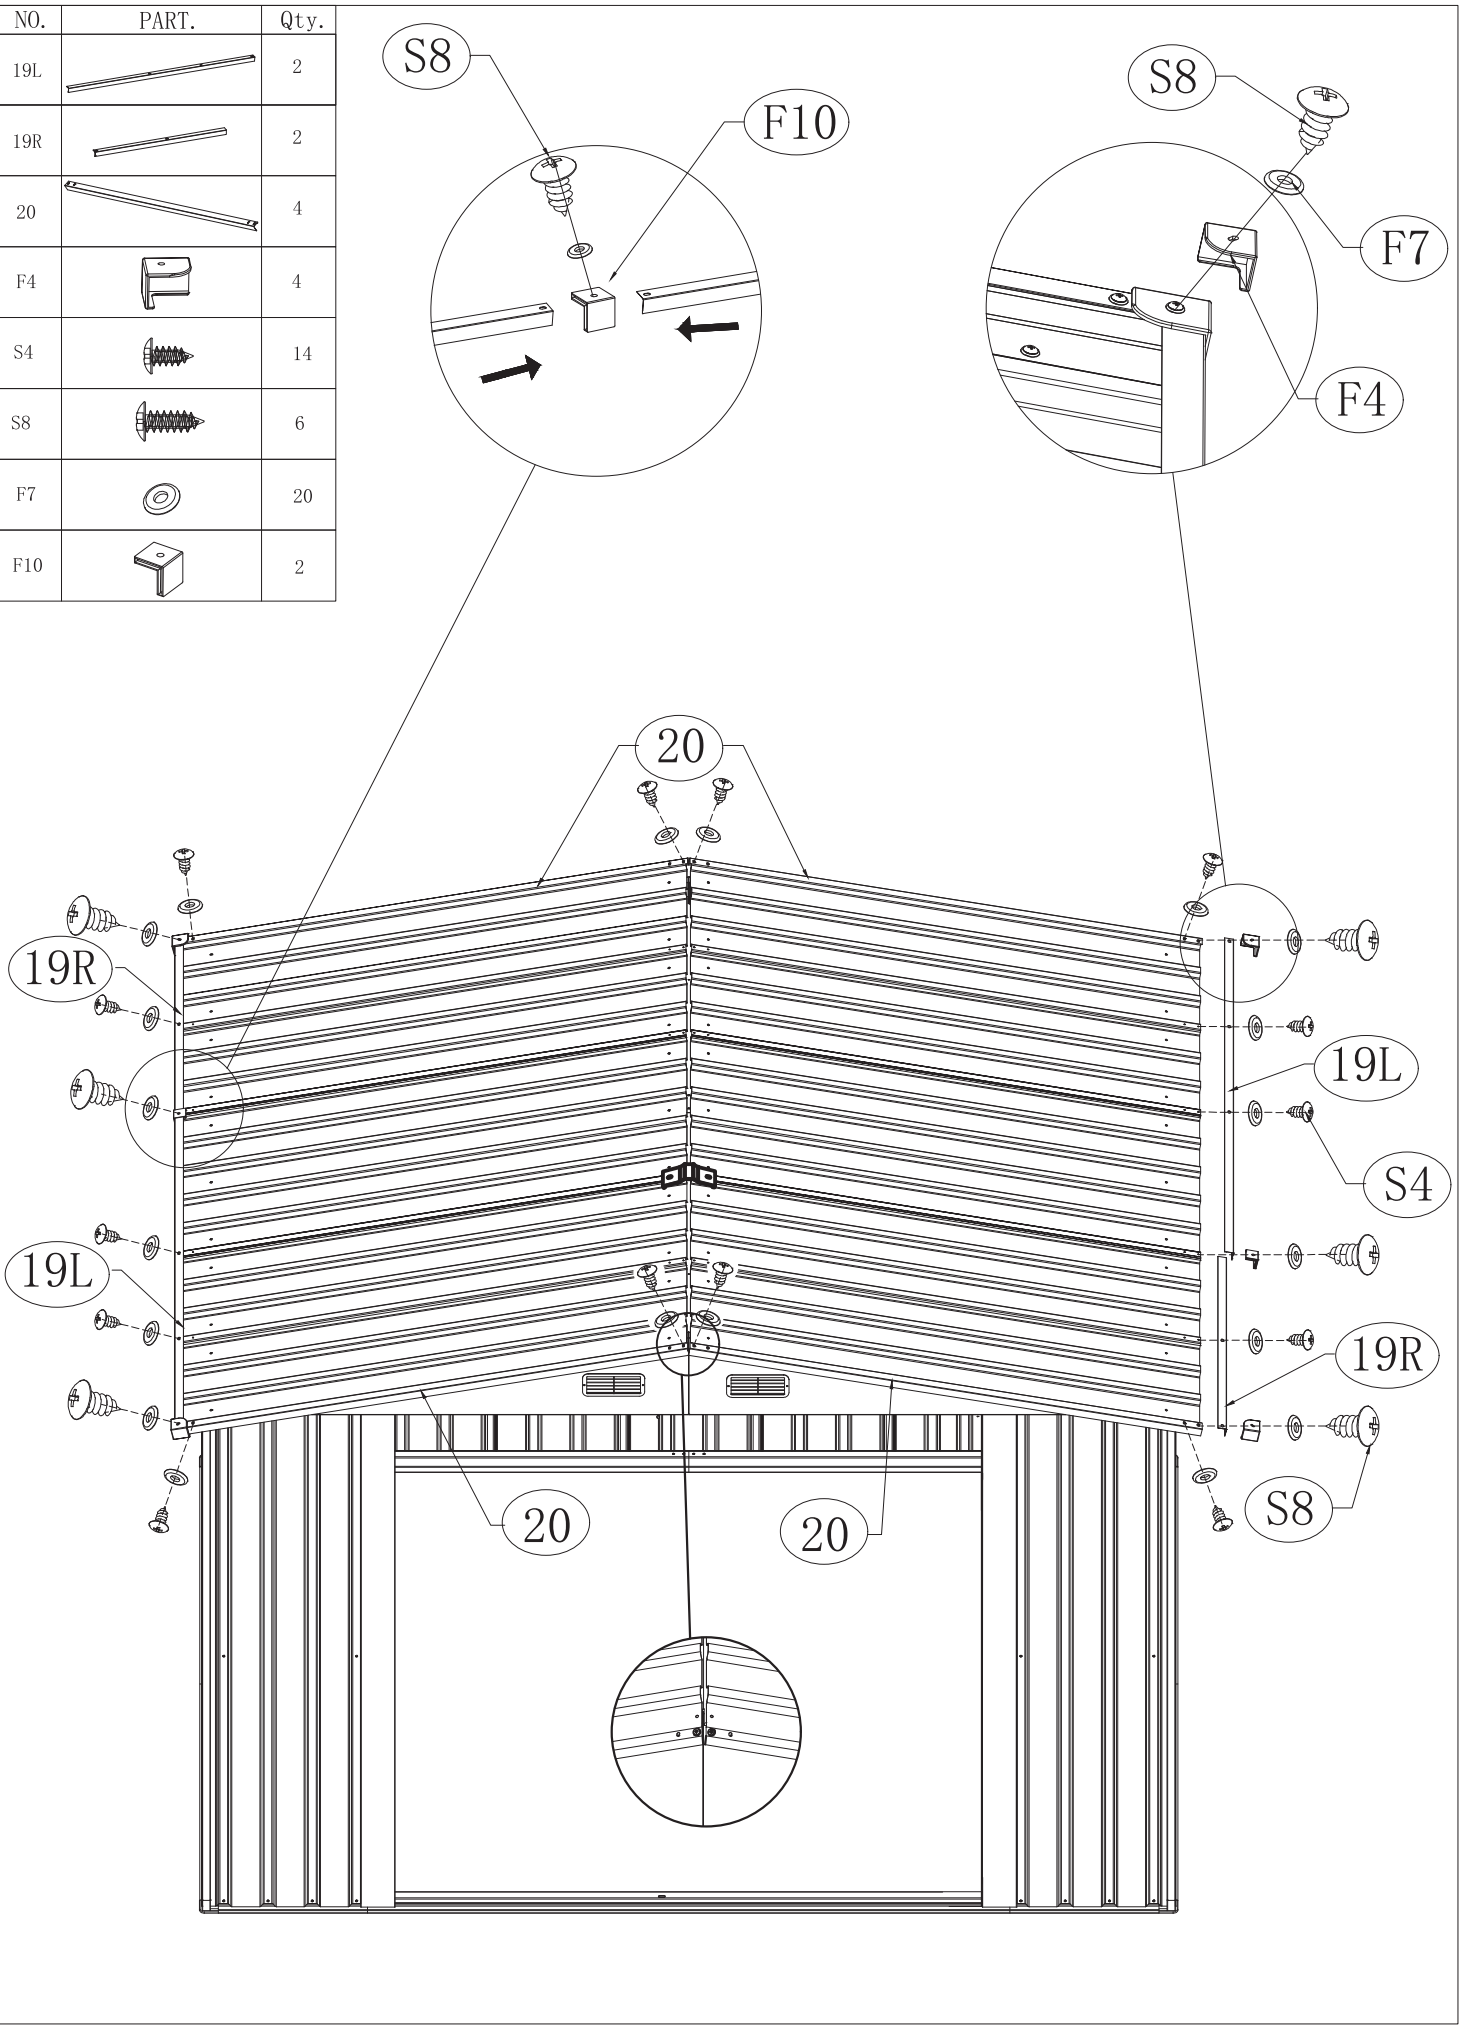

NO.	PART.	Qty.
F8		24

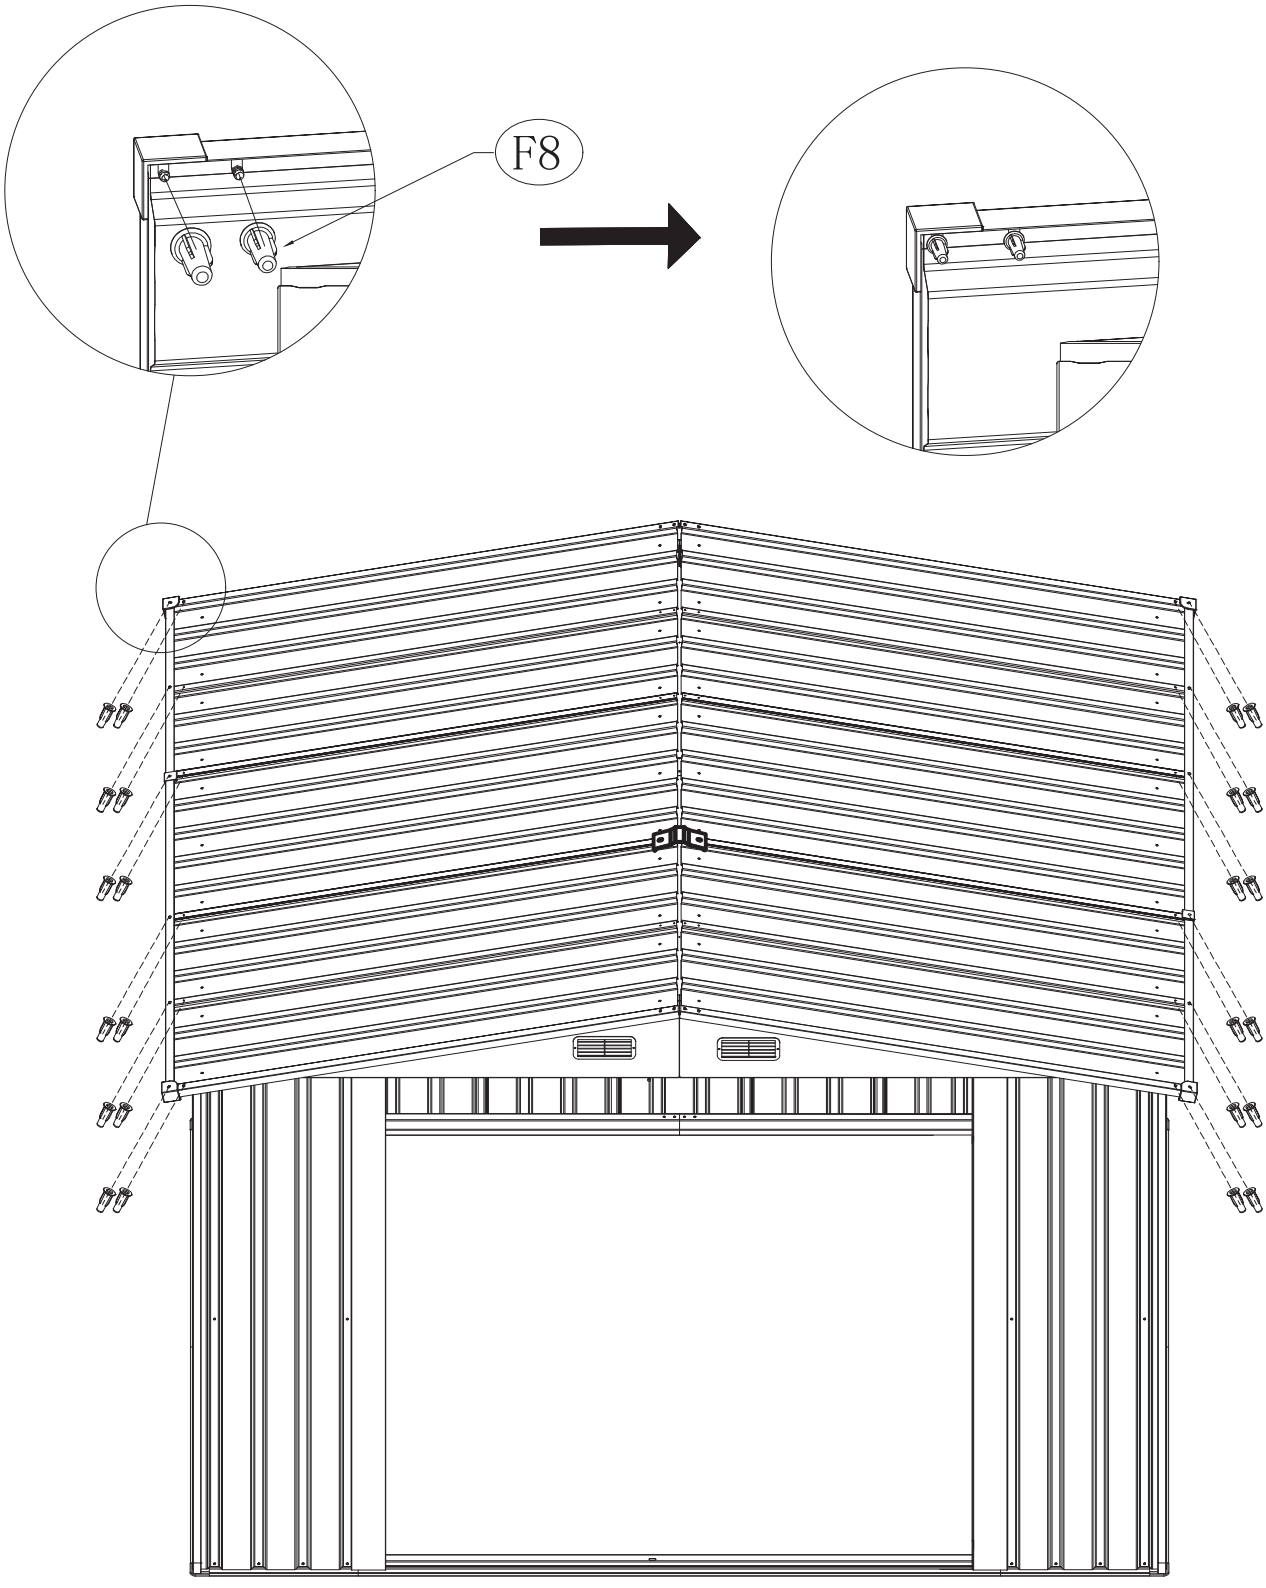Mount F8 at the bottom of all visible screws under the eaves.



NO.	PART.	Qty.
18F		1
18B		1
F5		2
S4		8
F7		8


18B Insert the shorter end into F18.



Step 7: Assemble the Door

NO.	PART.	Qty.
16		1
21		2
22		1
M1		1

left

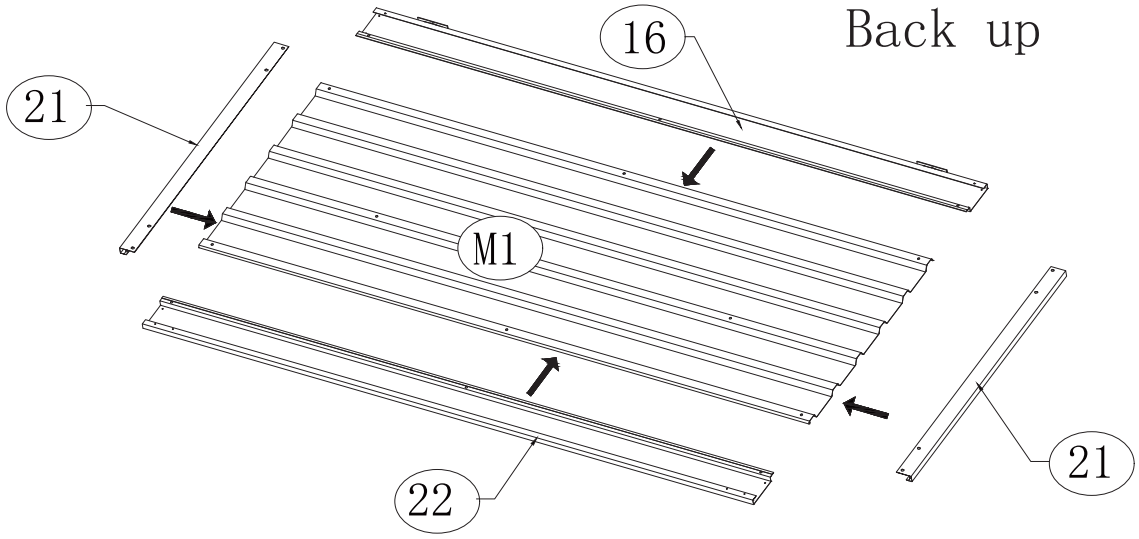
Put 16 on the side farther from the hole in the center of the tile and 22 on the side nearer.




NO.	PART.	Qty.
S5L		1
S5R		1
S4		2
S6		4
S7		4


NO.	PART.	Qty.
15		2
S6		3
S6A		5
S7		8

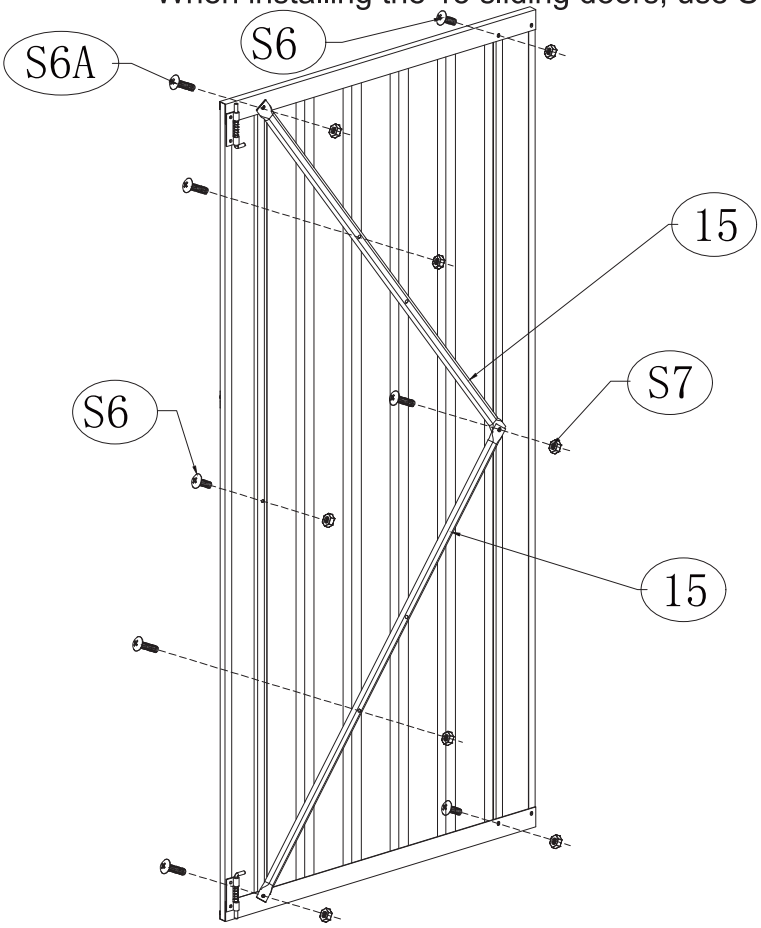When installing the 15 sliding doors, use S6A and S7.




NO.	PART.	Qty.
S1		1
S4		8
S6		2
S7		2

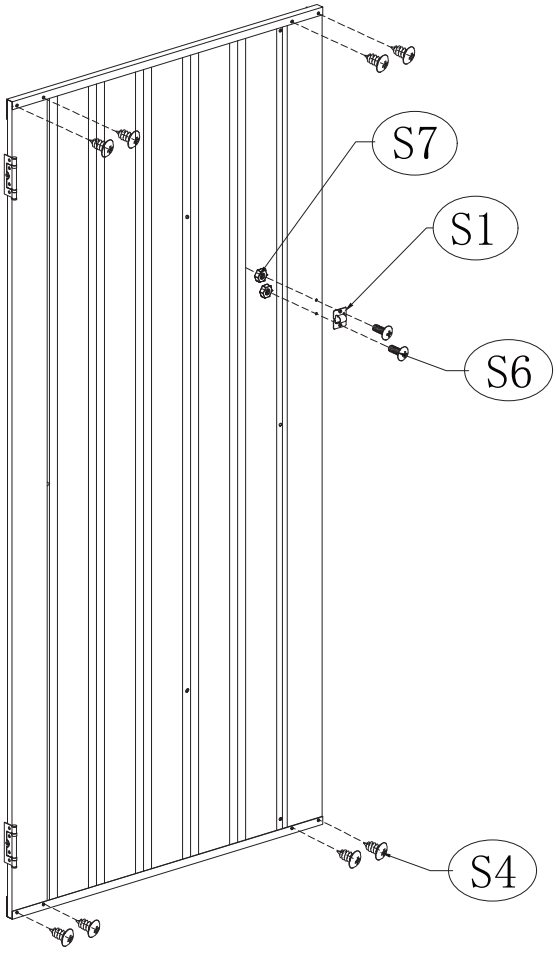


NO.	PART.	Qty.
16		1
21		2
23		1
M1		1

right

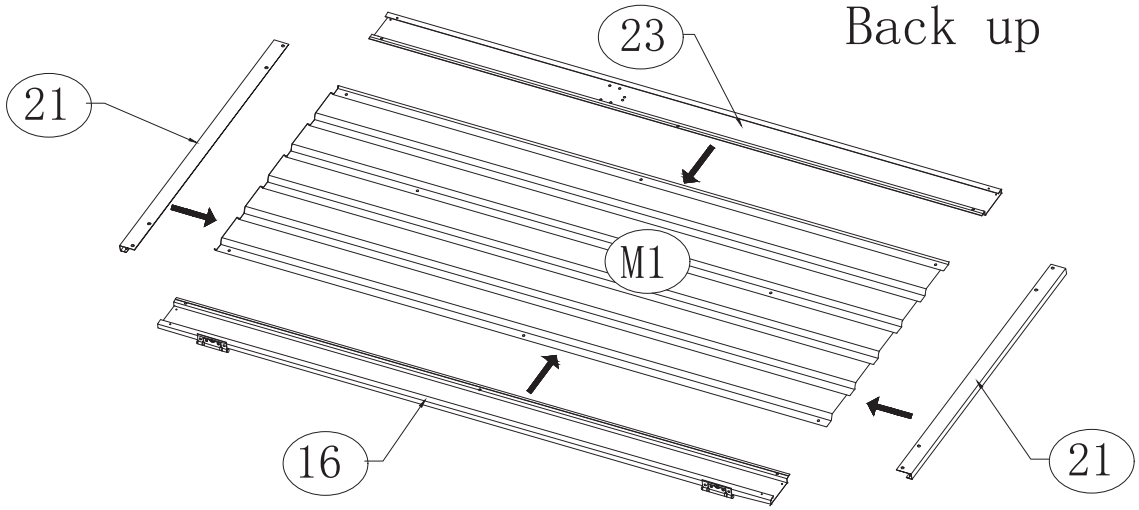Put 16 on the side farther from the hole in the center of the tile and 23on the side nearer.




NO.	PART.	Qty.
S4		4

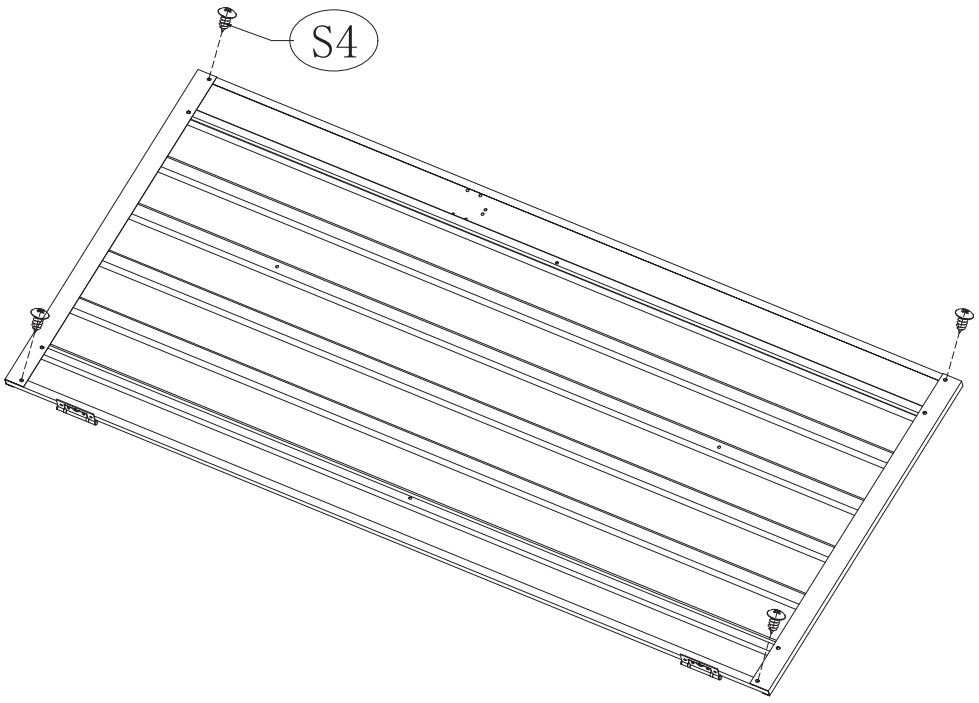


NO.	PART.	Qty.
15		2
S6		3
S6A		5
S7		8

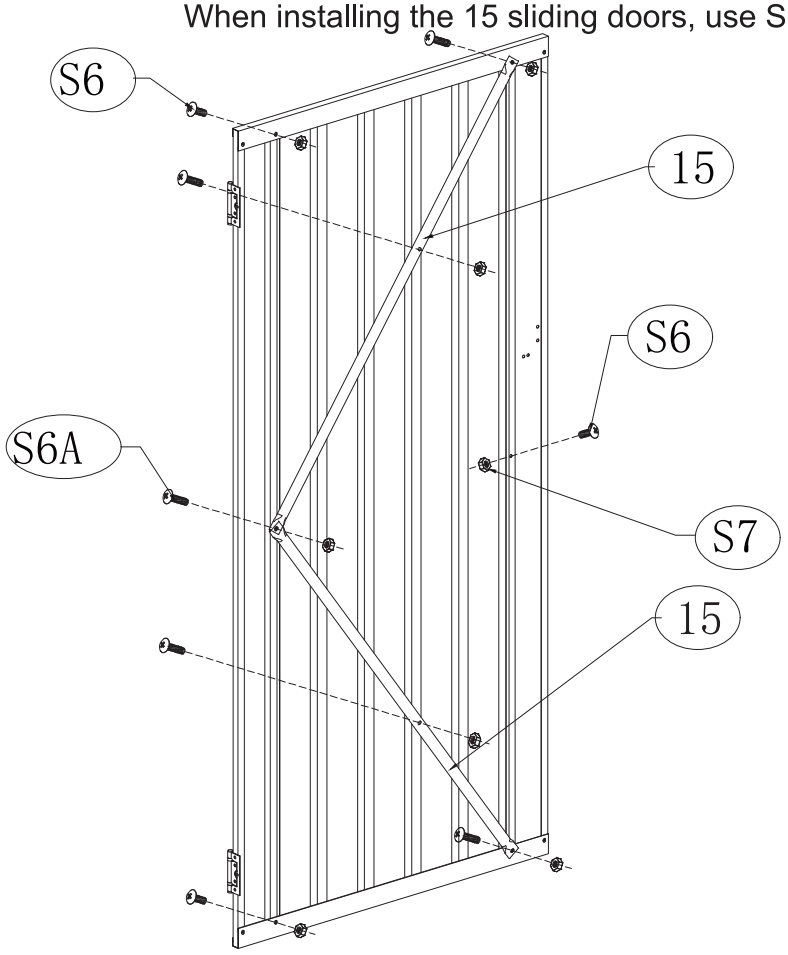When installing the 15 sliding doors, use S6A and S7.





NO.	PART.	Qty.
S2		1
S3		1
S4		8
S6		6

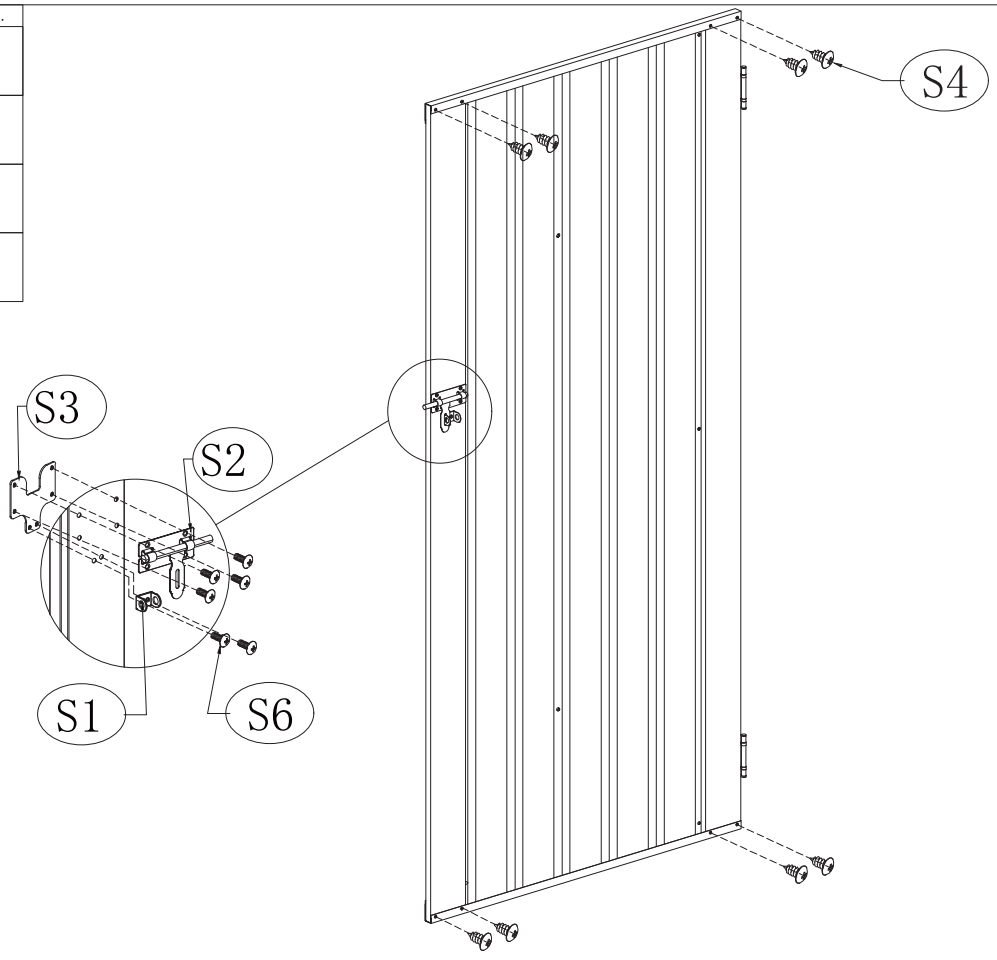

Step 8: Hang the Door & Install Door Stop

NO.	PART.	Qty.
S6		12
S7		12

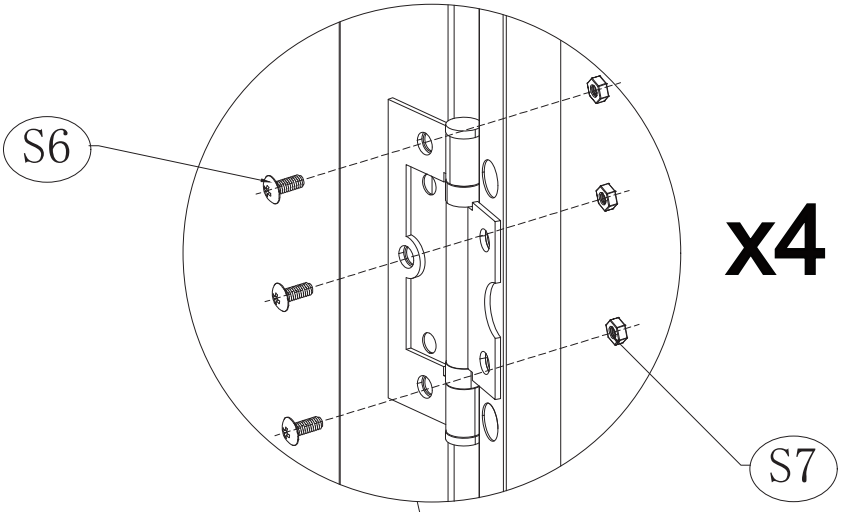


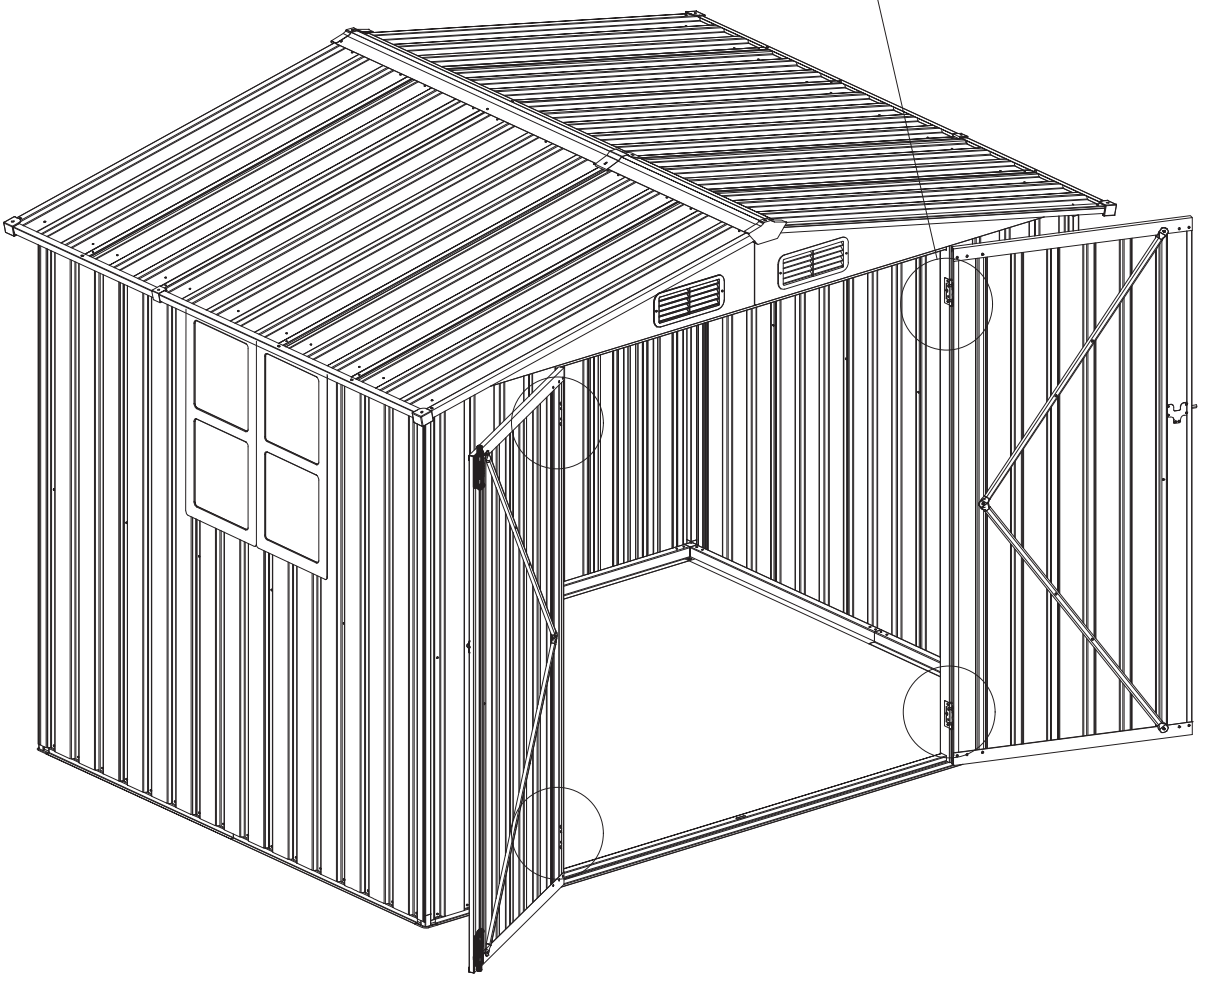


Pro Tip:

Test the door opens and closes smoothly before fully tightening hinge screws — prevents sagging and scraping.

NO.	PART.	Qty.
S9		4

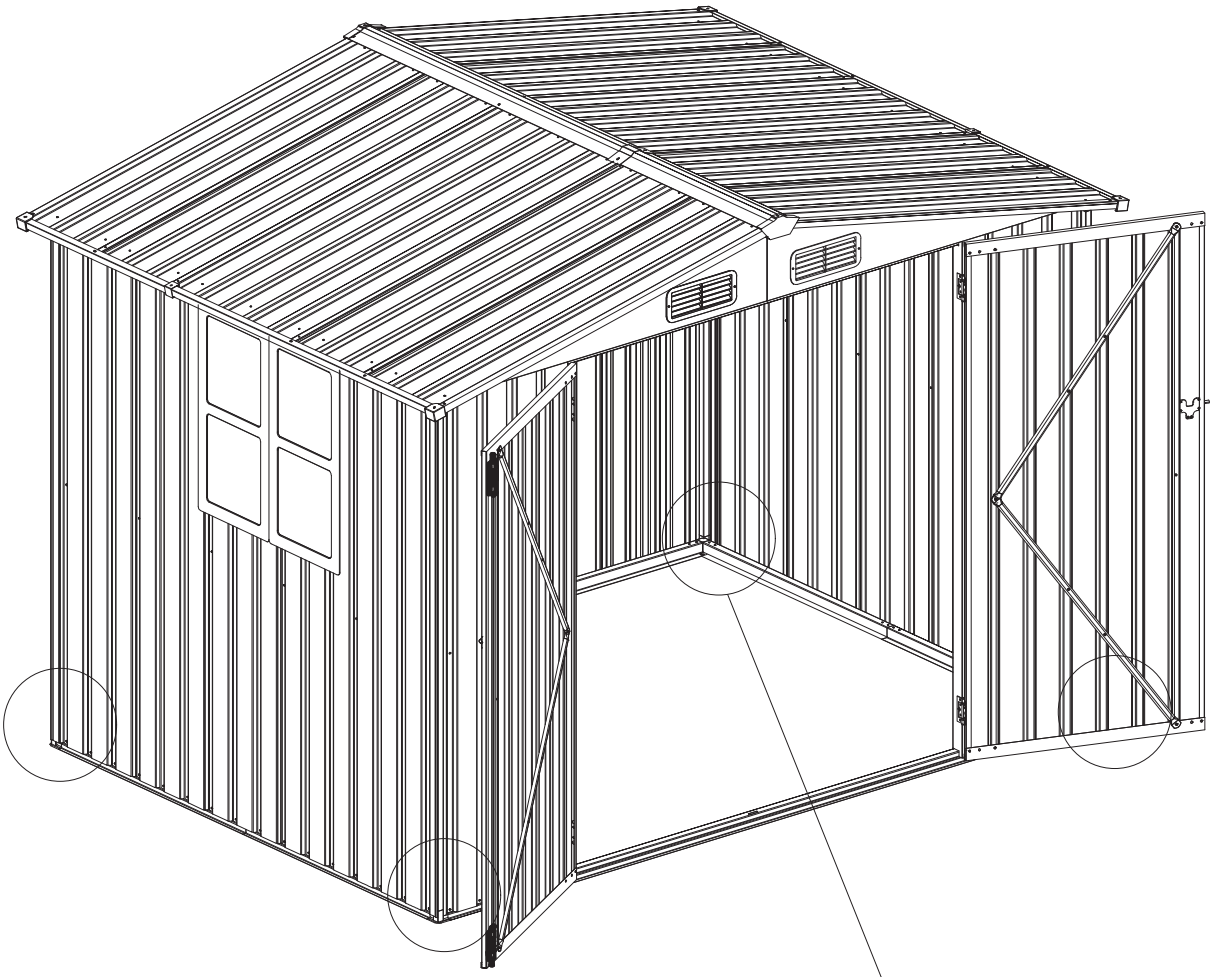

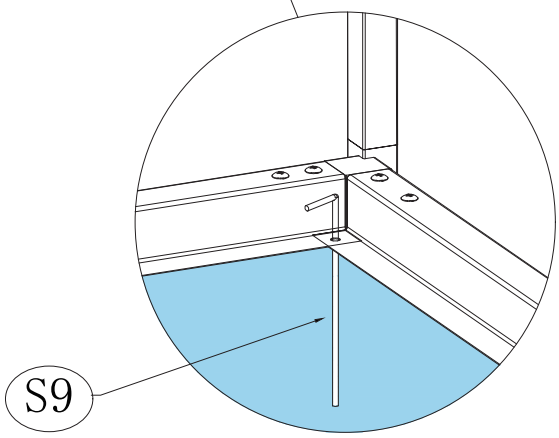

x4