

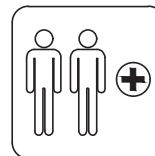
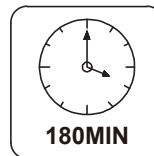
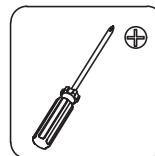
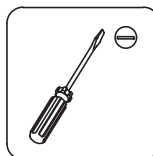



Installation & Assembly

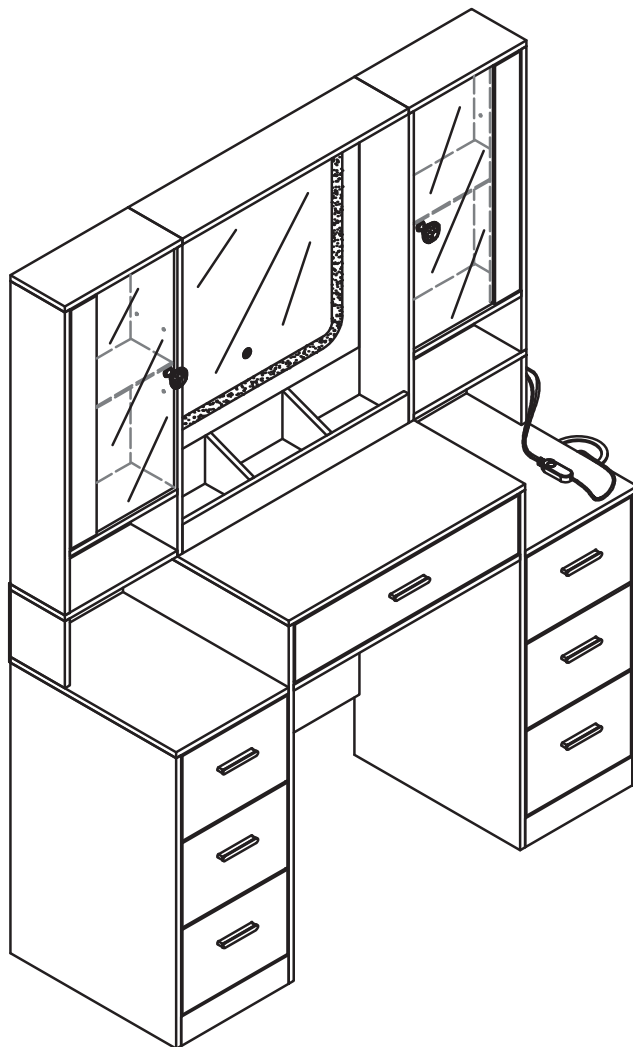


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

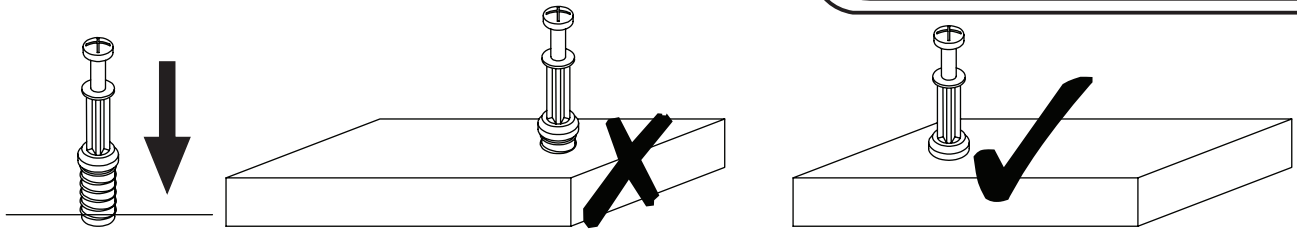


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

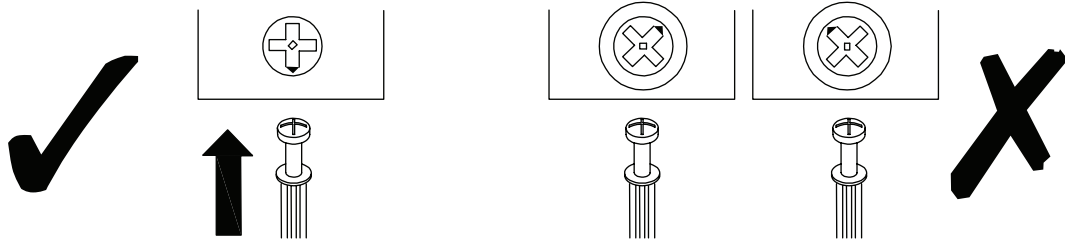








EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.








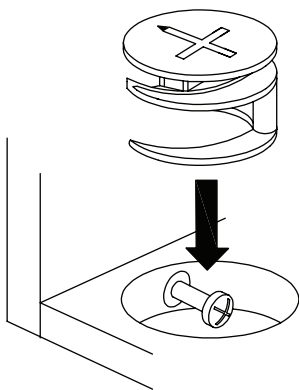








EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.






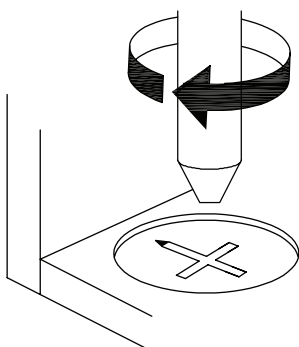


EN_Turn cam lock clockwise to tighten.

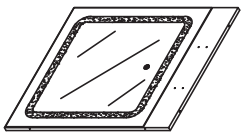
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x2	
④		x2	
⑤		x2	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x1	




NO.	PARTS	QTY	SPARE
⑪		x2	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x2	
⑱		x2	
⑳		x1	
㉑		x1	

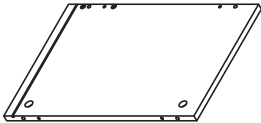NO.	PARTS	QTY	SPARE
22		x1	
23		x1	
24		x4	
25		x2	
26		x1	
27		x2	
28		x1	
30		x1	
31		x1	
32		x1	

NO.	PARTS	QTY	SPARE
33		x1	
39		x6	
40		x6	
41		x6	
42		x6	
43		x6	
44		x1	
45		x1	
46		x1	
47		x1	



[illegible]

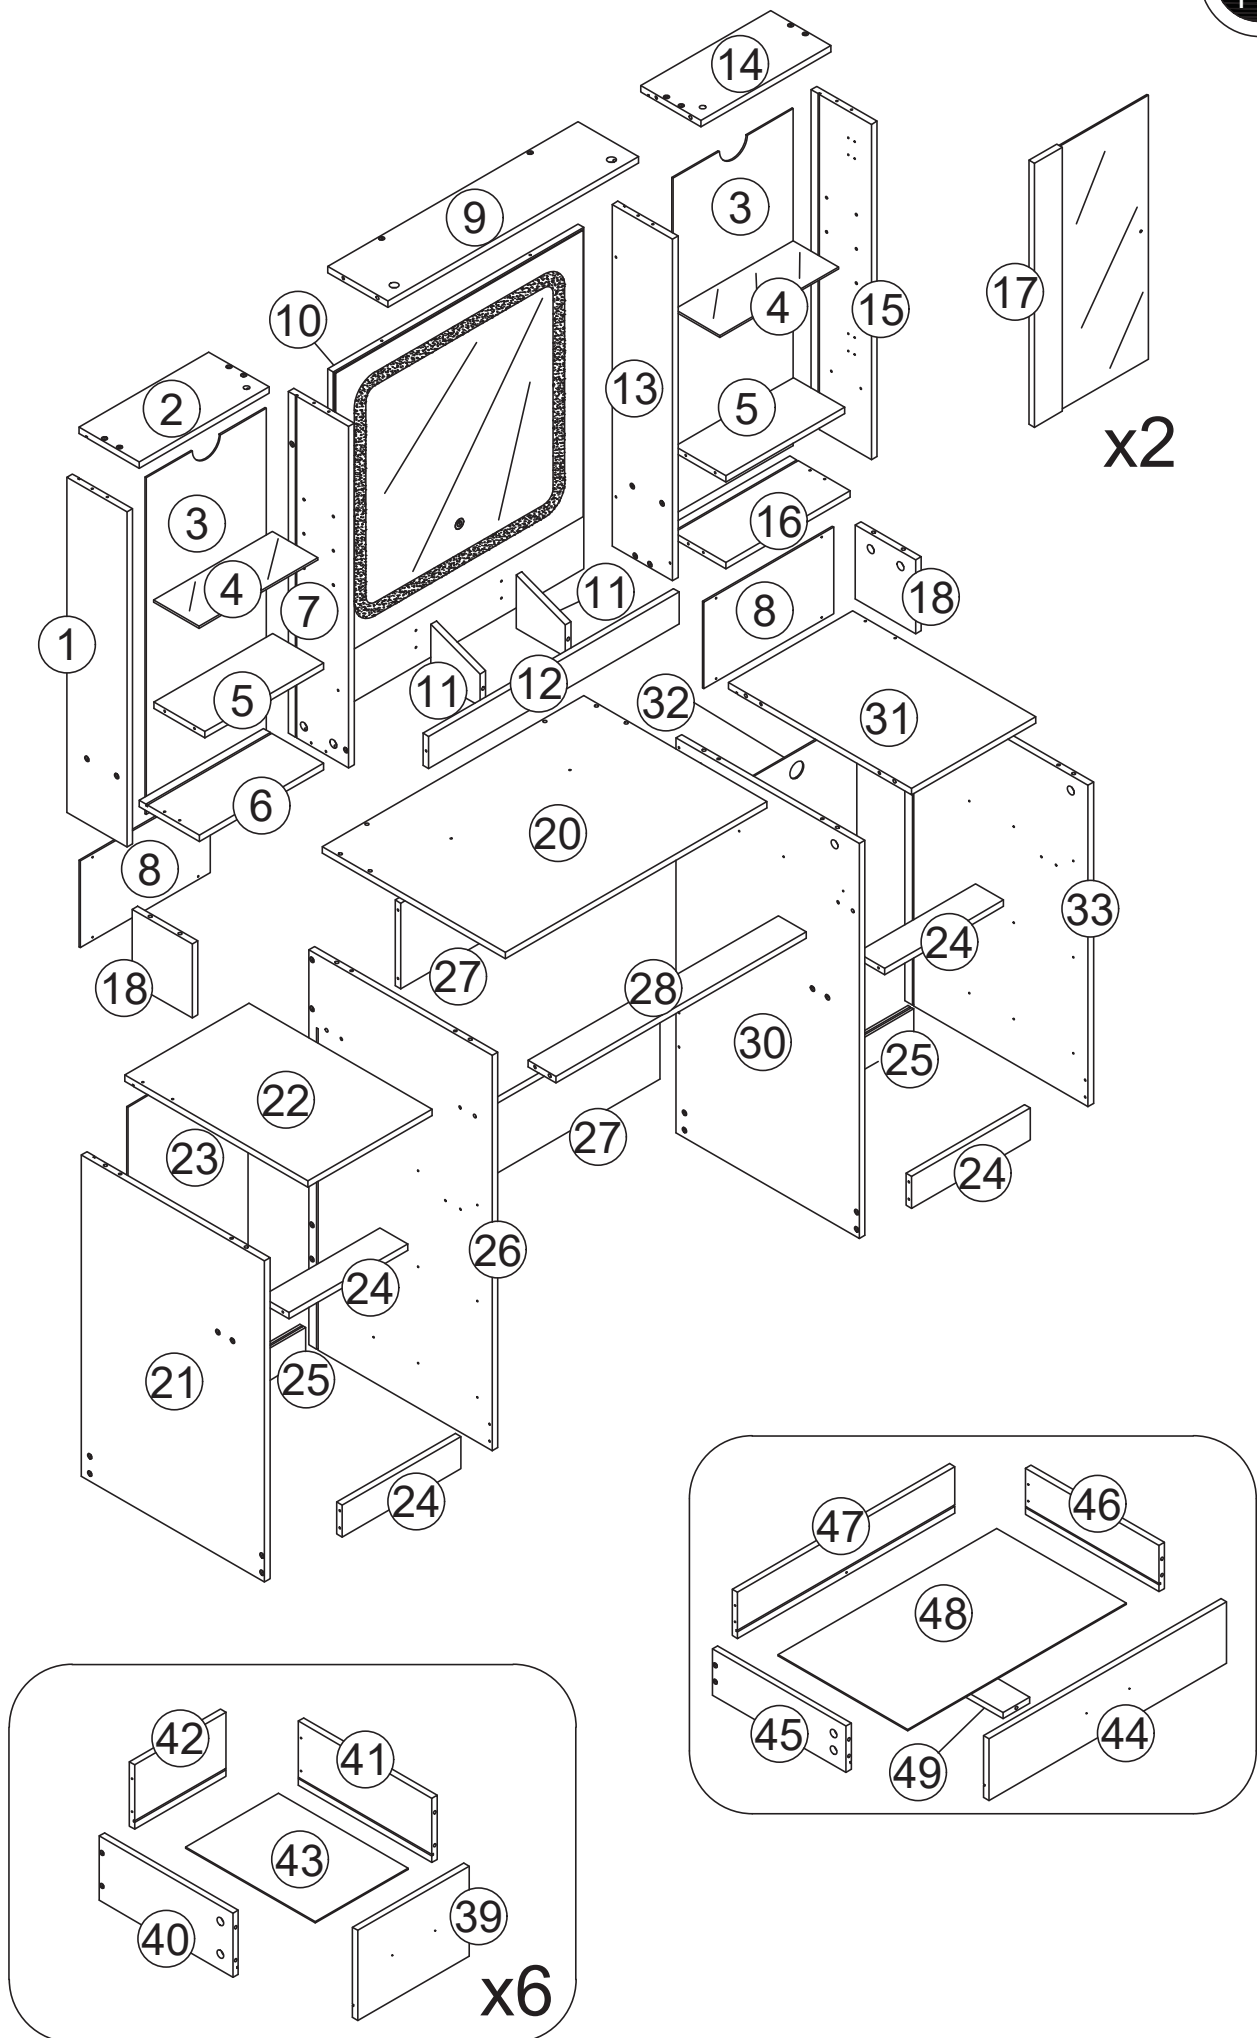

 A x55 Ø6x35mm +3(spare)	 B x57 Ø15x10mm +3(spare)	 C x16 Ø6x30mm +2(spare)	 D x105 Ø4x35mm +4(spare)	 E x84 +4(spare)	 F x7 Ø4x16mm
 G x2 Ø4x12mm	 H x6	 I x2	 J x1	 K x2 Ø3.5x12mm	 L x1
 M x2 Ø6x30mm	 N x2 Ø4x14mm	 O x2	 P x2 Ø6x55mm	 Q x1	 R x2 Ø3x10mm
 S x2	 T x1	 U x1	 V x2	 W x8	 X x8
 Y x4	 AA x24 Ø3.5x12mm +2(spare)	 BB x66 +4(spare)	 CC x16 Ø3x16mm +2(spare)	 DD x1	
 CL x7 L300mm	 CR x7 L300mm	 DL x7 L300mm	 DR x7 L300mm		



E x9



CL x3

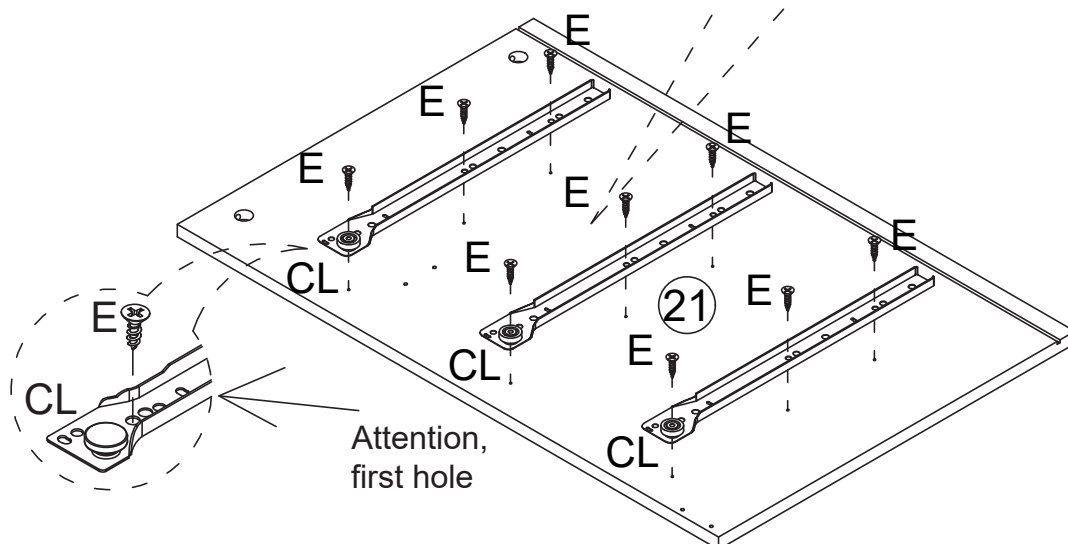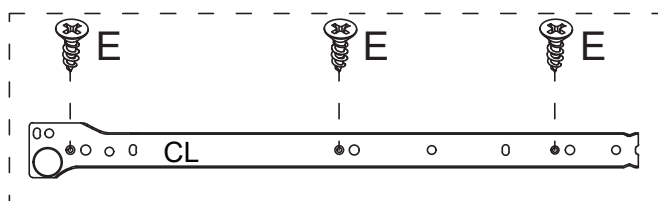


E x9

CR x3

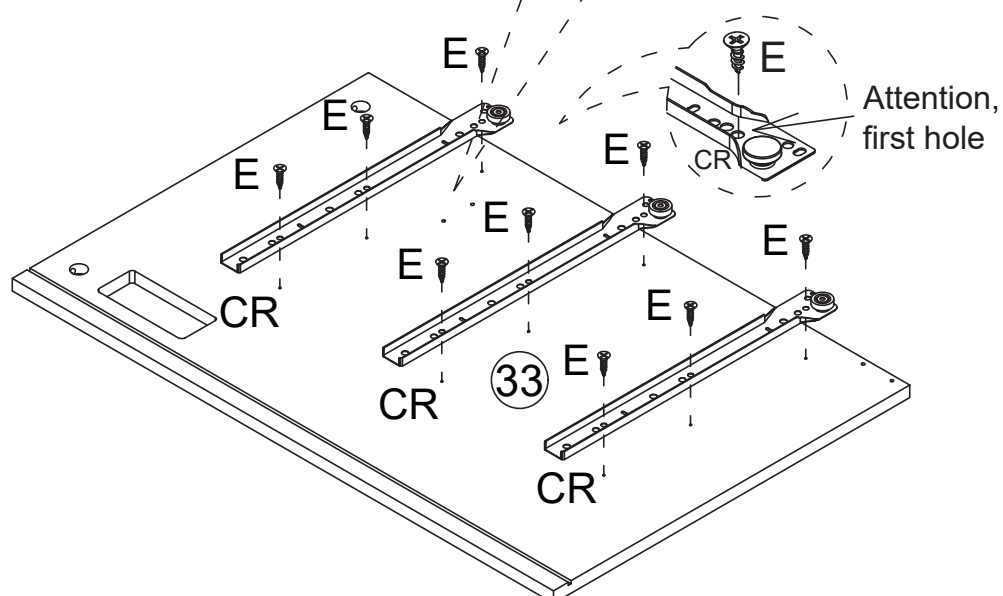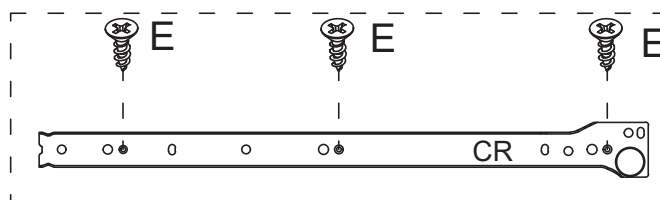


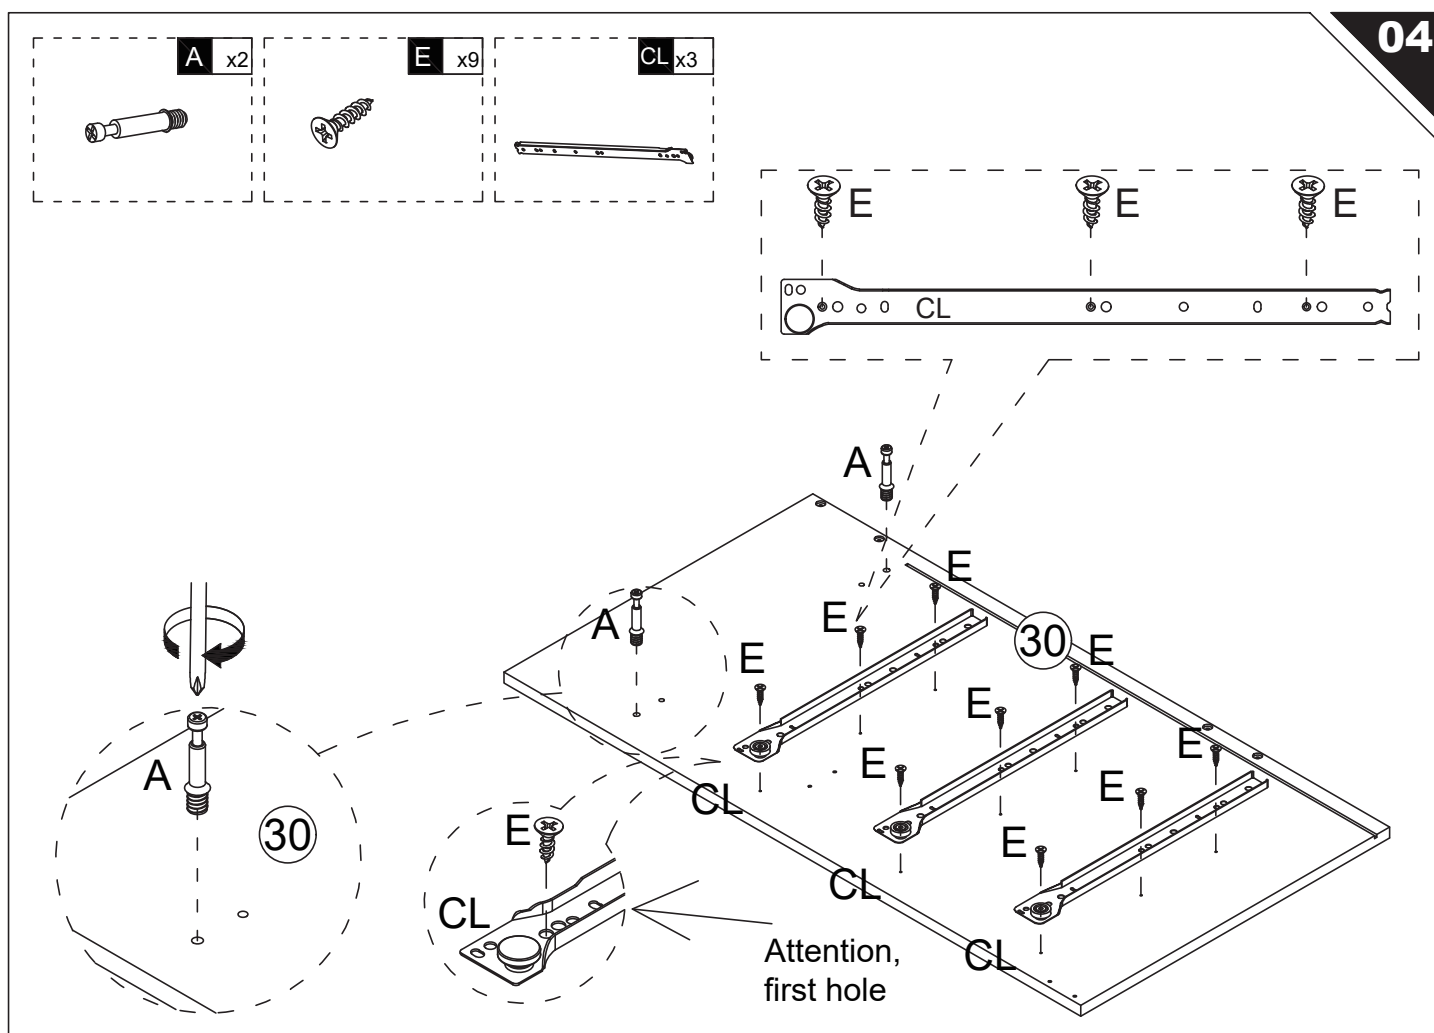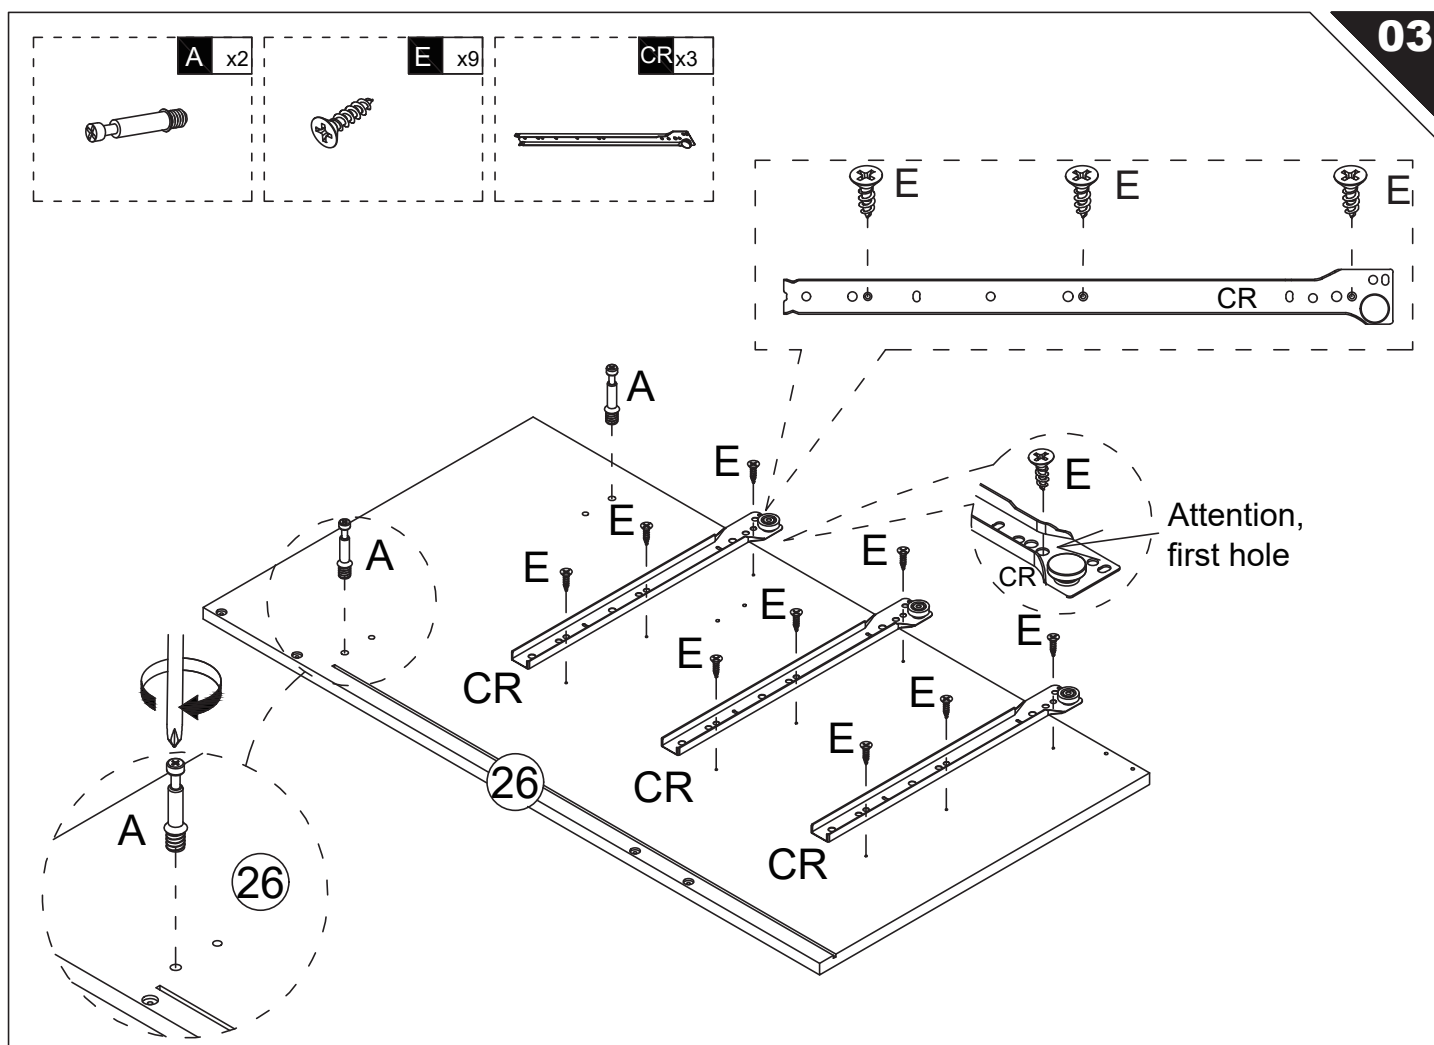


D x6

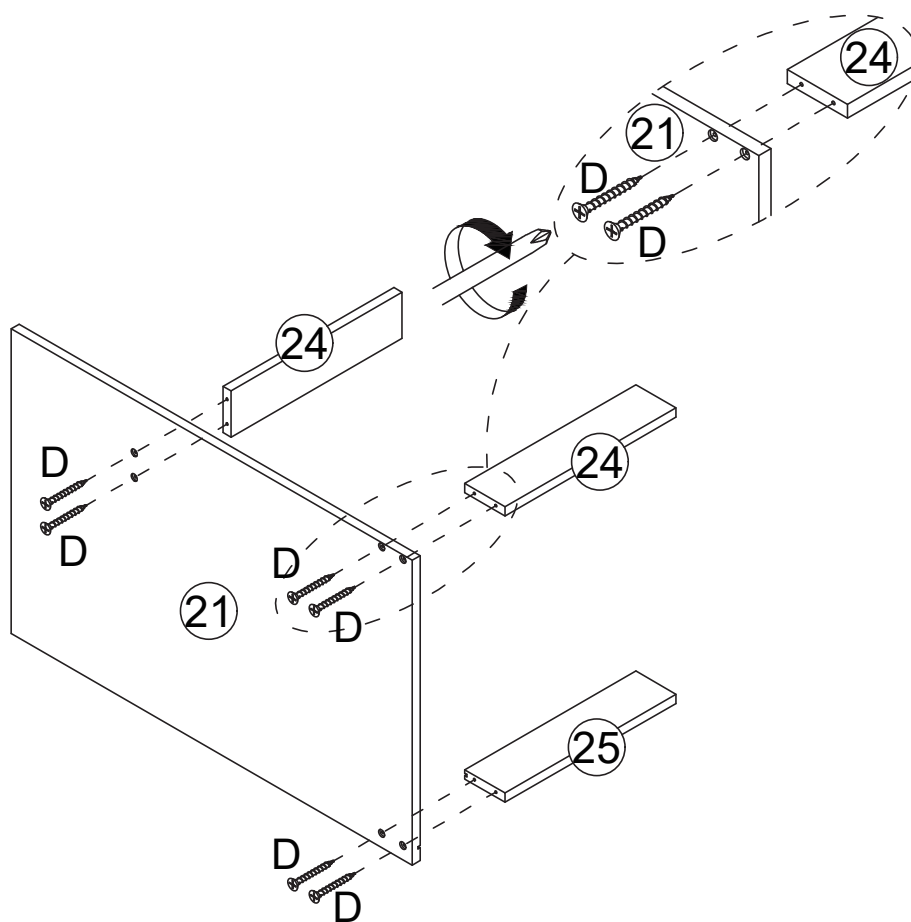


D x6

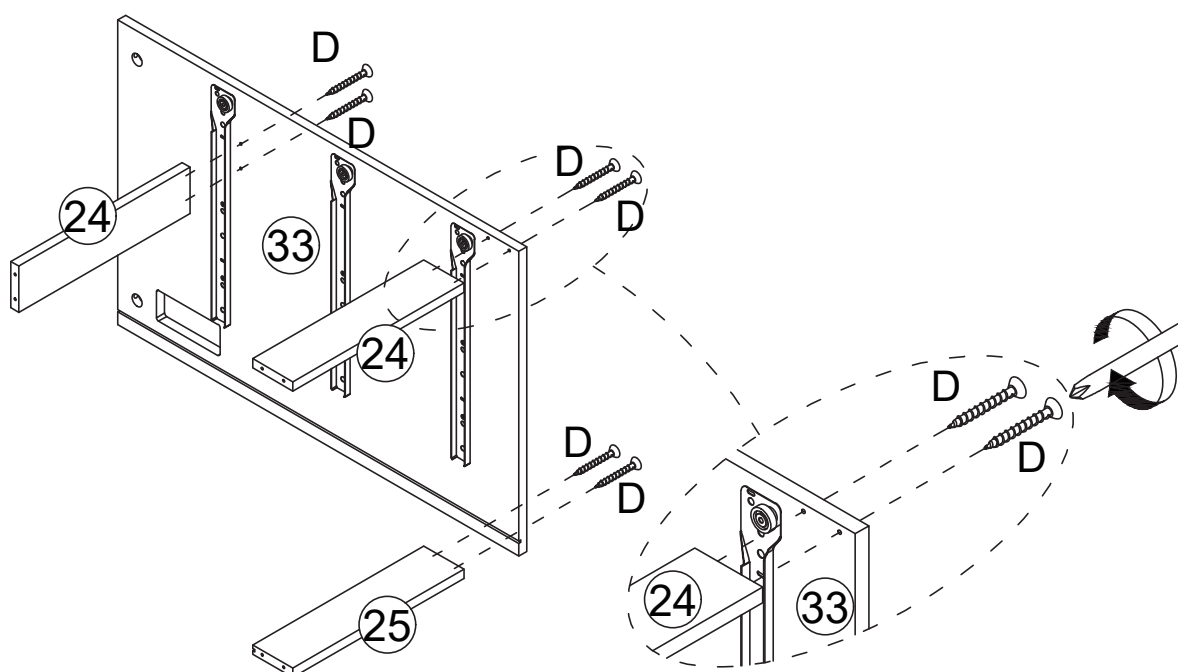

A x4

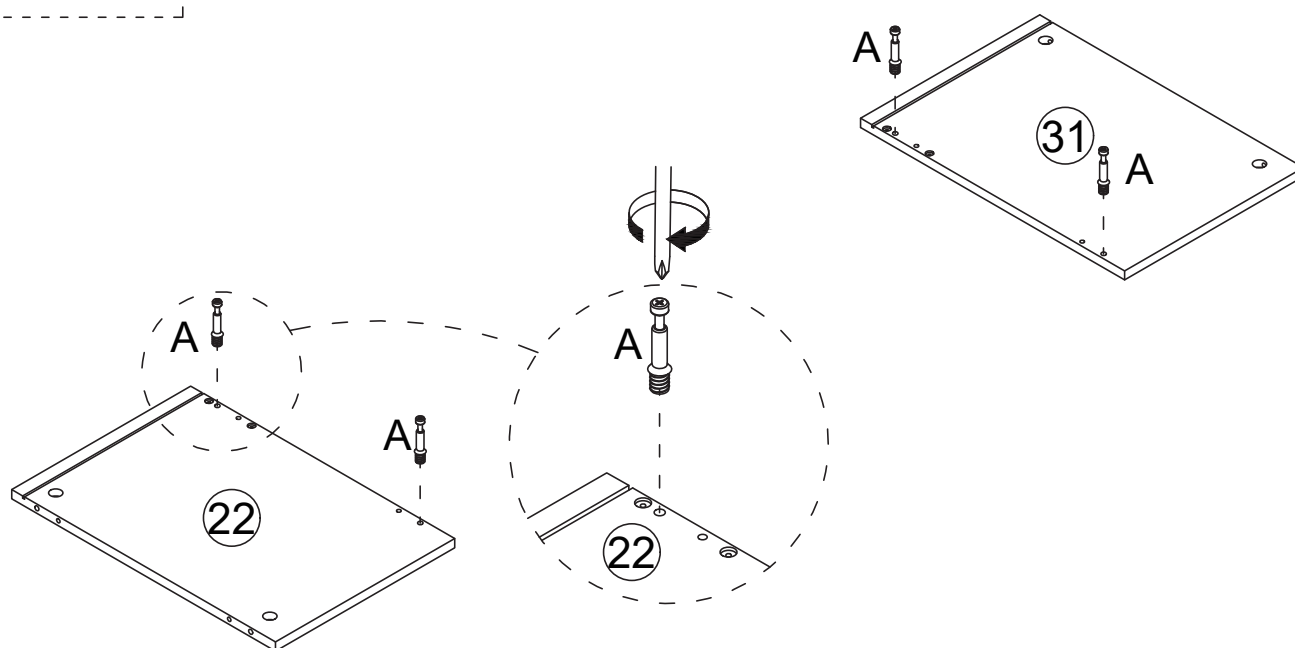


D x4

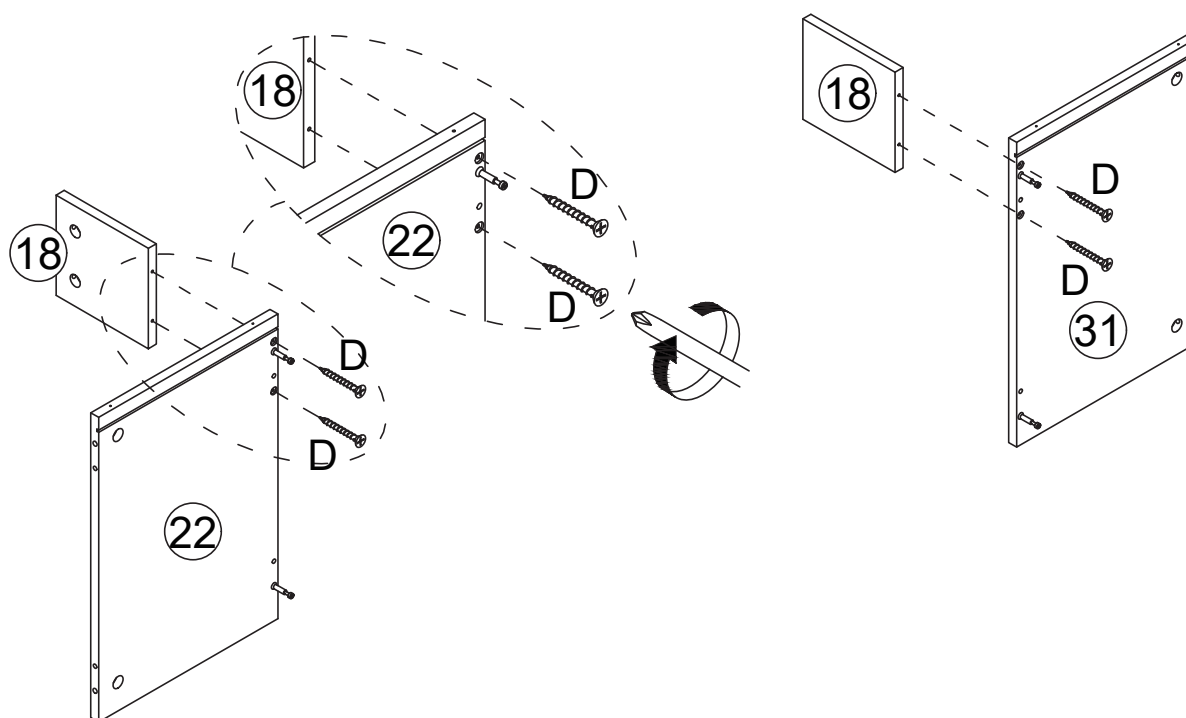


B x2



C x2


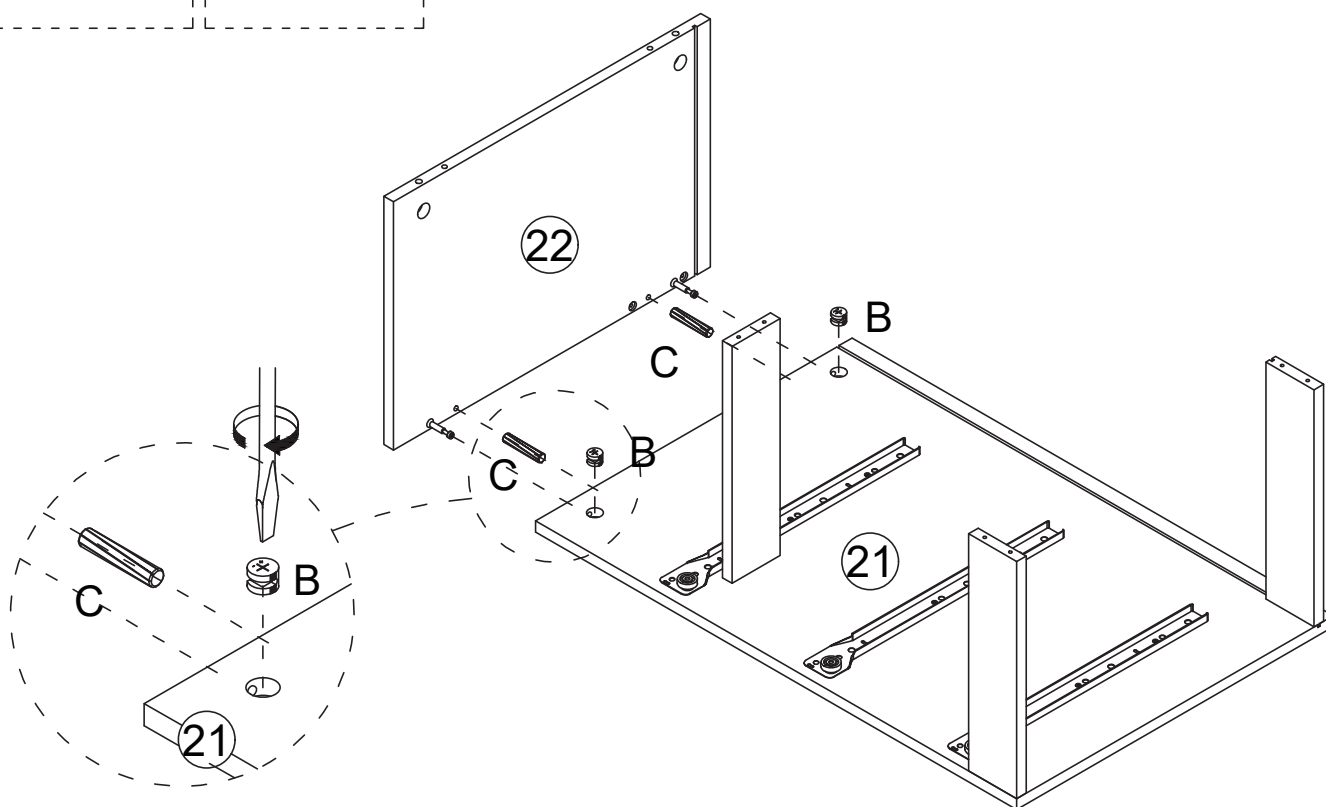




B x2

C x2

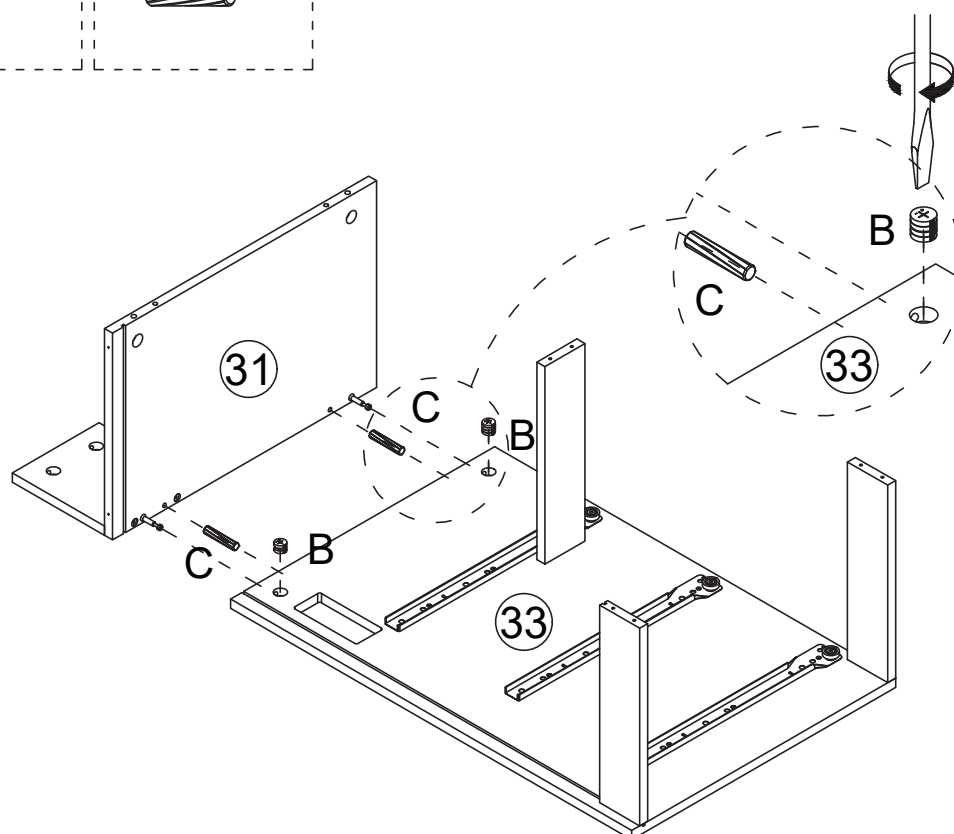

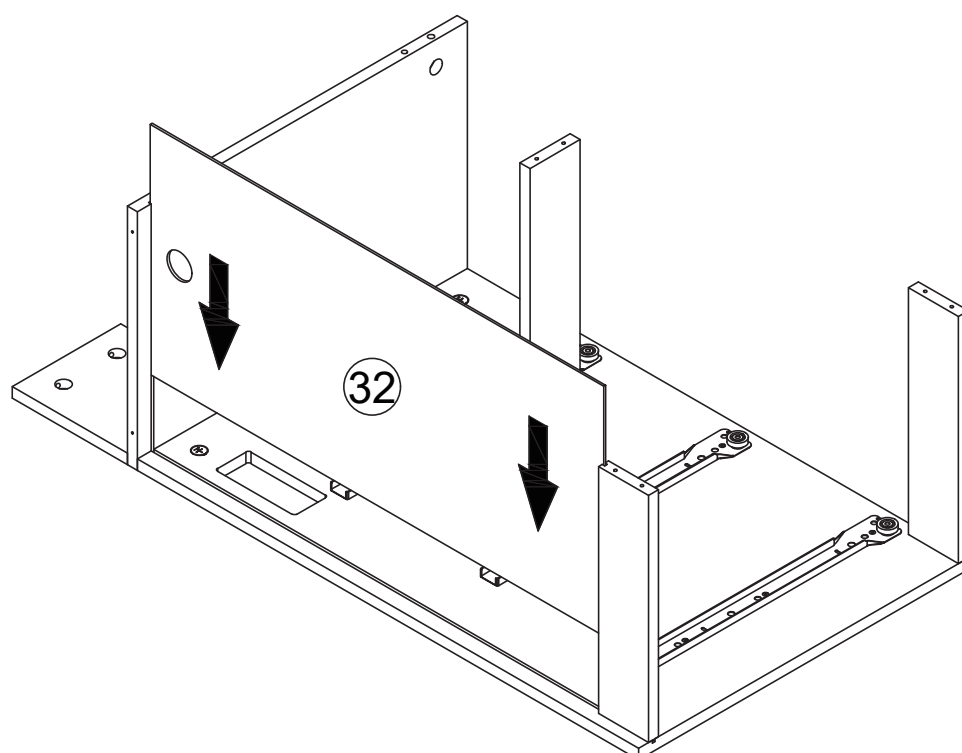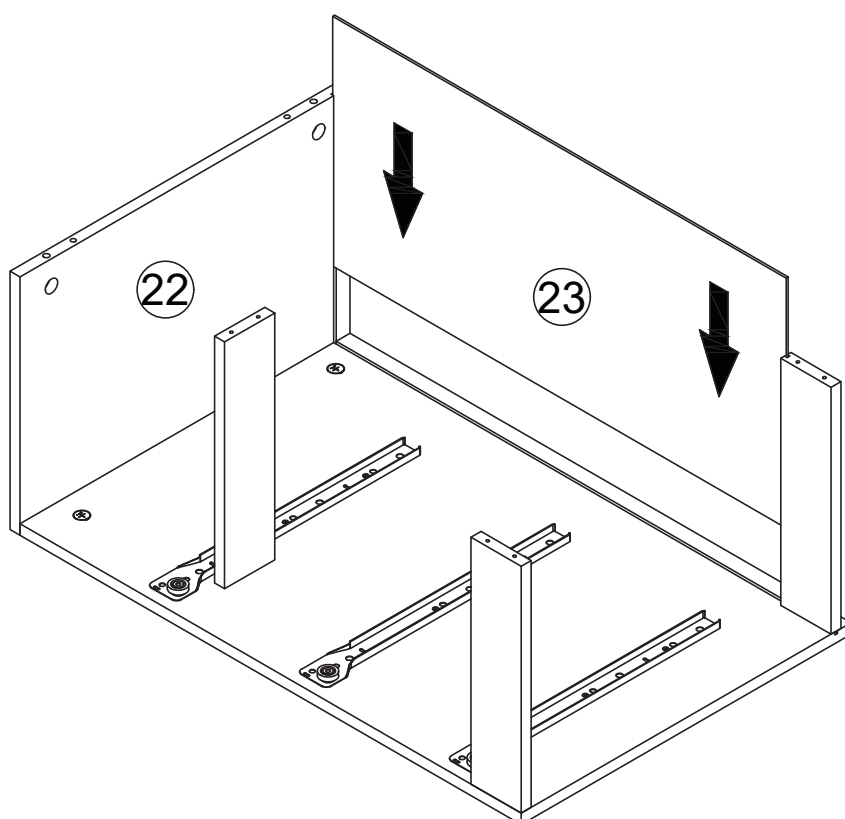

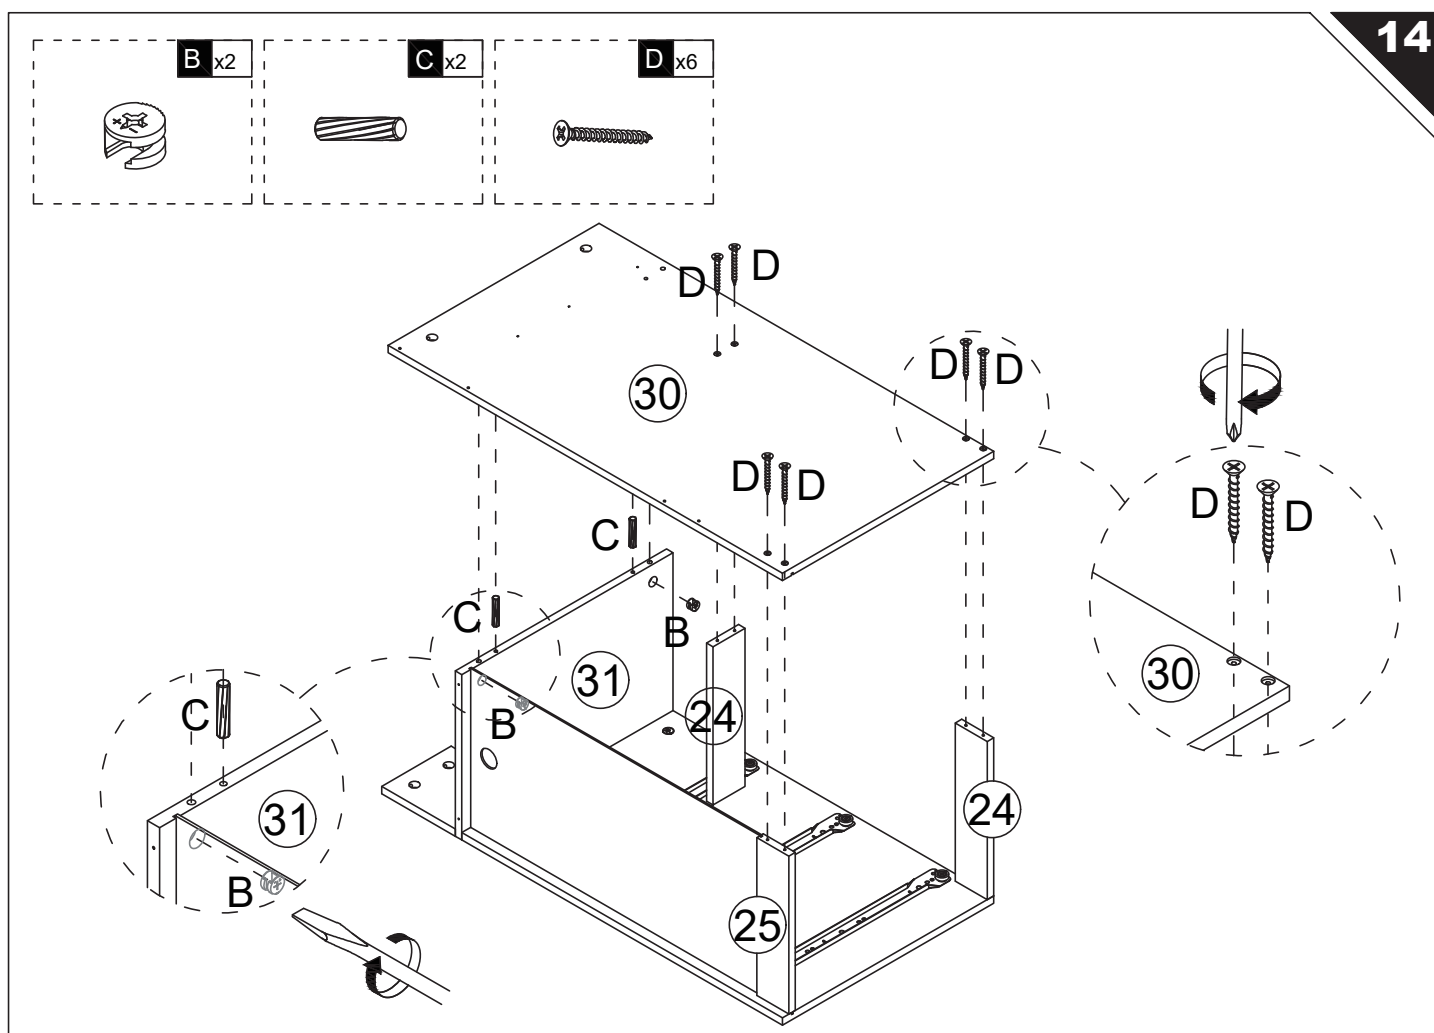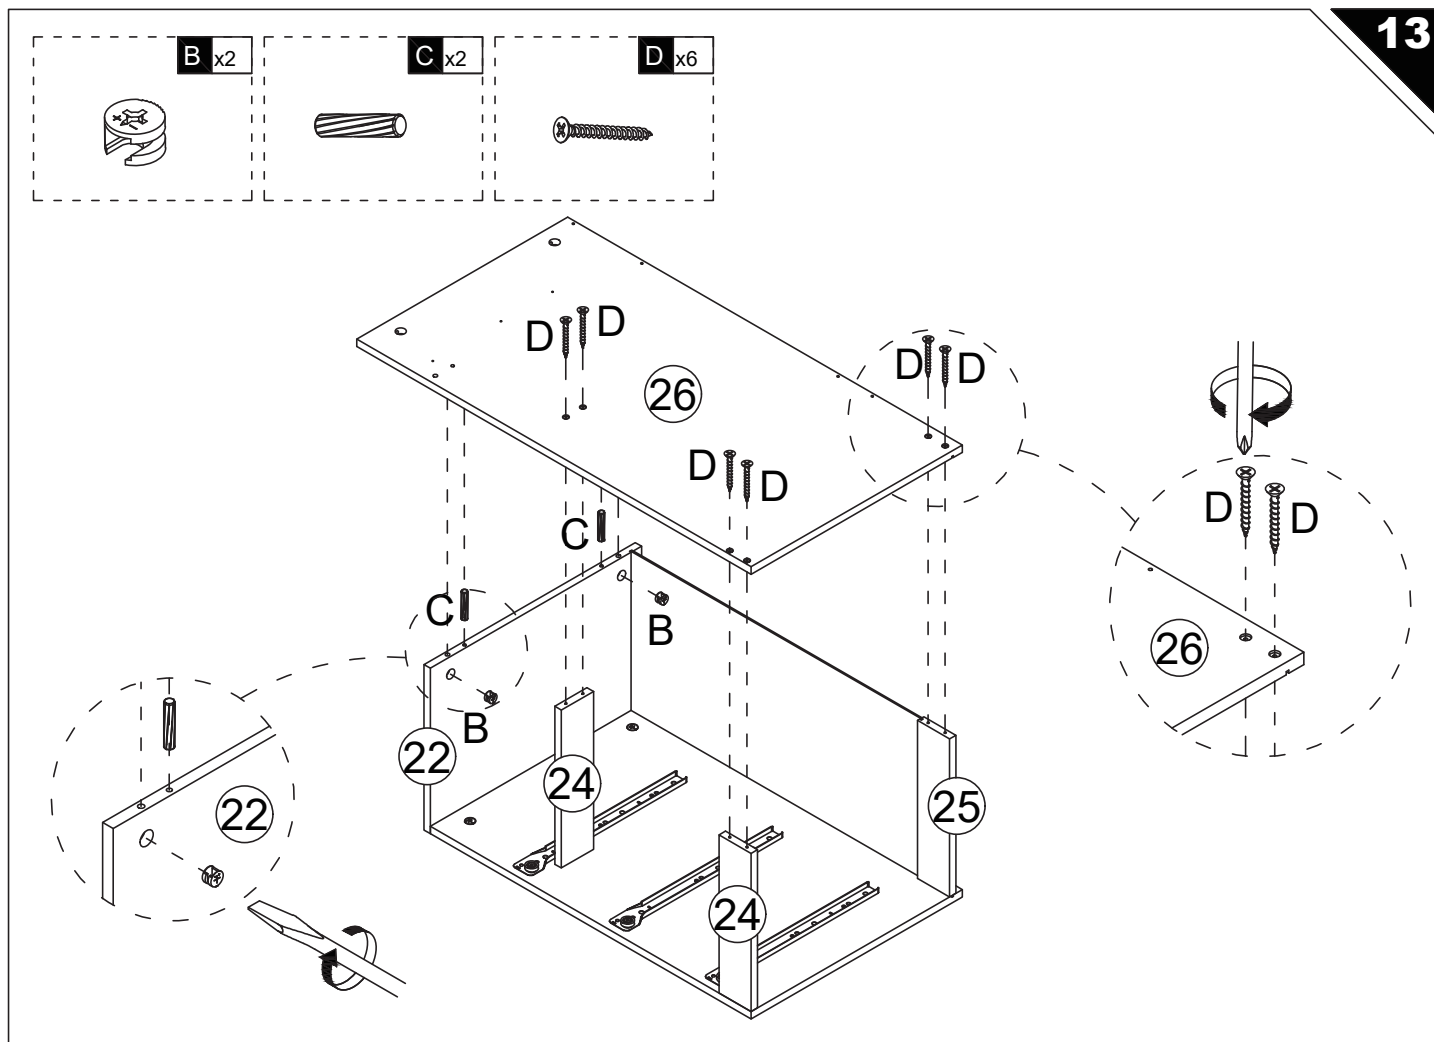

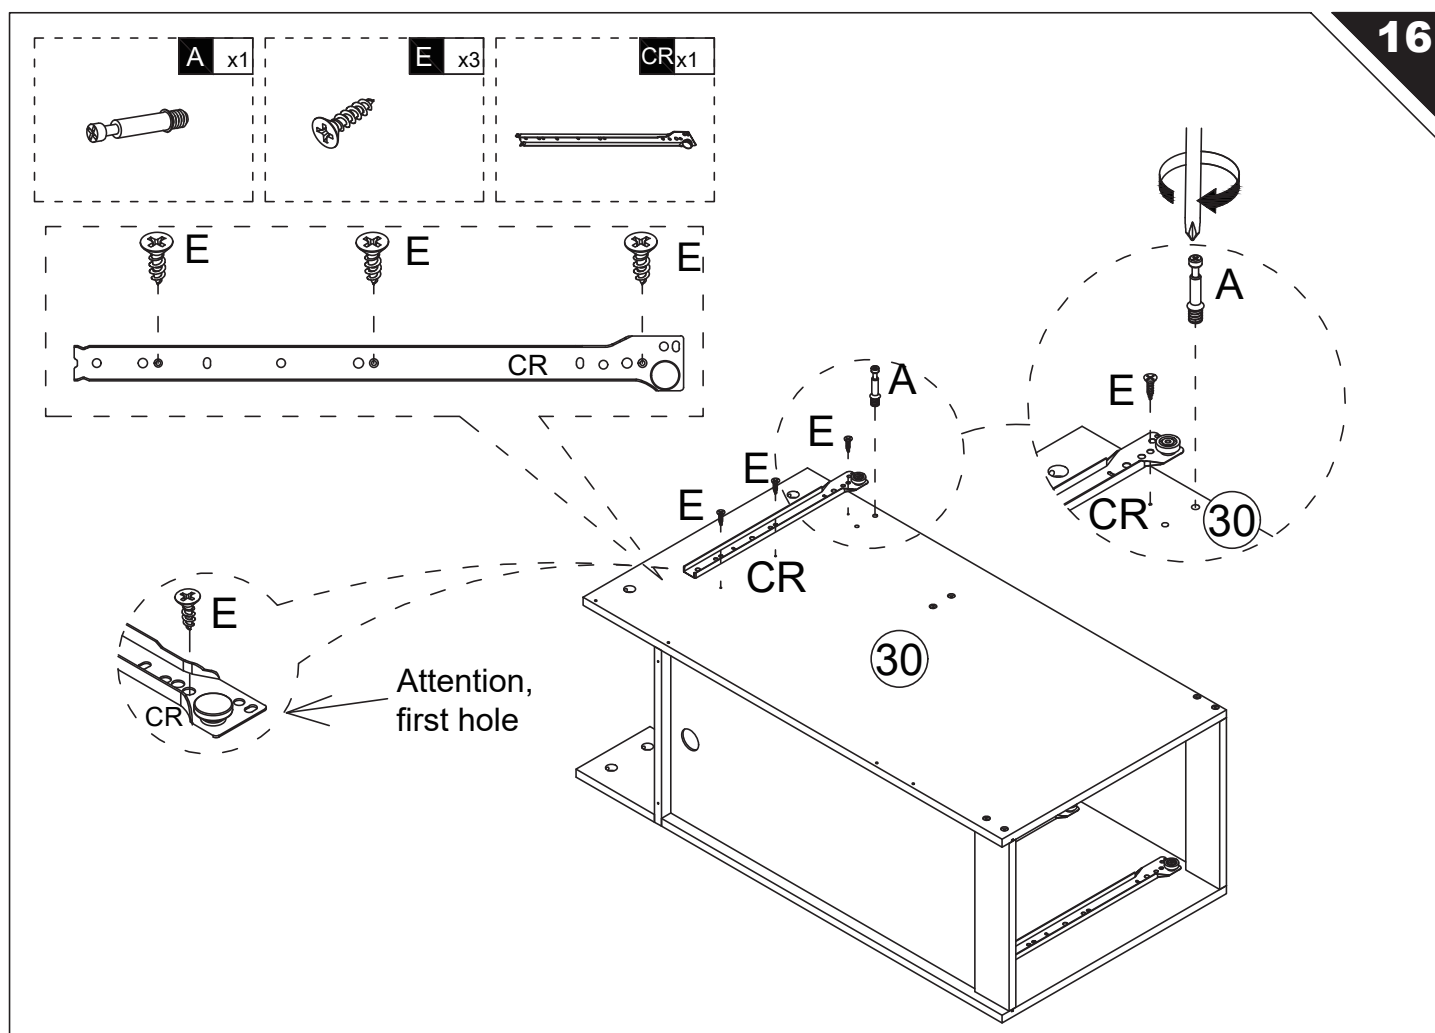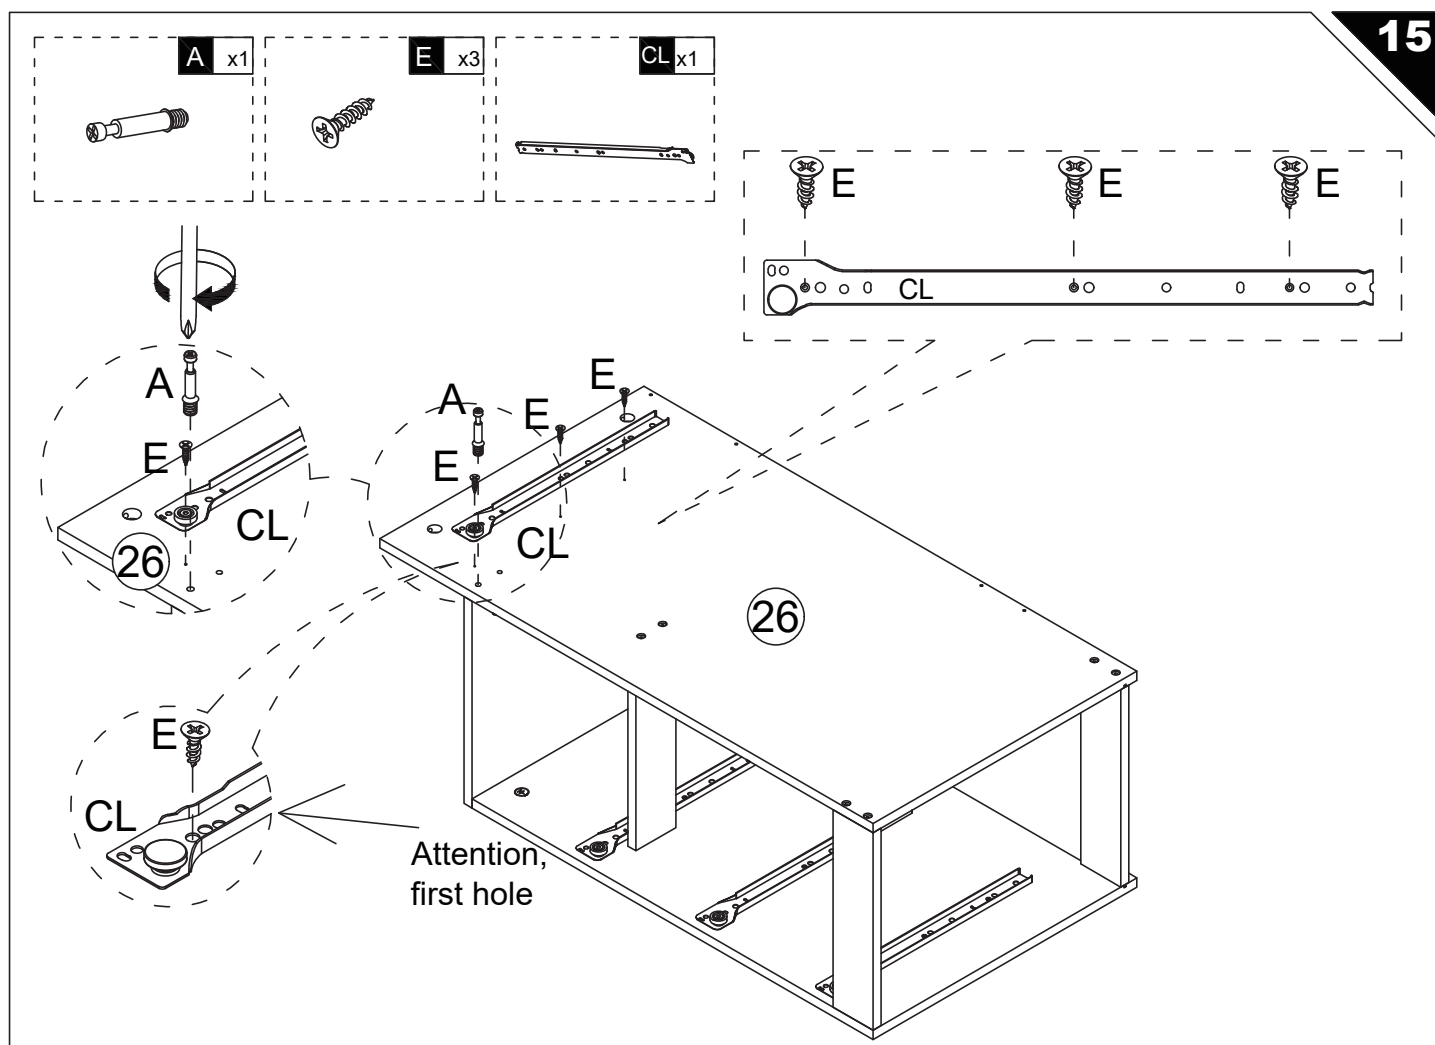


B x2




C x2




D x8

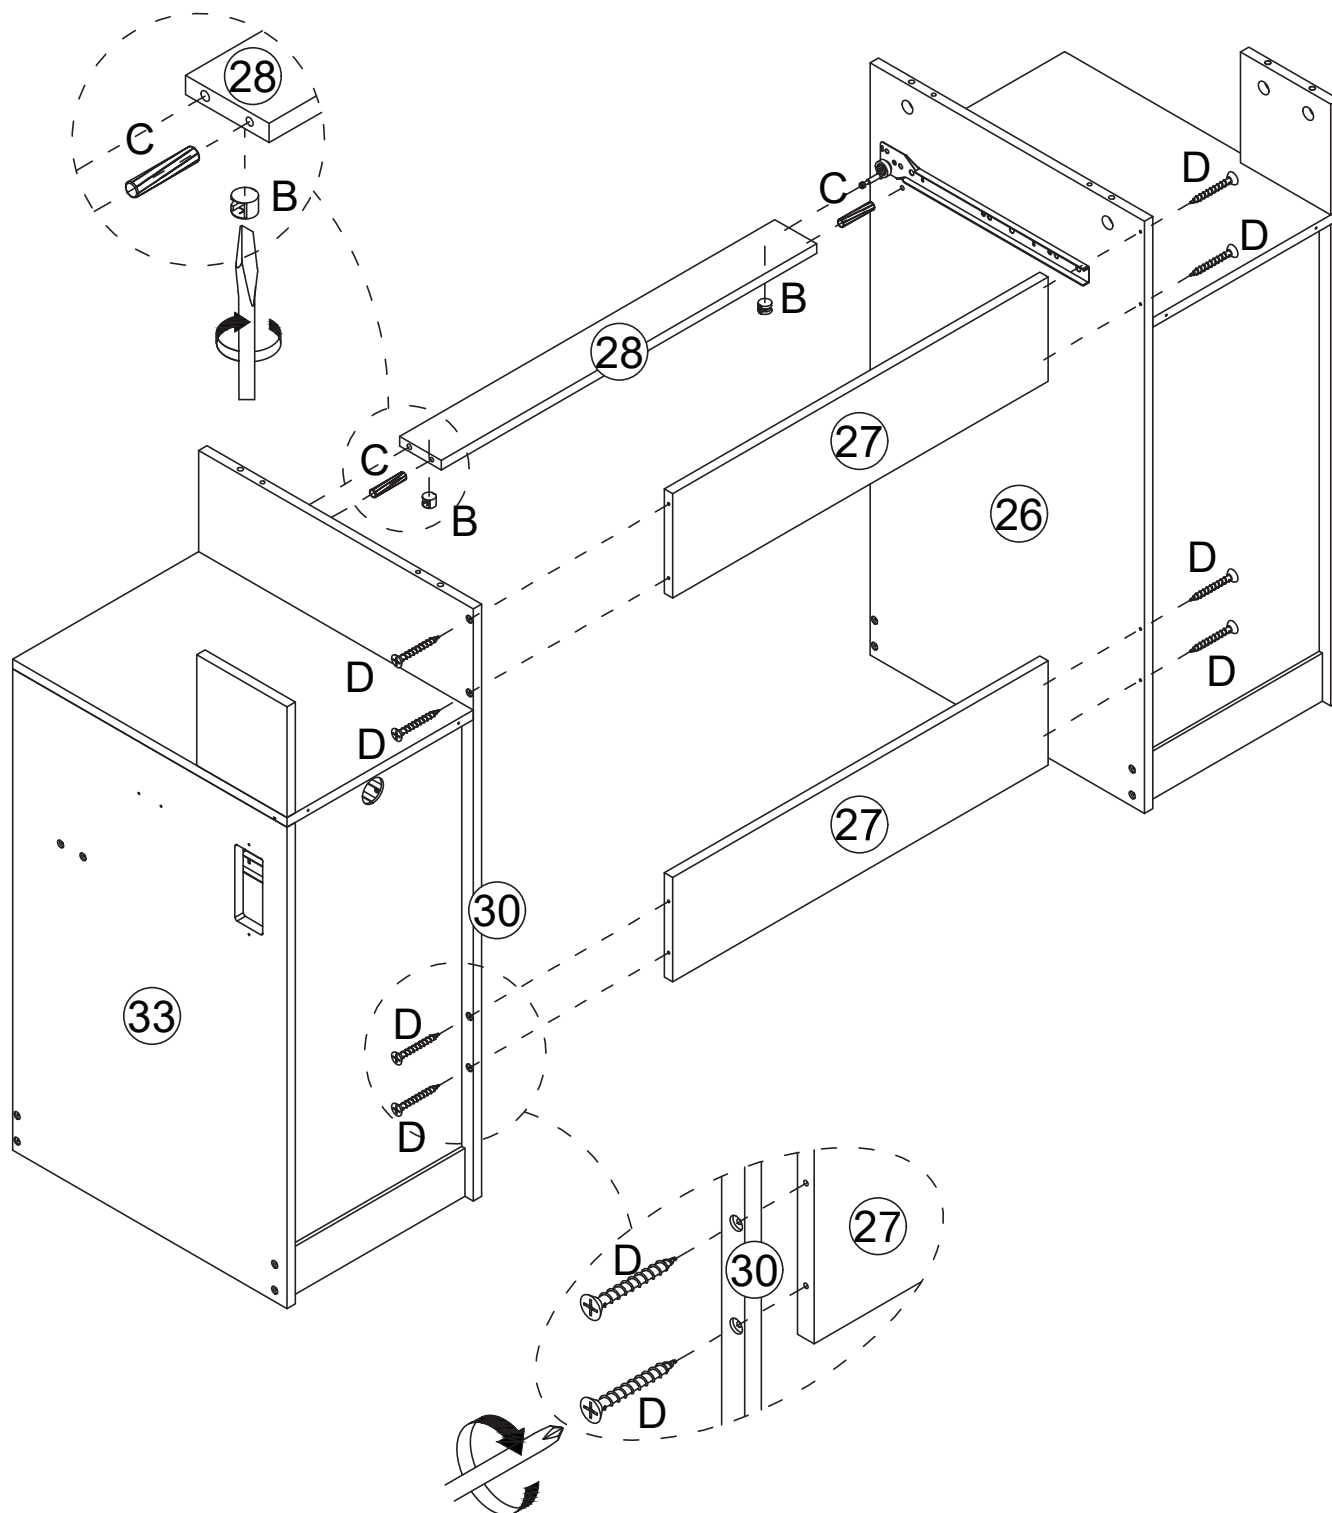


A x4

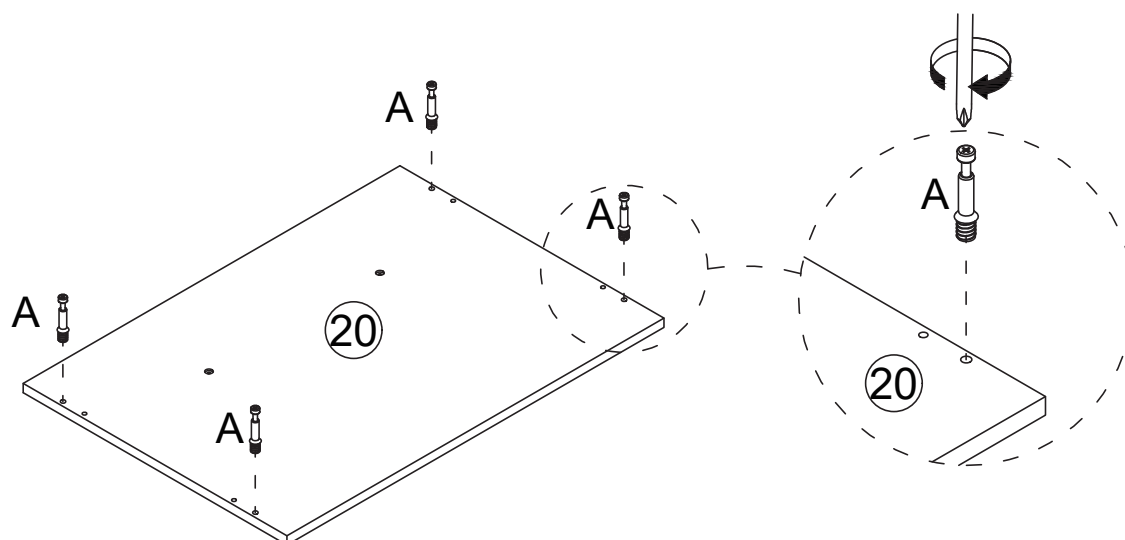

A x2



B x2

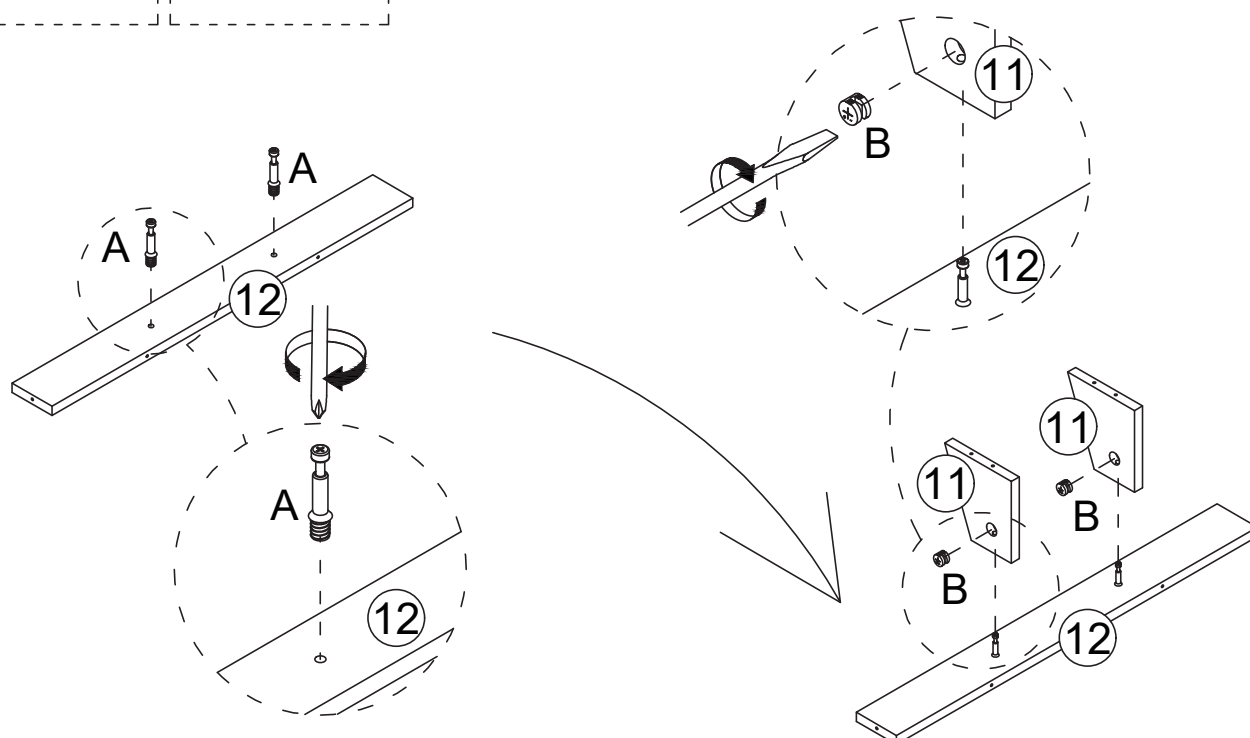



B x4






C x4




D x2

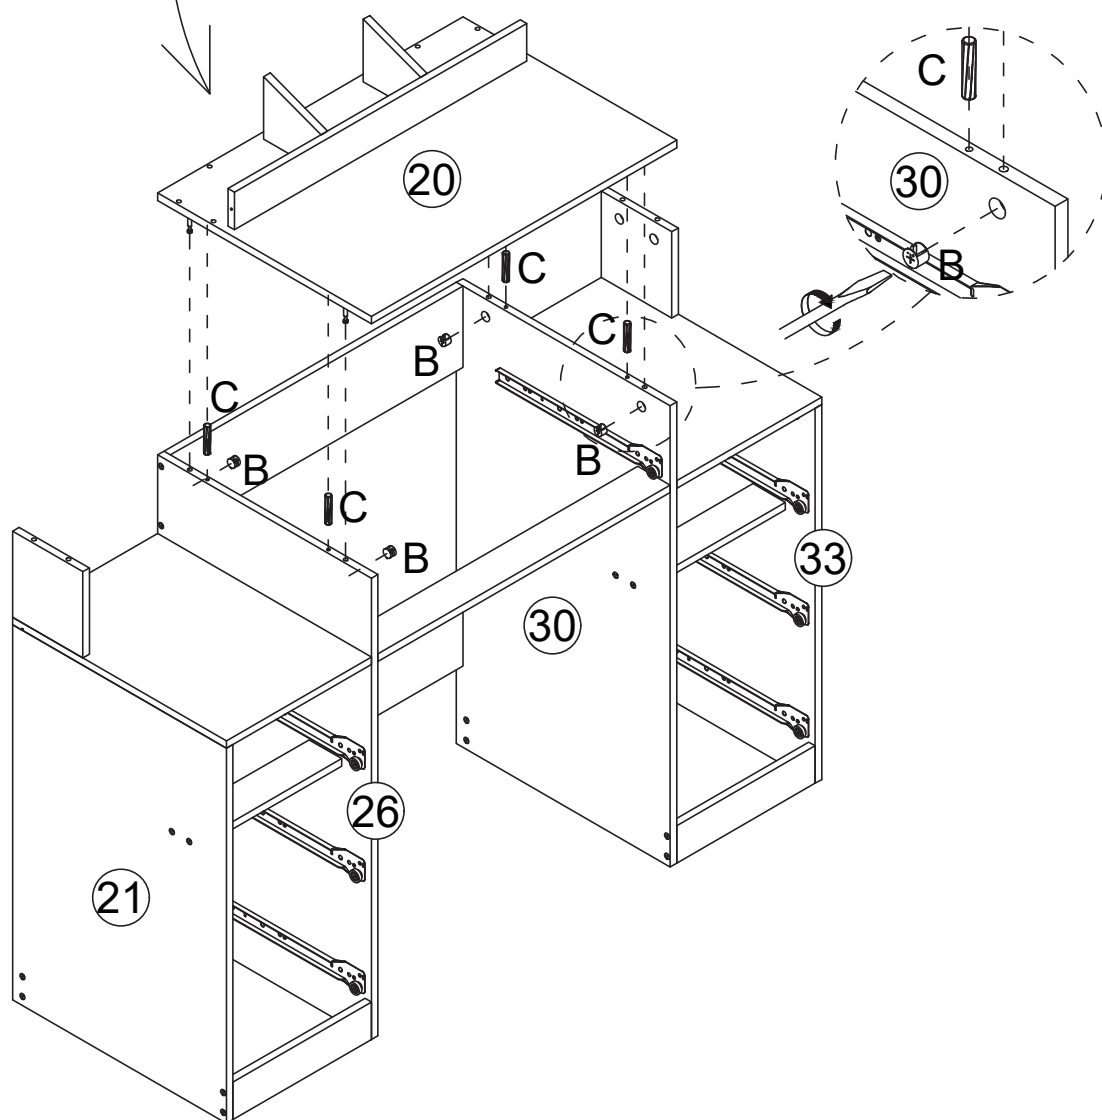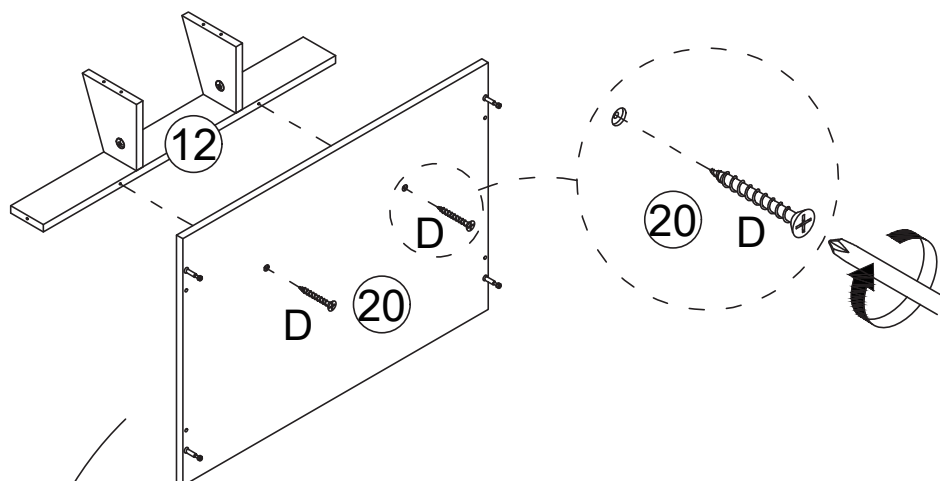


A x4

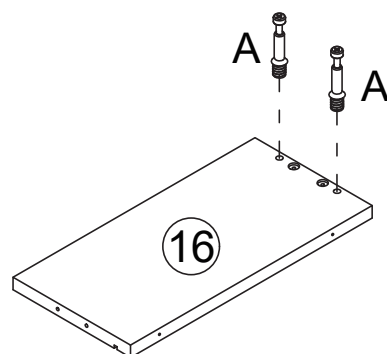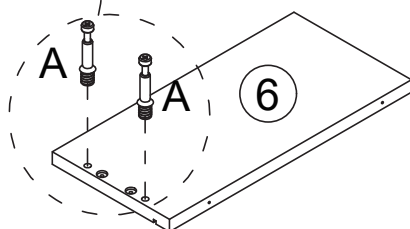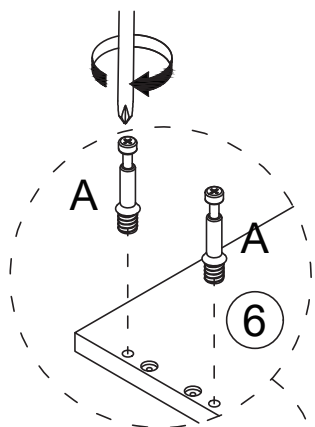


D x4

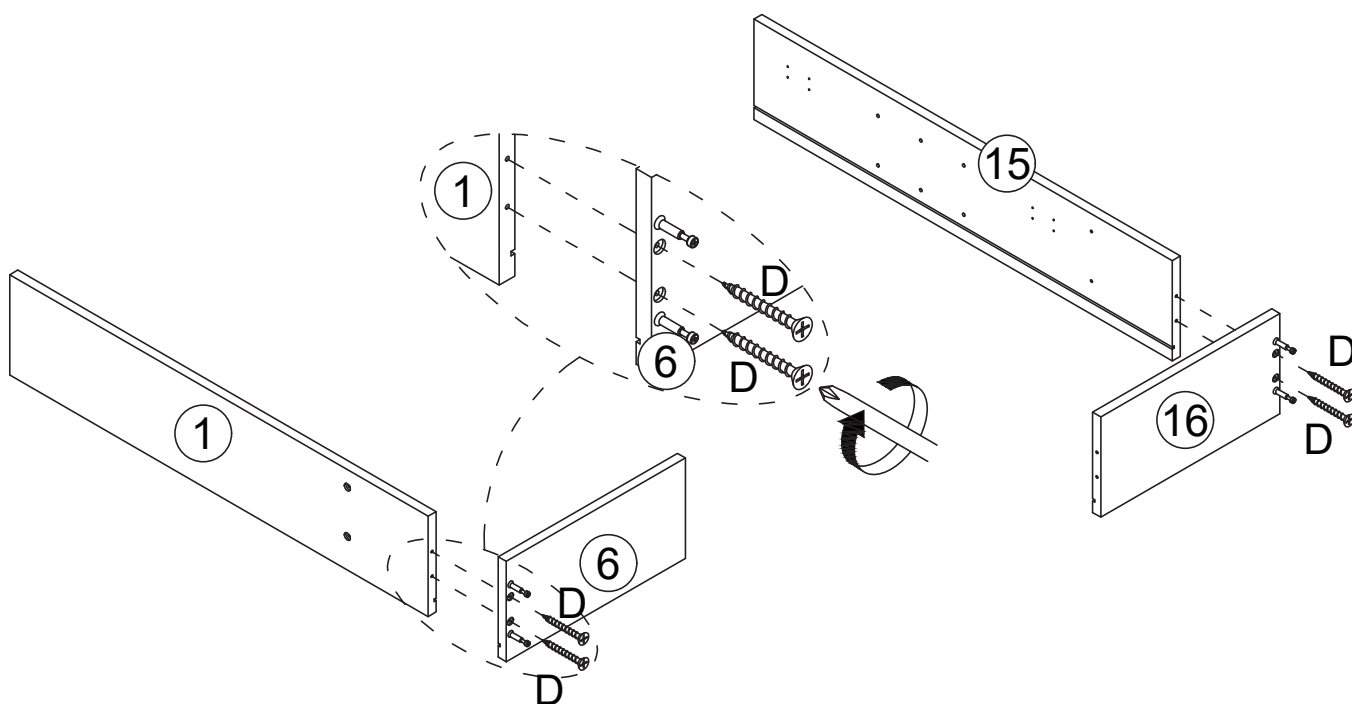



D x4

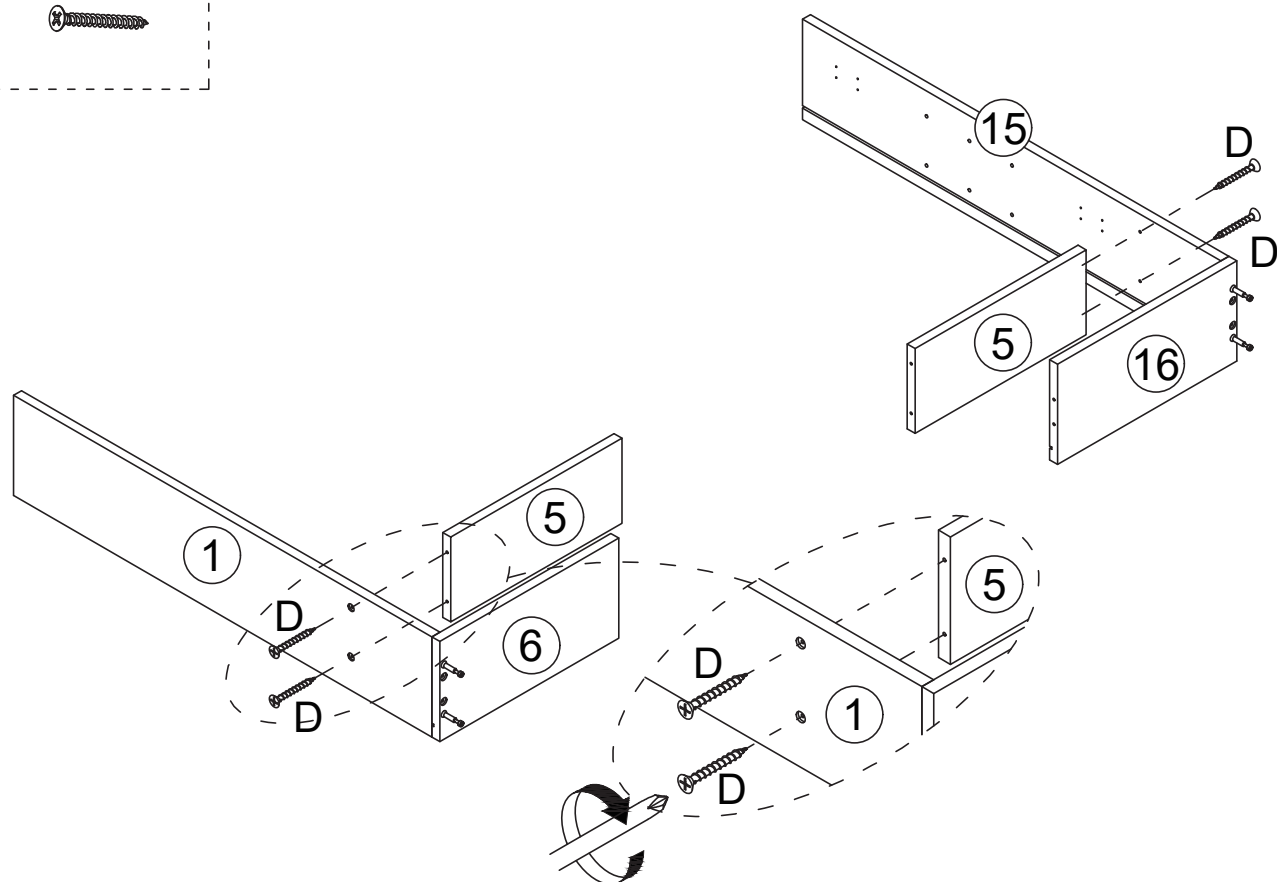


D x8

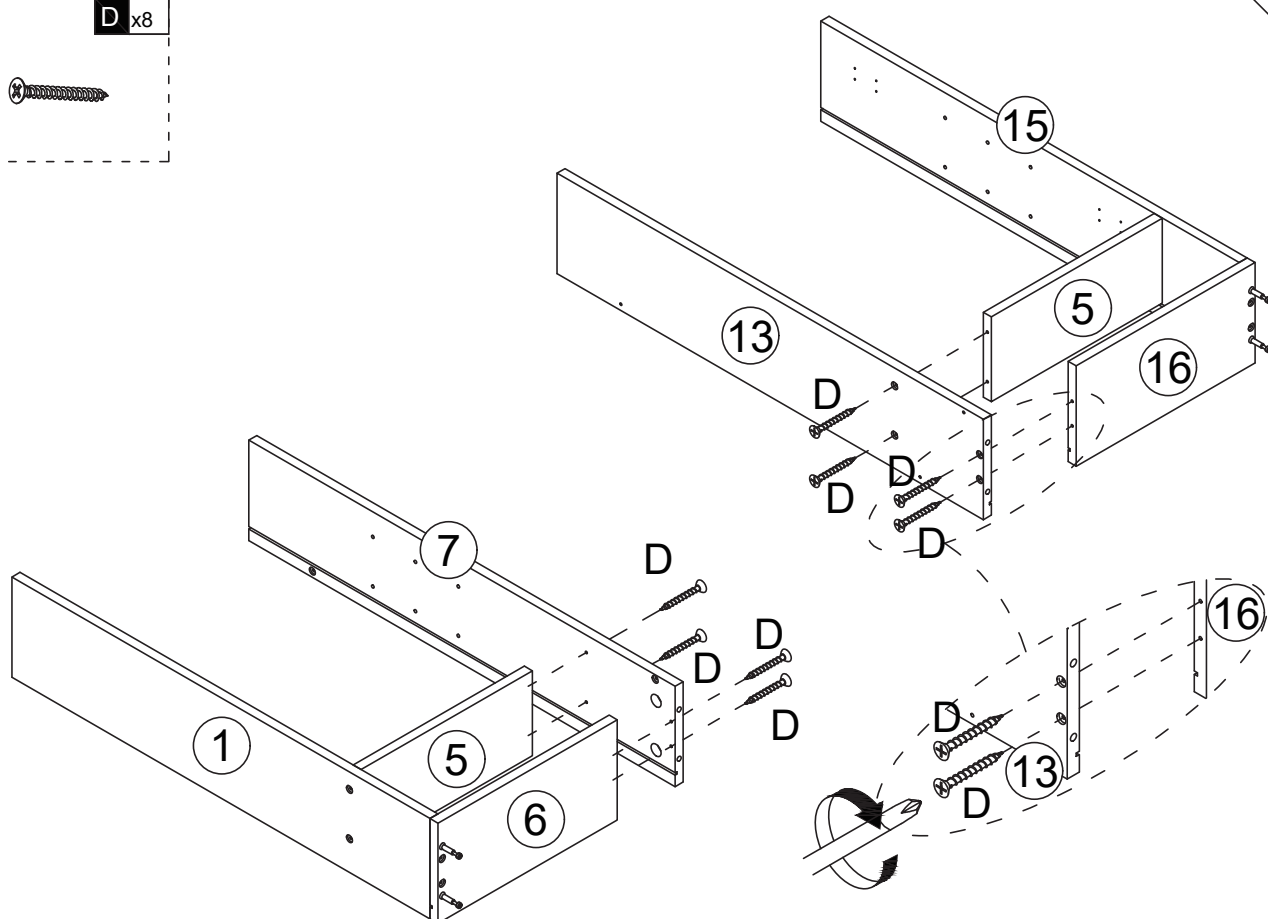


A x6

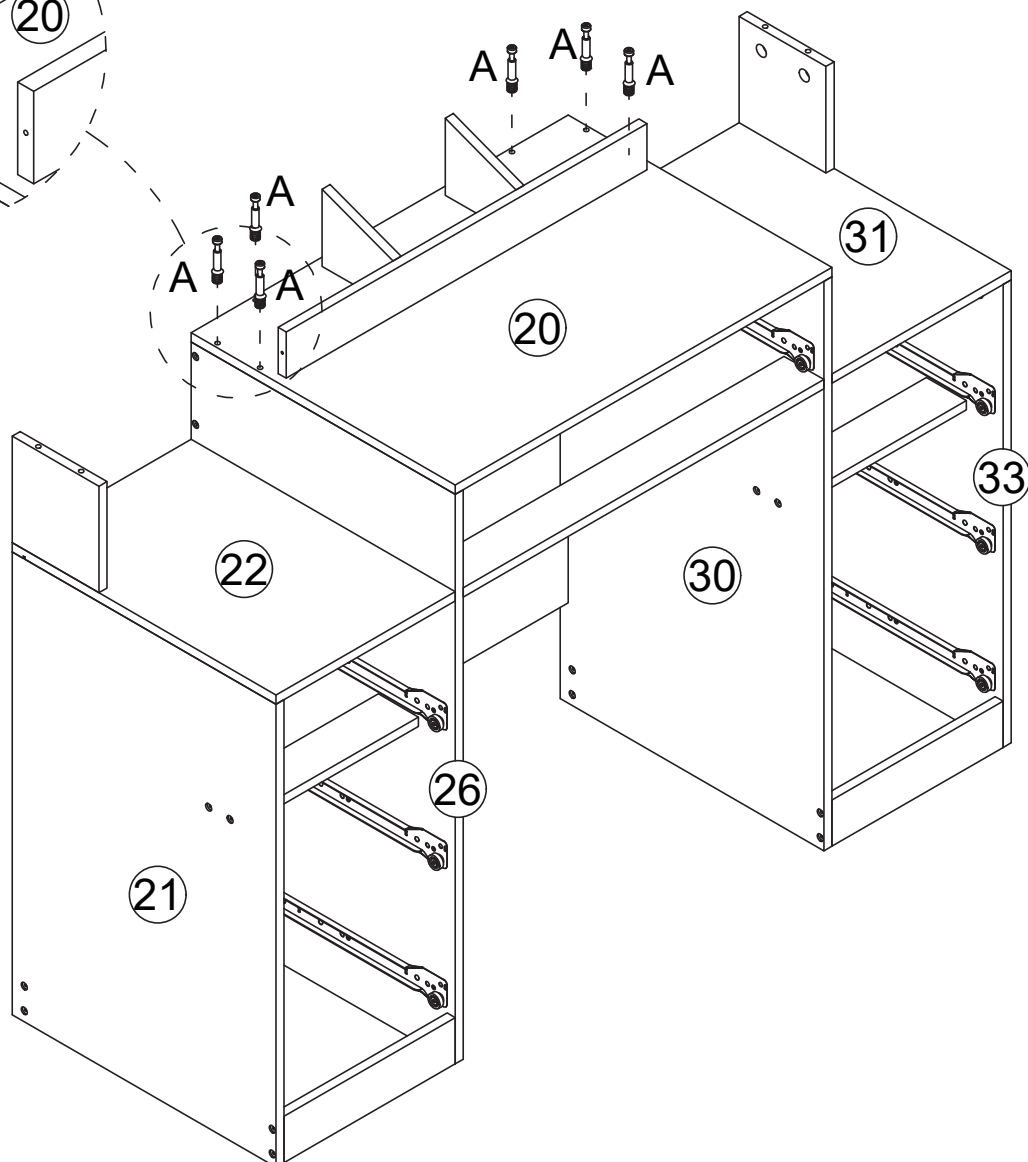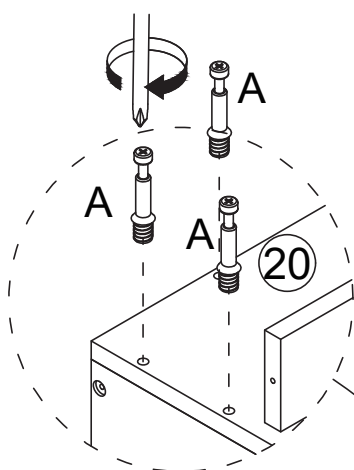


B x8

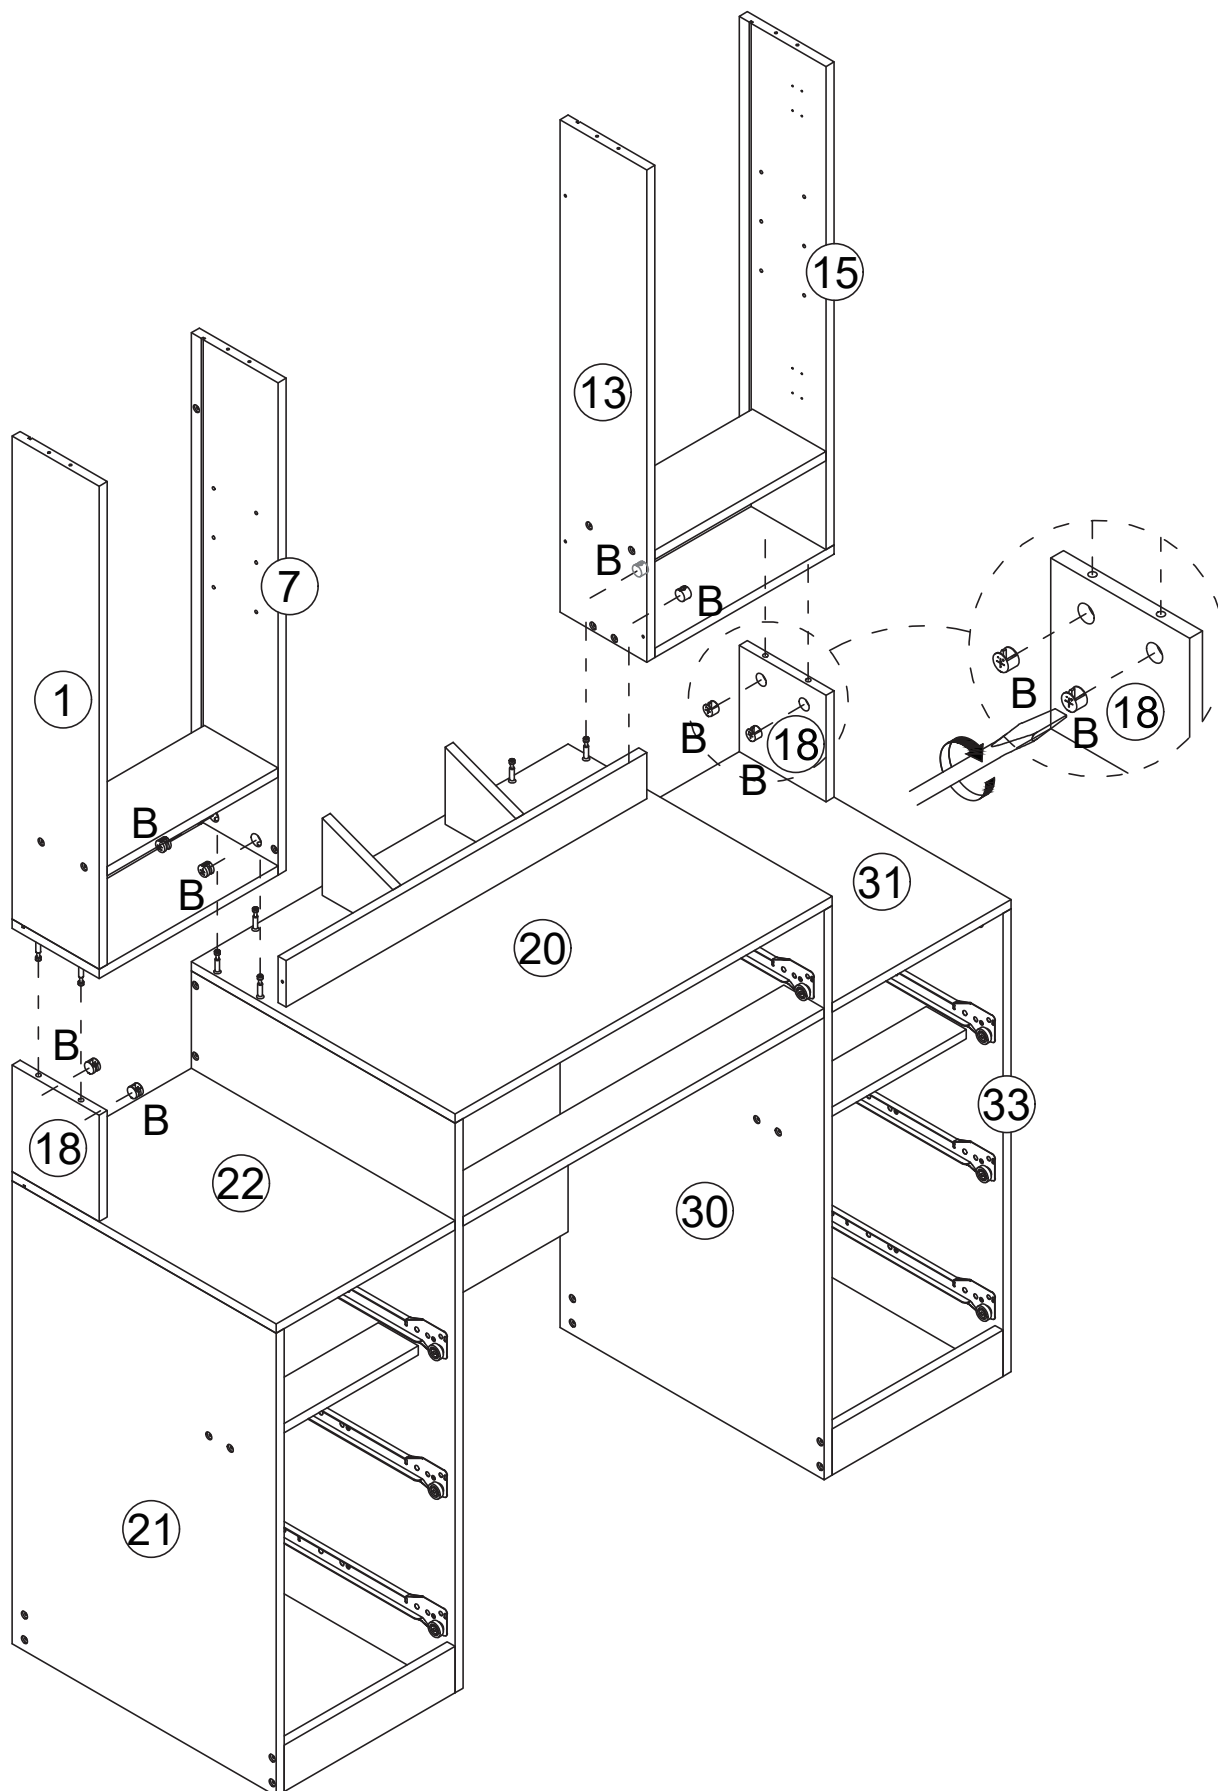




B x2

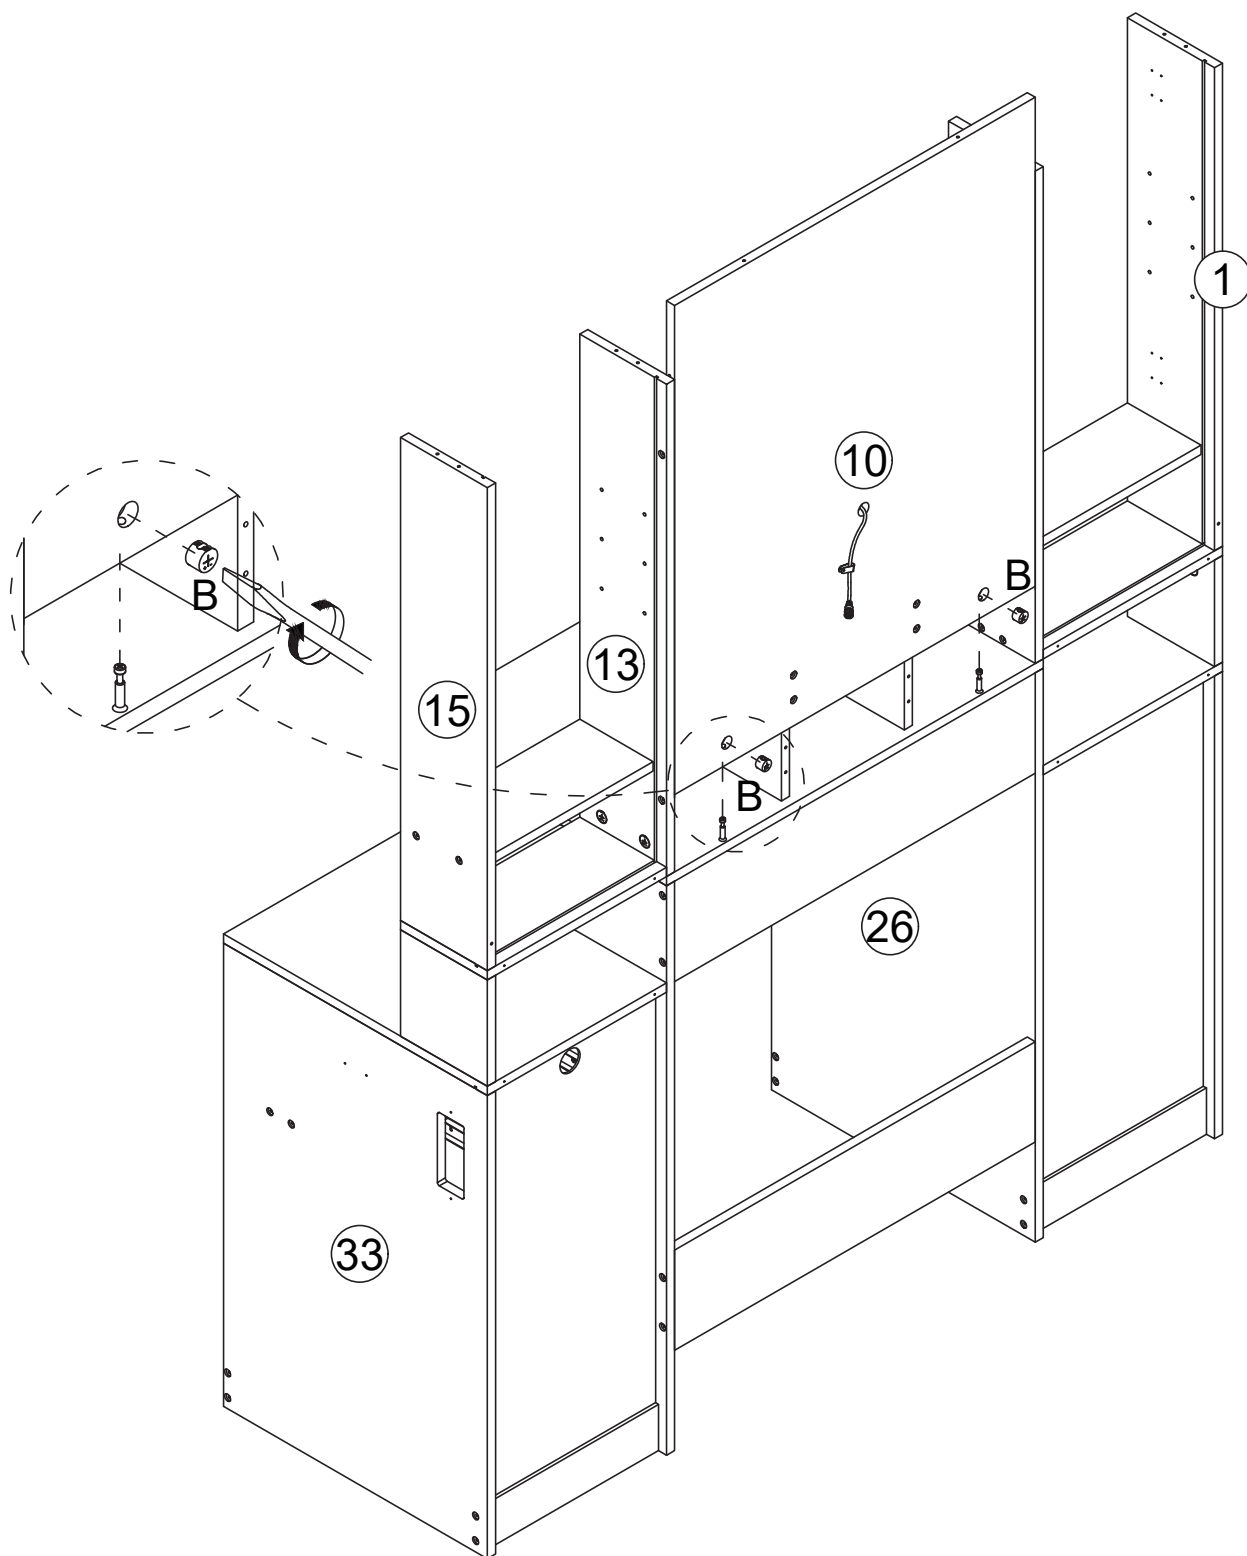

D x8

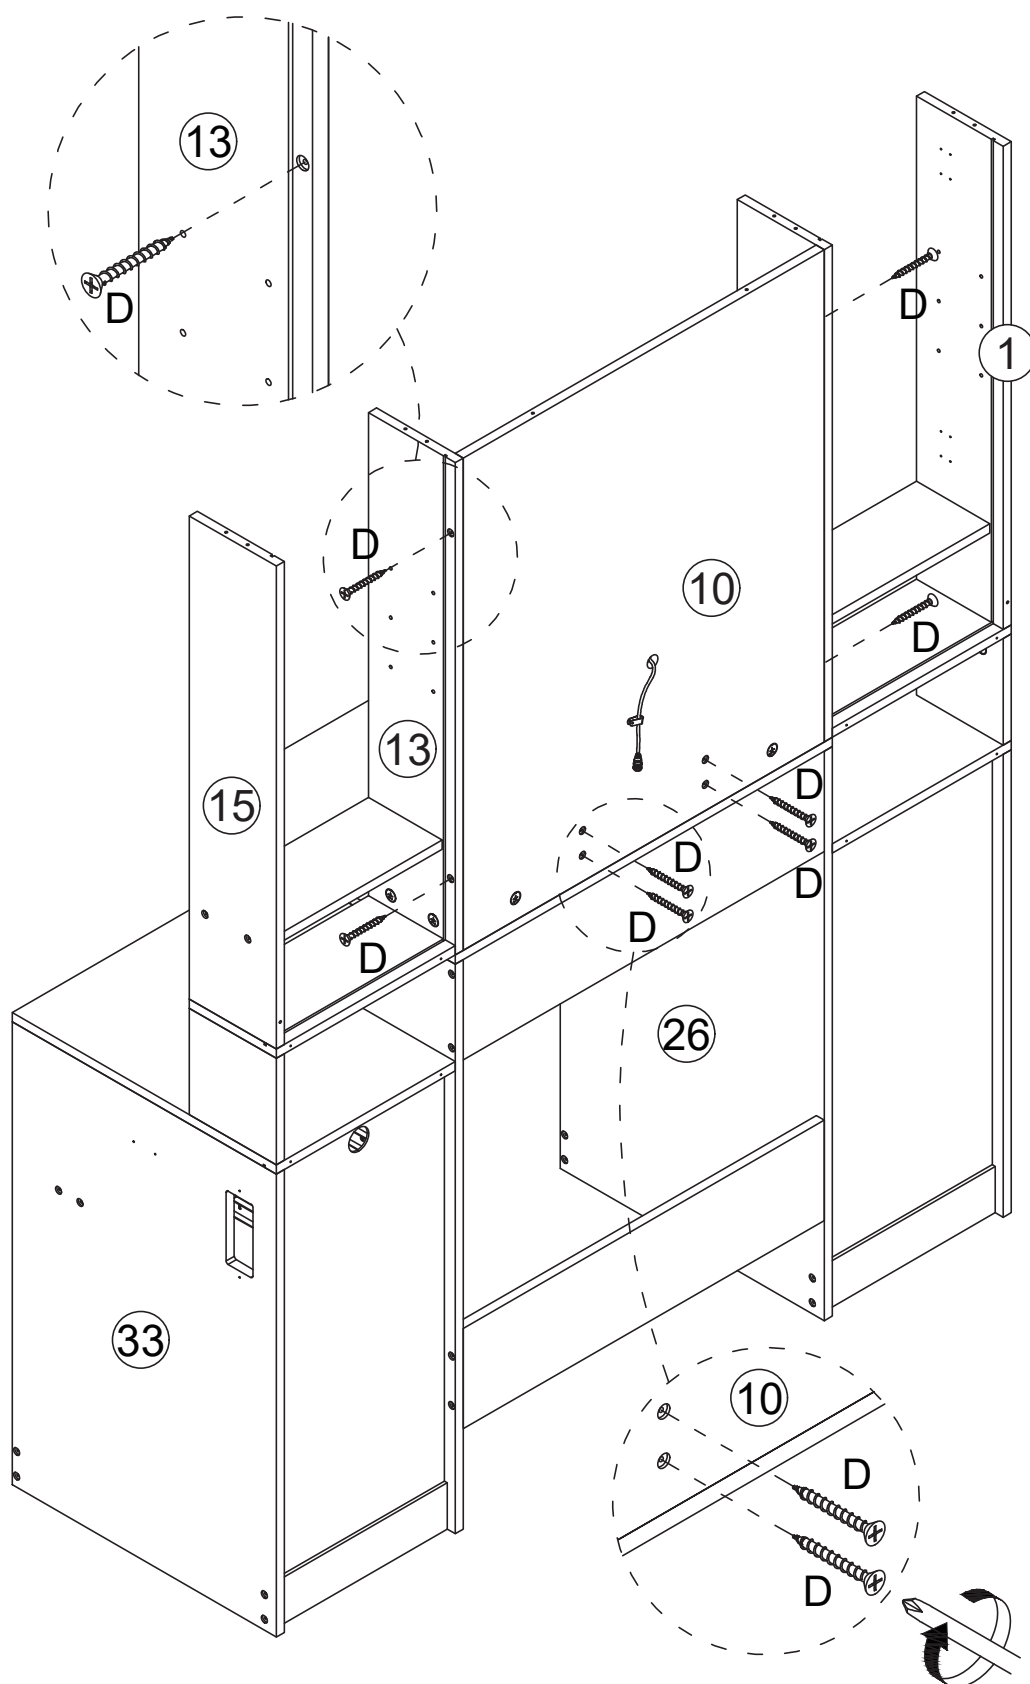


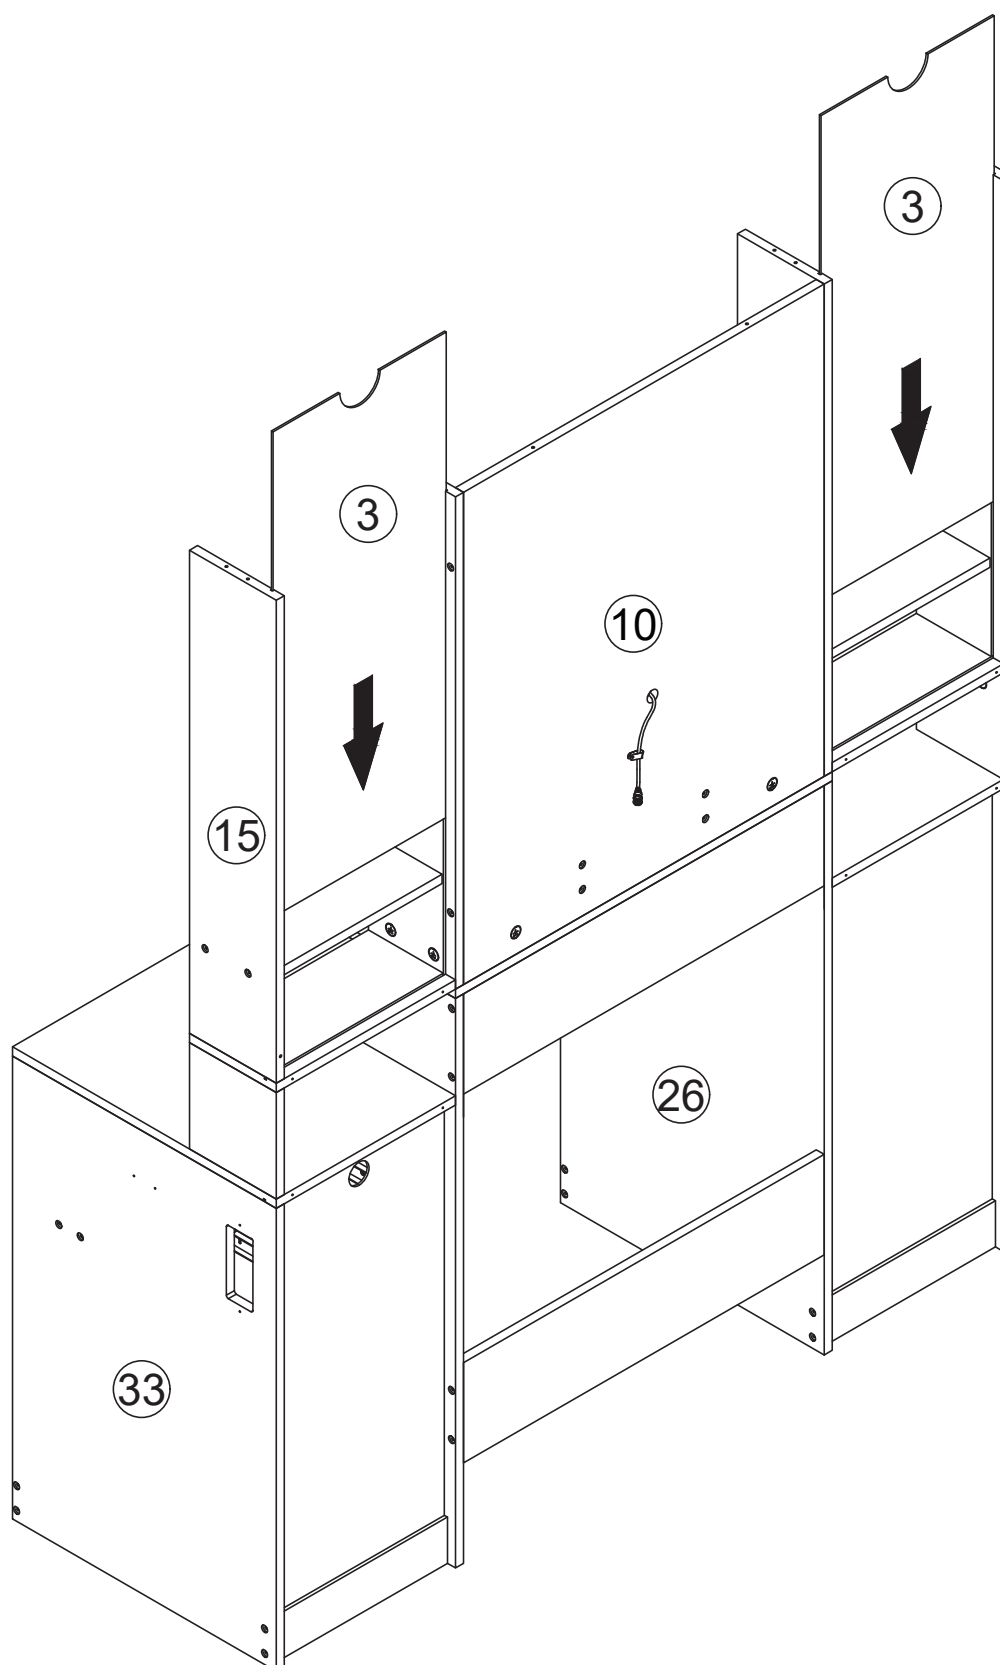

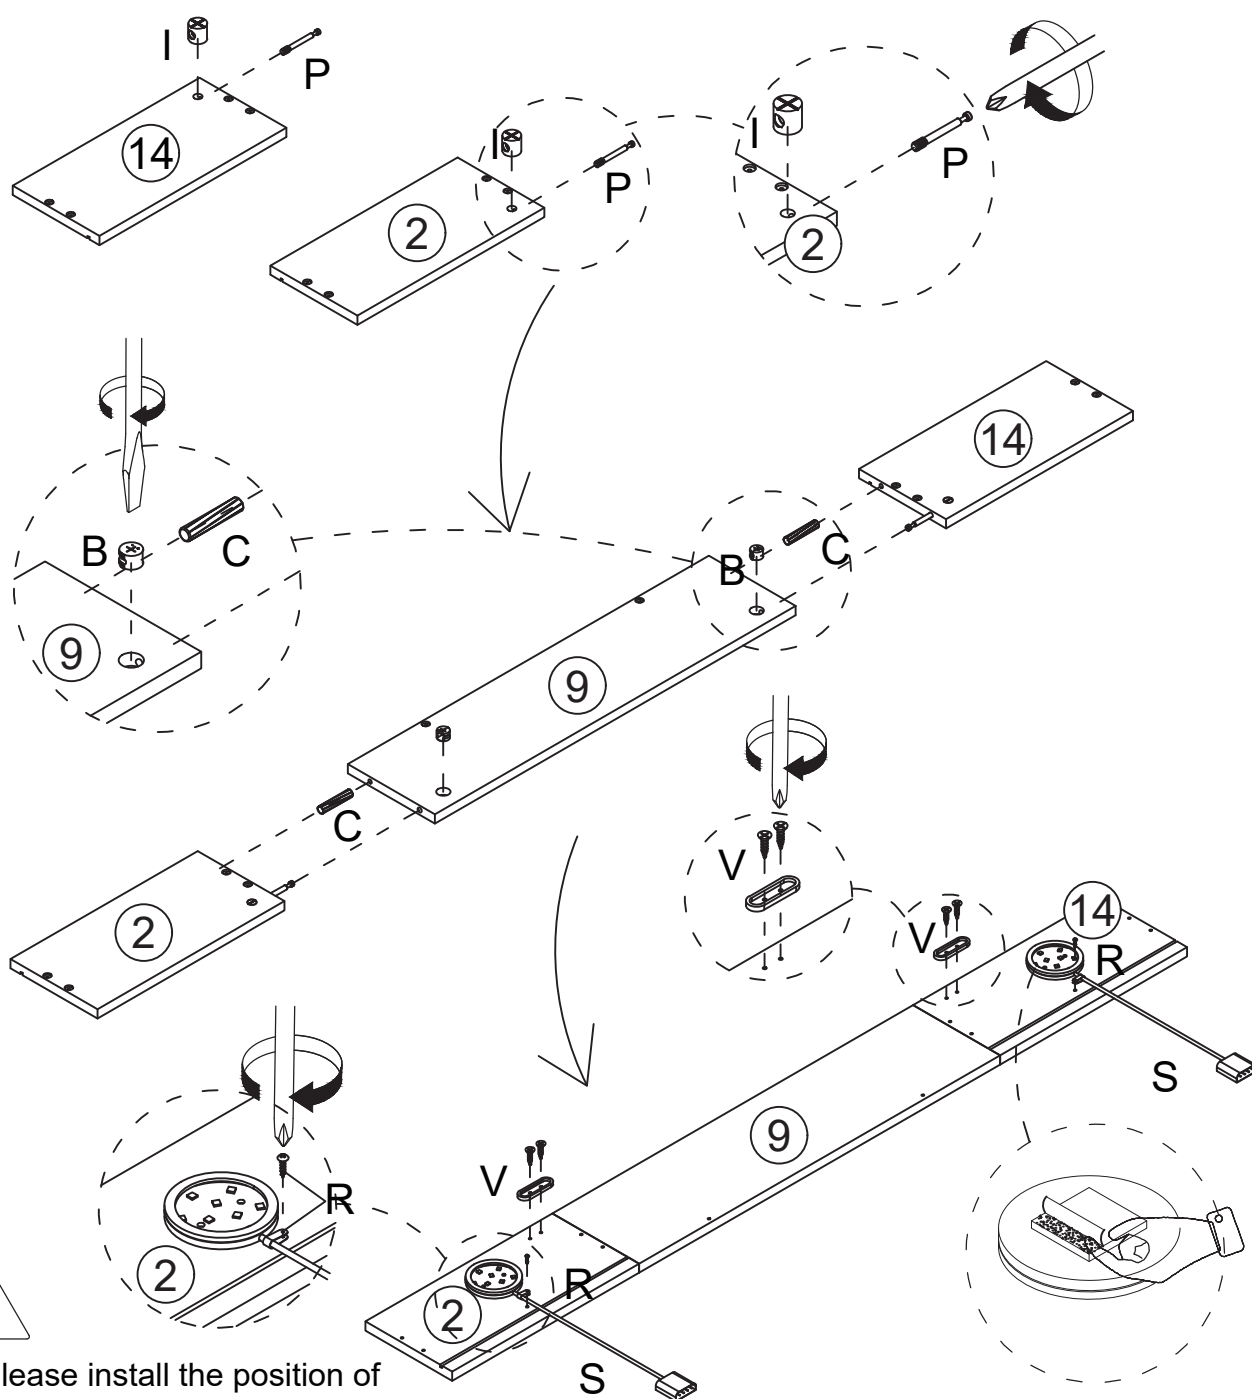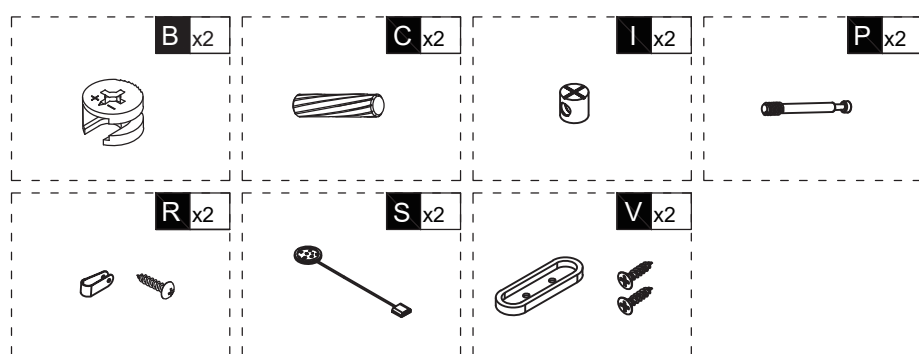


Note: Please install the position of the part **S** in the middle position.

D x10

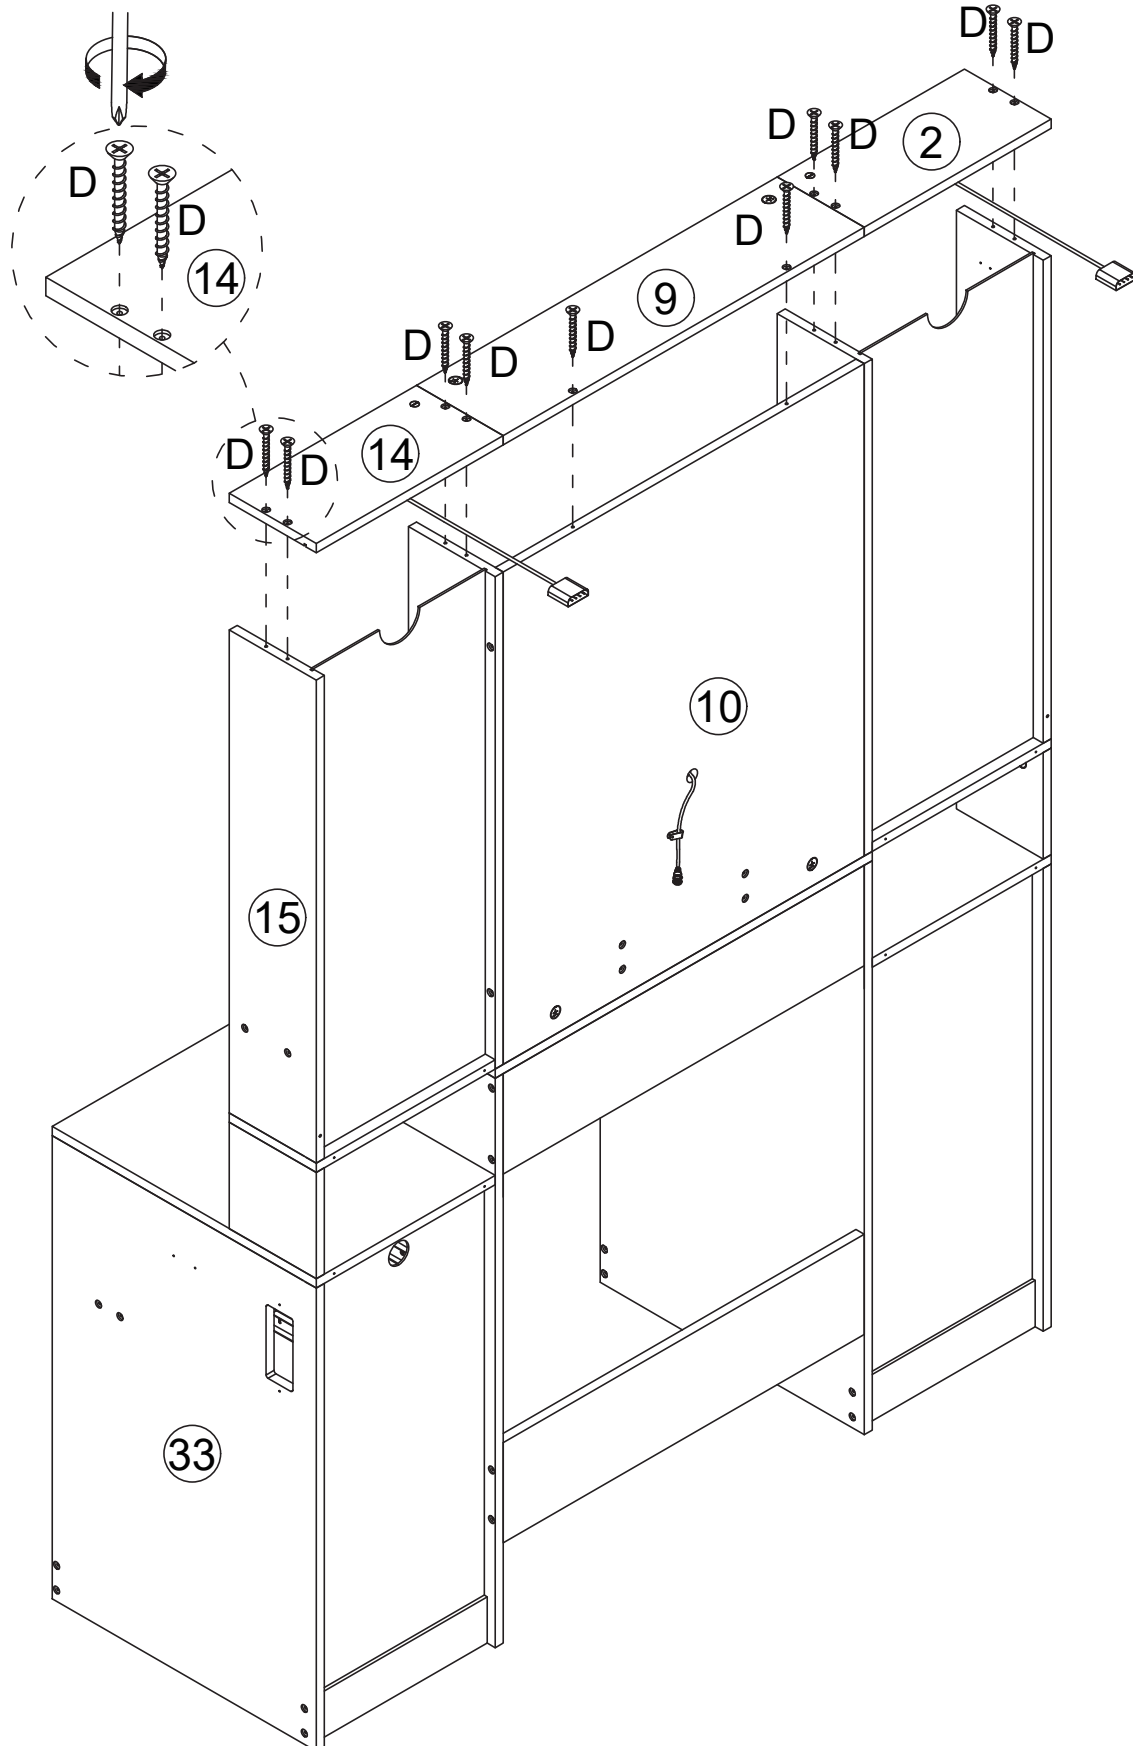


W x8


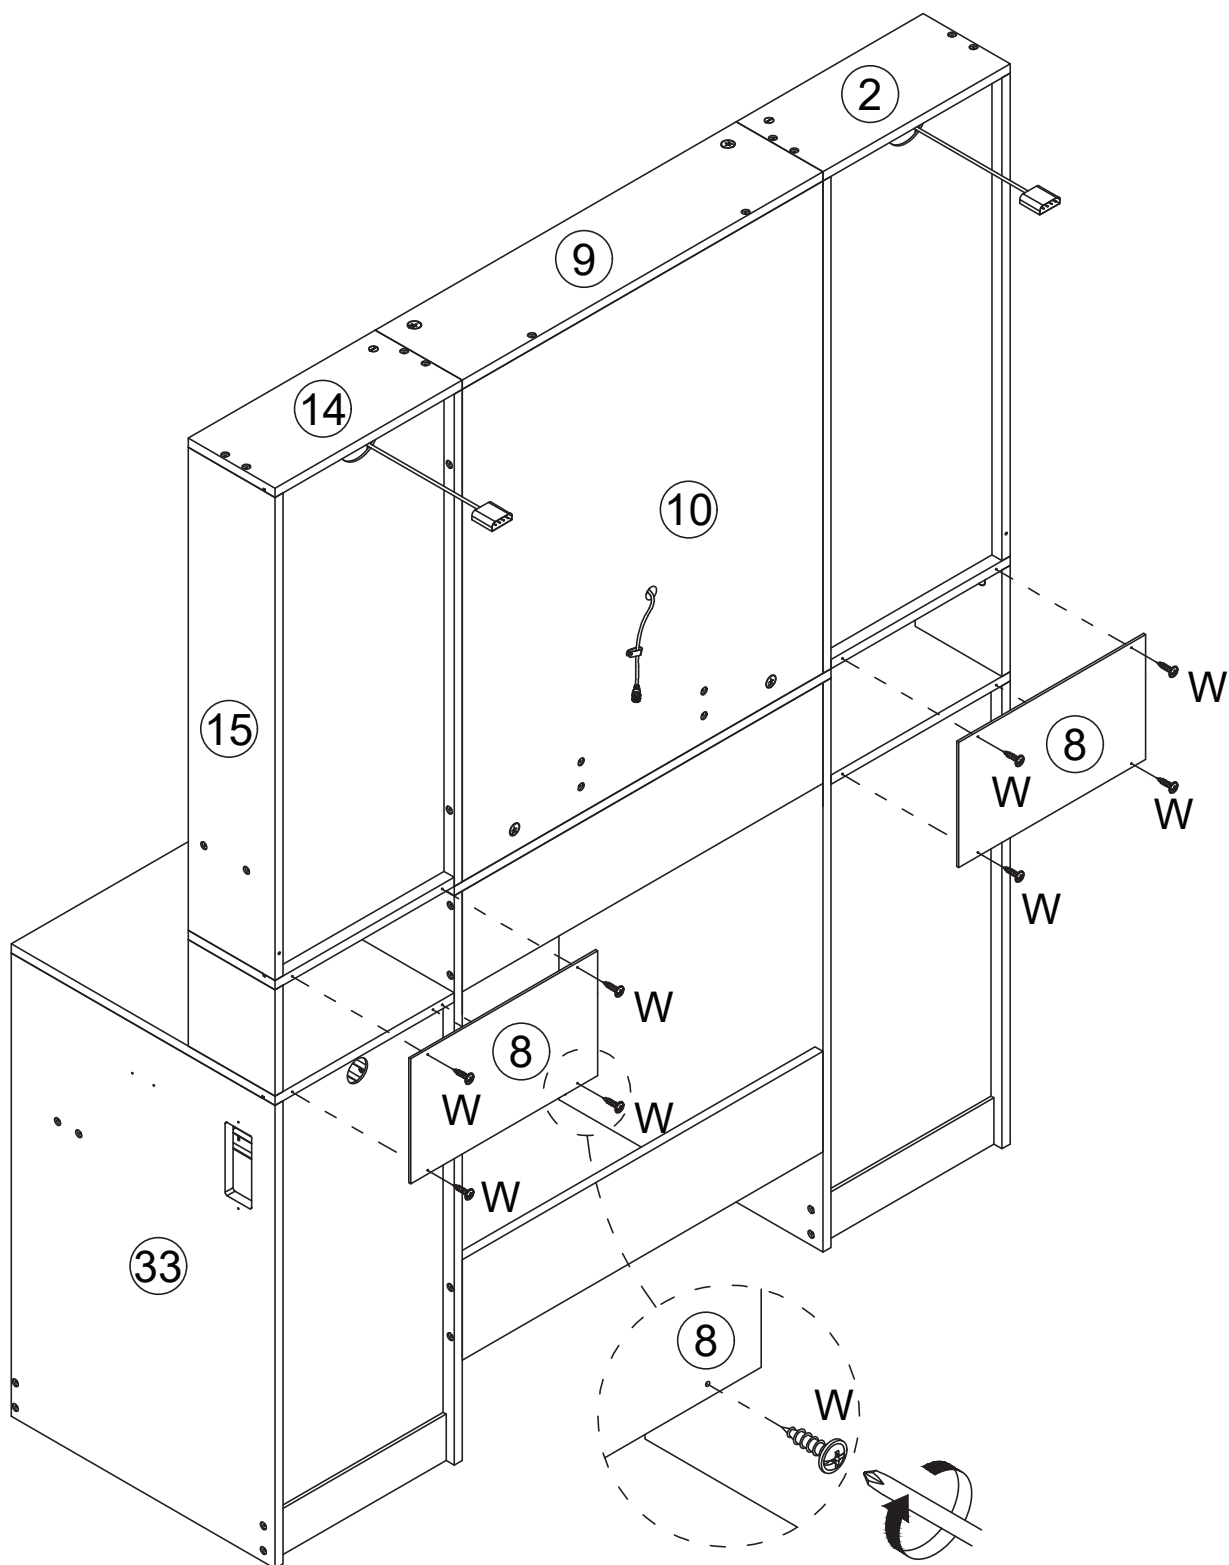


J x1




K x2
Ø3x12mm

T x1

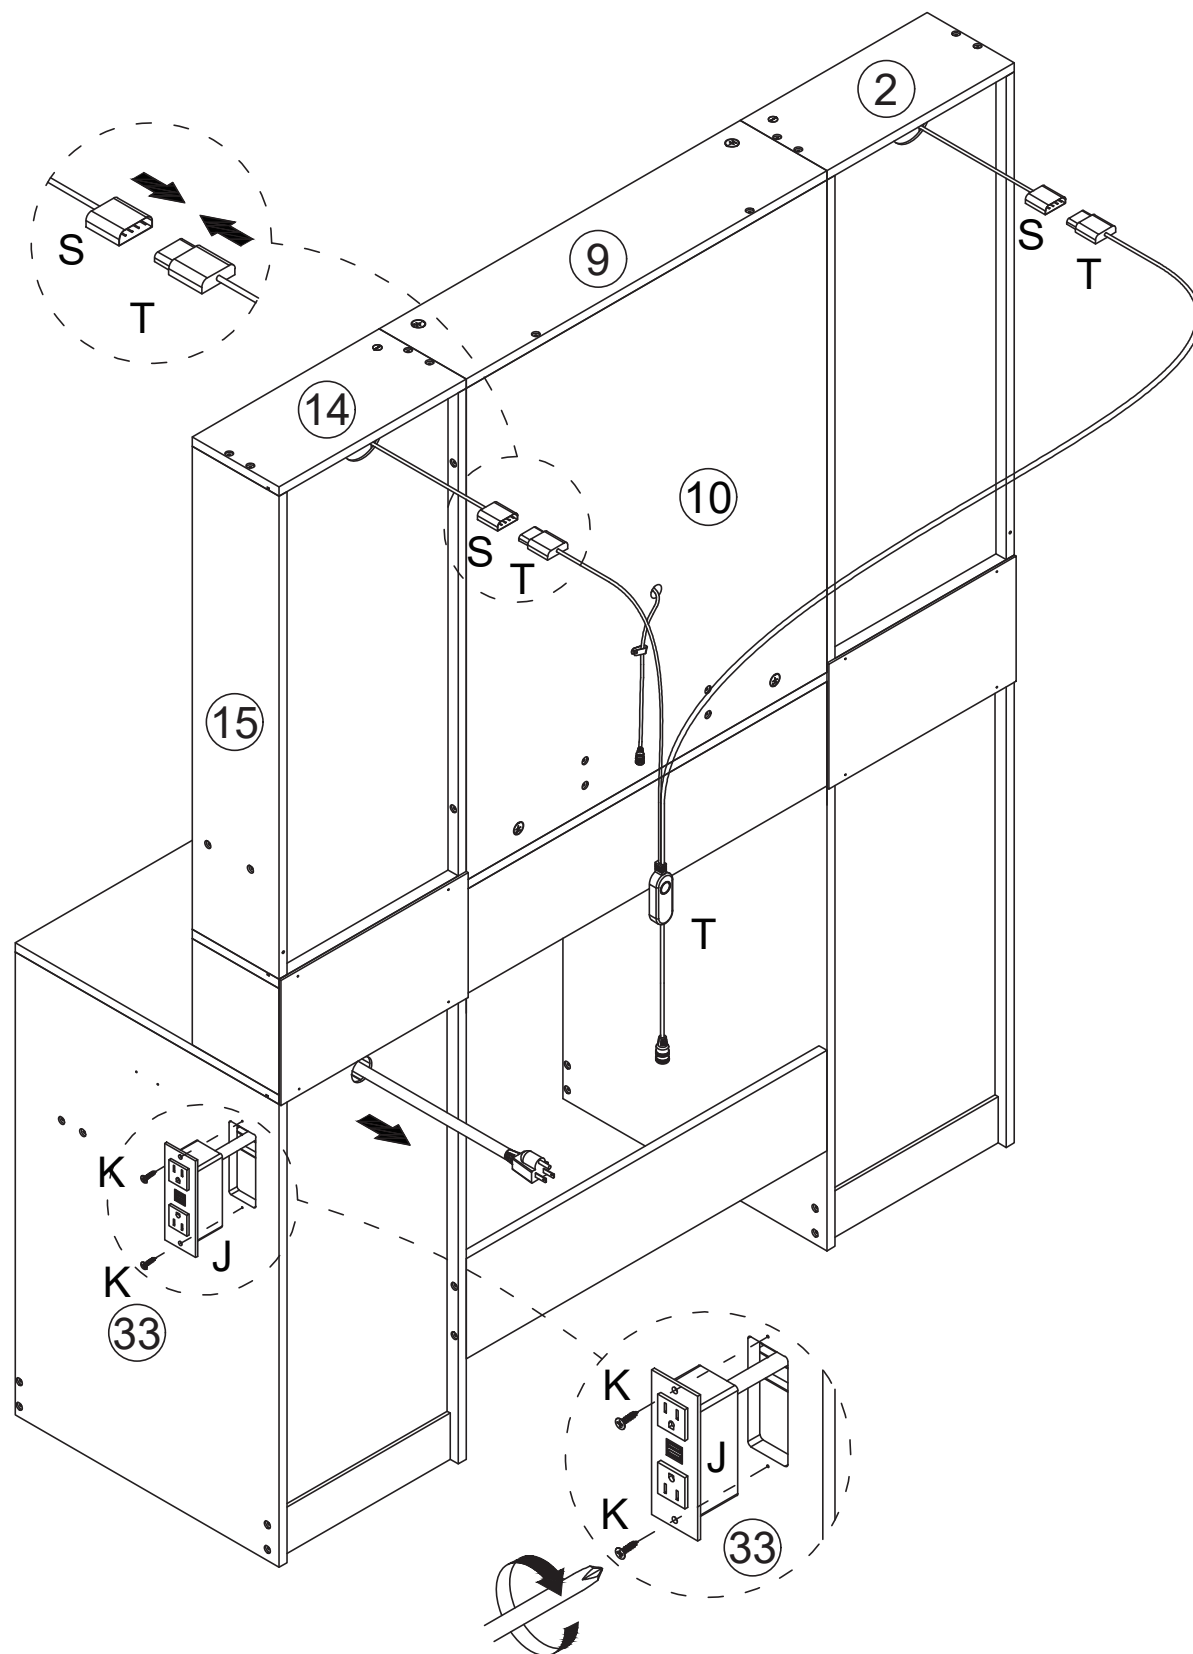

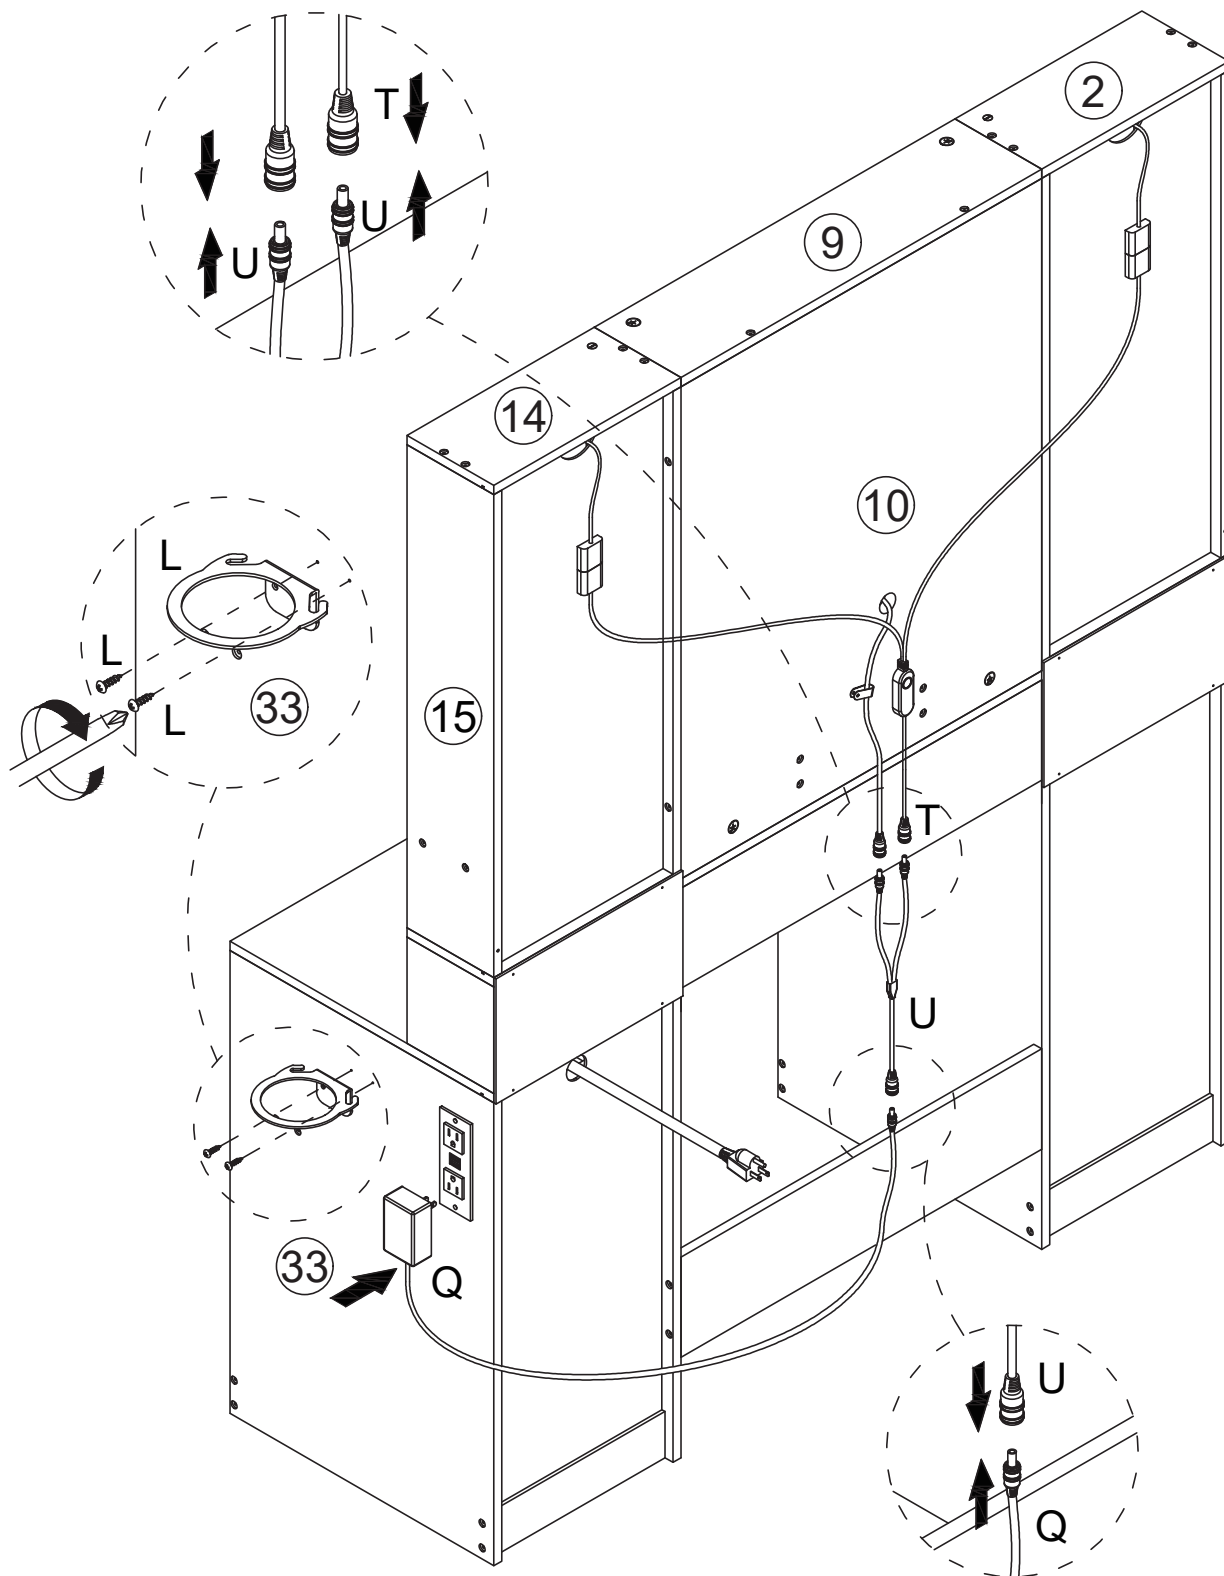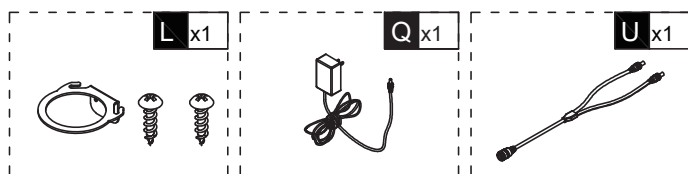

CC x16

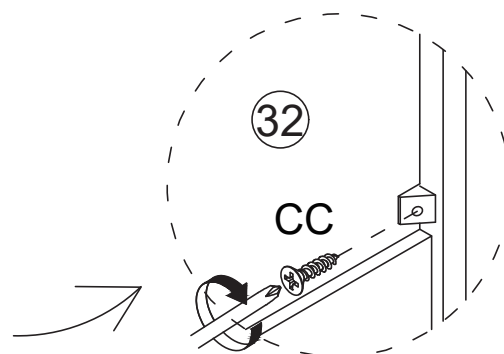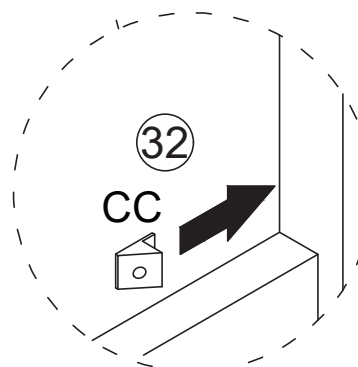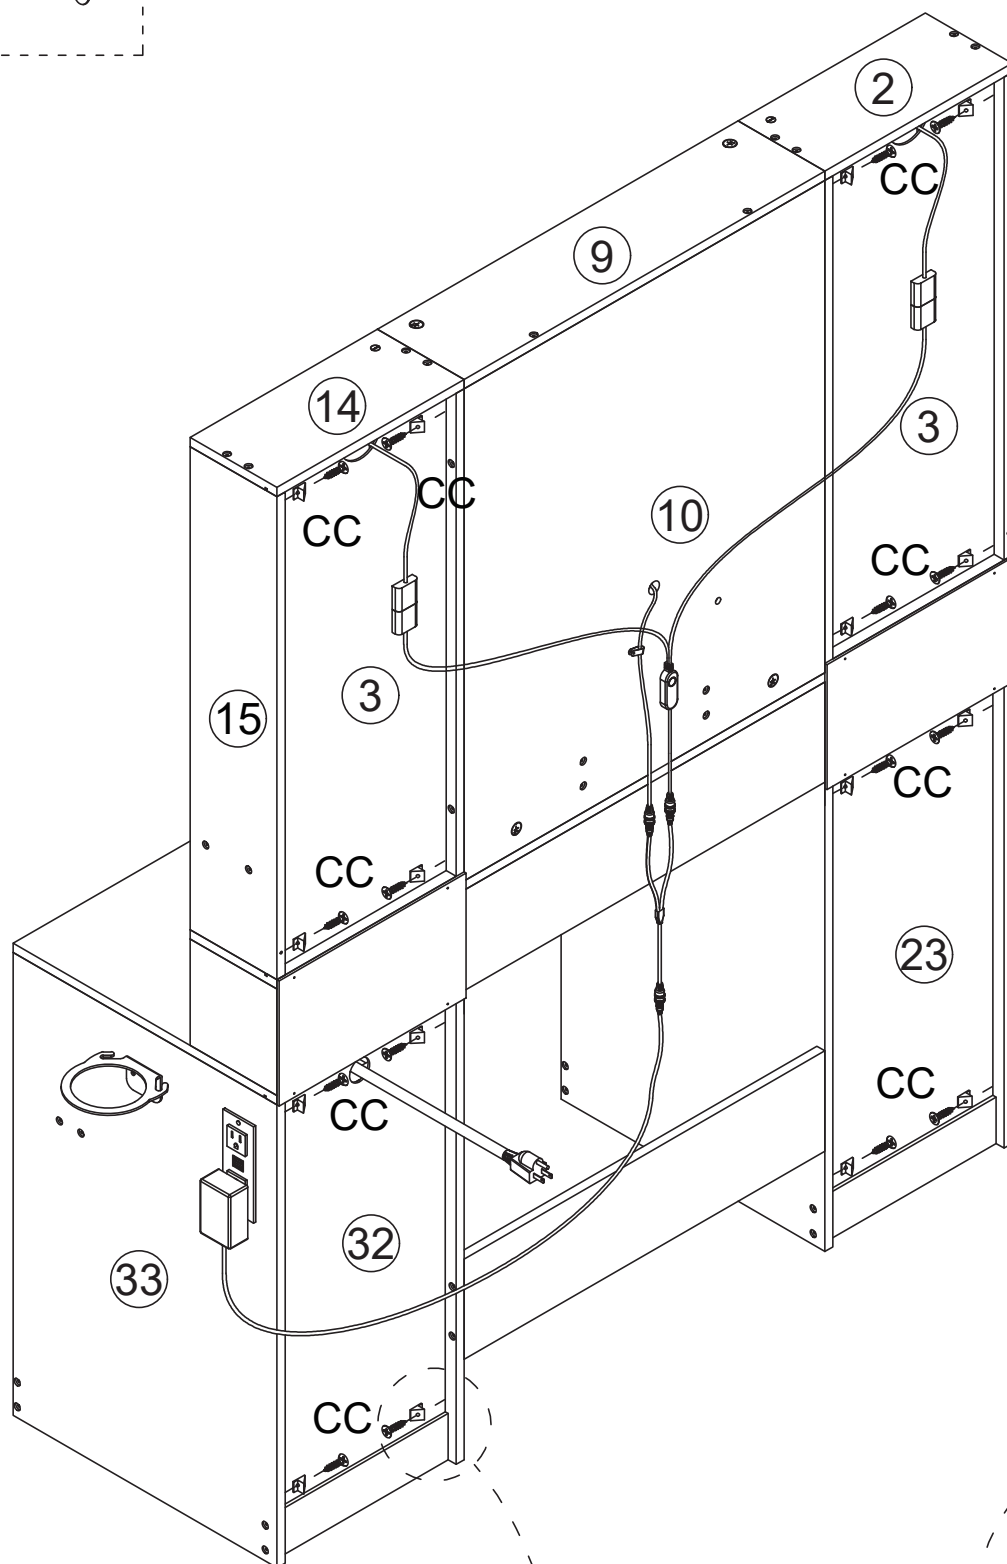


H x2







N x2




O x2


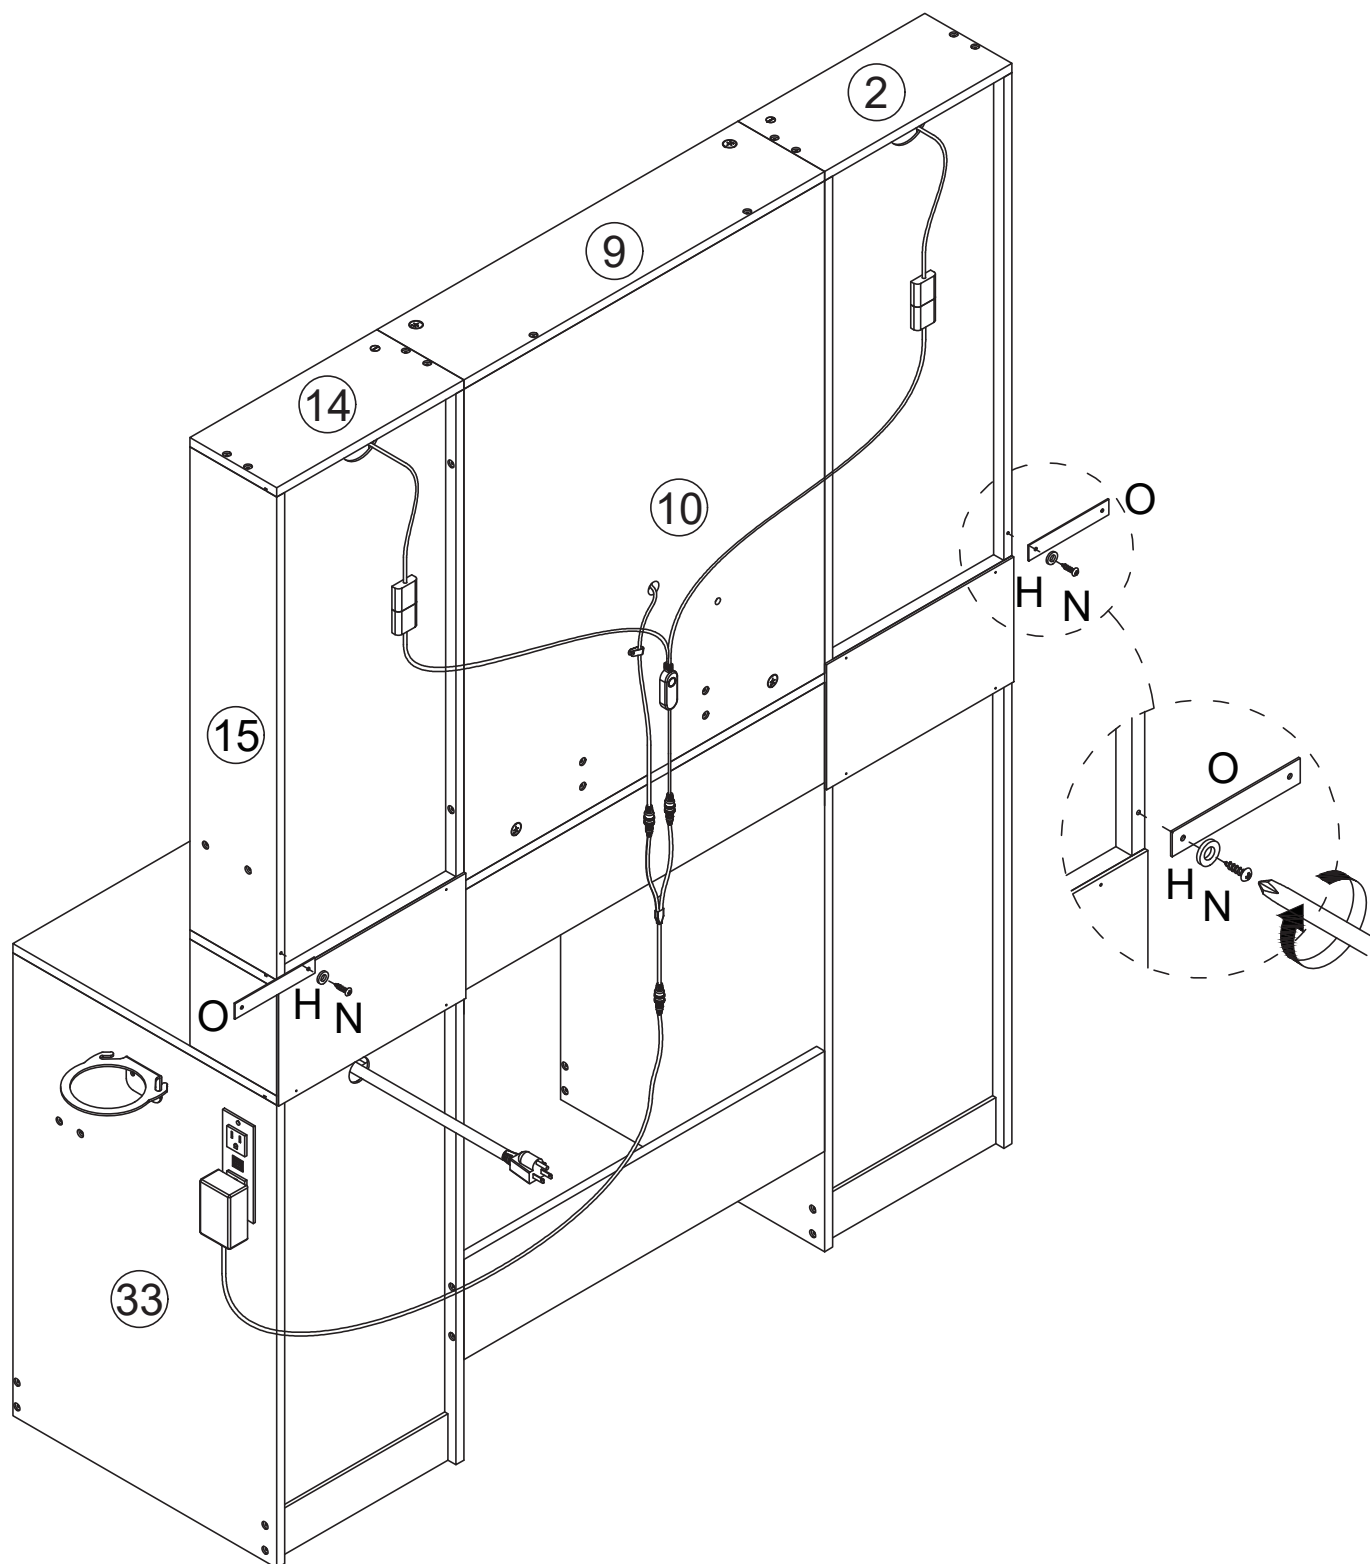


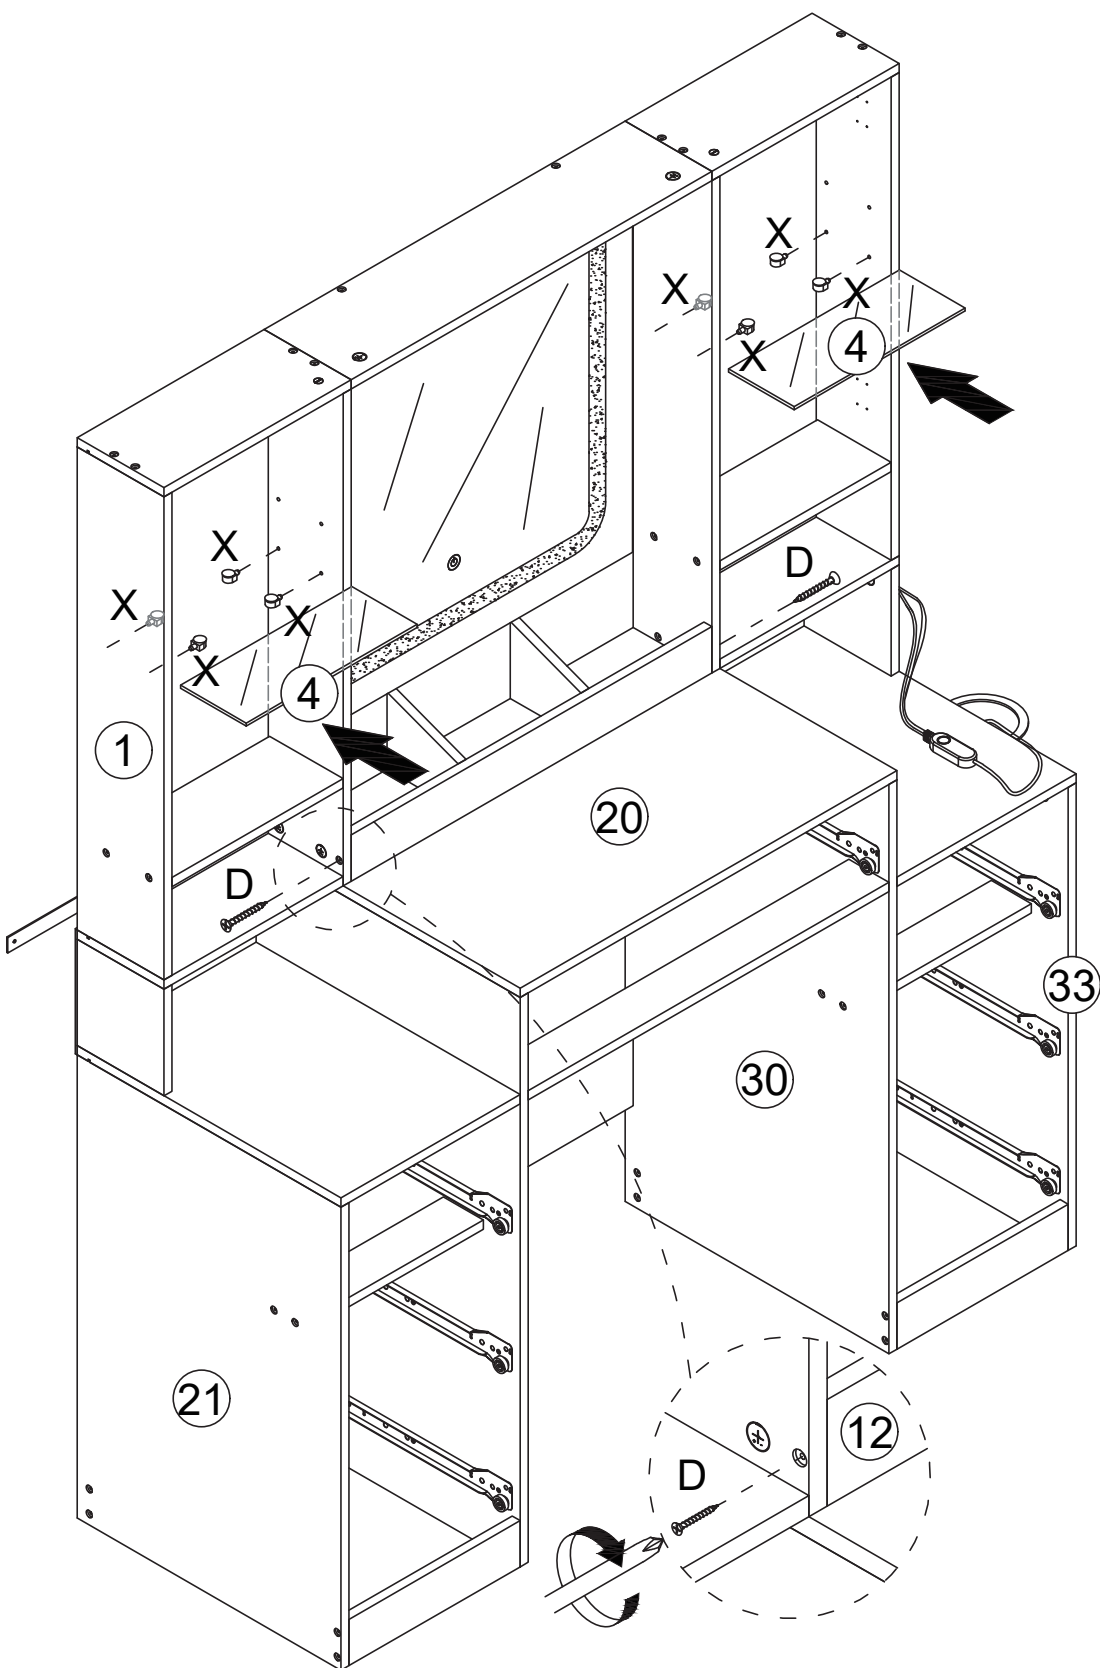

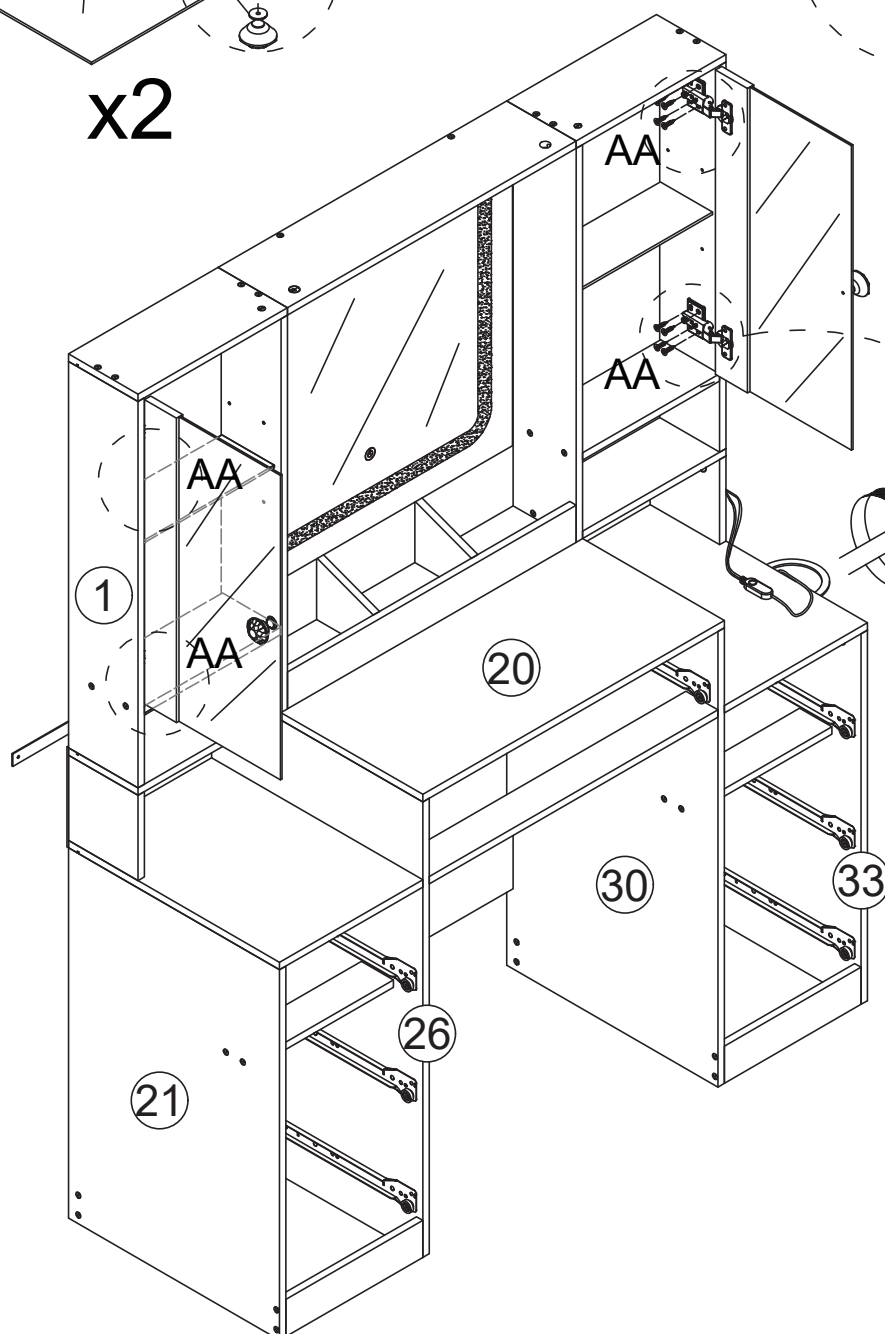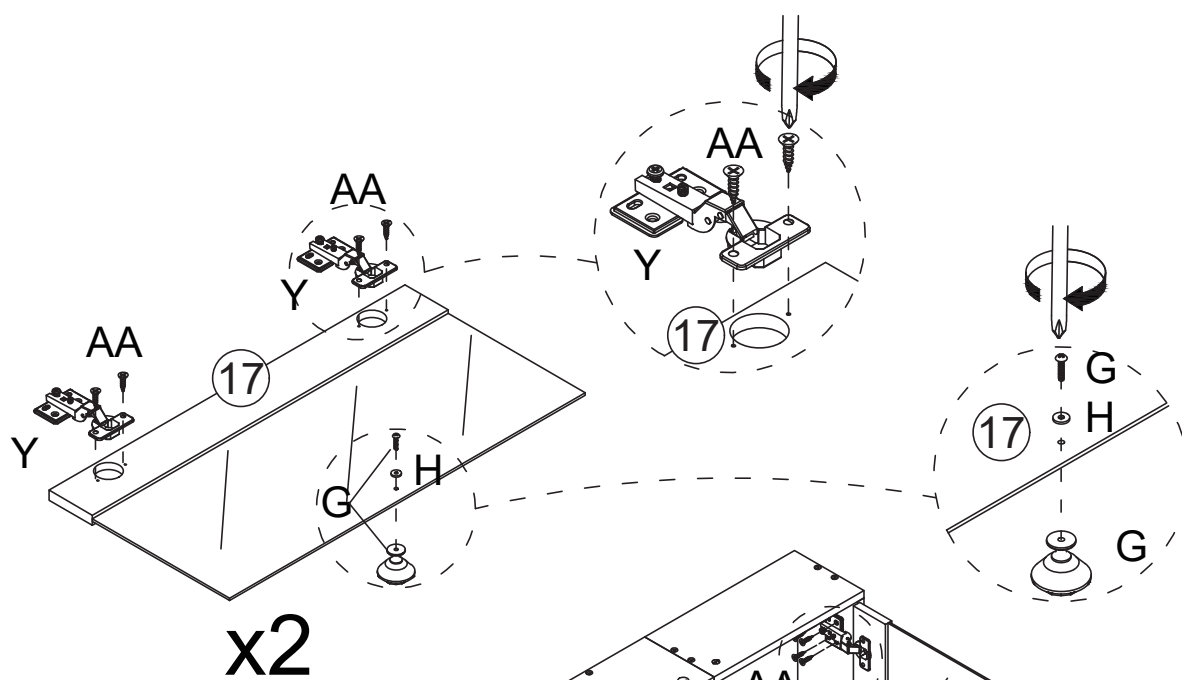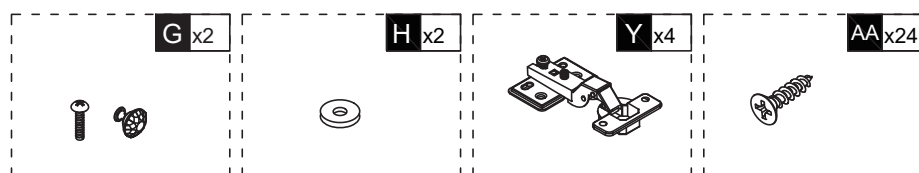

BB x66

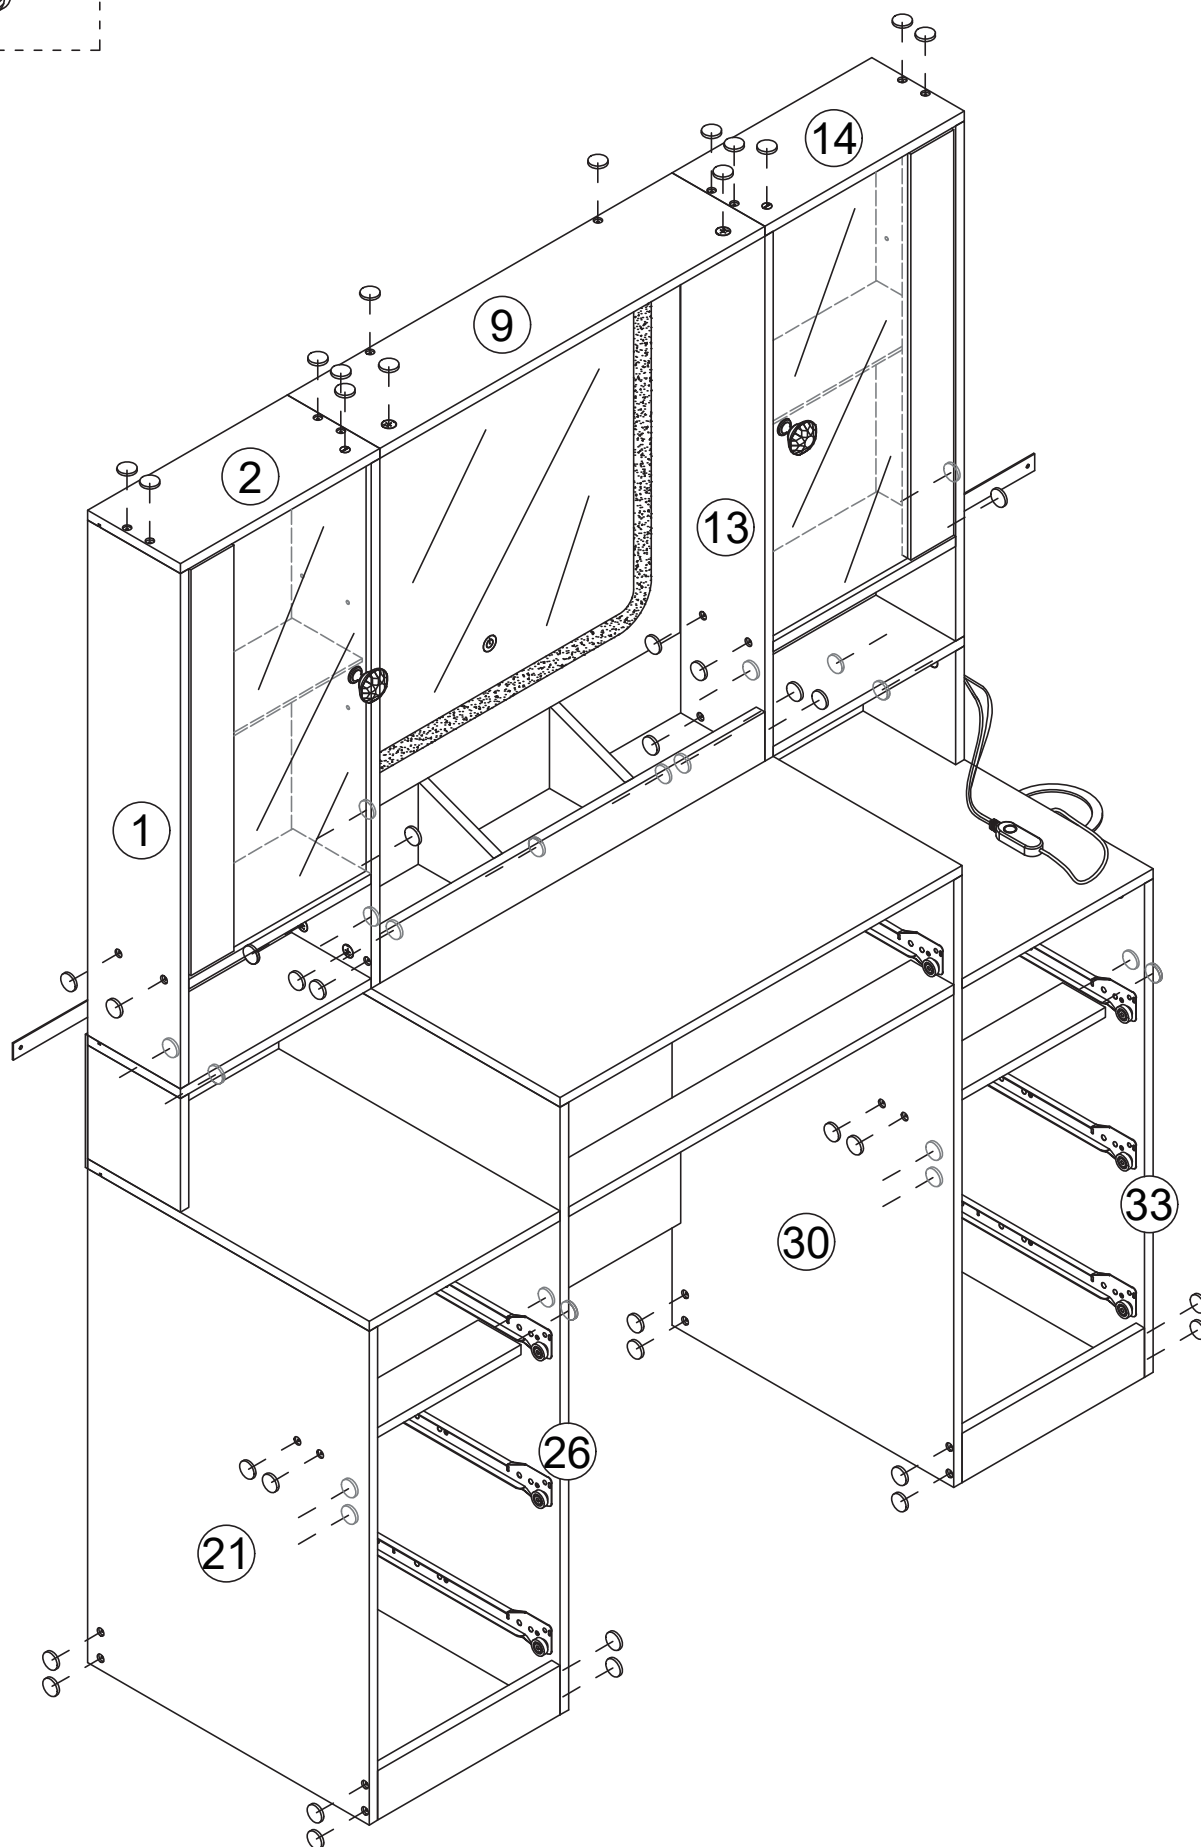

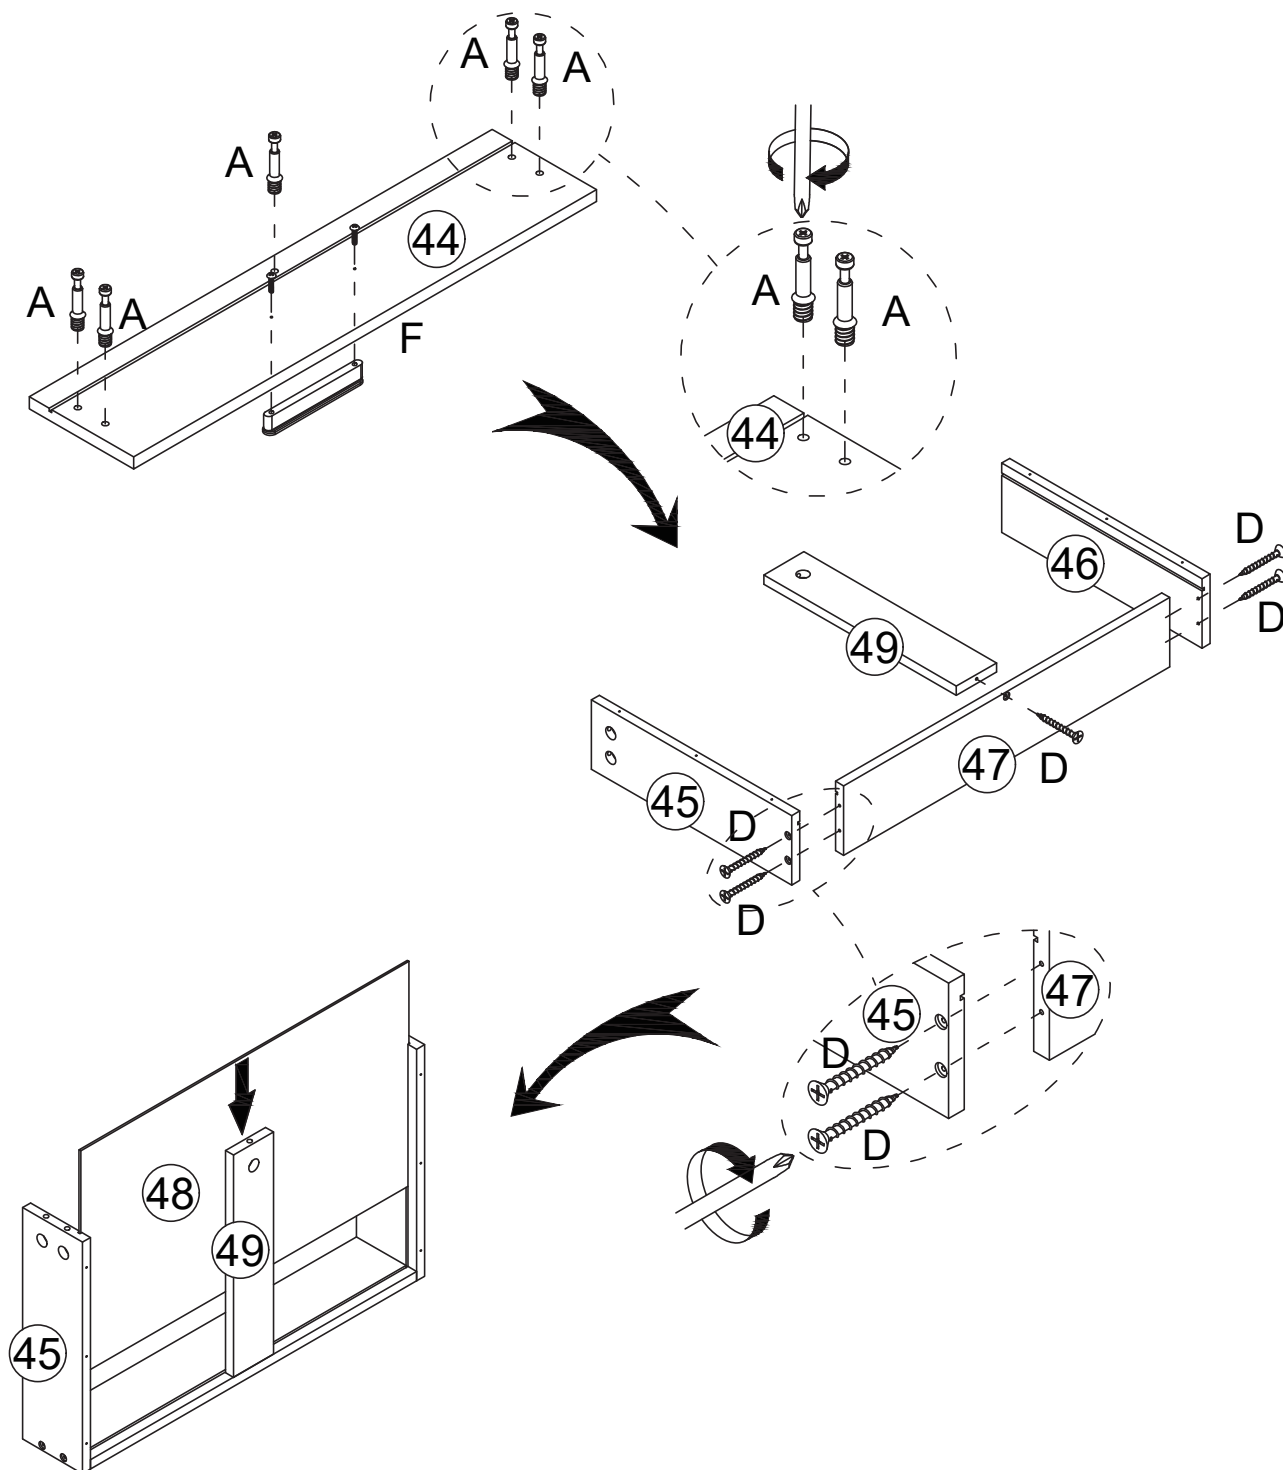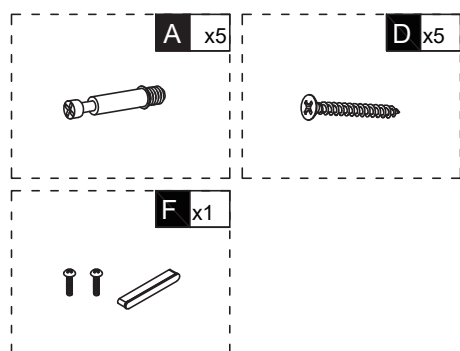

B x5







E x6







DL x1



DRx1

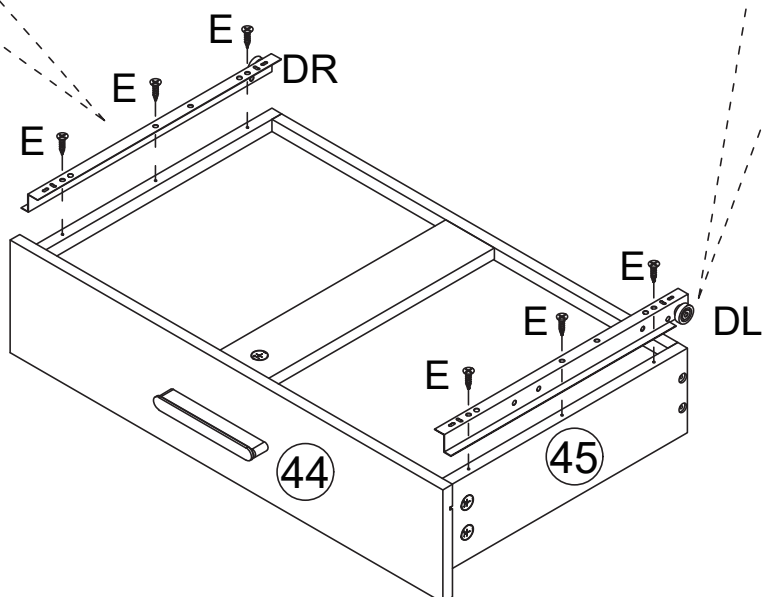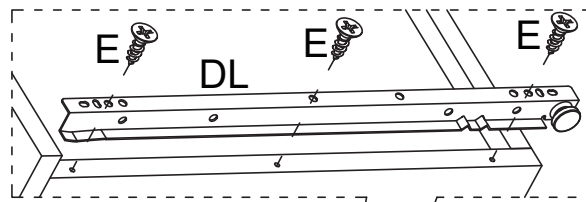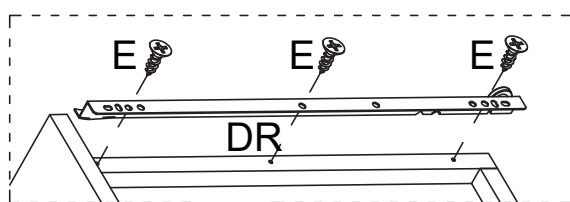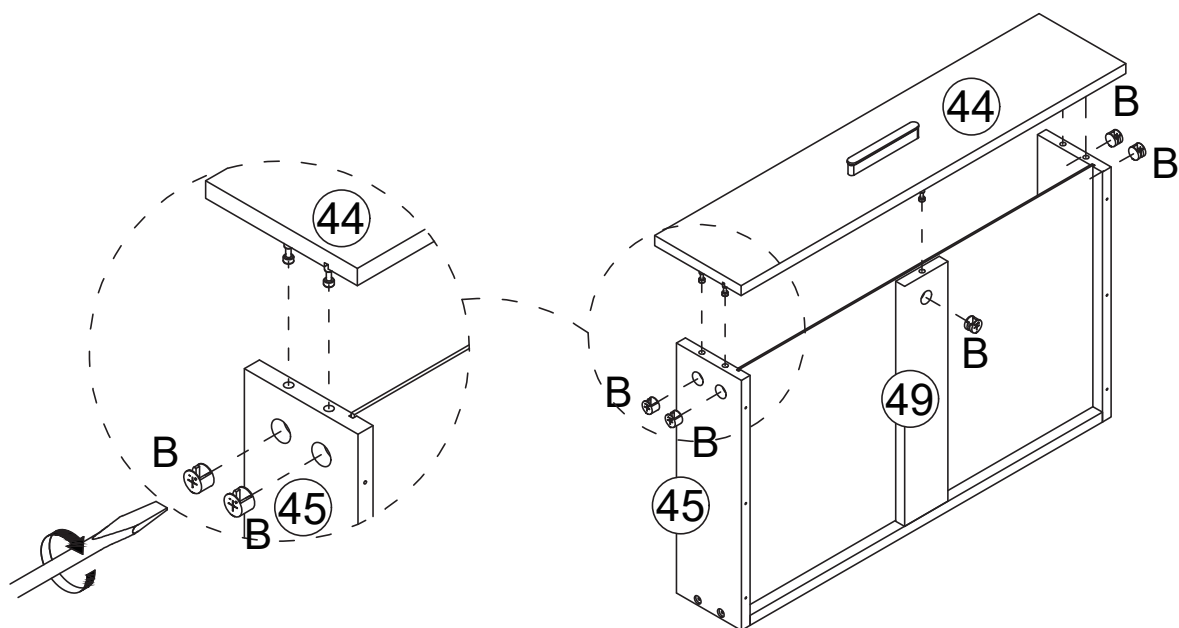

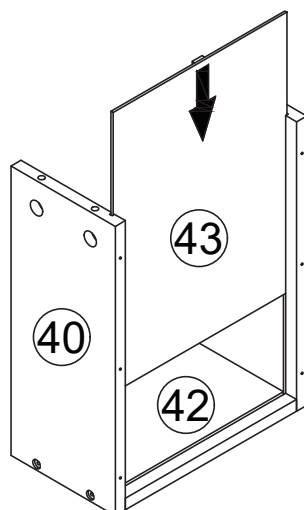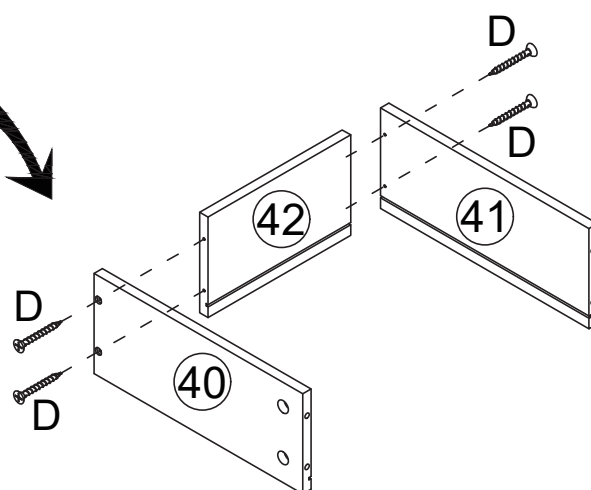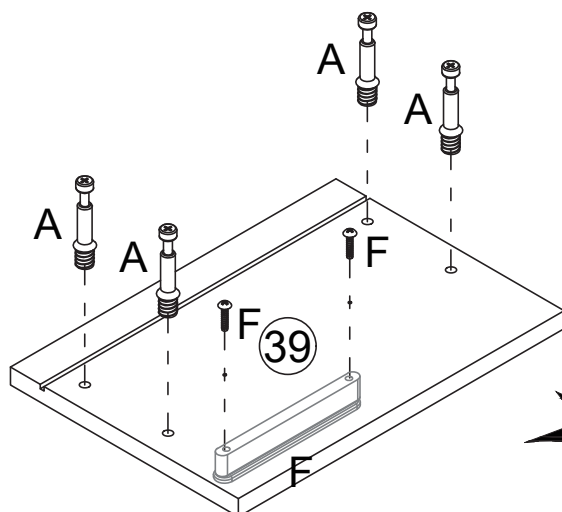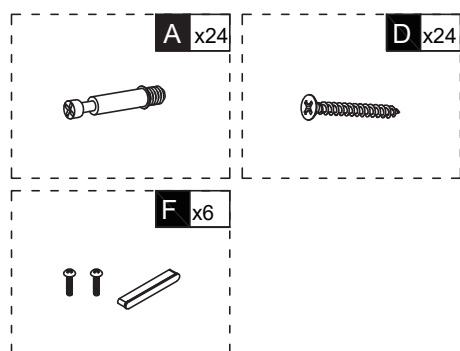

x6

B x24







E x36



DL x6



DRx6

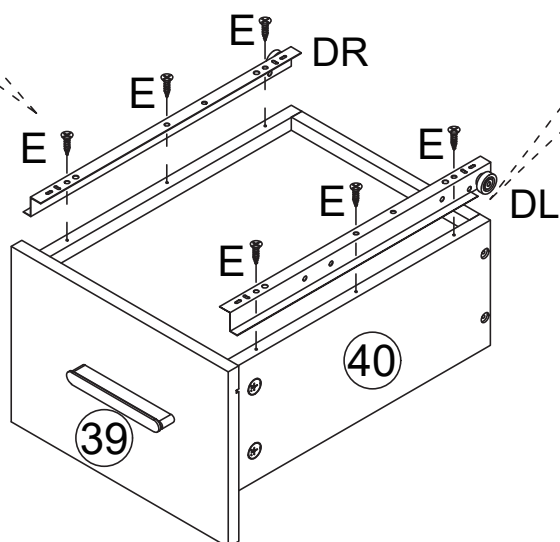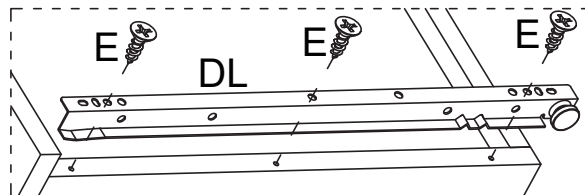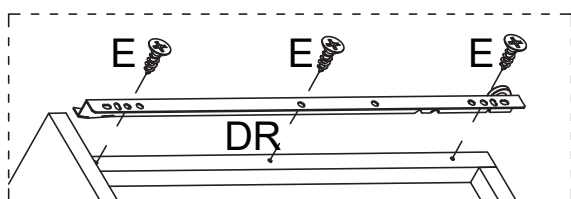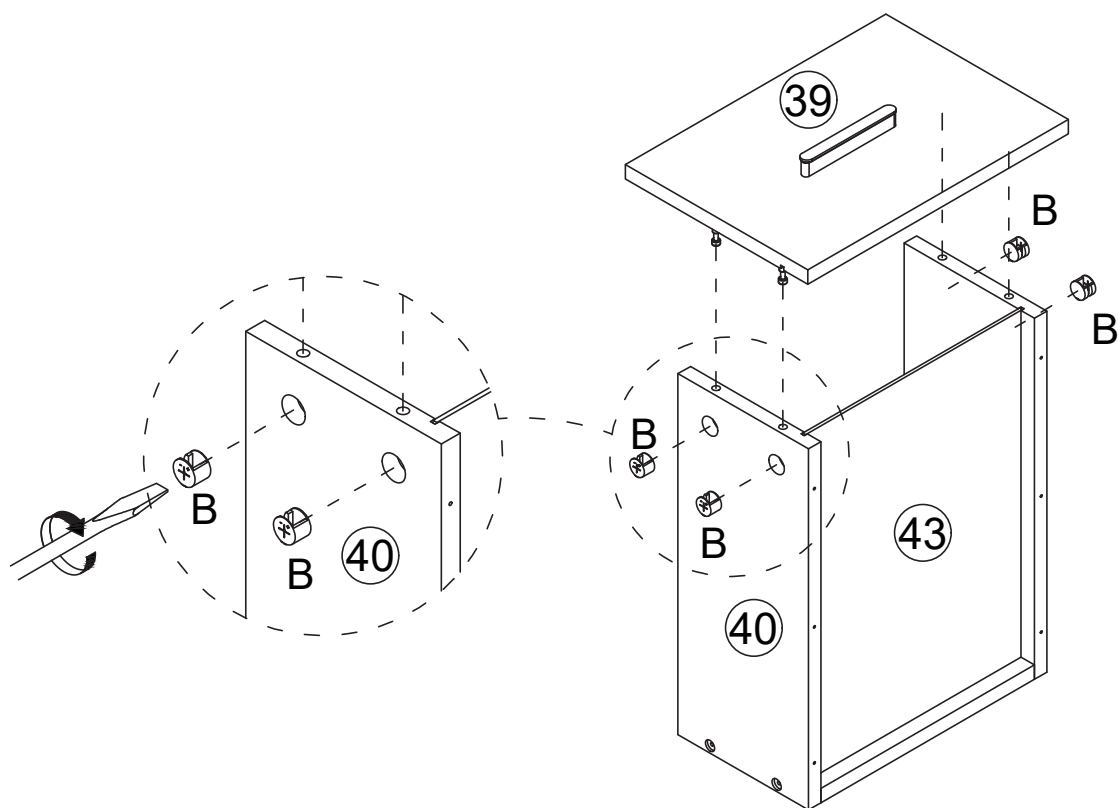


x6





DDx1



(1)

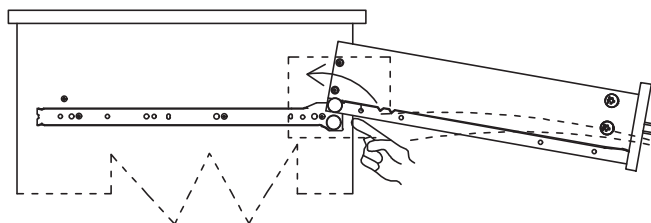

(2)

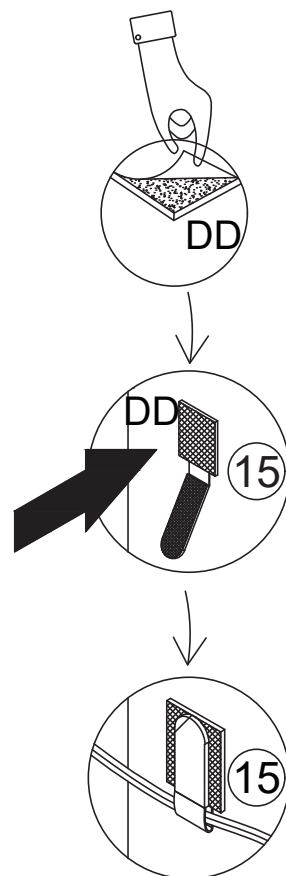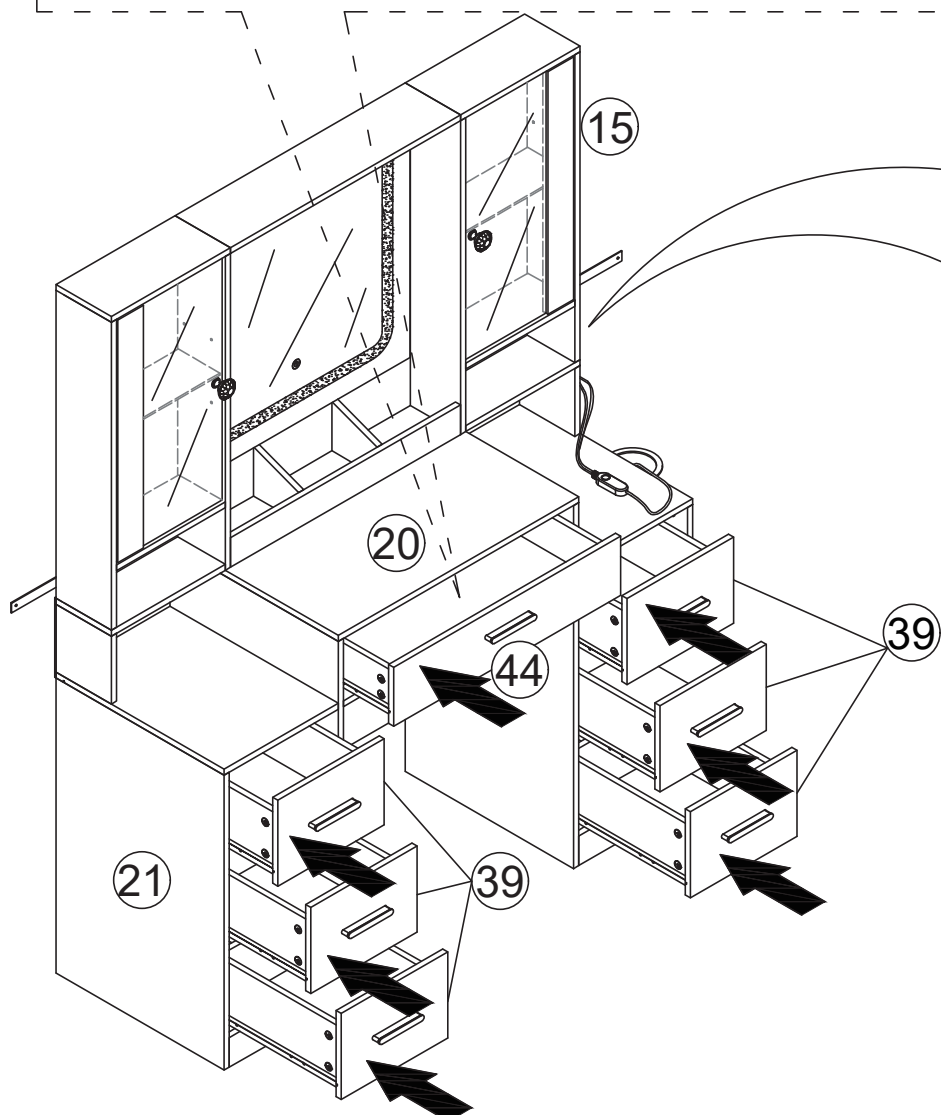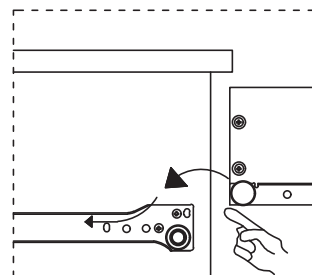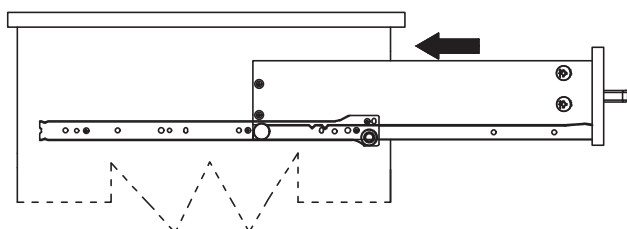

You are free to choose whether to install and where to install.



D x2




H x2



M x2

WALL


I x2

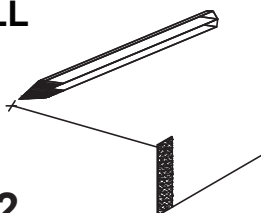


WALL +

drilling hole
Ø6x30mm


II x2

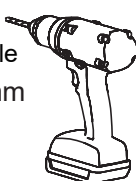




WALL

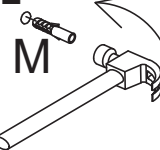

III x2

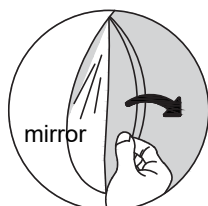

Please tear off the film on
the outside of the mirror.

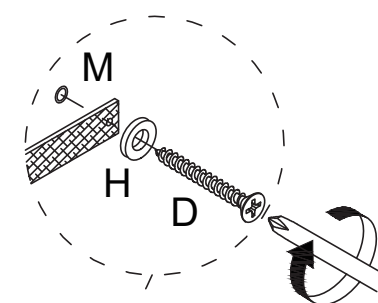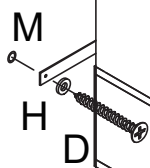

Power
supply



Scan qr code to download APP
Bluetooth control

OR

Flip to the other side for
key control

