




**ASSEMBLY INSTRUCTIONS:**  
1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;  
2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;  
3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;  
4- DO NOT USE ABRASIVES SOLUTIONS;

**ASSEMBLY INSTRUCTIONS**  
BOX 07


| PART LIST   |     |                  |
|-------------|-----|------------------|
| PART NUMBER | Qty | DESCRIPTION:     |
| 1           | 1   | LEFT SIDE PANEL  |
| 2           | 1   | RIGHT SIDE PANEL |
| 3           | 2   | BOTTOM/TOP PANEL |
| 4           | 4   | FRAME            |
| 5           | 4   | SHELVES          |
| 6           | 1   | SMALL DRAWER     |
| 7           | 3   | REGULAR DRAWER   |






| CABINET HARDWARES | 16   | 16  | 16   |
|-------------------|--|---|--|
|                   | <br>CAM LOCK SCREWS | <br>CAM LOCK | <br>DOWEL 5/16 X 1 3/16 |

**CABINET ASSEMBLY**

**STEP 01**  
PREPARATION OF THE SIDE PANELS

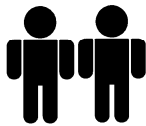


**STEP 02**  
PREPARATION OF BOTTOM/TOP PANELS

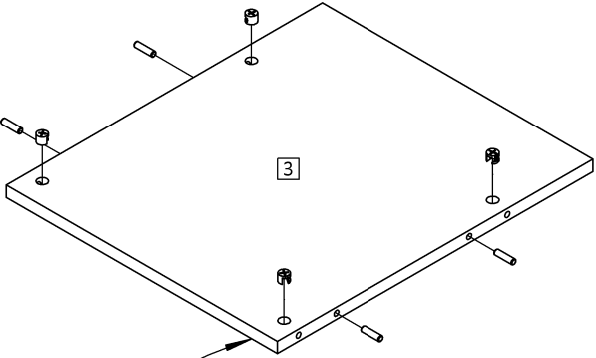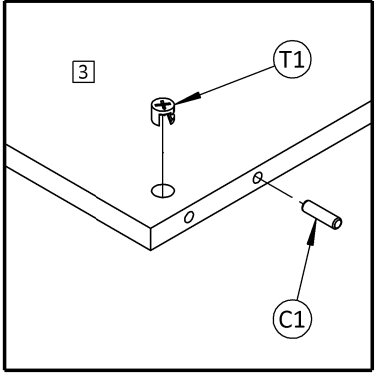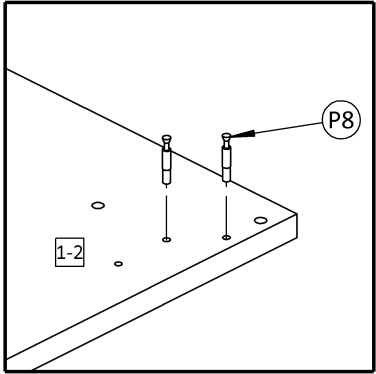


**STEP 03**  
PREPARATION OF THE FRAMES


**ASSEMBLY INSTRUCTIONS**  
BOX 07

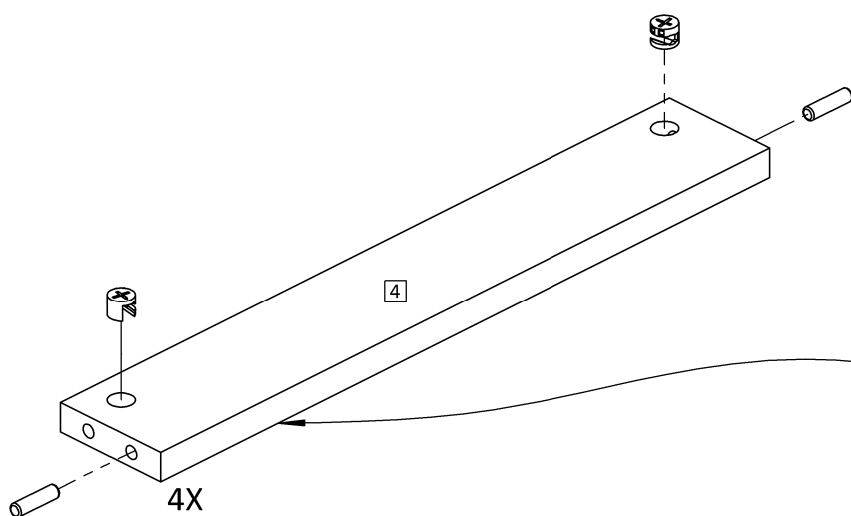

**STEP 04**  
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

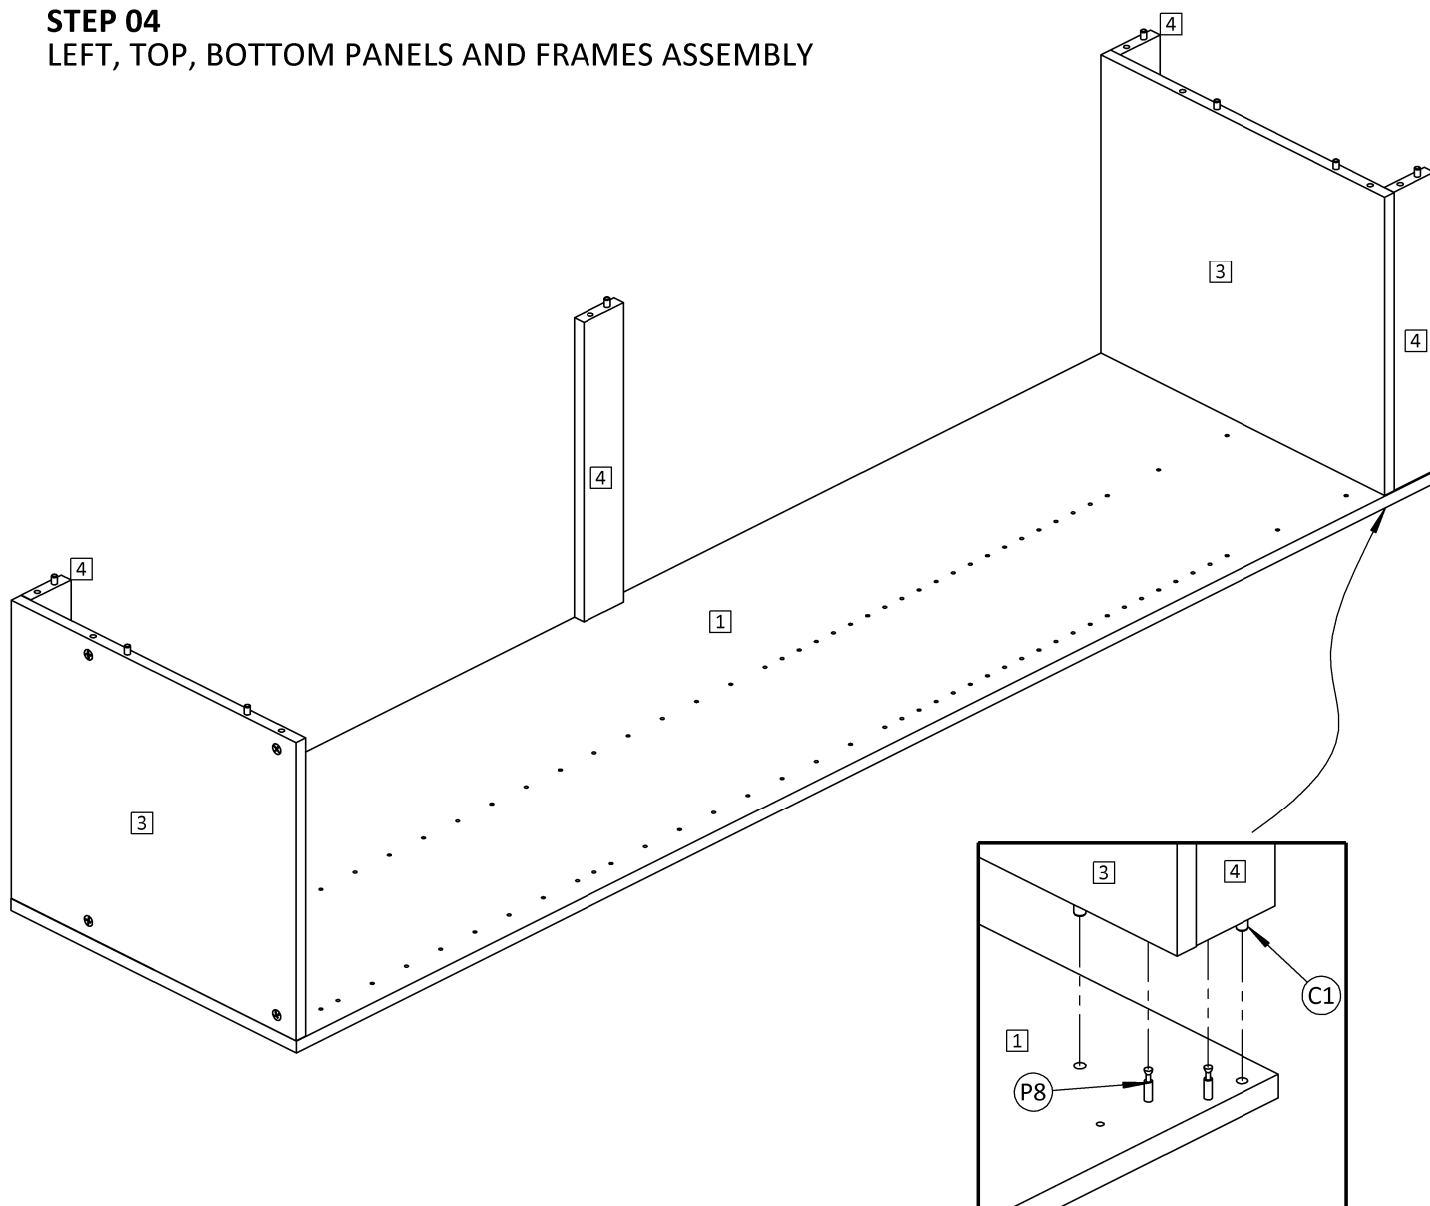


STEP 05  
RIGHT SIDE PANEL ASSEMBLY

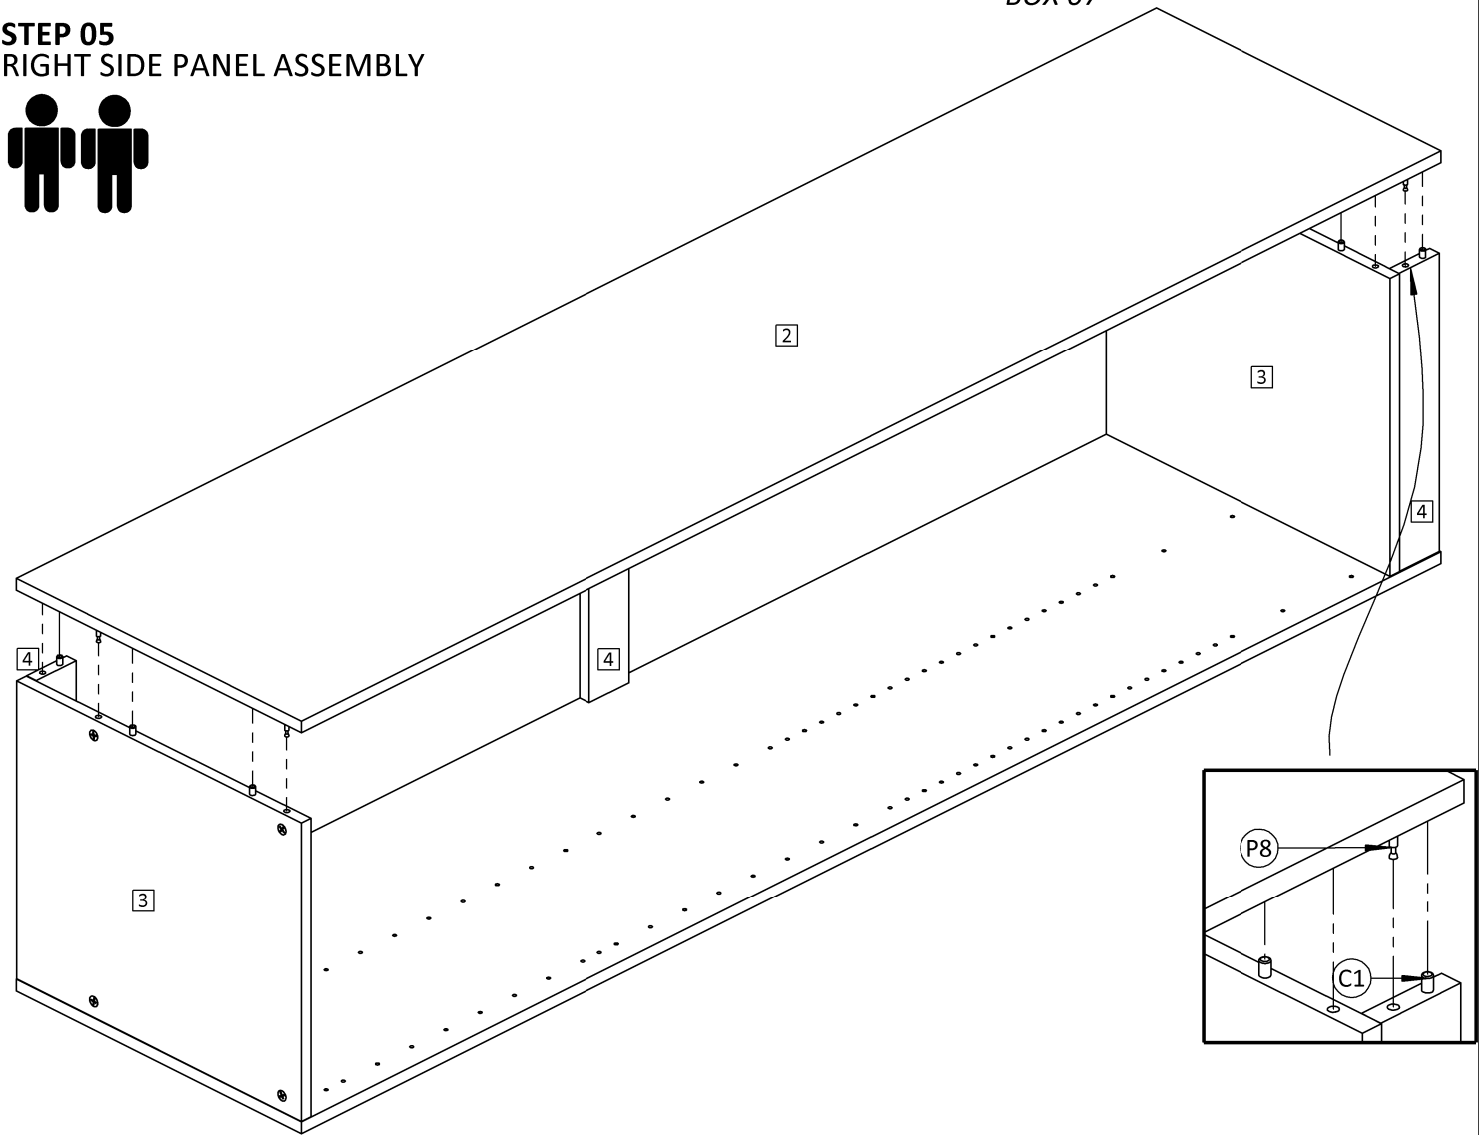


DRAWLERS ASSEMBLY

PART NUMBER 6 - SMALL DRAWLER

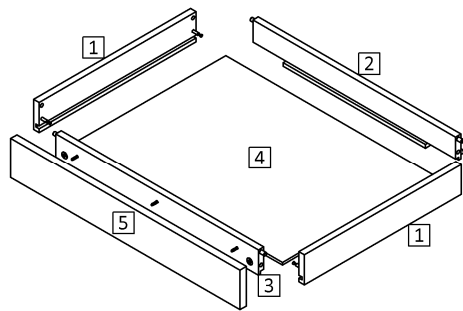

| DRAWLERS<br>HARDWARES | 21                 | 08         | 16              | 16       | 28                  |
|-----------------------|--------------------|------------|-----------------|----------|---------------------|
|                       |                    |            |                 |          |                     |
|                       | SCREW 9/64 X 1 1/4 | SLIDER PIN | CAM LOCK SCREWS | CAM LOCK | DOWEL 5/16 X 1 3/16 |


STEP 06  
PREPARATION OF DRAWER SIDE PANNELS

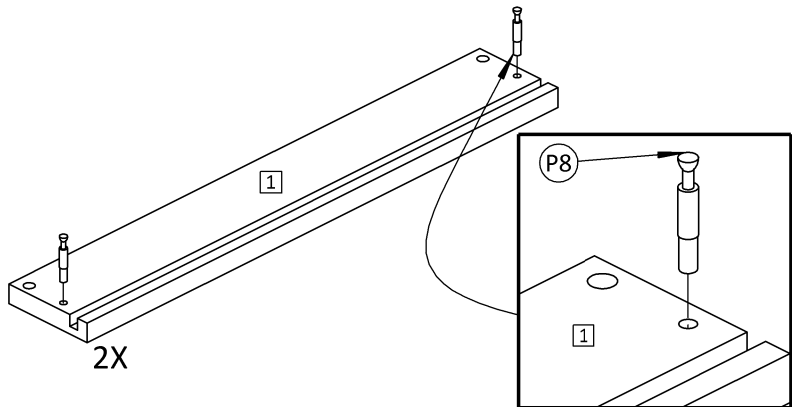

| PART LIST   |     |                     |
|-------------|-----|---------------------|
| PART NUMBER | QTY | DESCRIPTION:        |
| 1           | 2   | DRAWER SIDE PANEL   |
| 2           | 1   | DRAWER BACK PANEL   |
| 3           | 1   | DRAWER INSIDE FRONT |
| 4           | 1   | DRAWER BOTTOM PANEL |
| 5           | 1   | DRAWER FRONT        |

## STEP 07

PREPARATION OF DRAWER BACK PANNEL  
AND DRAWER INSIDE FRONT

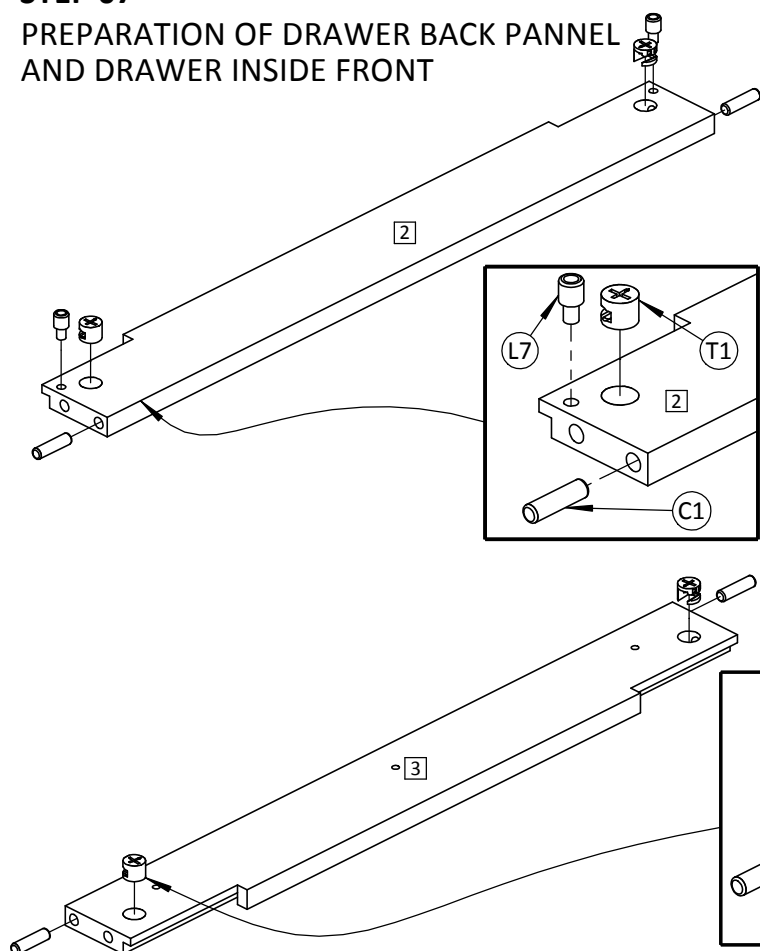


## ASSEMBLY INSTRUCTIONS

BOX 07


## STEP 08

DRAWER ASSEMBLY

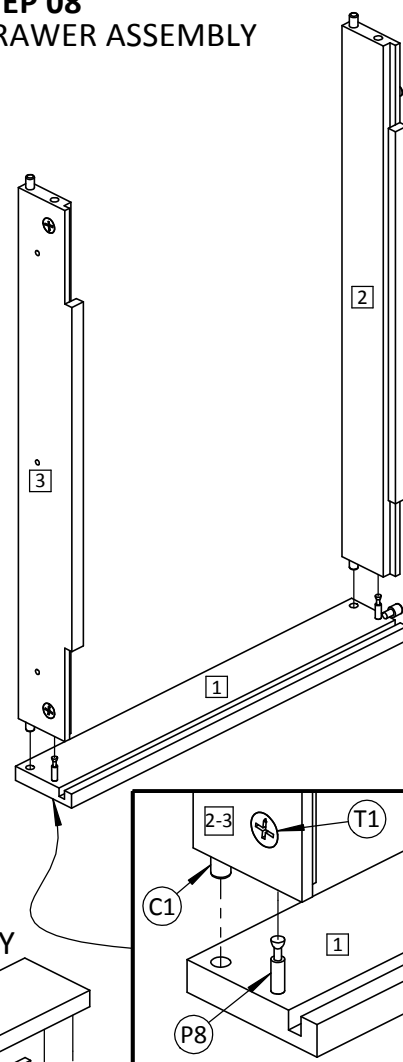


## STEP 09

BACK PANNEL ASSEMBLY

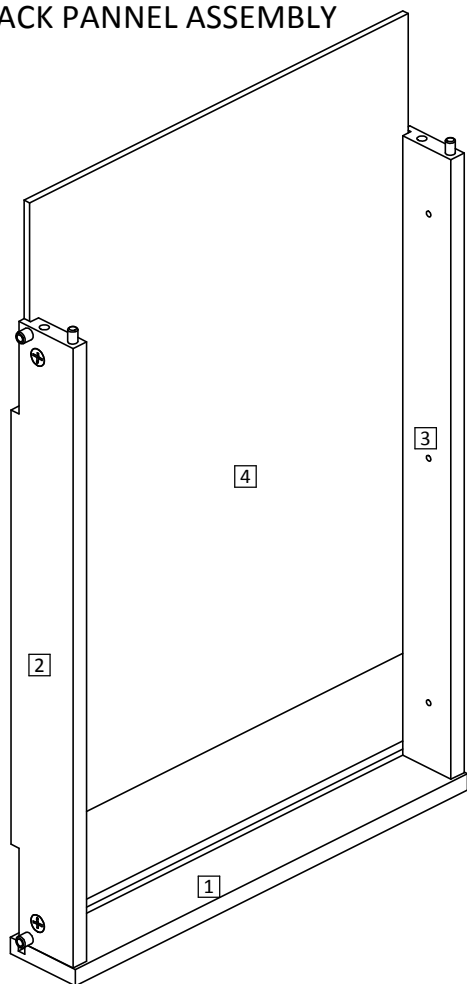

## STEP 10



RIGHT SIDE PANNEL ASSEMBLY

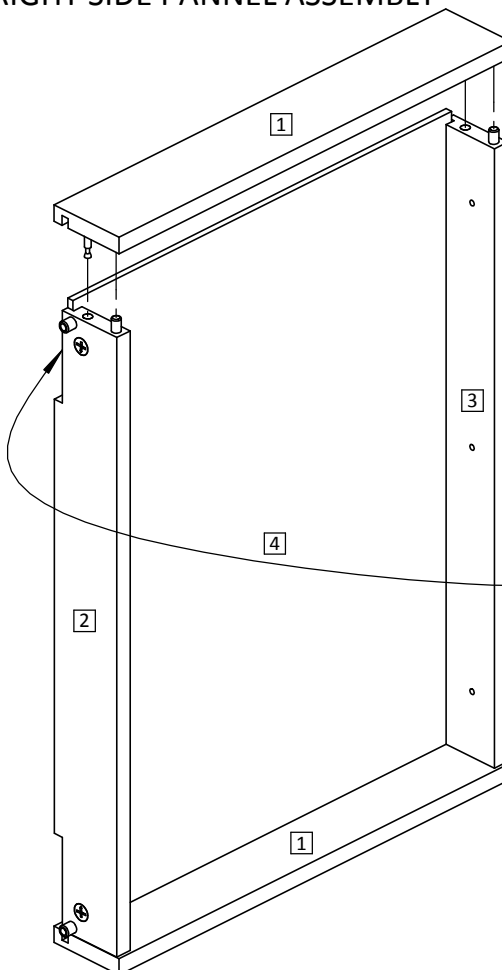

**STEP 11**  
ASSEMBLING FRONT POSITION


**ASSEMBLY INSTRUCTIONS**  
BOX 07

**DRAWER BACK VIEW**

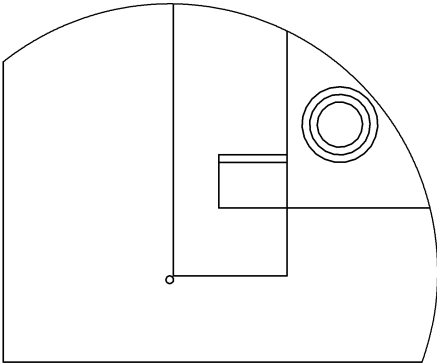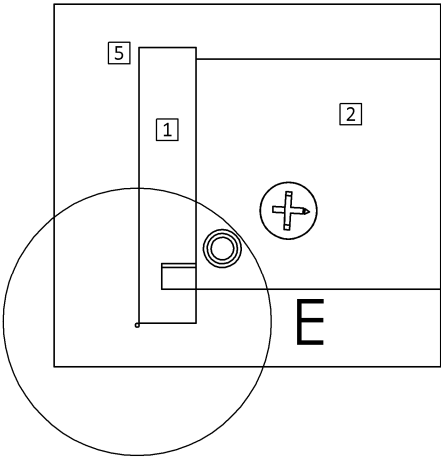


DETALHE E

**STEP 12**  
DRAWER FRONT ASSEMBLY

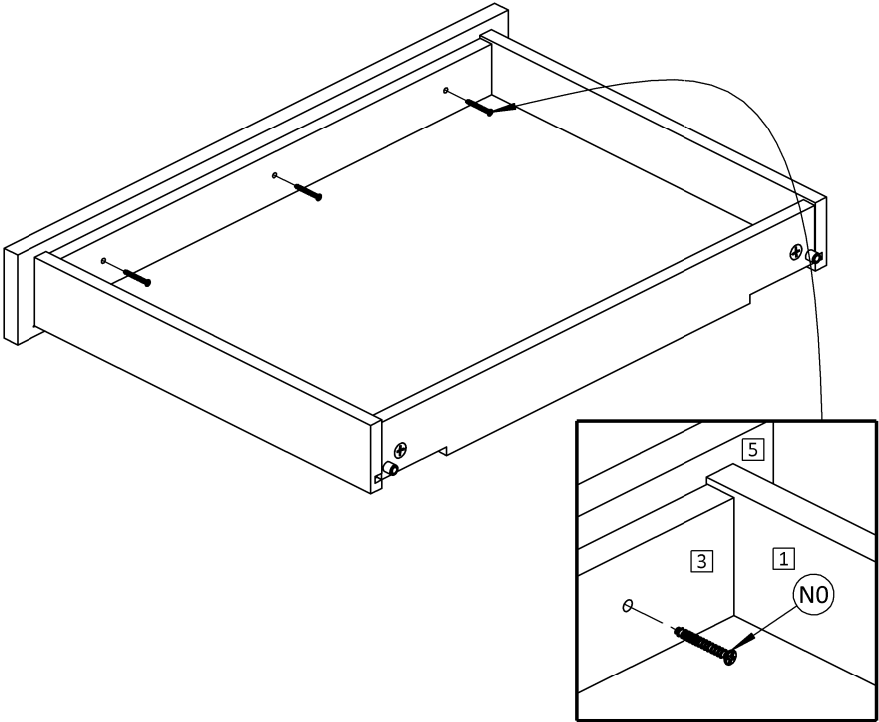


**PART NUMBER 7 - REGULAR DRAWLER**

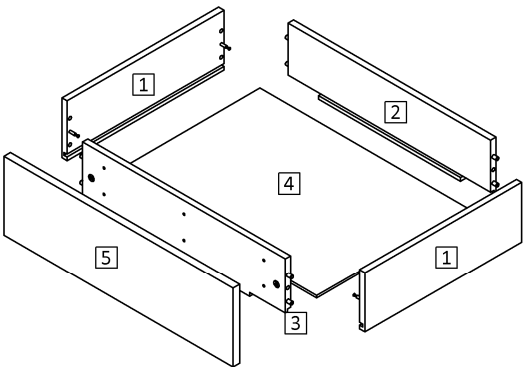


| PART LIST   |     |                     |
|-------------|-----|---------------------|
| PART NUMBER | QTD | DESCRIPTION         |
| 1           | 2   | DRAWER SIDE PANEL   |
| 2           | 1   | DRAWER BACK PANEL   |
| 3           | 1   | DRAWER INSIDE FRONT |
| 4           | 1   | DRAWER BOTTOM PANEL |
| 5           | 1   | DRAWER FRONT        |

**STEP 13**  
PREPARATION OF DRAWER SIDE PANNELS

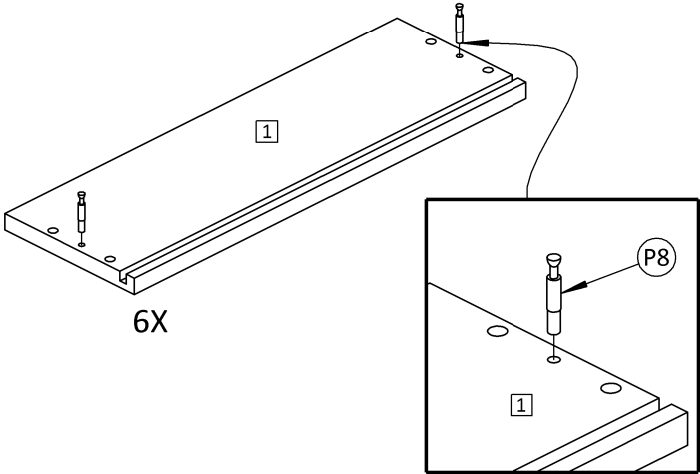


**STEP 14**  
**PREPARATION OF DRAWER BACK PANNEL**  
**AND DRAWER INSIDE FRONT**

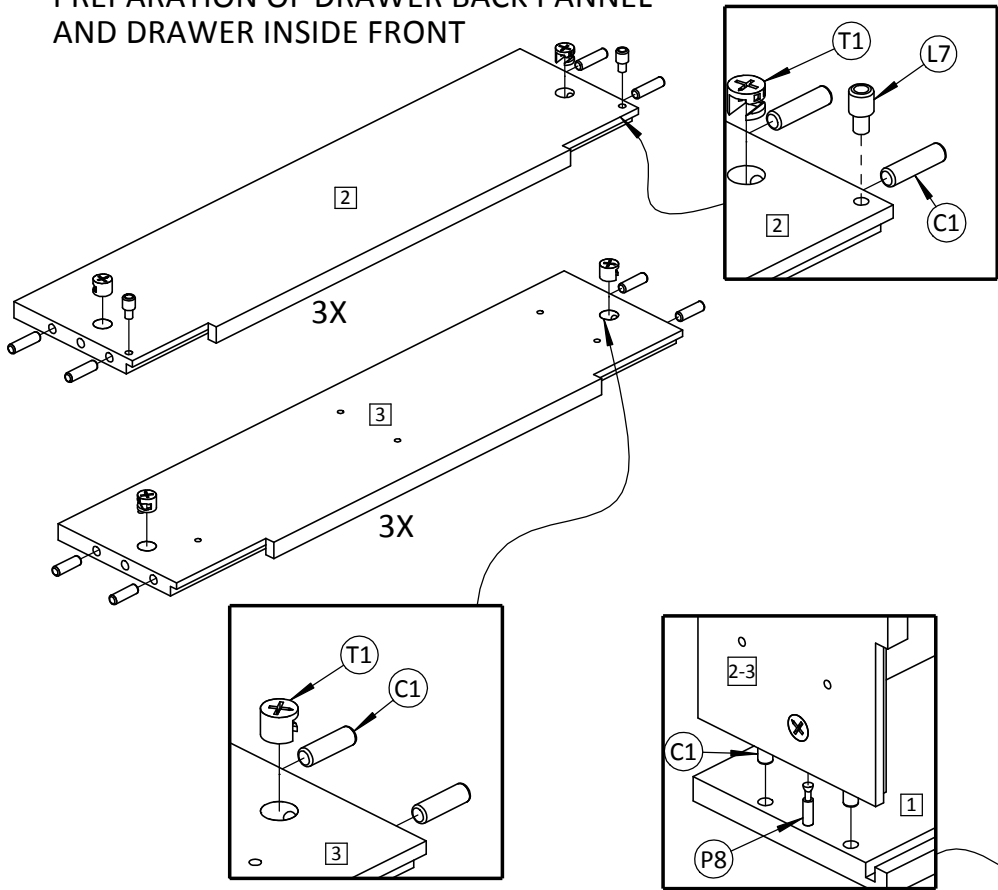


**ASSEMBLY INSTRUCTIONS**  
**BOX 07**


**STEP 15**  
**DRAWER ASSEMBLY**

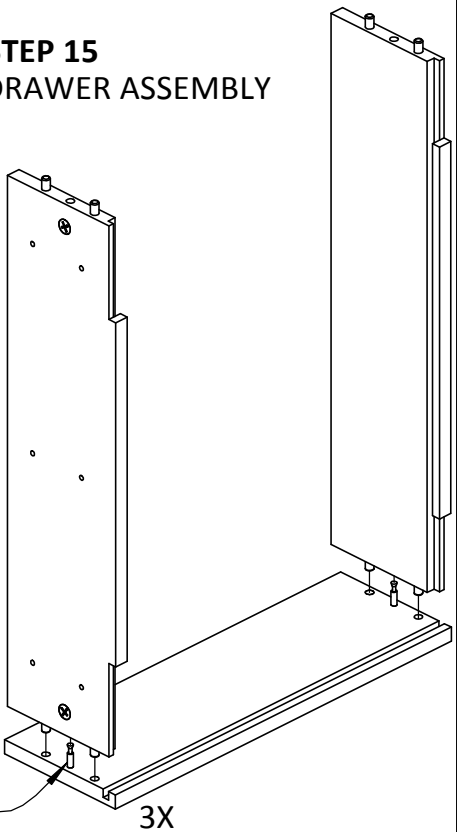

**STEP 16**  
**BACK PANNEL ASSEMBLY**

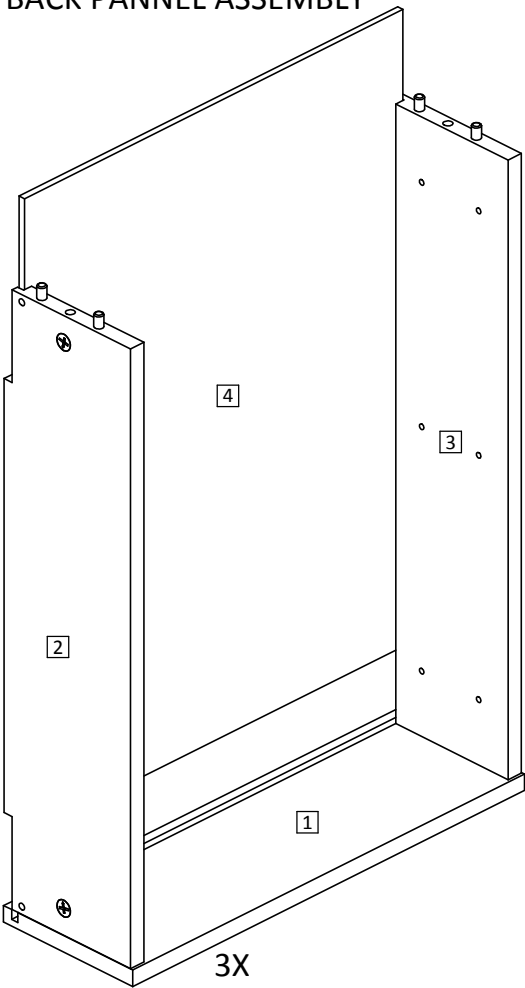



**STEP 17**  
**RIGHT SIDE PANNEL ASSEMBLY**

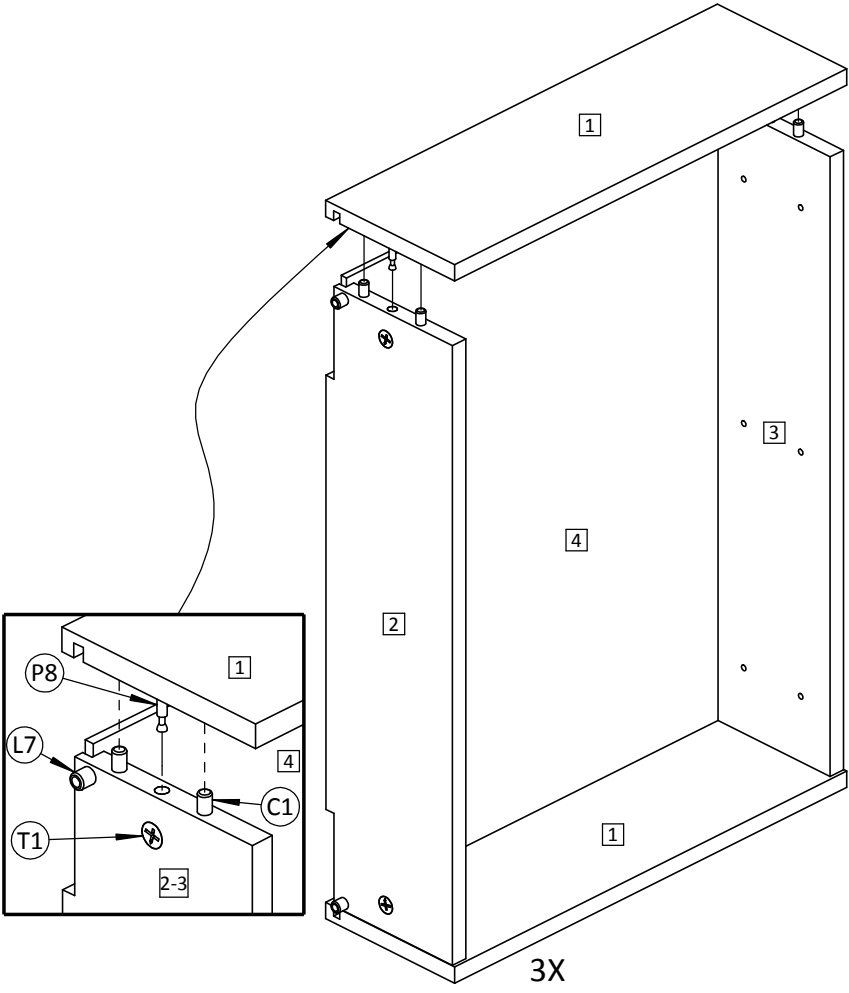

**STEP 18**  
ASSEMBLING FRONT POSITION



**ASSEMBLY INSTRUCTIONS**  
BOX 07

**DRAWER BACK VIEW**

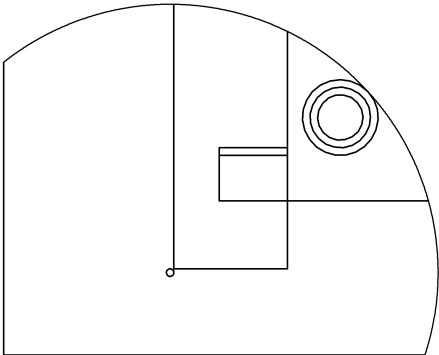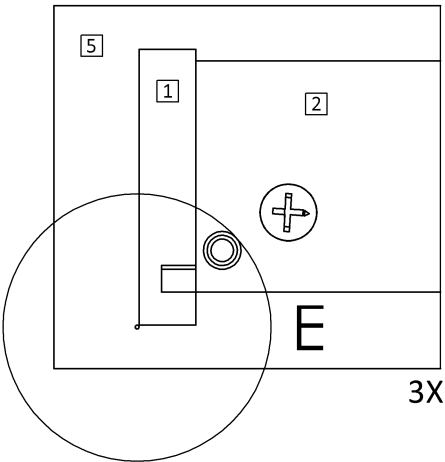

DETALHE E

**STEP 19**  
DRAWER FRONT ASSEMBLY

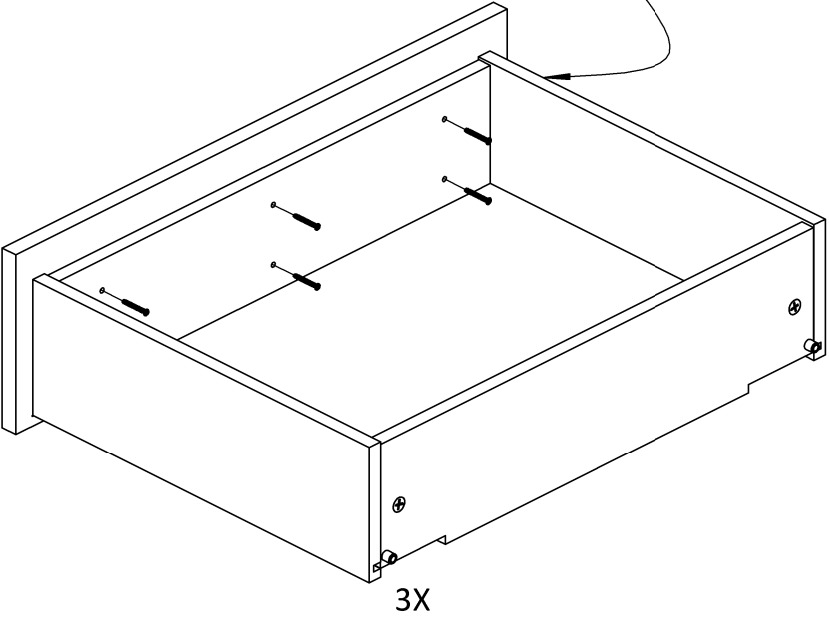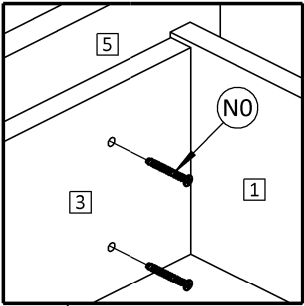

## STEP 20 FIXING THE CABINET ON THE WALL

## FIXING THE CABINET




DRILL THE WALL  
USING A DRILLER  
IN ORDER TO  
INSERT THE PLUG



## ASSEMBLY INSTRUCTIONS BOX 07




IT IS REQUIRED TO FIX  
THE CABINETS ON THE WALL  
RISK OF FALL!



| FIXING<br>CABINET<br>HARDWARES | 06                 | 06                | 06           | 08                 |
|--------------------------------|--------------------|-------------------|--------------|--------------------|
|                                |                    |                   |              |                    |
|                                | SCREW 5/32 X 2 3/4 | SCREW 1/4 X 2 3/4 | PLASTIC PLUG | SCREW 9/64 X 1 1/4 |

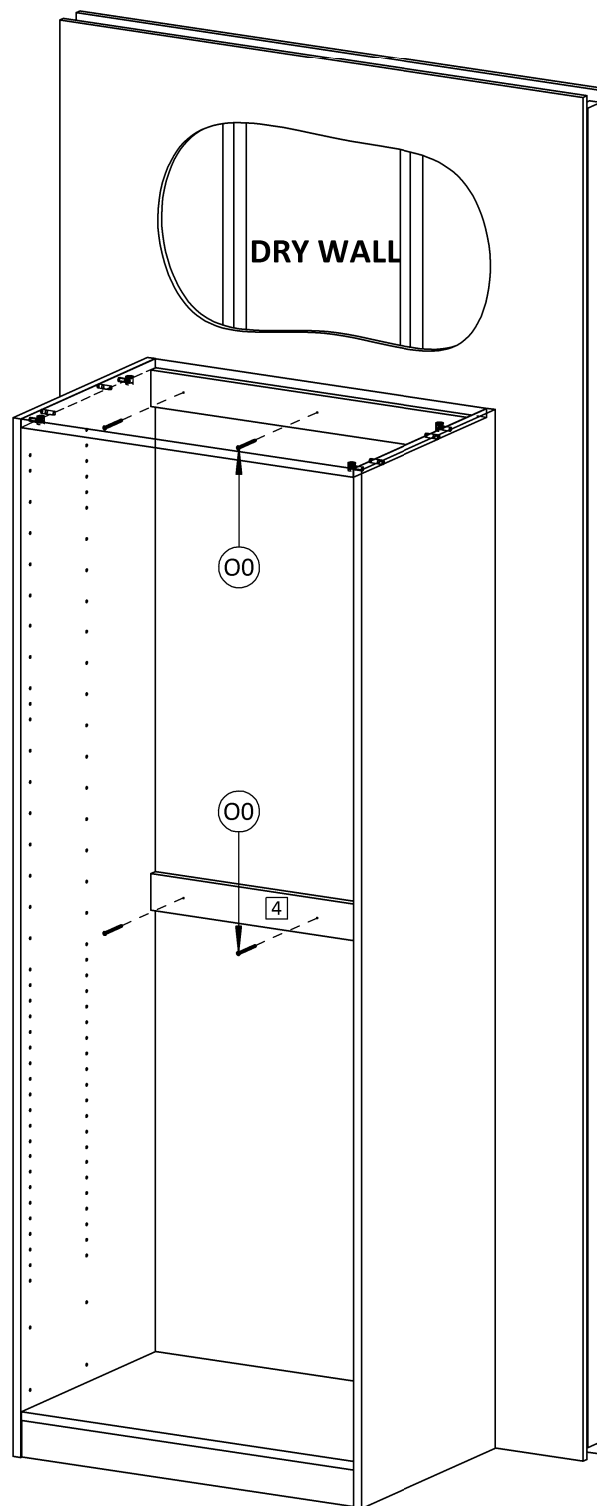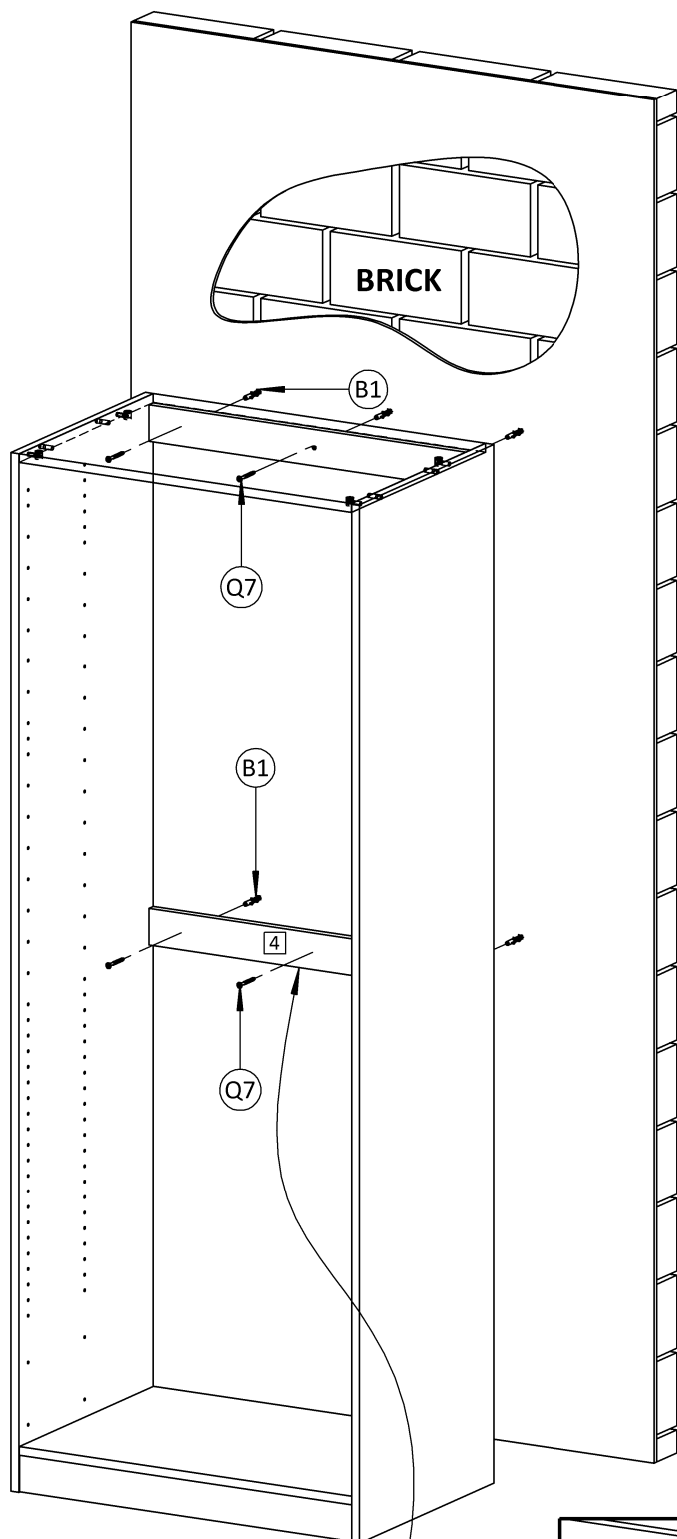

SCREW IN THE CENTER  
OF THE FRAME



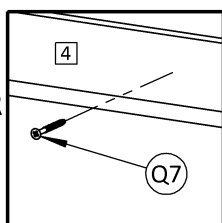


THE CABINET MUST ALWAYS BE  
SUPPORTED ON THE GROUND



**STEP 21**  
**JOINING THE CABINETS**





**ASSEMBLY INSTRUCTIONS**  
**BOX 07**

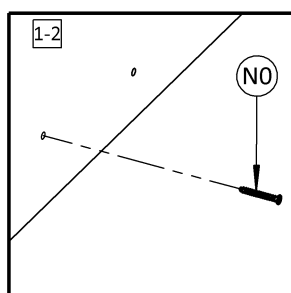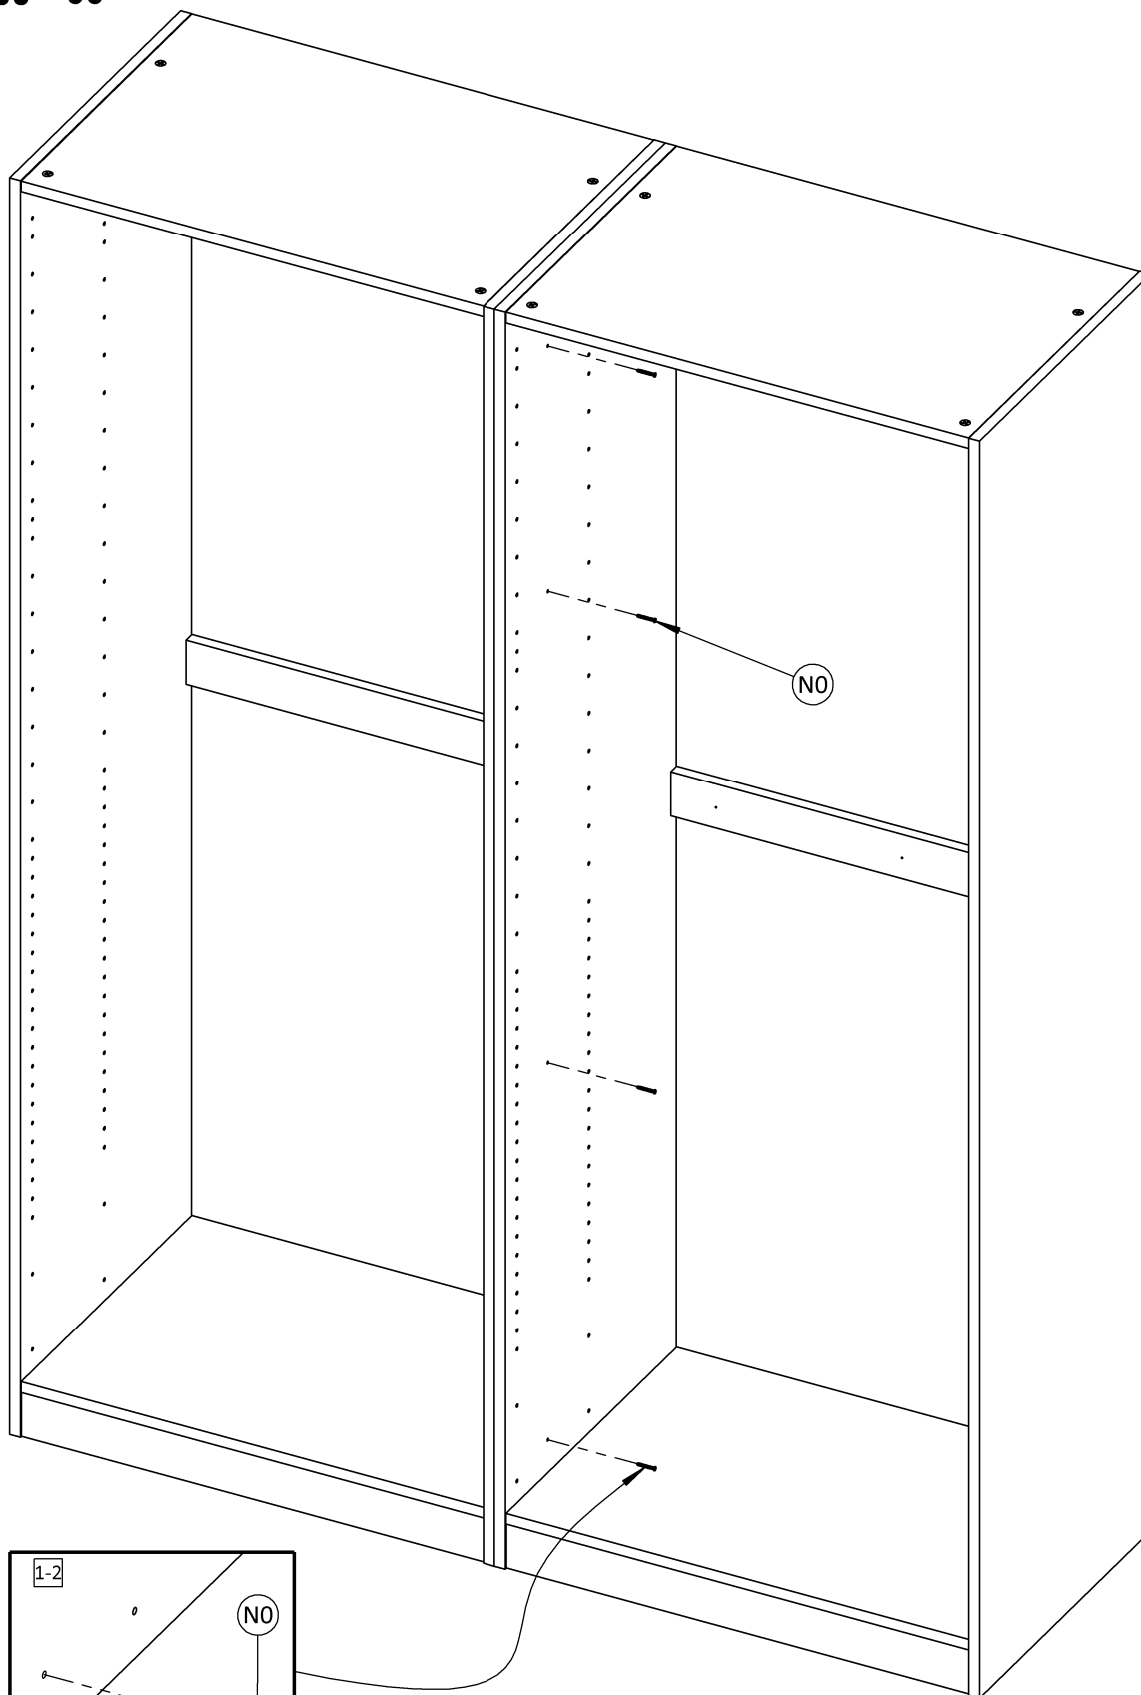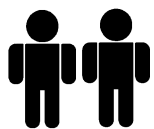

## FIXING THE SHELVES INSIDE THE CABINET



### ASSEMBLY INSTRUCTIONS BOX 07

#### STEP 22 FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

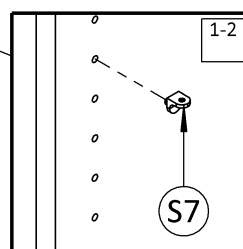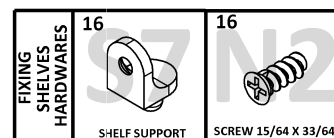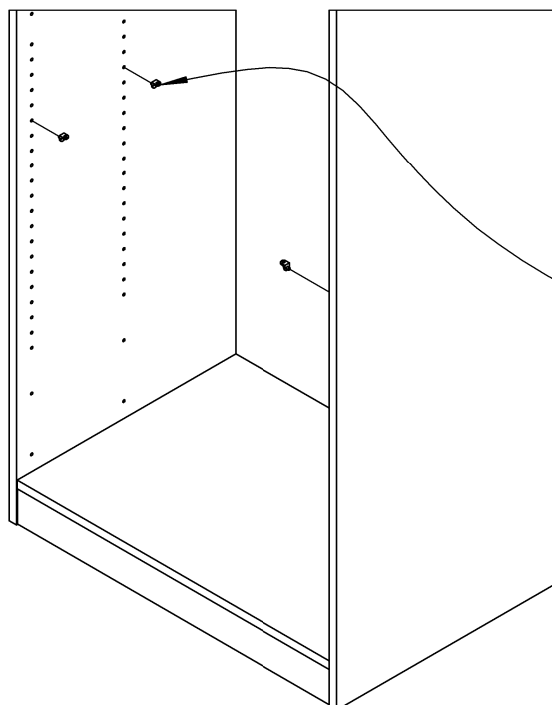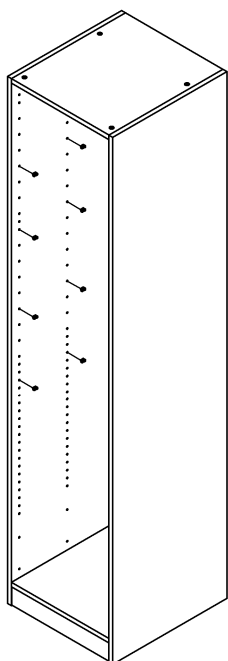

#### STEP 23 FIT THE SHELF ON THE CLOSET



SCREW THE SHELF  
ON THE SUPPORT

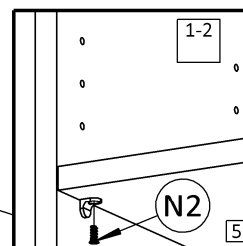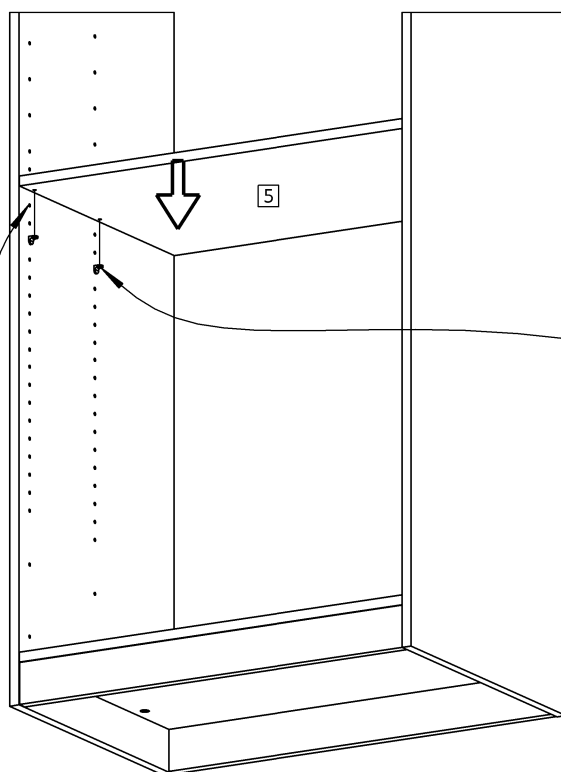

## FIXING THE DRAWERS INSIDE THE CABINET



### STEP 24

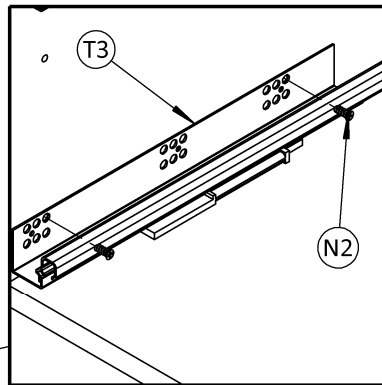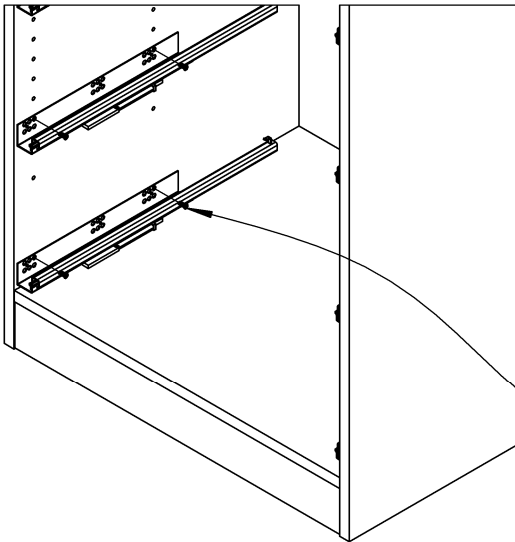FIX THE SLIDERS ON THE CLOSET





## ASSEMBLY INSTRUCTIONS

BOX 07


|                                |   |  |
|--------------------------------|---|--|
| FIXING<br>DRAWERS<br>HARDWARES | 04 (PAIR)   | 16   |
|                                | <br>SLIDER | <br>SCREW 15/64 X 33/64 |

### STEP 25

FIT THE DRAWERS ON THE SLIDERS

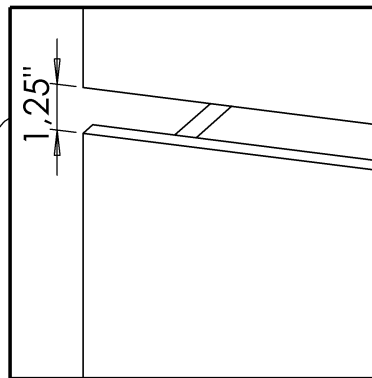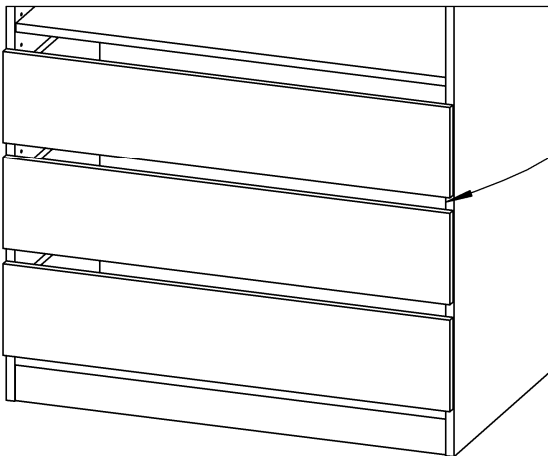

1,25" BETWEEN DRAWERS

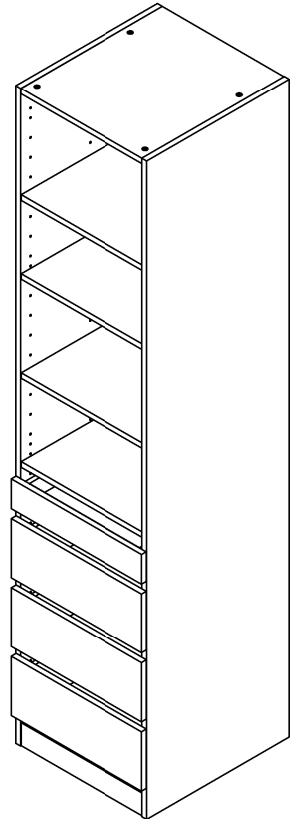

### STEP 26

FIT THE PIN DRAWERS INTO THE SLIDER

