

## Step 1 – Clean The Door Frame

*Wipe away any dirt or debris from the surface you plan to adhere the magnetic mesh to. Grime can prevent the adhesive backing from securely attaching the mesh screen to the door frame. Use a slightly damp rag or disinfectant wipe.*




## Step 2 – Place Mesh On The Floor Velcro Up

*Spread out the mesh screen on the floor with the Velcro side facing up. The magnets should be aligned and attached. The mesh should be laid out as smoothly as possible. This will help to attach the Velcro strips evenly in the next step.*



## Step 3 – Attach Velcro Strips

*Attached the supplied Velcro strips to the top part and the sides without removing the white tape backing. Cut and make sure each Velcro strip runs the whole length of each side. Then remove the white backing tape from the top Velcro first. Then adhere the top of the mesh to the top of your door frame. Make sure the center of the top is slightly higher to the two sides.*

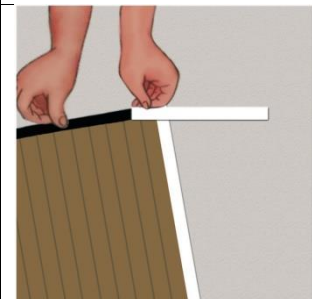

## Step 4 – Attach Completed Mesh Screen To Door

*Next remove the white backing tape from the left side and adhere it to the door frame. Then do the same thing to the right side. If the mesh doesn't close completely then the sides are too far apart. Just make some small adjustments to the sides and the magnets should close. For high traffic area's you can also use the supplied pins for extra support.*

