





# 5 Drawer Lateral File Cabinet Installation Instructions

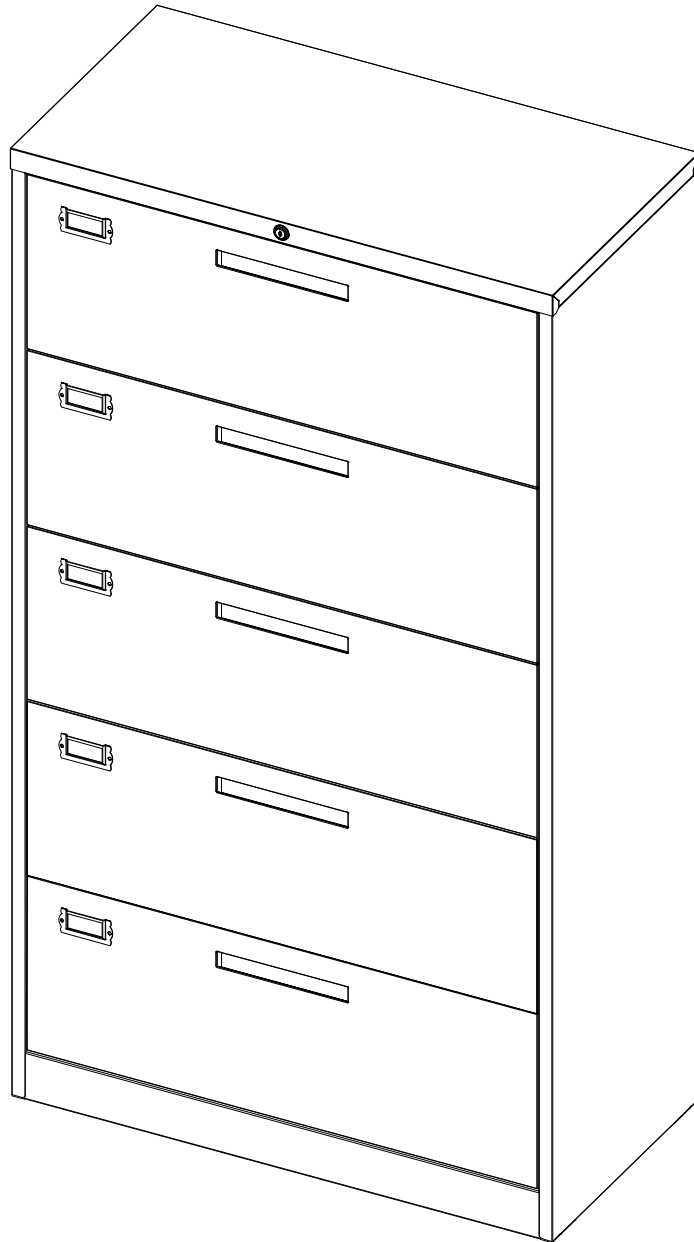


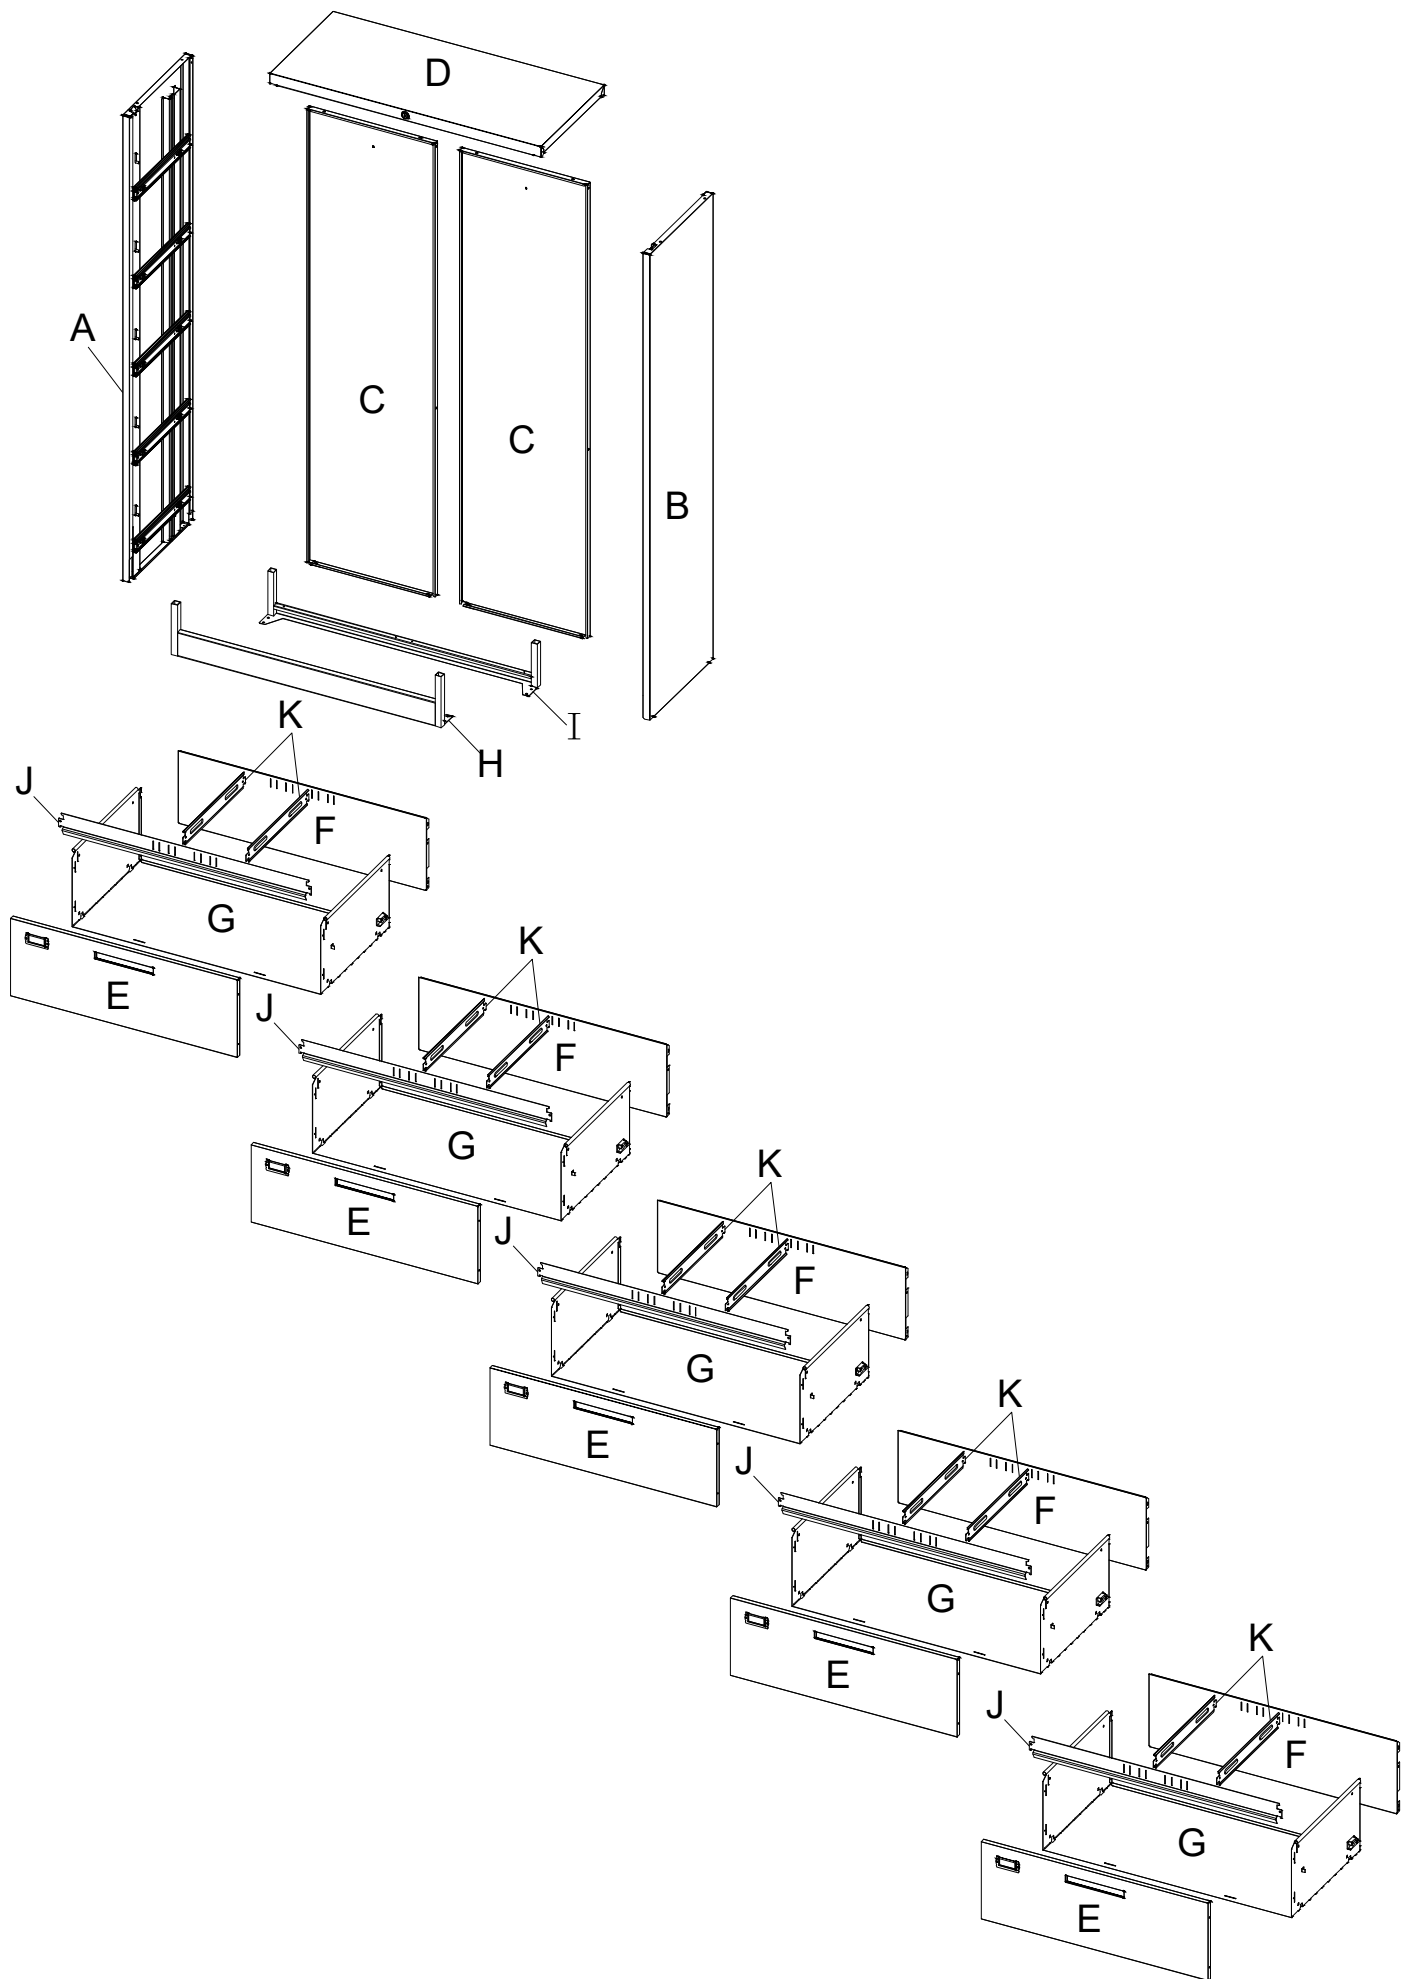


# ITEM: BOX-1/2


A×1

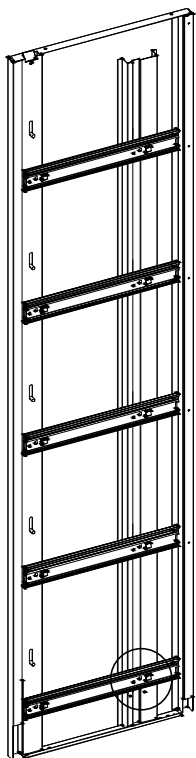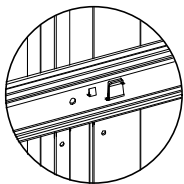


B×1

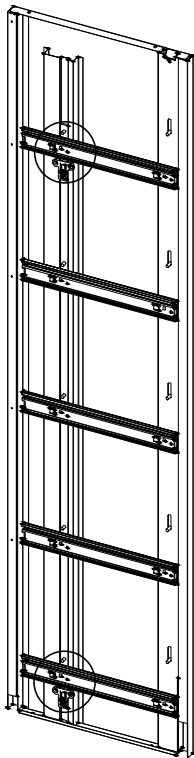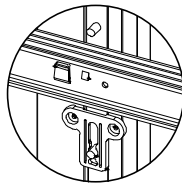


C×2

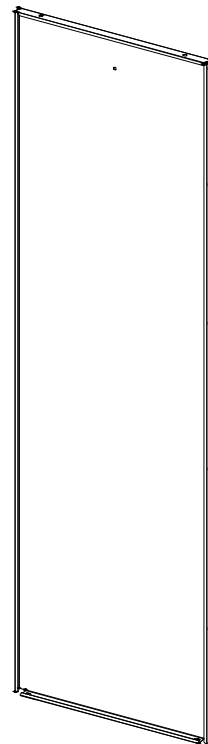

G×5

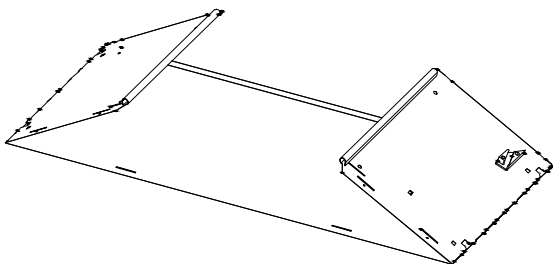


J×5

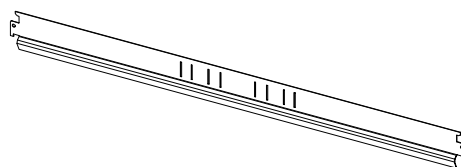


# ITEM: BOX-2/2


D×1

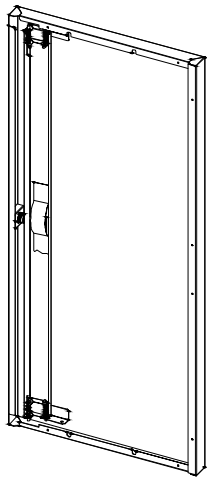


E×5

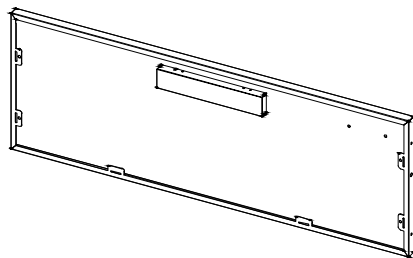


F×5

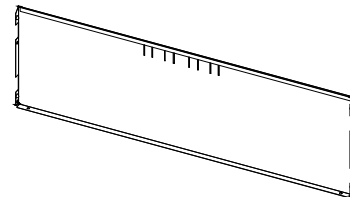


H×1

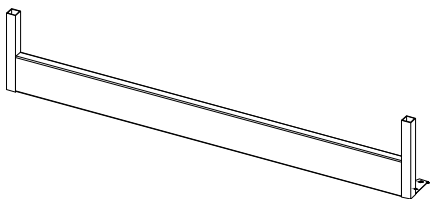


I×1

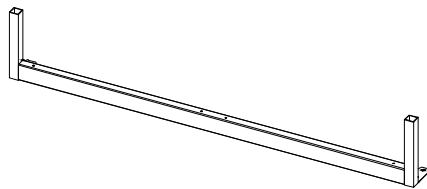


K×10




L×5

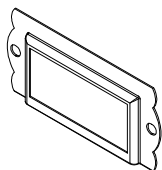


M×48



N×14





O×10




P×4



Q×2

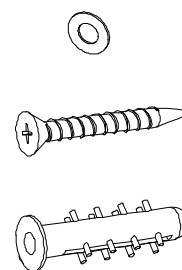


# step1

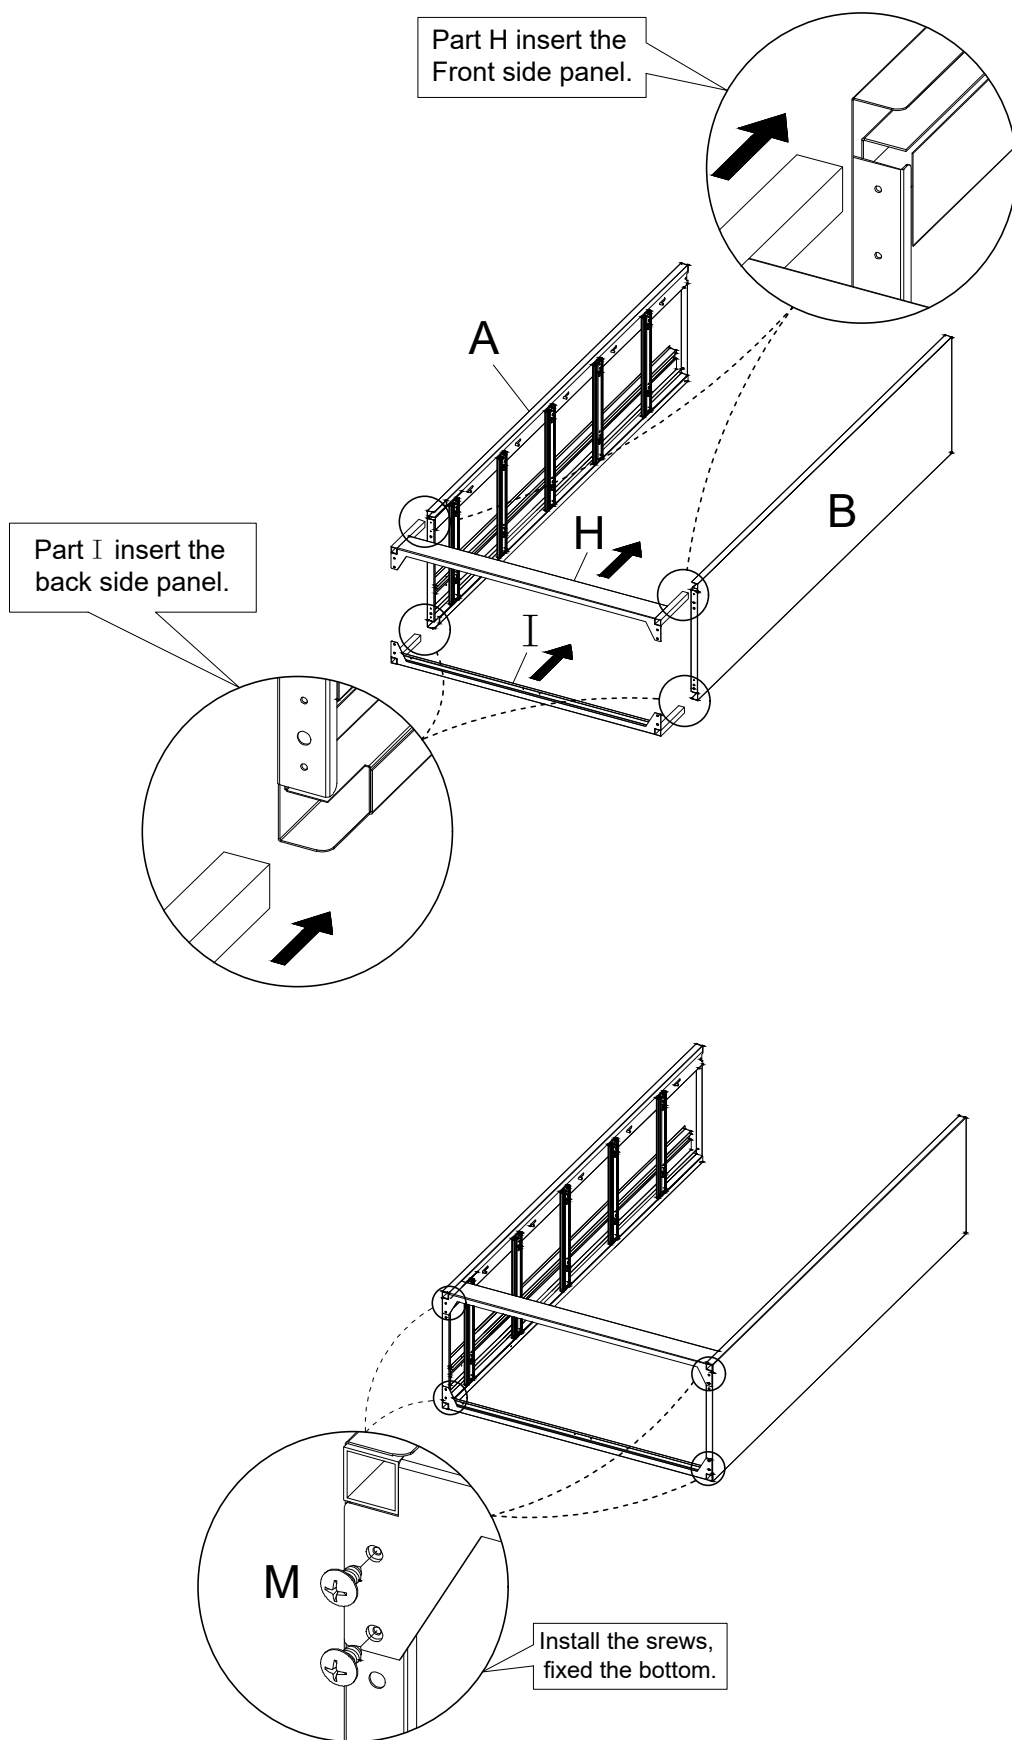


M×8

# step2

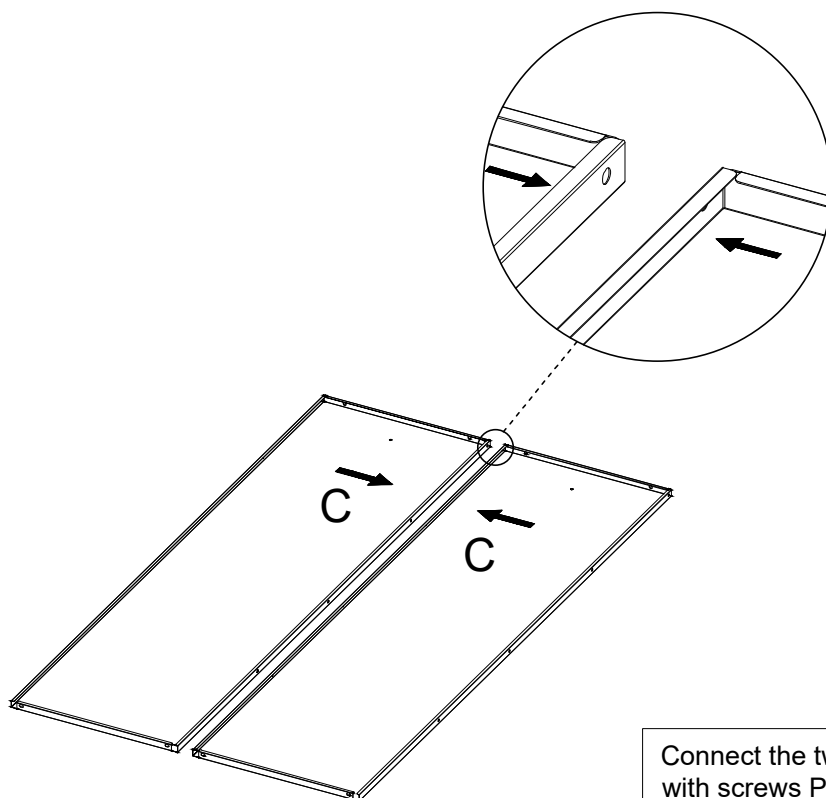

Connect the two back plates with screws P and N.

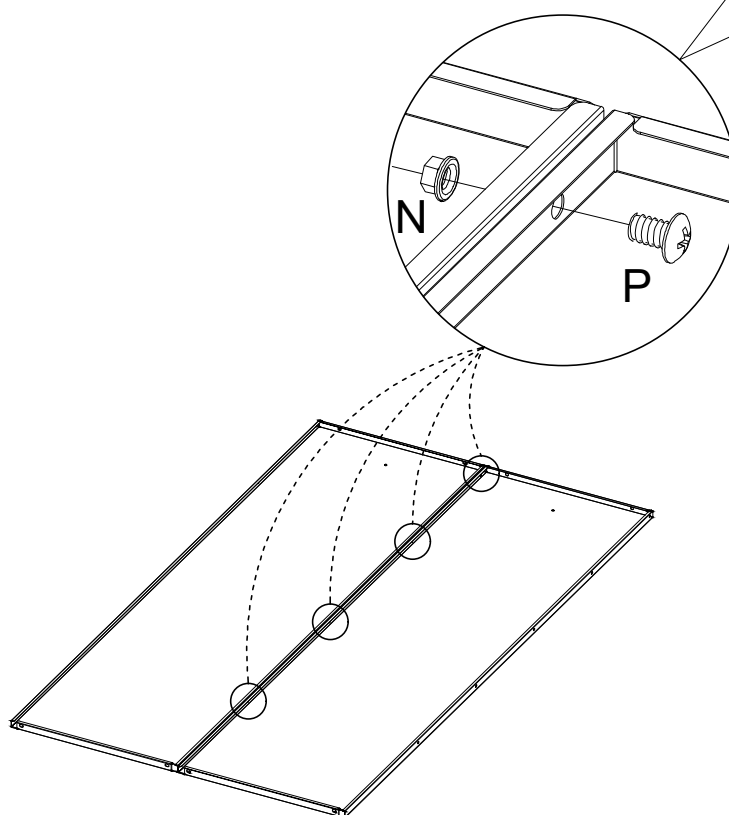


N×4







P×4

# step3

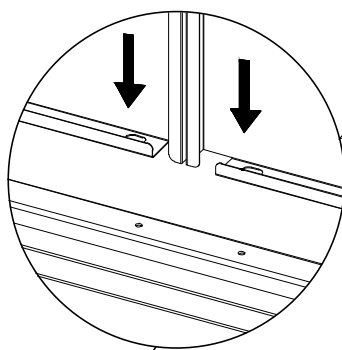




Insert the back plate assembled in the previous step as shown. Take care to distinguish between the top and bottom of the Back Plate.

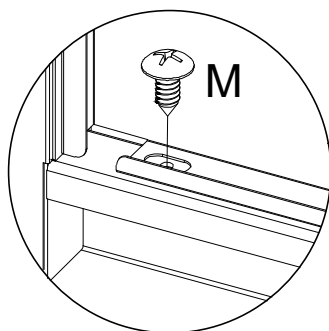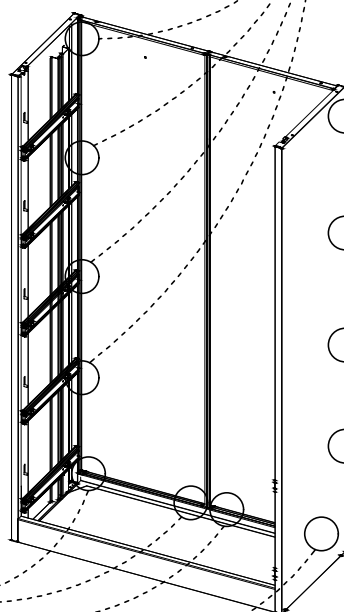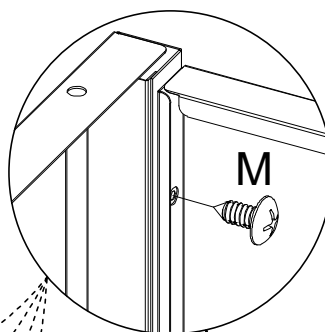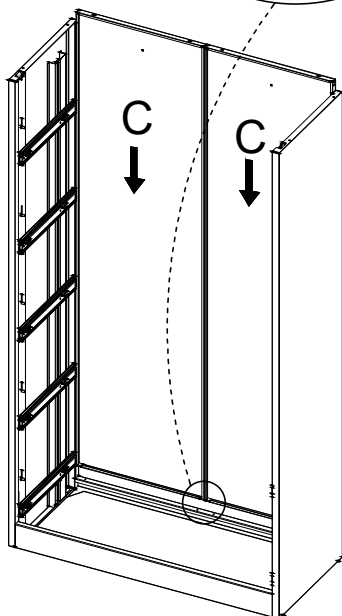

M×12


# step4

Tear off the tape, cut the ribbon, and take out the key.

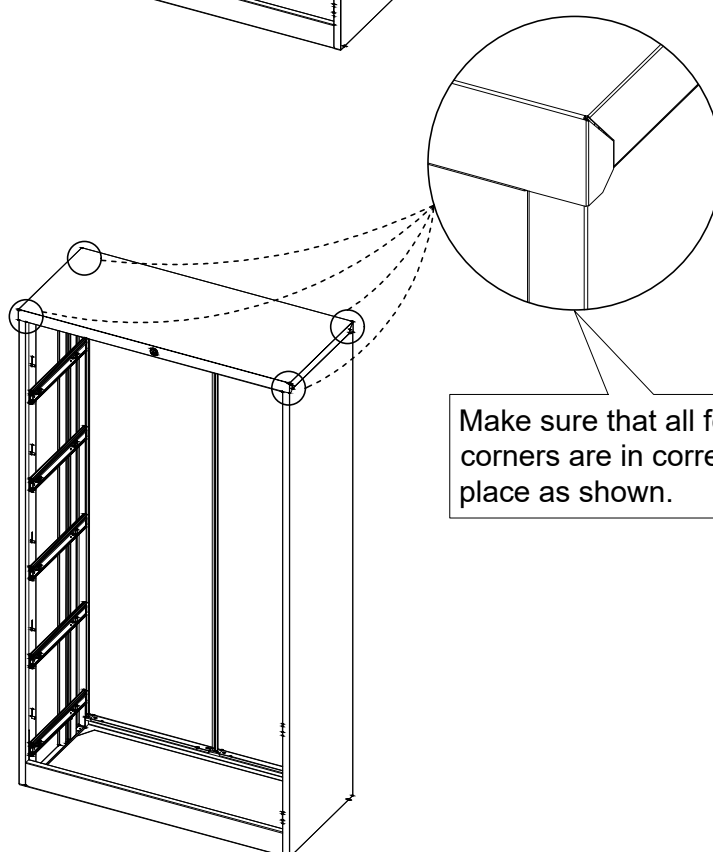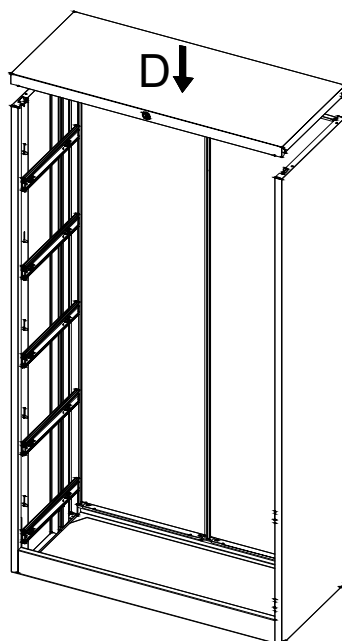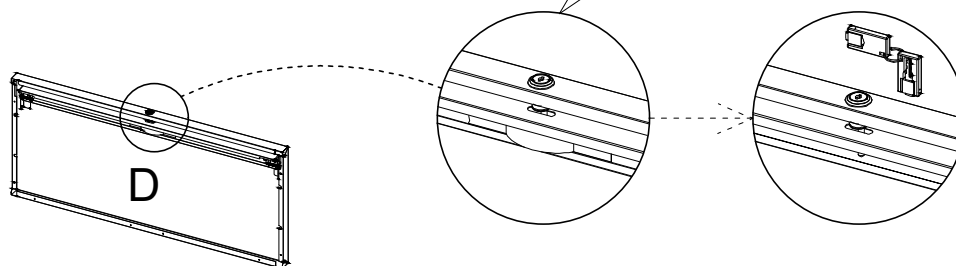


Make sure that all four corners are in correct place as shown.

# step5

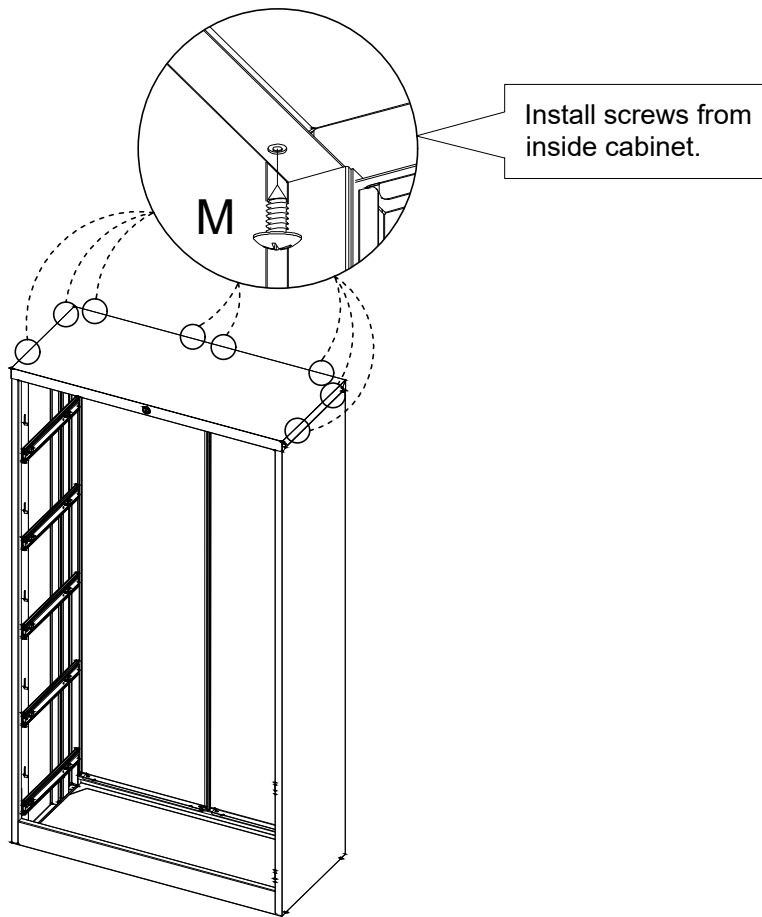



Insert the key removed from Step 4 into the lock hole and turn it clockwise 180°. The lock is now open.

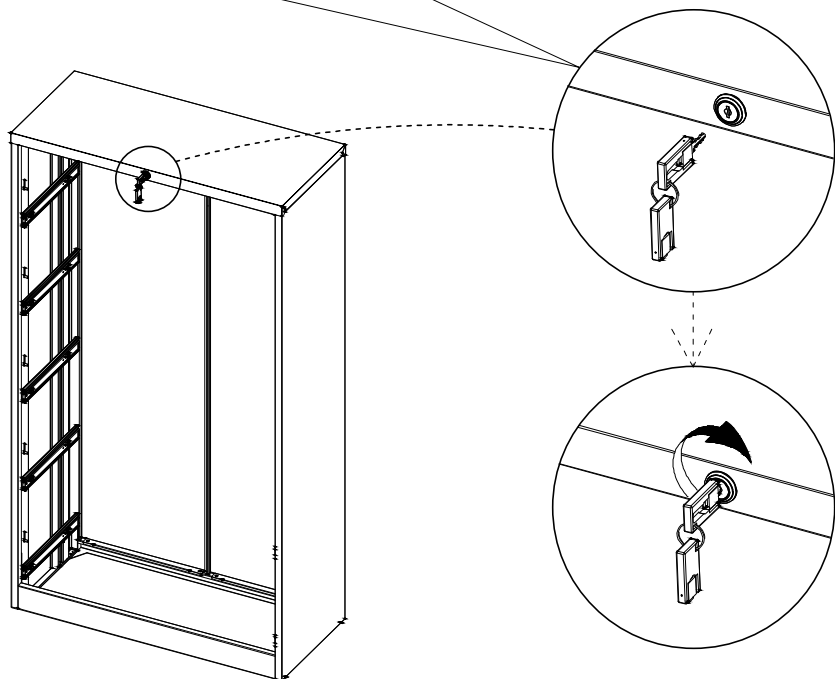



M×8

# step6

Pull the left lock lever up .

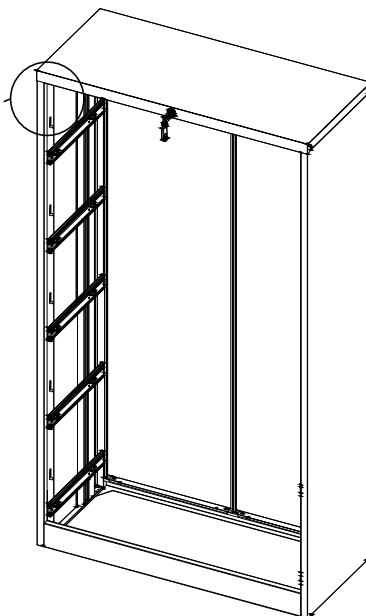
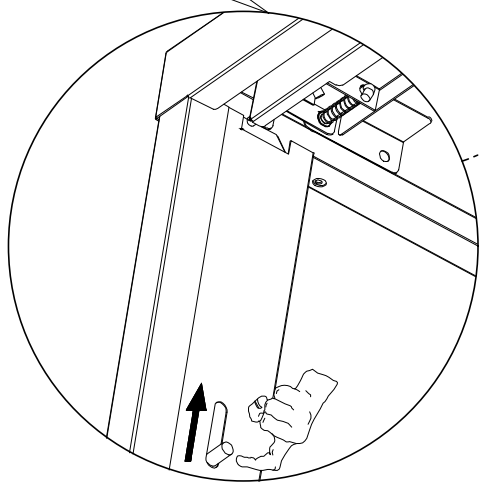


Pull the right lock lever up .

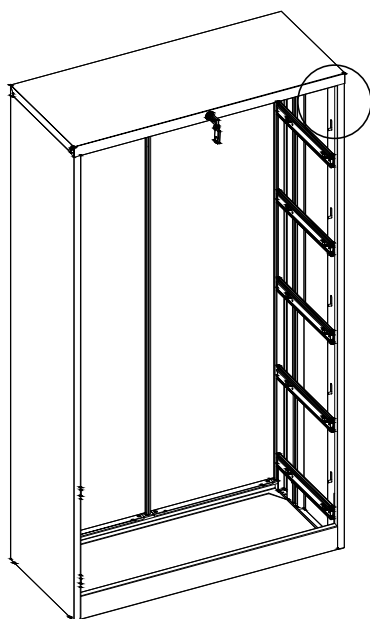
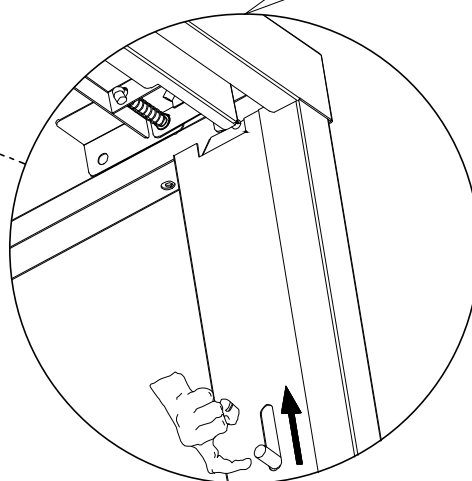


# step7

The cabinet can be fixed to the wall as needed.

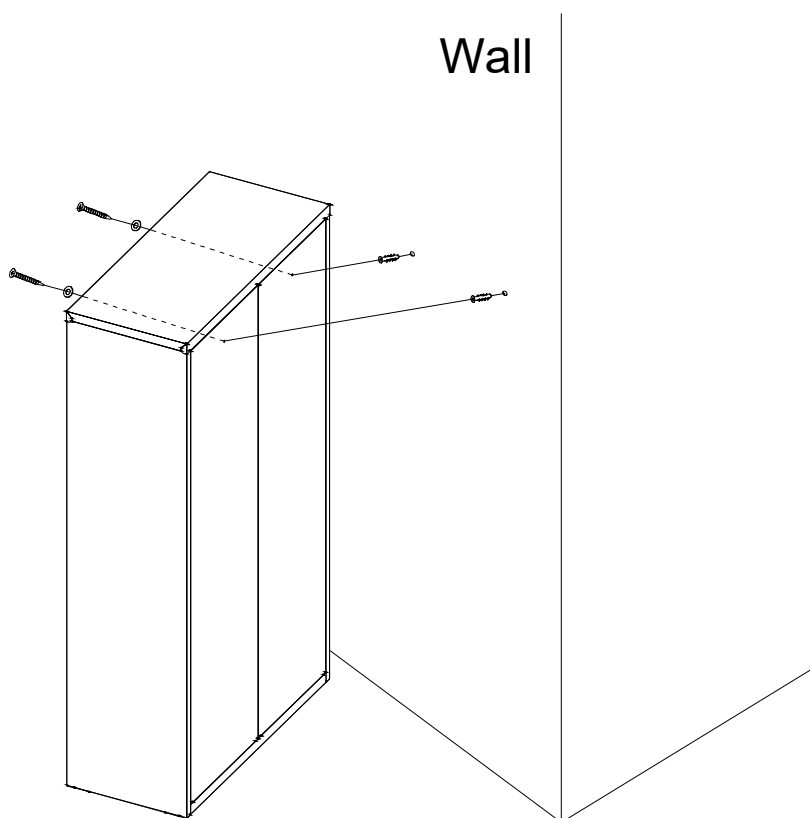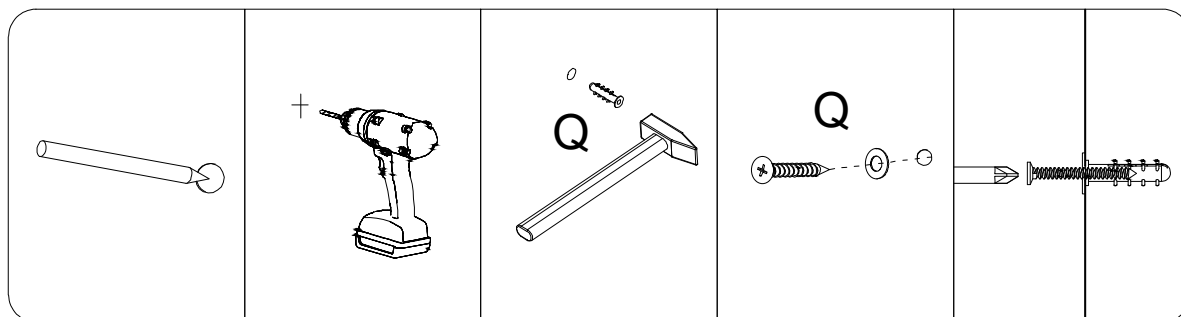

# step8

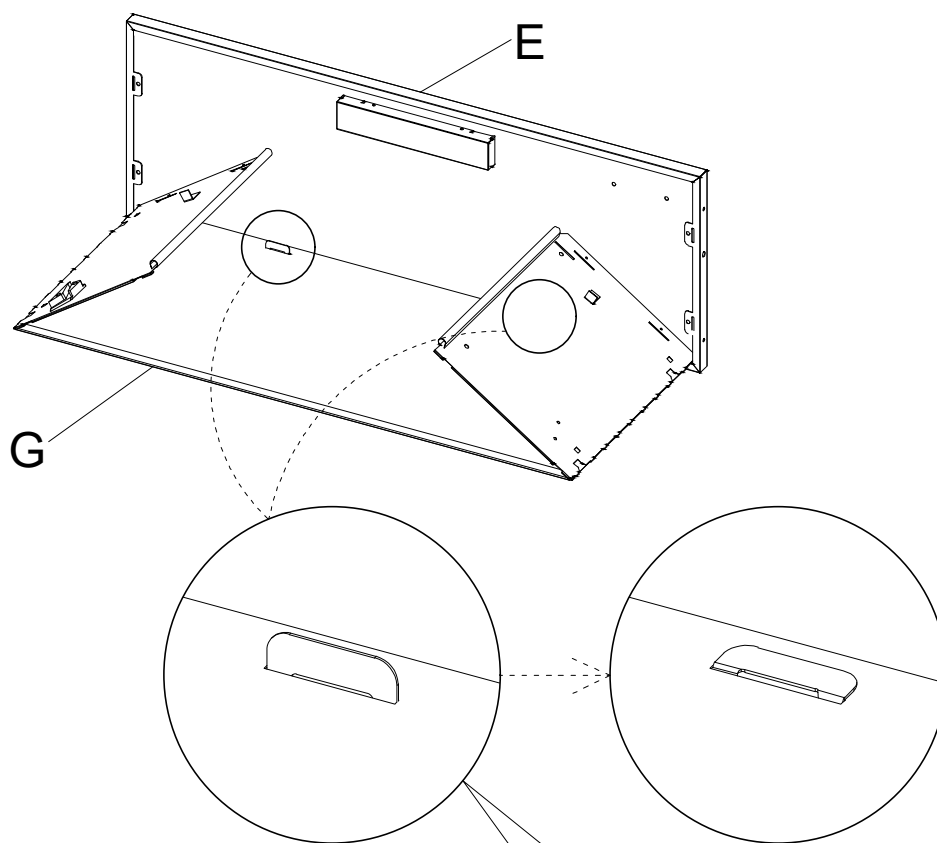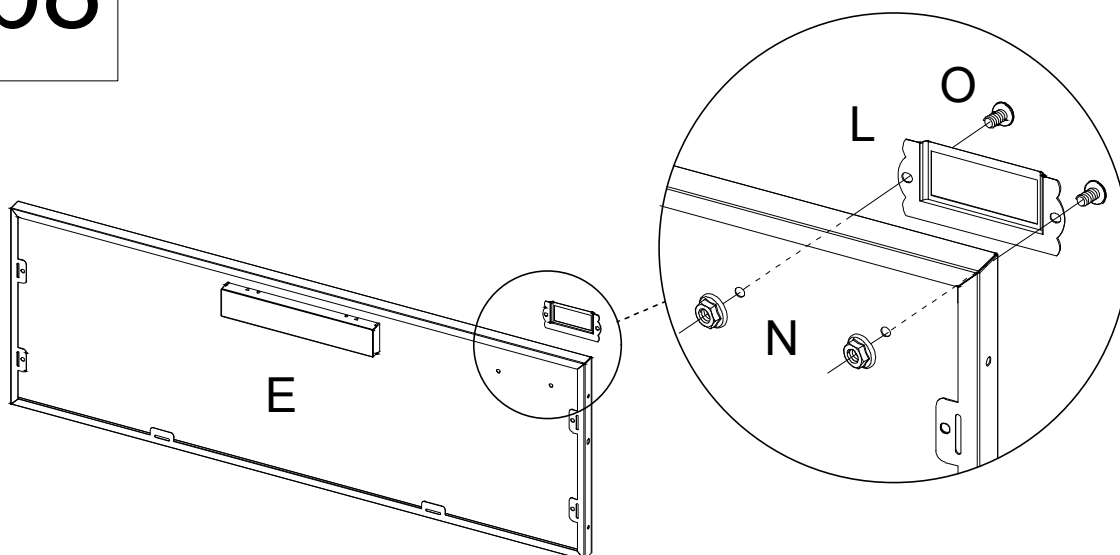

Install the drawer bend the buckle at the bottom position.



L×1




N×2




O×2

# step9

Bent the drawer to 90°

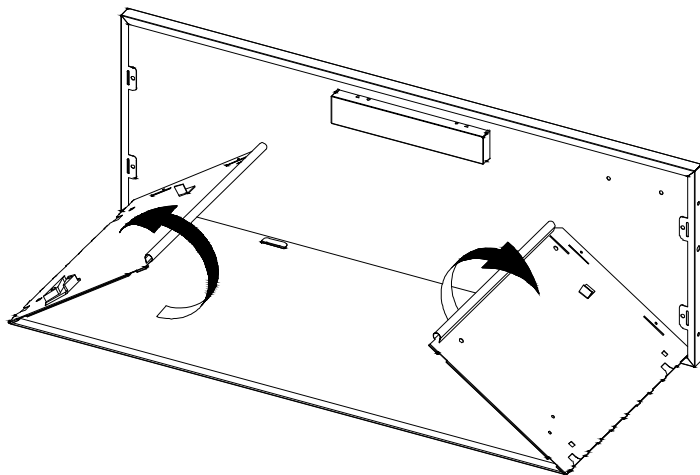


Bend the buckle.  
Install the screws.

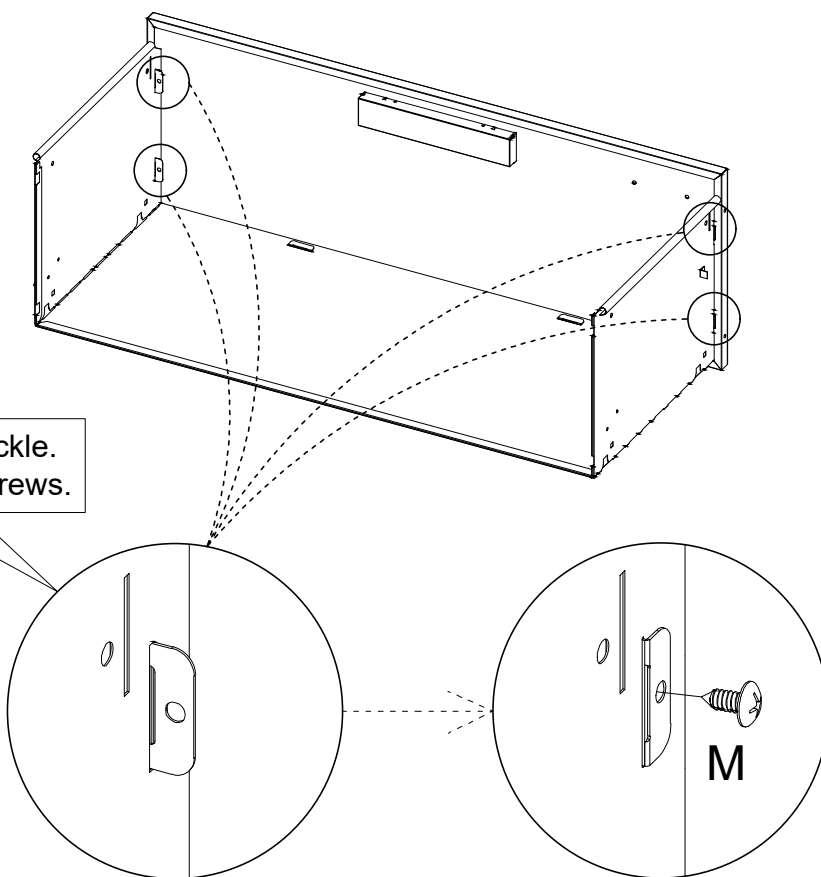


M×4


# step10

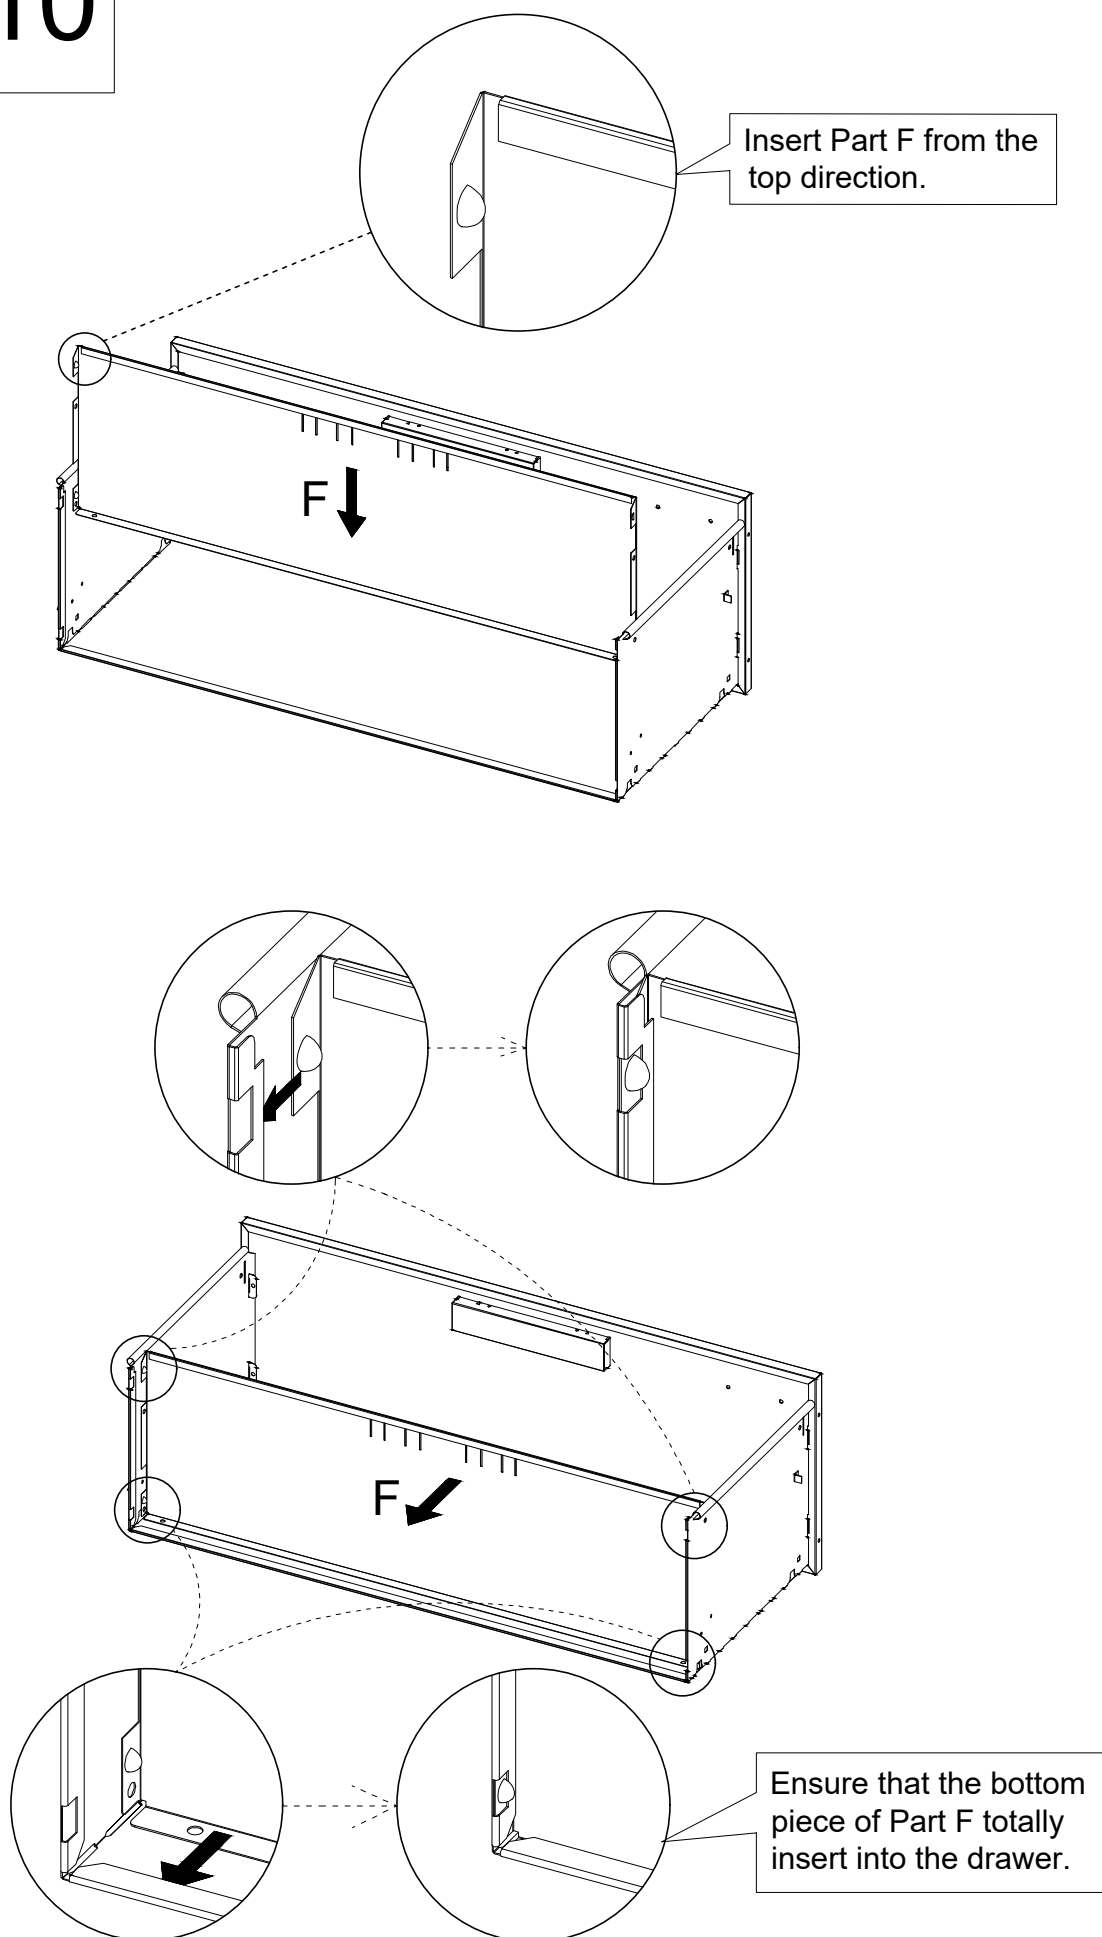




# step11

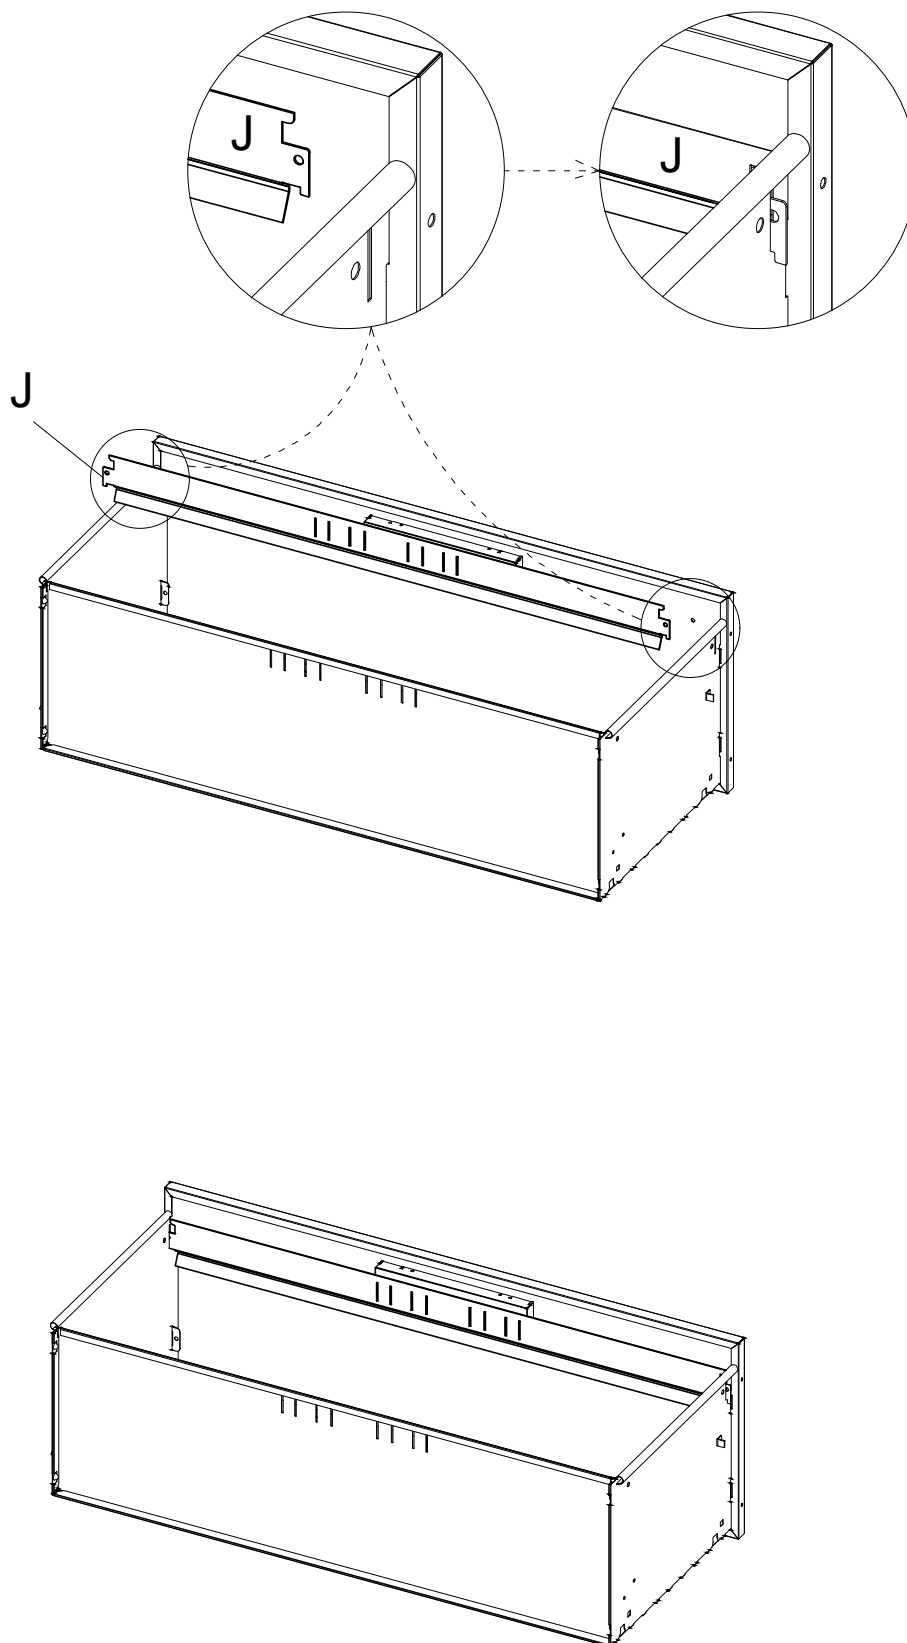

# step12


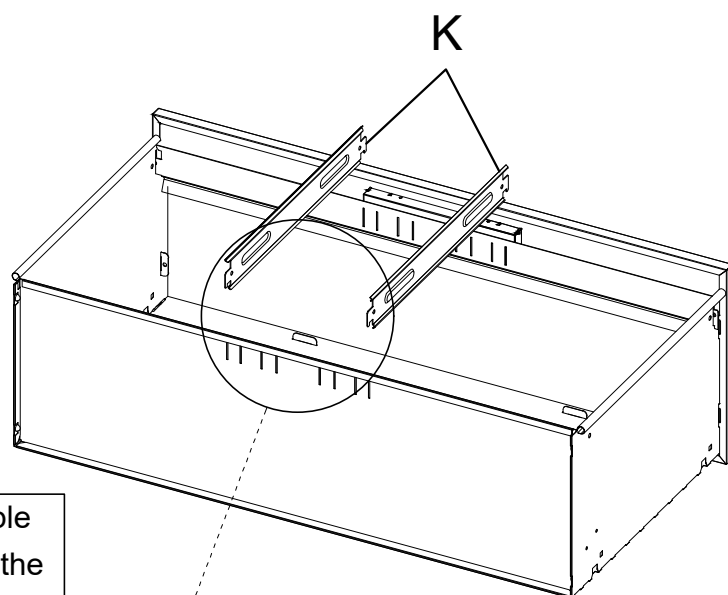


Choose the suitable hole according to the size of the folder.

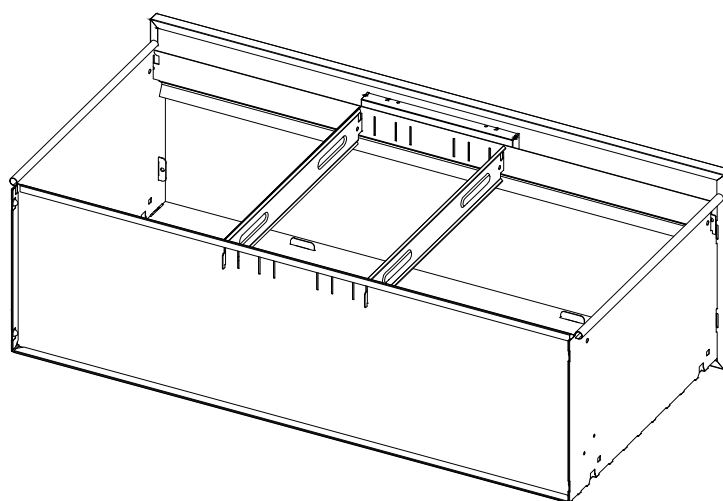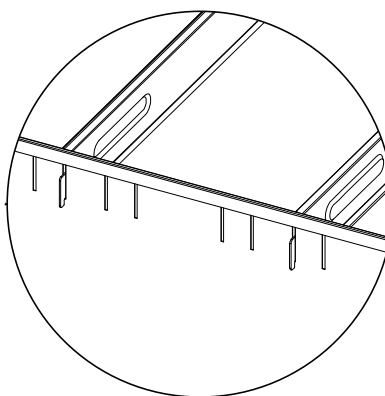
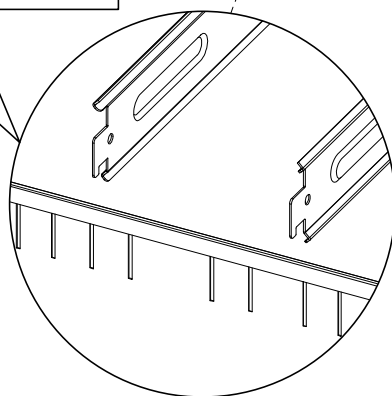


# step13

Pull out the two sliding rails at the arrow position of the cabinet completely.

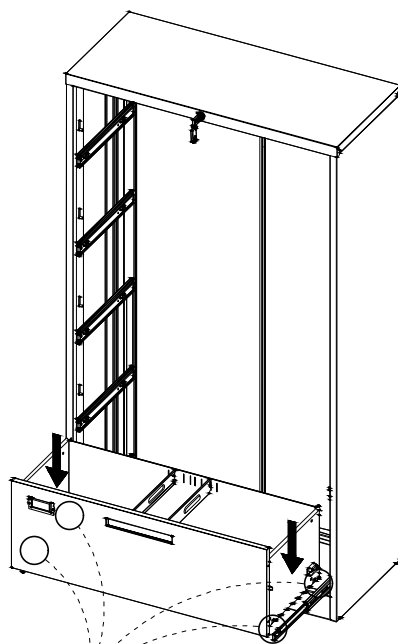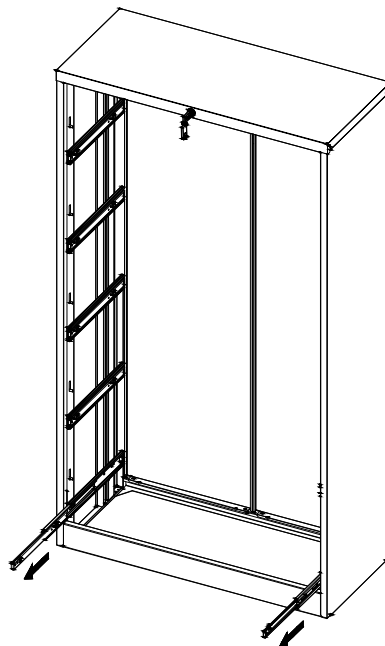

Snap the two holes on both sides of the drawer into the rail clips. Push down the drawer while pulling up the rails to snap it into place.

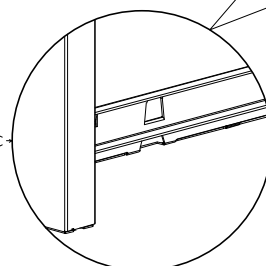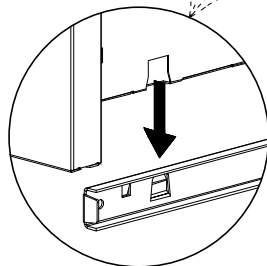



# step14

Install the other four drawers in the same way.

Possible problem: The drawer is too high to close.

It may be that the drawer and rails are not well connected, try reinstalling the drawer to fix it.

Note: The pushing of the top drawer will squeeze the spare key.

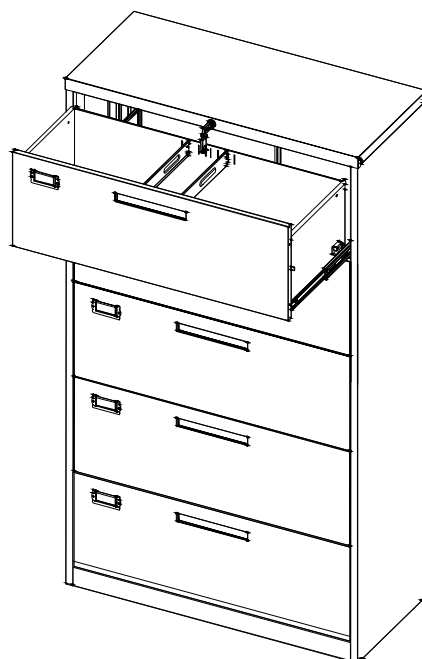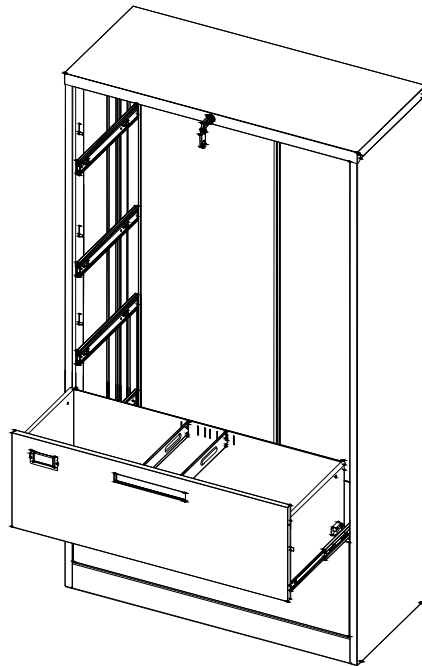

# step15

Turn the key 180° counterclockwise and the drawer is locked.

