
EVERMAGIN

Assembly Instructions

CBN240A

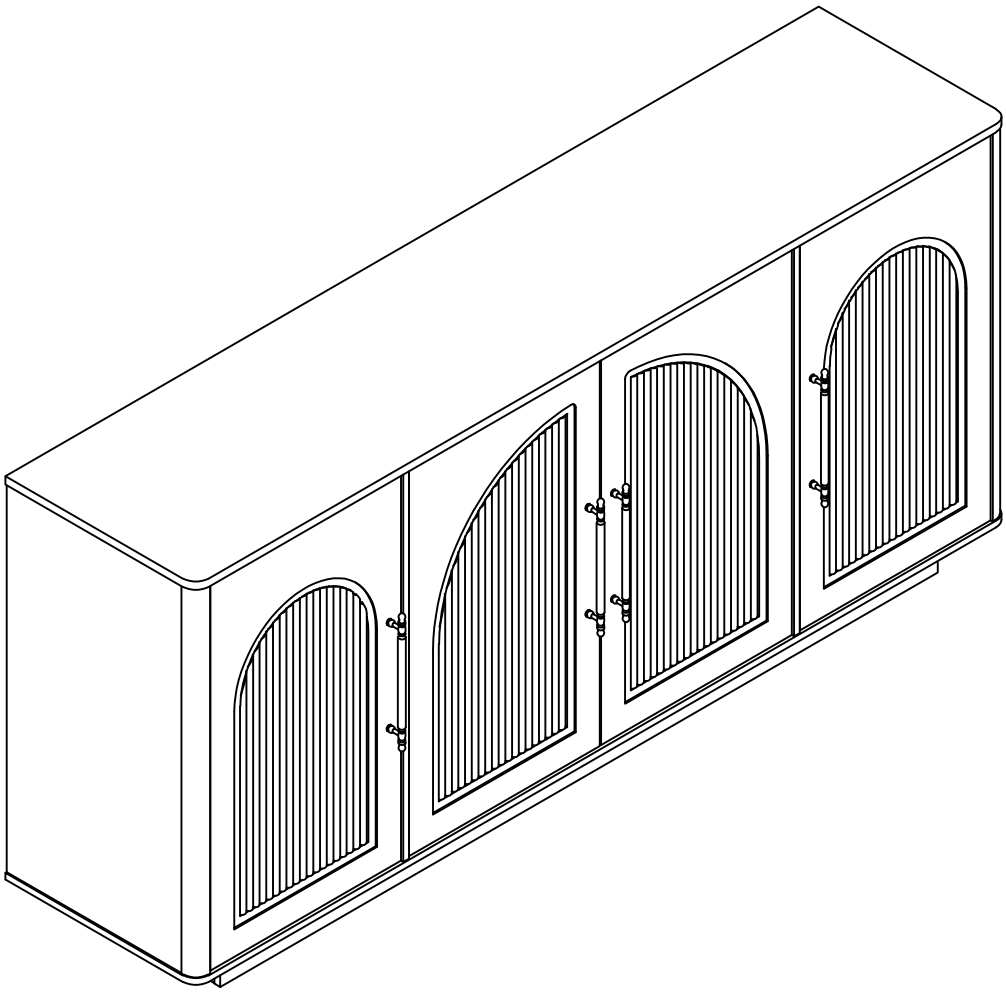

evermagin@yeah.net

General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and steps. Please contact us if further information or assistance is needed.


Notes

- The product is intended for indoor use only. It must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to the product may occur if the product is used outside of its intended purpose and/or if it has been changed/modified from its original design. The seller does not assume any responsibility or liability for injury or damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Assemble the item on a spacious surface and avoid placing the unwrapped product directly on the ground to prevent damage.
- Do not stand or sit on the wooden boards.
- Wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Match each part and fitting based on the part number in the manual.
- If a part does not match the fitting, please check the manual for clarification.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes, then tighten them one by one.
- Periodically inspect the screw tightness while the product is in use. Retighten if necessary to ensure structural integrity.
- If you accidentally spill water or any other liquid on the surface, immediately wipe it clean with a dry towel.
- Keep the product away from sharp, pointed objects and corrosive substances to prevent damage.
- Place the item on level, solid ground during use.


Warnings

- During assembly, keep all small parts out of the reach of children, as they may be fatal if swallowed or inhaled.
- Children should not climb or play on the product to avoid tipping over and causing serious injury.
- To avoid the potential danger of suffocation, keep all packaging materials (film, plastic bags, foam, etc.) away from babies and children.
- Do not shake or move the product violently during use to avoid tipping over.


Official Page | After-sales | Pinterest | X(Twiter) | YouTube | Facebook | Instagram

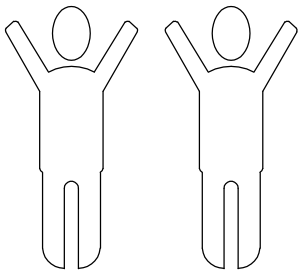


Two people are required to assemble this product.

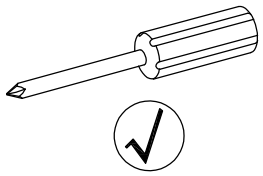

Recommended to use a screwdriver to assemble the product















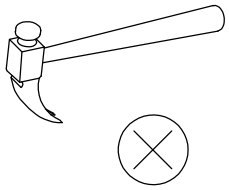



Do not use a hammer,it might damage the board.

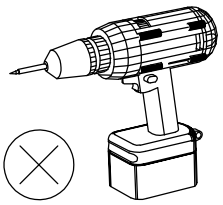


Use of an electric screwdriver is not recommended. If used, set the torque to the minimum.

PARTS LIST

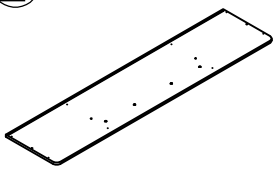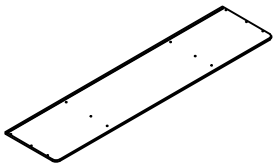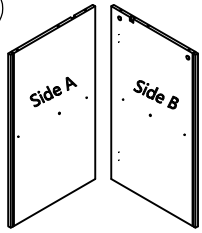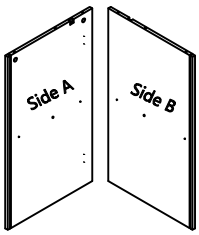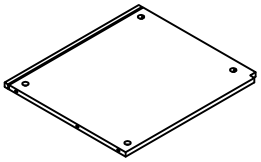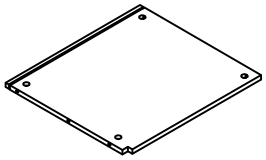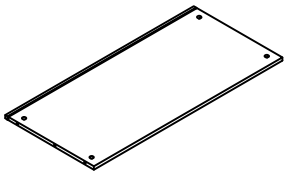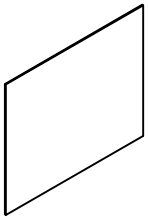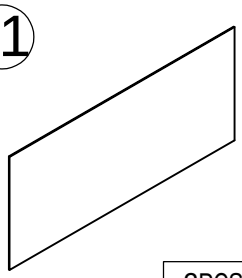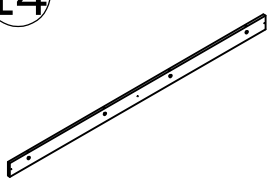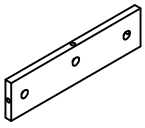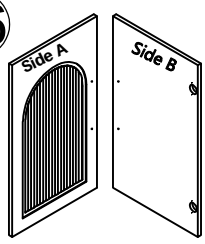
1  1PC	2  1PC	3  1PC	4  1PC
5  1PC	6  1PC	7  1PC	8  1PC
9  1PC	10  4PCS	11  2PCS	12  2PCS
13  4PCS	14  2PCS	15  3PCS	16  1PC

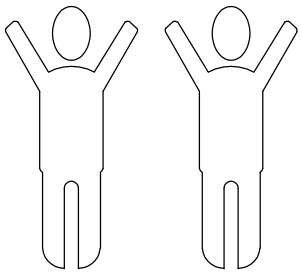


Two people are required to assemble this product.

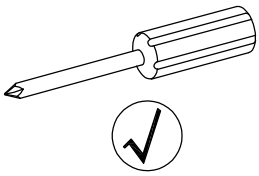

Recommended to use a screwdriver to assemble the product




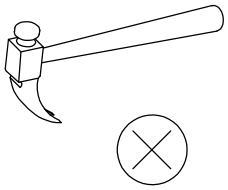






Do not use a hammer,it might damage the board.

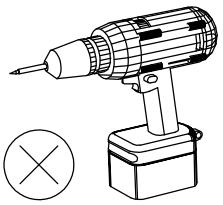












Use of an electric screwdriver is not recommended. If used, set the torque to the minimum.


PARTS LIST

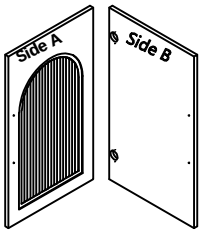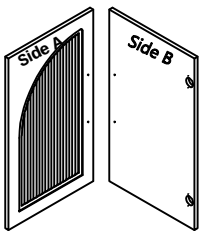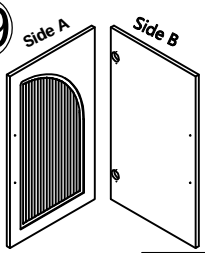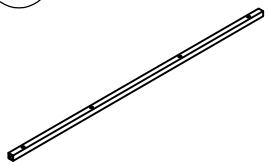
17  1PC	18  1PC	19  1PC	20  1PC

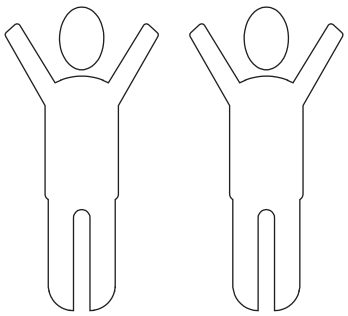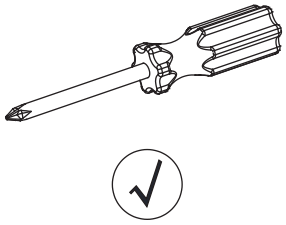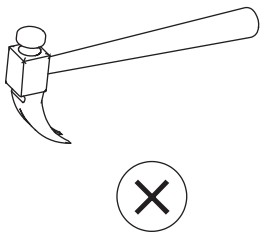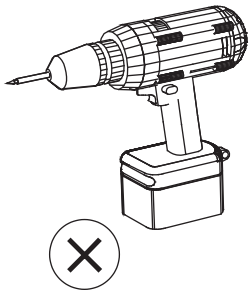


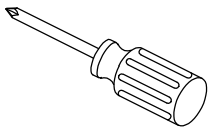


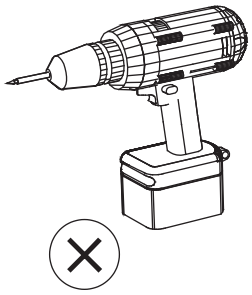
HARDWARE LIST

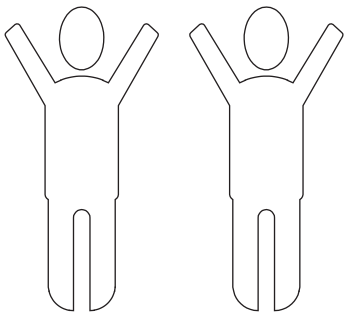No. A **Quantity:45+3 Pcs** **Cam Lock Dowel** **8*28mm** 	**No. B** **Quantity:45+3 Pcs** **Cam** **φ15** 	**No. C** **Quantity:28+2 Pcs** **Sticker** **Ø20** 	**No. D** **Quantity:18+1 Pcs** **Dowel** **8*30mm** 
No. E **Quantity:8 Pcs** **Large curved door hinge** 	**No. F** **Quantity:48+3 Pcs** **Screw** **M3.5*14mm** 	**No. G** **Quantity:8+1 Pcs** **Screw** **M5*25mm** 	**No. H** **Quantity:8+1 Pcs** **Screw** **M6*40mm** 
No. I **Quantity:6+1 Pcs** **Foot Pad** **Ø15** 	**No. J** **Quantity:4 Pcs** Door Handle 	**No. K** **Quantity:8+1 Pcs** **Screw** **M4*22mm** 	**No. L** **Quantity:1 Pc** **Screwdriver** 
No. M **Quantity:1 Pc** **Allen Key** **3#** 	**No. N** **Quantity:1 Pc** **Allen Key** **4#** 	**No. O** **Quantity:5 Pcs** **Screw** **M6*25mm** 	**No. P** **Quantity:27 Sets** **Plastic Wedge** 

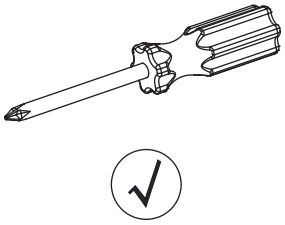


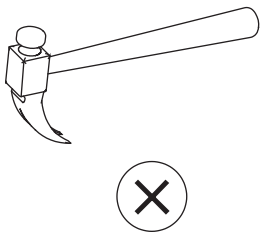






HARDWARE LIST

No. Q **Quantity:2 Sets** **Anti-falling Parts** 			

EXPLODED VIEW

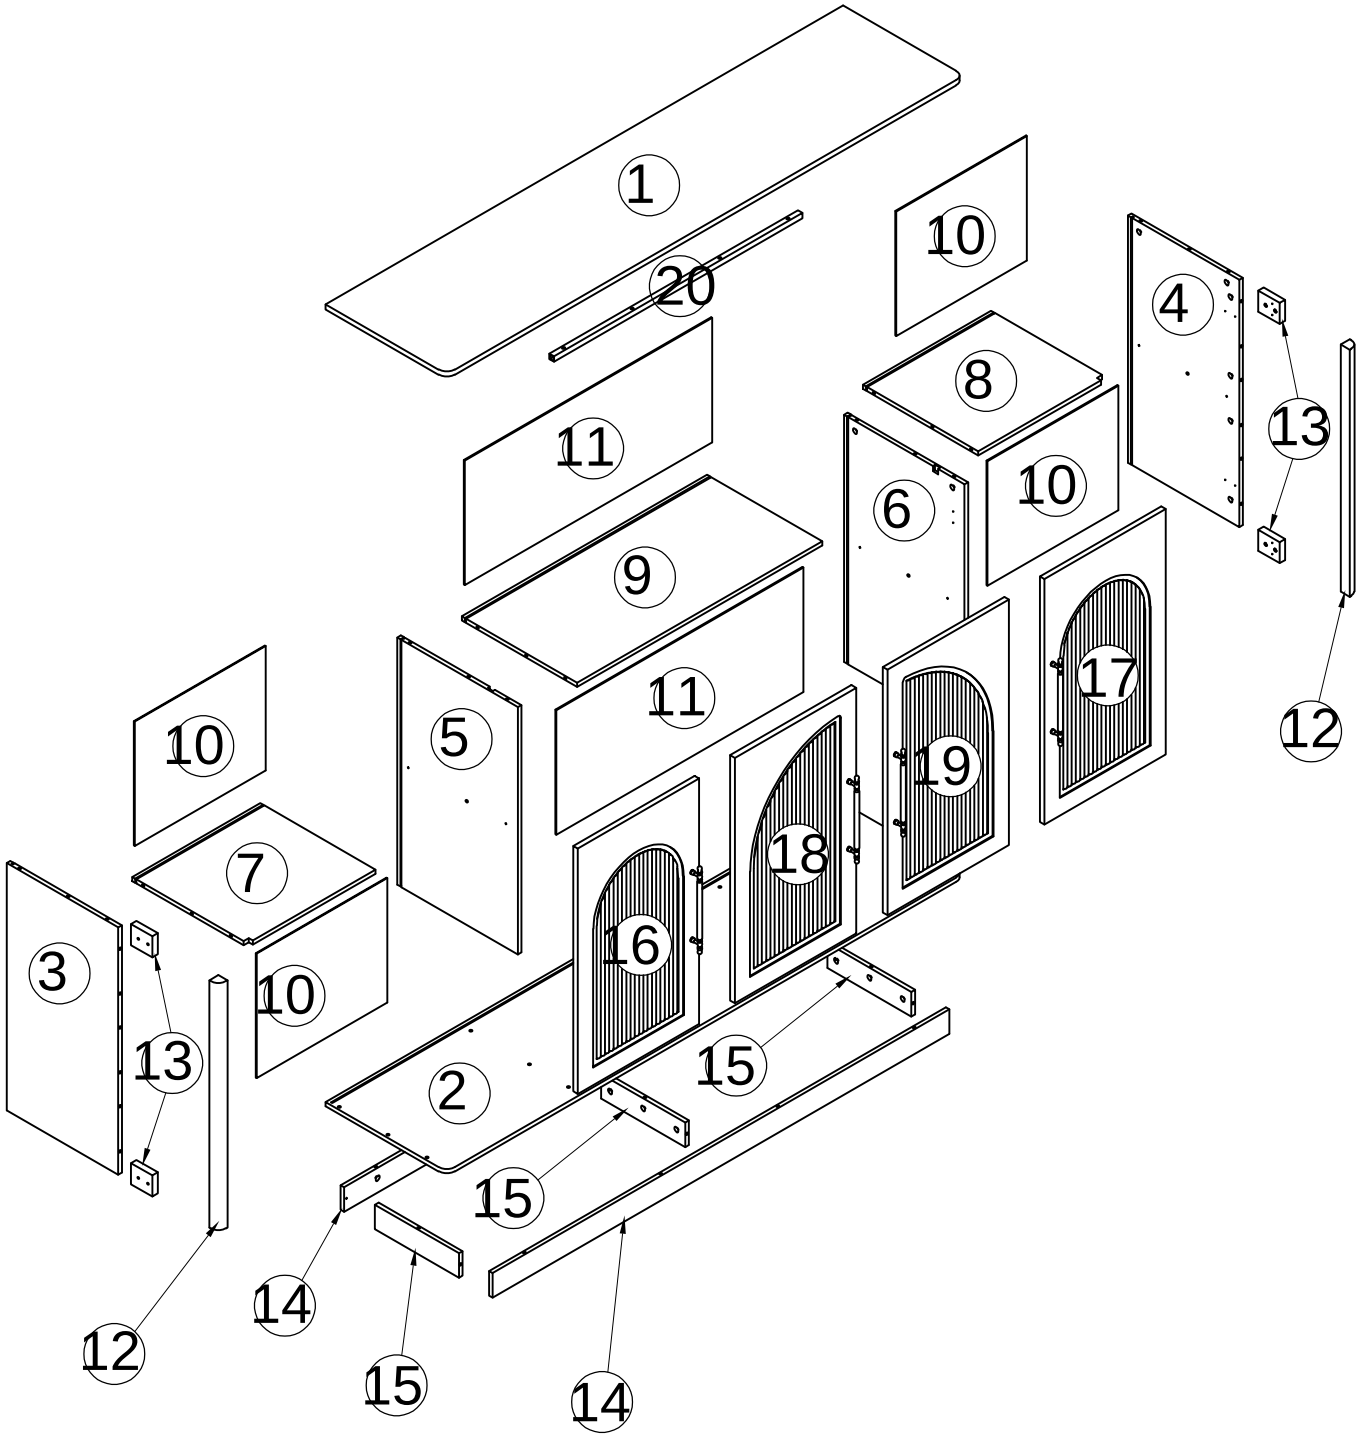

Instructions For Fastening
CAM BOLT and CAM LOCK




CAM BOLT




CAM LOCK


Tools Required




INSERTING AND TIGHTENING CAM BOLT

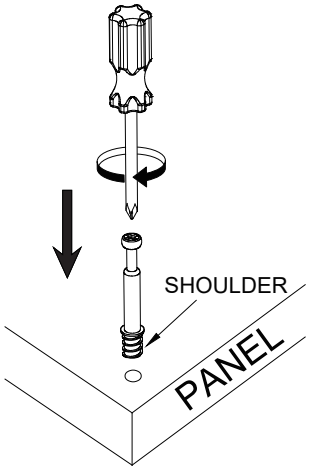

Place Cam bolt on pre-drilled hole and screw in vertically

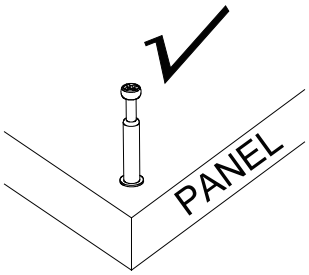


The shoulder is flush (on the same level) with the panel

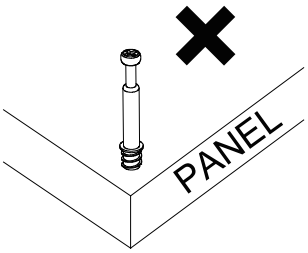

Shoulder is above the panel

Place Cam bolt on the designated pre-drilled holes on the panel. Use a Phillips screwdriver to screw in Cam bolt vertically until the shoulder is flush with the panel (on the same level) with panel.

INSERTING CAM LOCK

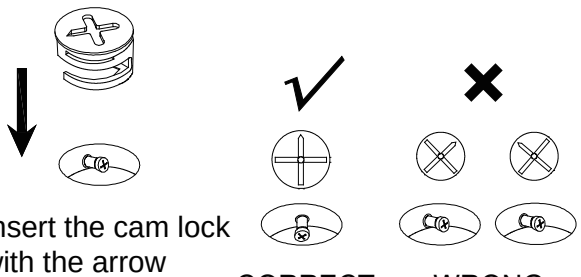


Insert the cam lock with the arrow aligned with the cam bolt head.

CORRECT

WRONG


Align the arrow on the Cam lock to the Cam bolt head and insert the Cam lock. Ensure Cam lock is fully inserted.


TIGHTENING CAM LOCK





Use a flat-head screwdriver to turn Cam lock clockwise so it locks onto the head of the Cam bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage the cam lock and/or cam bolt.


STEP 1

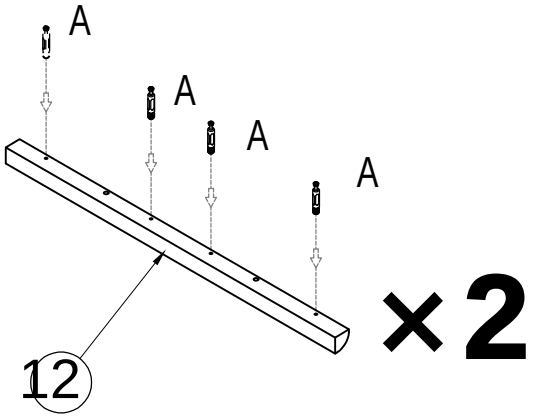

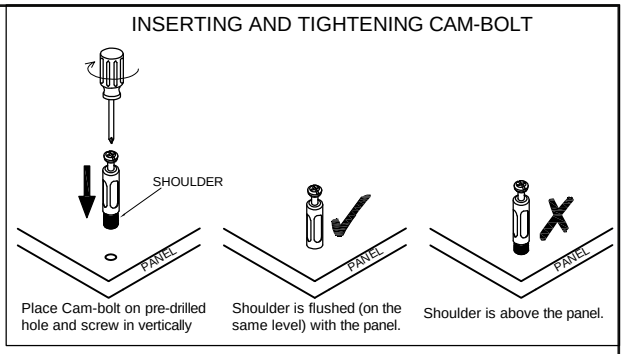


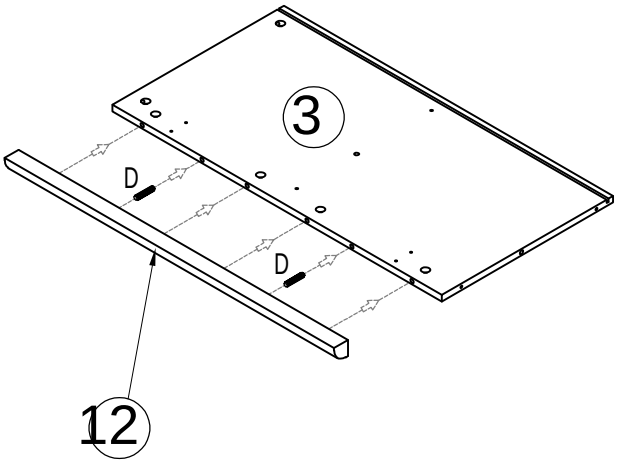


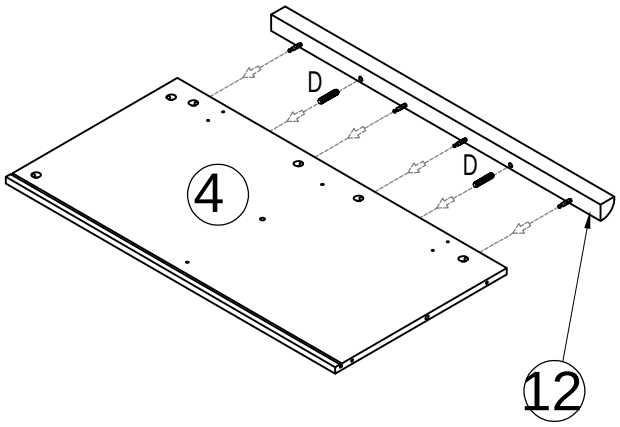


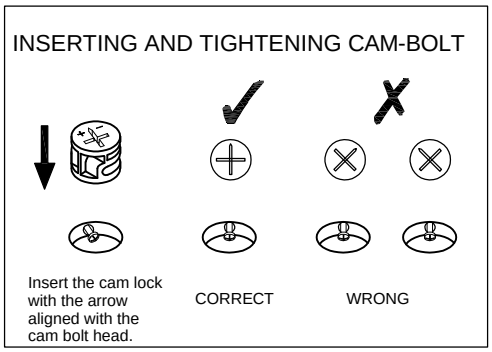


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

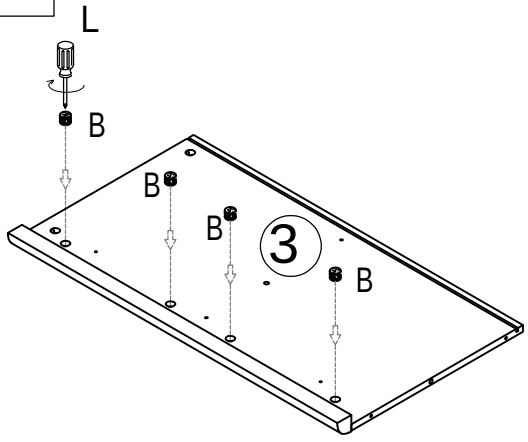

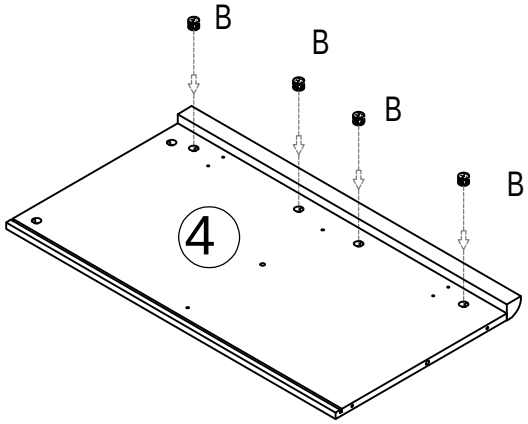



	**A×8PCS**
	**B×8PCS**
	**D×4PCS**


STEP 2

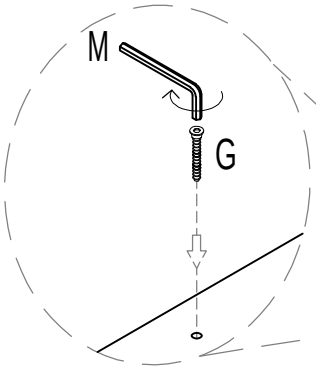



Install this block with the side with the shorter hole spacing facing outward.


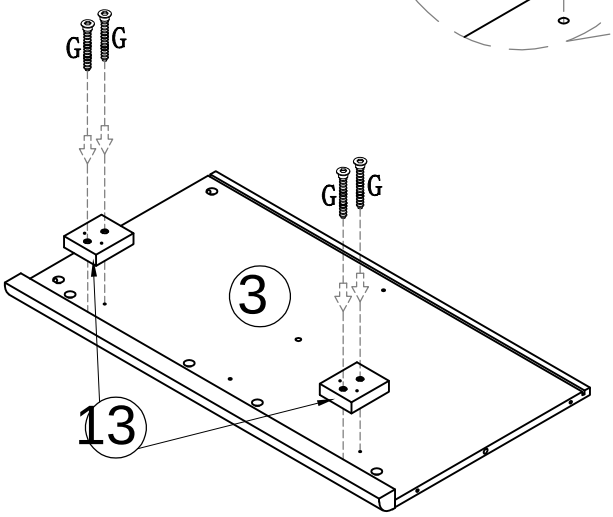


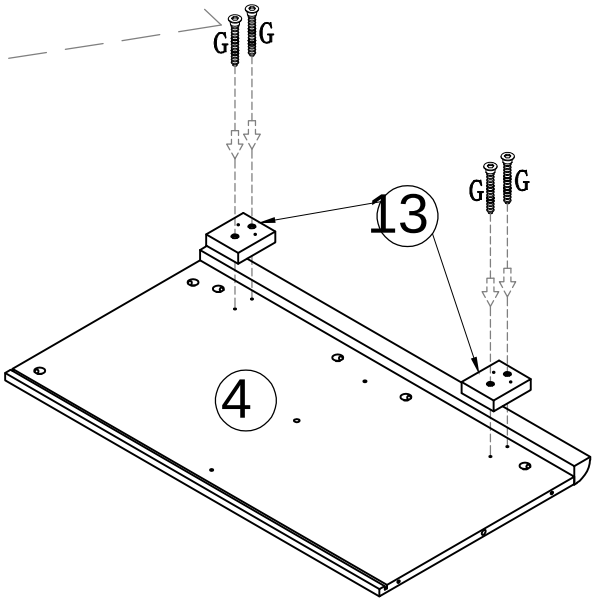

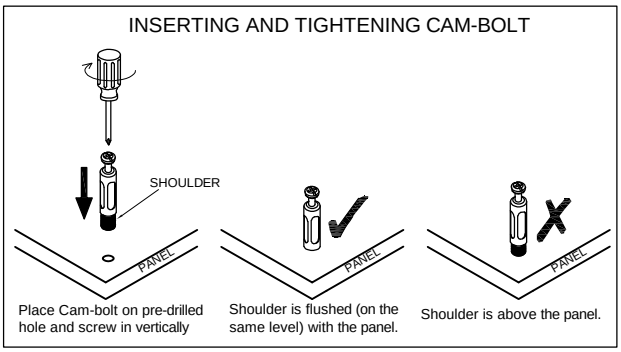


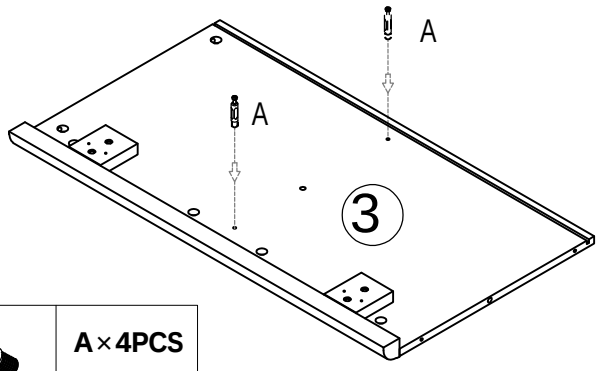


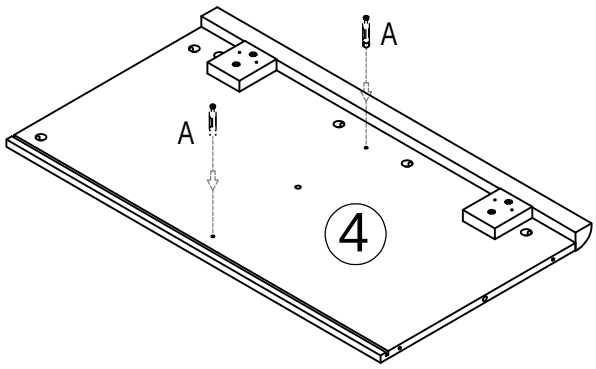



	**A×4PCS**
	**G×8PCS**
	**M×1PC**

STEP 3

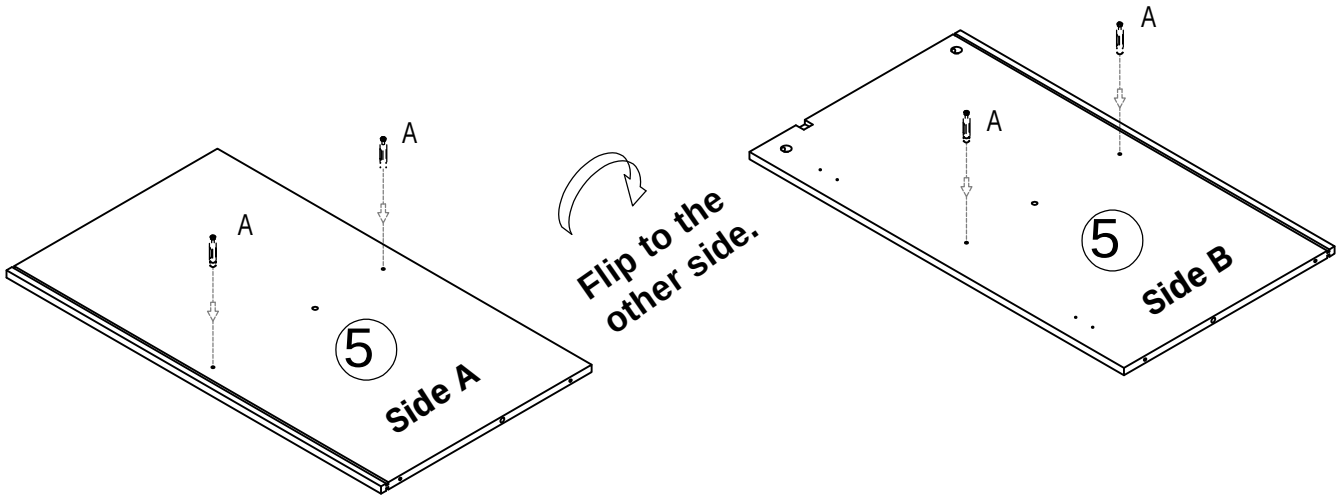
A
A
5
Side A
Flip to the other side.
A
A
5
Side B

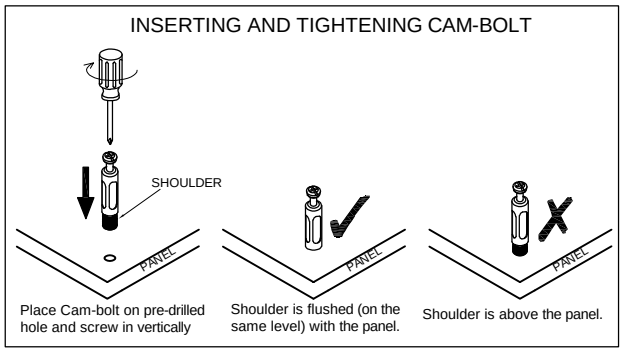

INSERTING AND TIGHTENING CAM-BOLT
SHOULDER
PANEL
PANEL
PANEL
Place Cam-bolt on pre-drilled hole and screw in vertically
Shoulder is flushed (on the same level) with the panel.
Shoulder is above the panel.

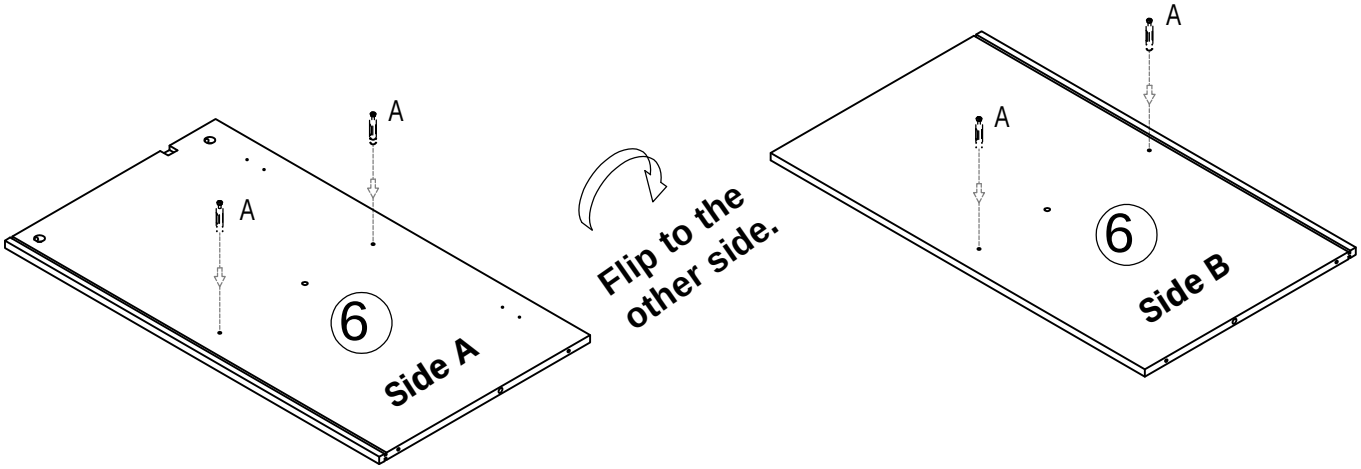
A
A
6
Side A
Flip to the other side.
A
A
6
Side B




A×8PCS

STEP 4

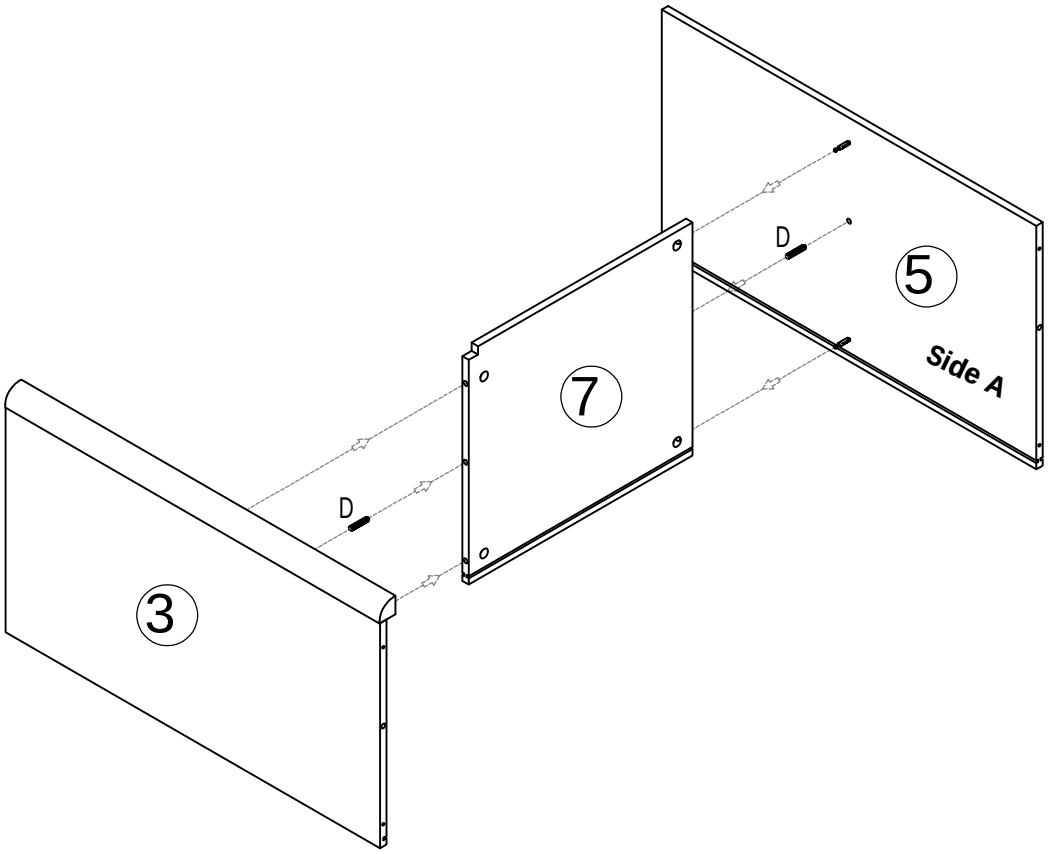


INSERTING AND TIGHTENING CAM-BOLT

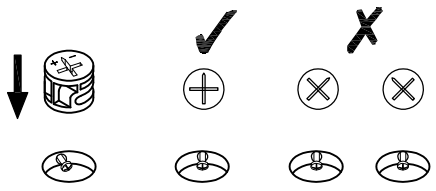


Insert the cam lock with the arrow aligned with the cam bolt head.


CORRECT

WRONG




Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

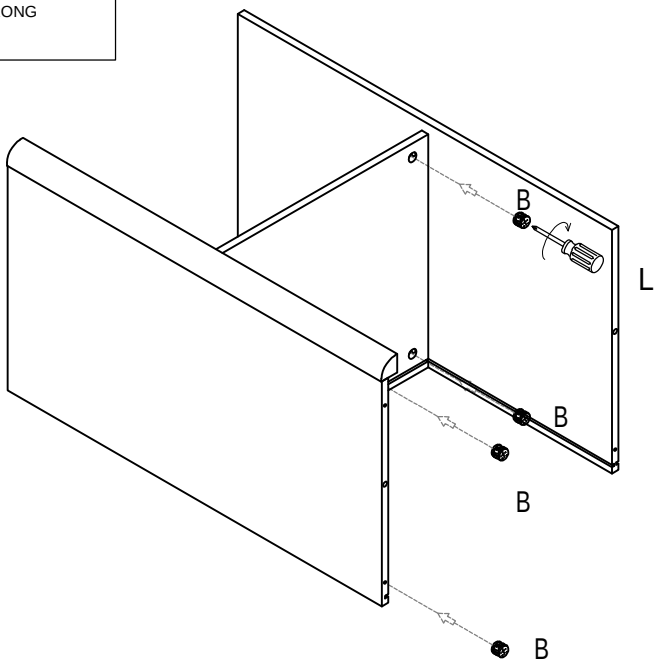


	**B×4PCS**
	**D×2PCS**

STEP 5

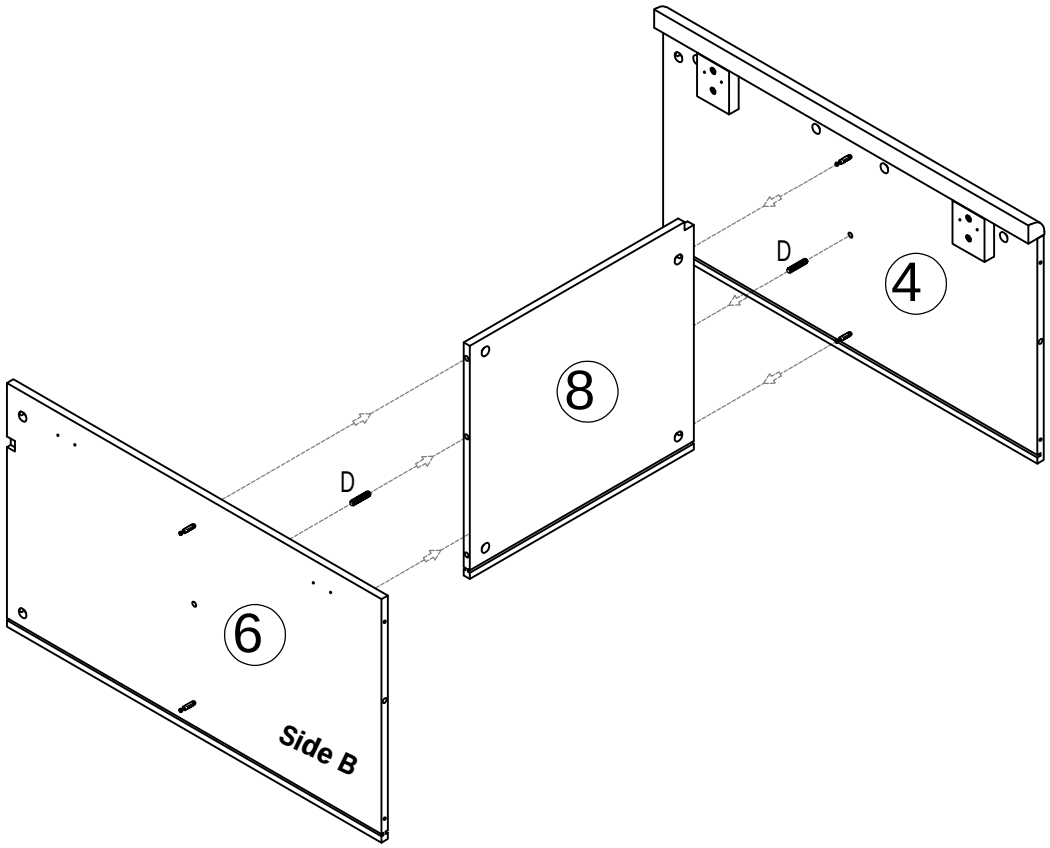

INSERTING AND TIGHTENING CAM-BOLT

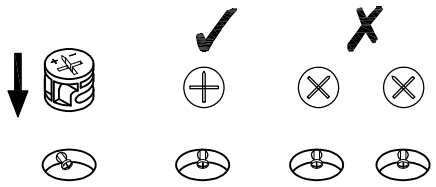



Insert the cam lock with the arrow aligned with the cam bolt head.

CORRECT


WRONG

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

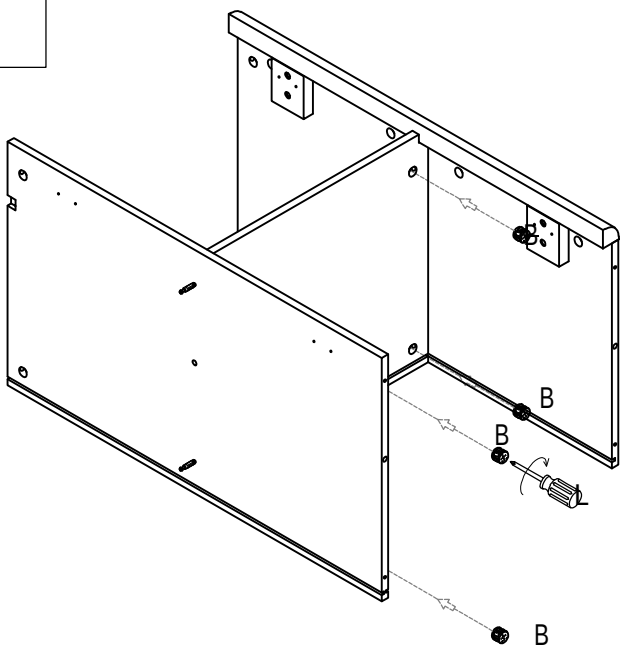


	**B×4PCS**
	**D×2PCS**

STEP 6

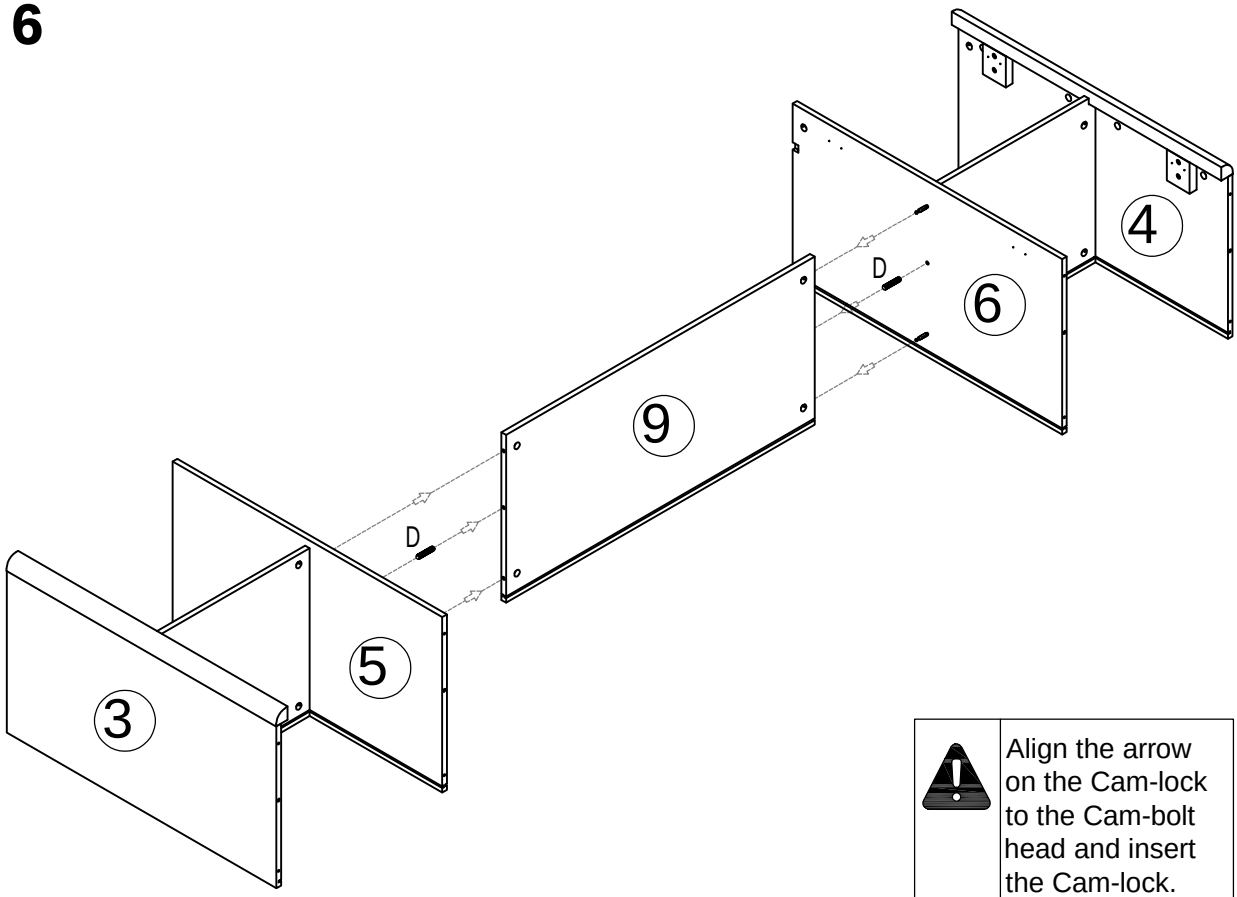

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


INSERTING AND TIGHTENING CAM-BOLT

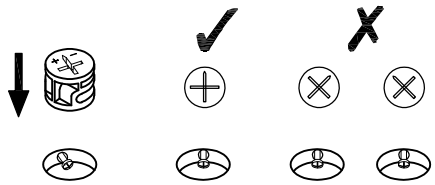

Insert the cam lock with the arrow aligned with the cam bolt head.

CORRECT

WRONG

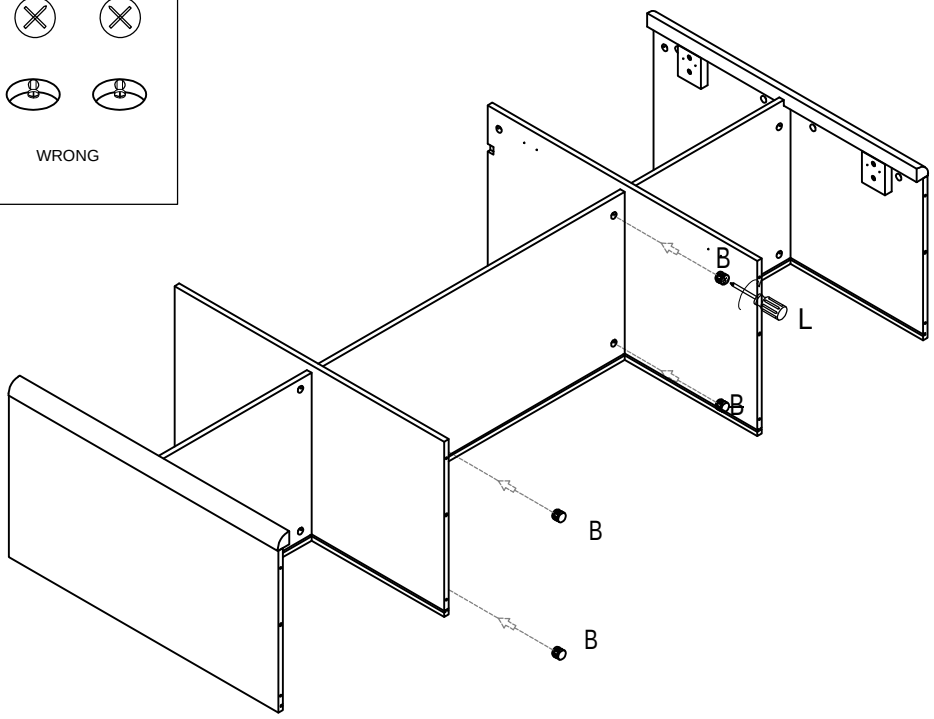


	**B×4PCS**
	**D×2PCS**


STEP 7

When two people stand the panel upright, be careful not to damage it.

The notch on this panel should face upward.

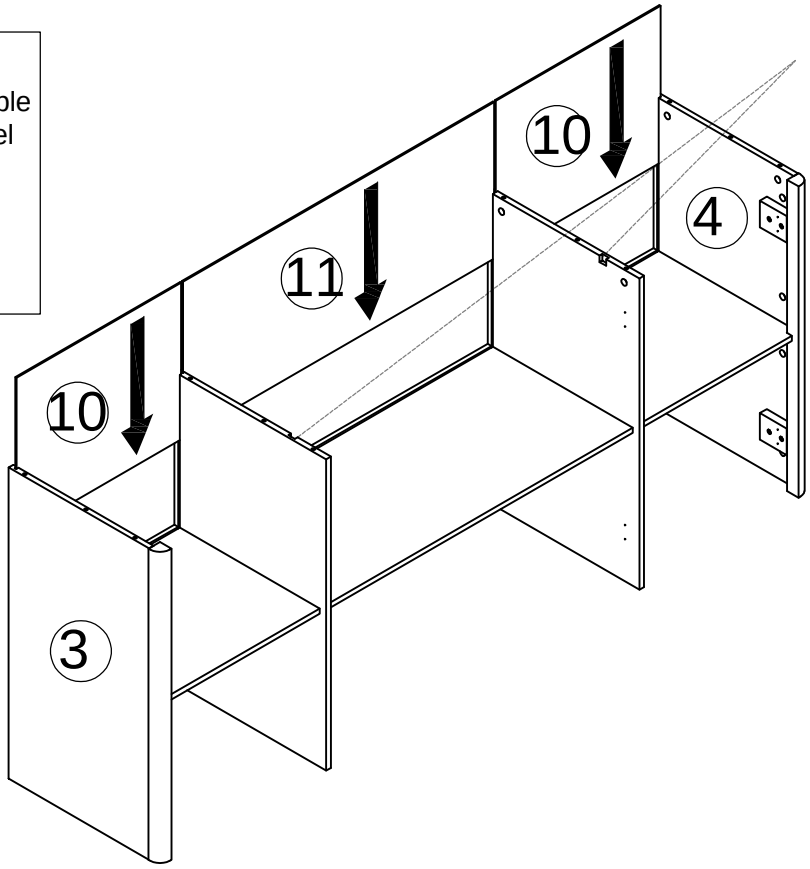



STEP 8

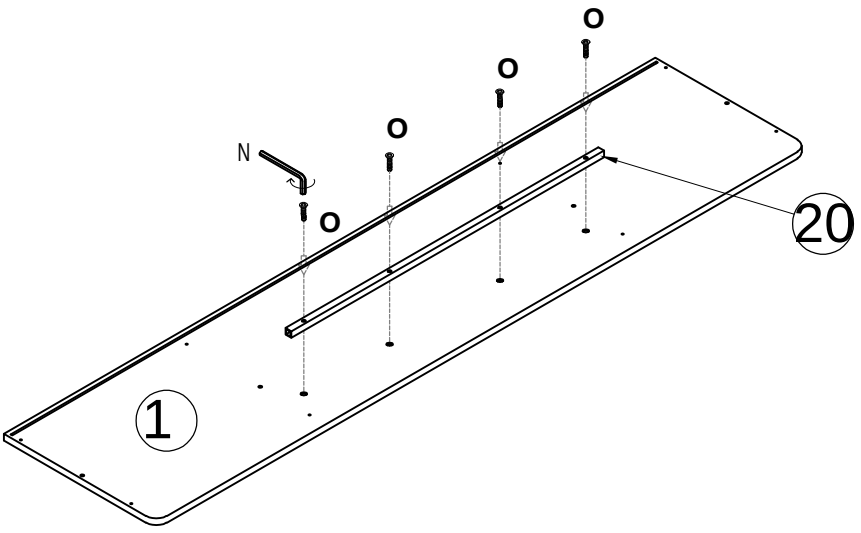


	**N×1PC**
	**O×4PCS**

STEP 9

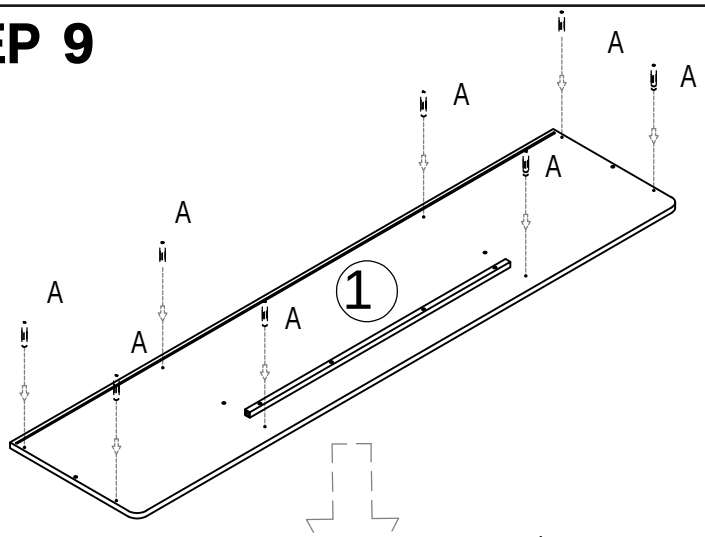


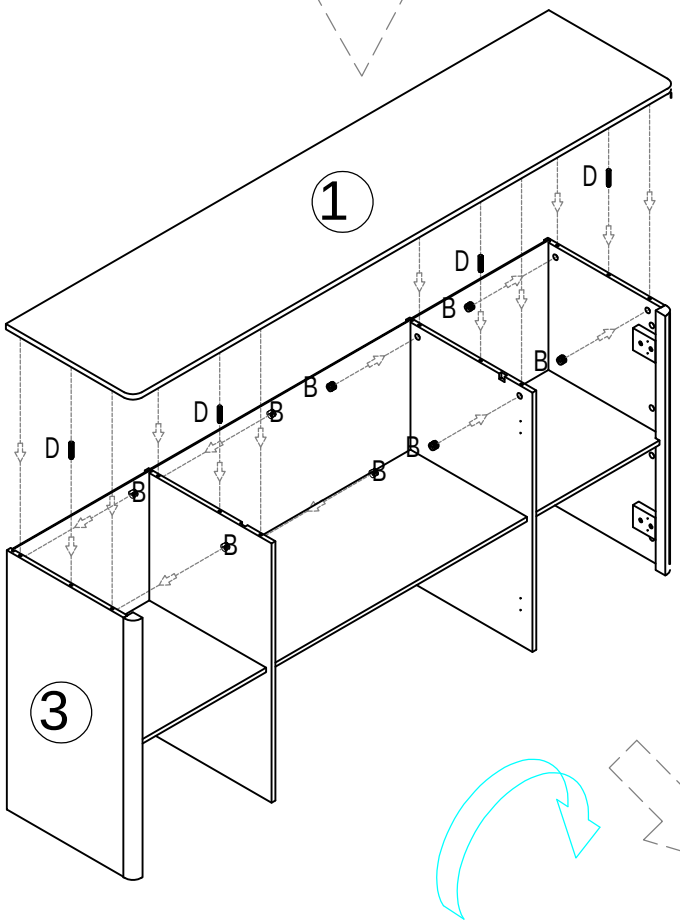

Please place a mat under the base plate to prevent the top plate from scratching .This step must be completed by two or more people.

	**A×8PCS**
	**B×8PCS**
	**D×4PCS**

INSERTING AND TIGHTENING CAM-BOLT

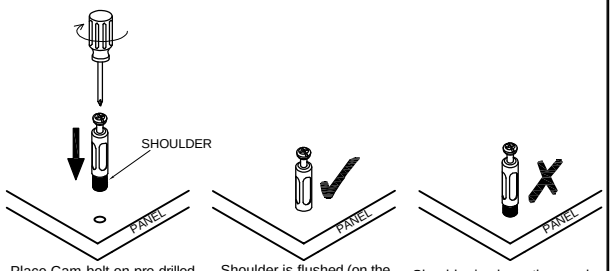


Place Cam-bolt on pre-drilled hole and screw in vertically

Shoulder is flushed (on the same level) with the panel.

Shoulder is above the panel.

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


INSERTING AND TIGHTENING CAM-BOLT

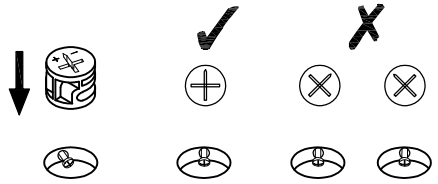


Insert the cam lock with the arrow aligned with the cam bolt head.


CORRECT


WRONG

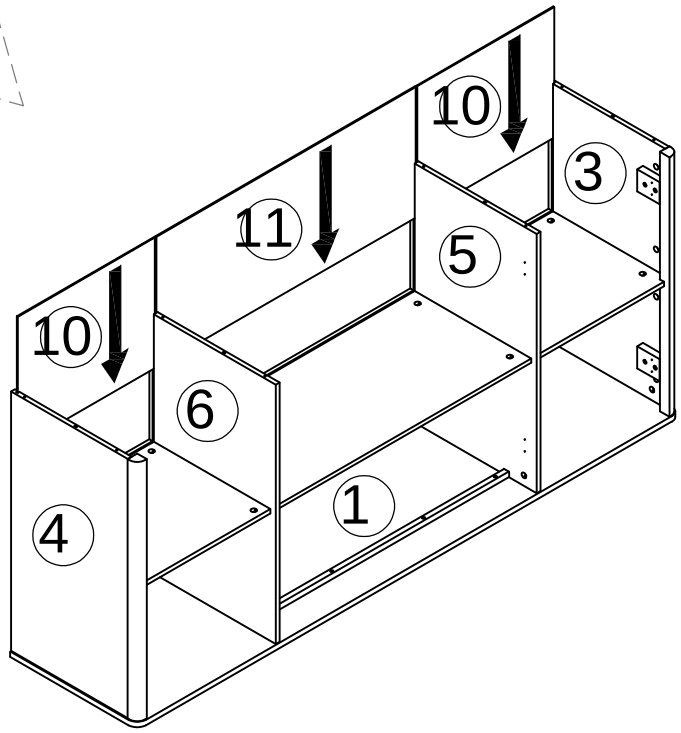


STEP 10

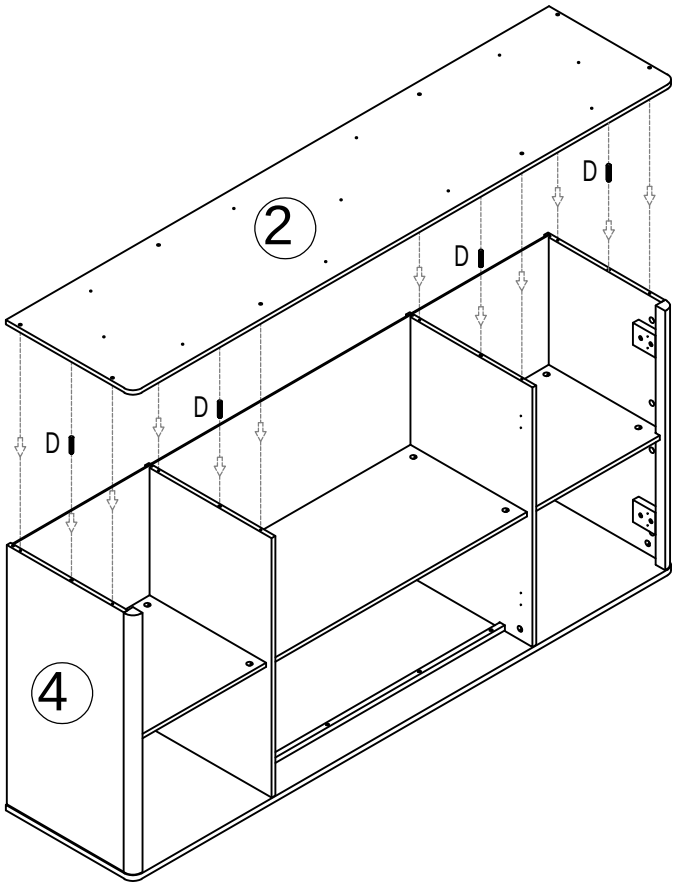

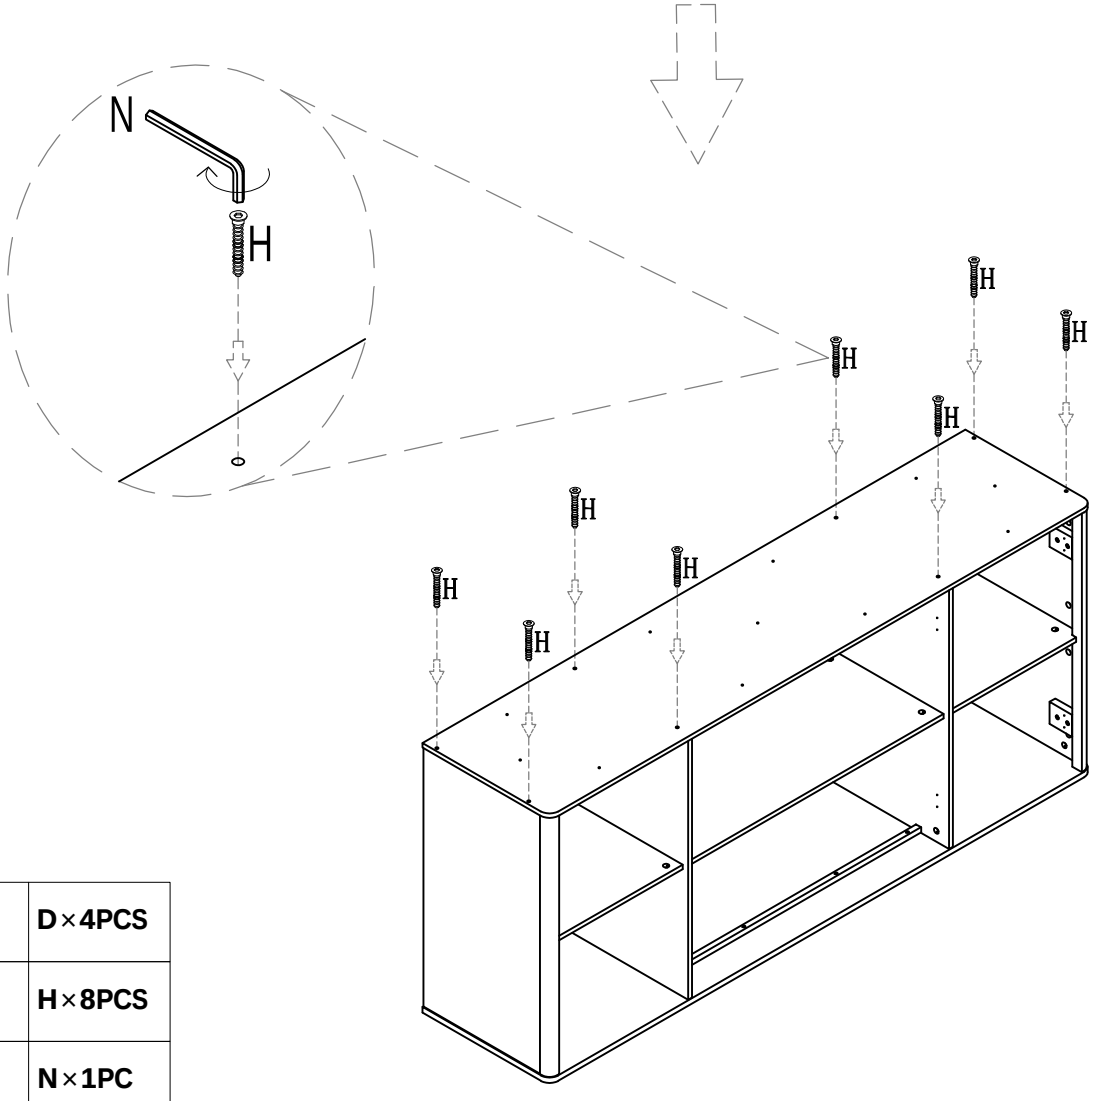


	D×4PCS
	H×8PCS
	N×1PC

STEP 11

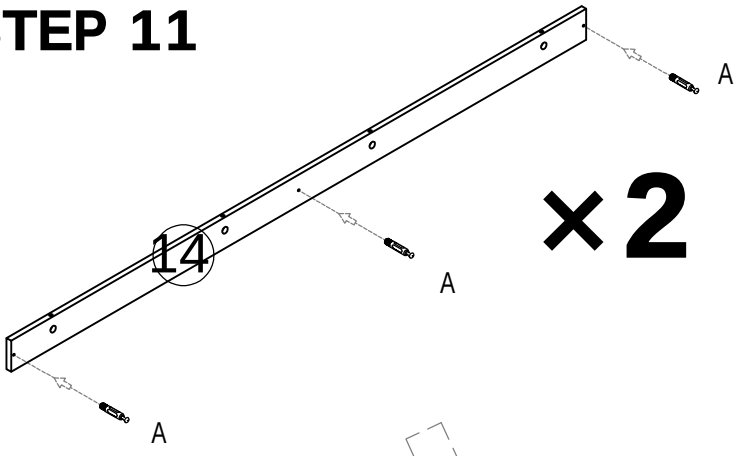

×2


INSERTING AND TIGHTENING CAM-BOLT

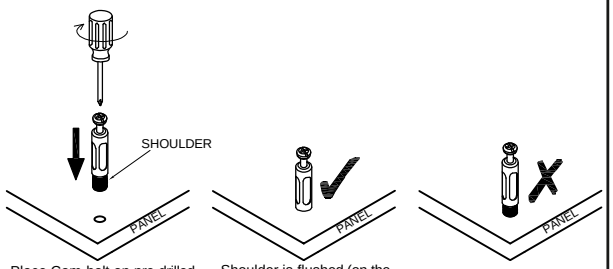

Place Cam-bolt on pre-drilled hole and screw in vertically


Shoulder is flushed (on the same level) with the panel.

Shoulder is above the panel.

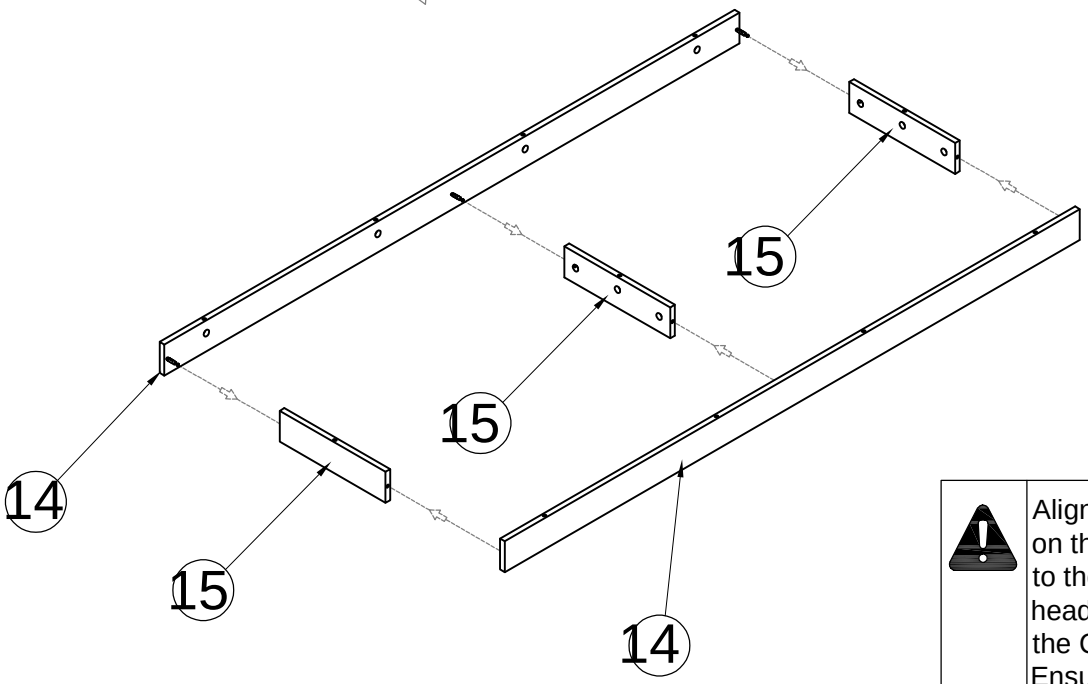

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


INSERTING AND TIGHTENING CAM-BOLT

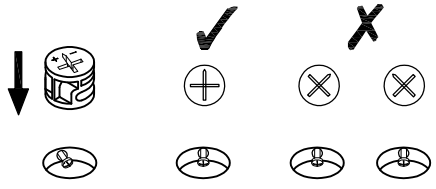

Insert the cam lock with the arrow aligned with the cam bolt head.


CORRECT

WRONG

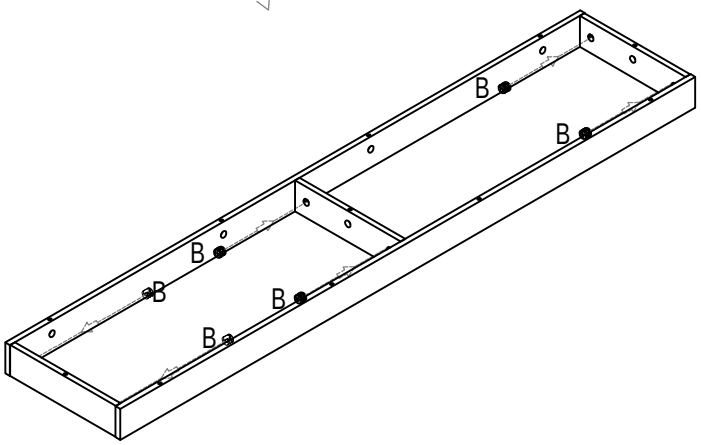


	**A×6PCS**
	**B×6PCS**

STEP 12

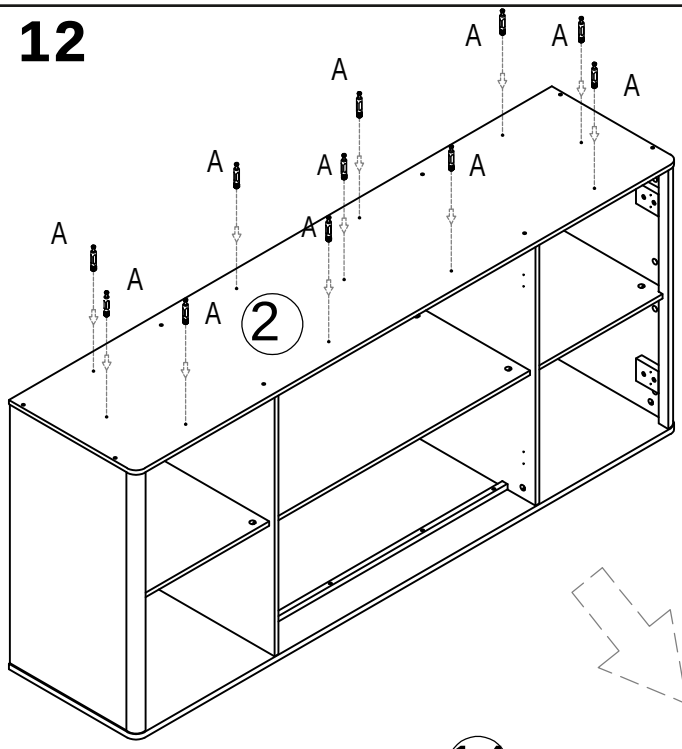


INSERTING AND TIGHTENING CAM-BOLT

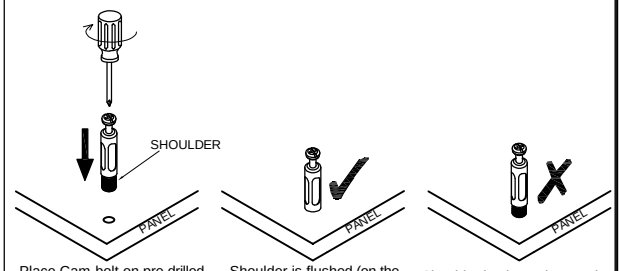

Place Cam-bolt on pre-drilled hole and screw in vertically


Shoulder is flushed (on the same level) with the panel.

Shoulder is above the panel.

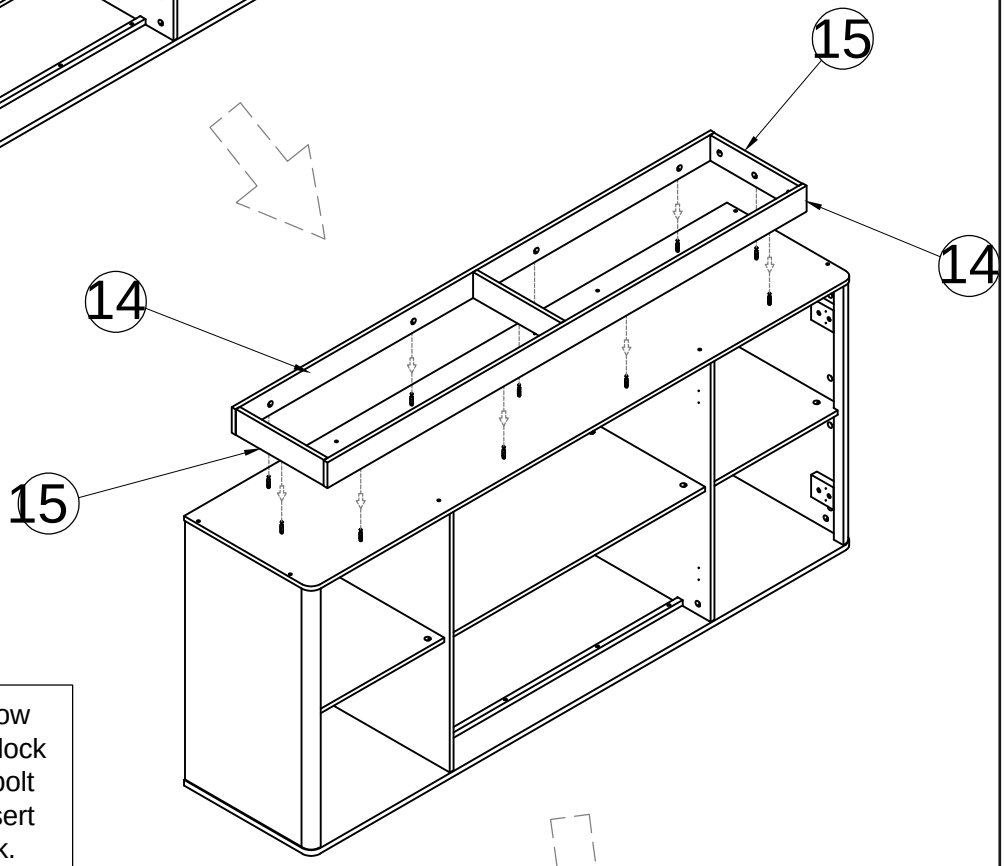

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


INSERTING AND TIGHTENING CAM-BOLT

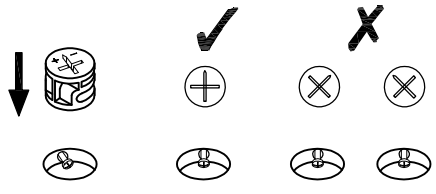


Insert the cam lock with the arrow aligned with the cam bolt head.


CORRECT


WRONG

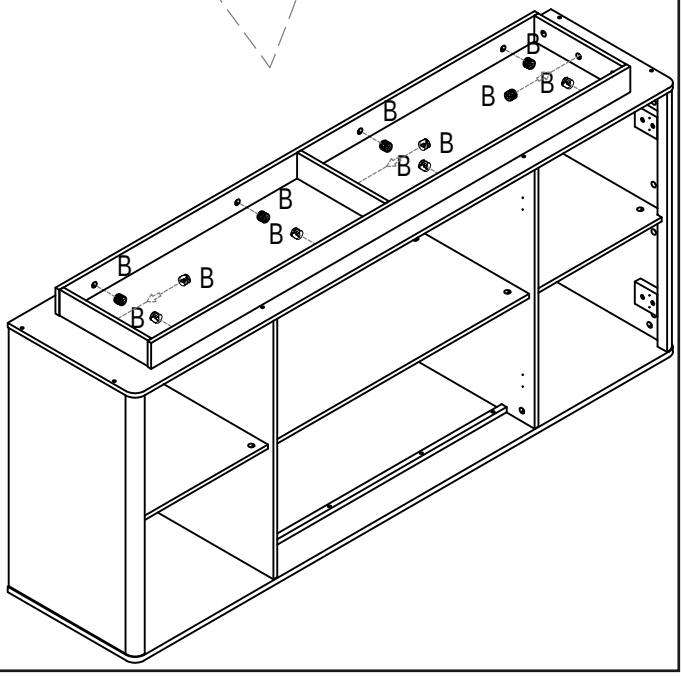

	**A×11PCS**
	**B×11PCS**

STEP 13

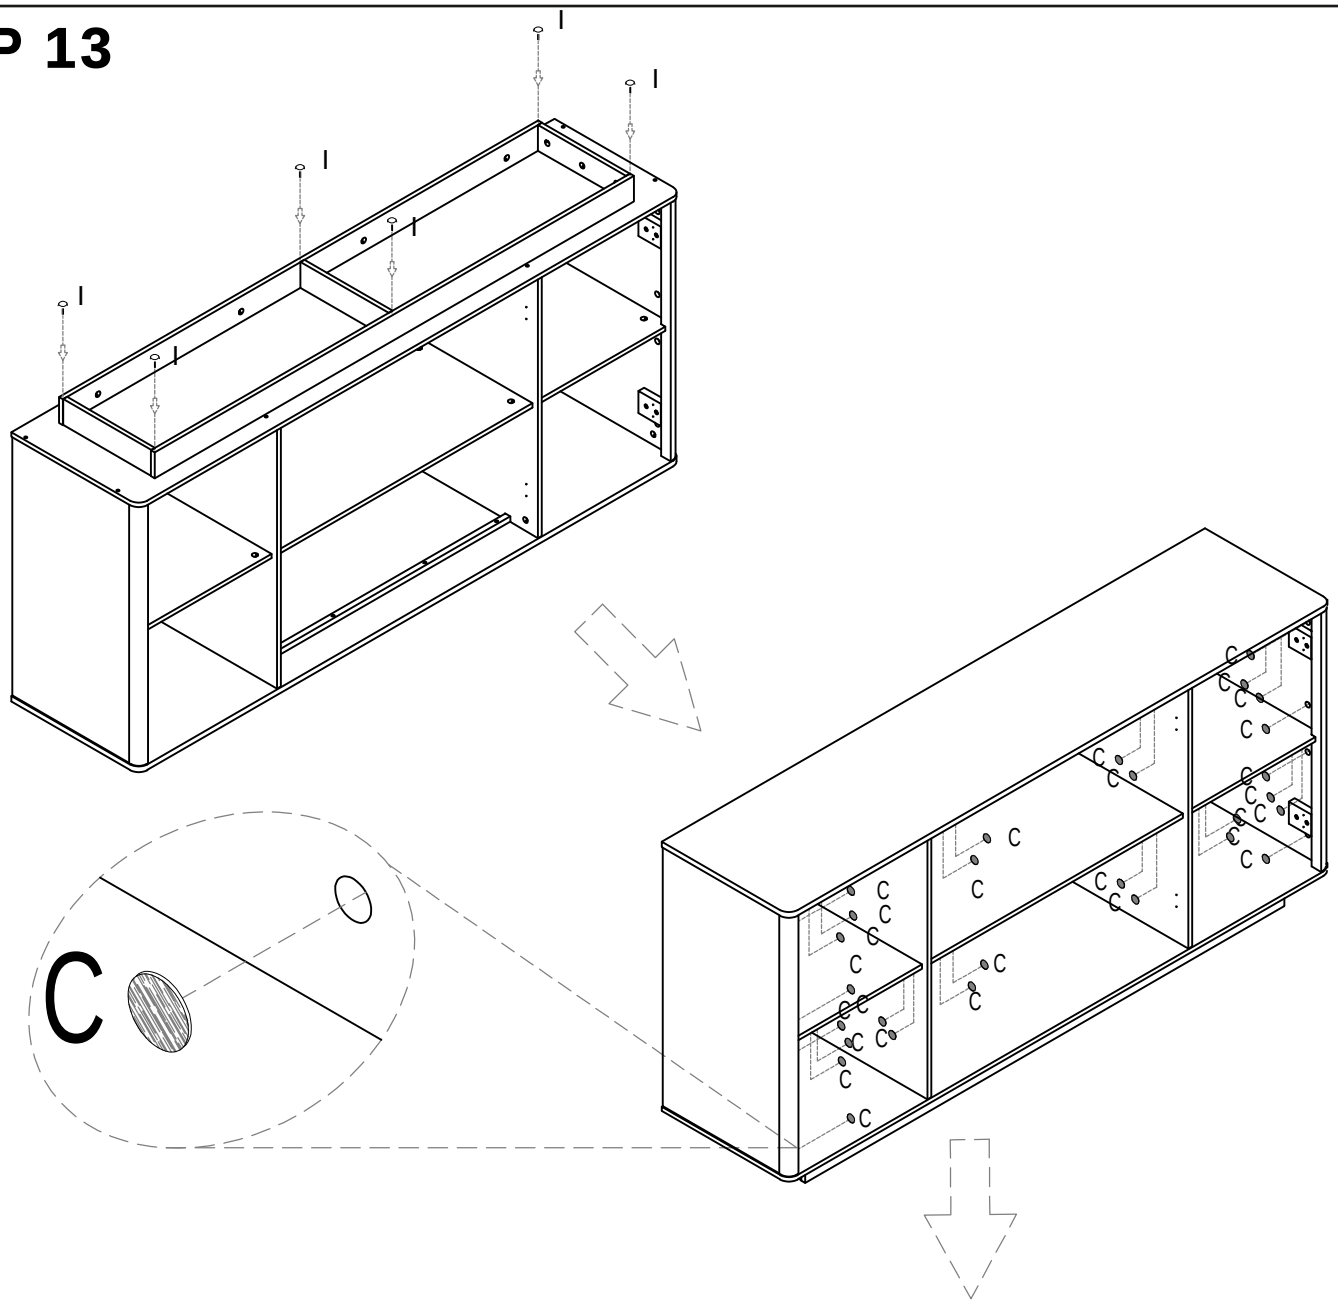

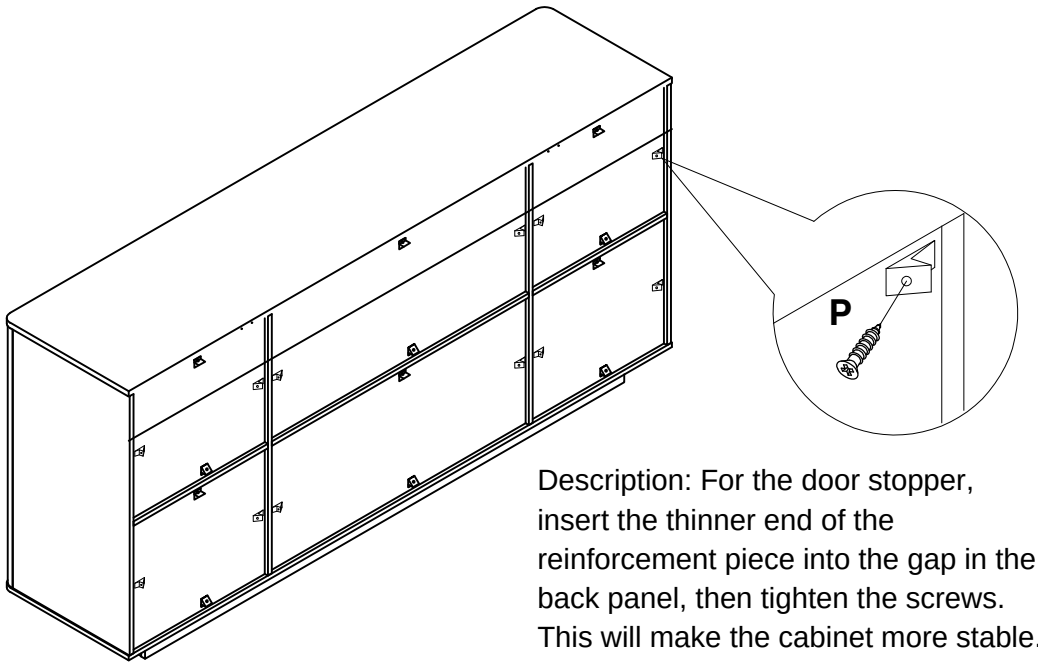

	C×28PCS
	I×6PCS
	P×24Sets

Description: For the door stopper, insert the thinner end of the reinforcement piece into the gap in the back panel, then tighten the screws. This will make the cabinet more stable.

STEP 14


If you encounter the following situation, please follow the steps to correct it.


1.The function of the front screw is to adjust the size of the gap between the door and the side panel.

2.The function of the rear screw is to adjust the distance between the front and rear of the door.

Scan the QR code to get the hinge video installation method


14-A.When the door panel is higher than the side panel.

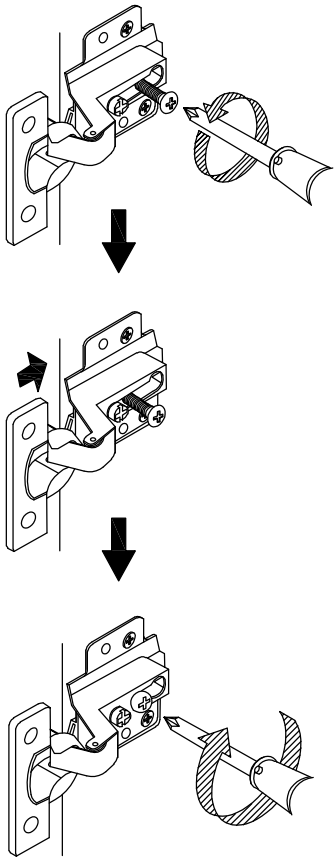


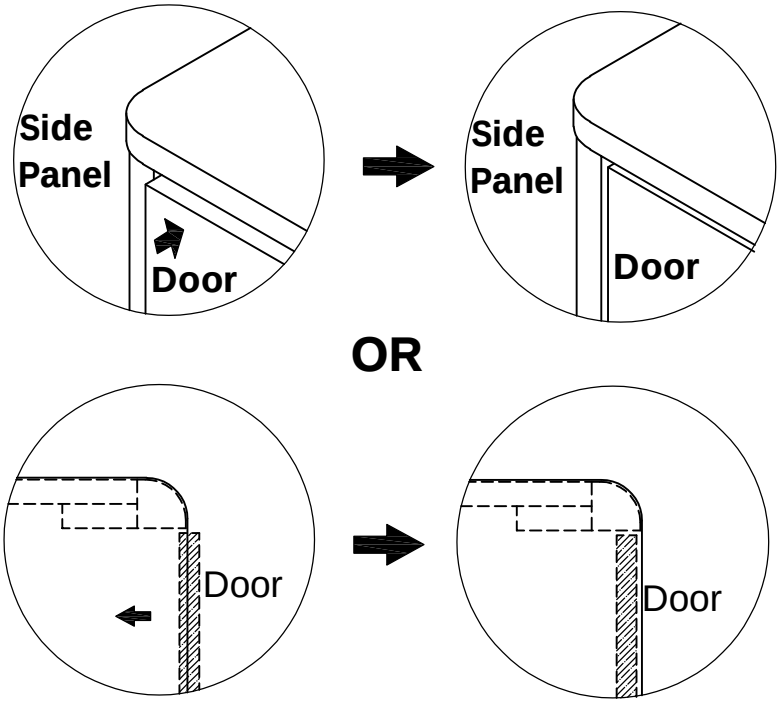

If the gap between the side panel and the door is too small, or if the door is recessed into the side panel, loosen the rear screw as shown. Then move the door outward with the hinge and tighten the rear screw when the gap is correct.


14-B.When the door panel is lower than the side panel, an indentation occurs.

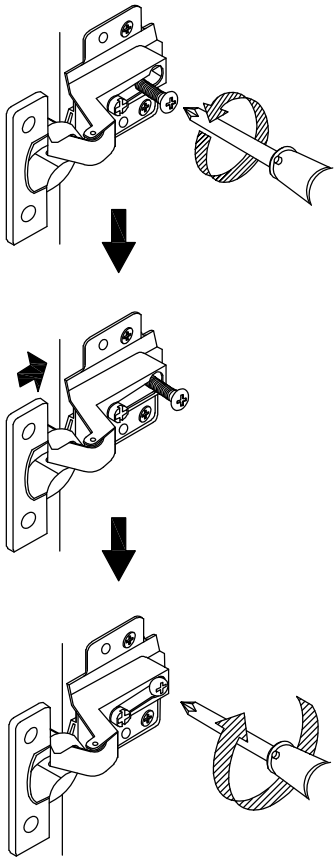


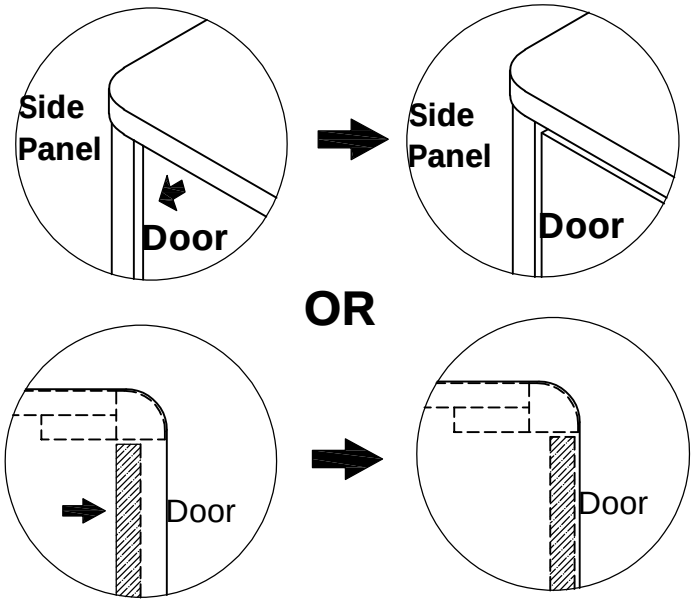

If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.


14-C

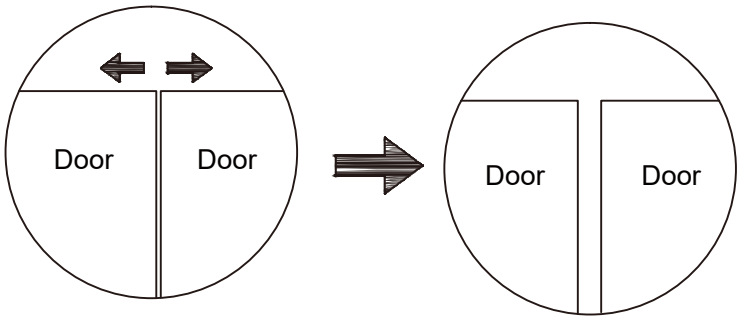


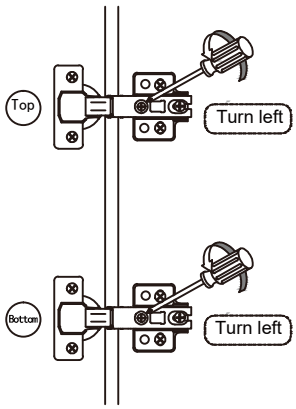

If the gap between the two doors is too small, follow the diagram.


14-D

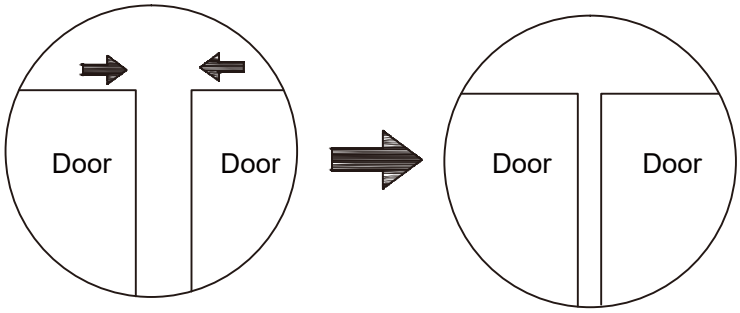


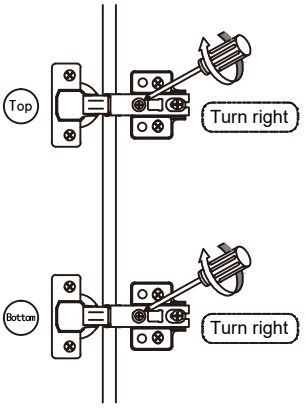

If the gap between the two doors is too large, follow the diagram.


14-E

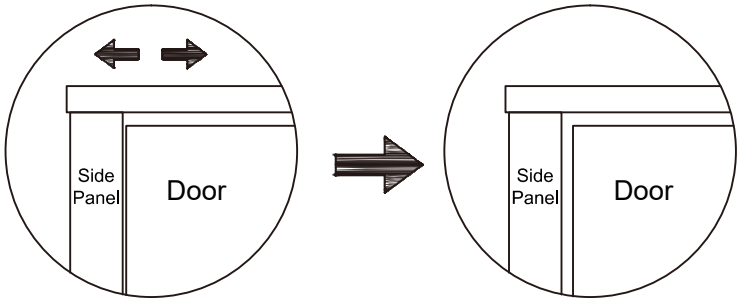


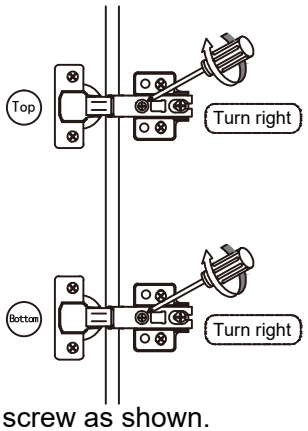

If the gap between the door and the side panel is too small, loose the front screw as shown.


14-F

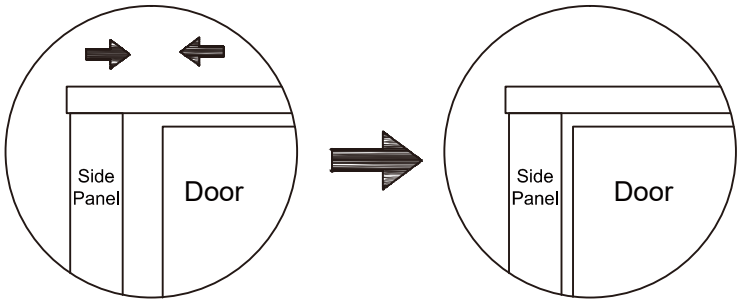


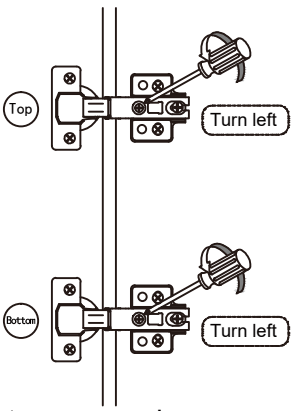


If the gap between the door and the side panel is too large, tighten the front screw as shown.

14-G. When door is leaning

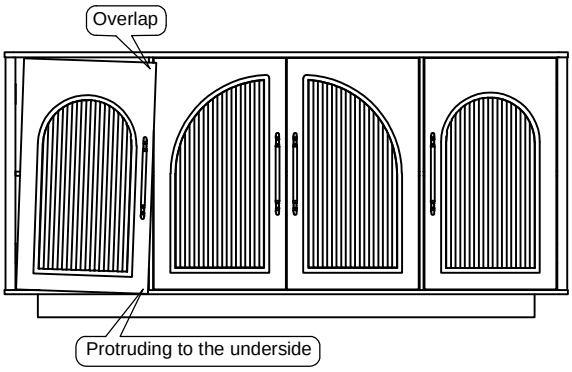


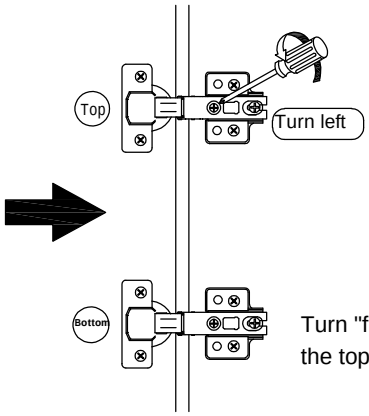


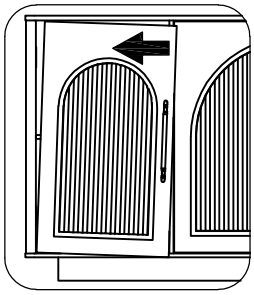


Turn "front screw" to the left can make the top of the door tilted outward.

14-H. When door is leaning

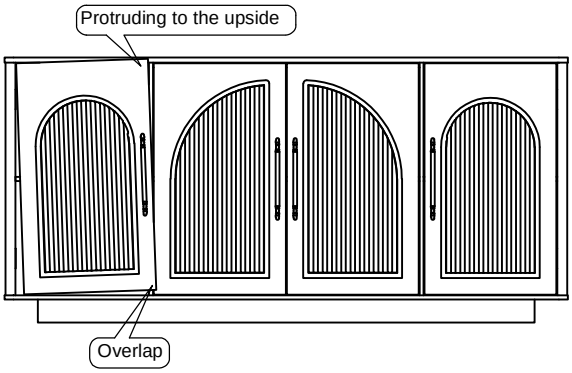


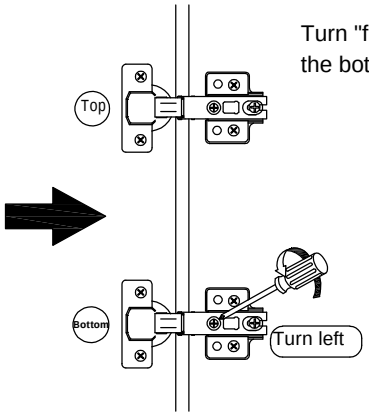


Turn "front screw" to the left can make the bottom of the door tilted outward.

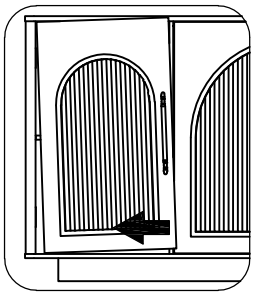


14-I. When the door is higher on top

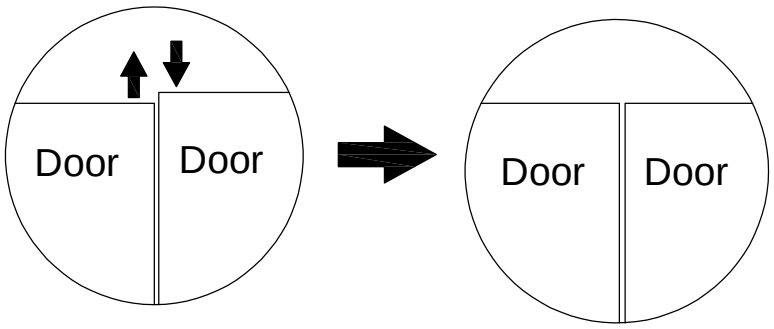

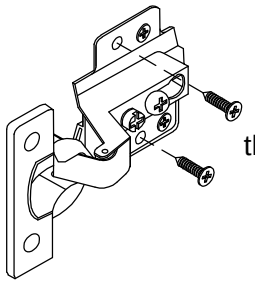


then lock screws.

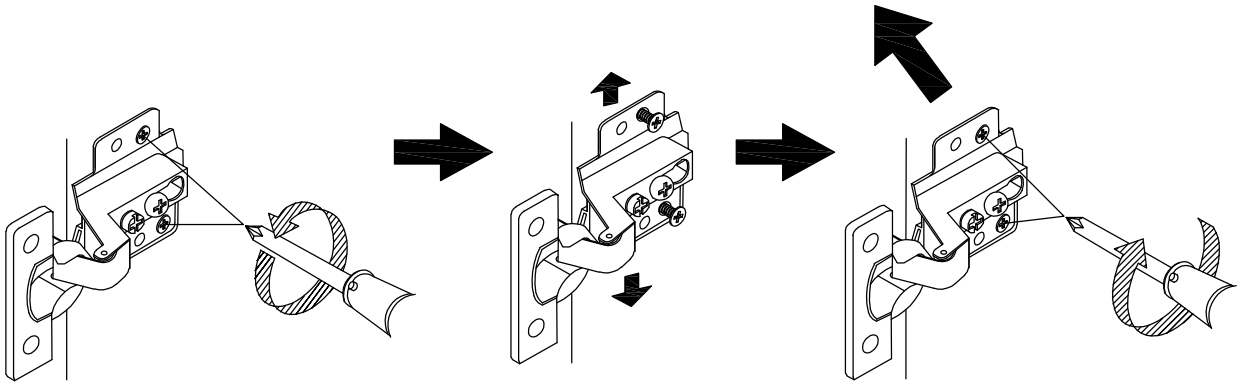


If the doors are not in the same level, loosen the back screws on wing, then adjust the door up and down,tighten the screws when both doors are in same level. Screw front two screws on wing when all are in place.

STEP 15

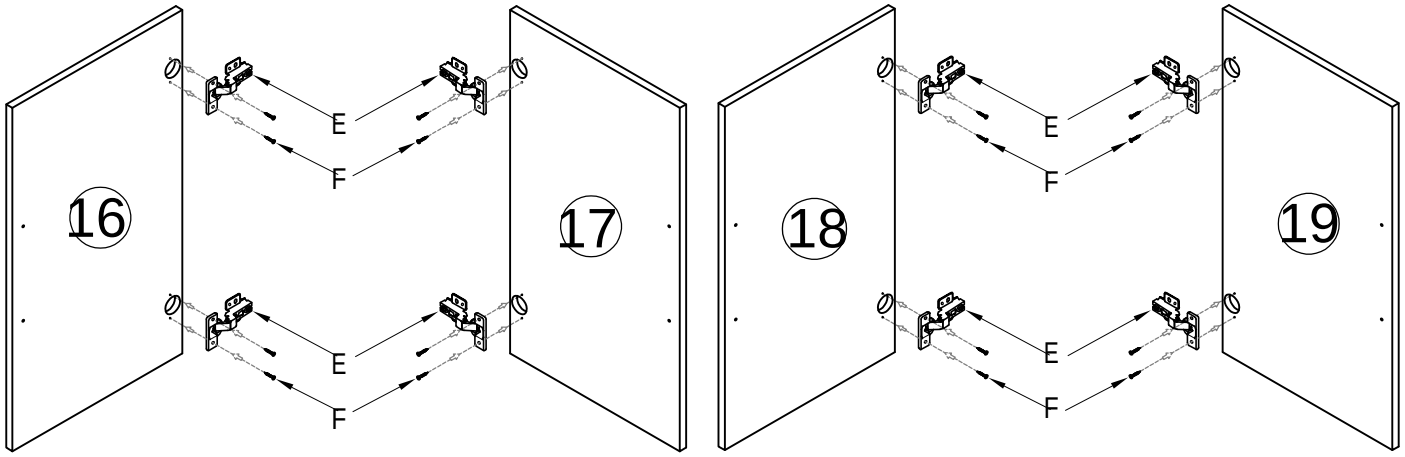


Before installing the door panels, please study and read the following steps. For possible problems, we have given some suggestions to solve the problems you encounter.

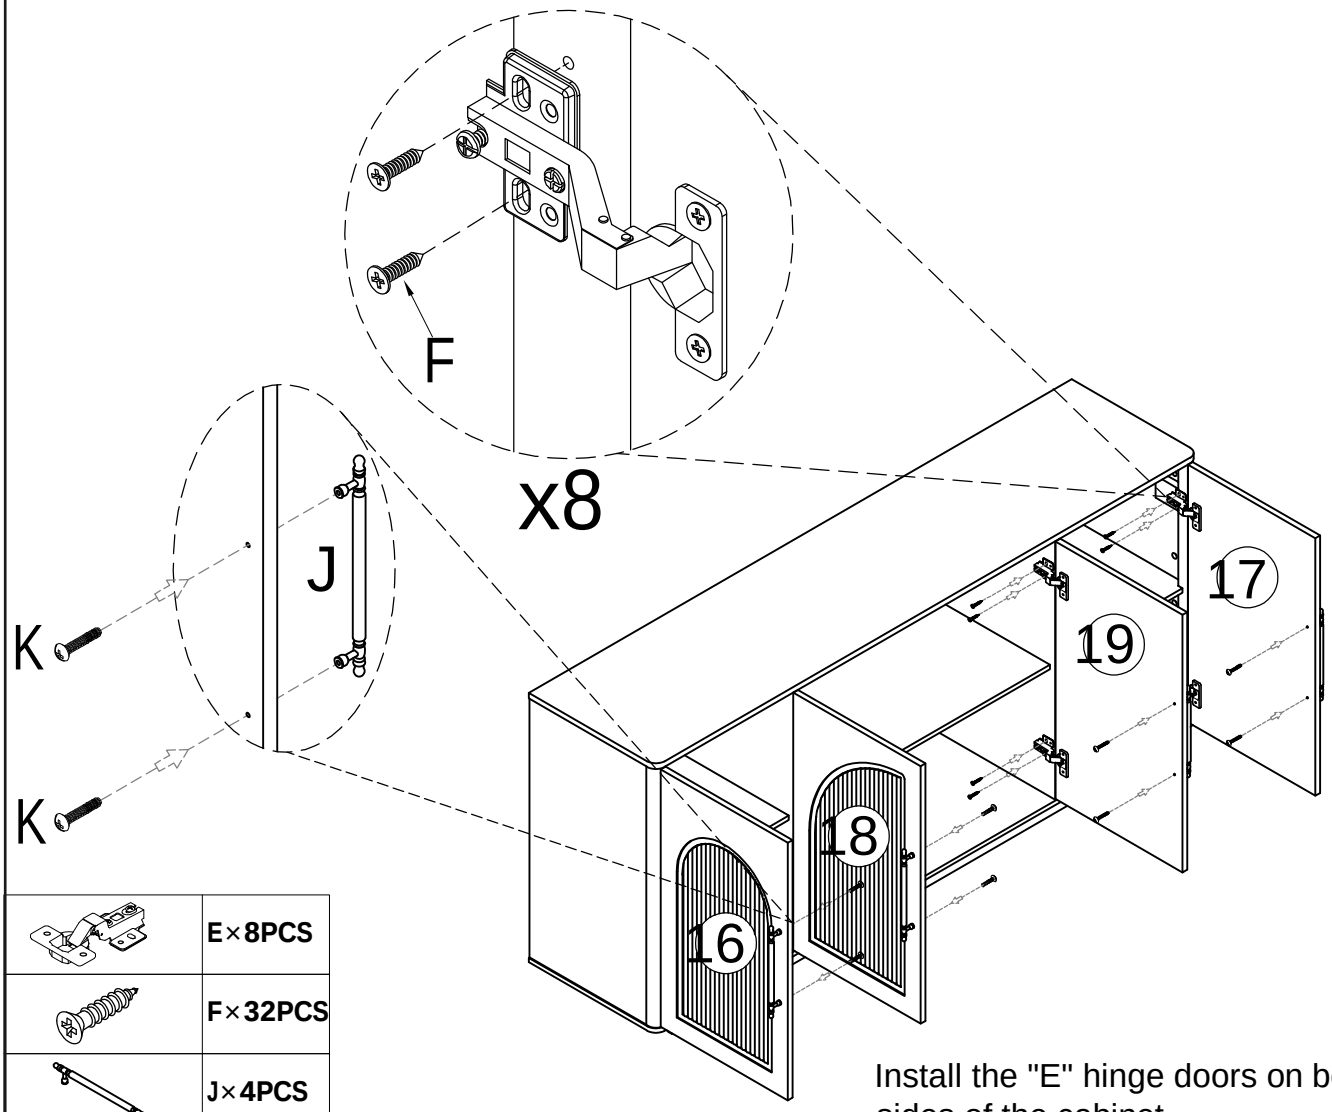


	E×8PCS
	F×32PCS
	J×4PCS
	K×8PCS

Install the "E" hinge doors on both sides of the cabinet.

STEP 16

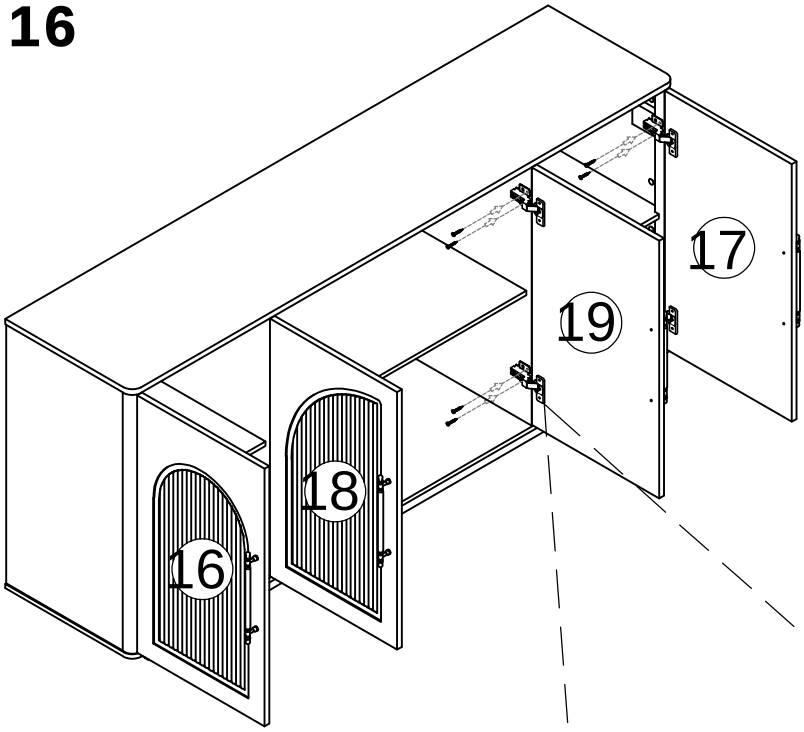

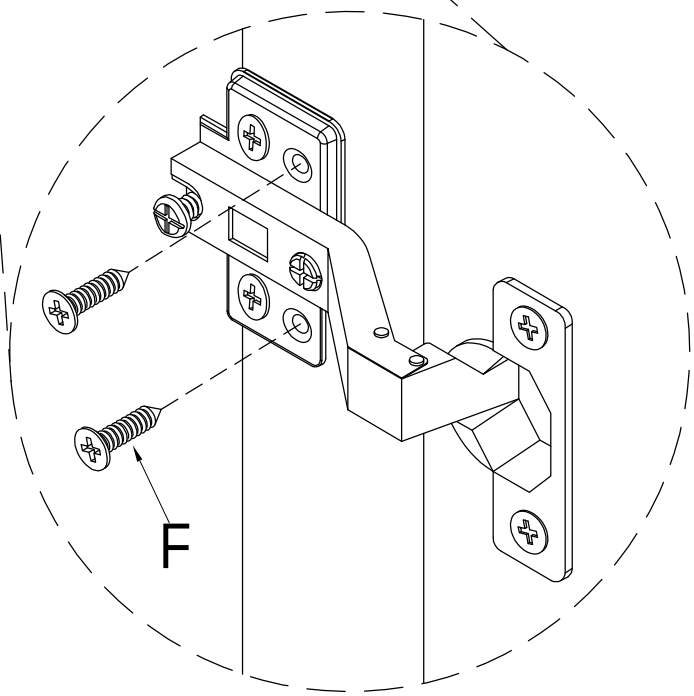


x8

	Tighten the screws when both doors are in same level. Screw front two screws on wing when all are in place


NOTE:
If there is a large gap in the installation of the door, you can return to page 20 or page 21 to view the installation video and installation tutorial.

	**F×16PCS**

STEP 17

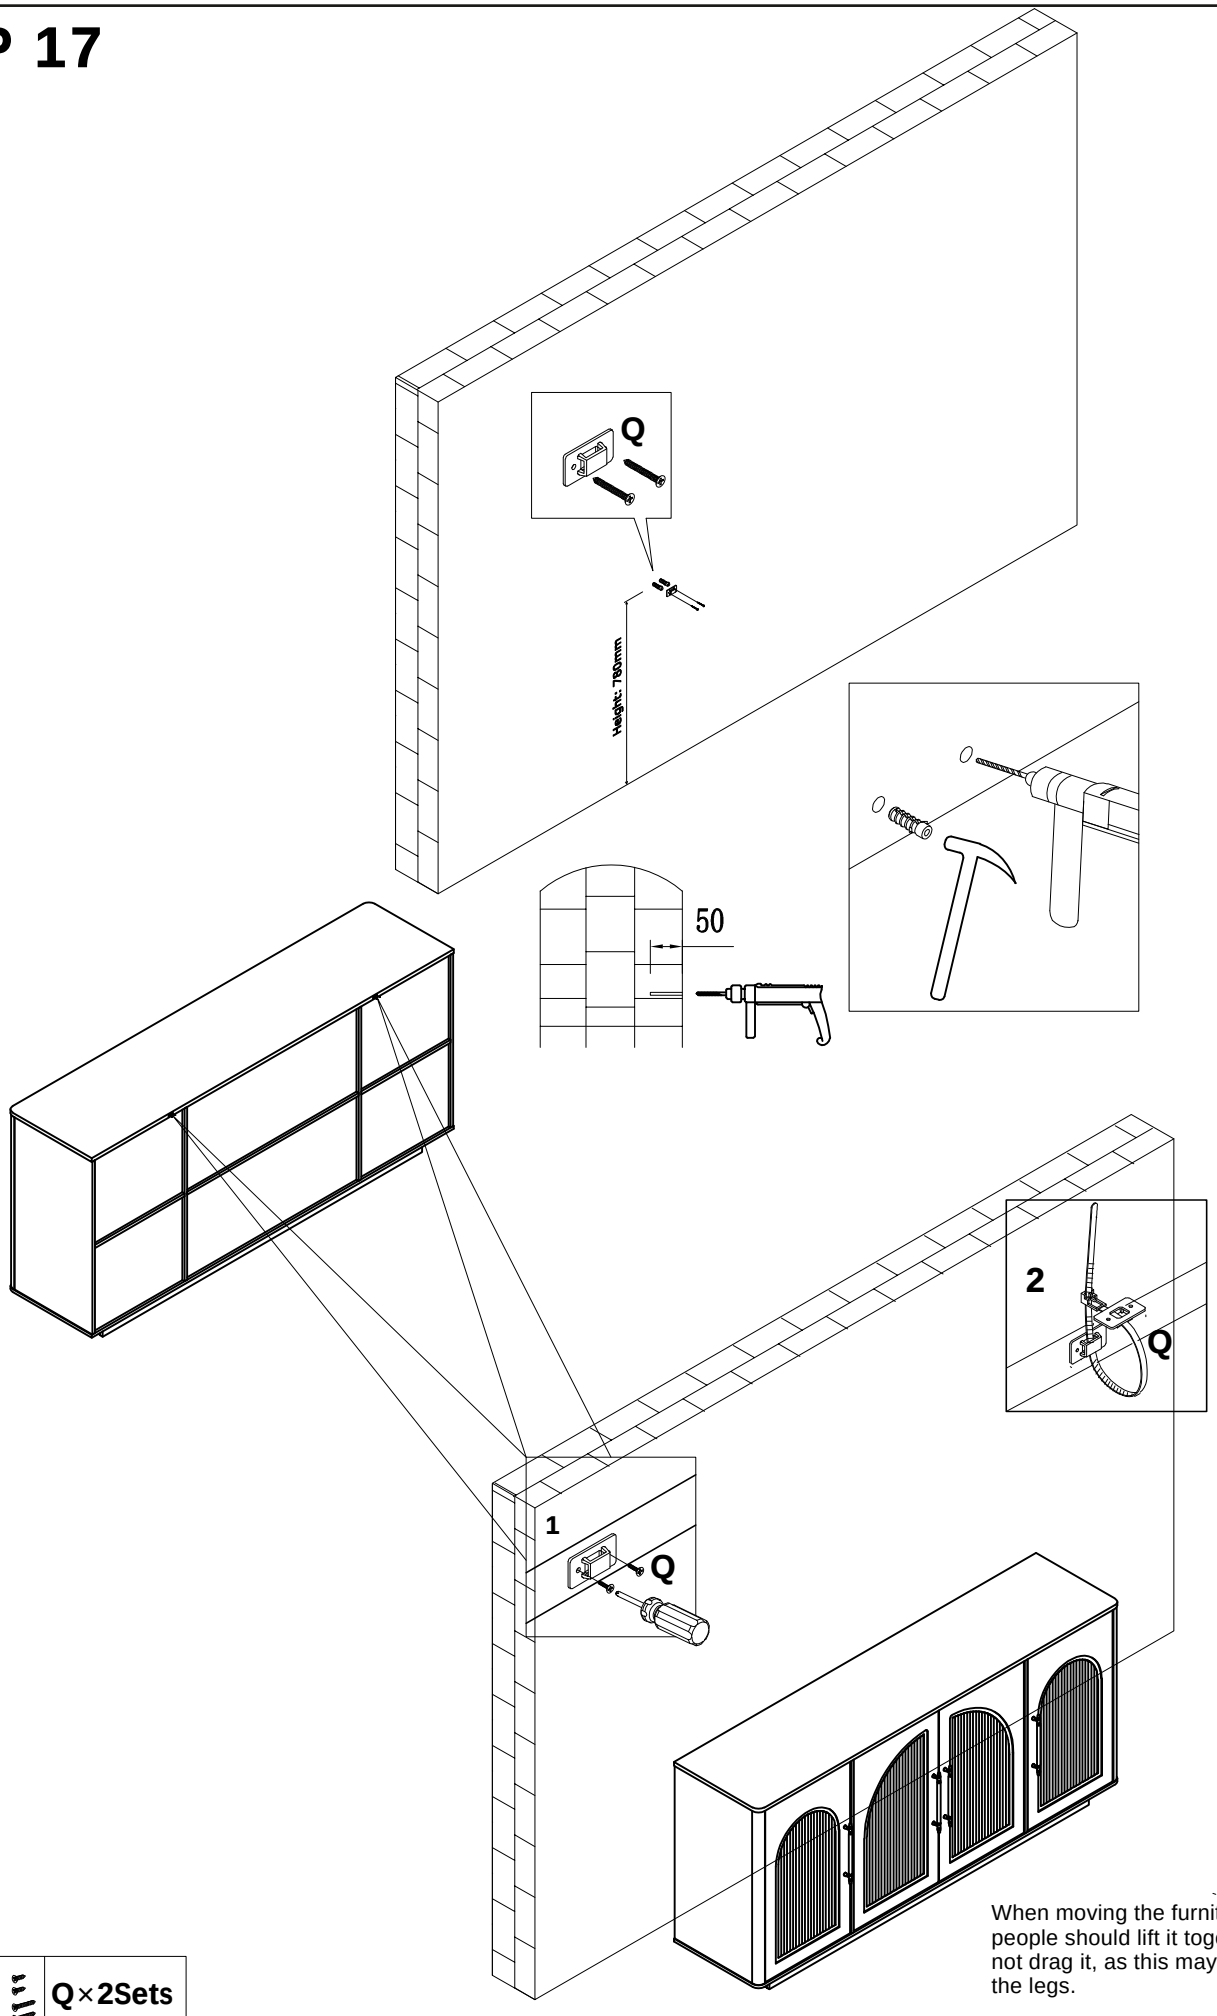

When moving the furniture, two people should lift it together. Do not drag it, as this may damage the legs.



Q×2Sets