

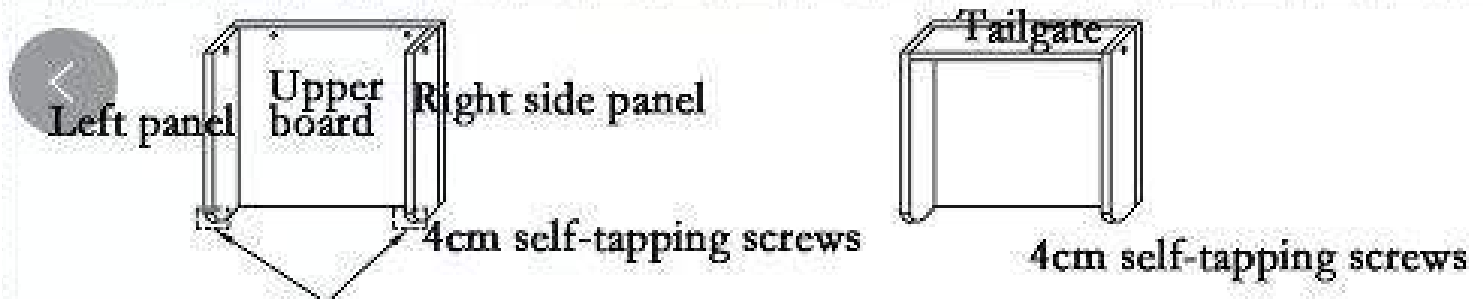
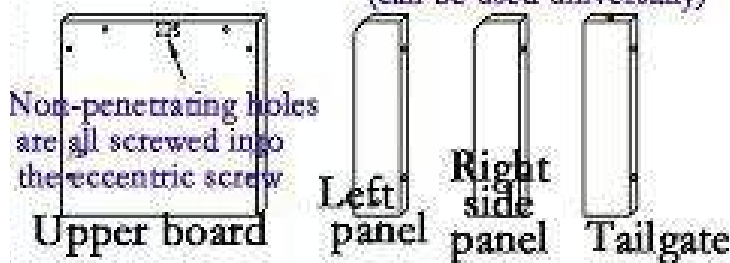
Instruction


Eccentric screw

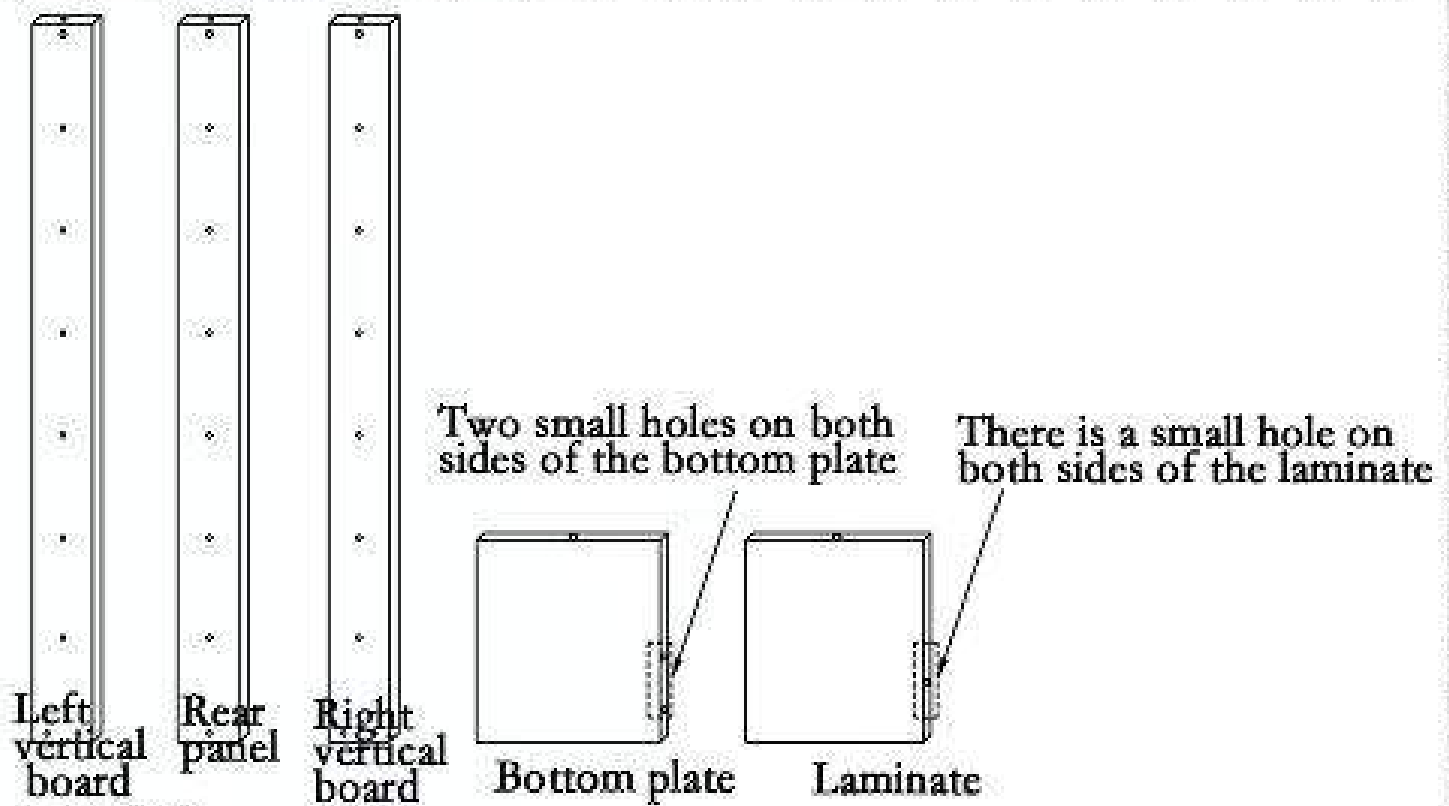

Eccentric bolt

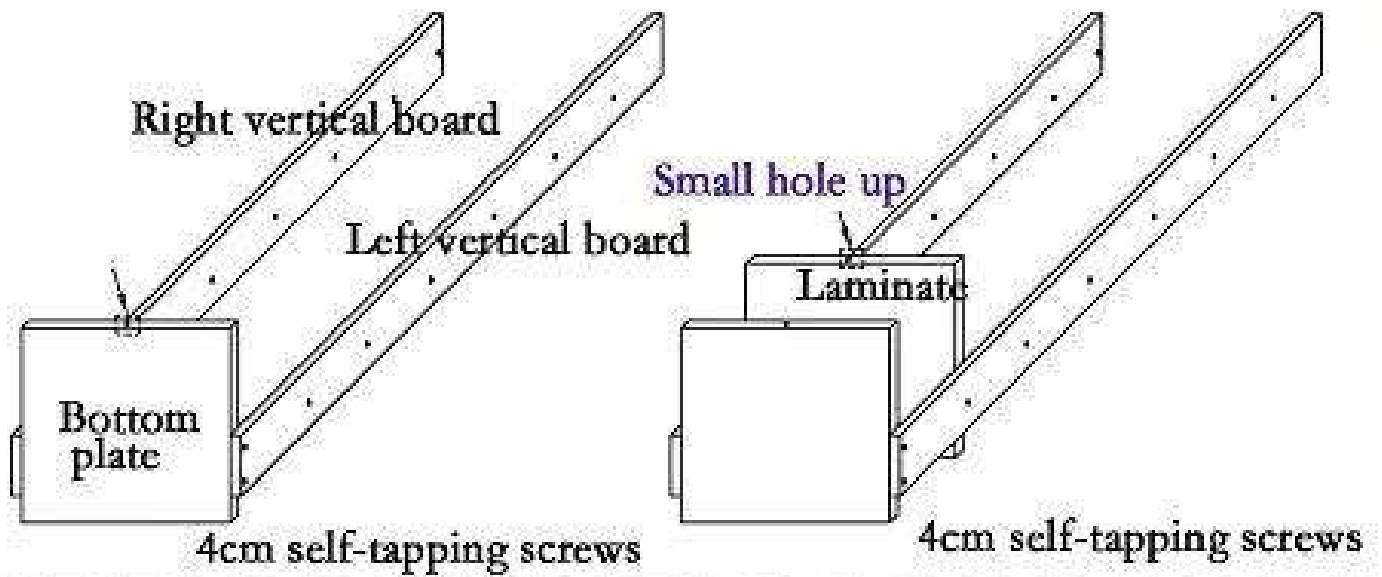

4cm self-tapping screws

(can be used universally)

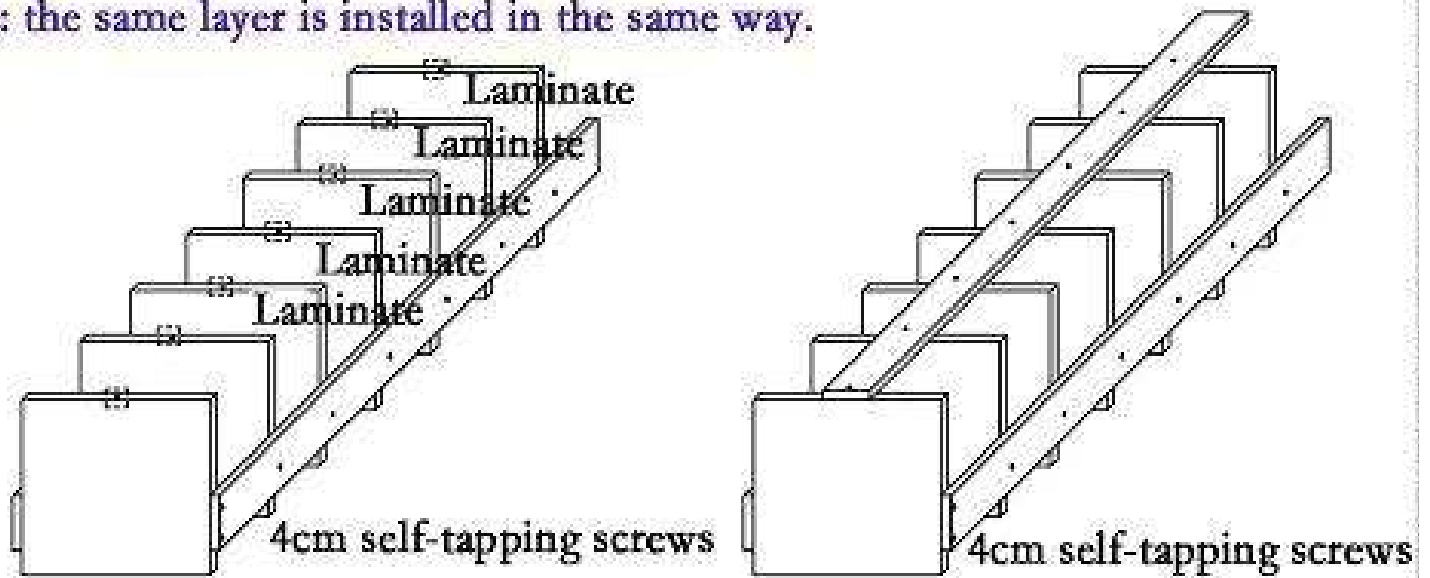


Left and right side panels are facing down





Note: the same layer is installed in the same way.



After the installation is completed, the whole is as follows!

