

COMMIX Exposed Roller


Shower Door
5/16" glass (8mm)

INSTALLATION GUIDE

CAUTION: To reduce the risk of breakage, keep corner protectors on glass while installing. Keep corner protectors for use in case future adjustments are needed. Consult your local plumbing codes prior to installation.

Recommended Clearance Heights for Installation:
74 inches (188 cm)

Recommended Width for Installation:
60-inch enclosure:
56 - 60 3/8 inches (142.2- 153.4 cm)

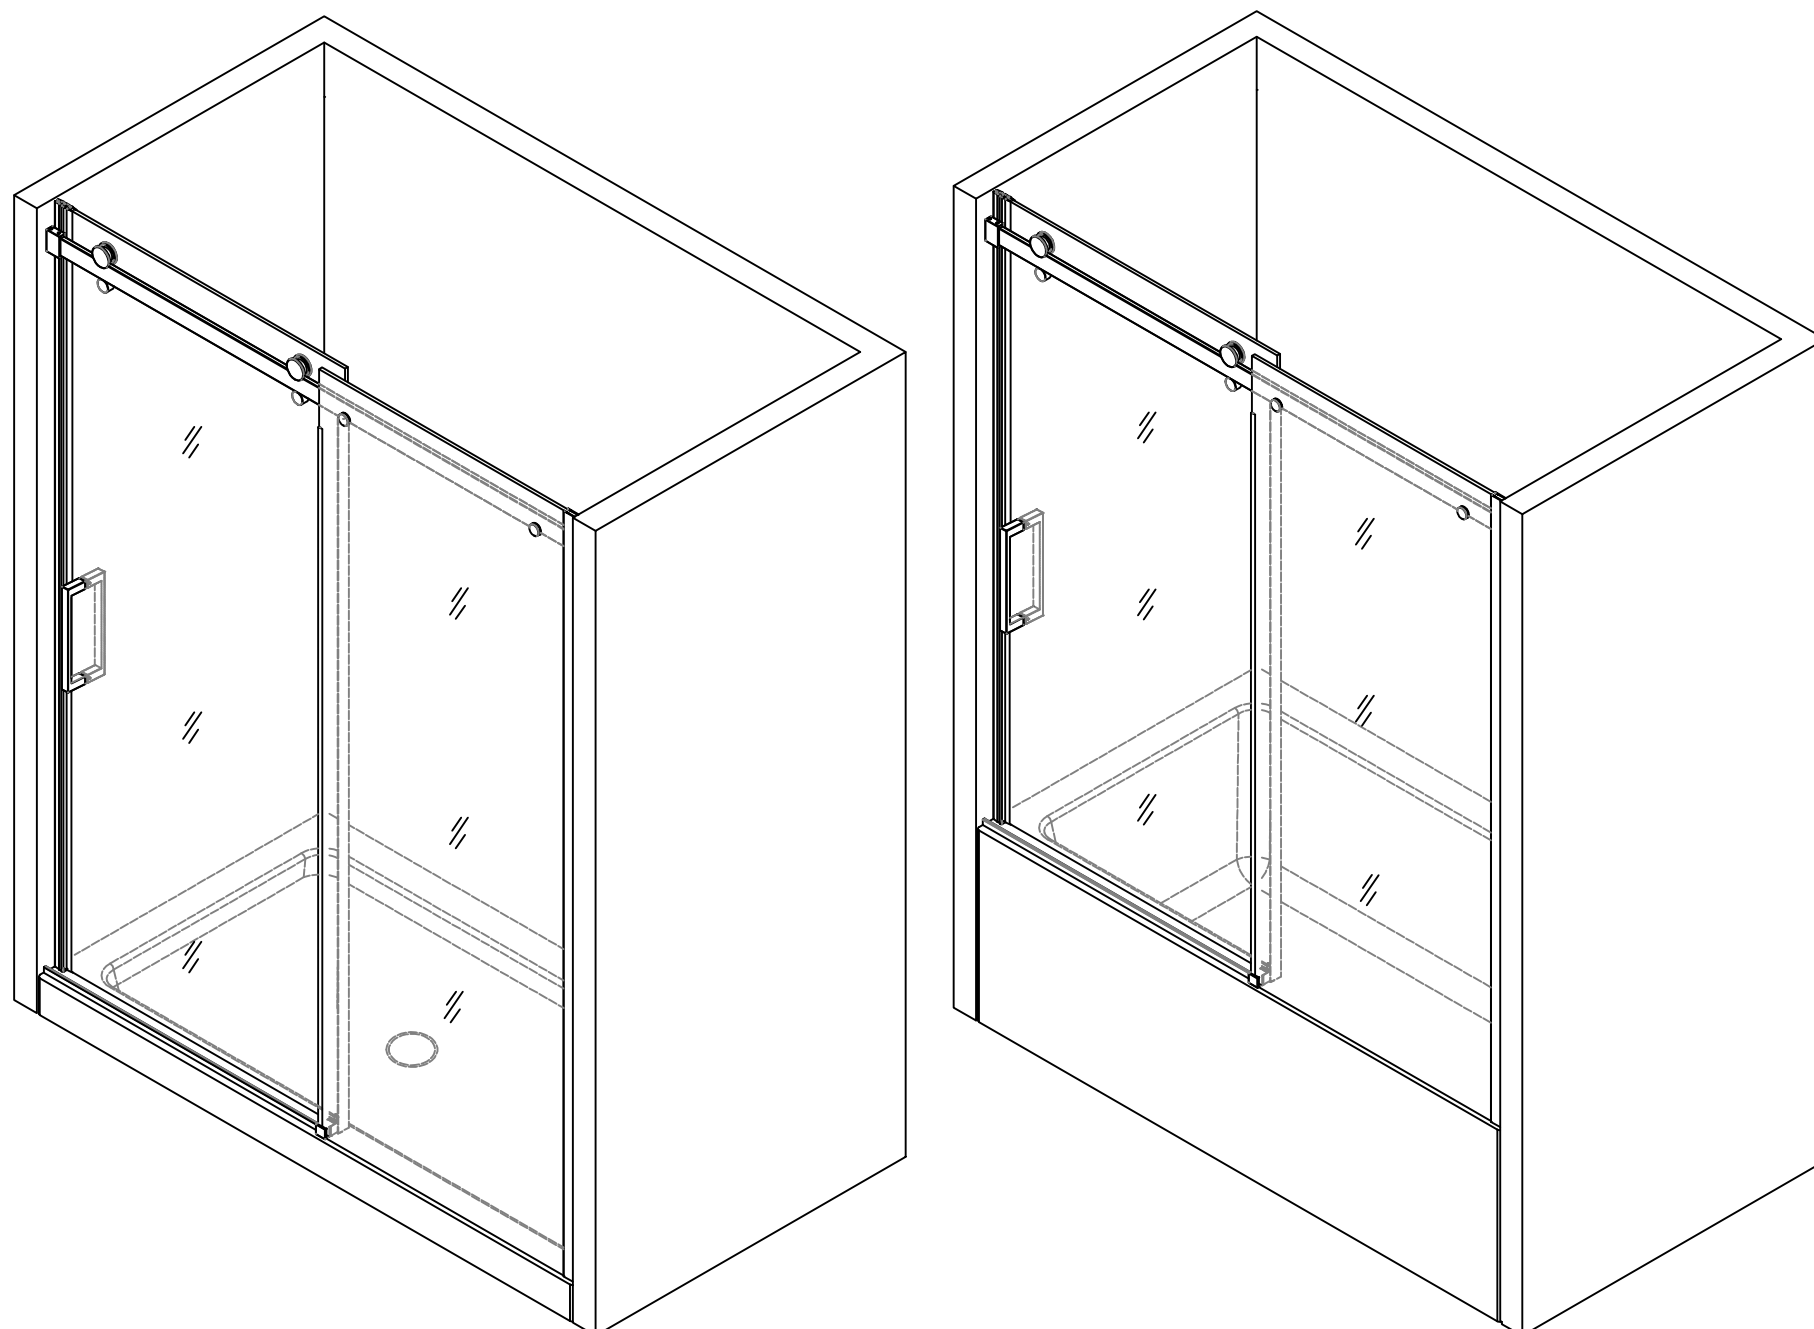


60-inch Enclosure


TOOLS REQUIRED

Drill Bits


Ø1/4" (6mm) & Ø1/8" (3mm) dia.
HSS

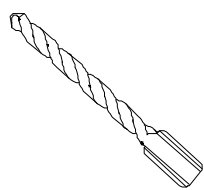


Screw Driver

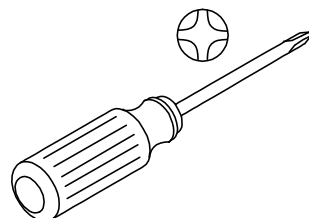


Drill

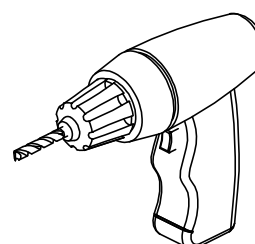


Level

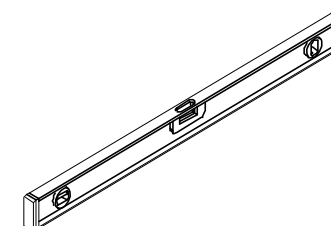


Silicone

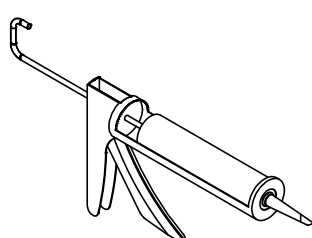


Measuring Tape

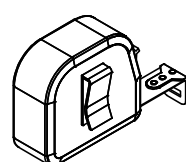


Soft Head Hammer

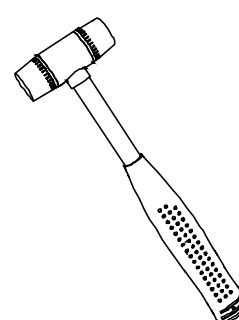


Pencil

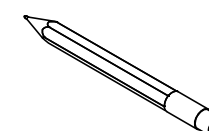

Knife

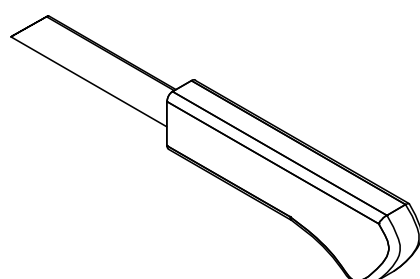


Sealant

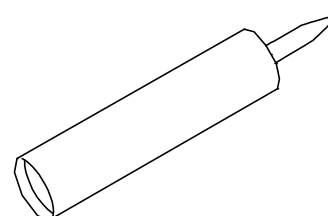


MASONRY DRILL BIT FOR TILE Ø6mm




Safety Glasses

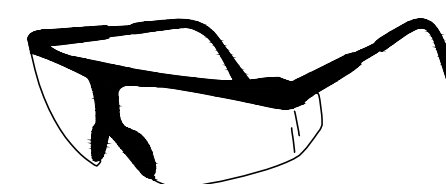


Glove

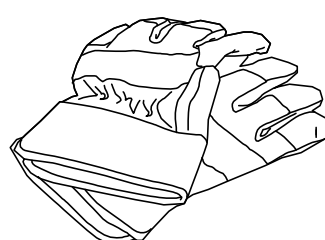


Carpenter's Squarer

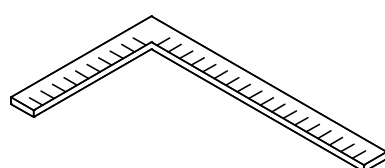


Masking or painter's tape

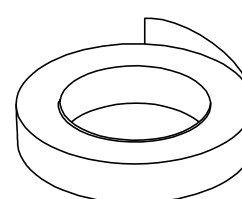

Hack Saw

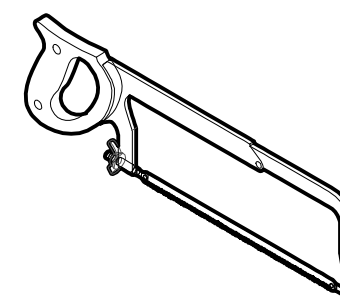

Metal File

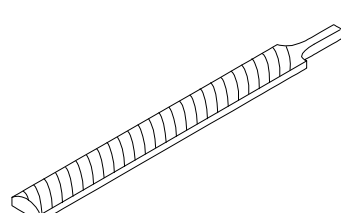

CAUTION: When cutting or drilling metal components or when handling glass, to reduce the risk of personal injury, protective eye wear, gloves, and closed-toe shoes are required.

SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.


To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.

NOTE: Two people should perform this installaton.

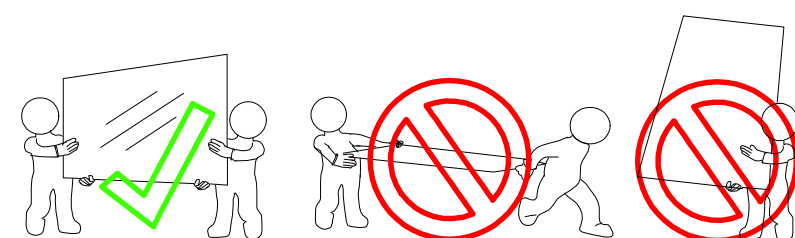

DOOR ASSEMBLY

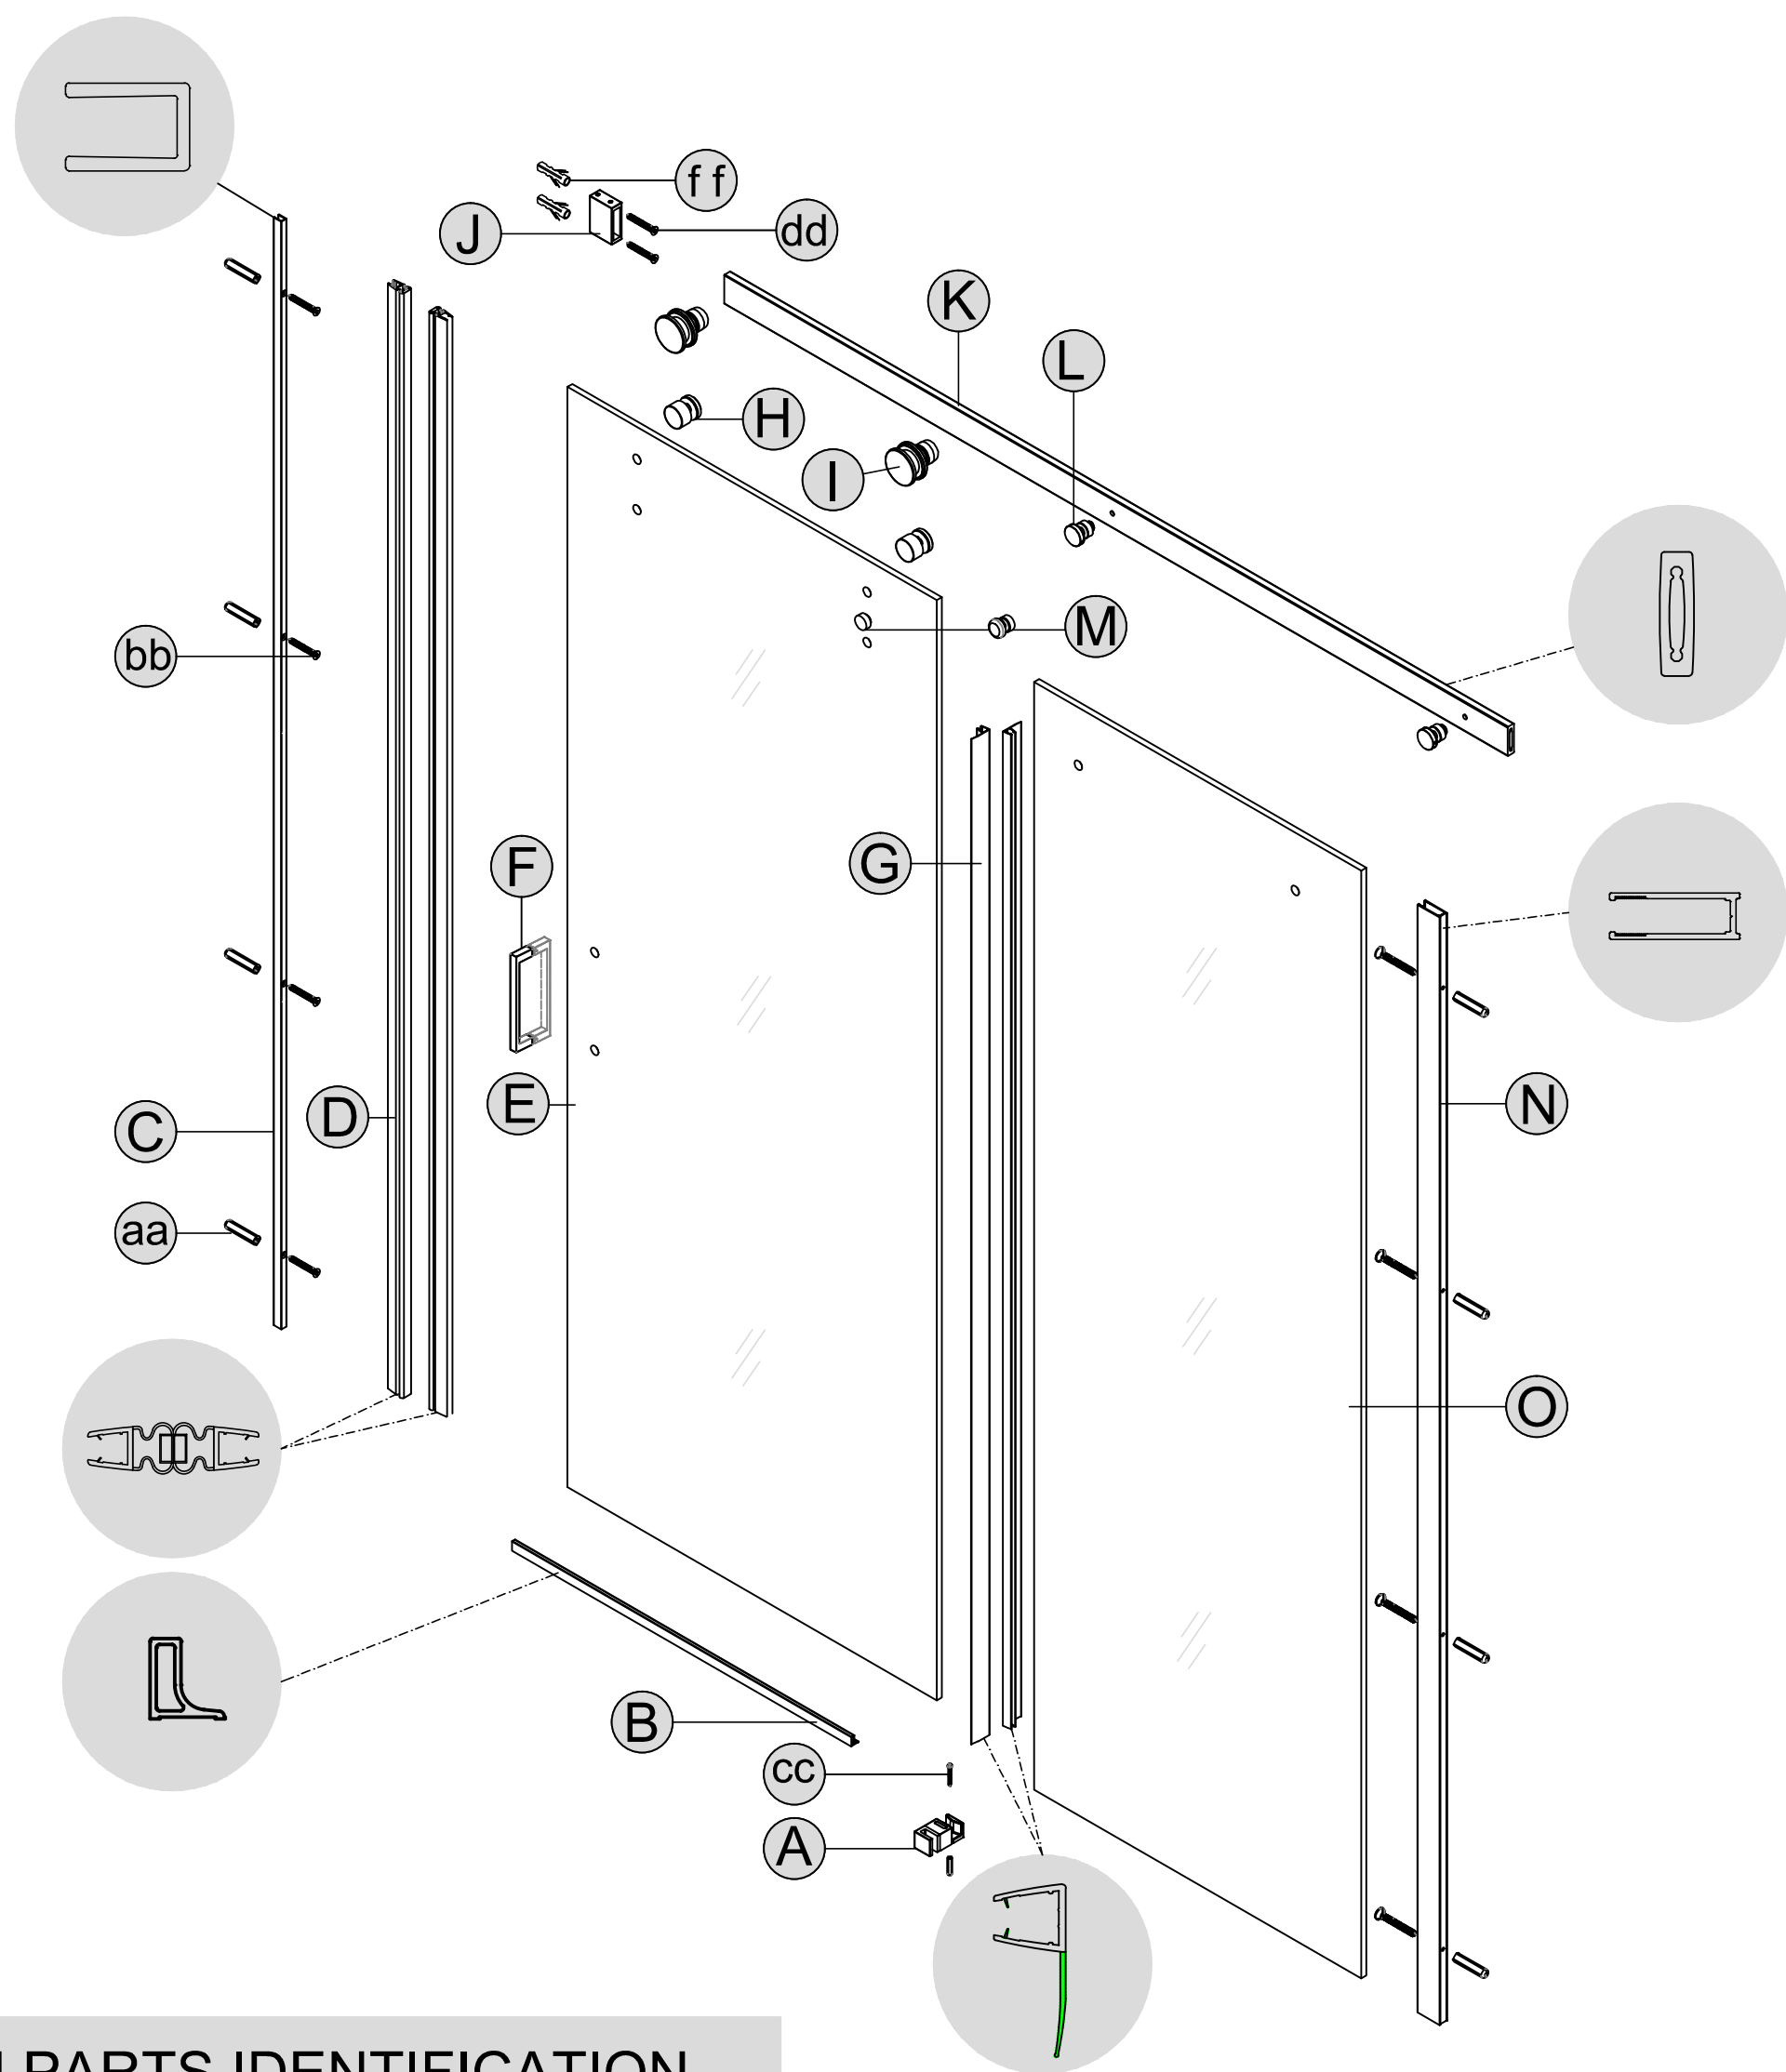

CARTON PARTS IDENTIFICATION
See following pages for detailed component diagrams

PART#	DESCRIPTION	QTY
A	Guide Block	1
B	Alu. Threshold	1
C	U Channel	1
D	Magnetic Strip	2
E	Glass Door	1
F	Handle	1
G	Anti-Water Strip	2
H	Roller Guard	2

PART#	DESCRIPTION	QTY
I	Roller	2
J	Wall Bracket	1
K	Upper Guide Rail	1
L	Glass Bracket	2
M	Stopper	1
N	Wall Jamb	1
O	Stationary Glass	1

