




Vanity Table Manual

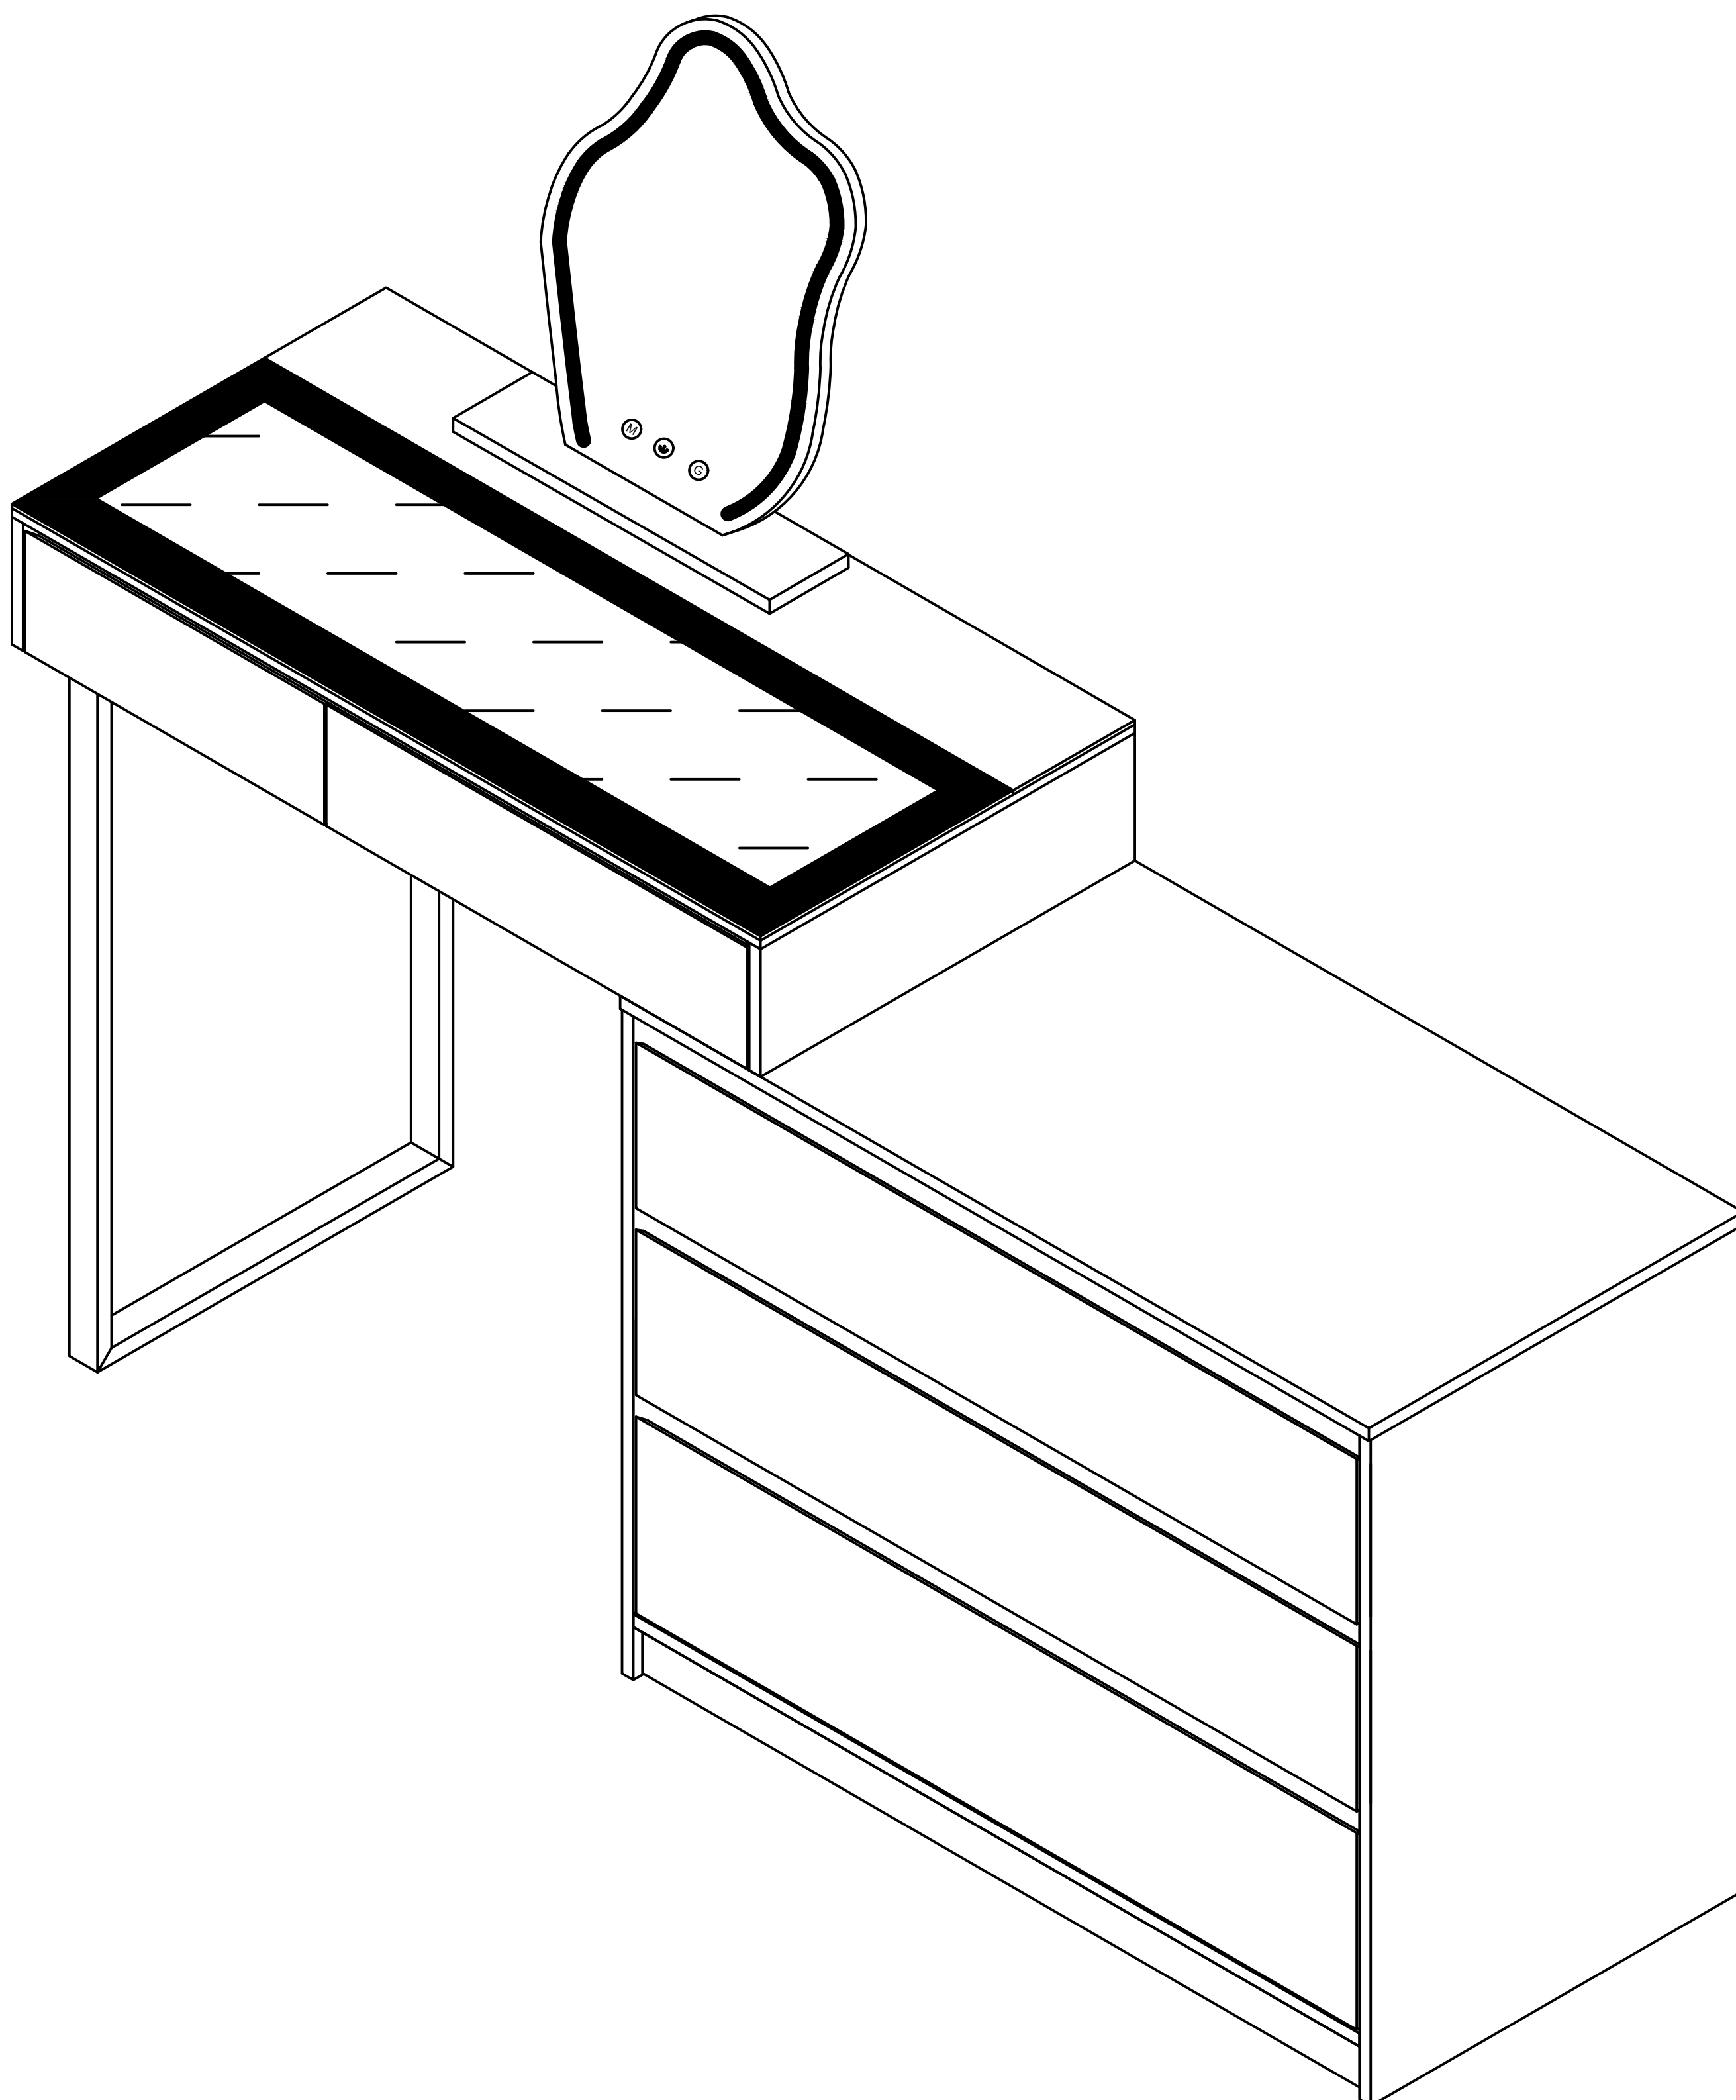


Effect 1

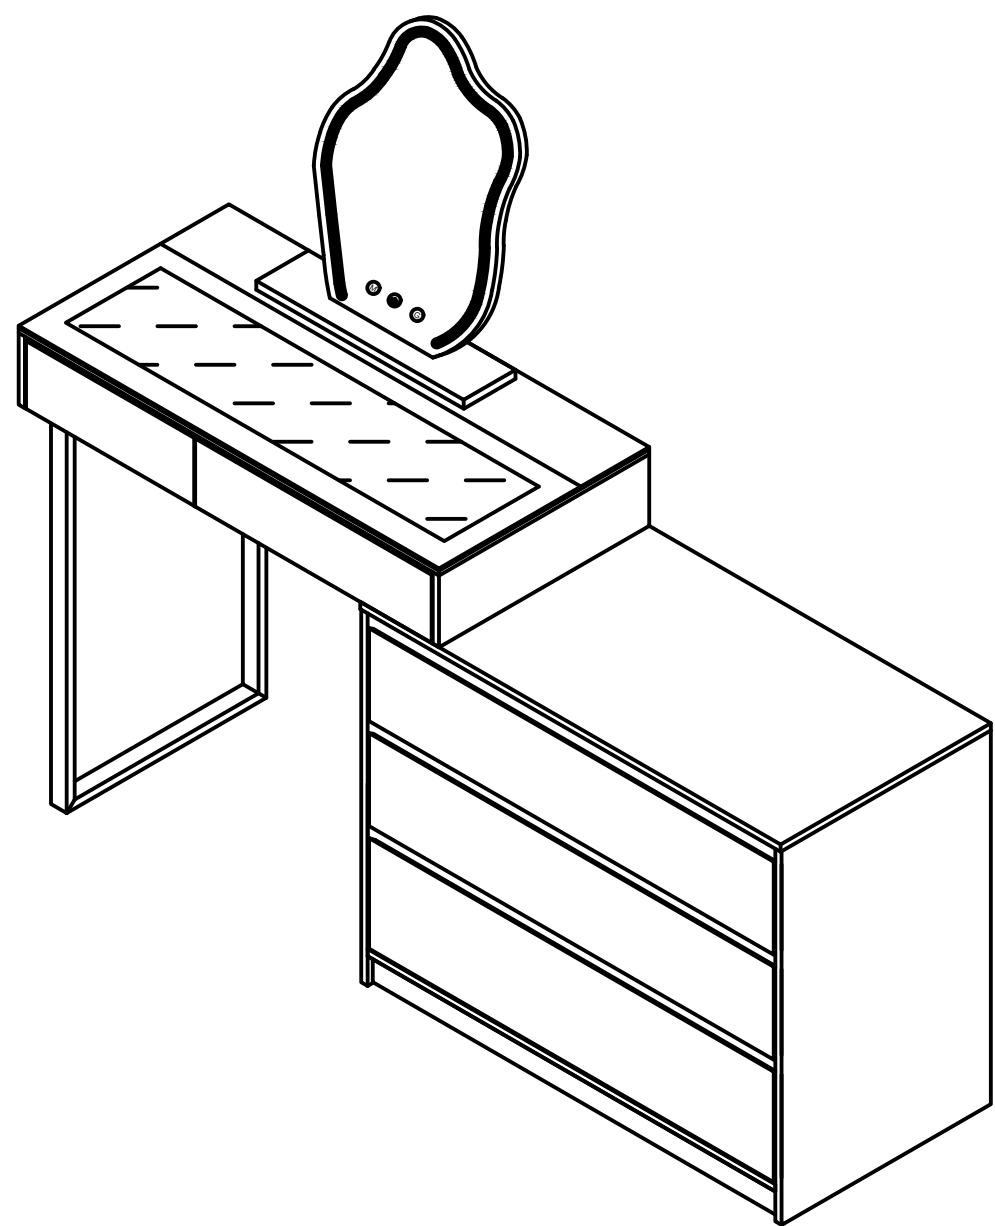


Effect 2

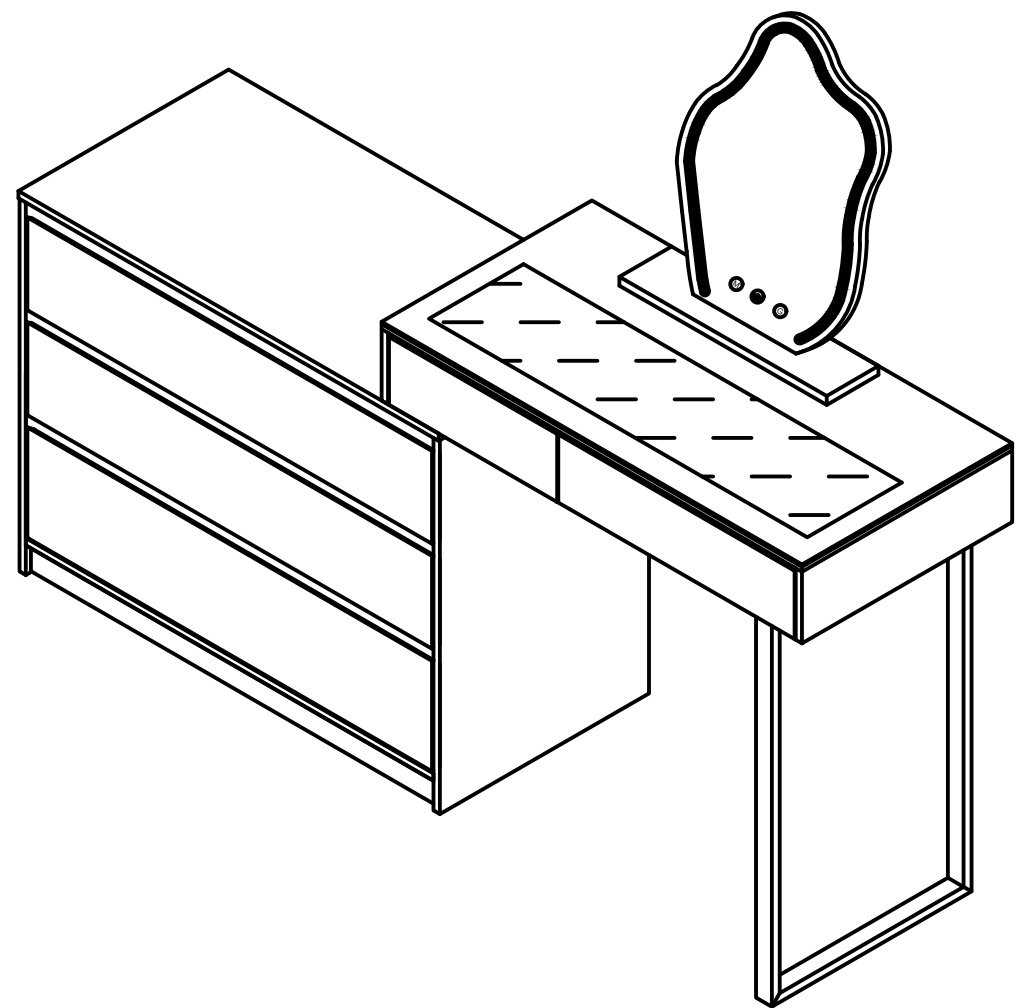


Effect 3

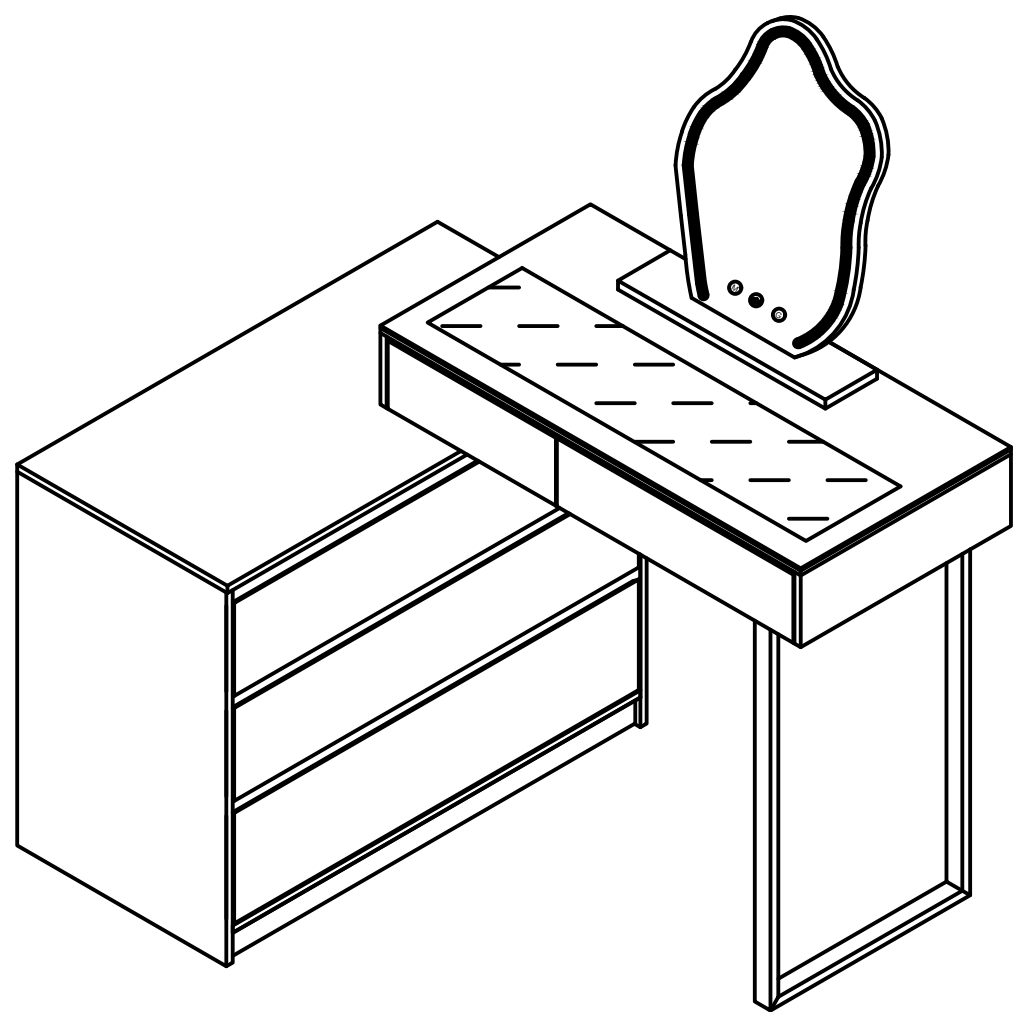


Effect 4

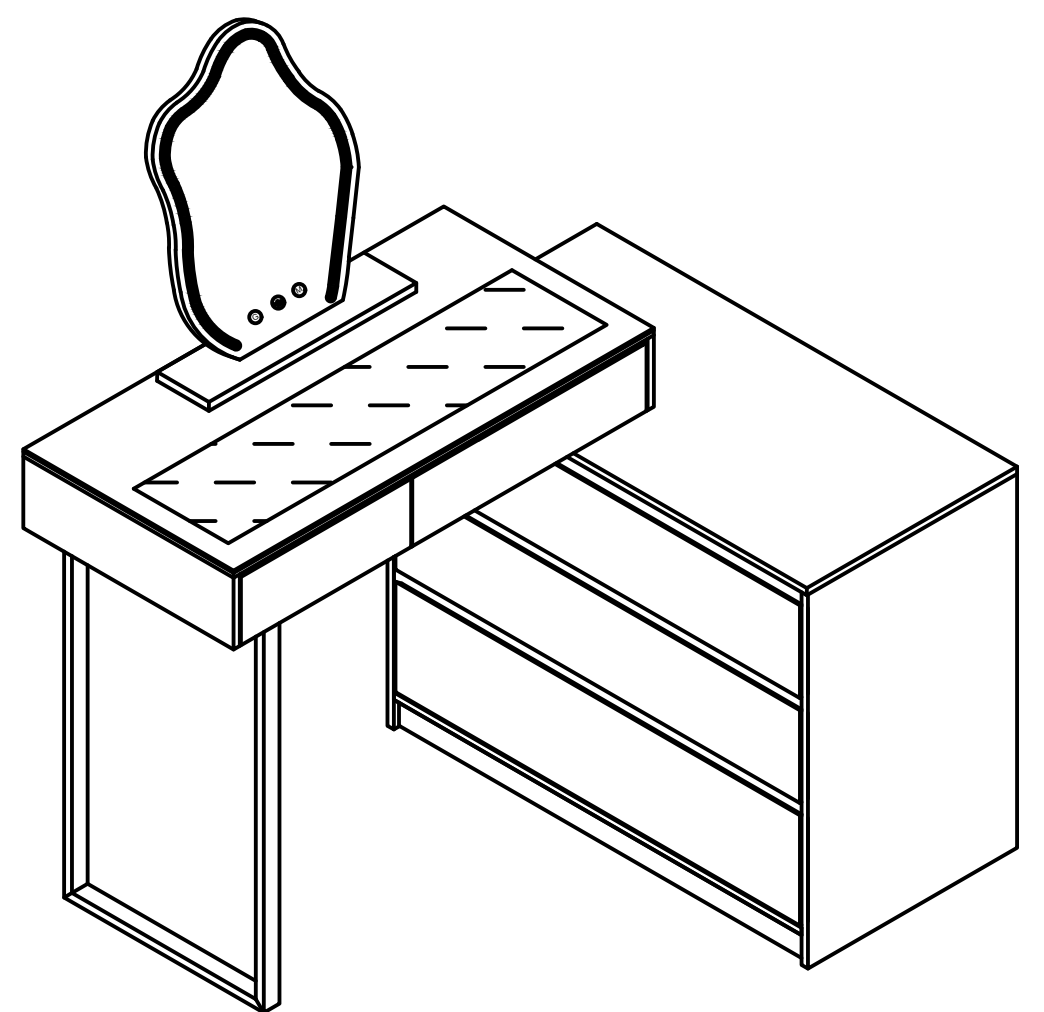


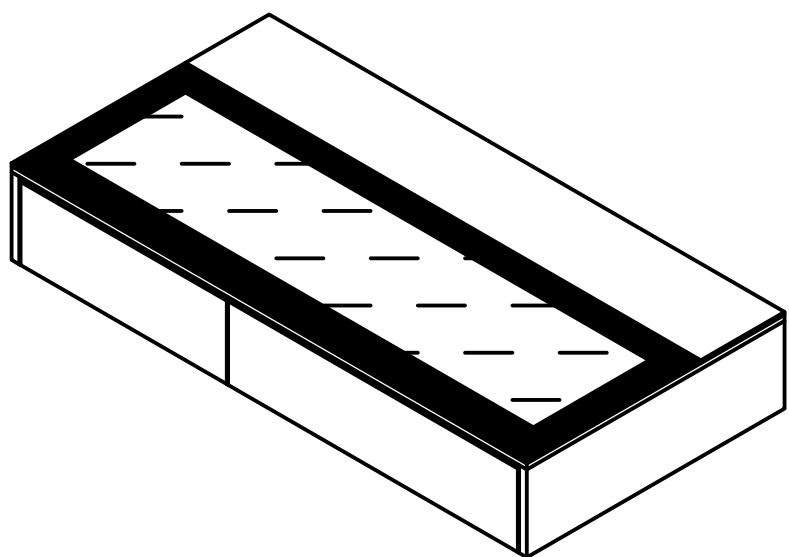


Ax1

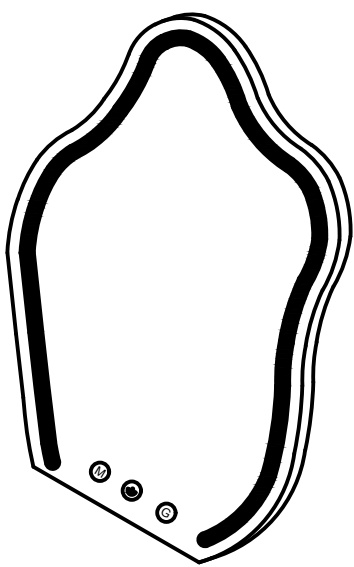


Bx1

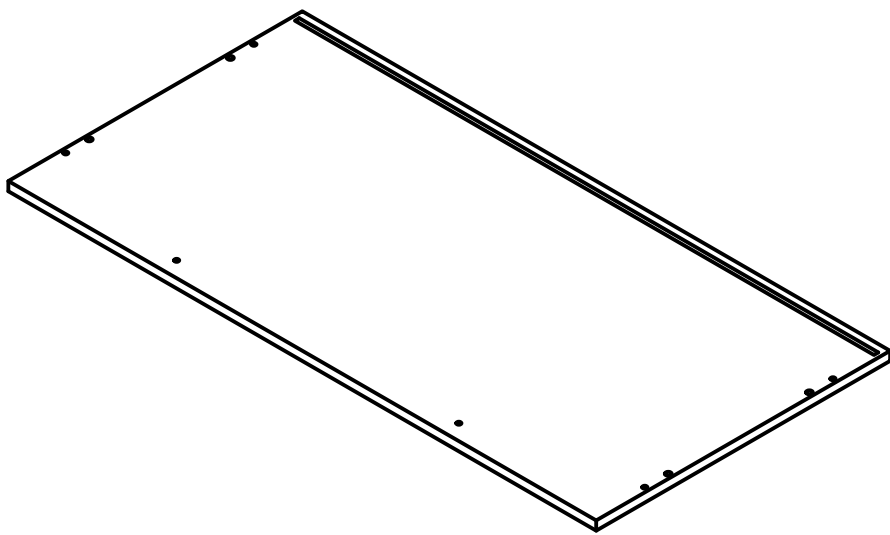


Cx1

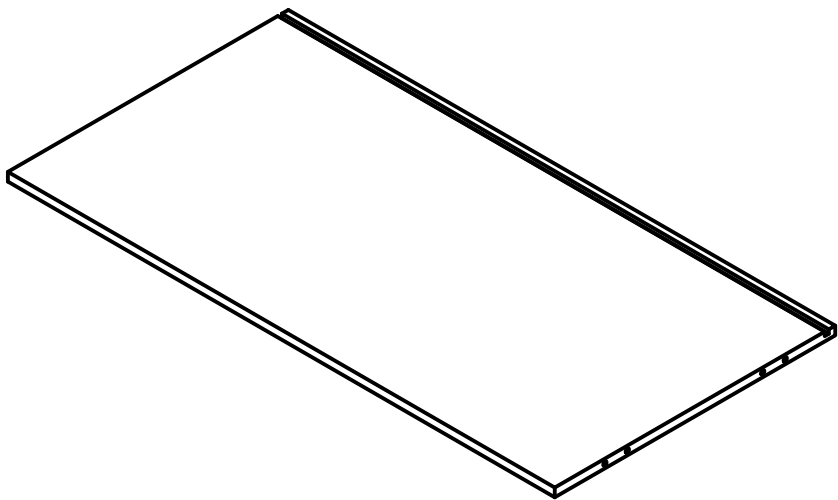


Dx1

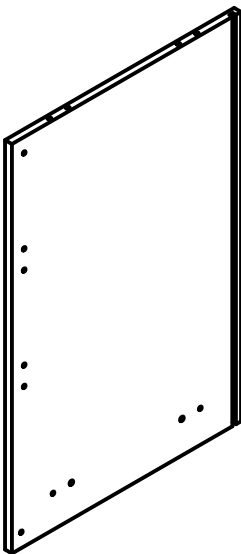


Ex1

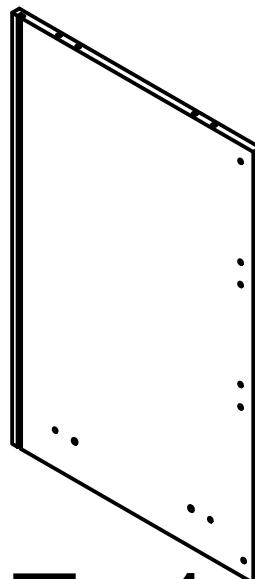


Fx1

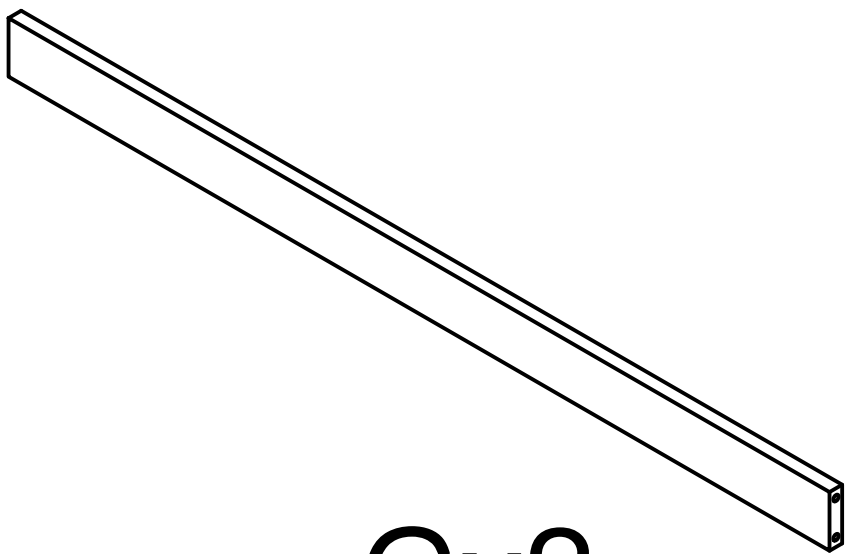


Gx2

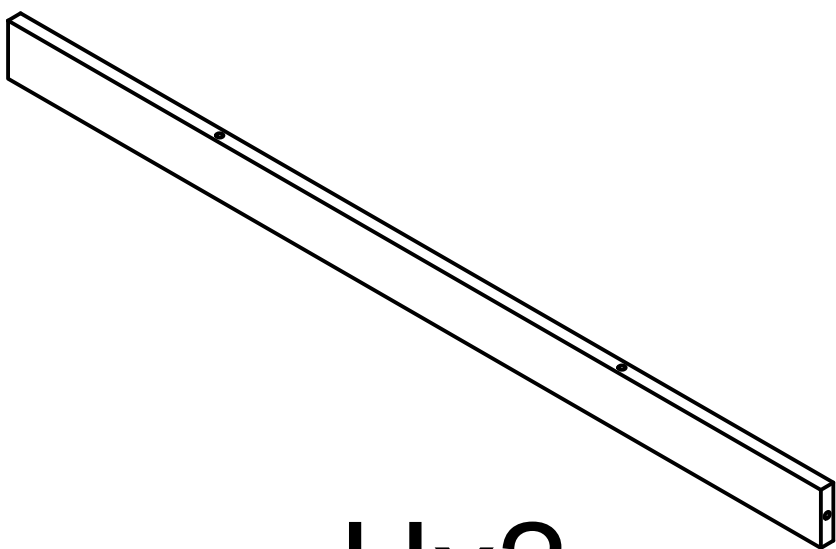


Hx2

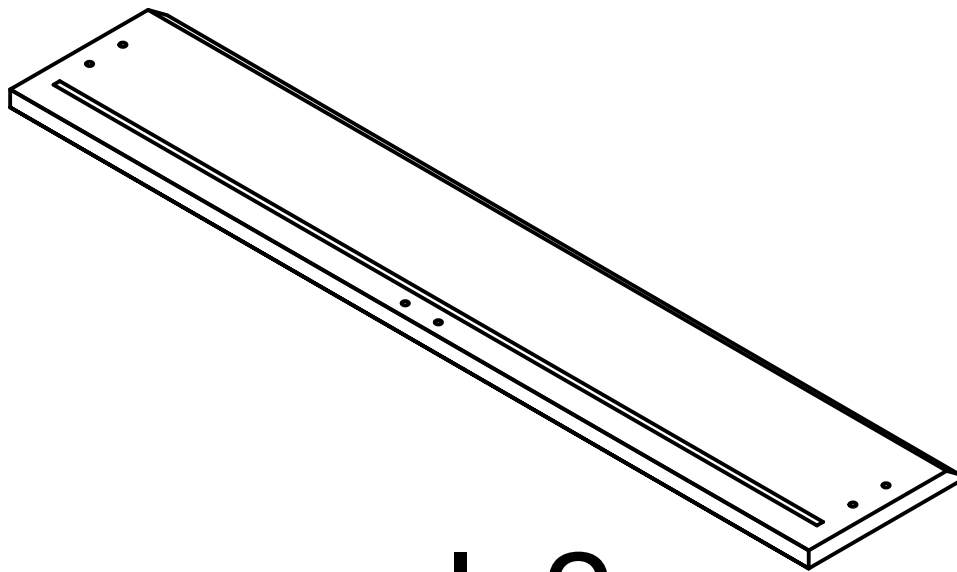


Ix2

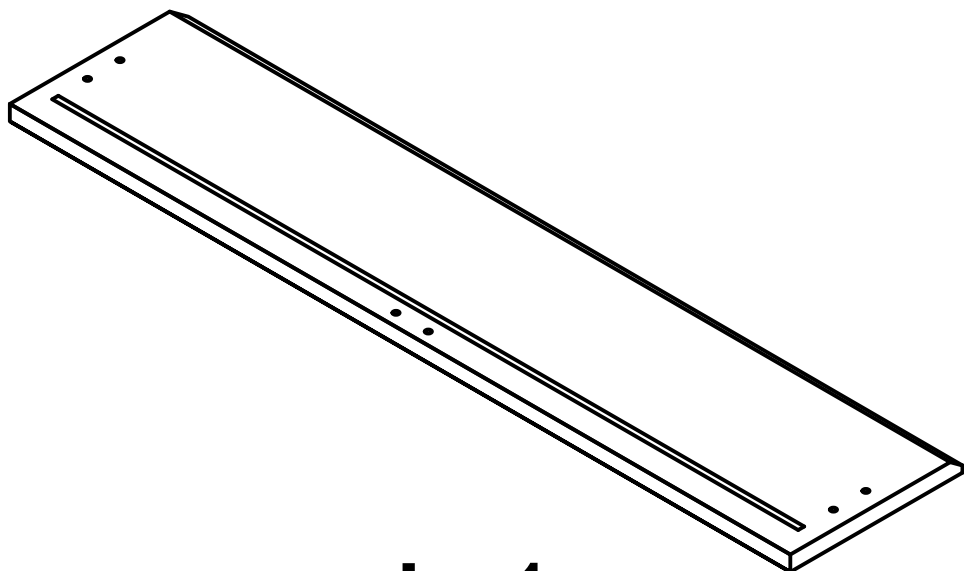


Jx1

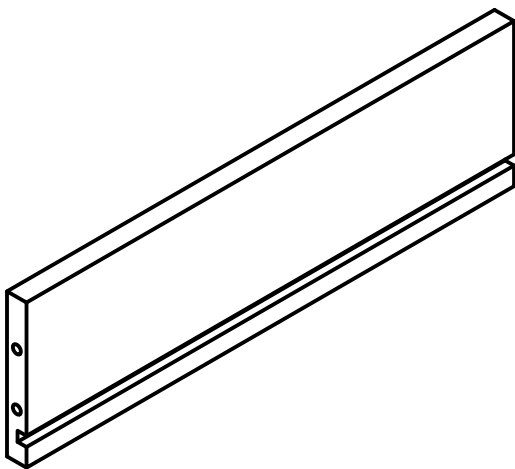


Kx3

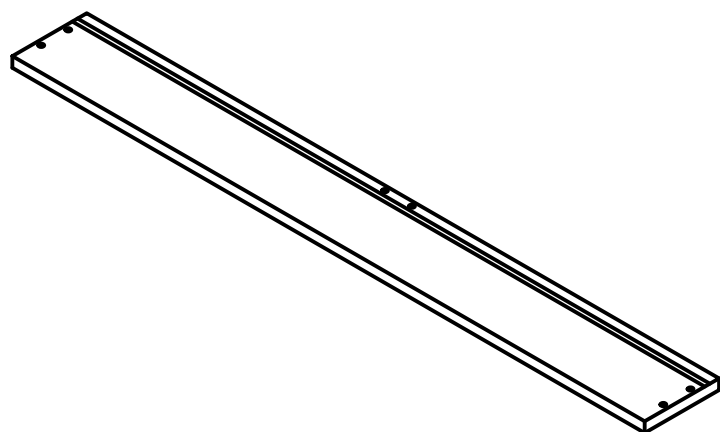


Lx3

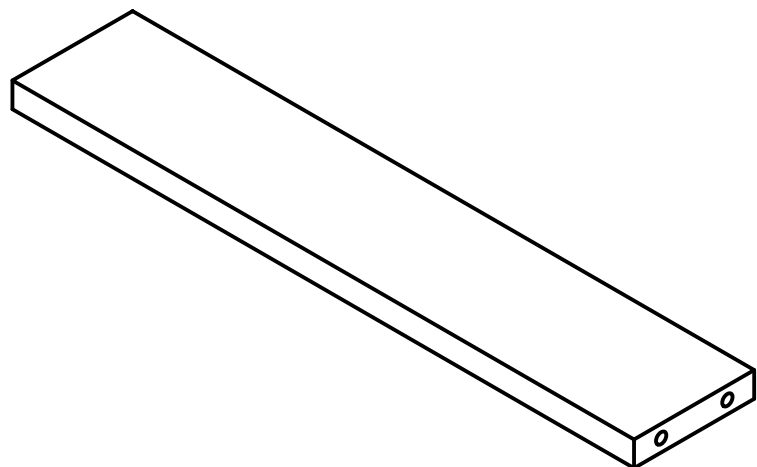


Mx3

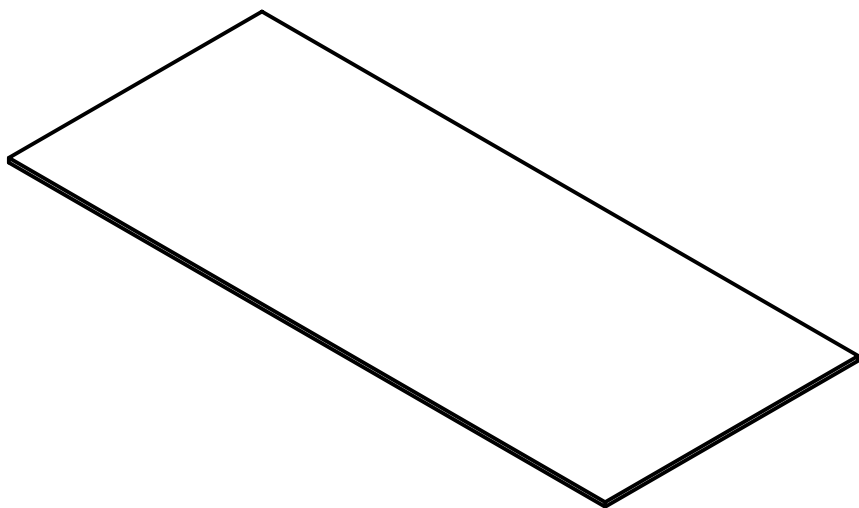


Nx3

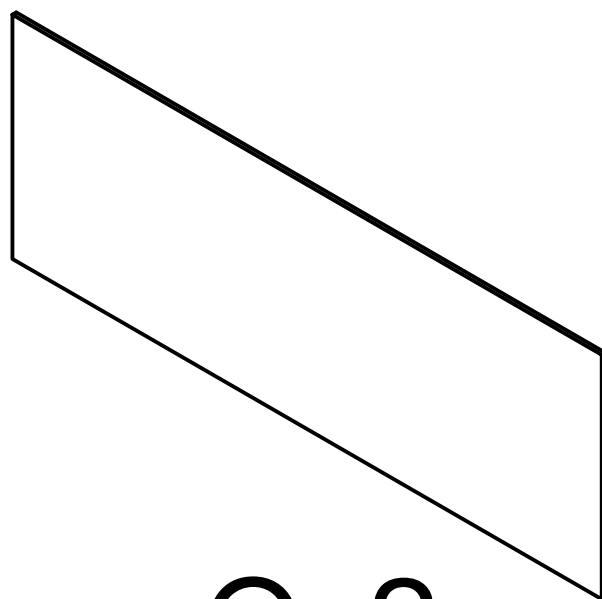


Ox2

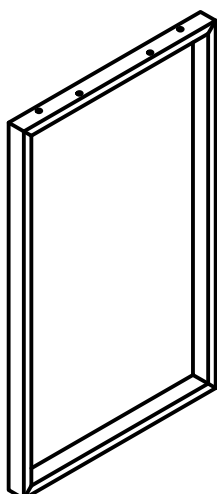

Px1













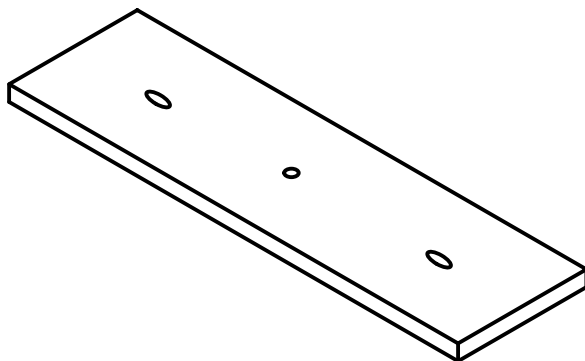


Qx1

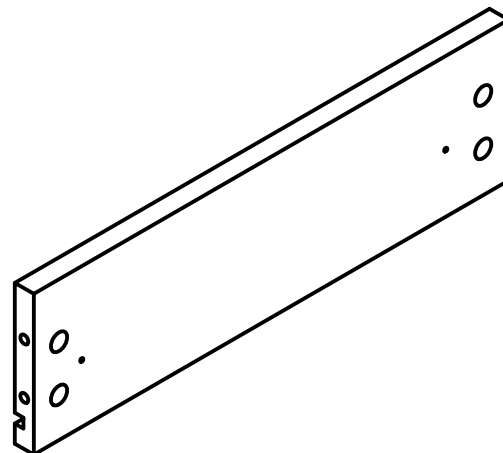






Rx3

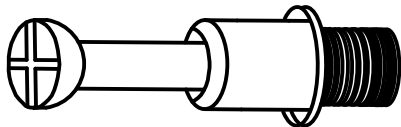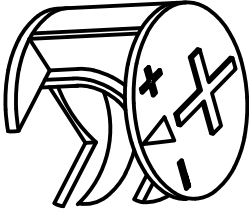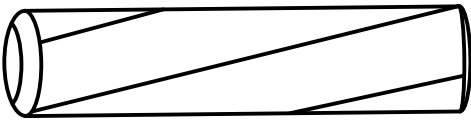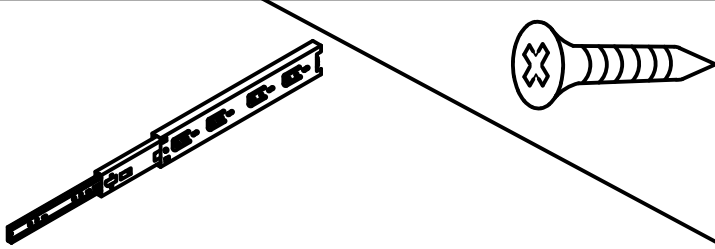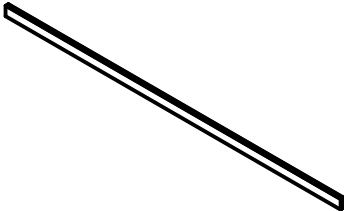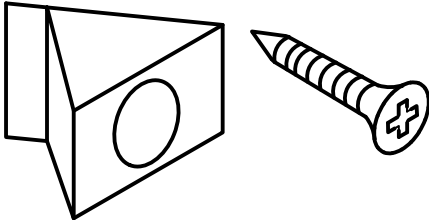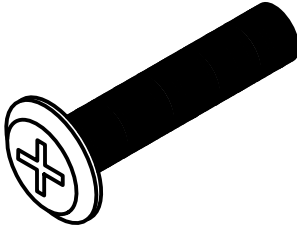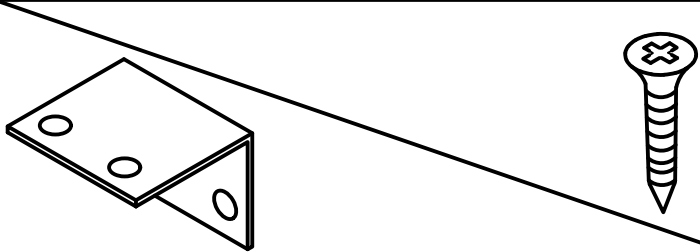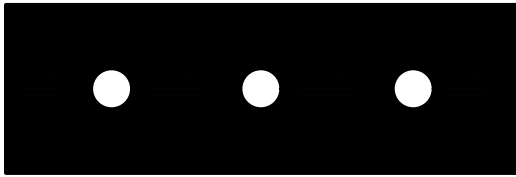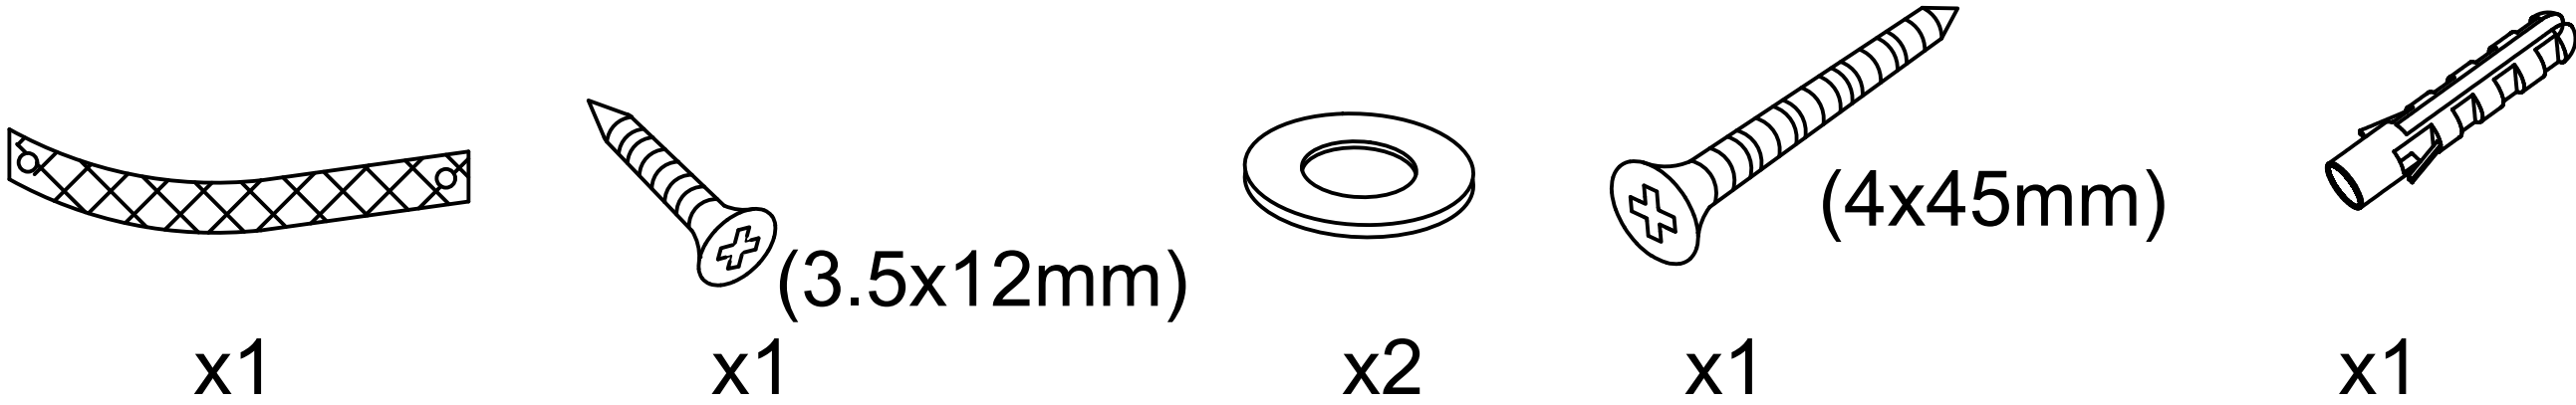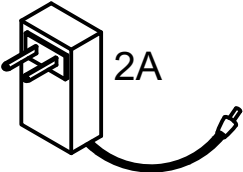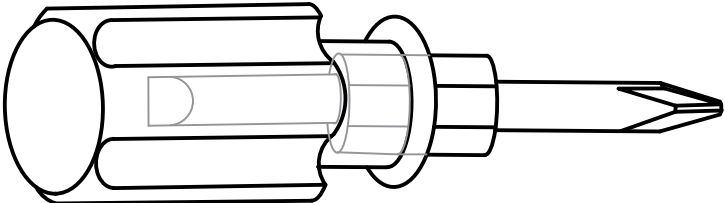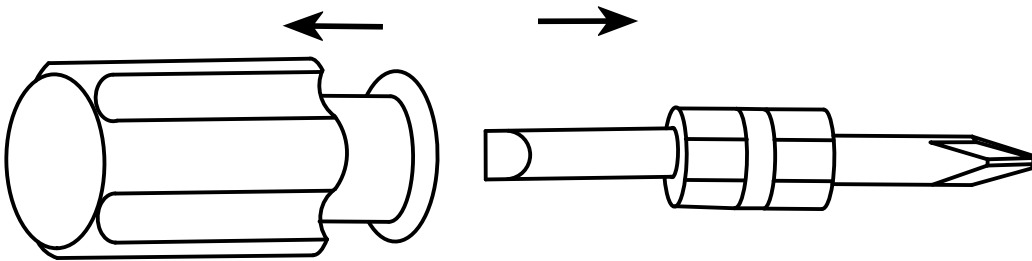


1		Two In One Screw (6x28mm)	60pcs +2pcs
2		Two In One Nut (10x12mm)	60pcs +2pcs
3		Wood Chipping (6x30mm)	8pcs +2pcs
4		Guide&Screw (3x12mm)	30pcs +6pcs 6pcs
5		Small Non-slip pads	6pcs +2pcs
6		Backboard Card Strip (774mm)	1pcs
7		Fixing Clip & Screw (3x16mm)	8pcs +1pcs
8		Screw (6x28mm)	7pcs
9		Corner Code & Screw (3.5x12mm)	8pcs +1pcs 2pcs
10		Big Non-slip pads	1pcs
Anti tipping hardware			
11			
		AC/DC Adapter	1pcs
 1pcs  Double-head screwdriver, use as required 			

Product structure decomposition

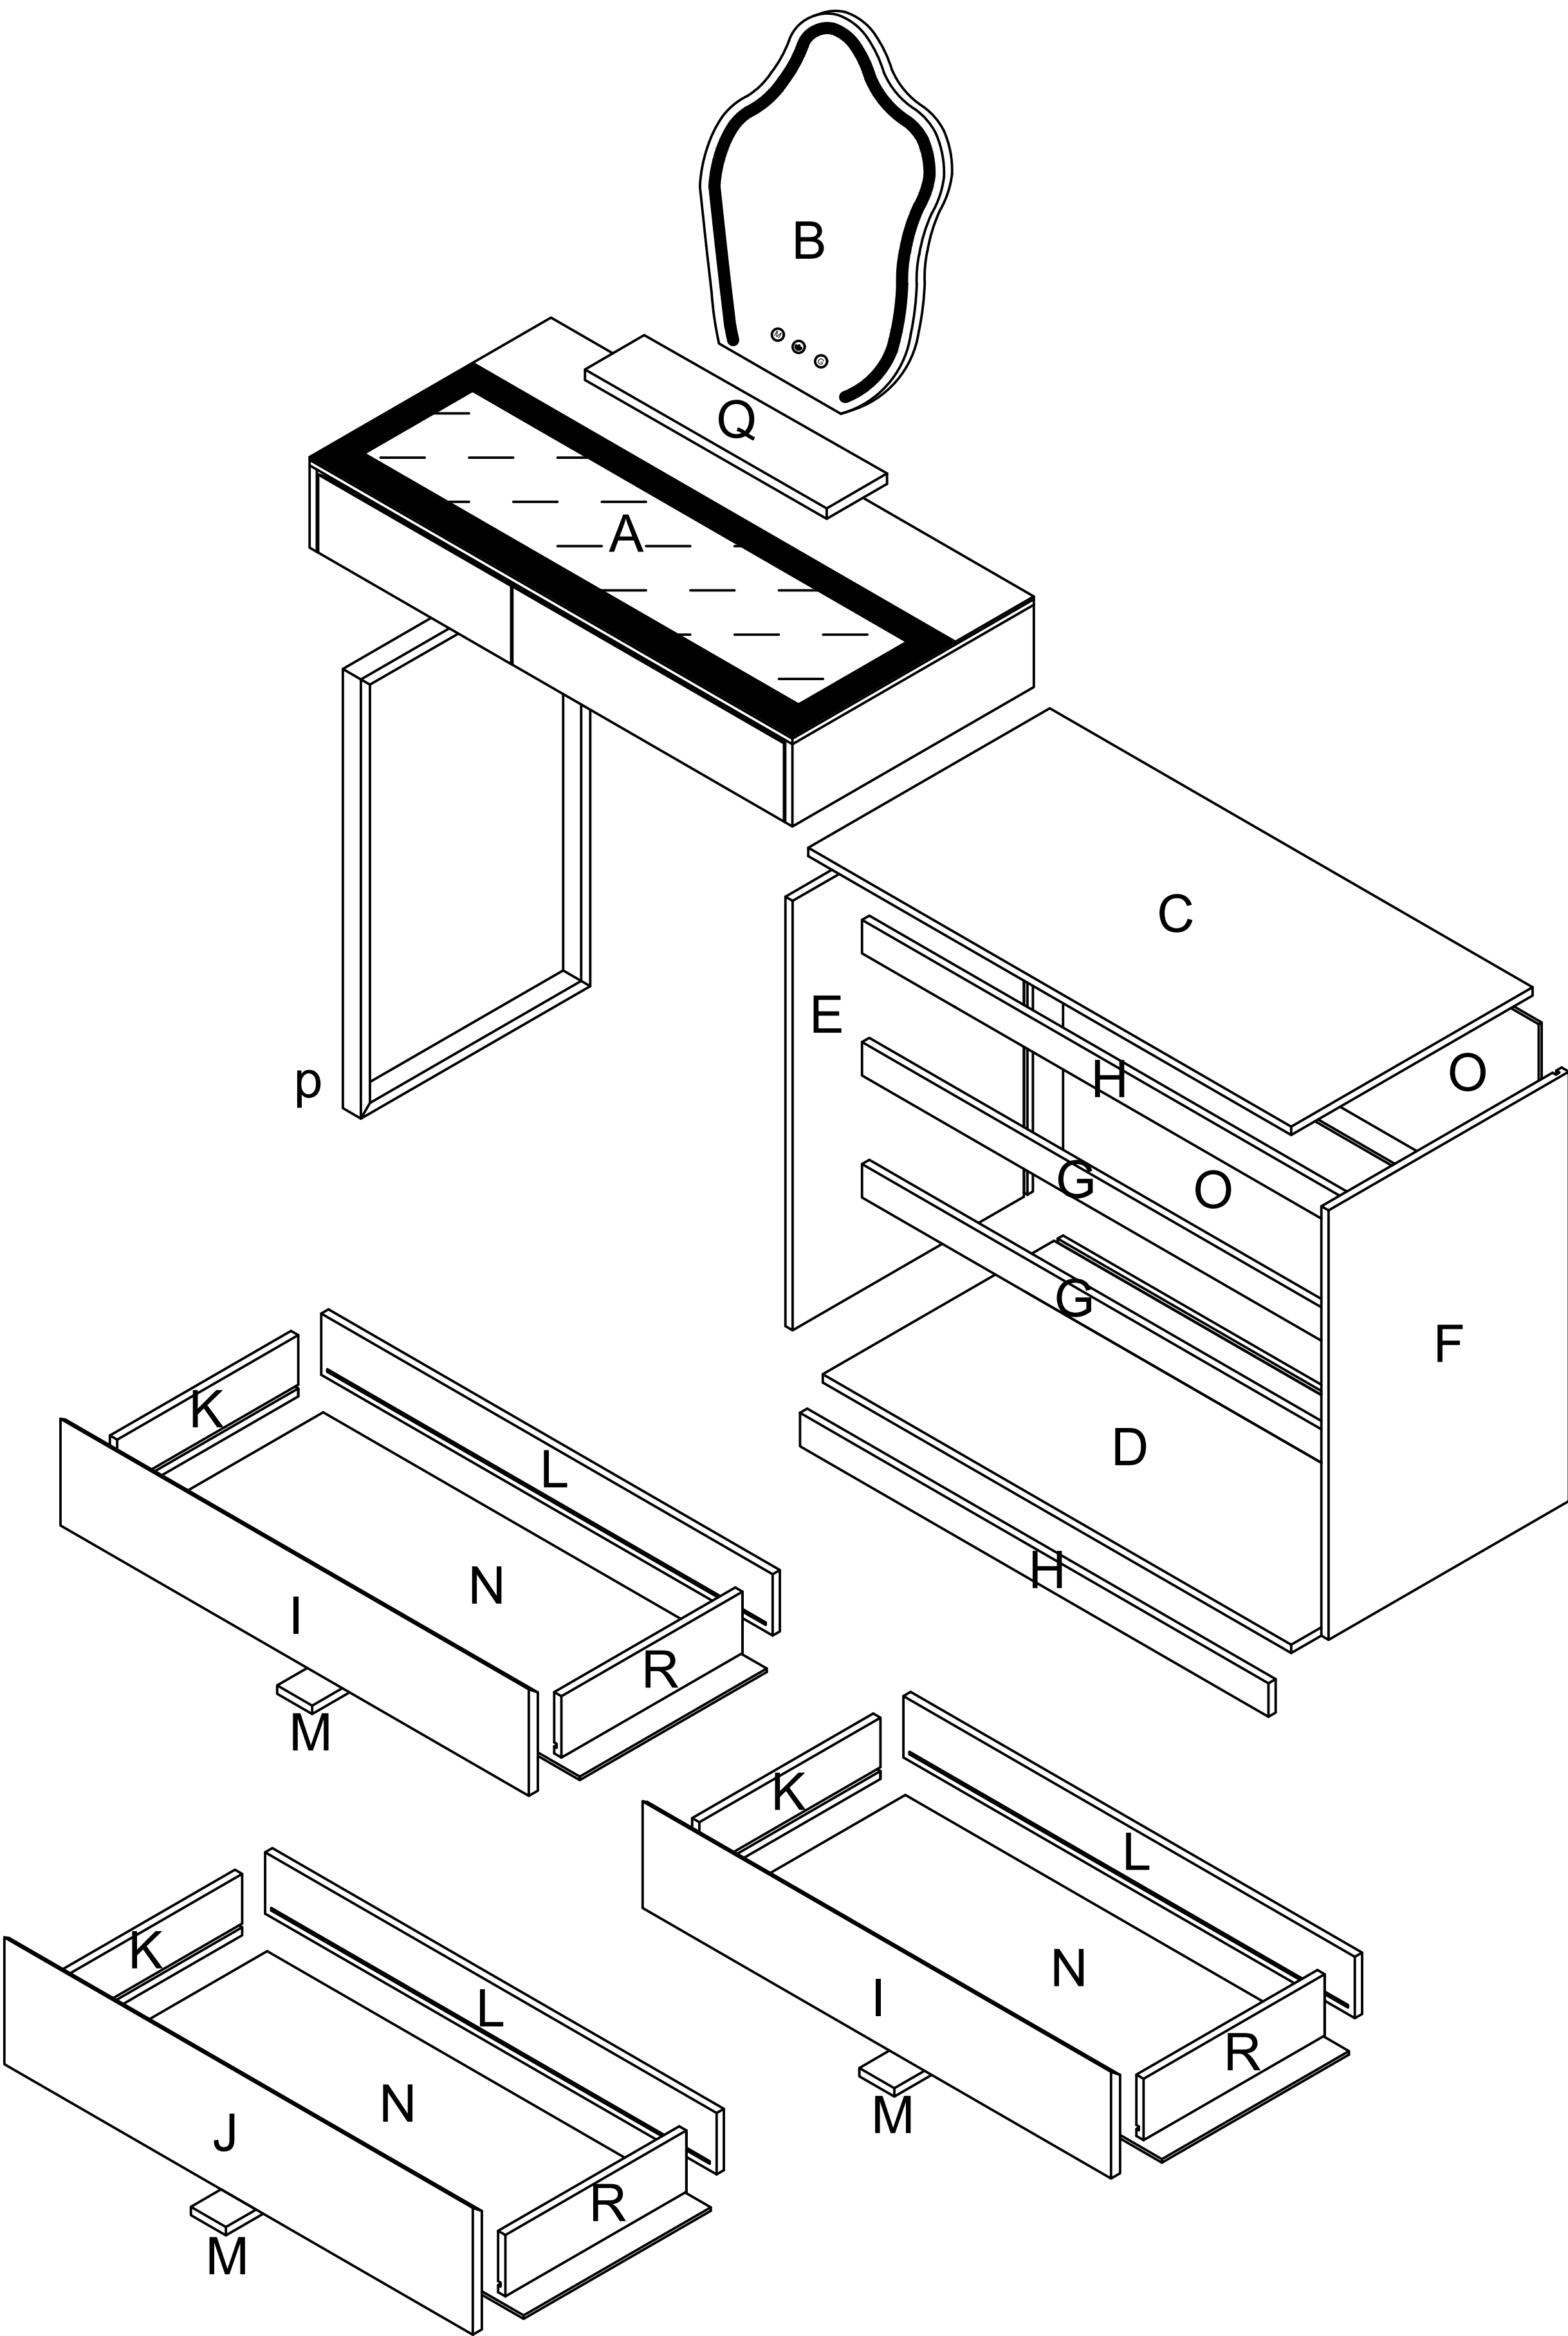

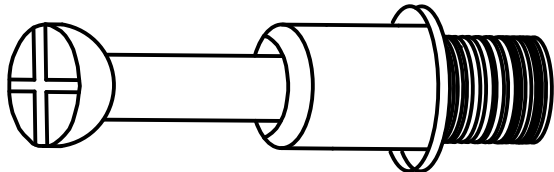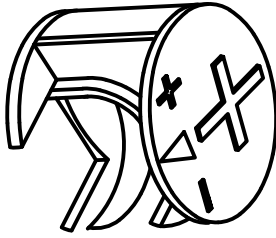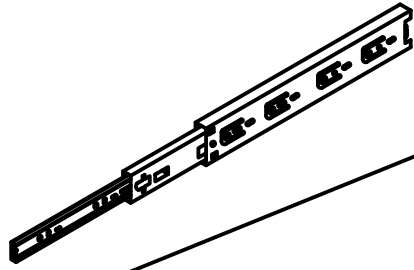
1		36pcs	2		36pcs
4	 	6pcs 12pcs			

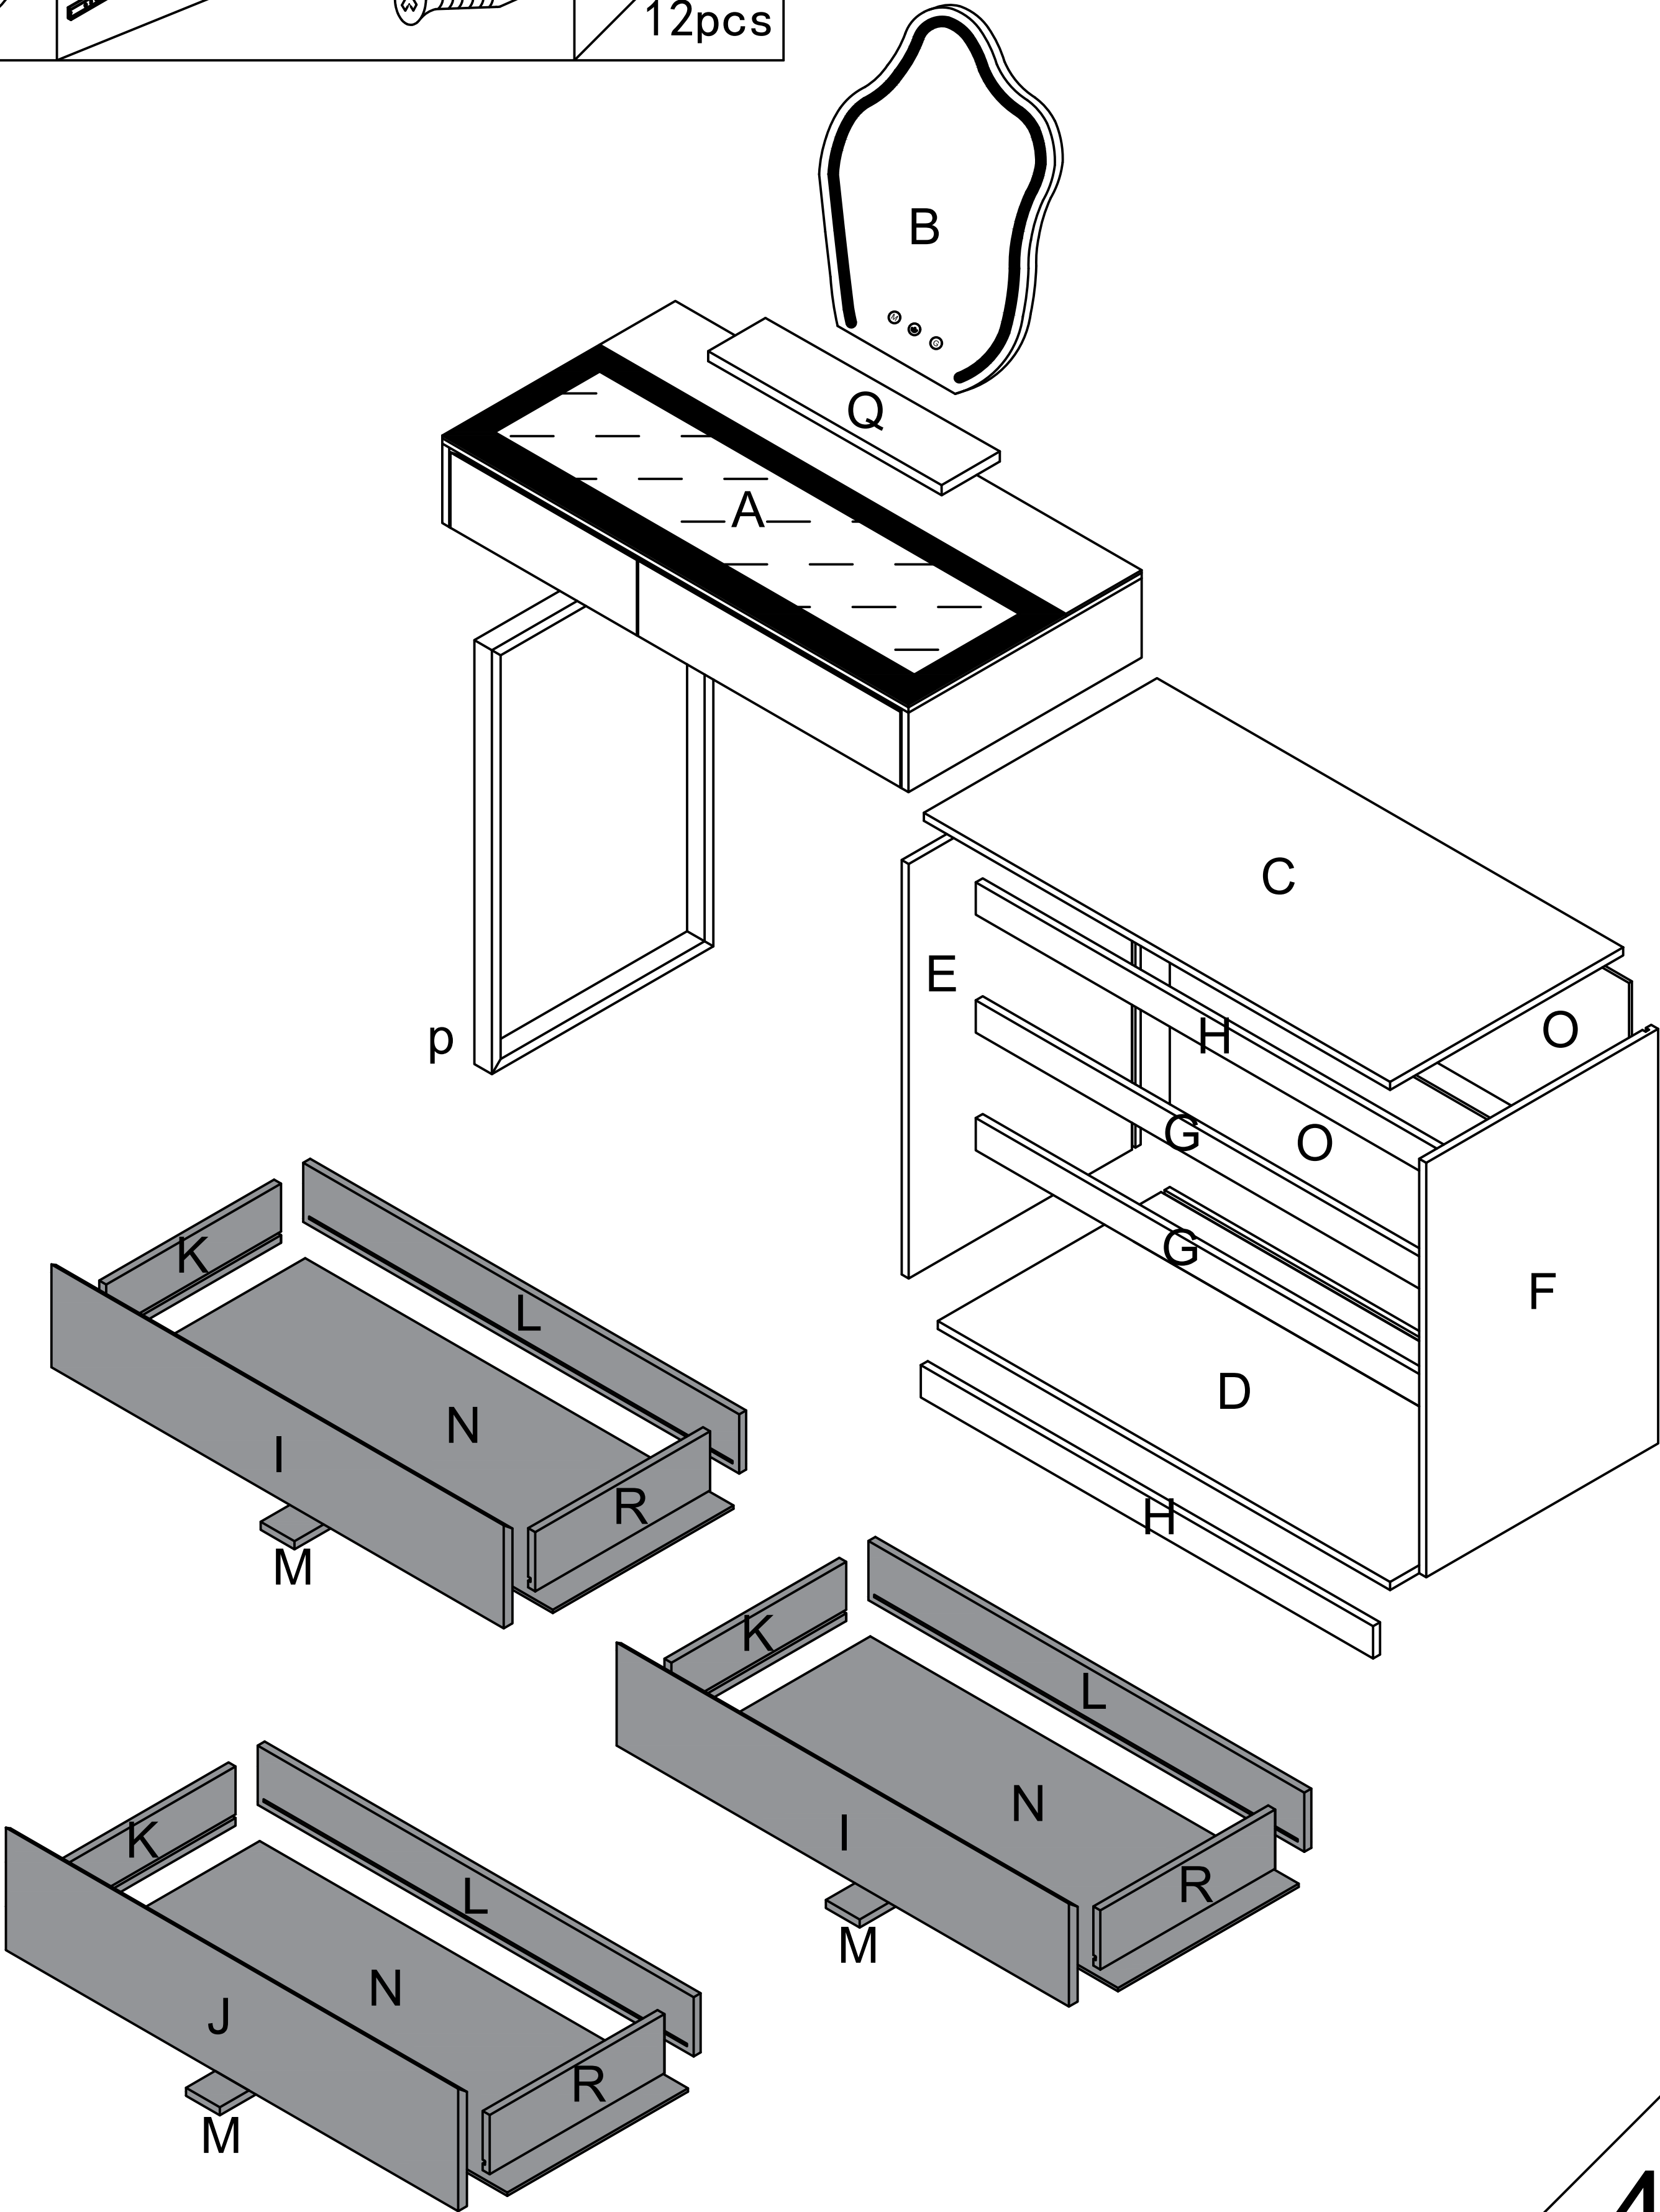


4

Use parts ① and ②




Step1

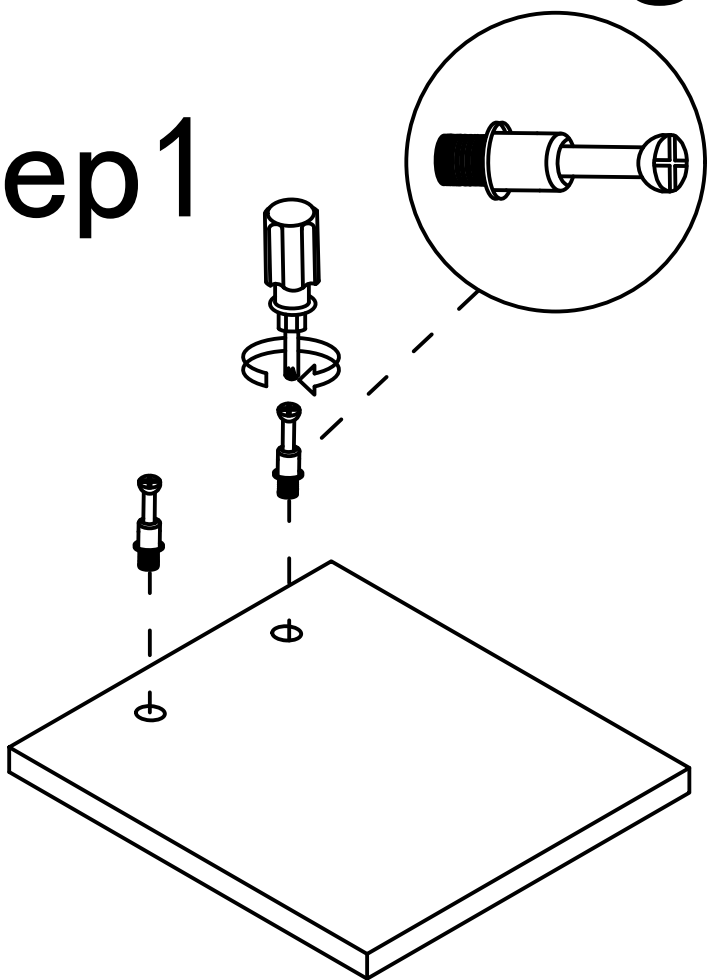

Step2

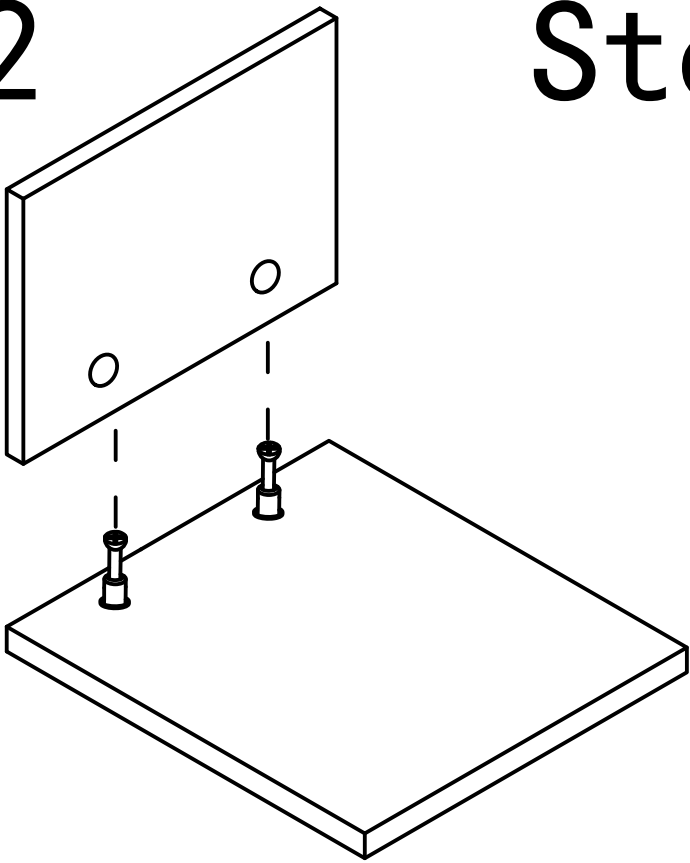


Step3

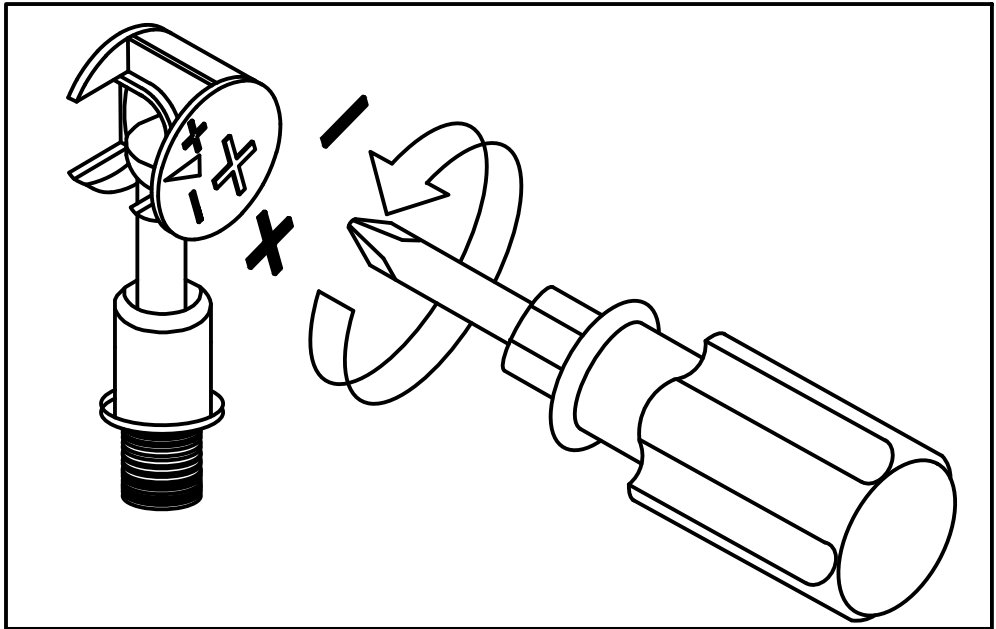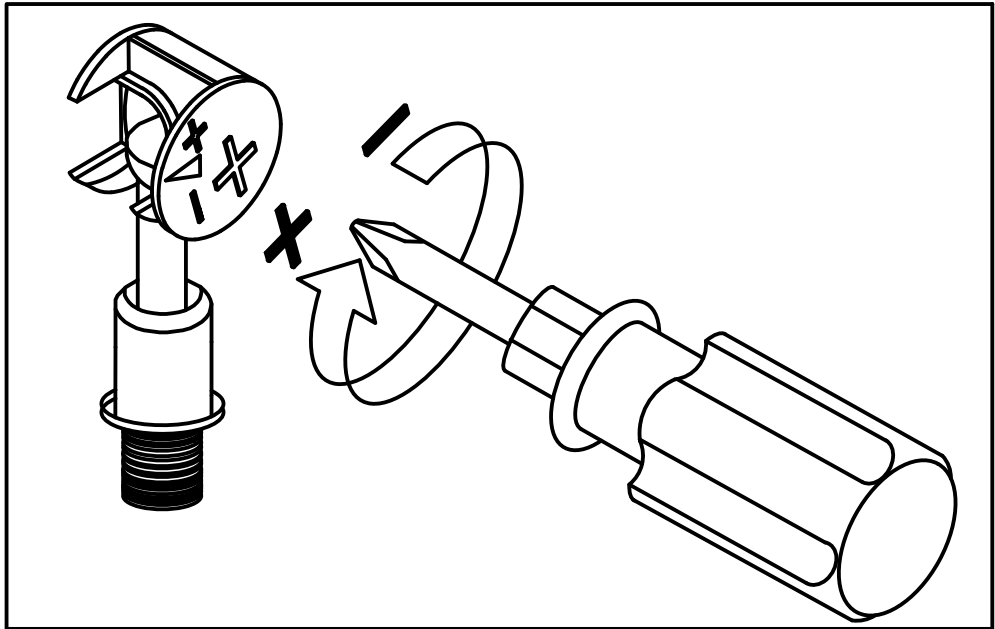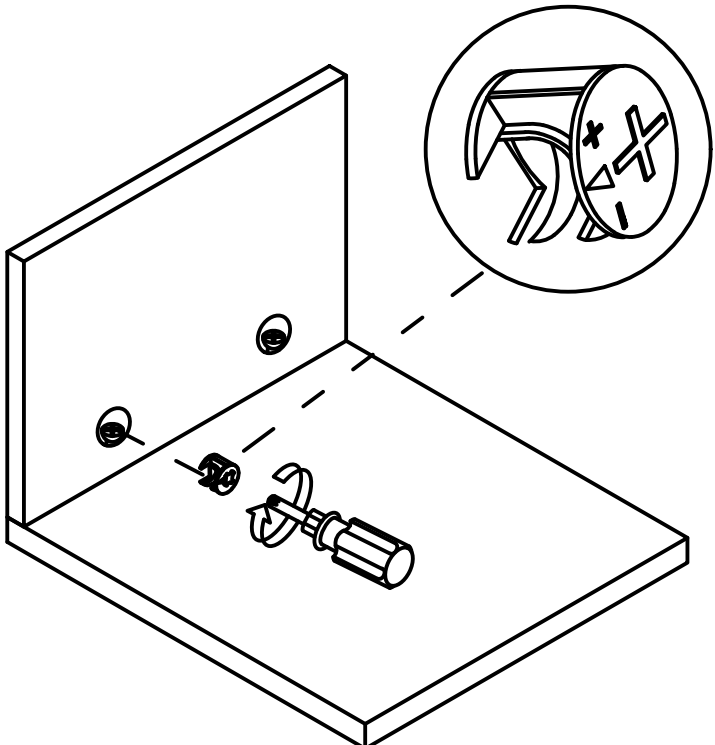

Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign


Step 1

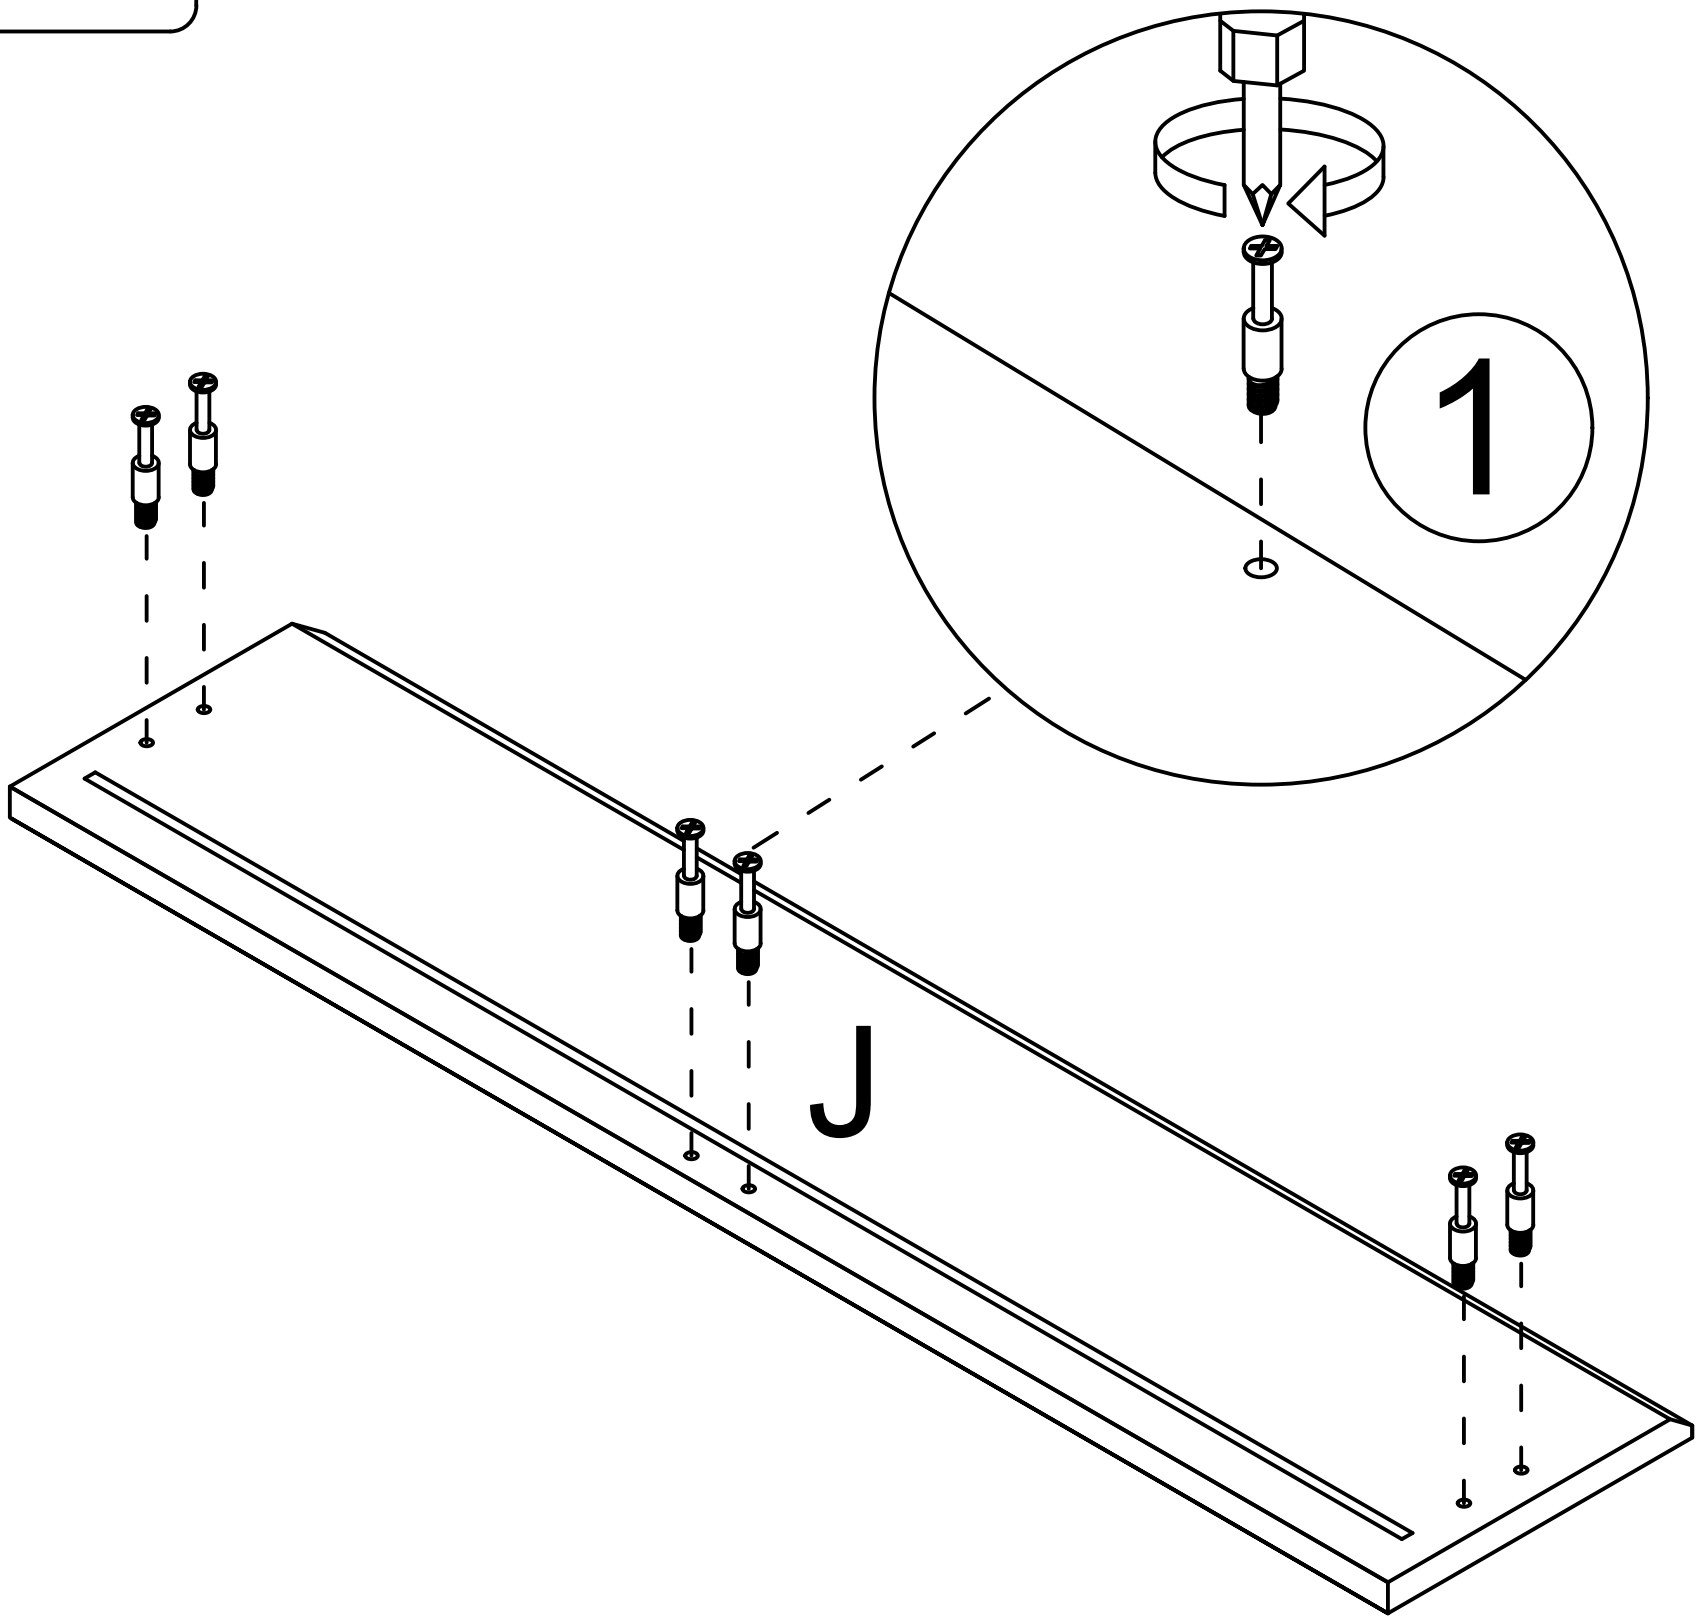


①

x6

Step 2

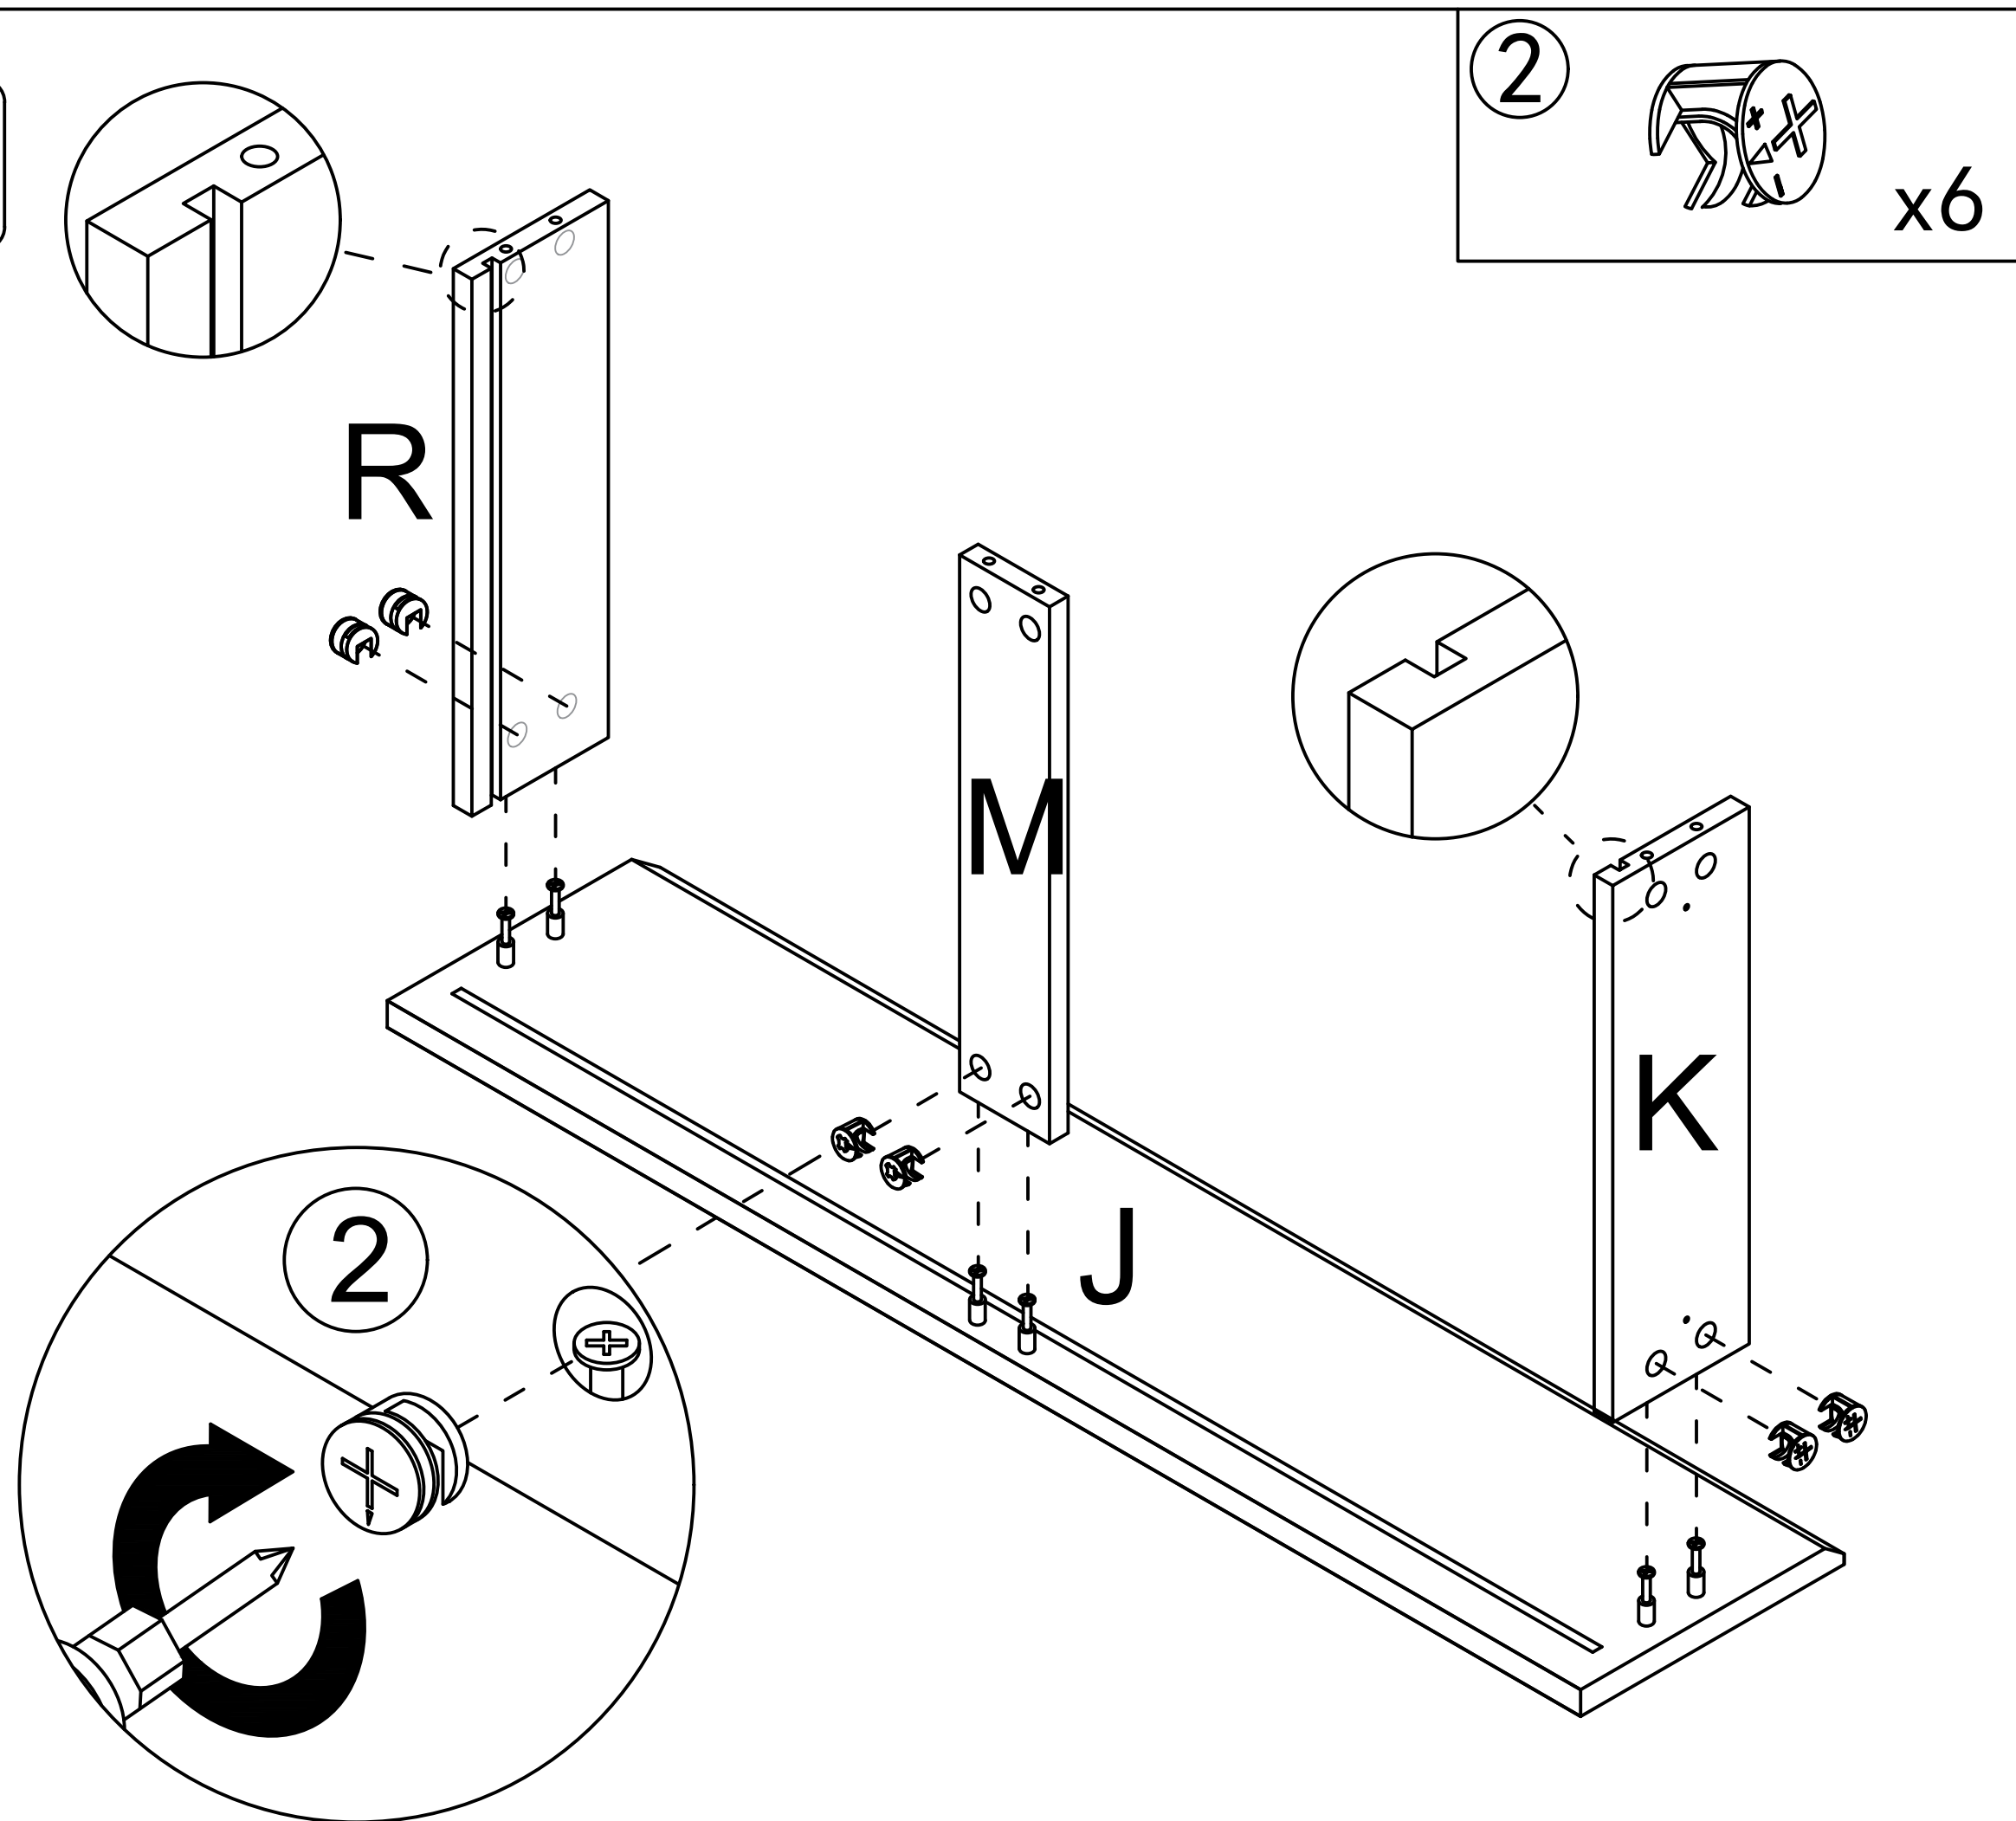



Step 3

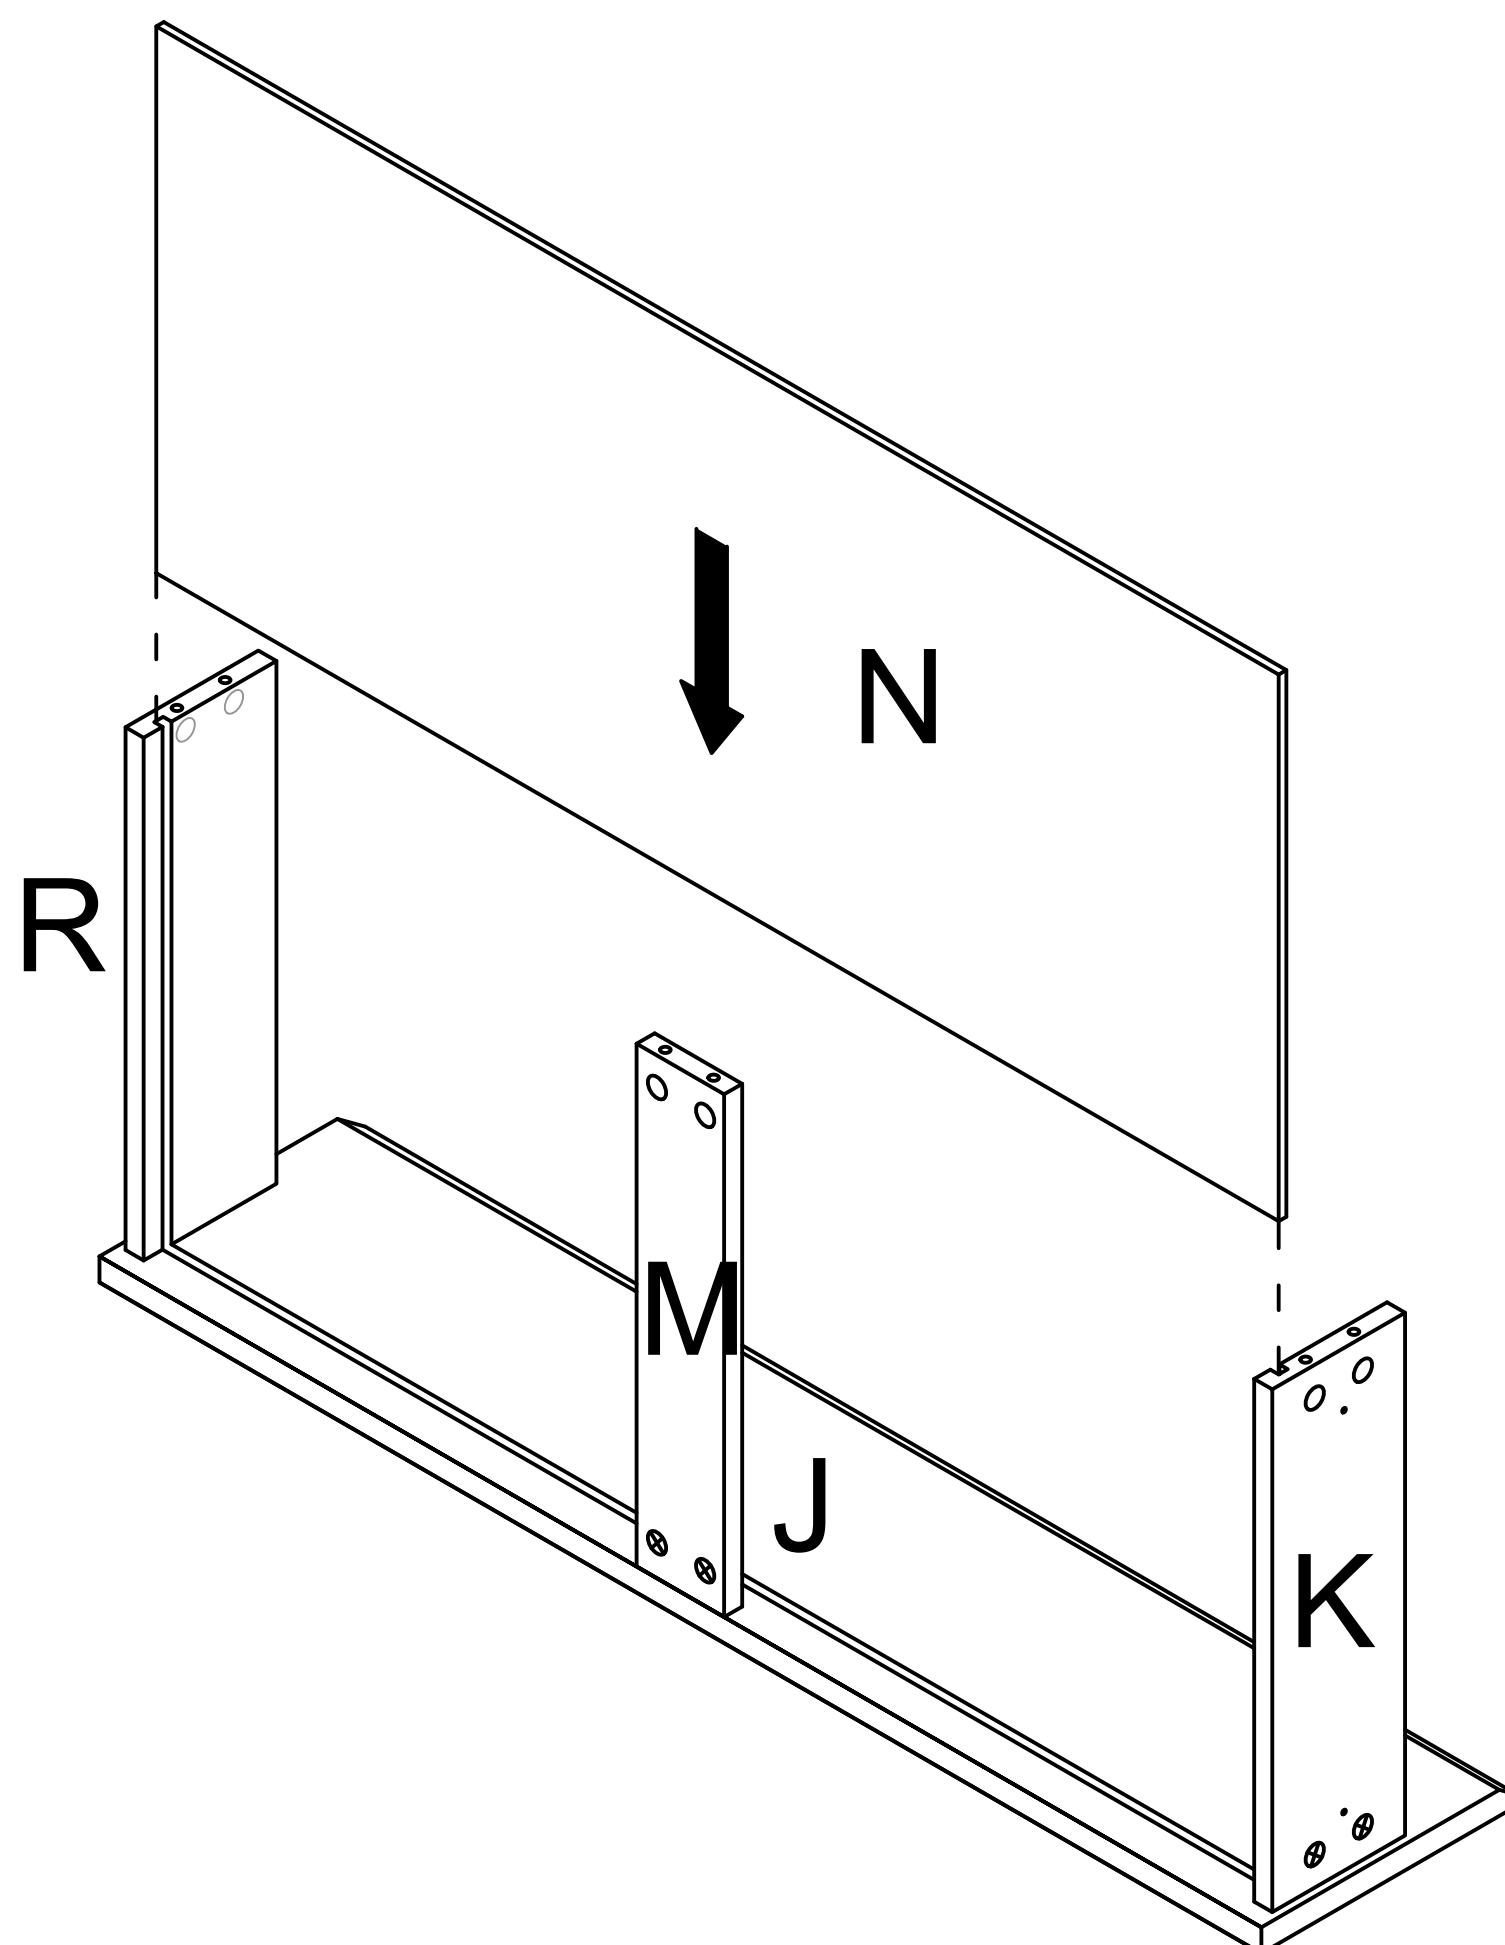

Step 4


1


x6

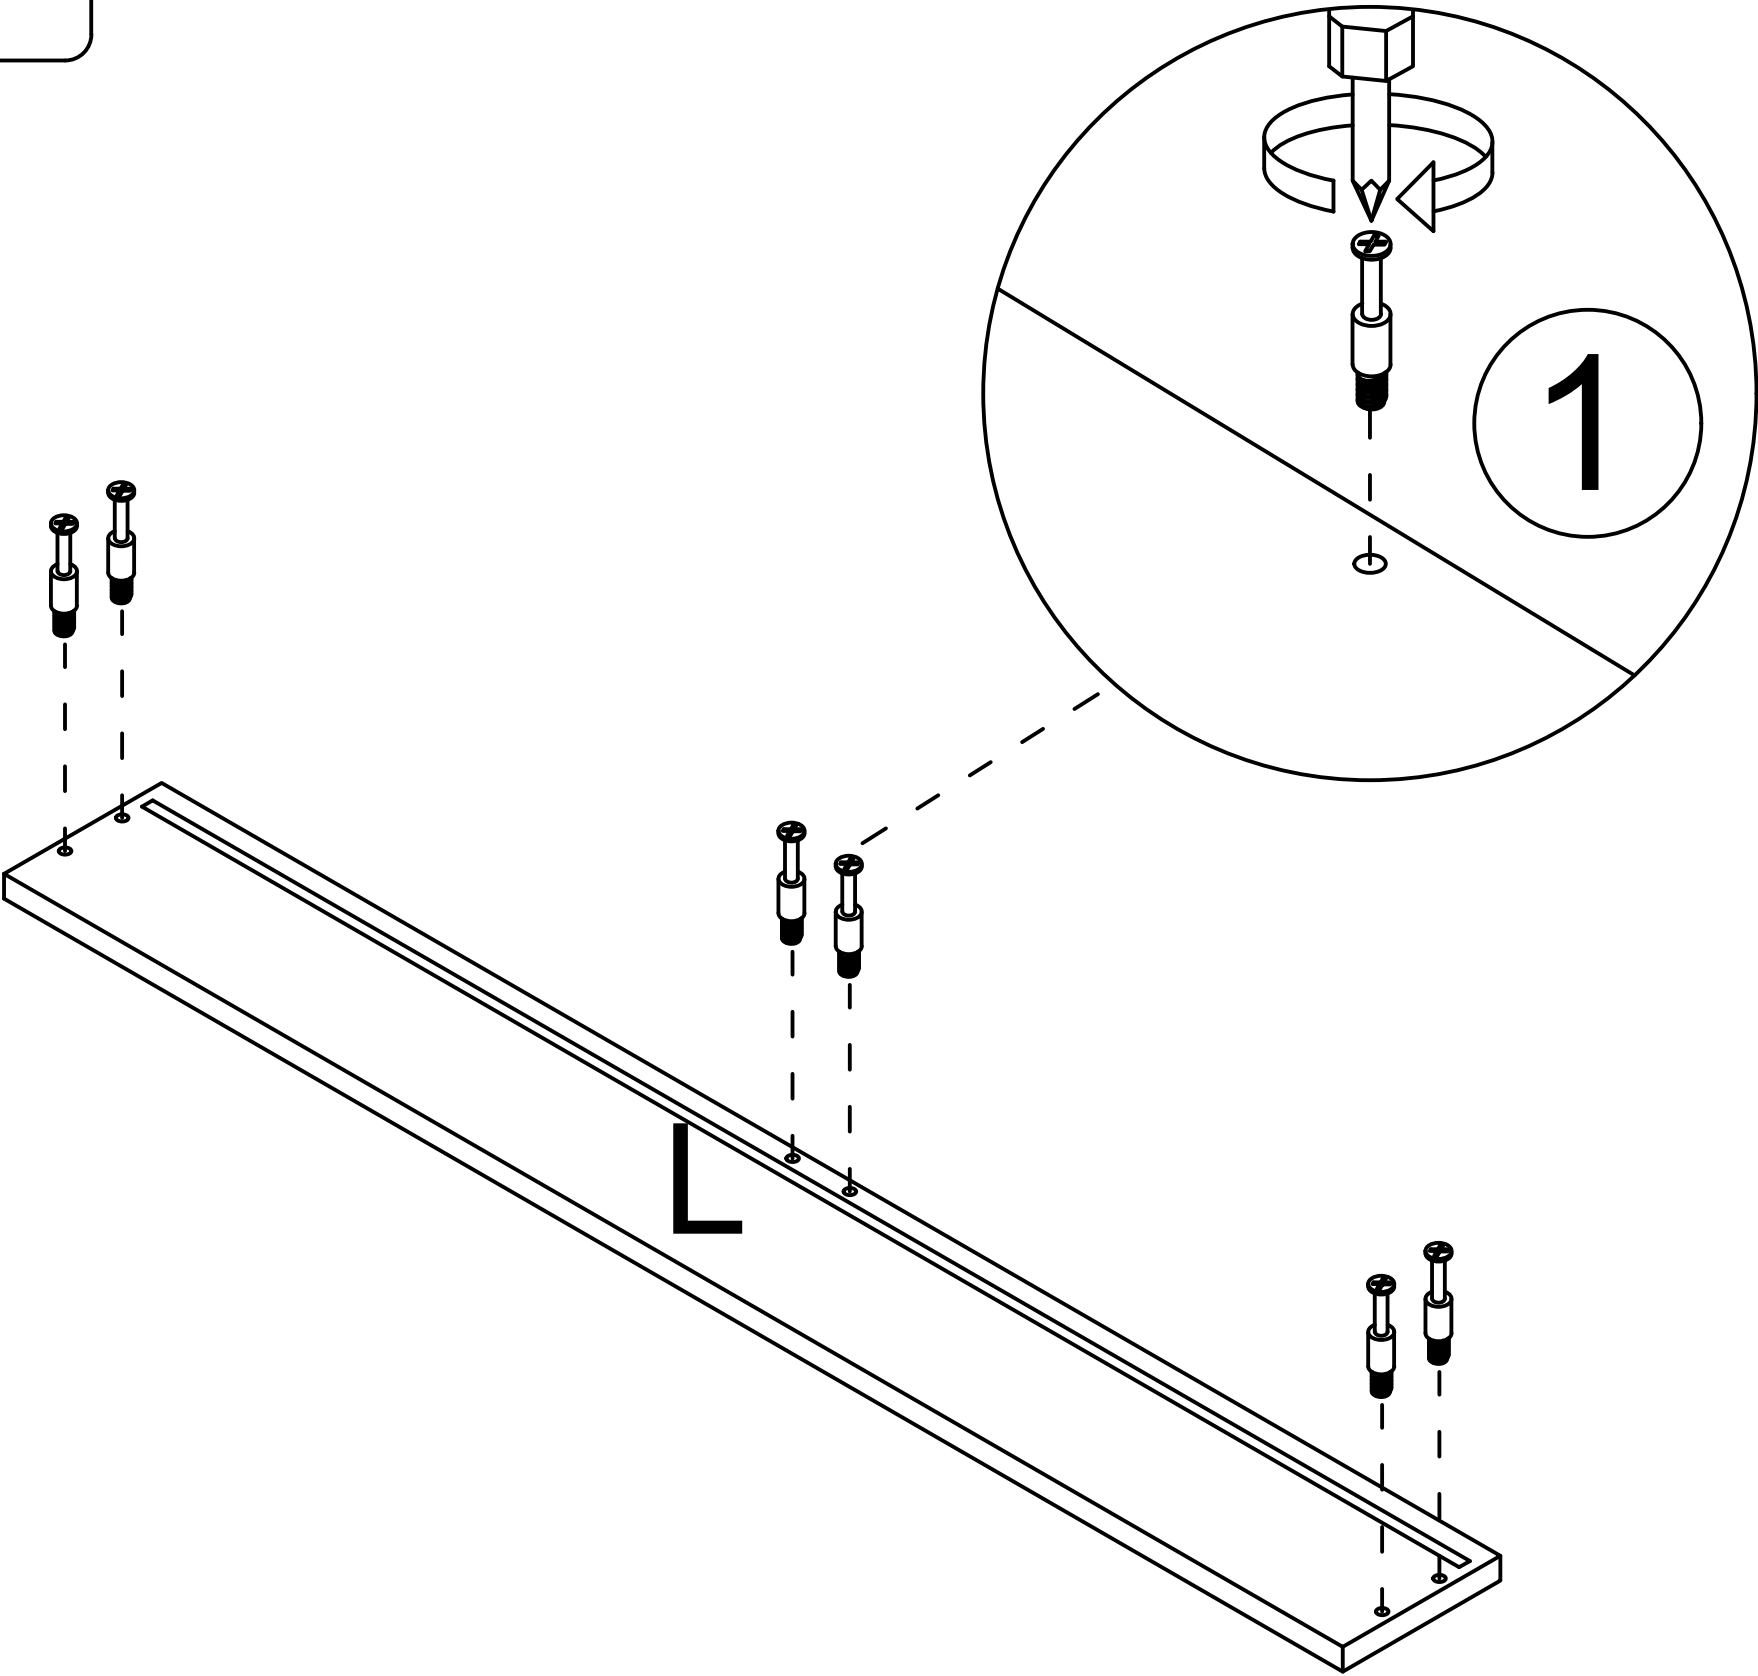


Step 5

2

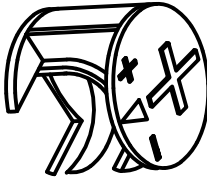x6


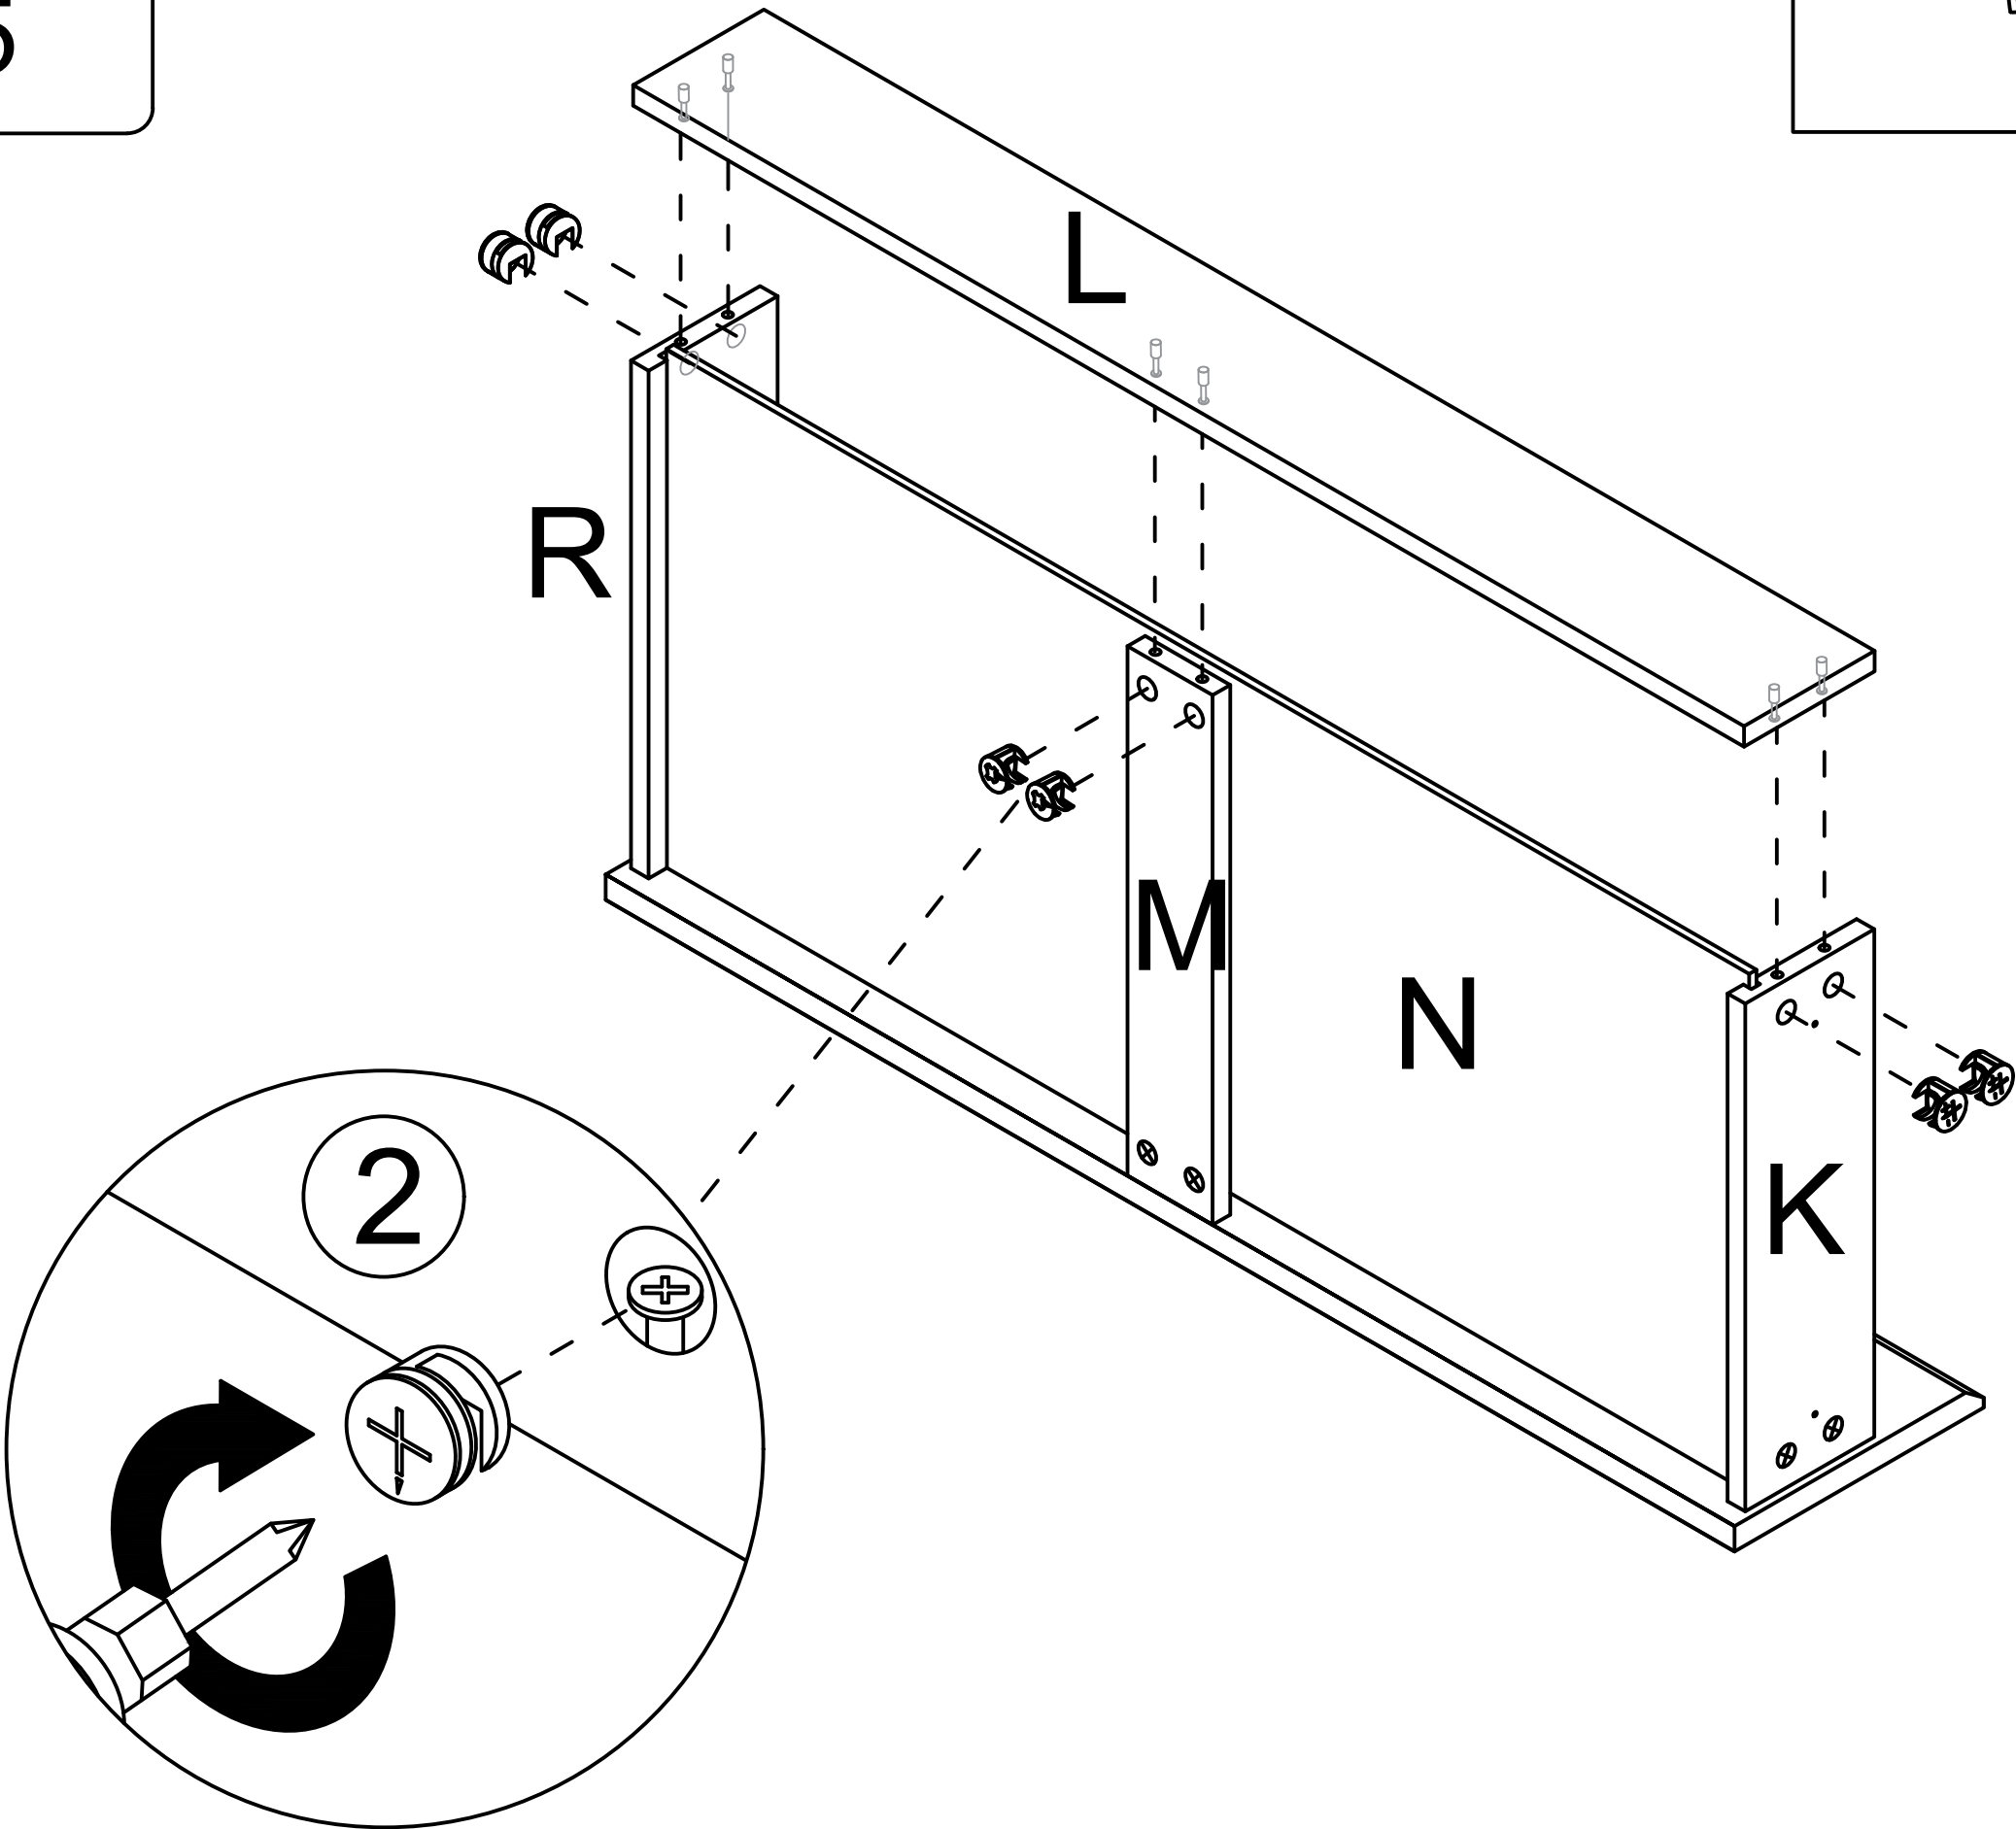


Drawer rail breakdown diagram

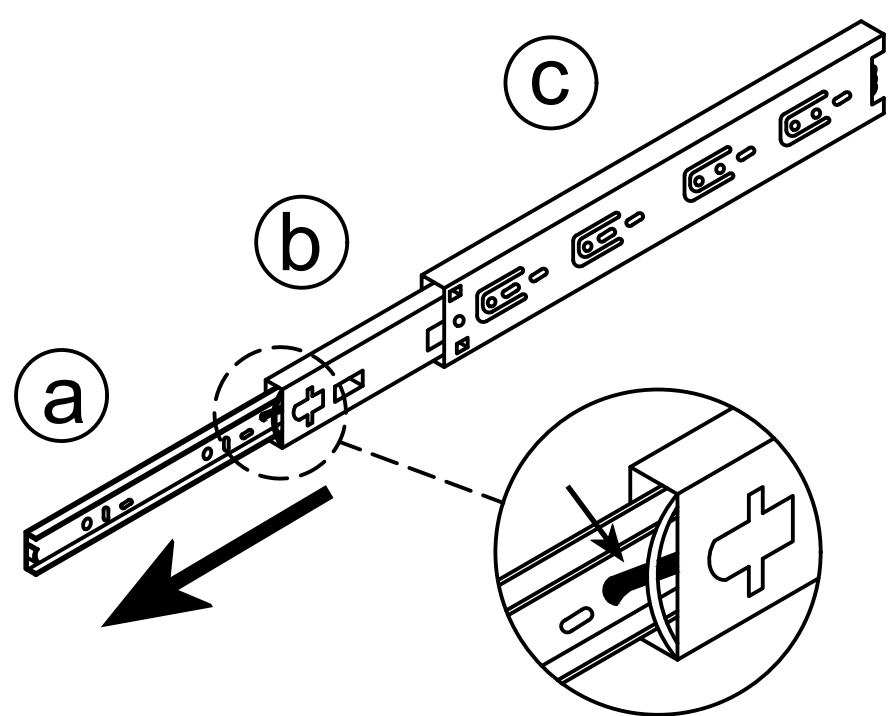


Step 1 : Pull the rails apart

Step 2 : Push the nylon buckle outward (a)

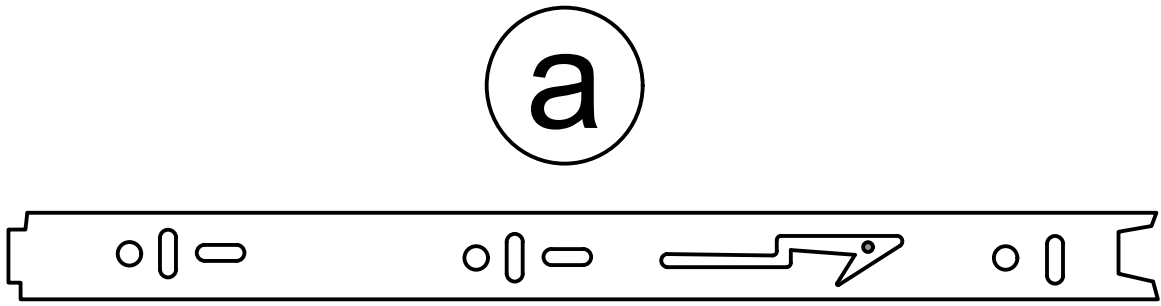

(b)

(c)

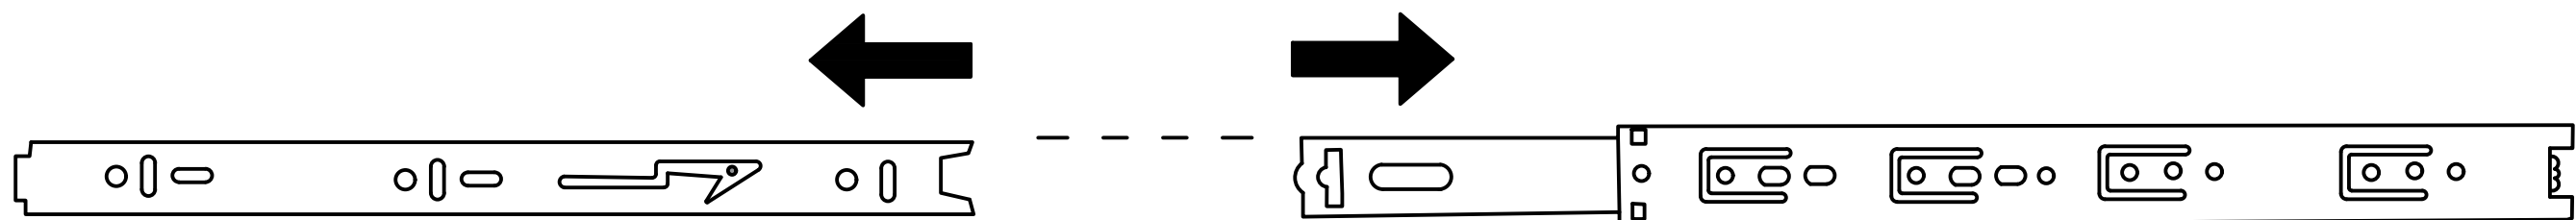


(a)


(b)

(c)

Step 6

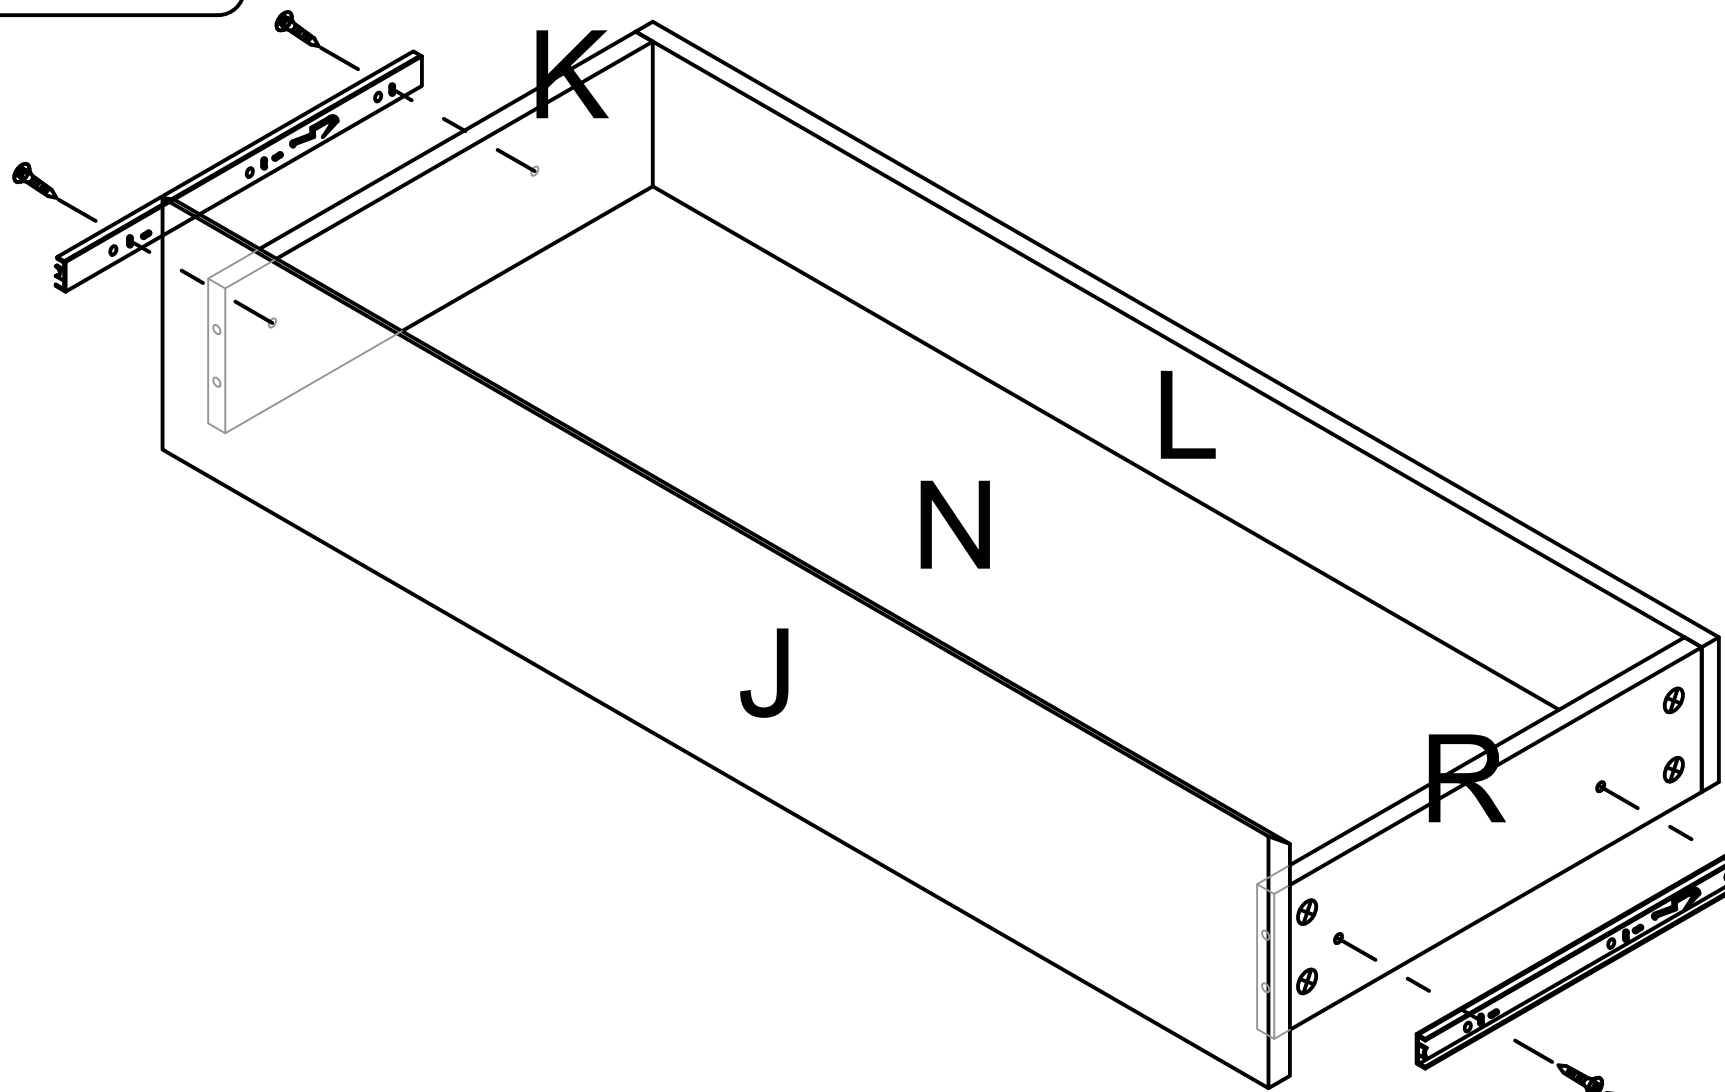


4




x4



(a)



x2

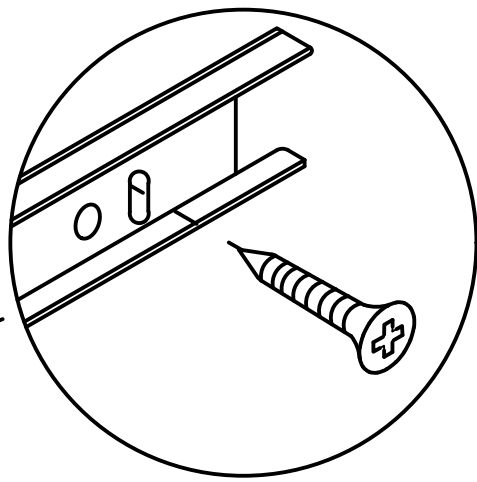



4

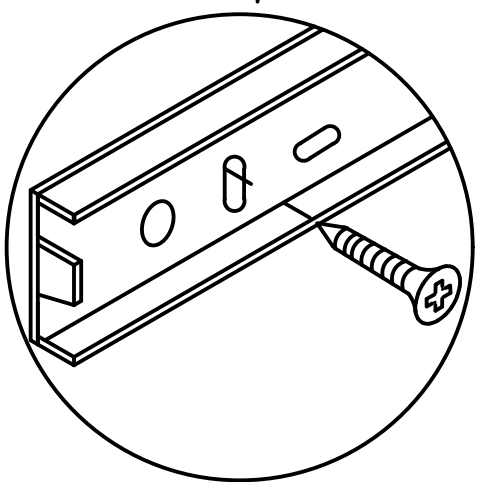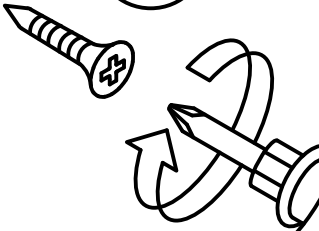


8


Step 7

1  x6

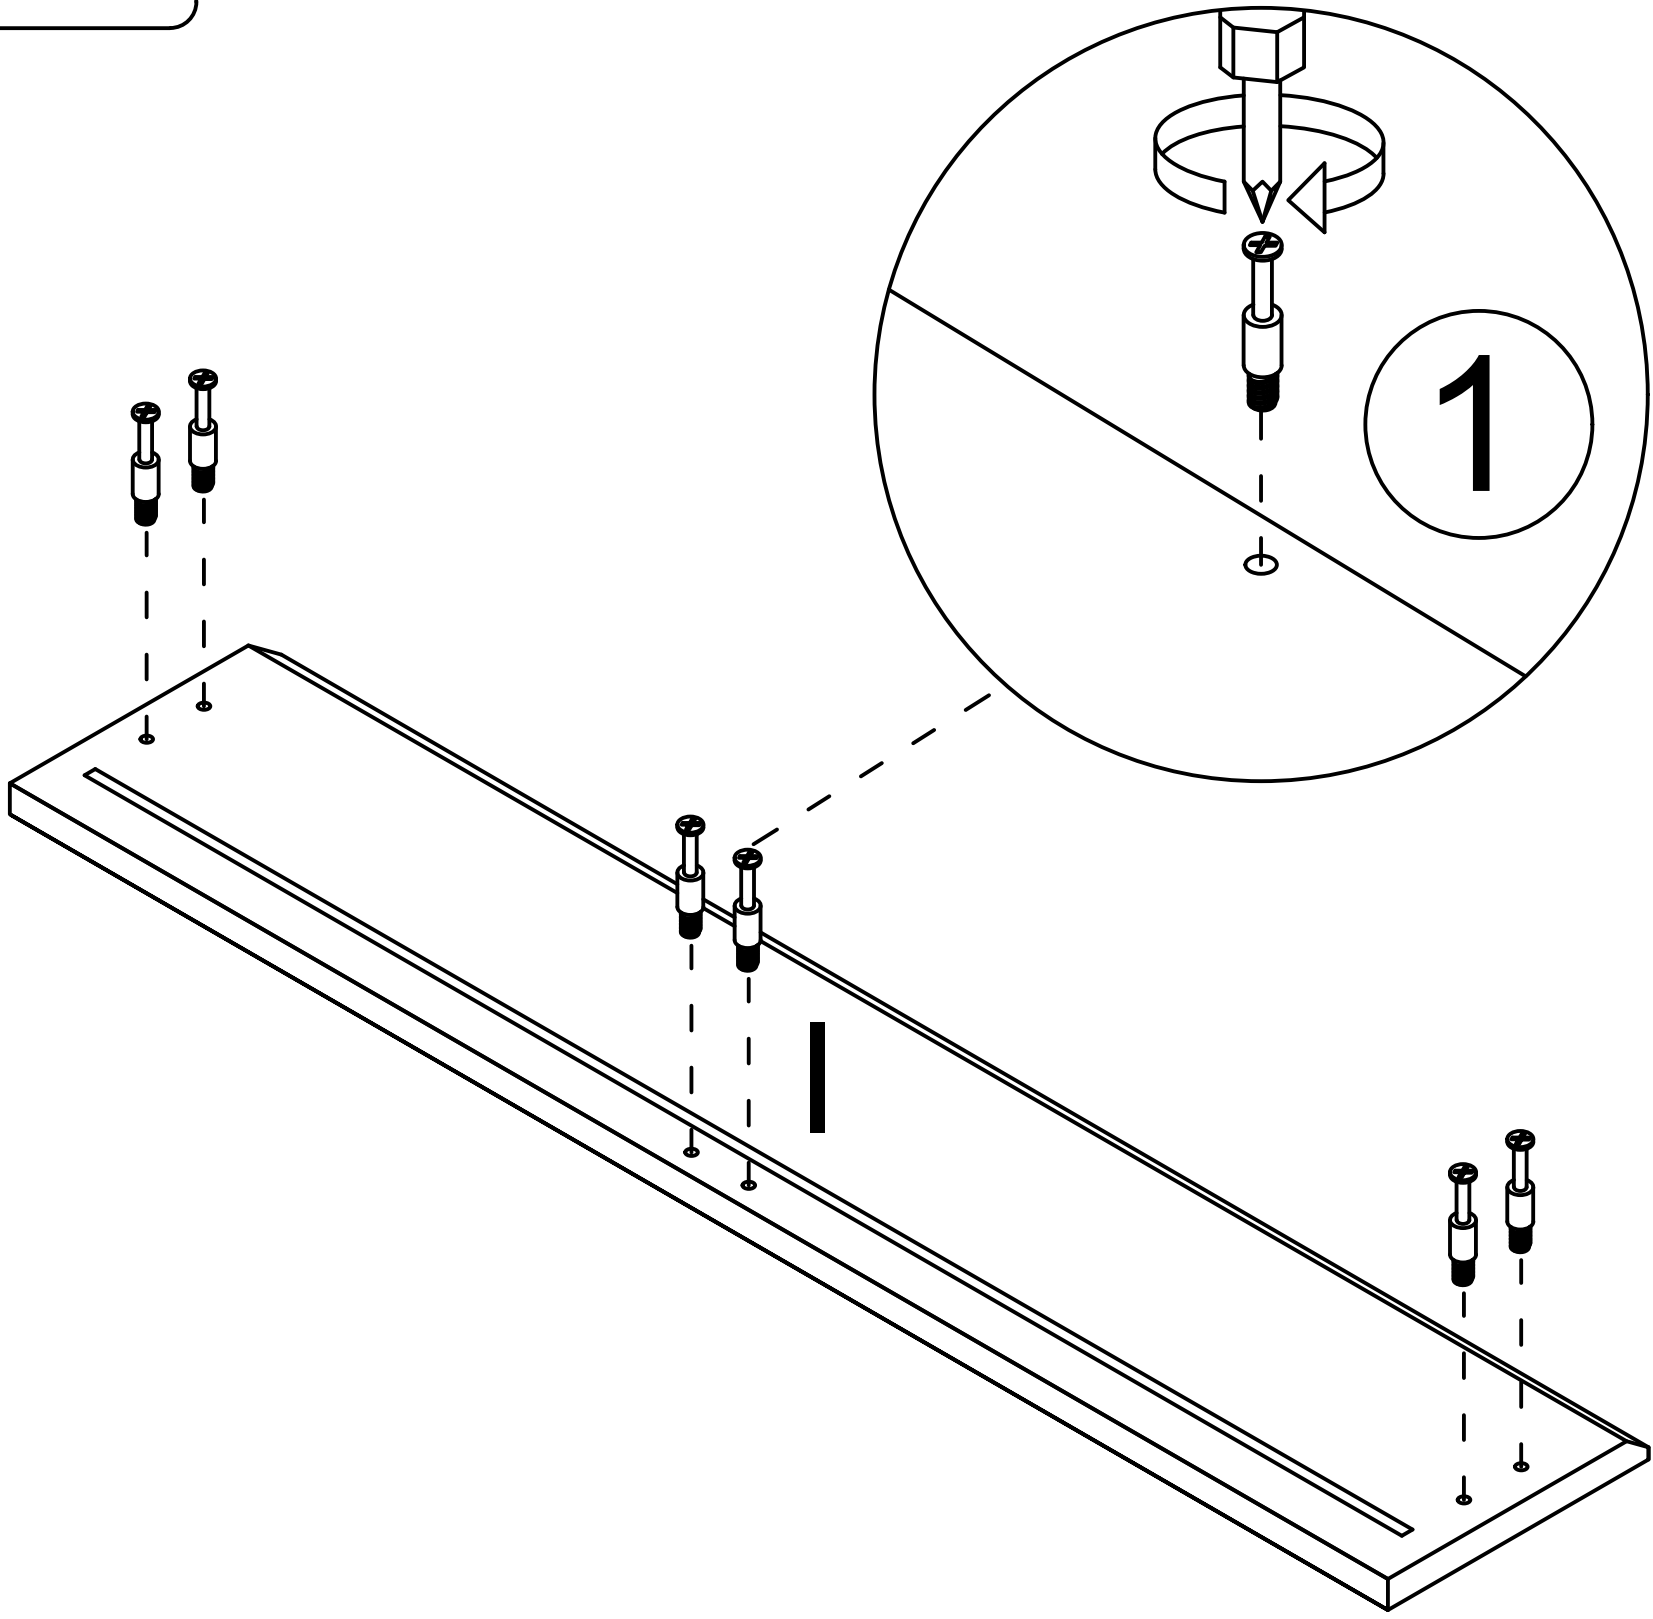


Step 8


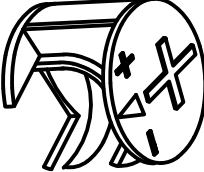
2  x6

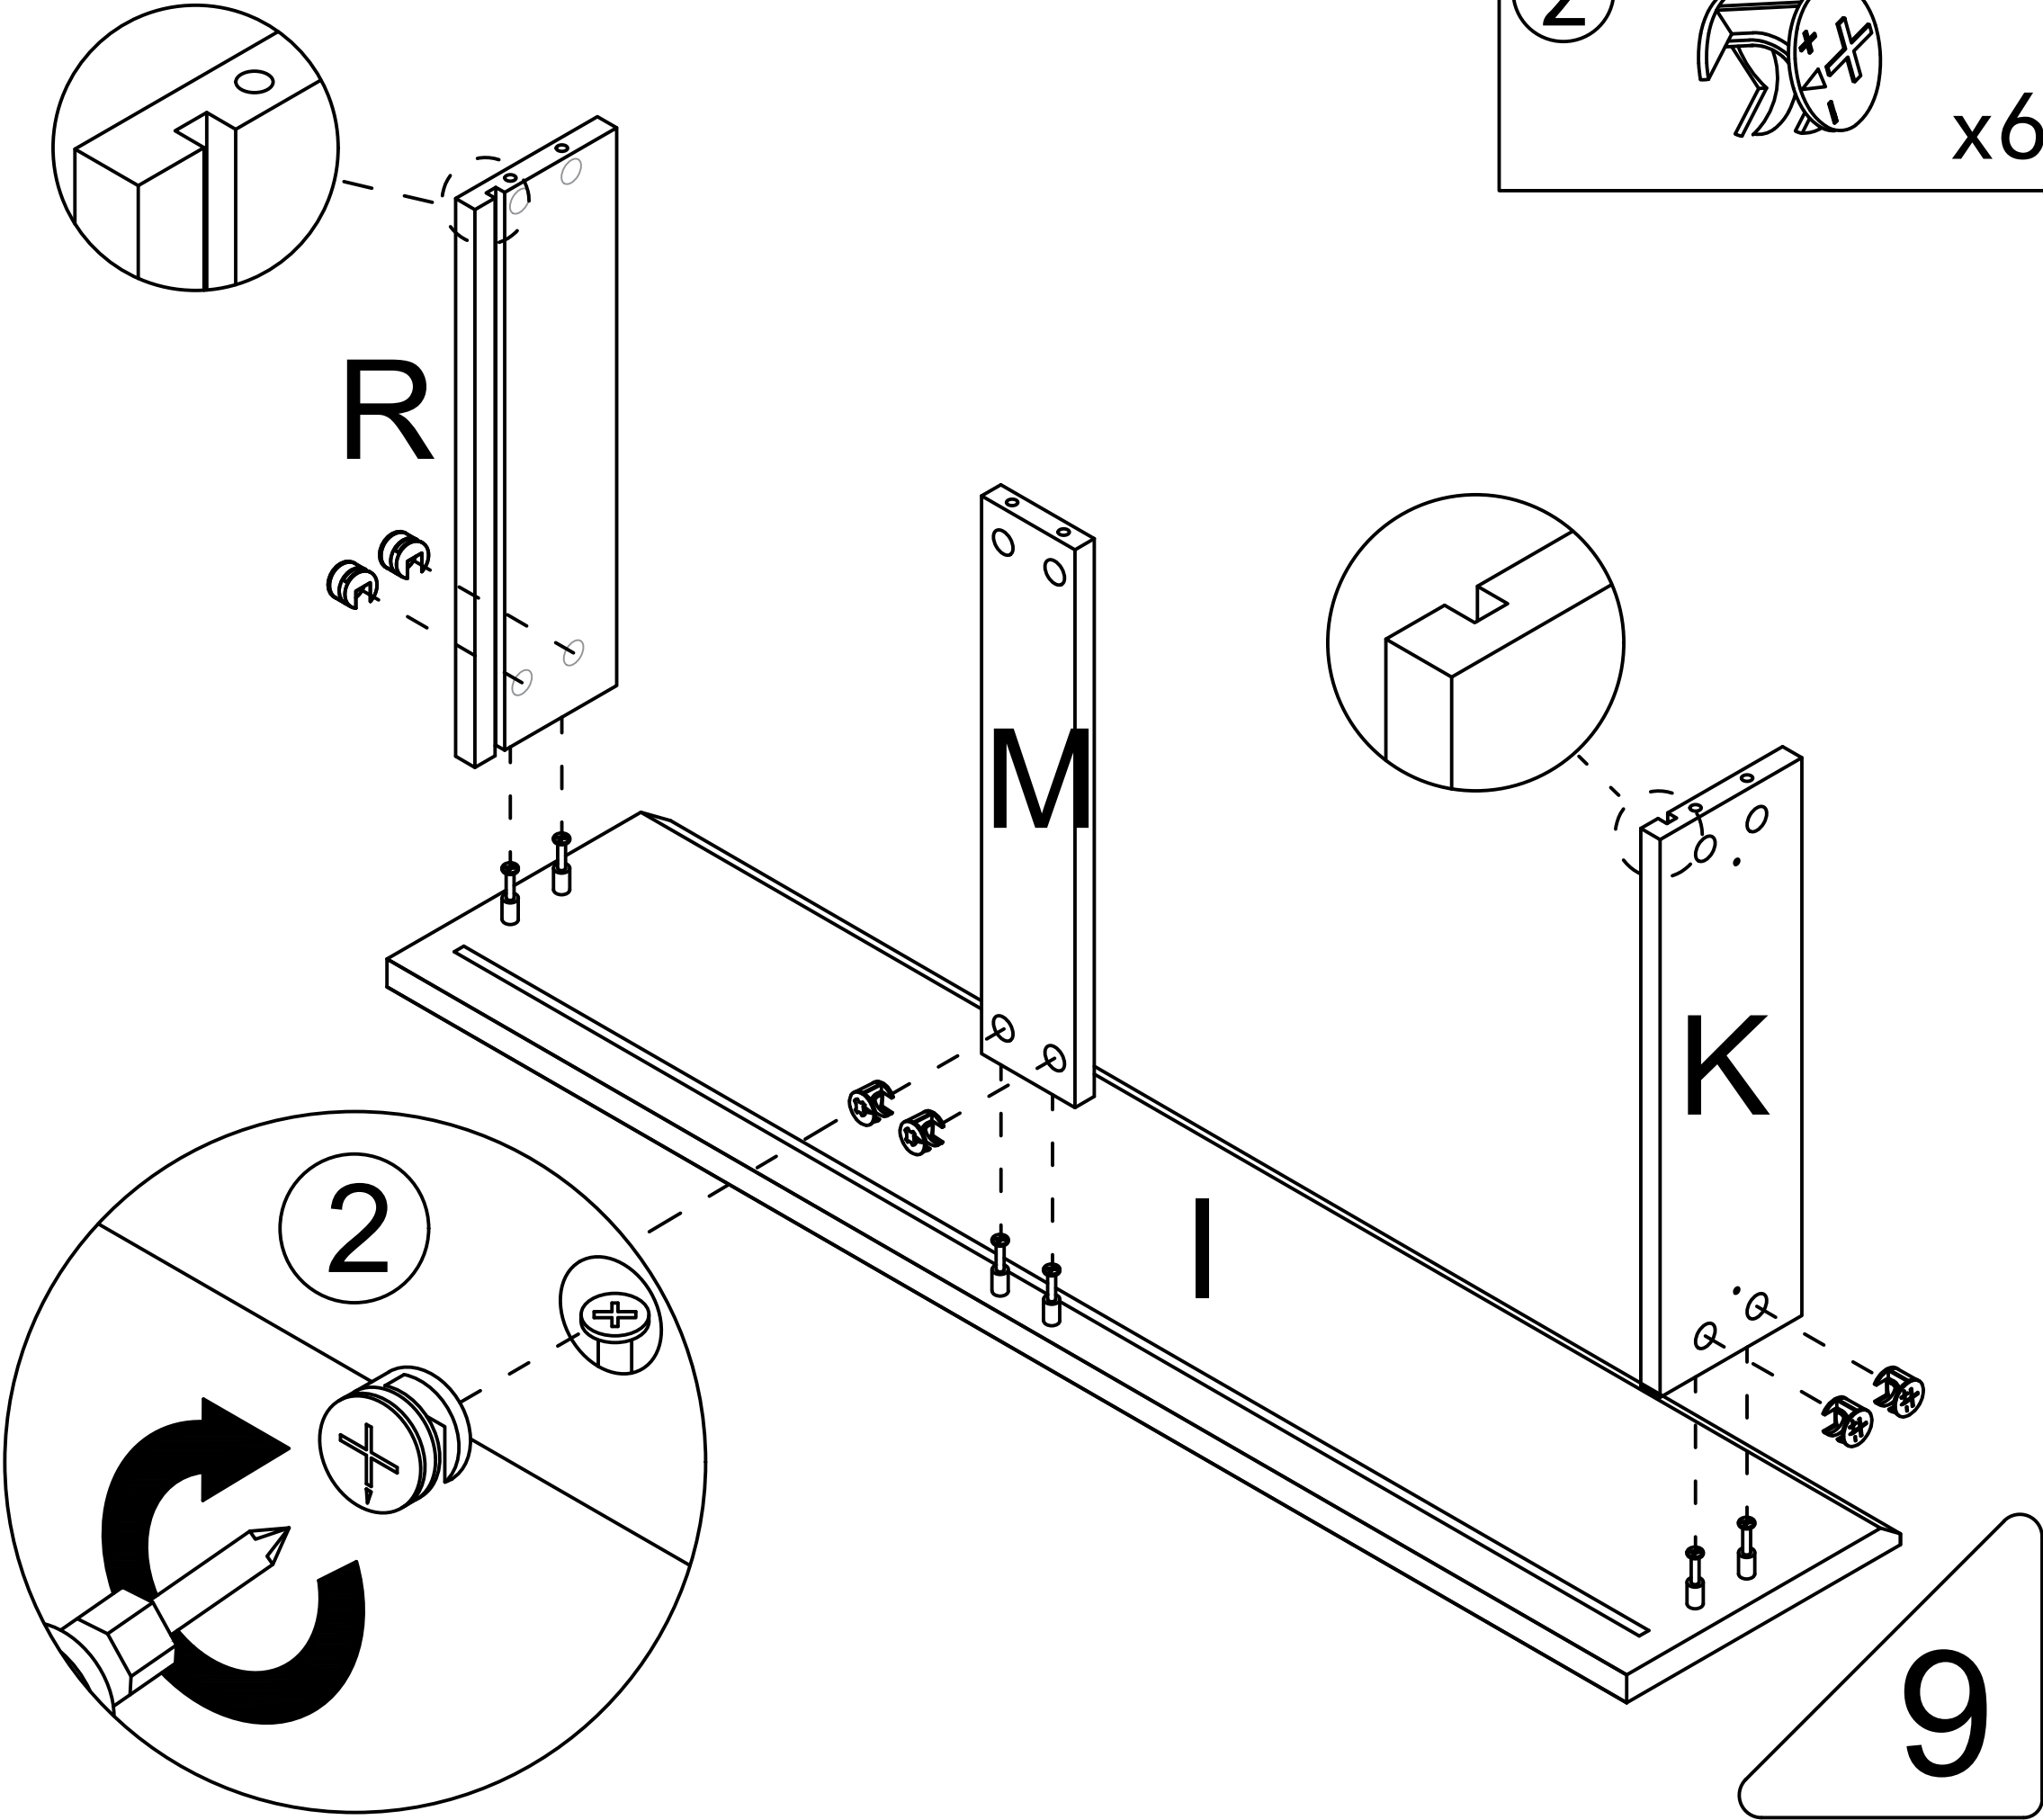

Step 9

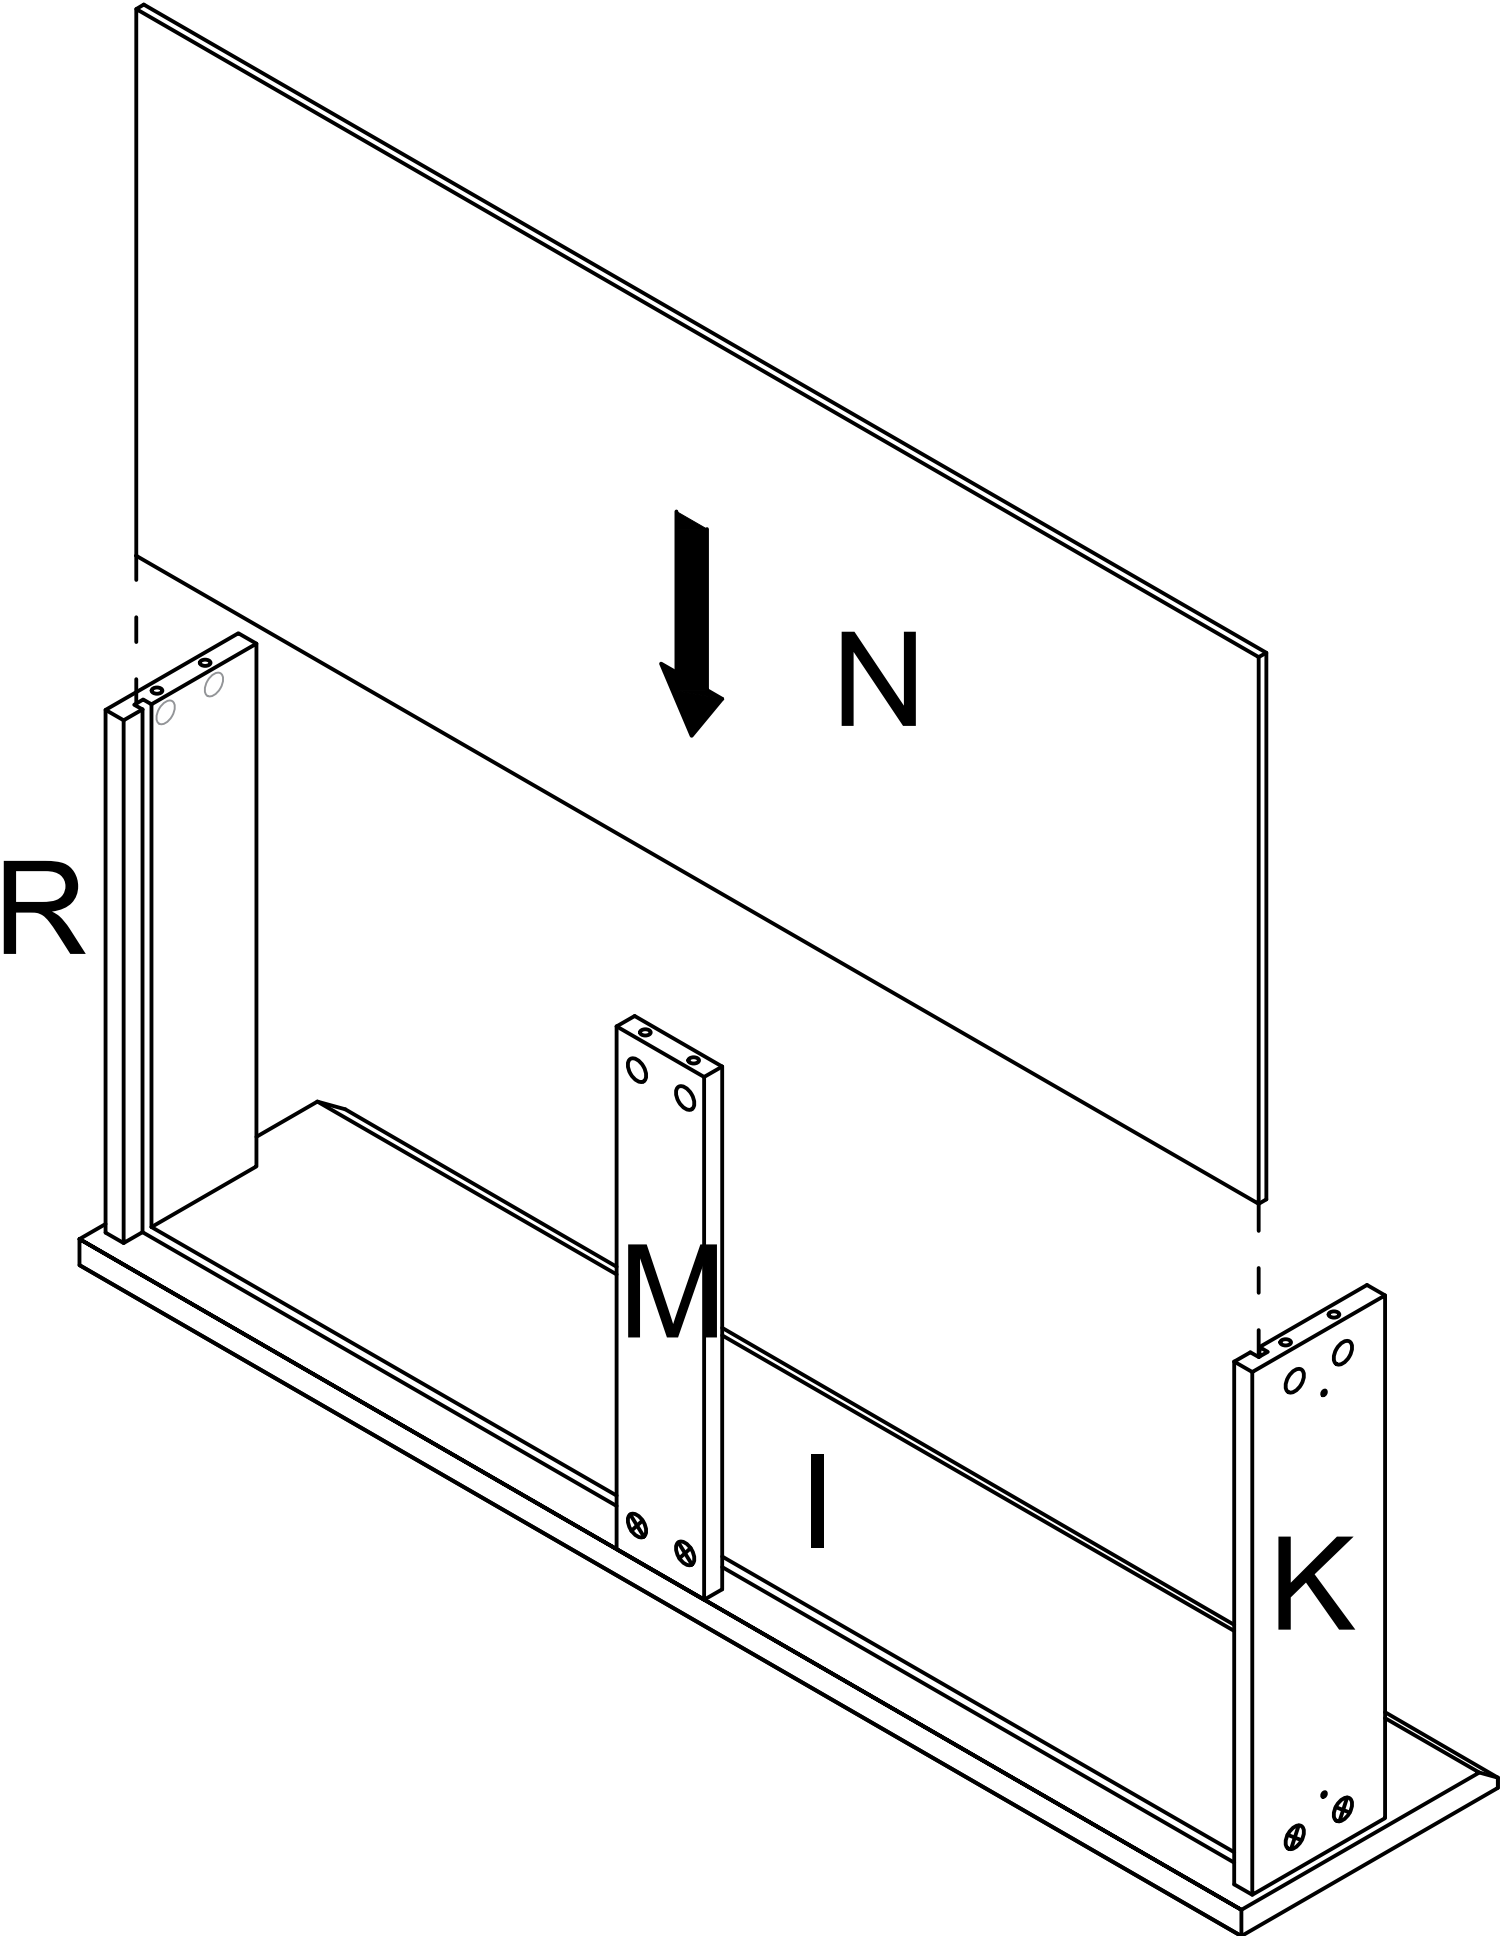


Step 10

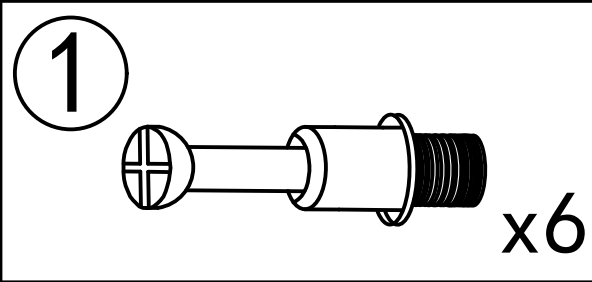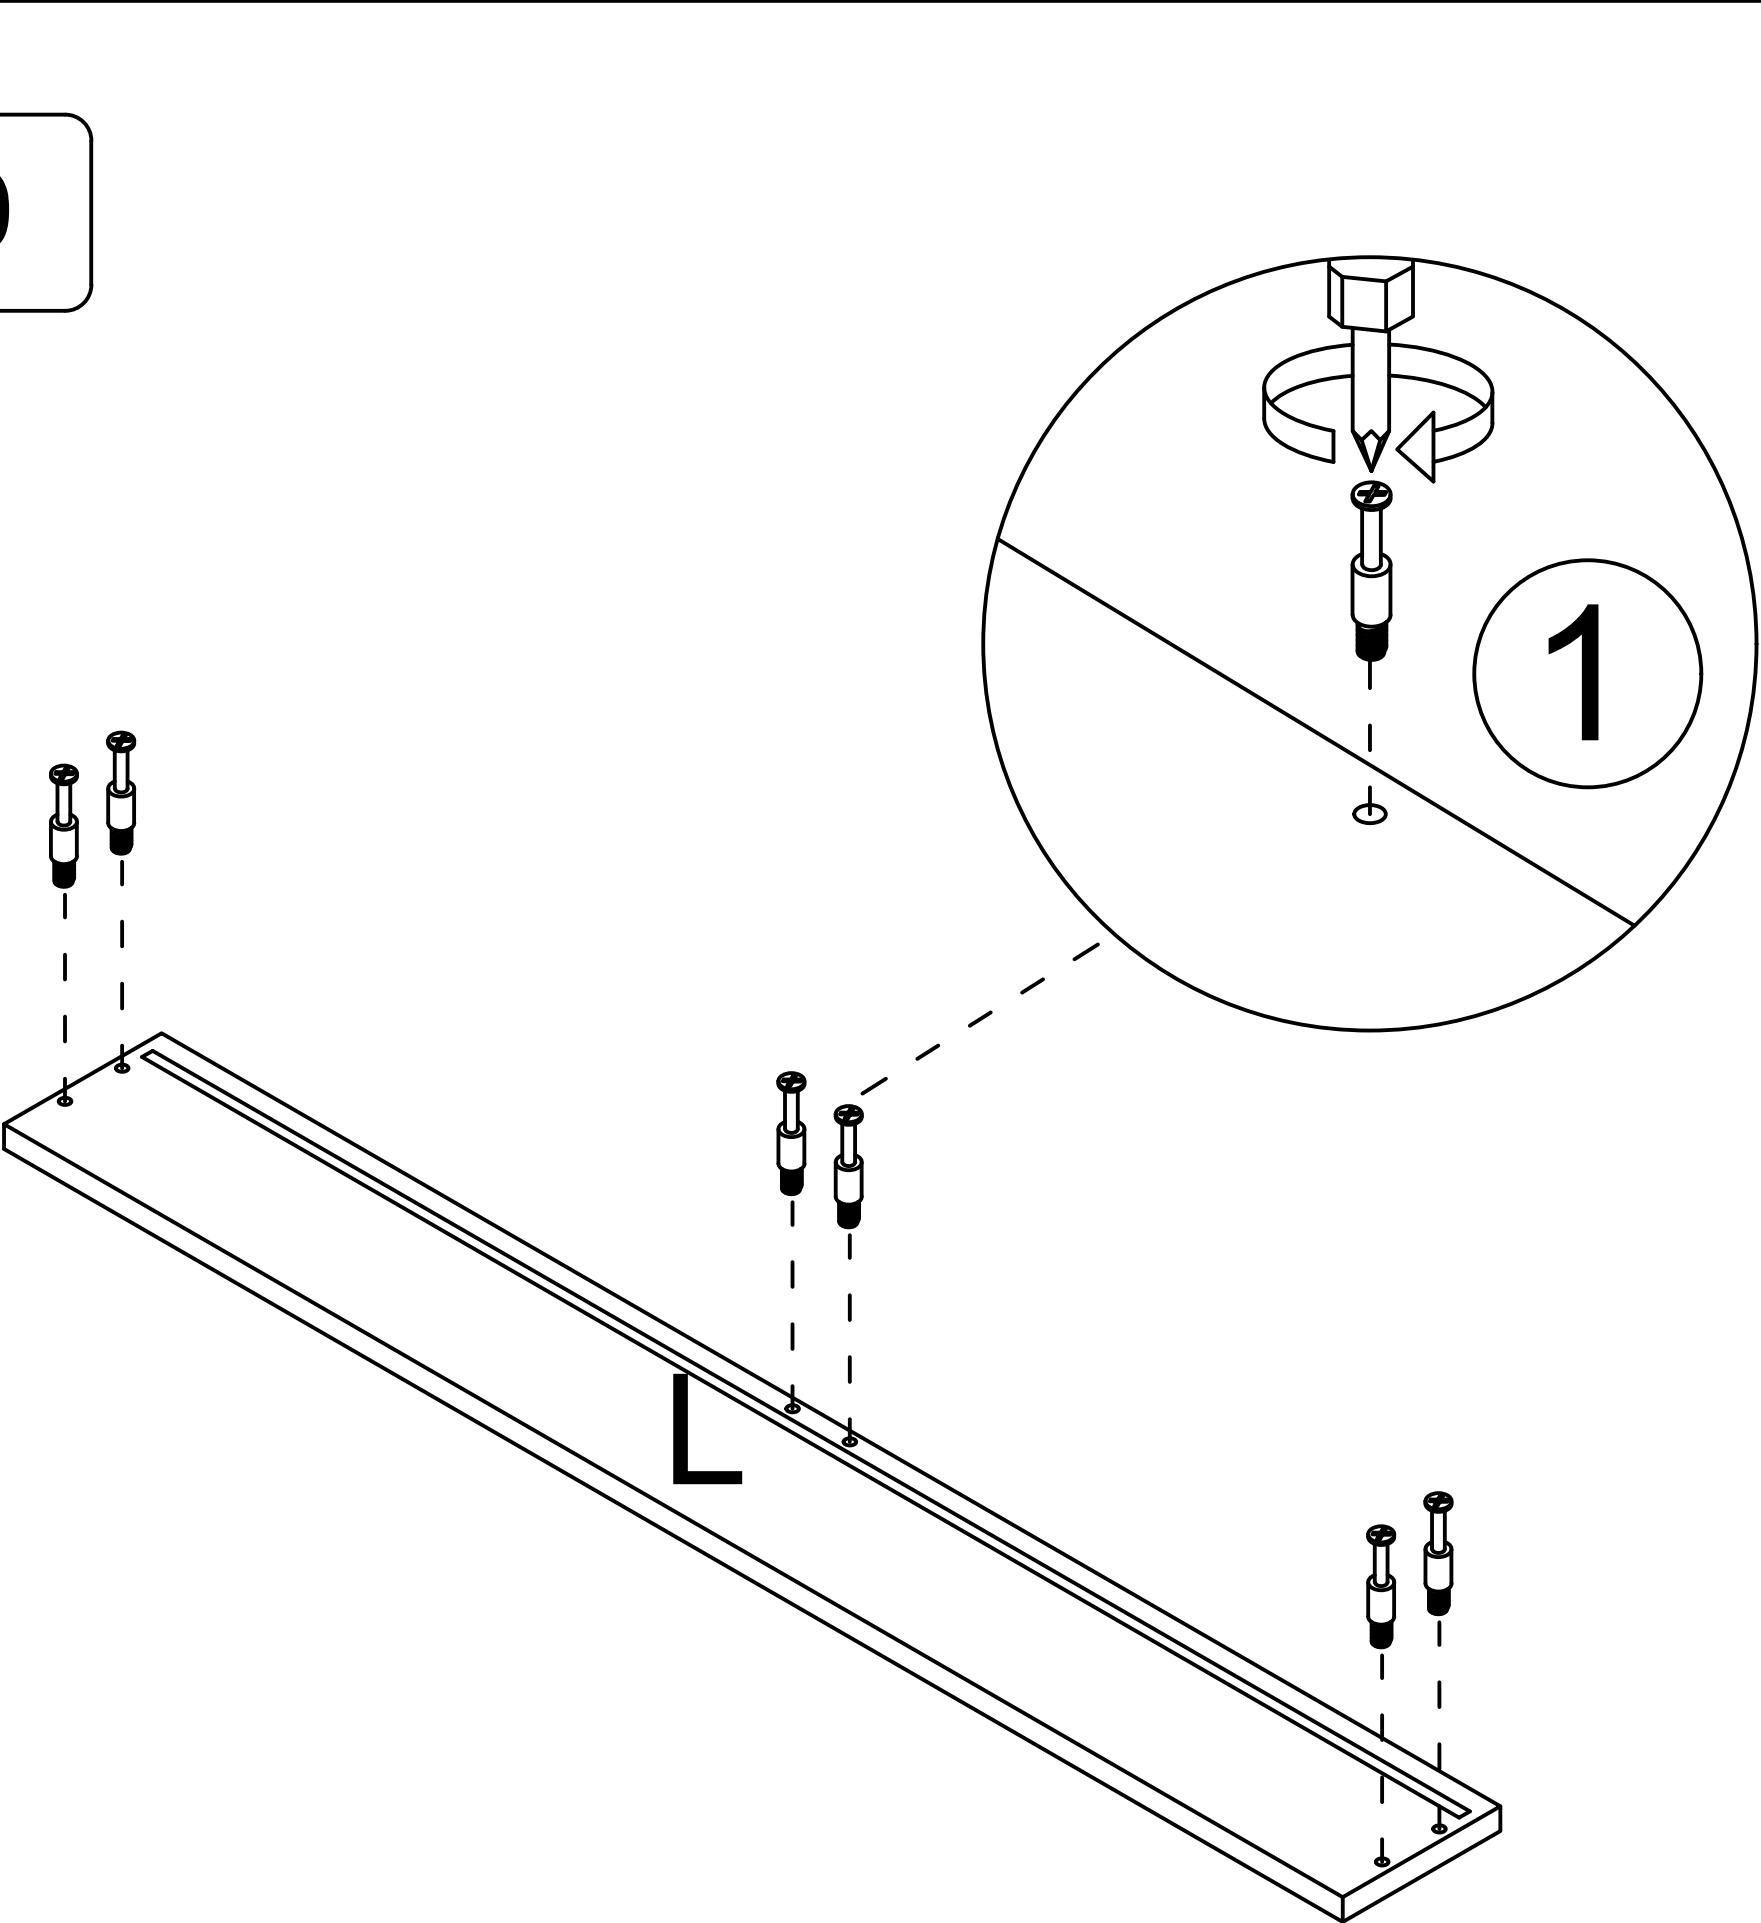


Step 11

2

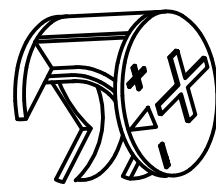


x6

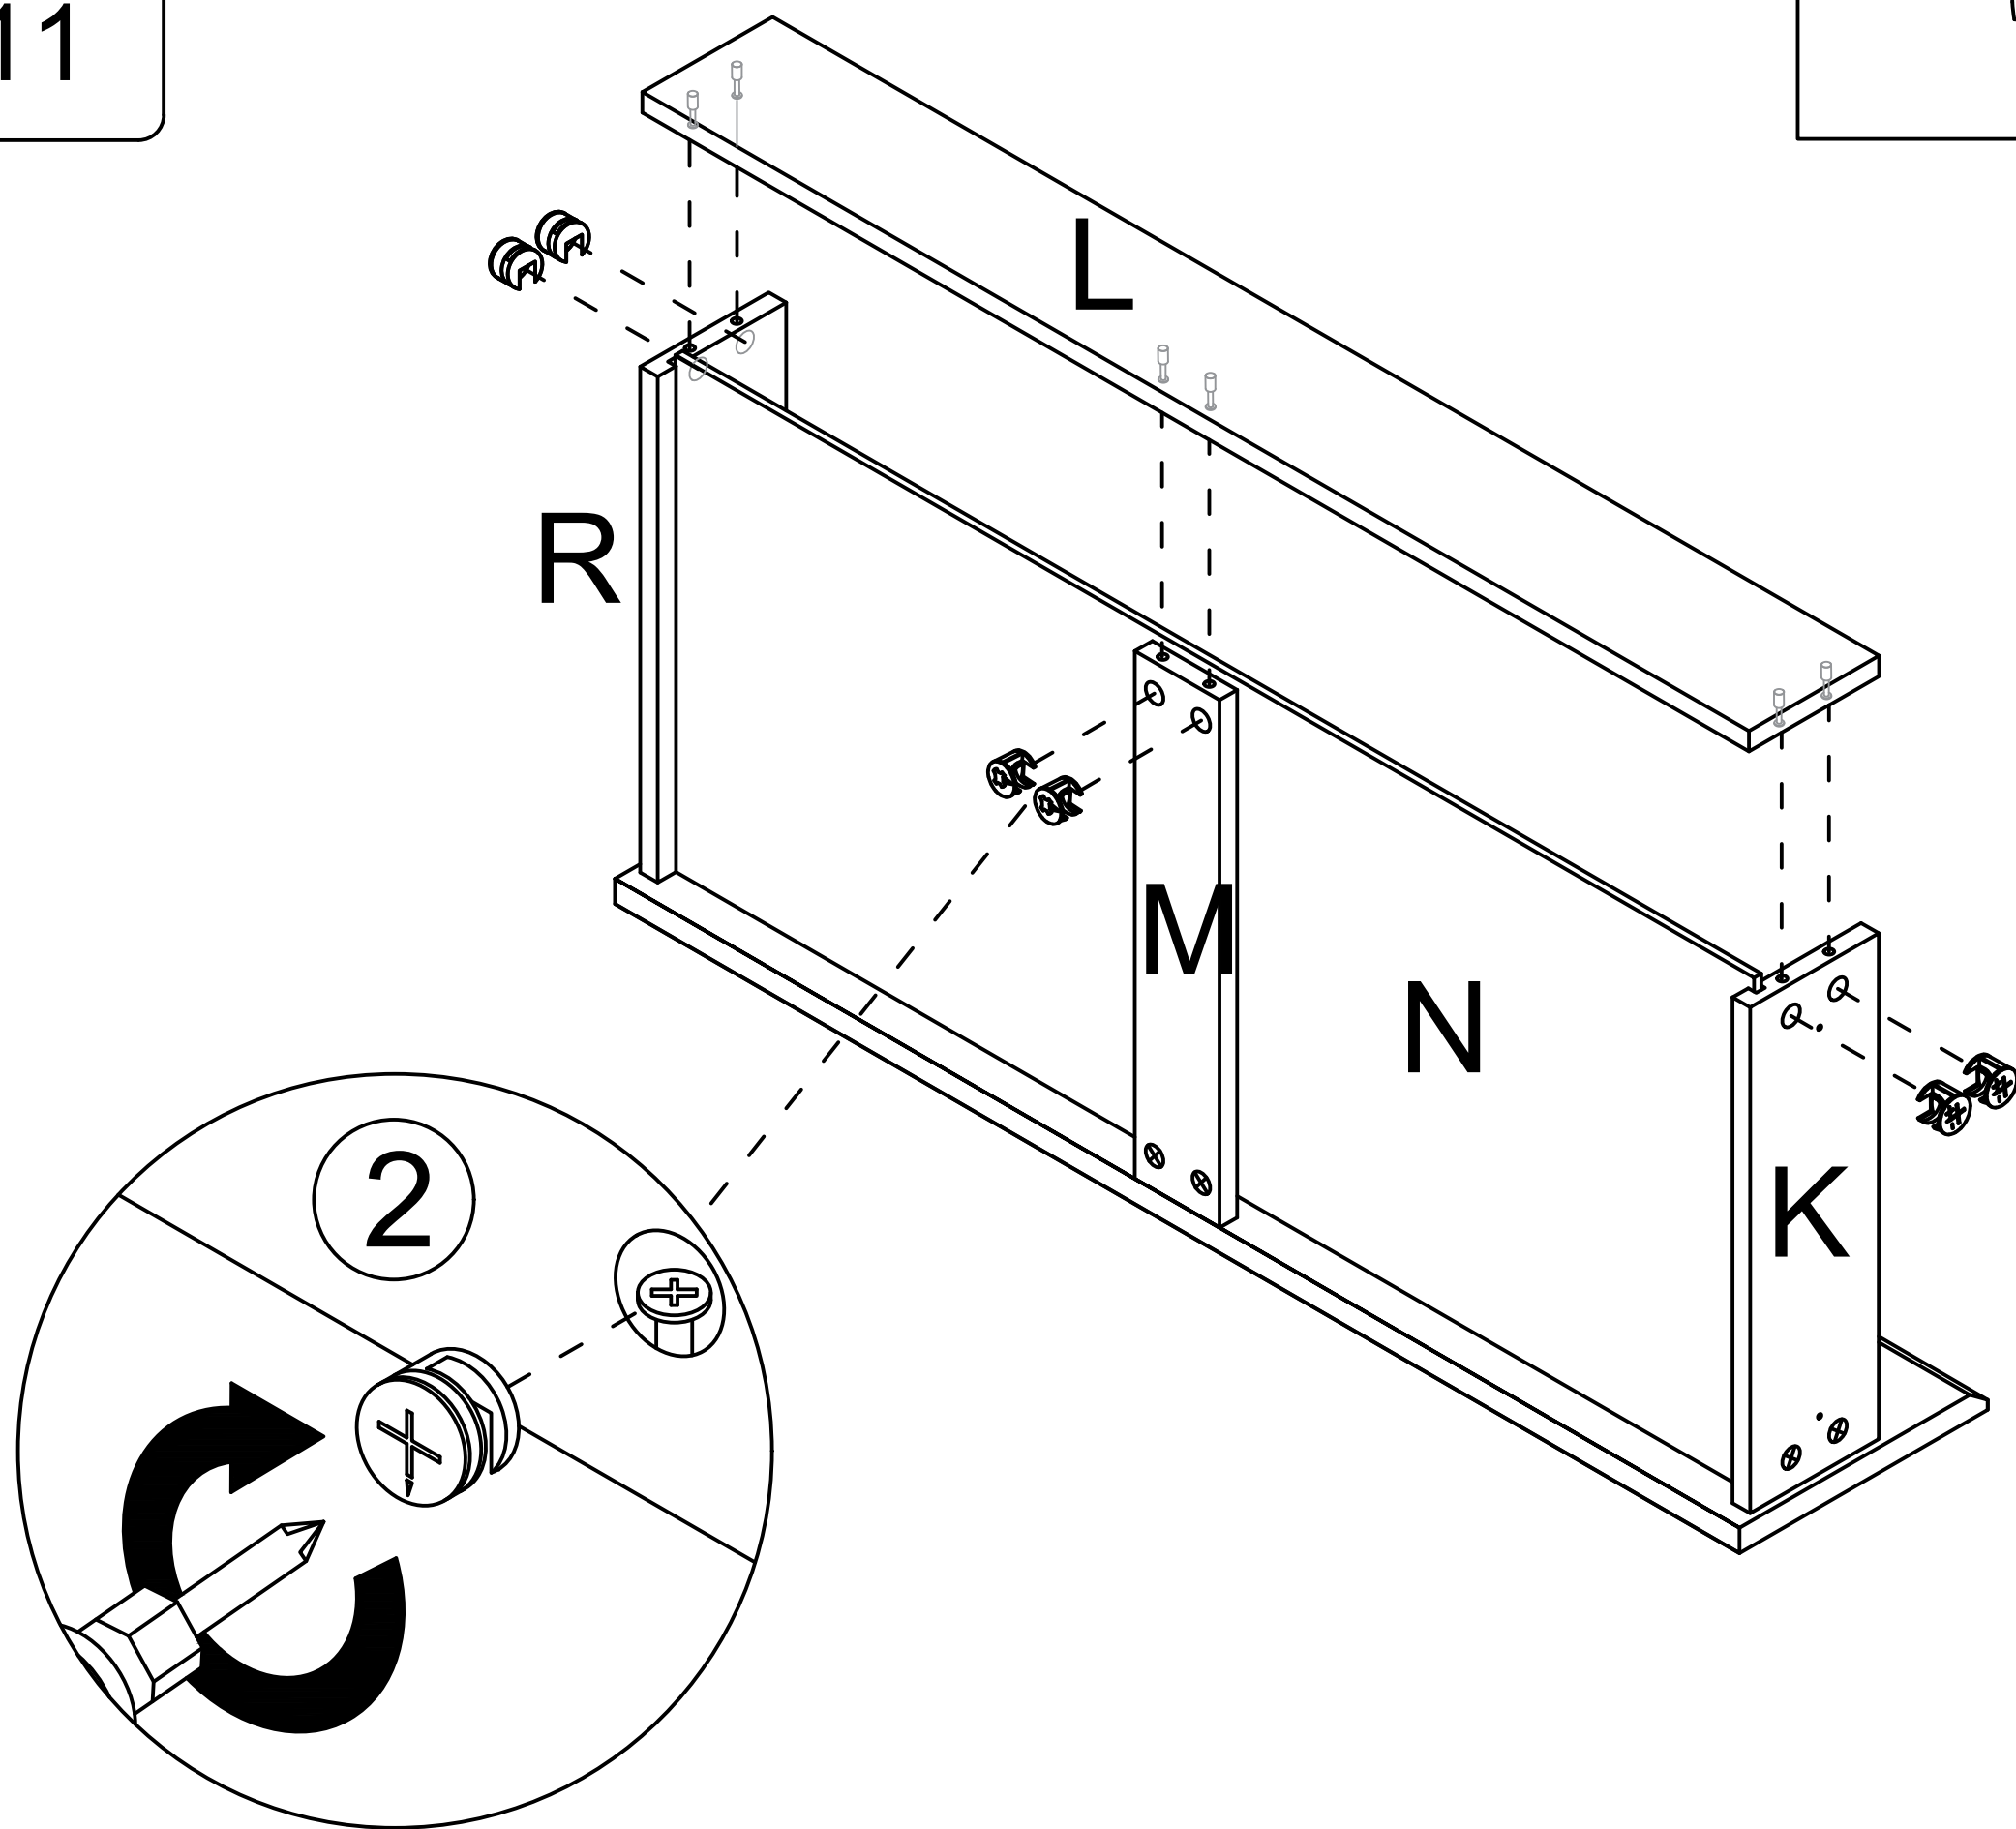


Step 12

5








x4


a



x2






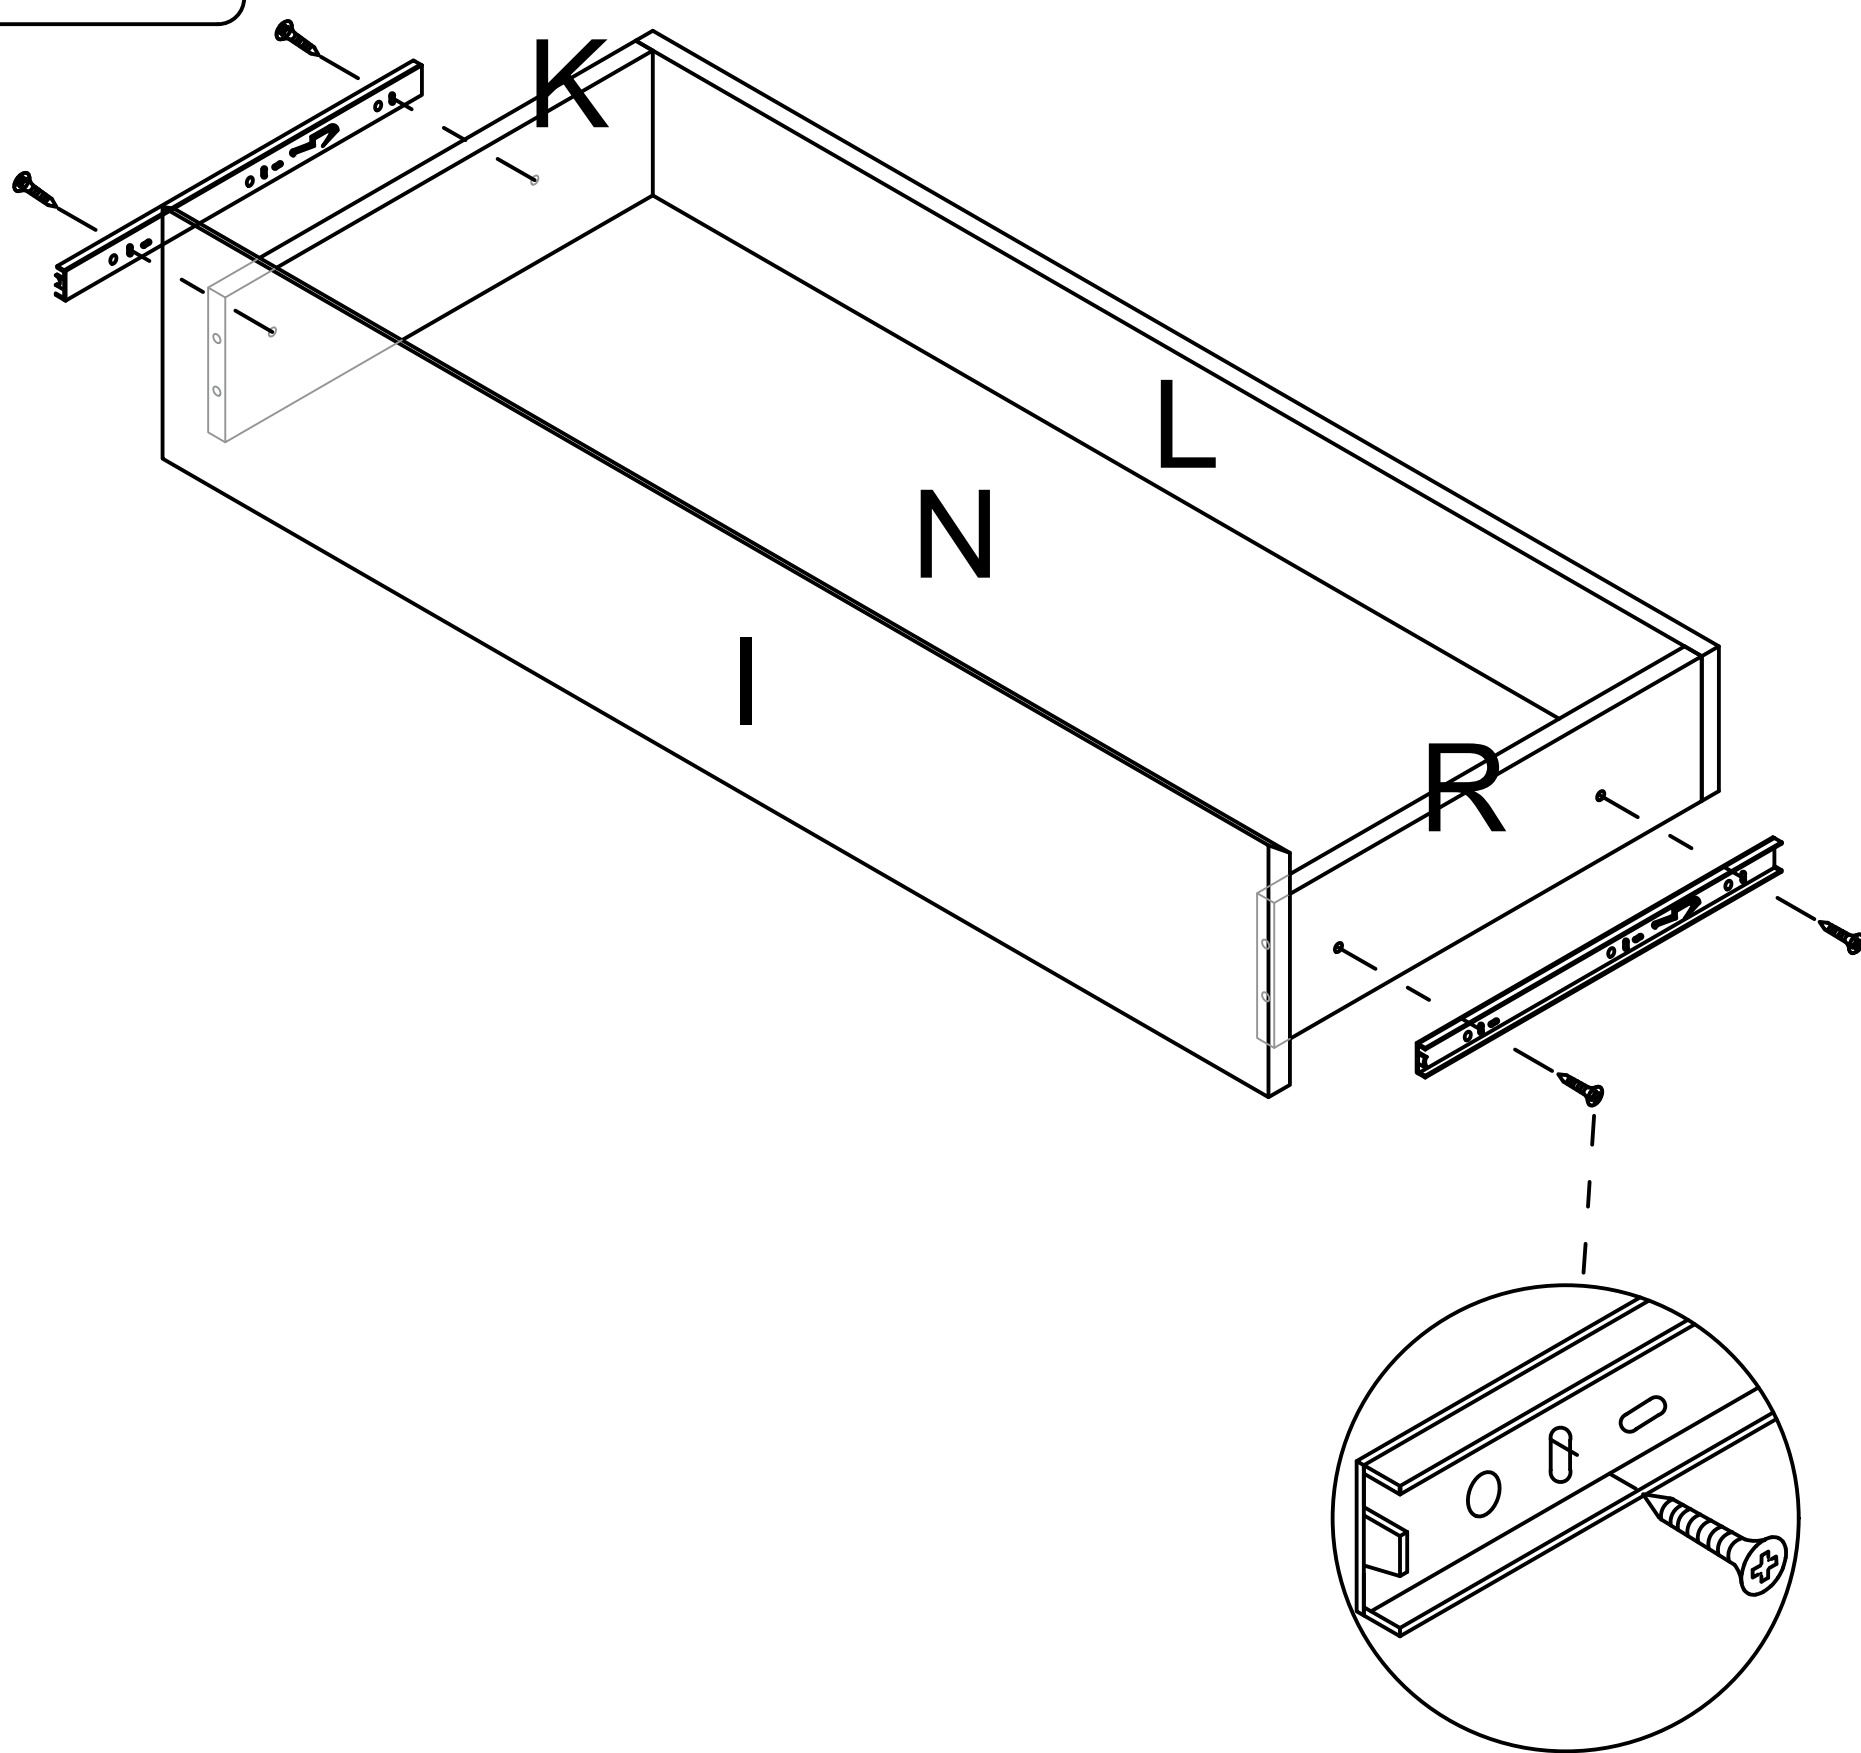


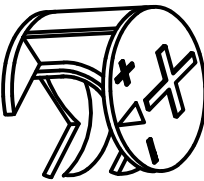
- | | | |
|---|---|-----|
| ① |  | x24 |
| ② |  | x24 |
| a |  | x4 |
| ④ |  | x8 |

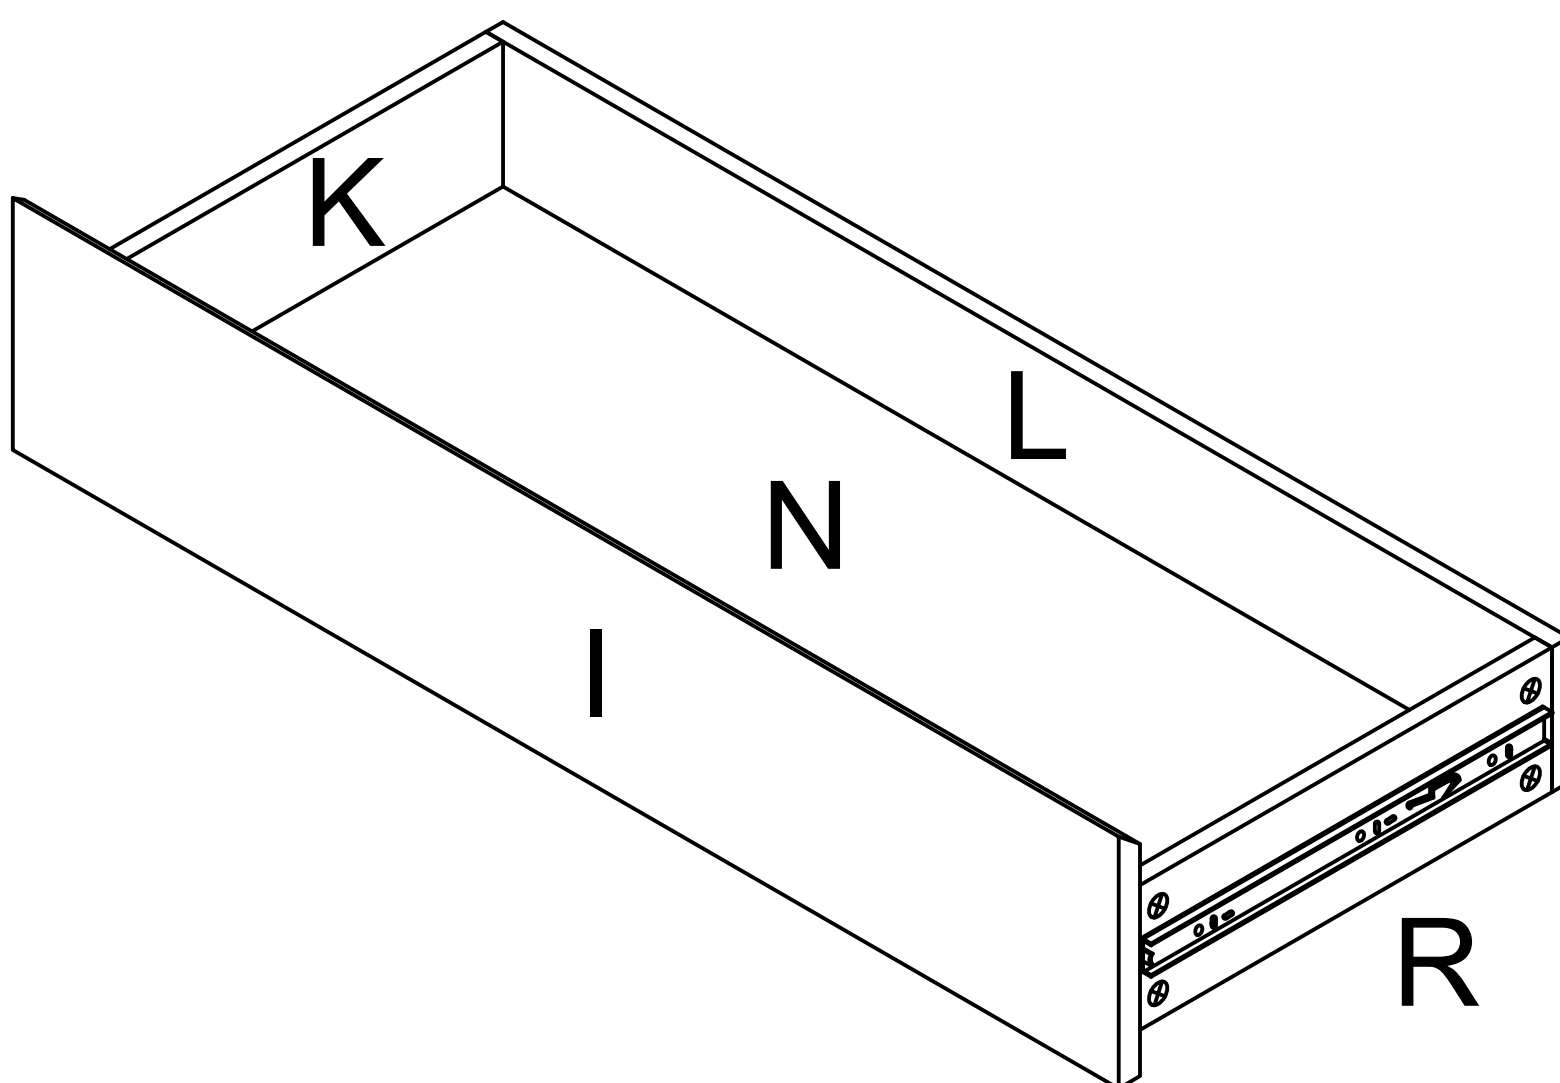



x2

Repeat the drawer installation steps

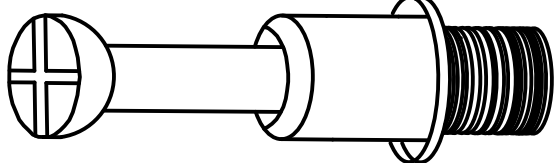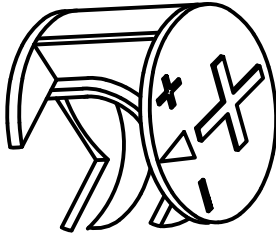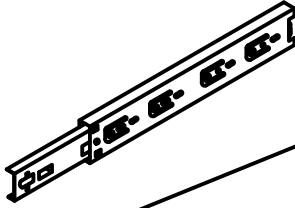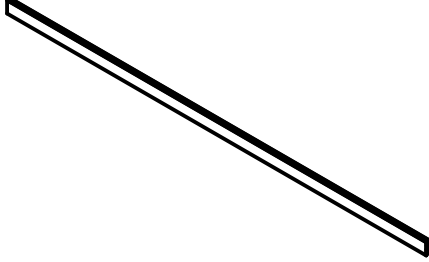
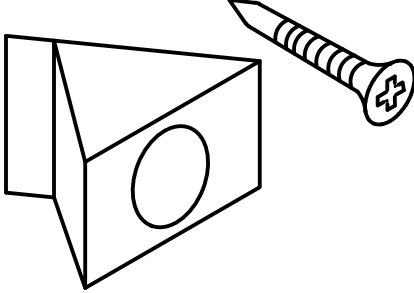
1		24pcs	2		24pcs
3		8pcs	4	 	6pcs 18pcs
5		6pcs	6		1pcs
7		8pcs			

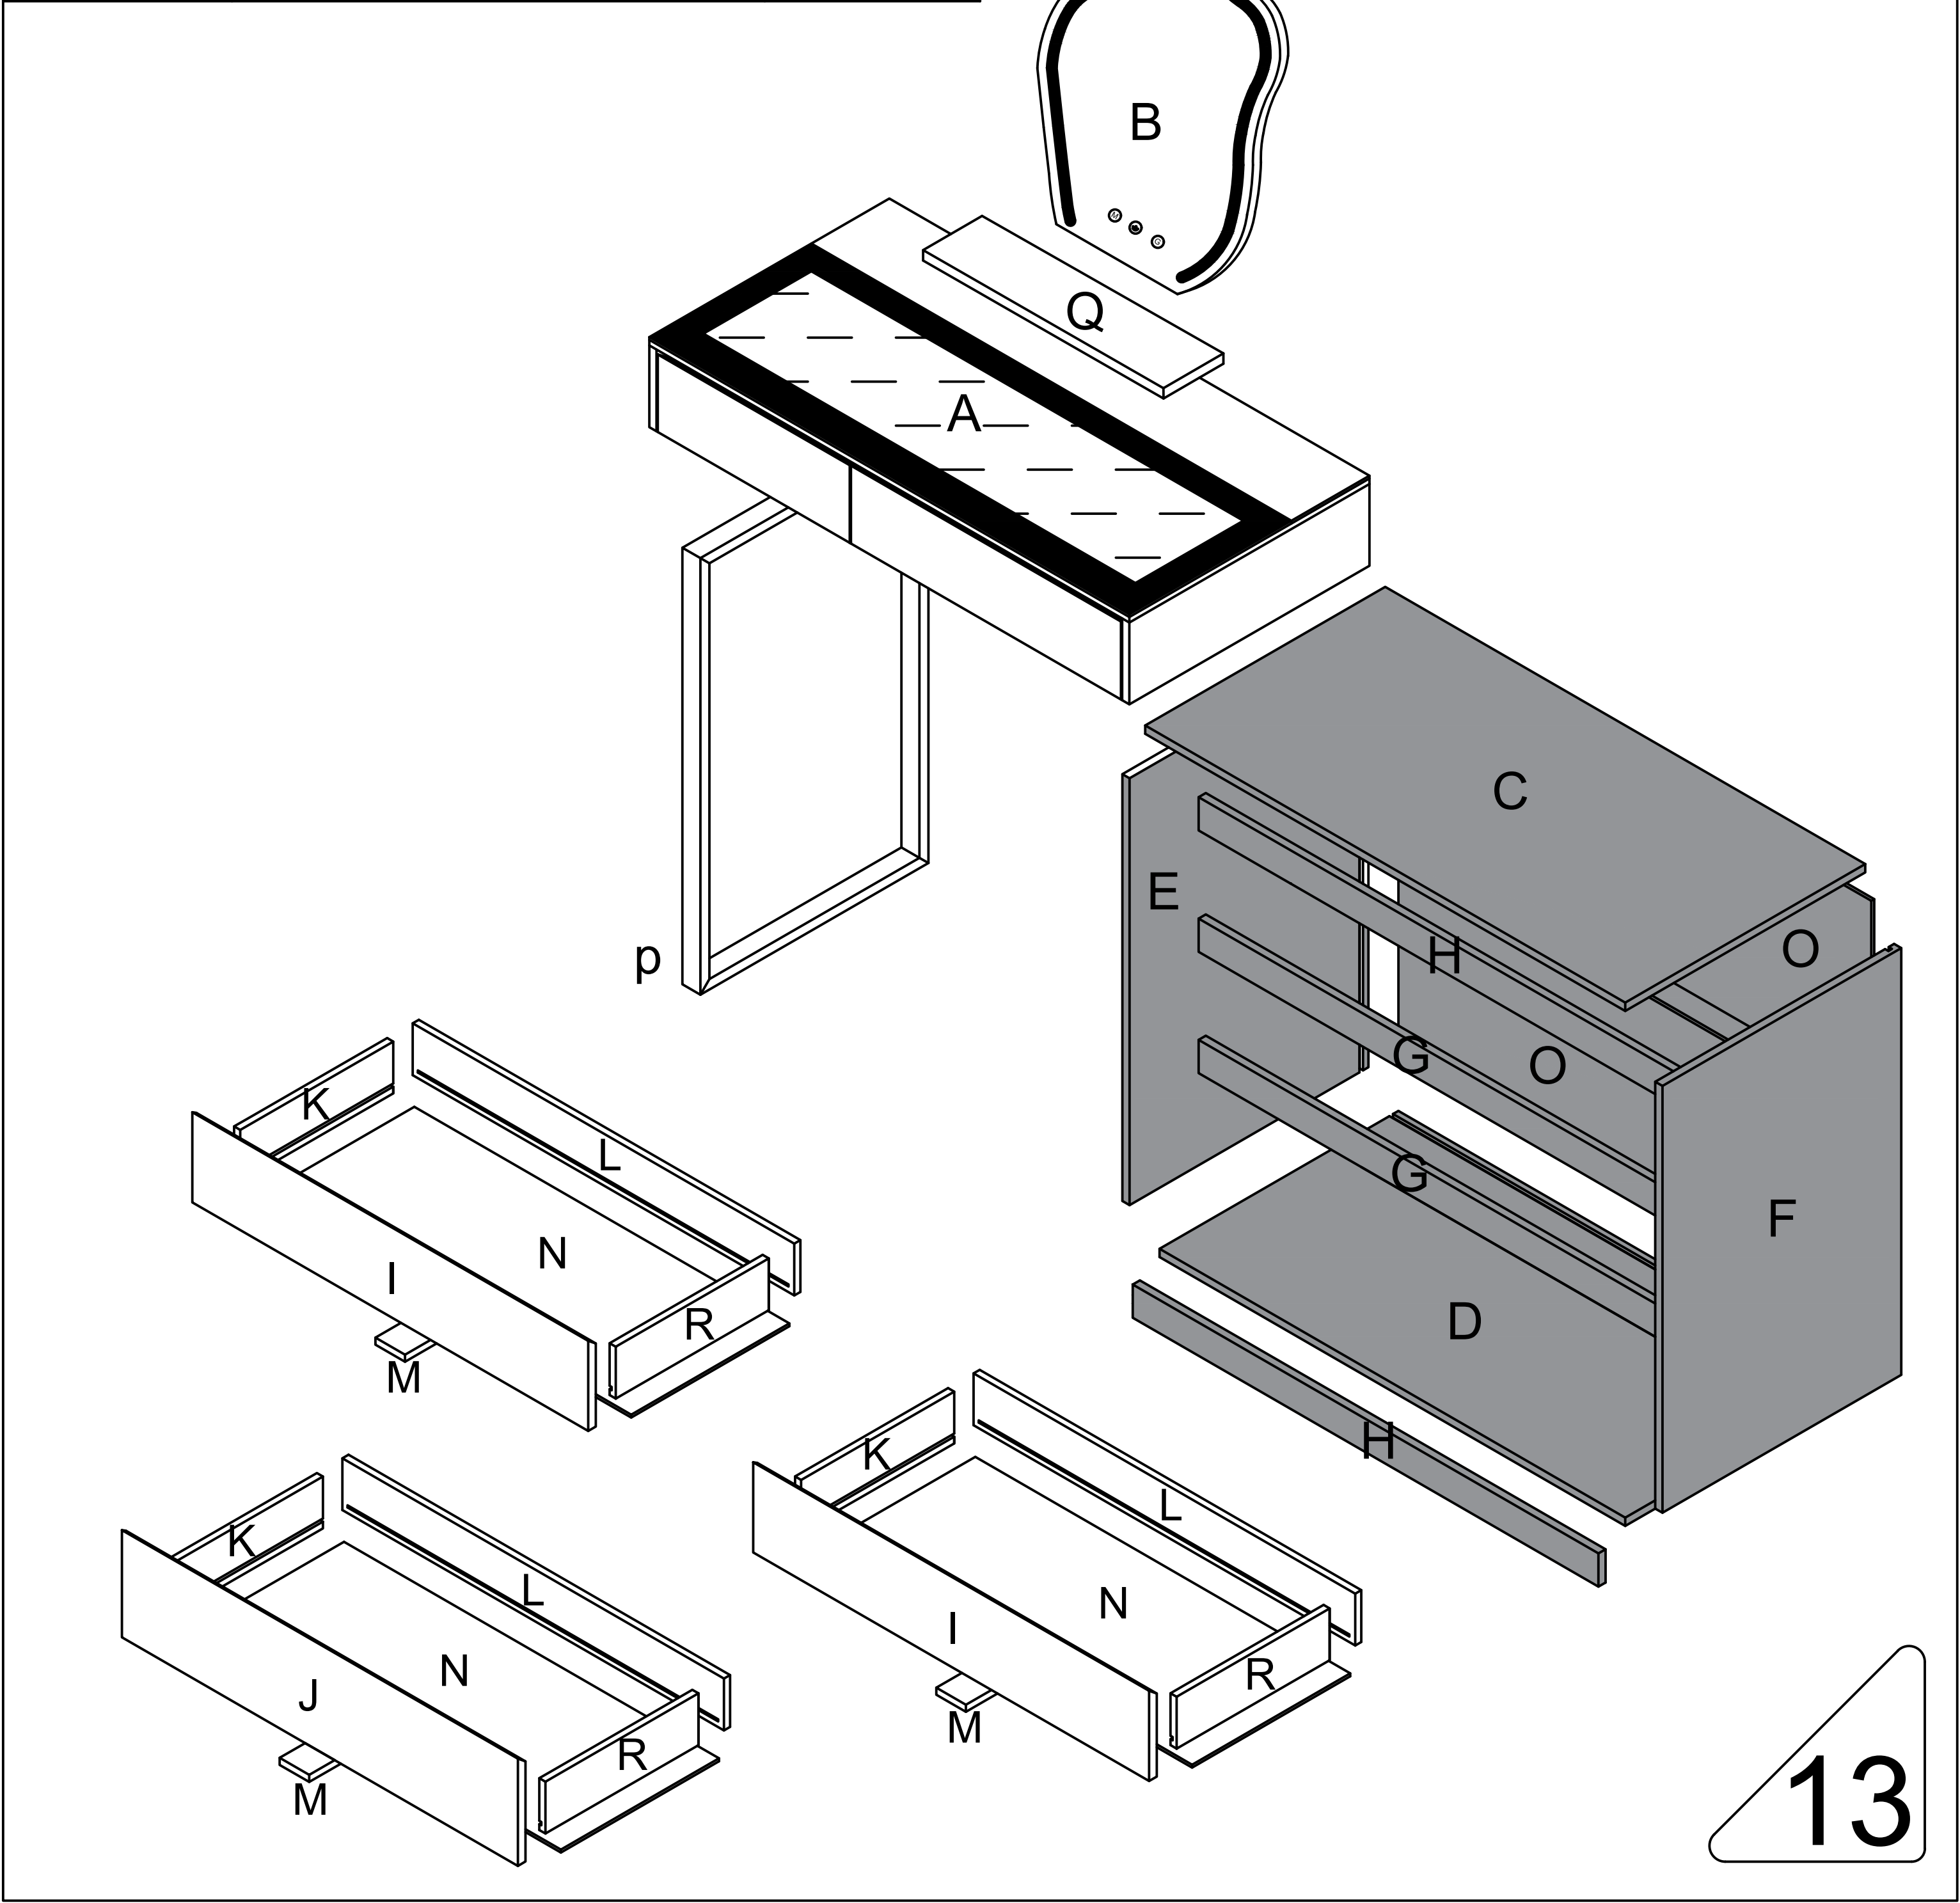



Step 13

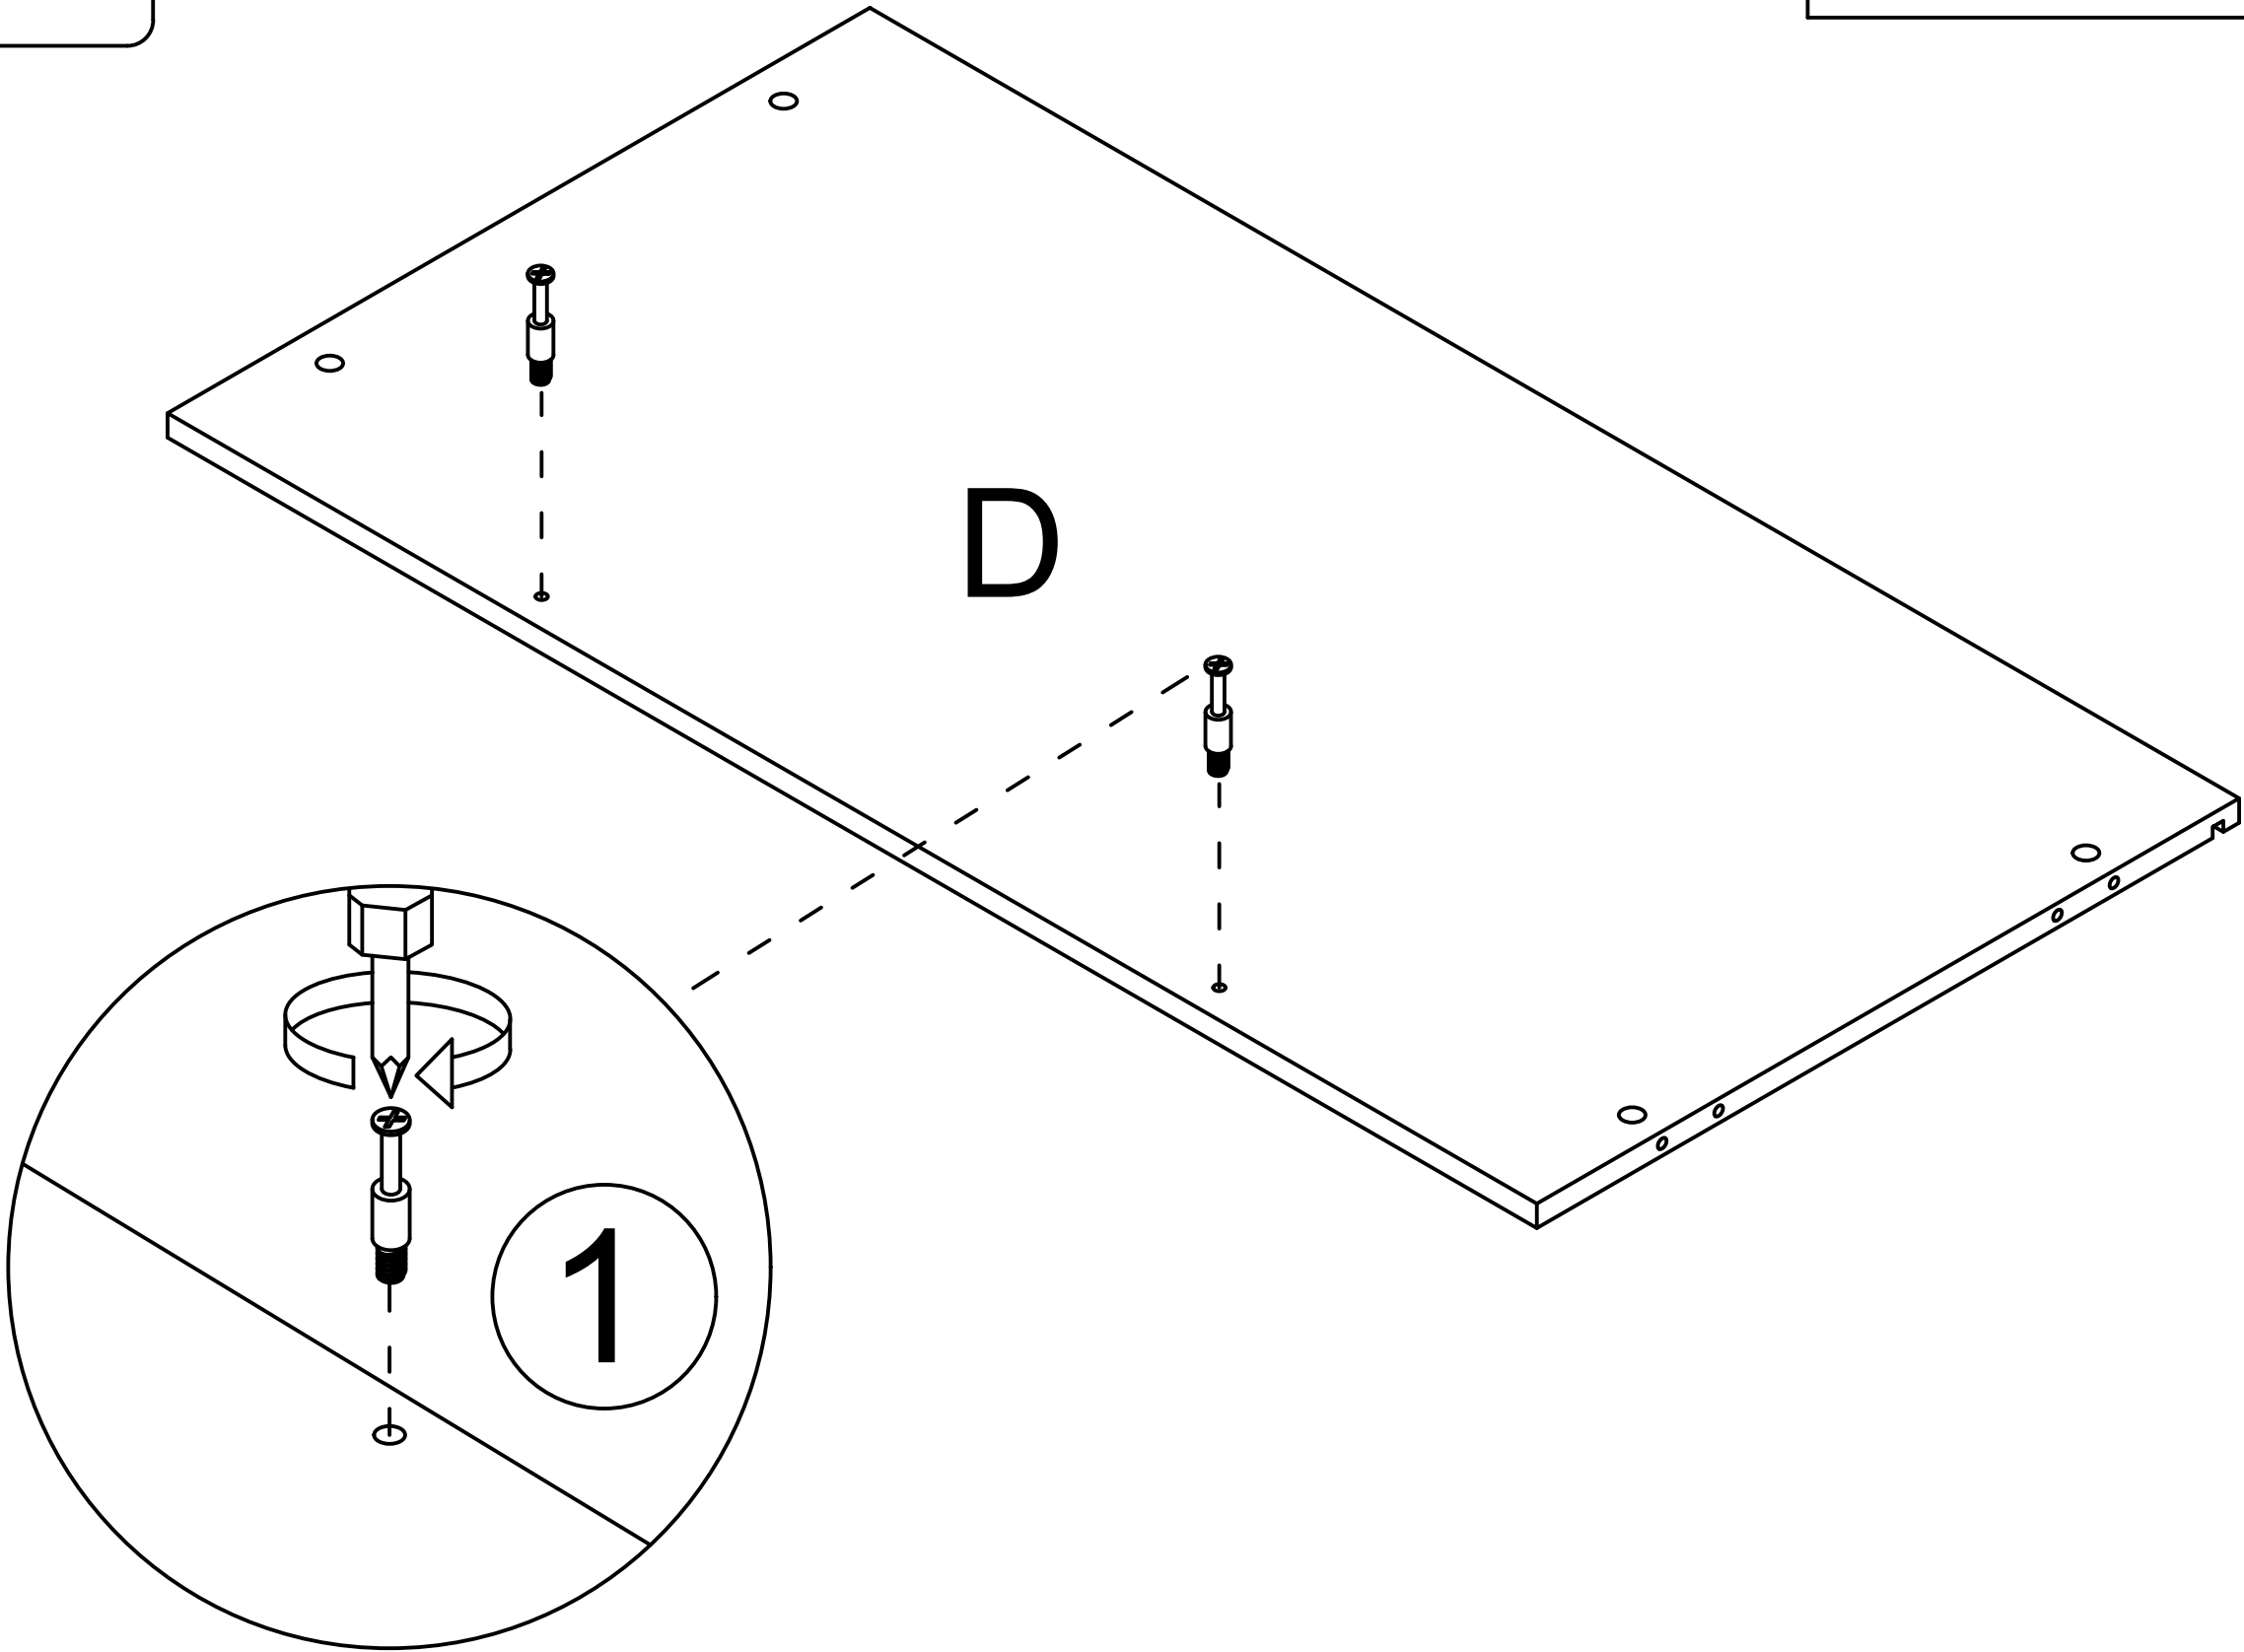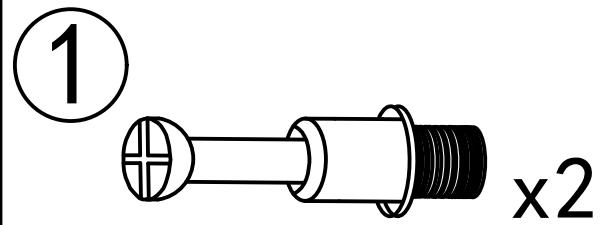



Step 14

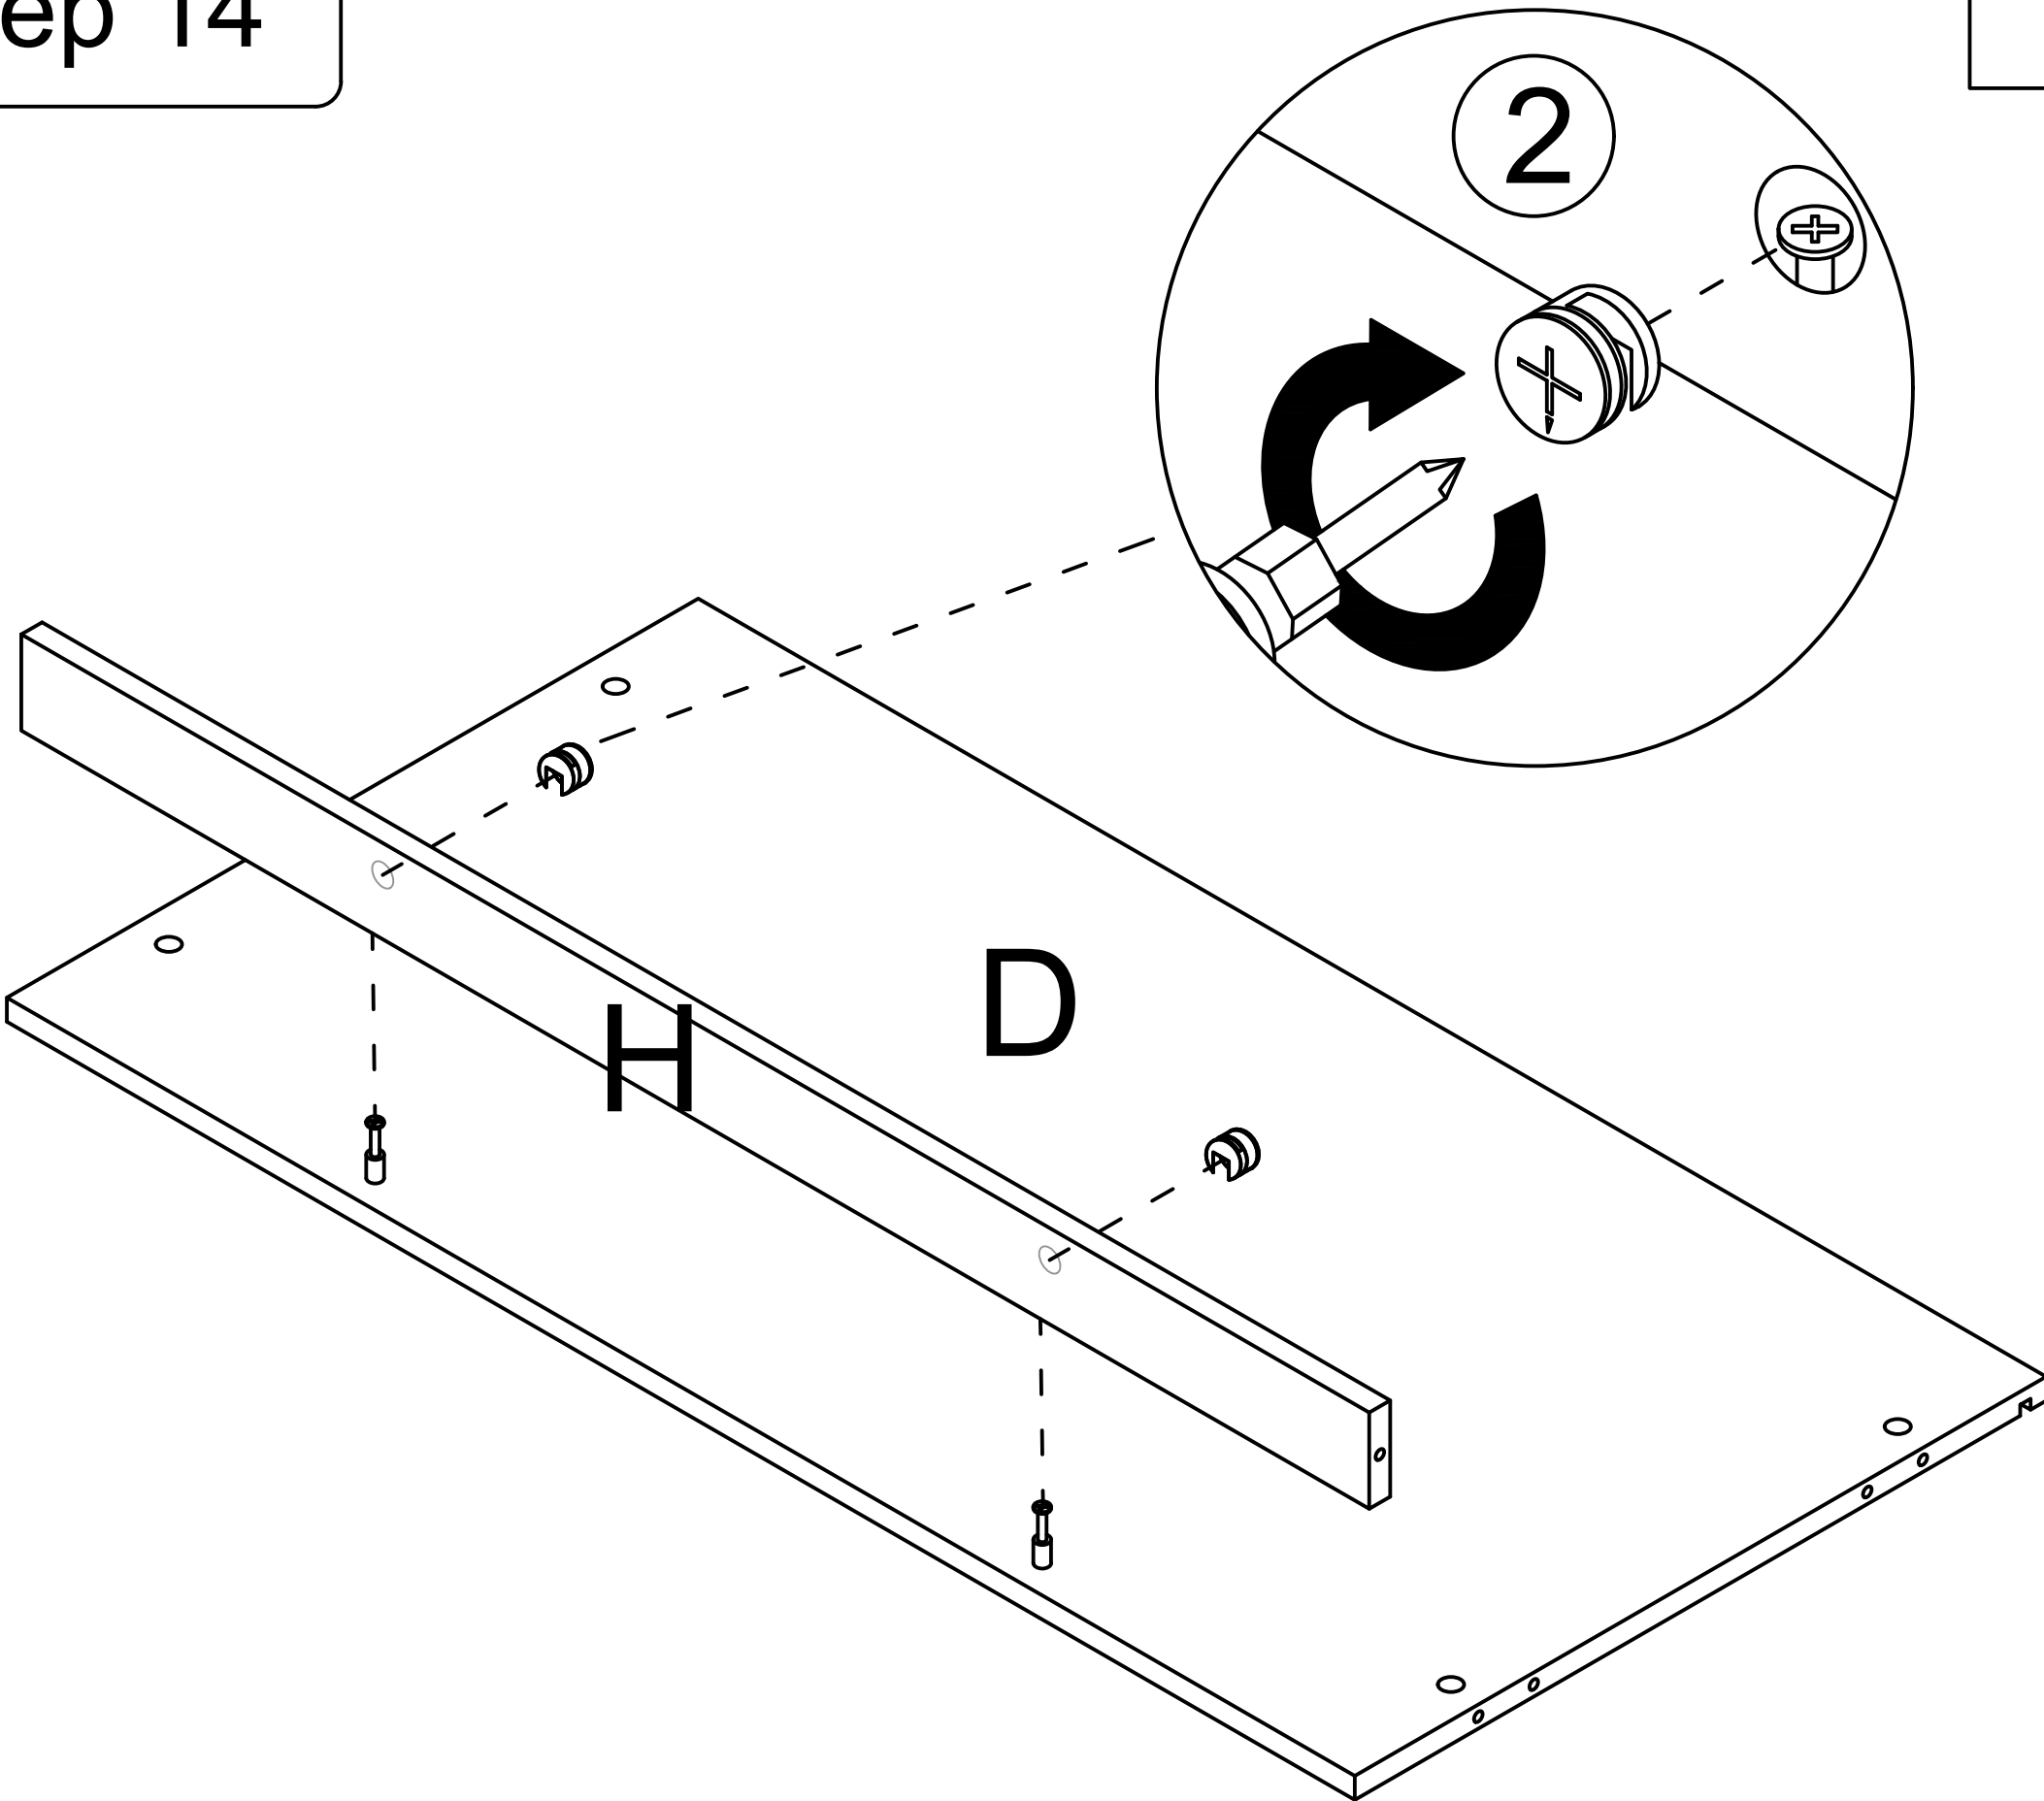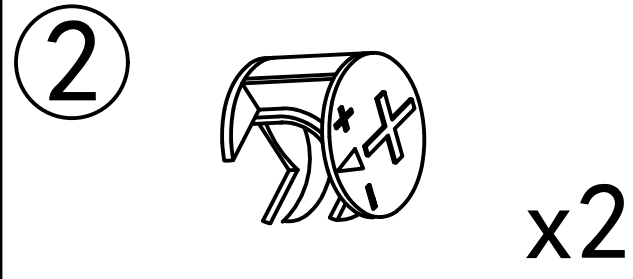

Step 15

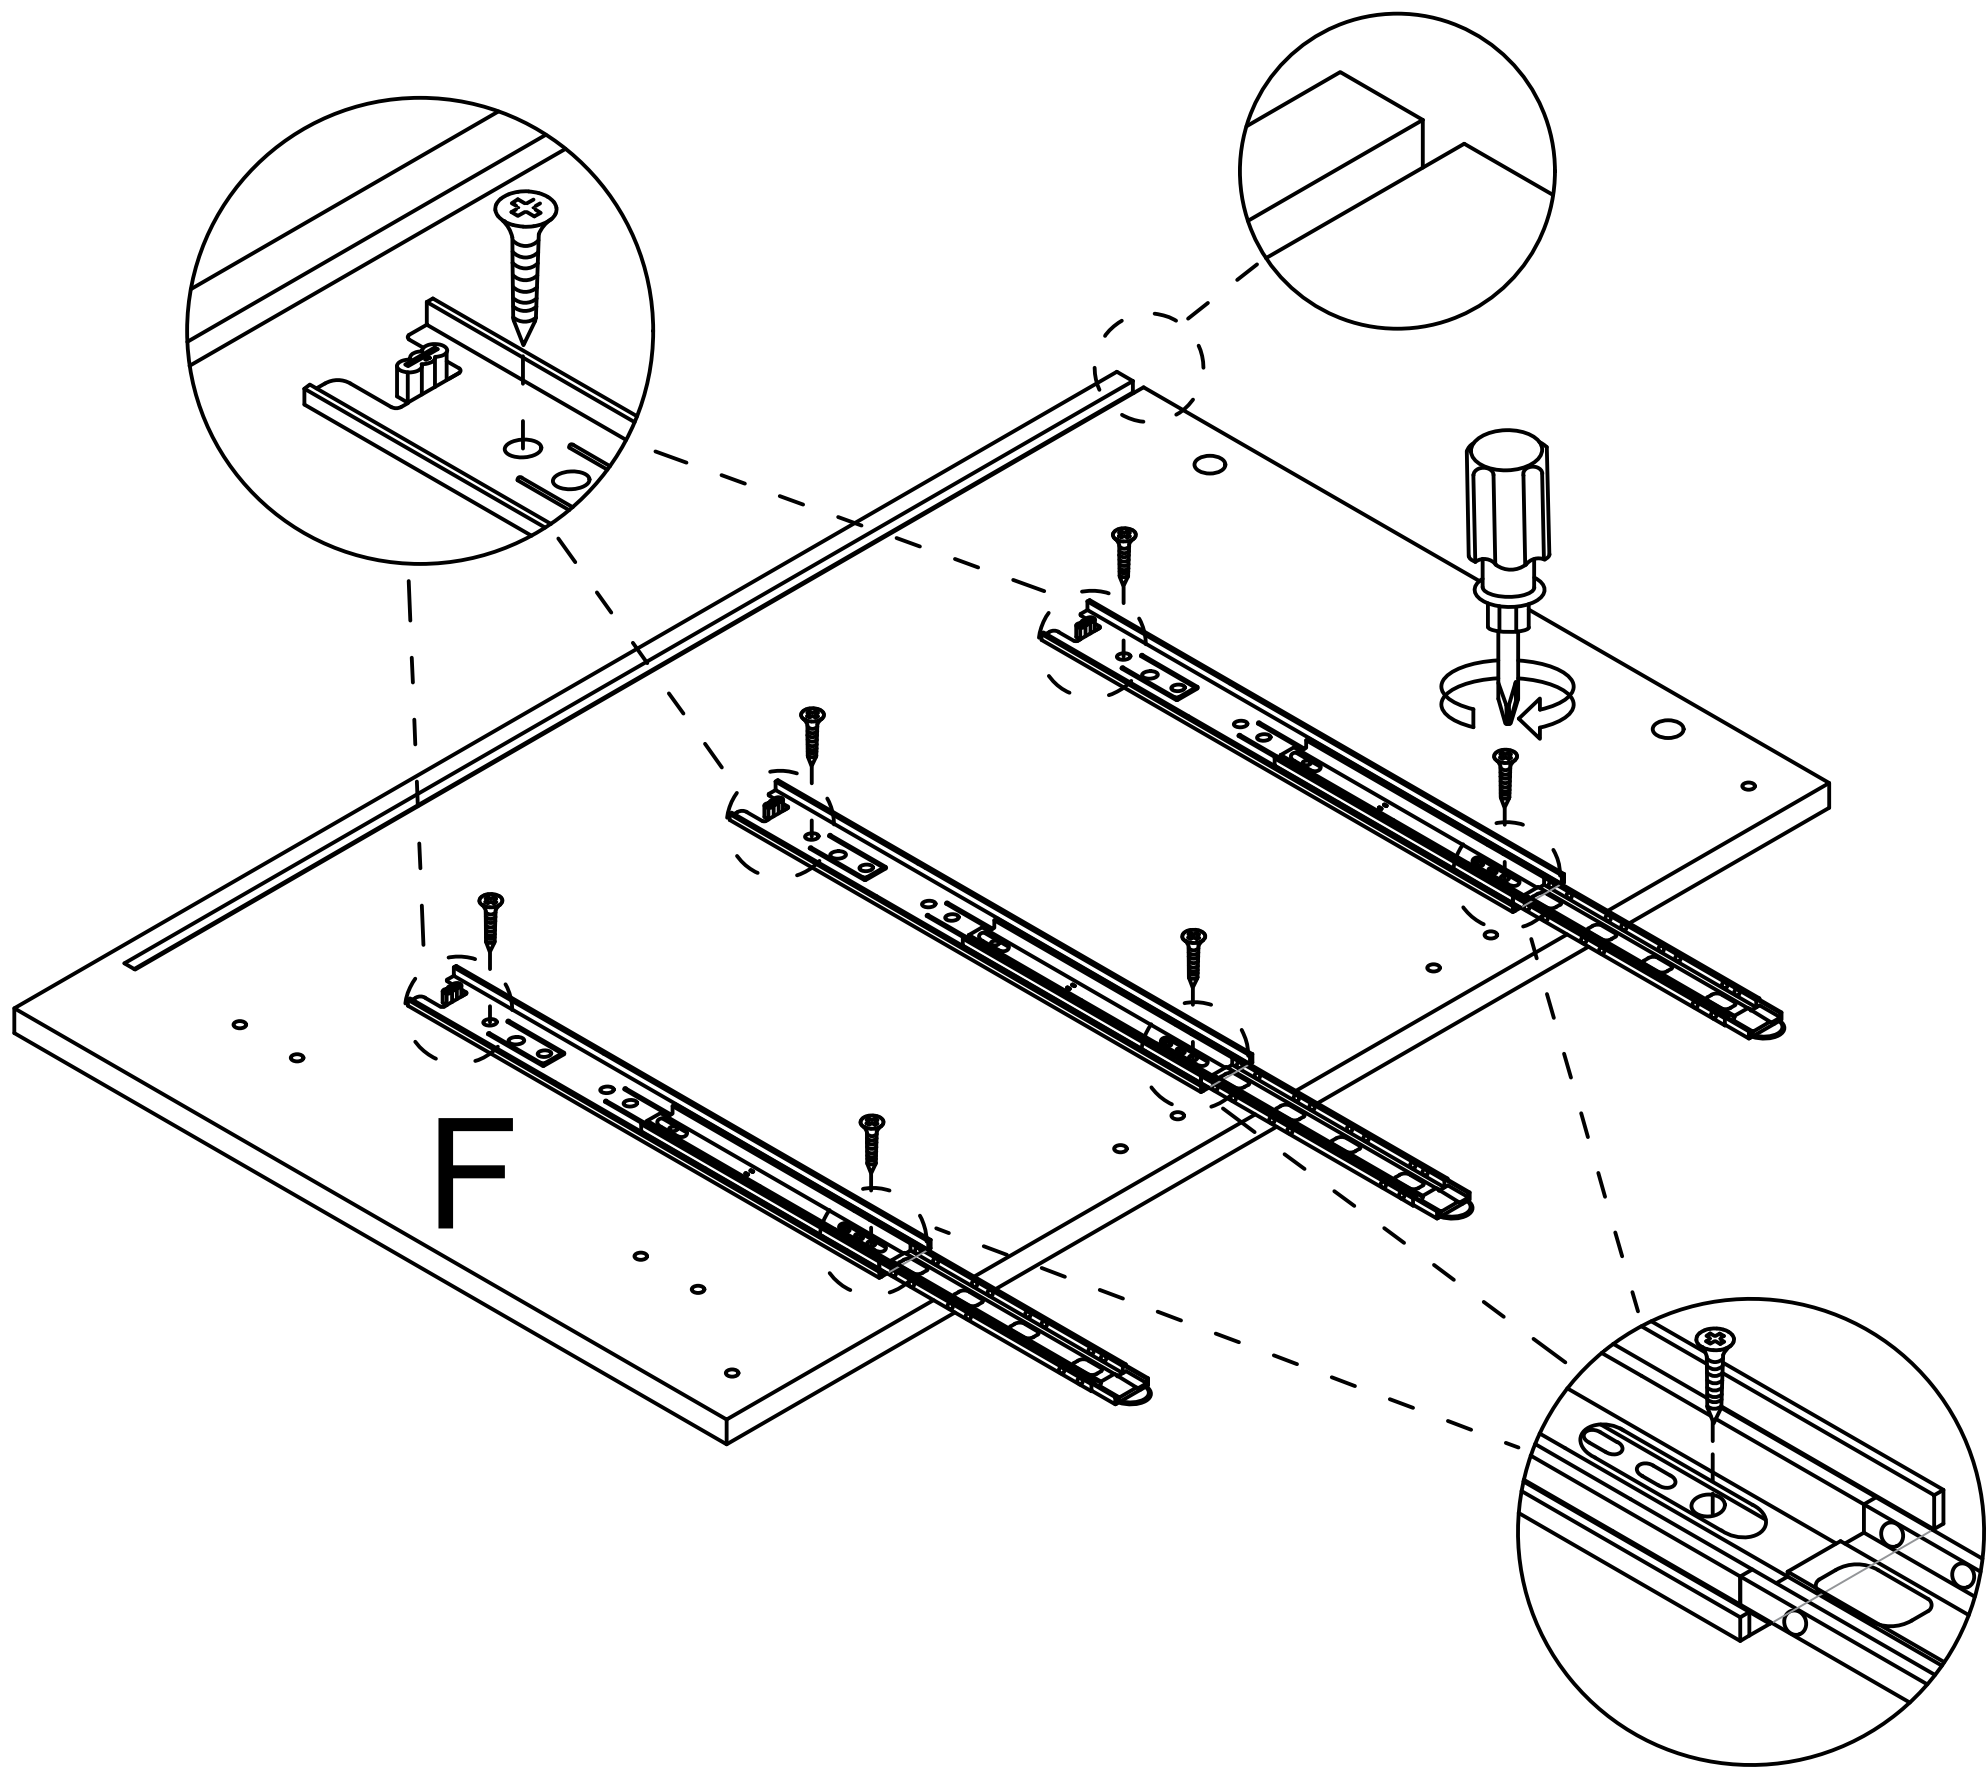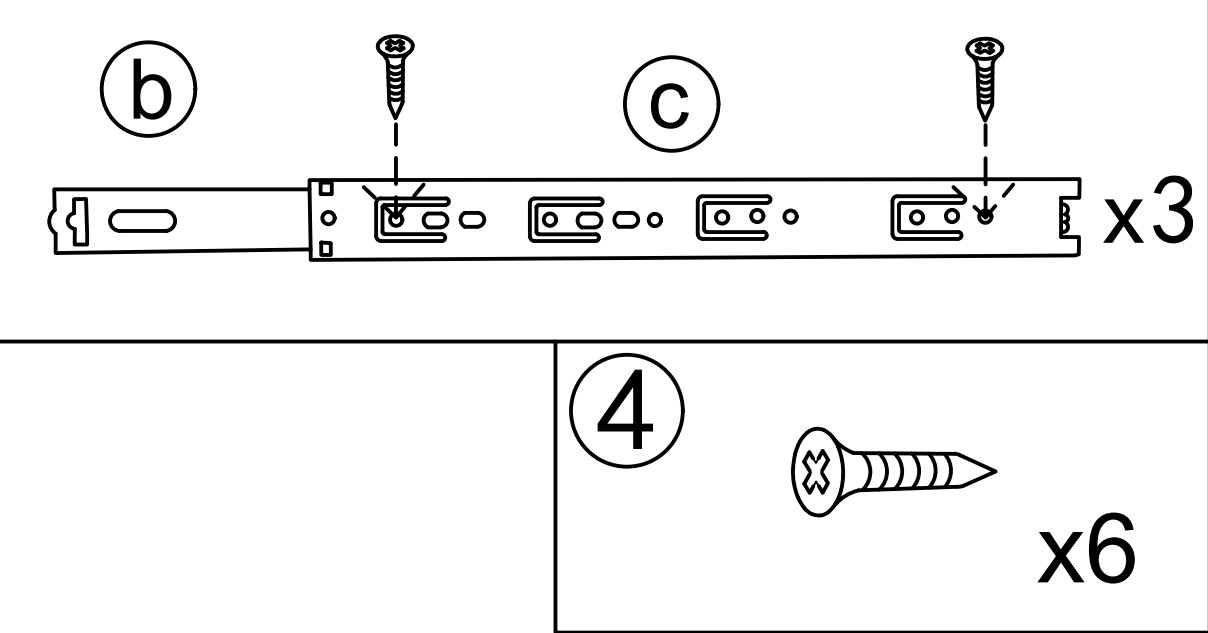


Step 16

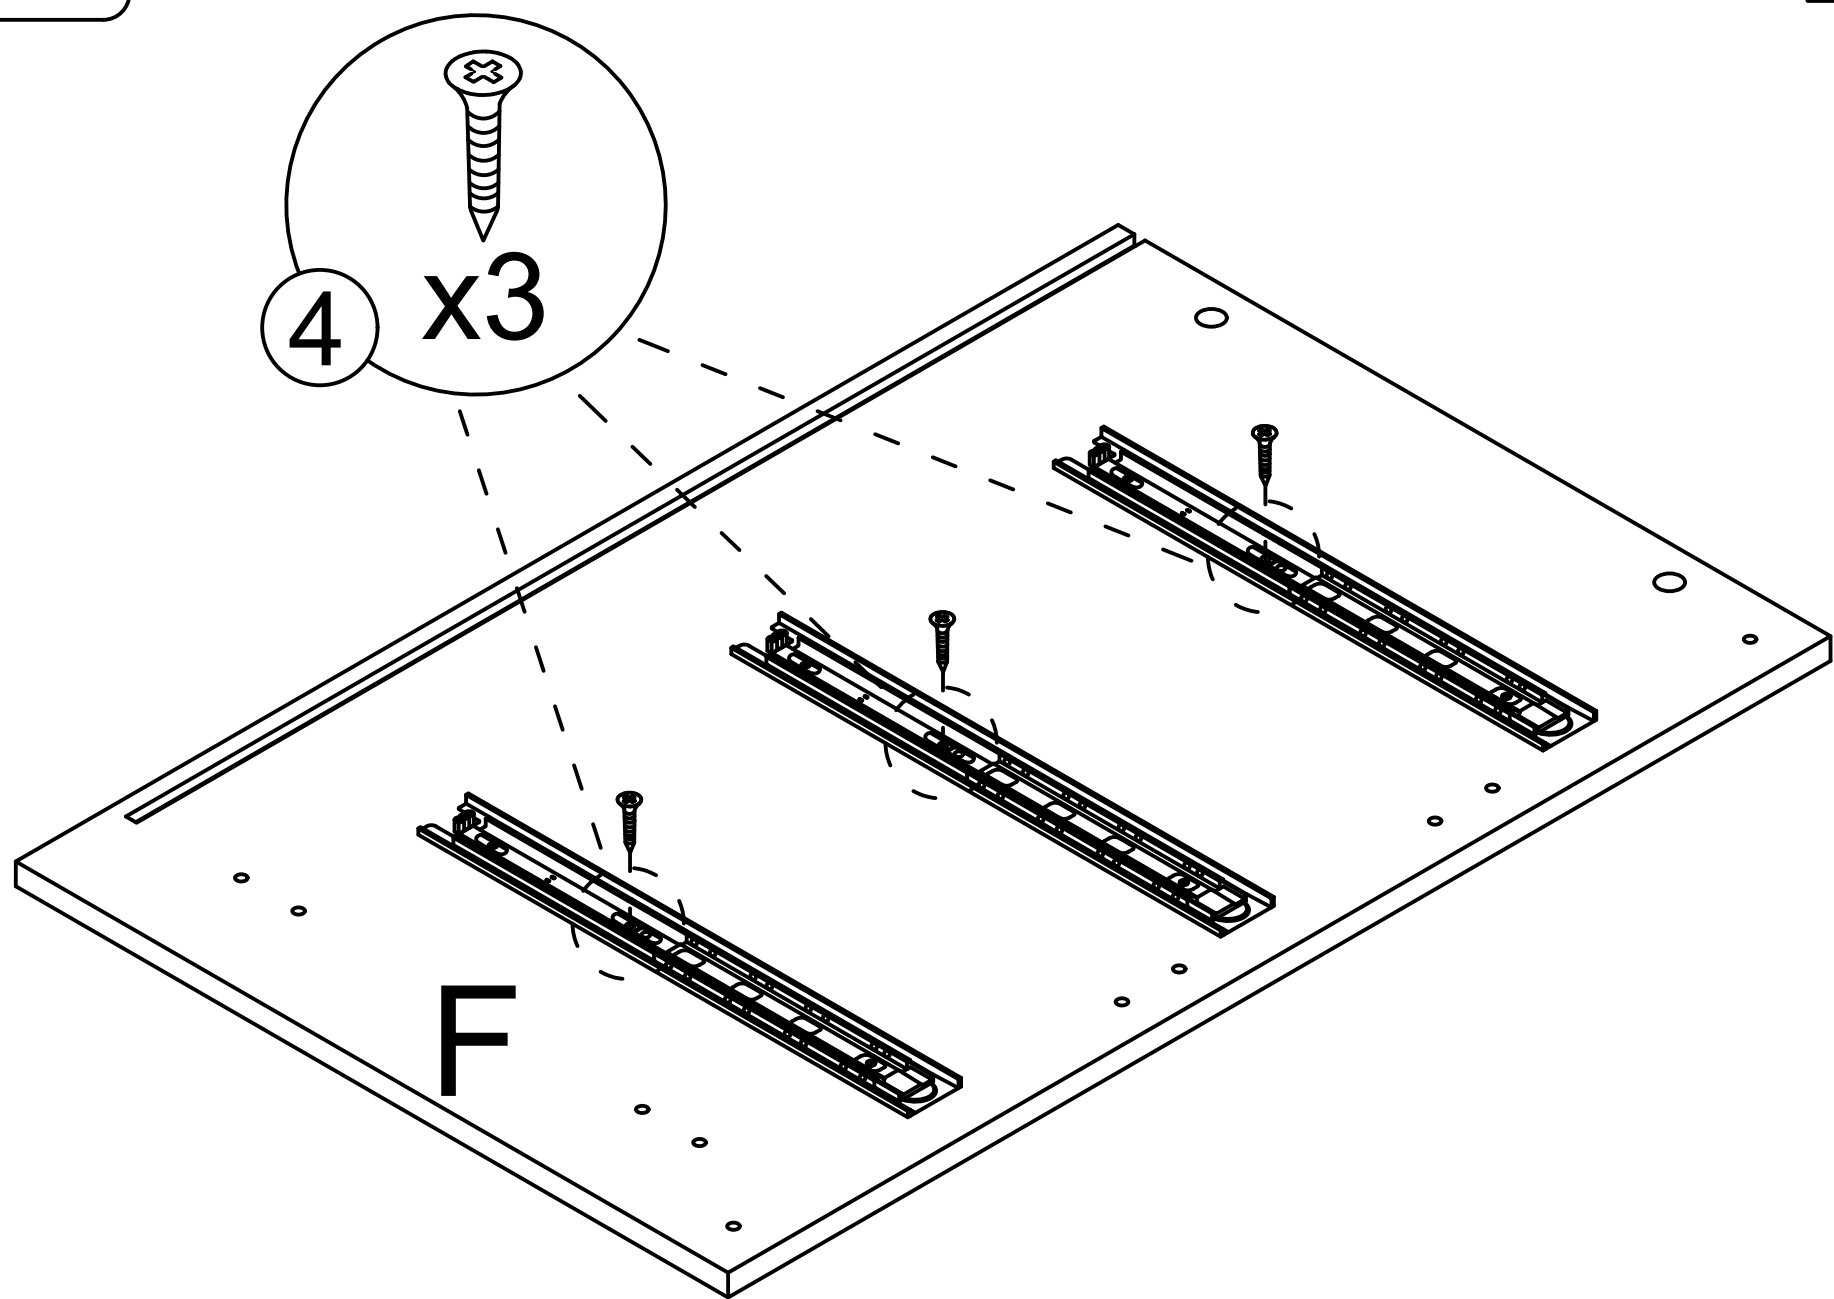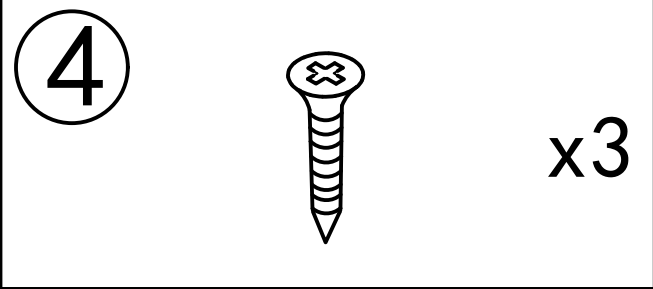


This hole is a reinforced fixing hole which can be installed as required

Step 17

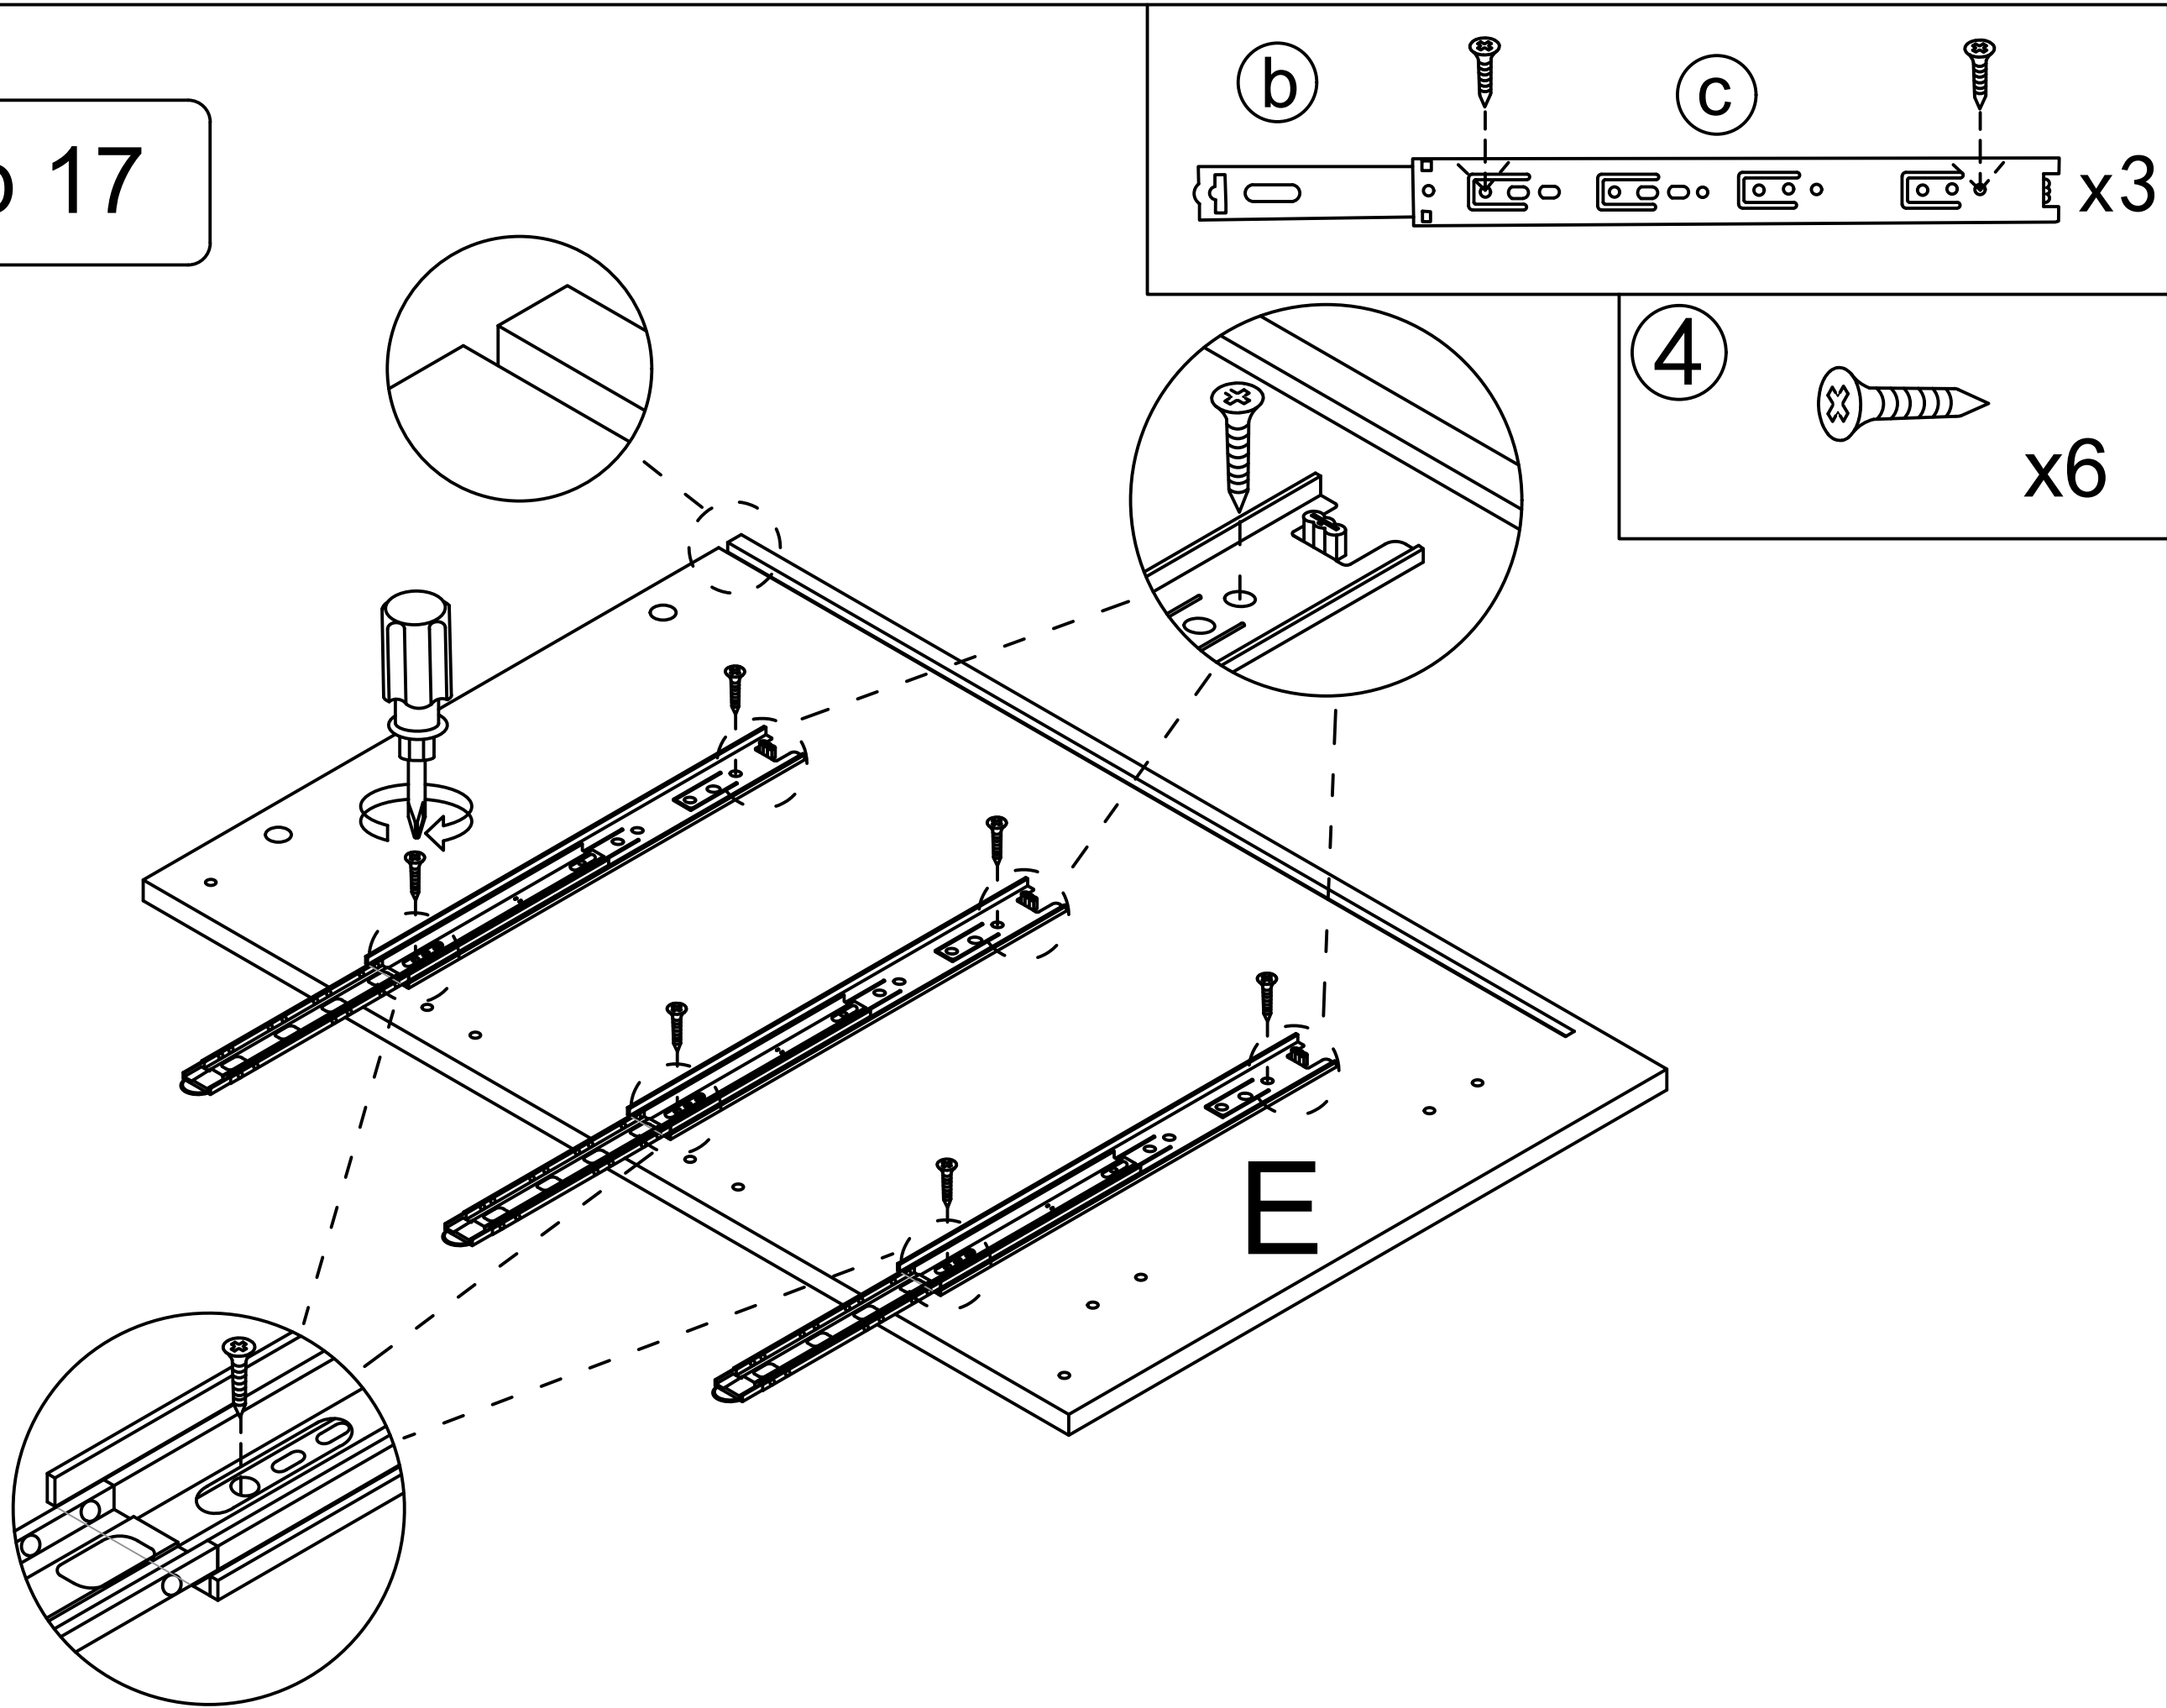



Step 18

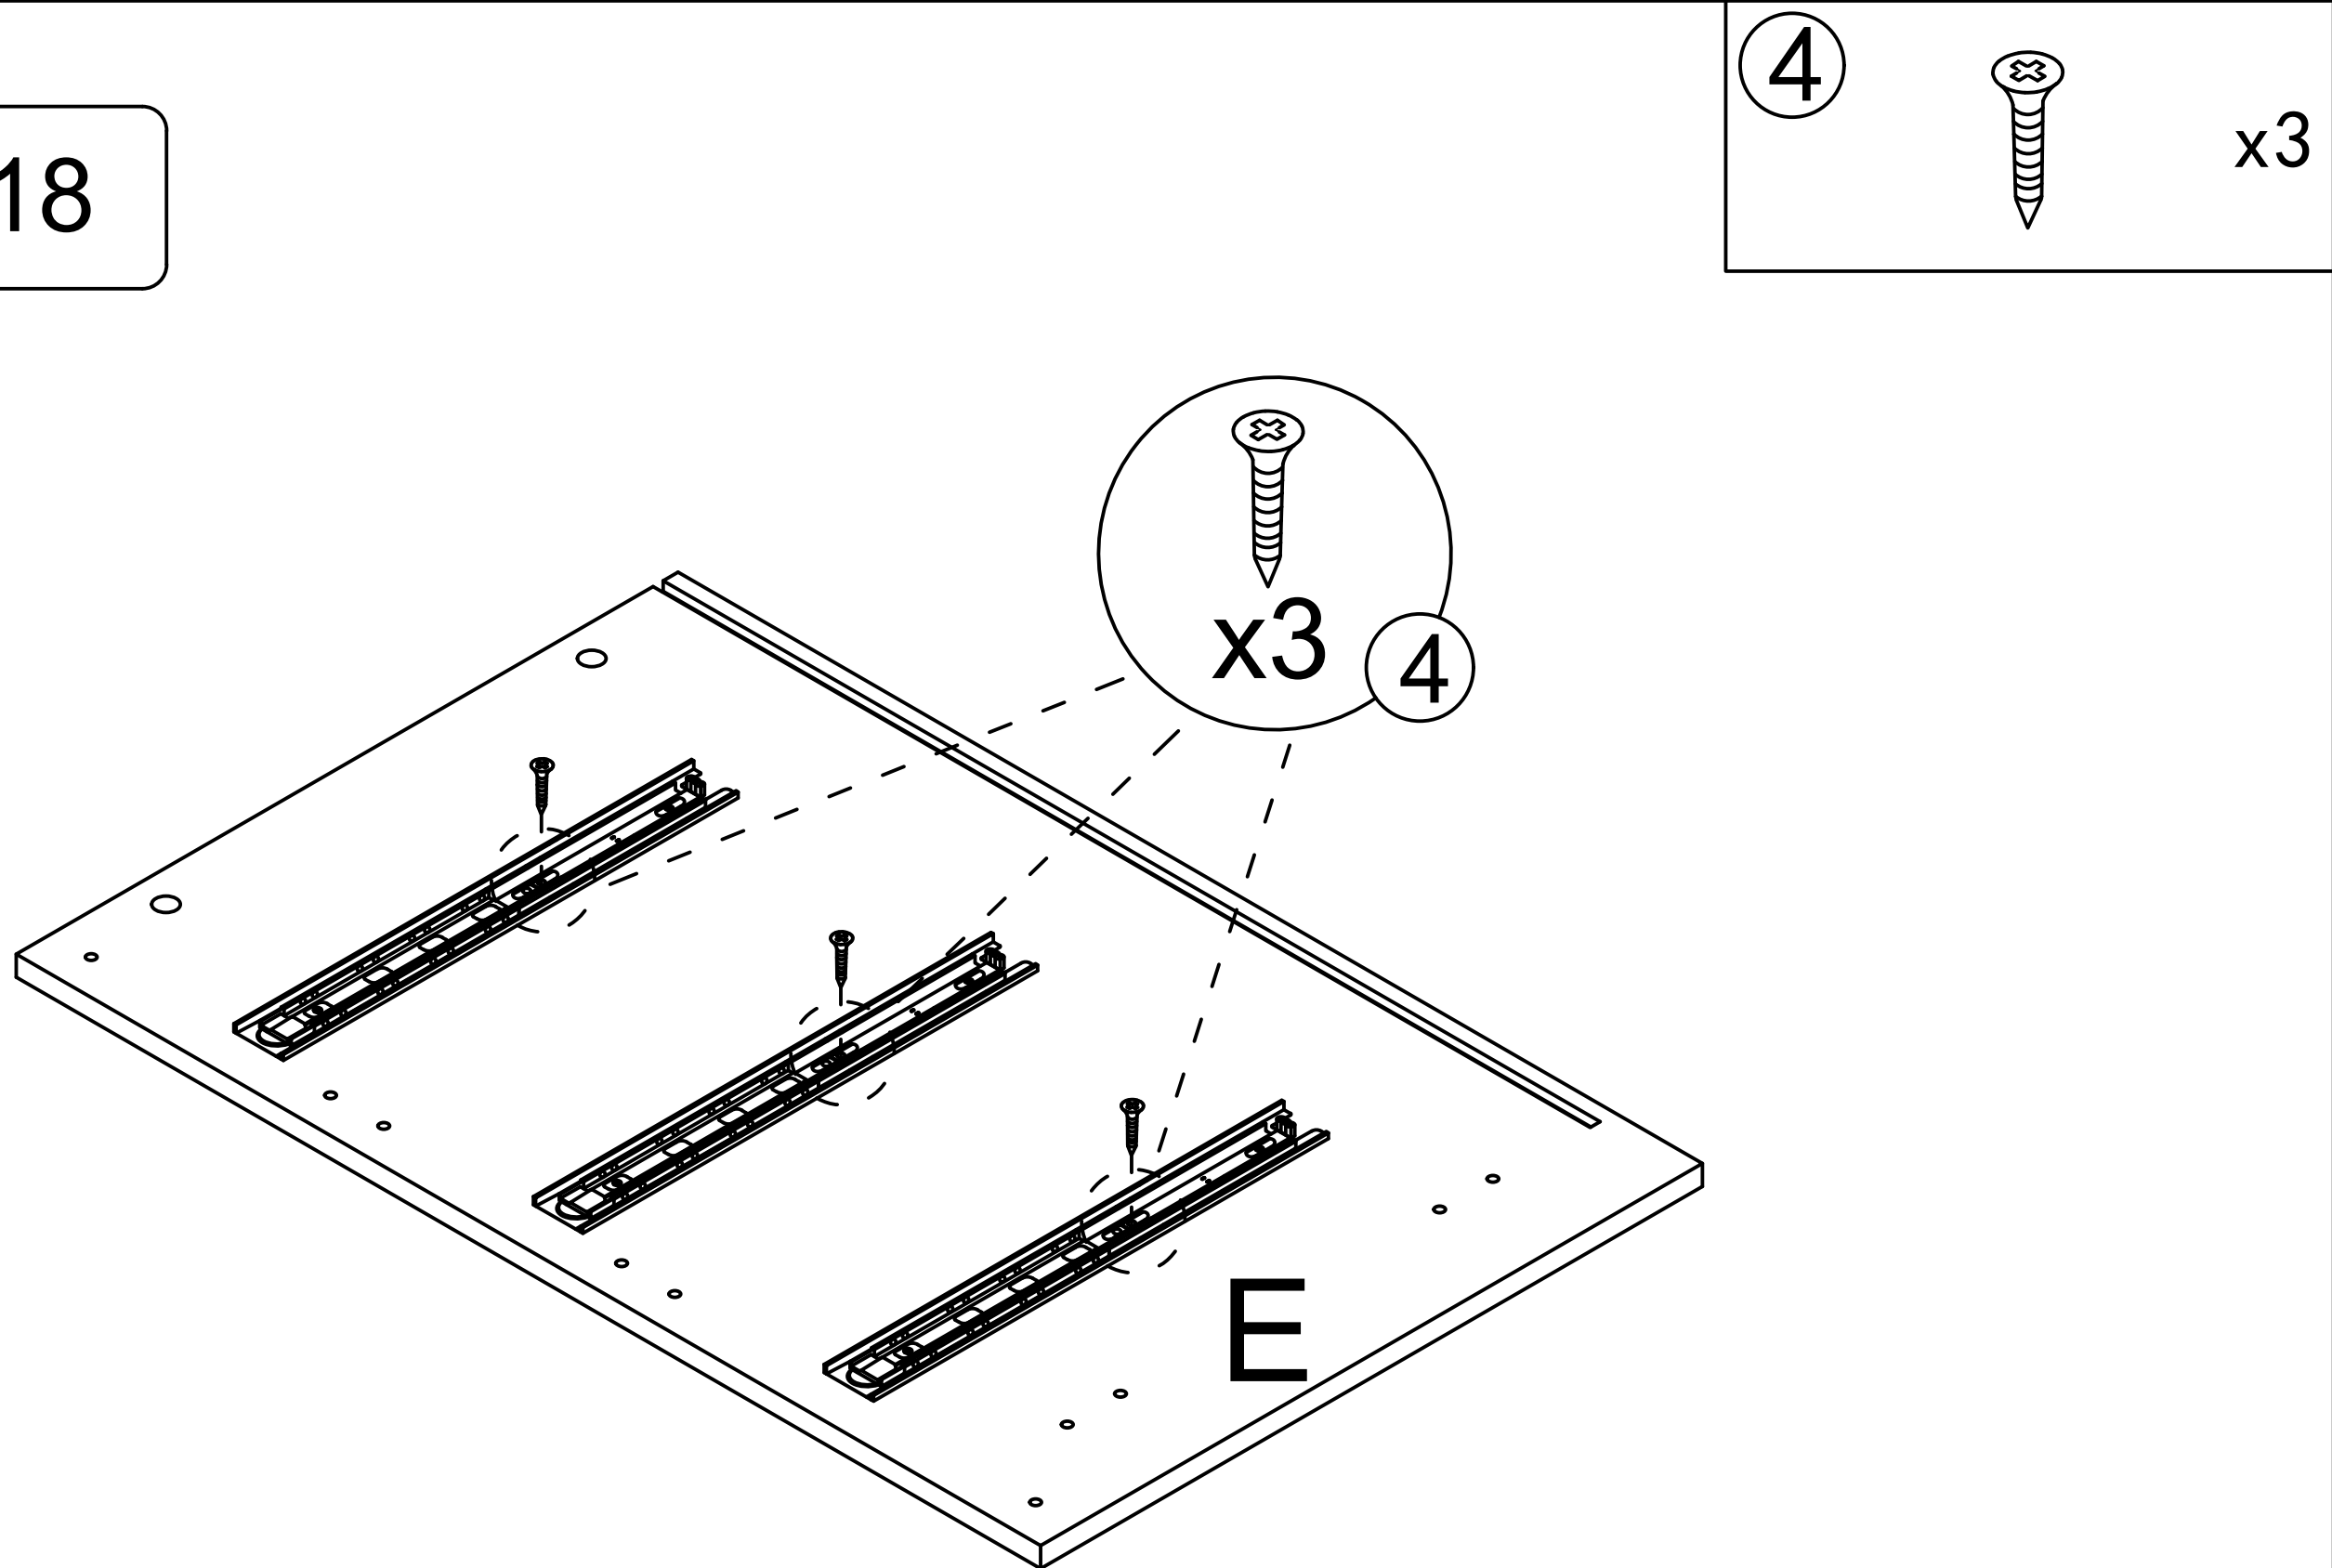


This hole is a reinforced fixing hole which can be installed as required


Step 19

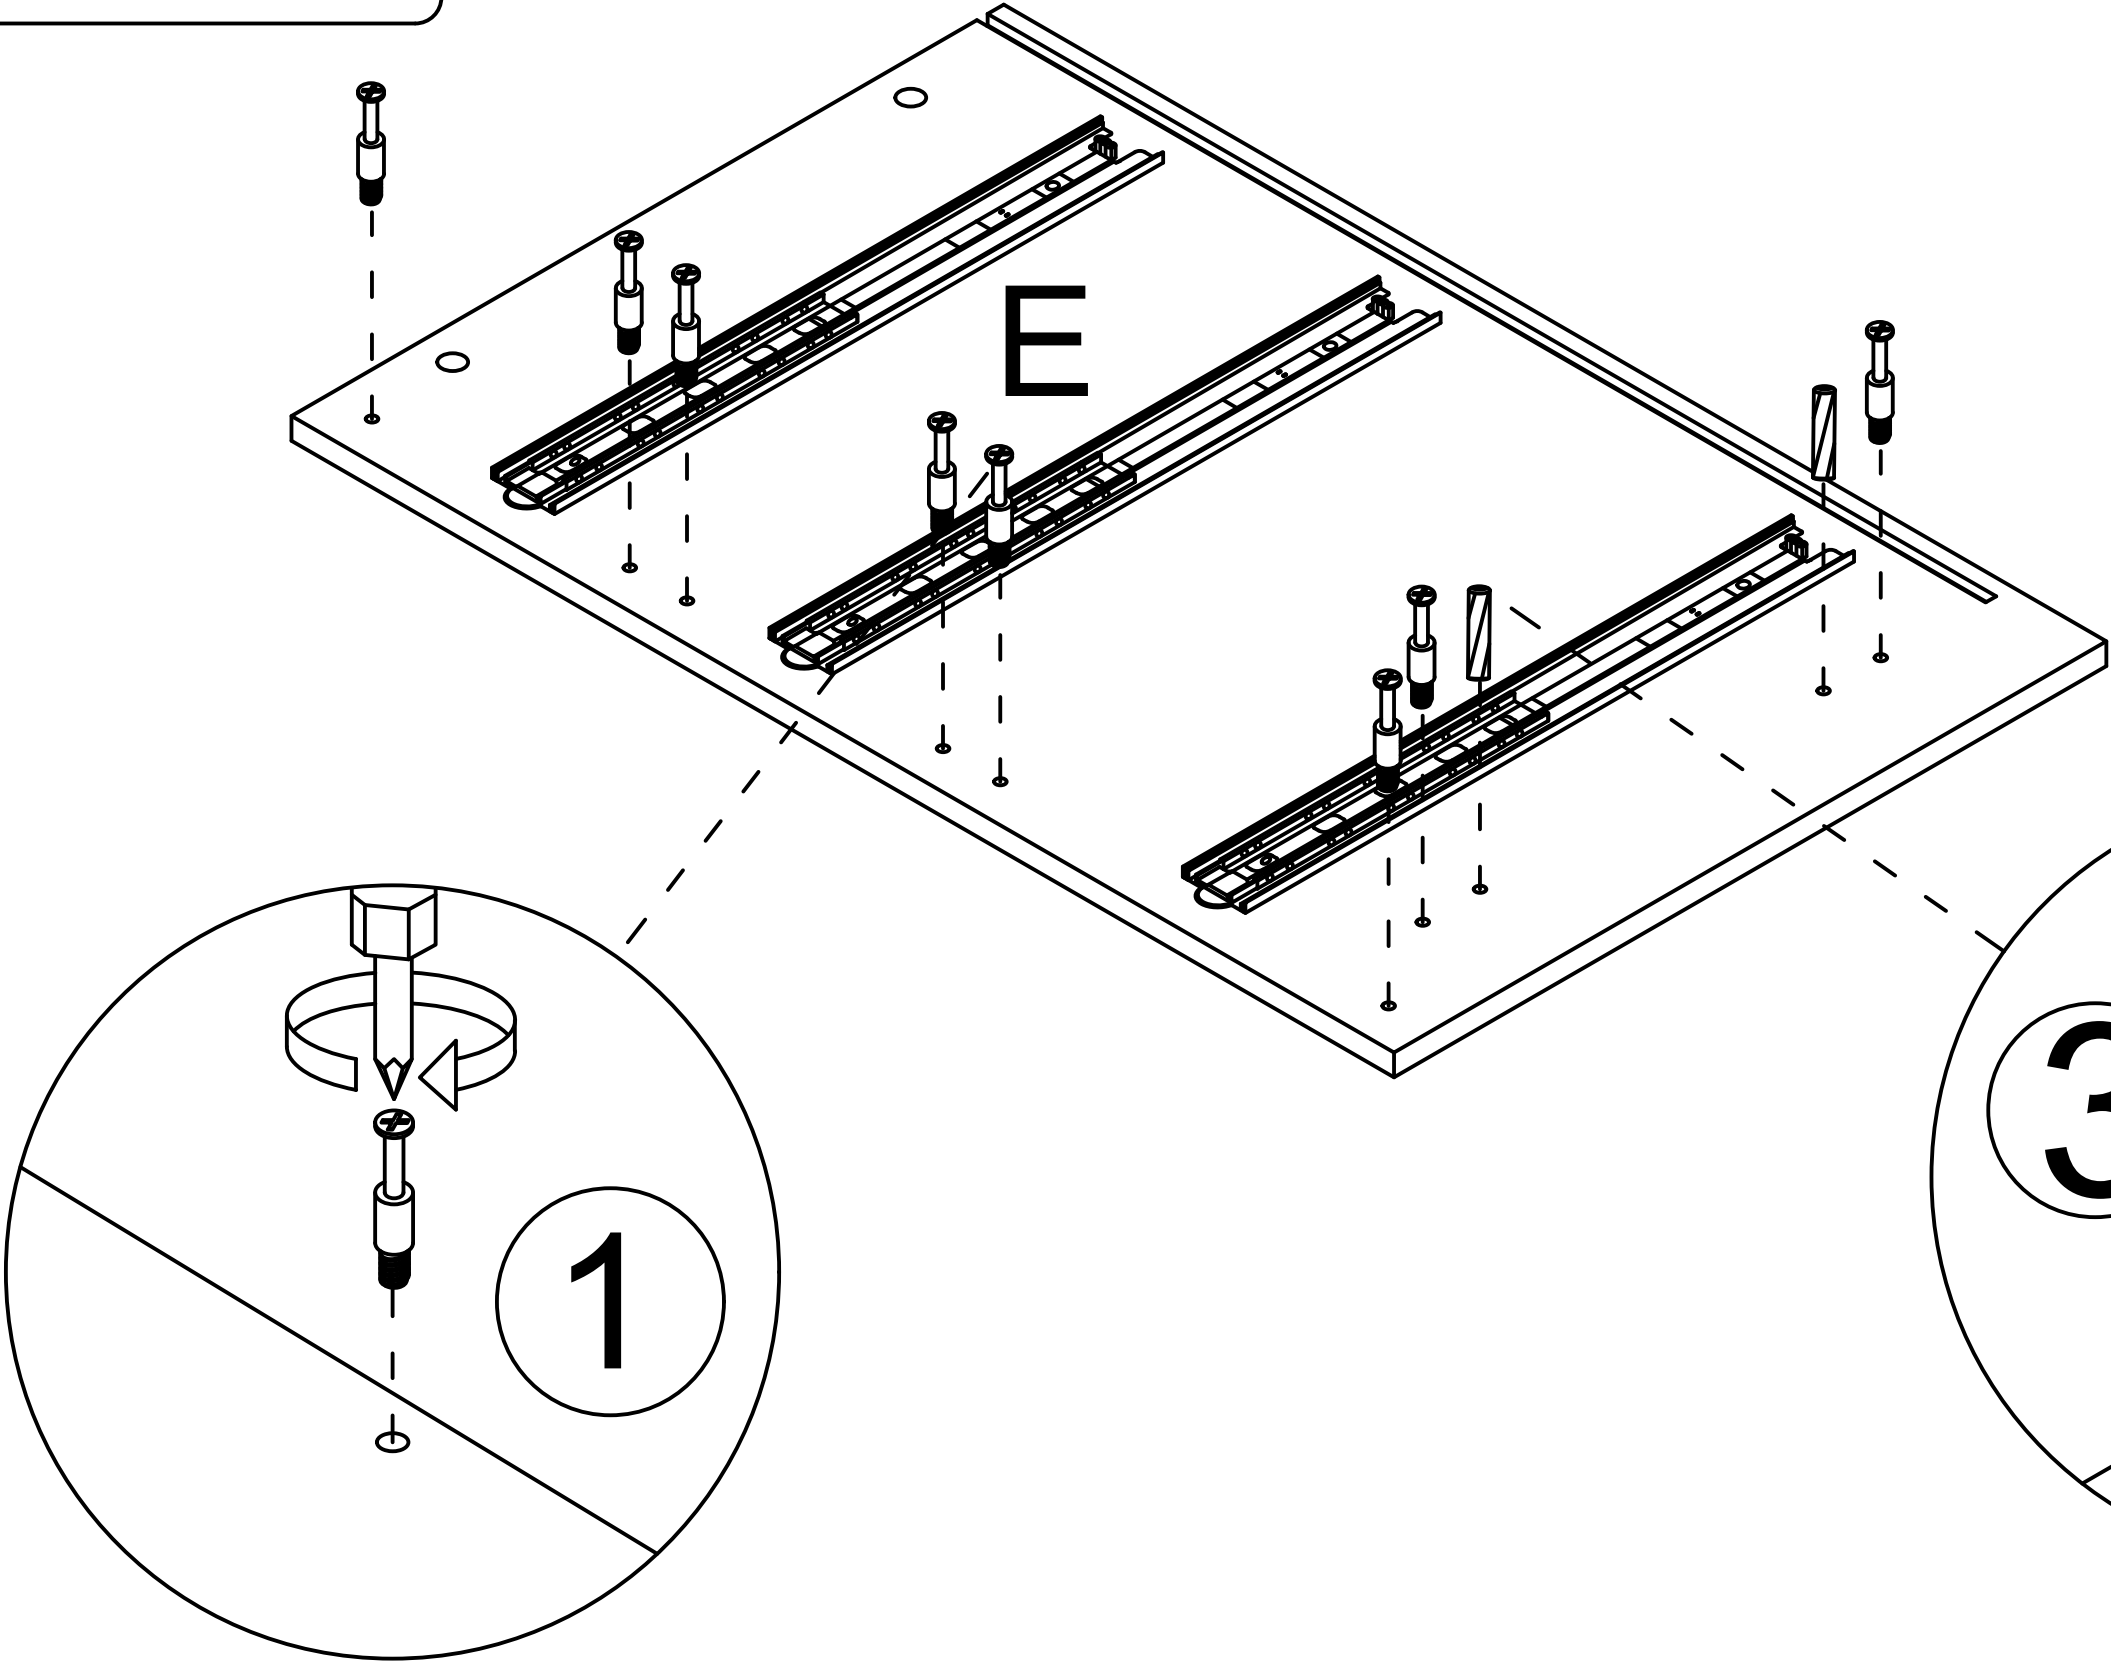



- ①  x8
- ③  x2

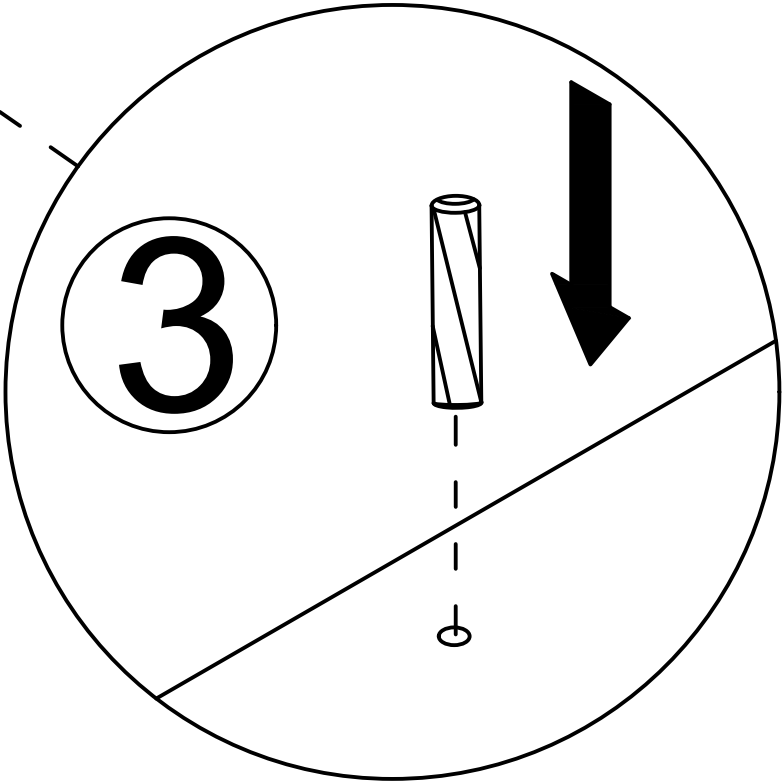

Step 20

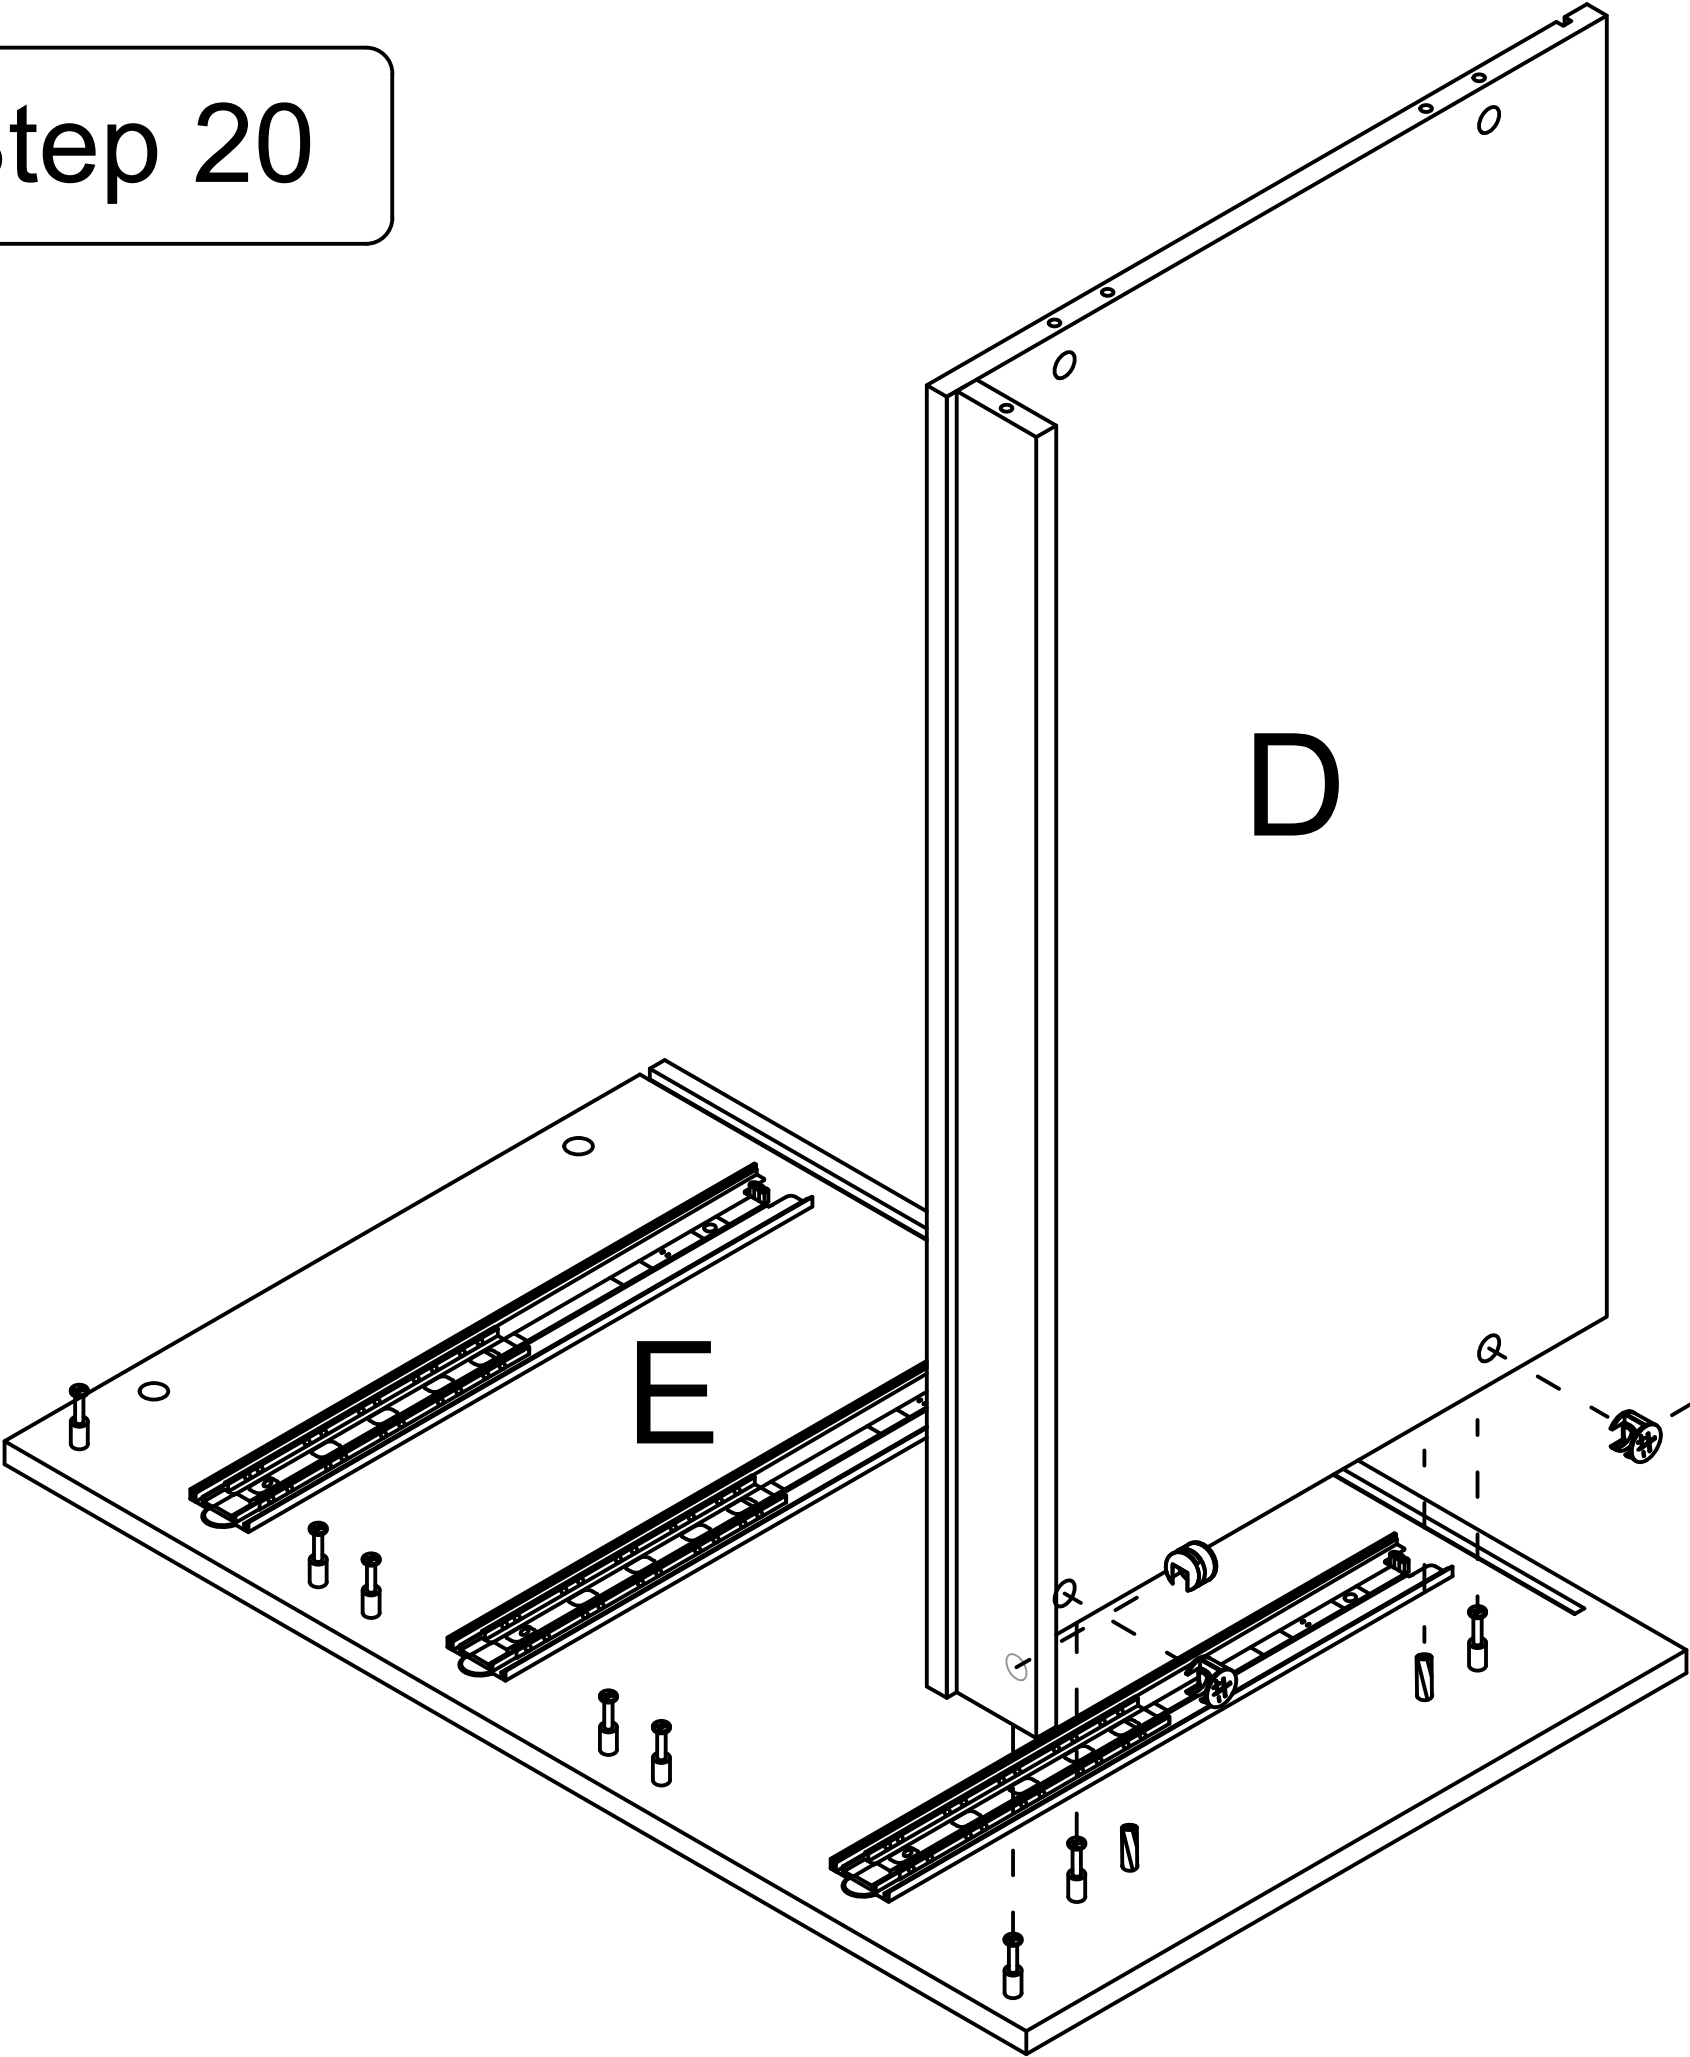


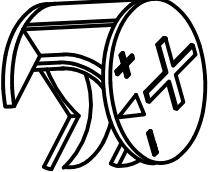- ②  x3


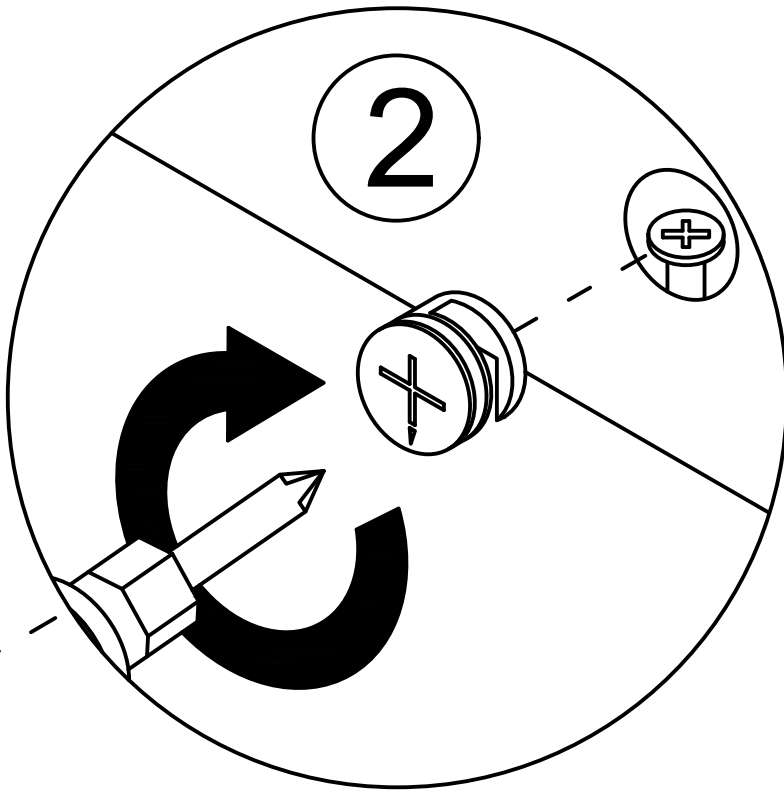


Step 21

②

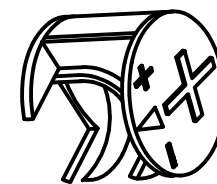

x5

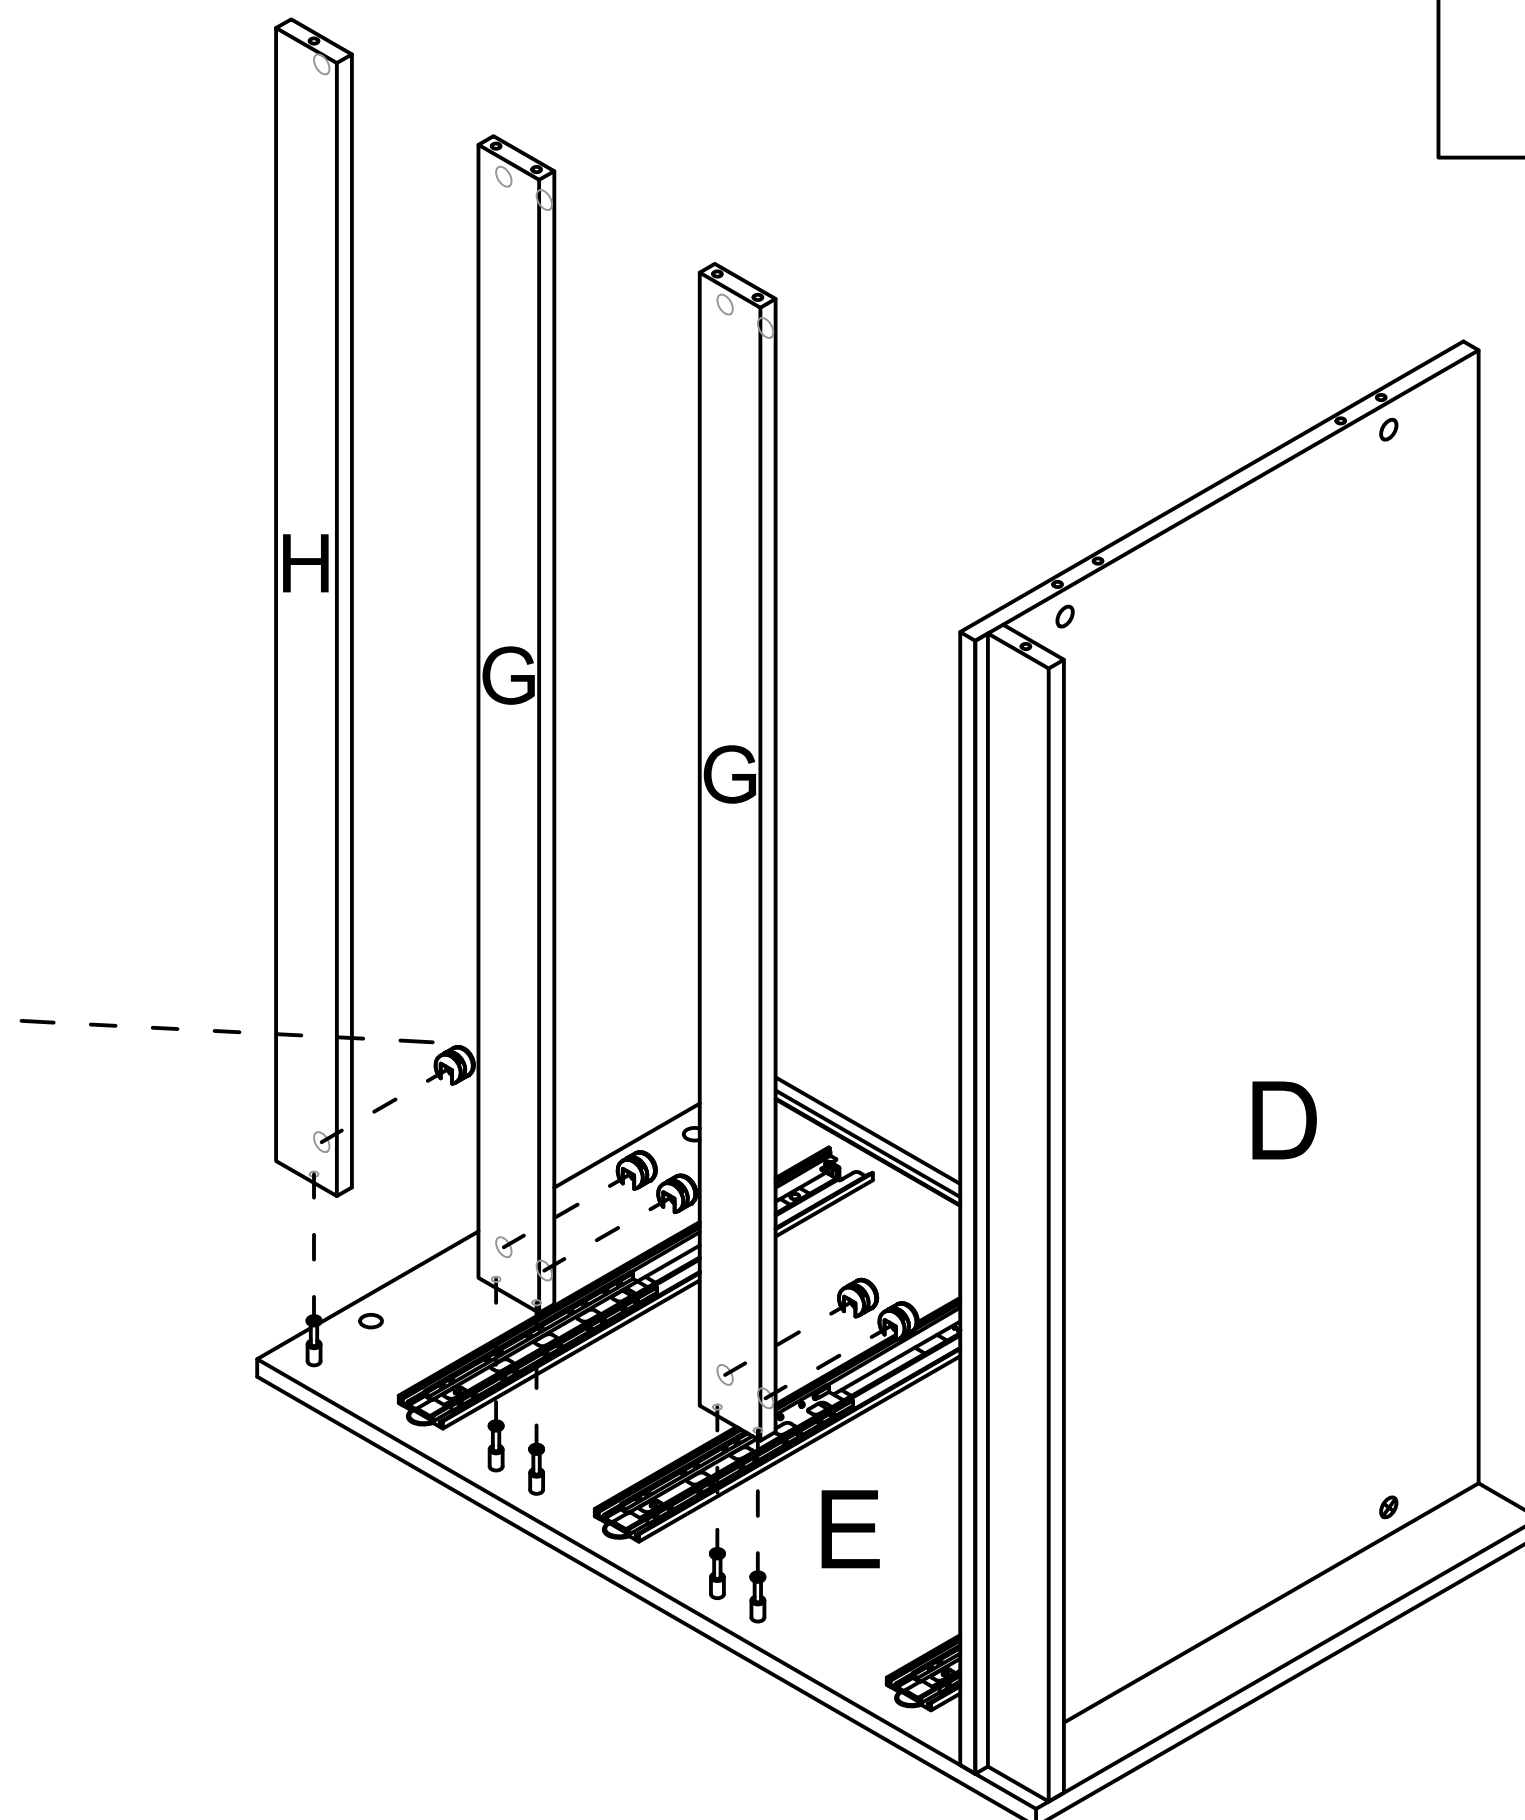
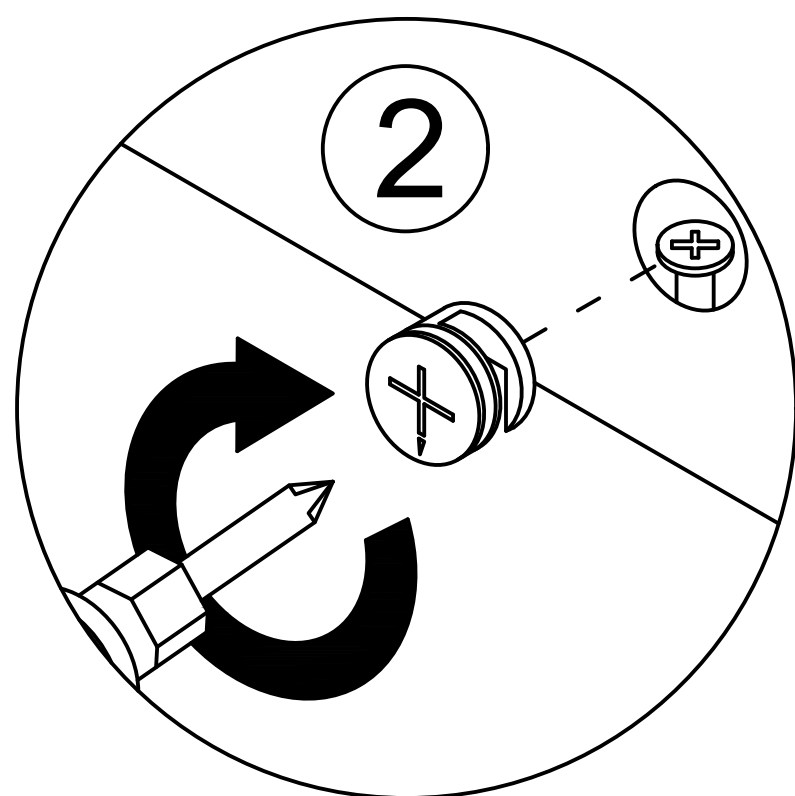


Step 22



③





x2

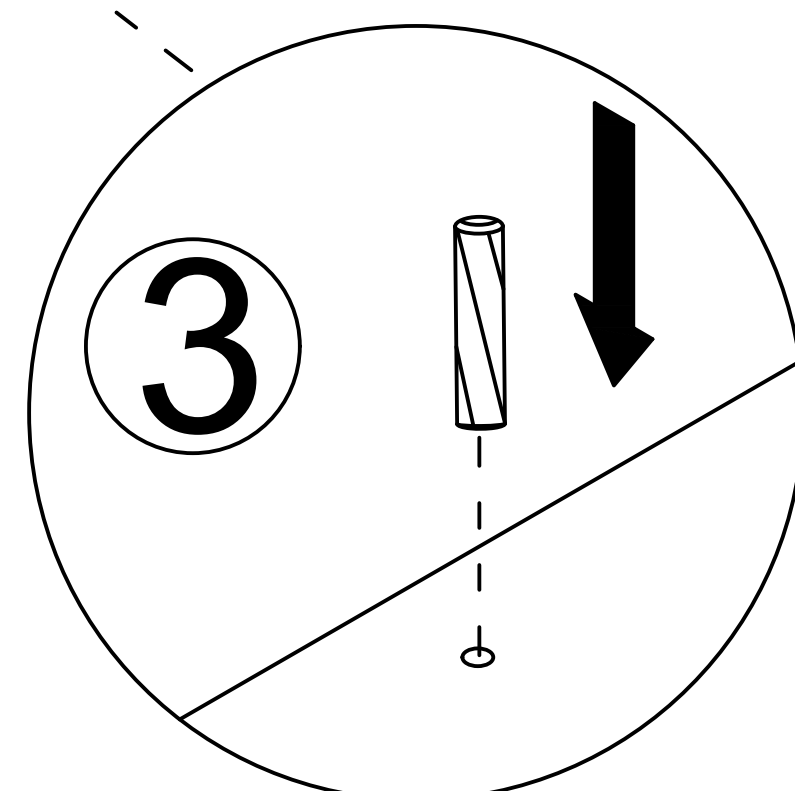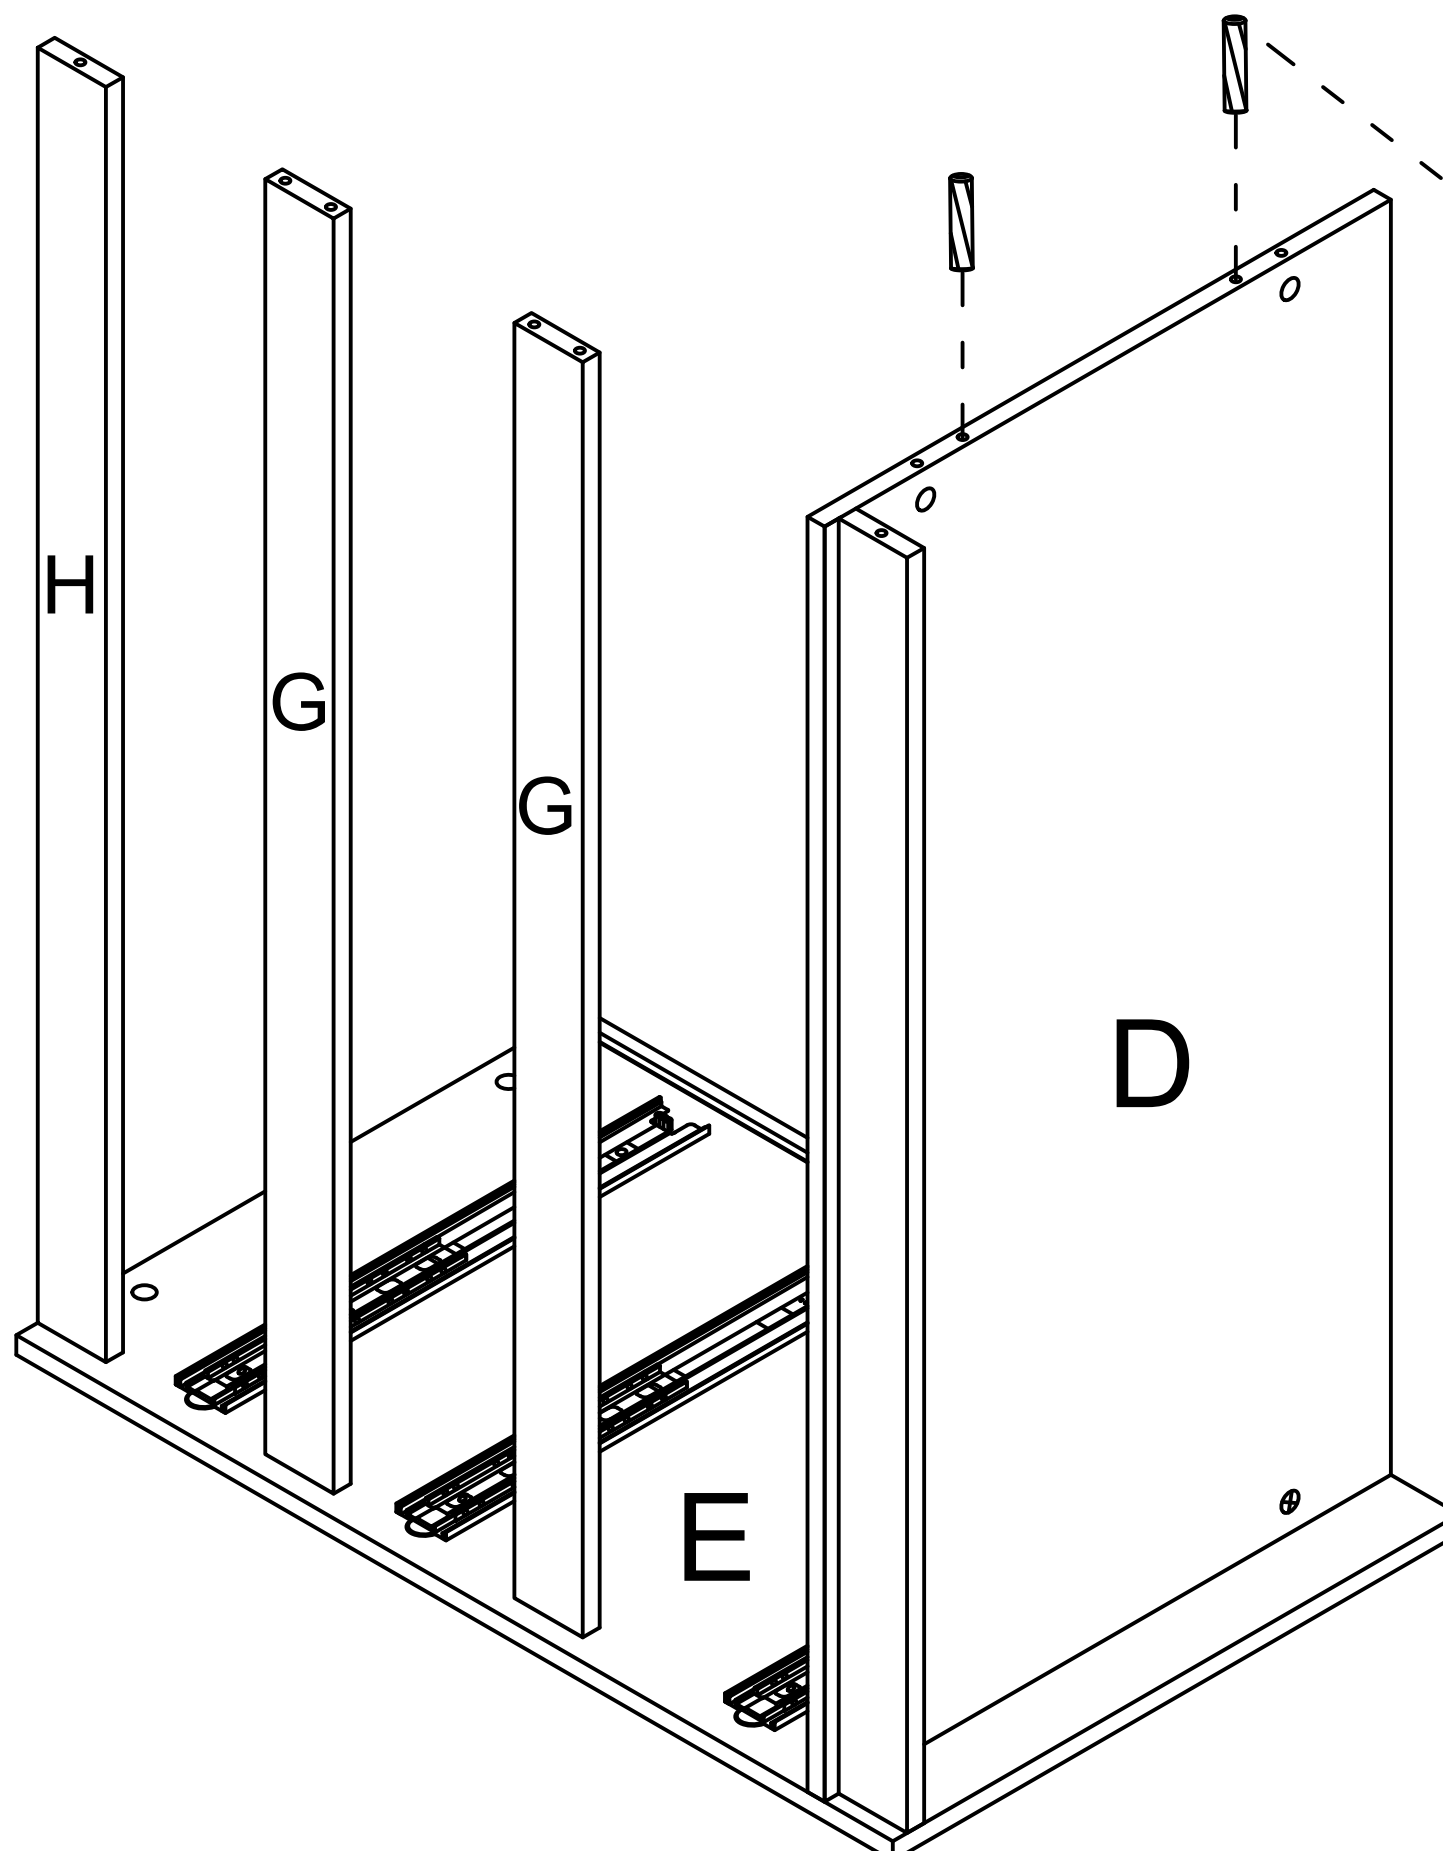

Step 23

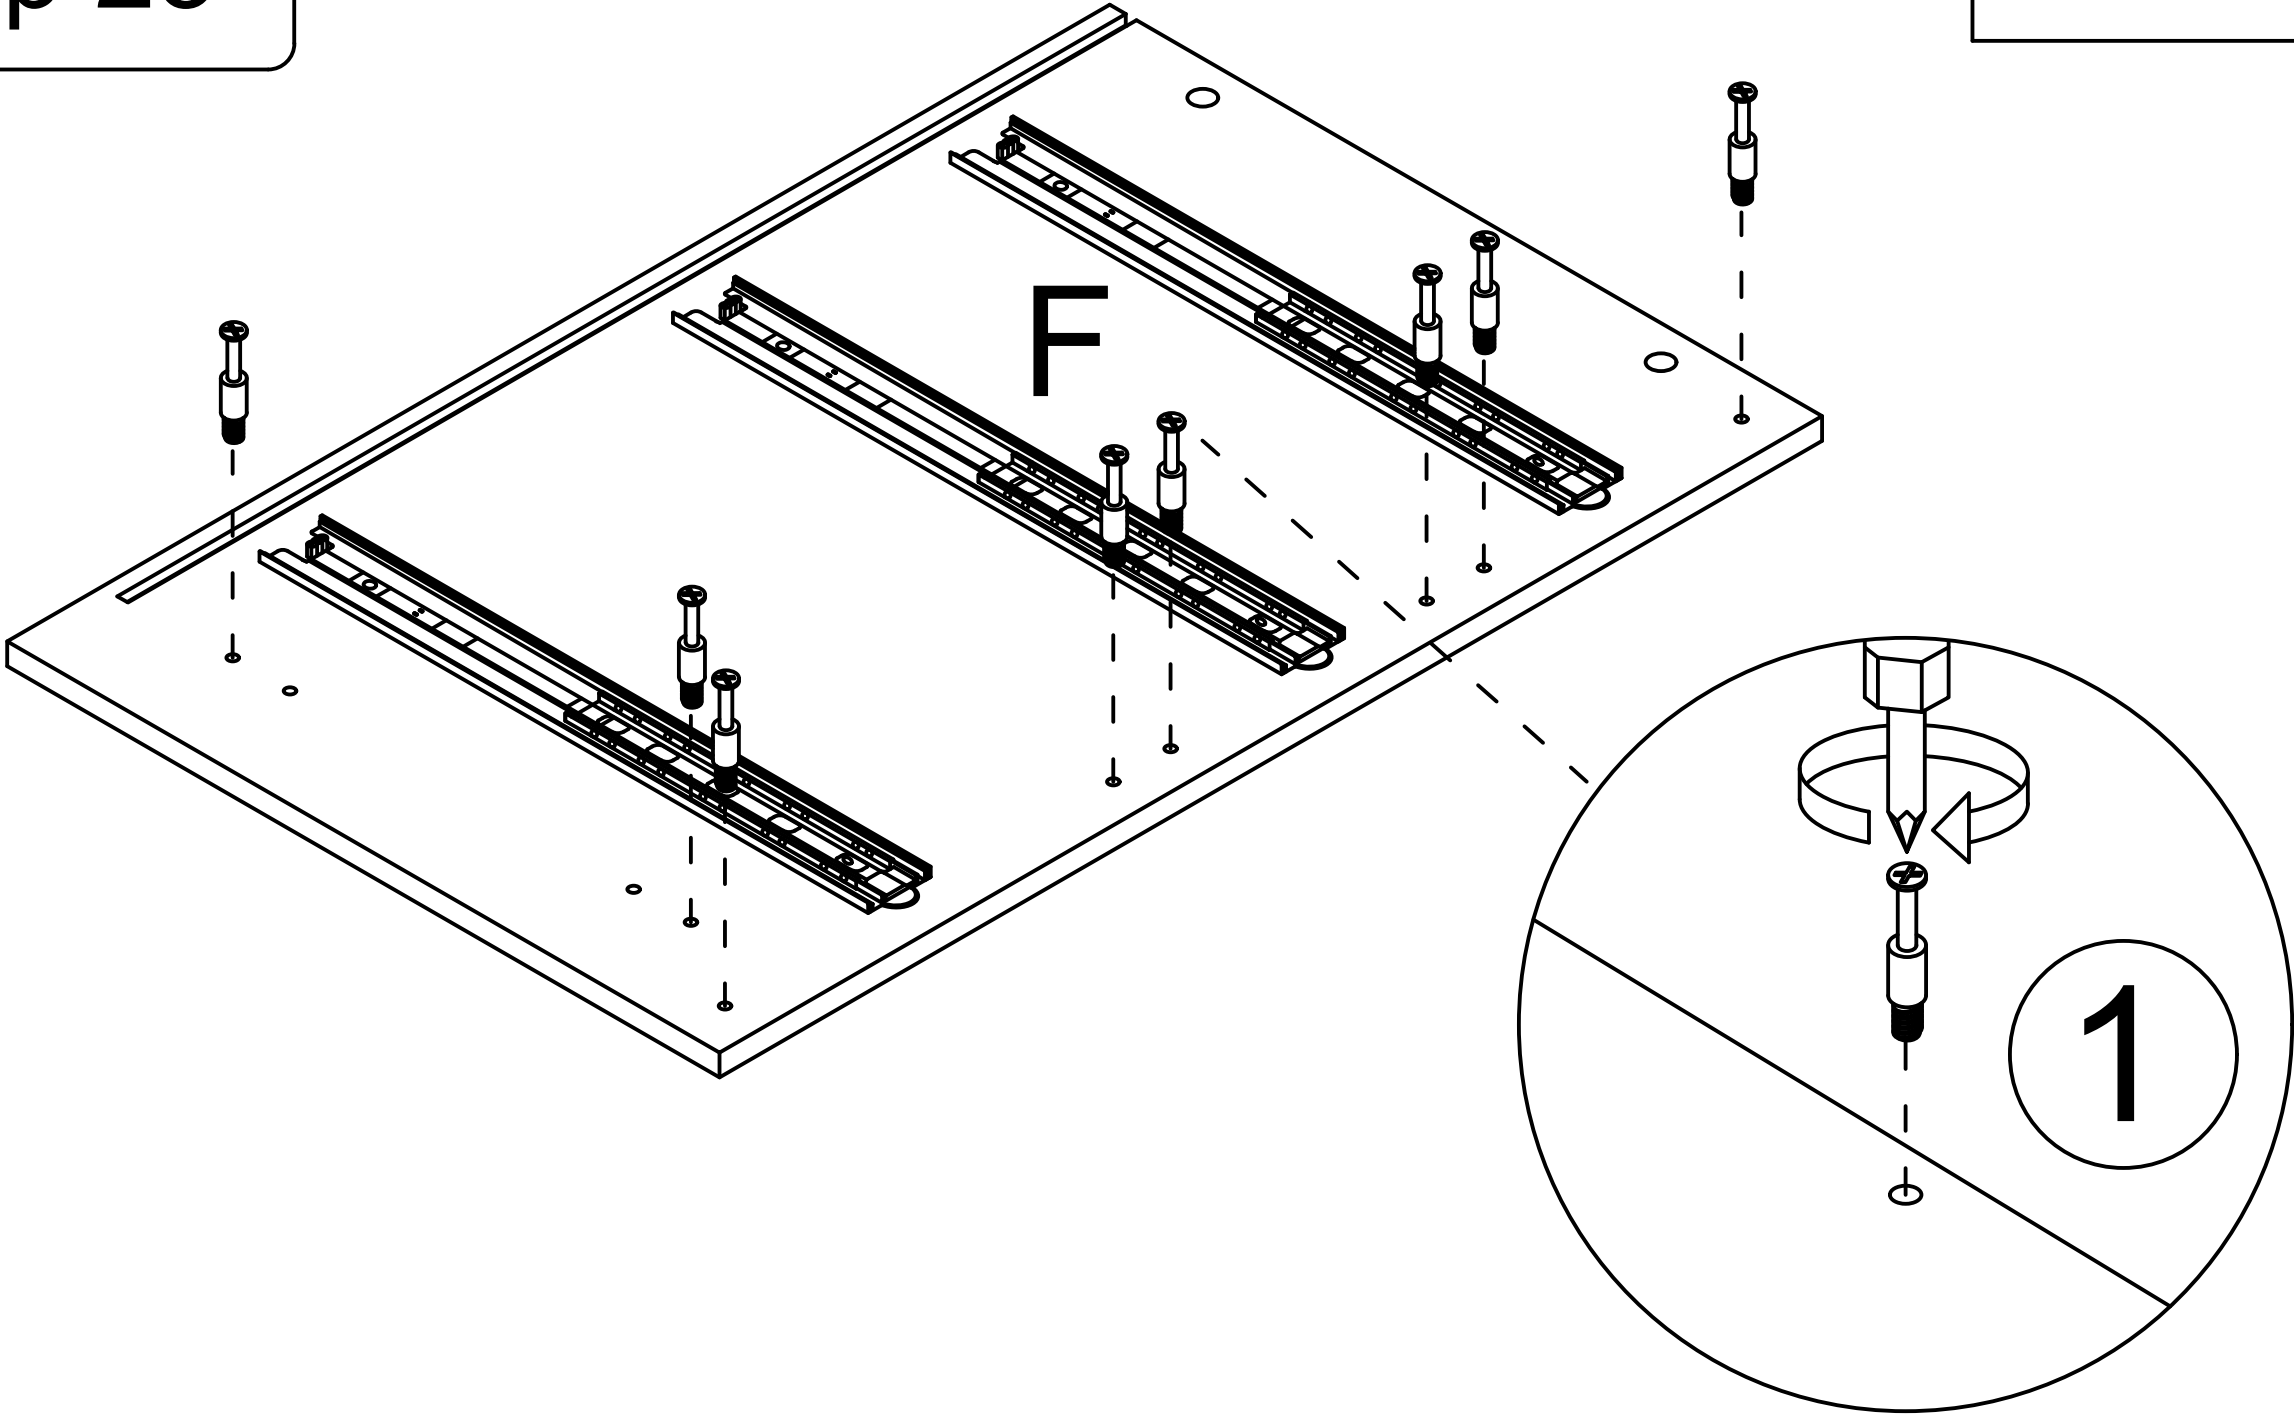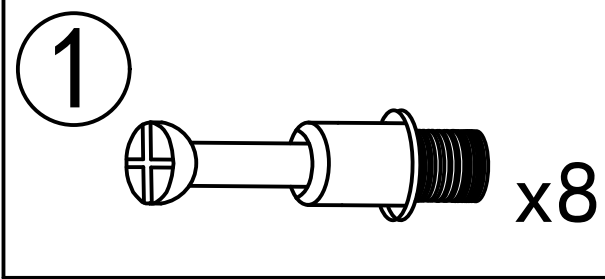

Step 24

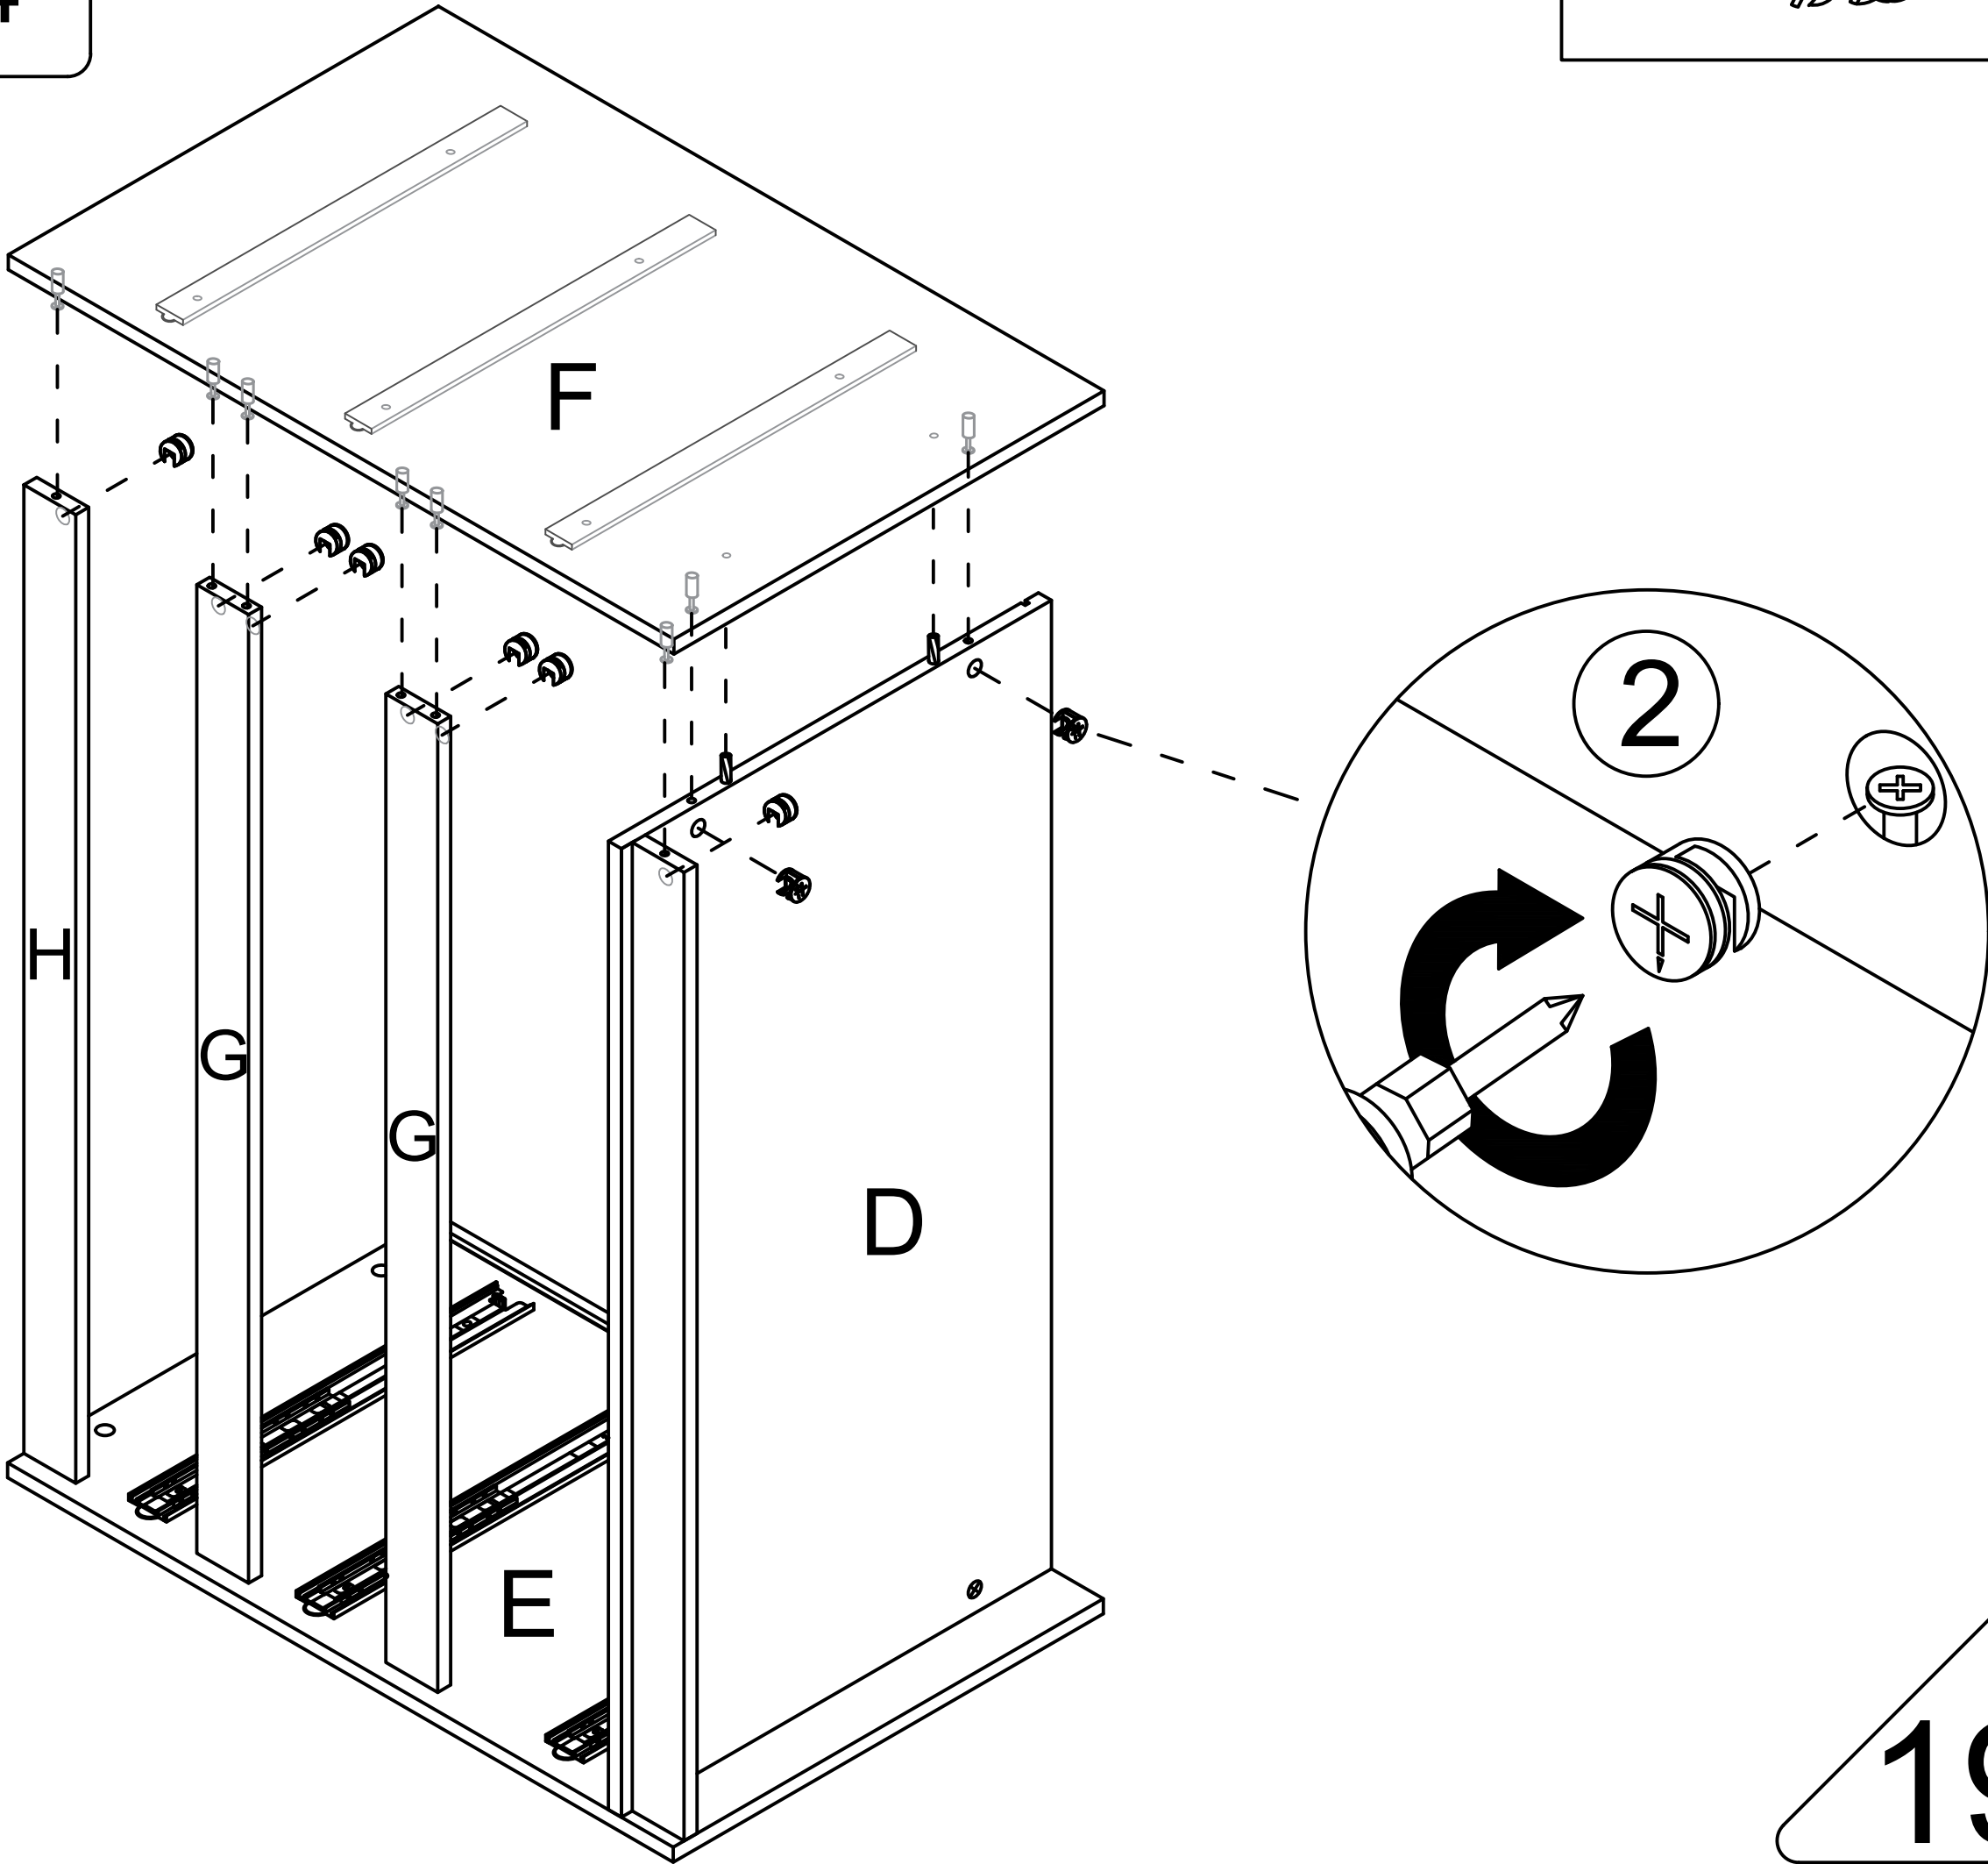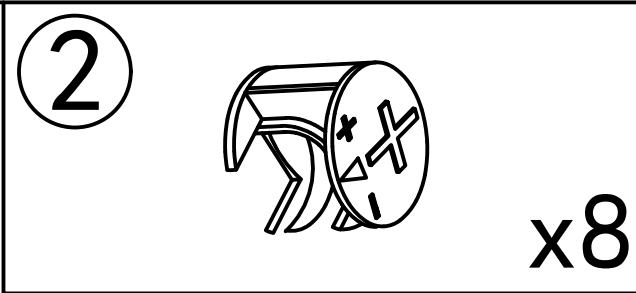



Step 25

5



x6

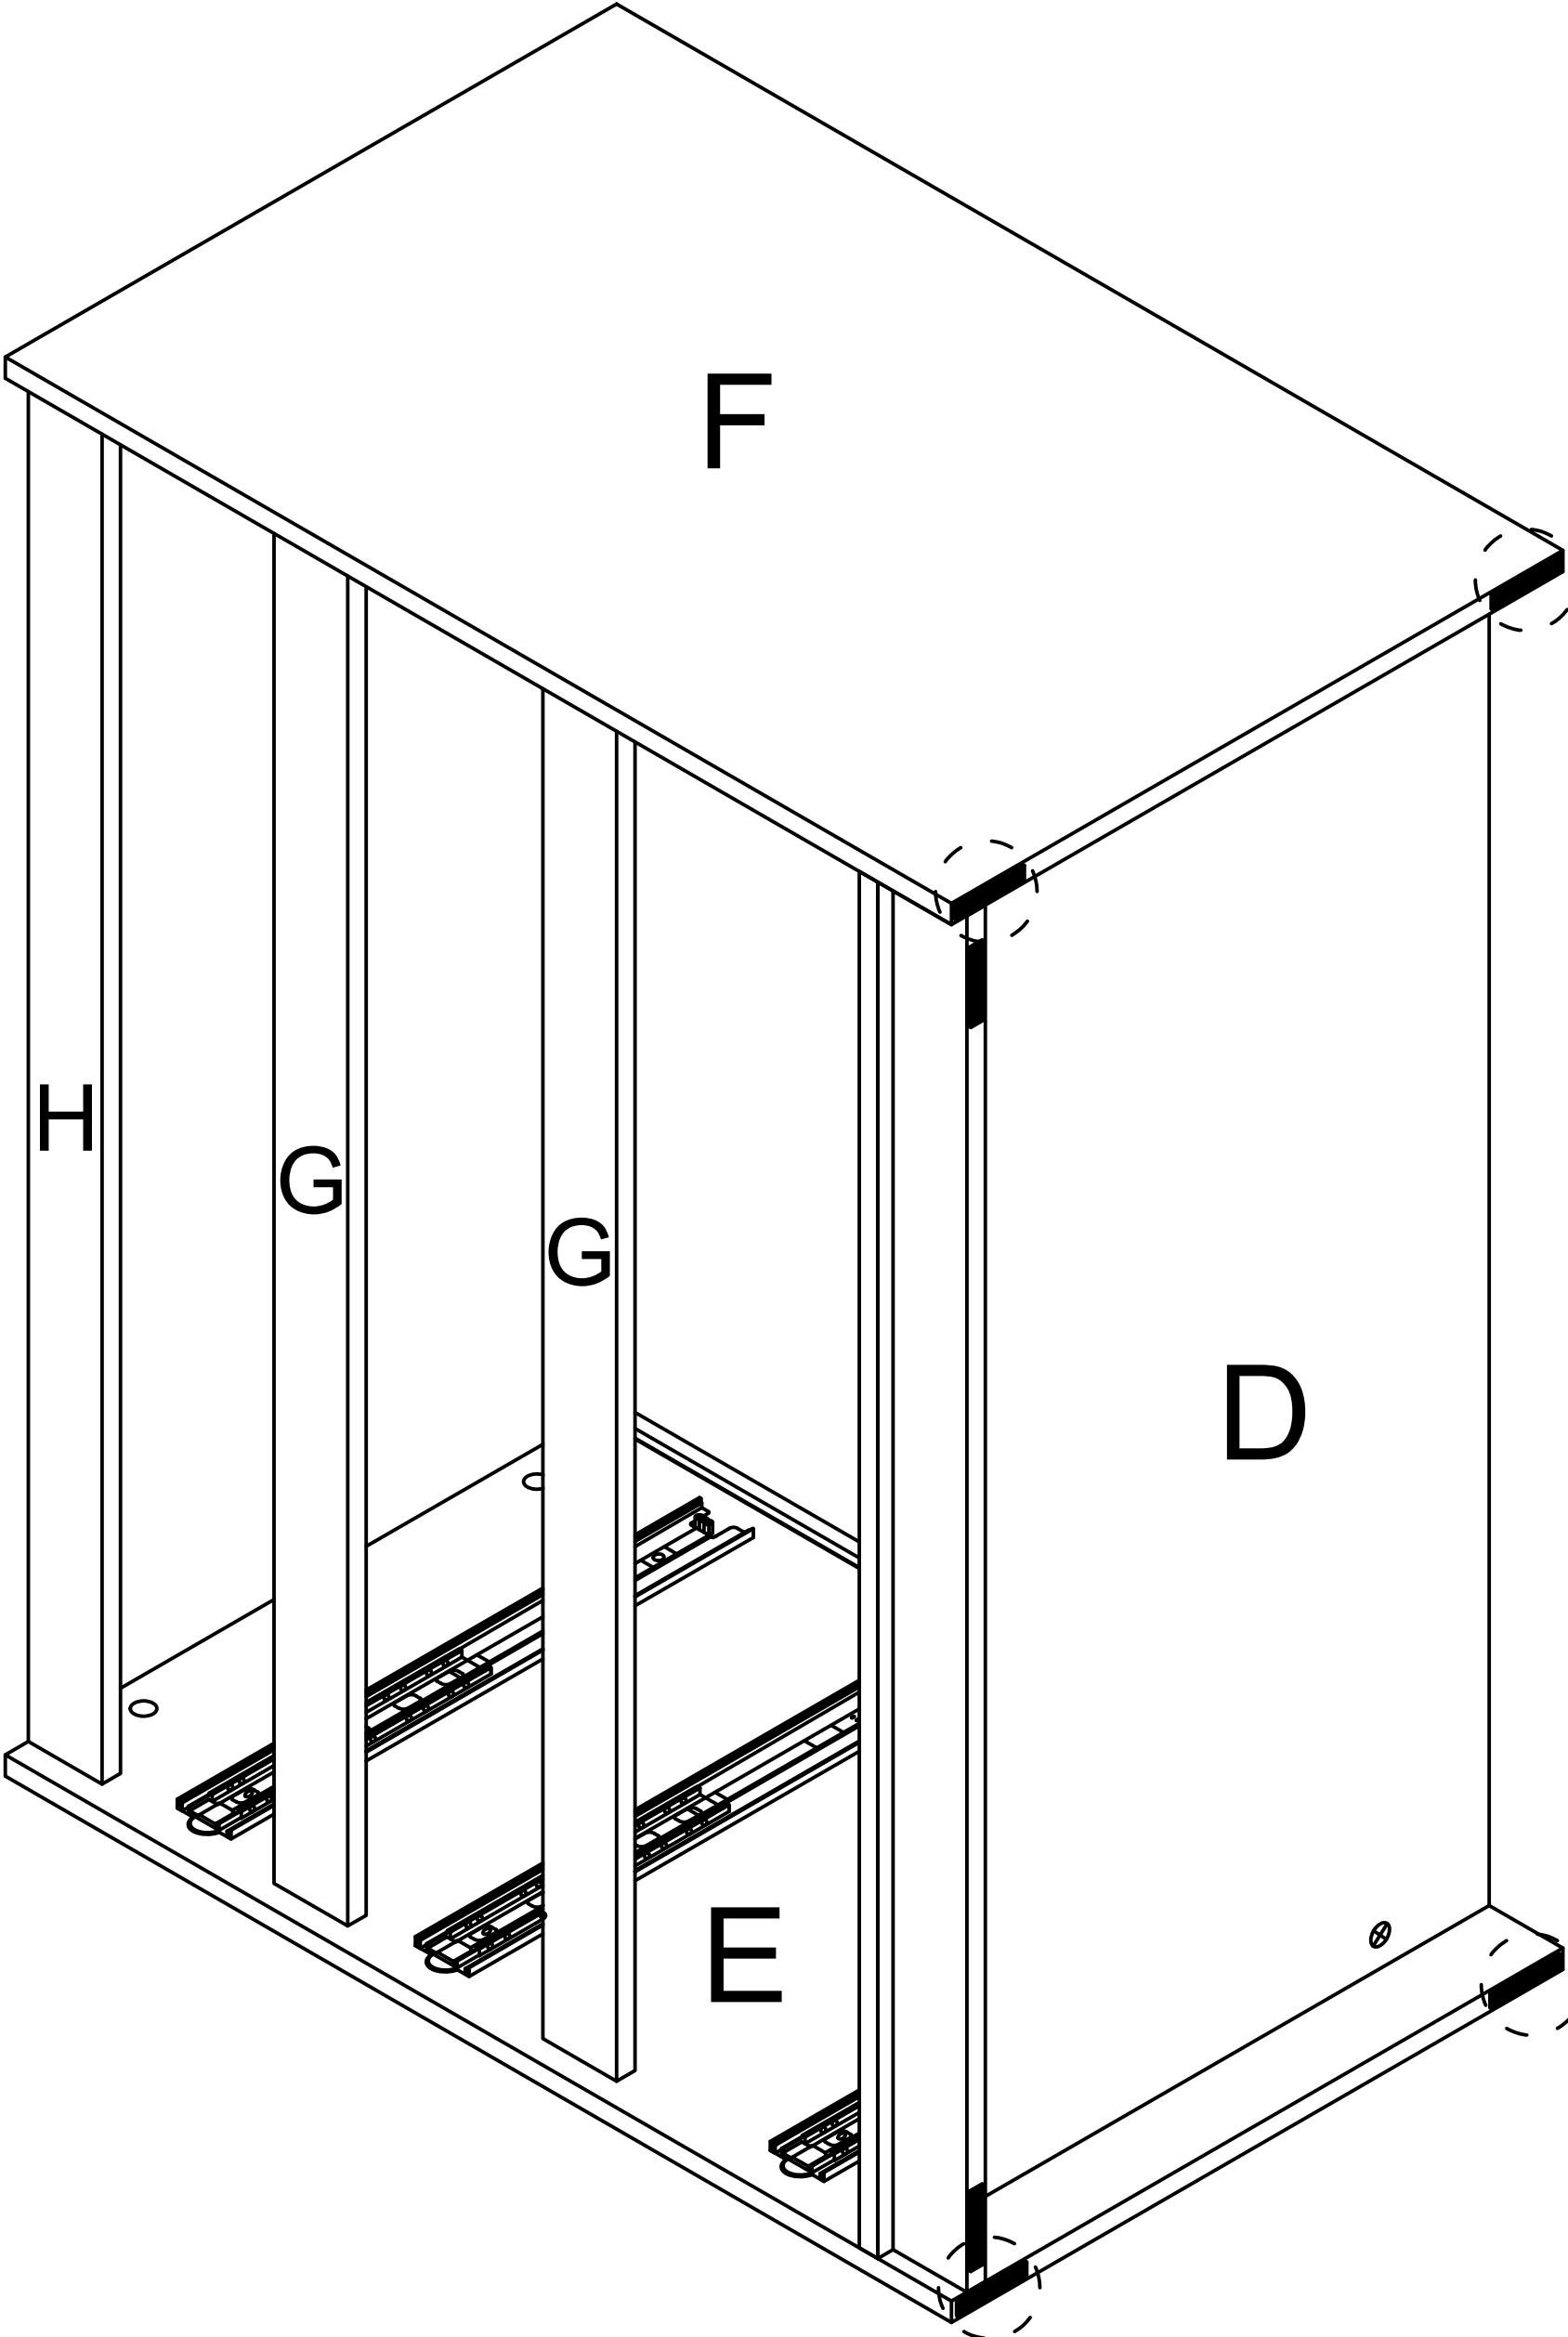


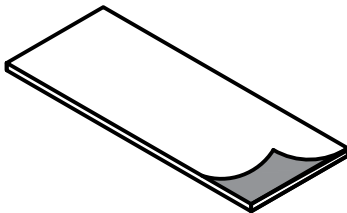


5

Tear off release paper and stick the black foot pad on the board

Step 26

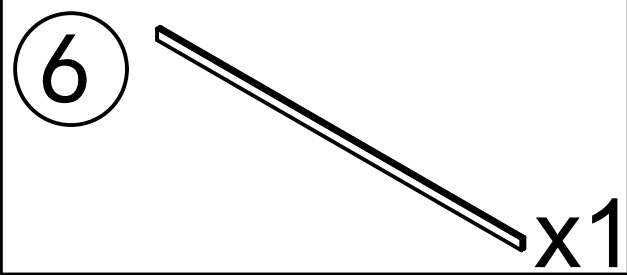

Place the "O" board, Backboard card strip, and "O" board in order


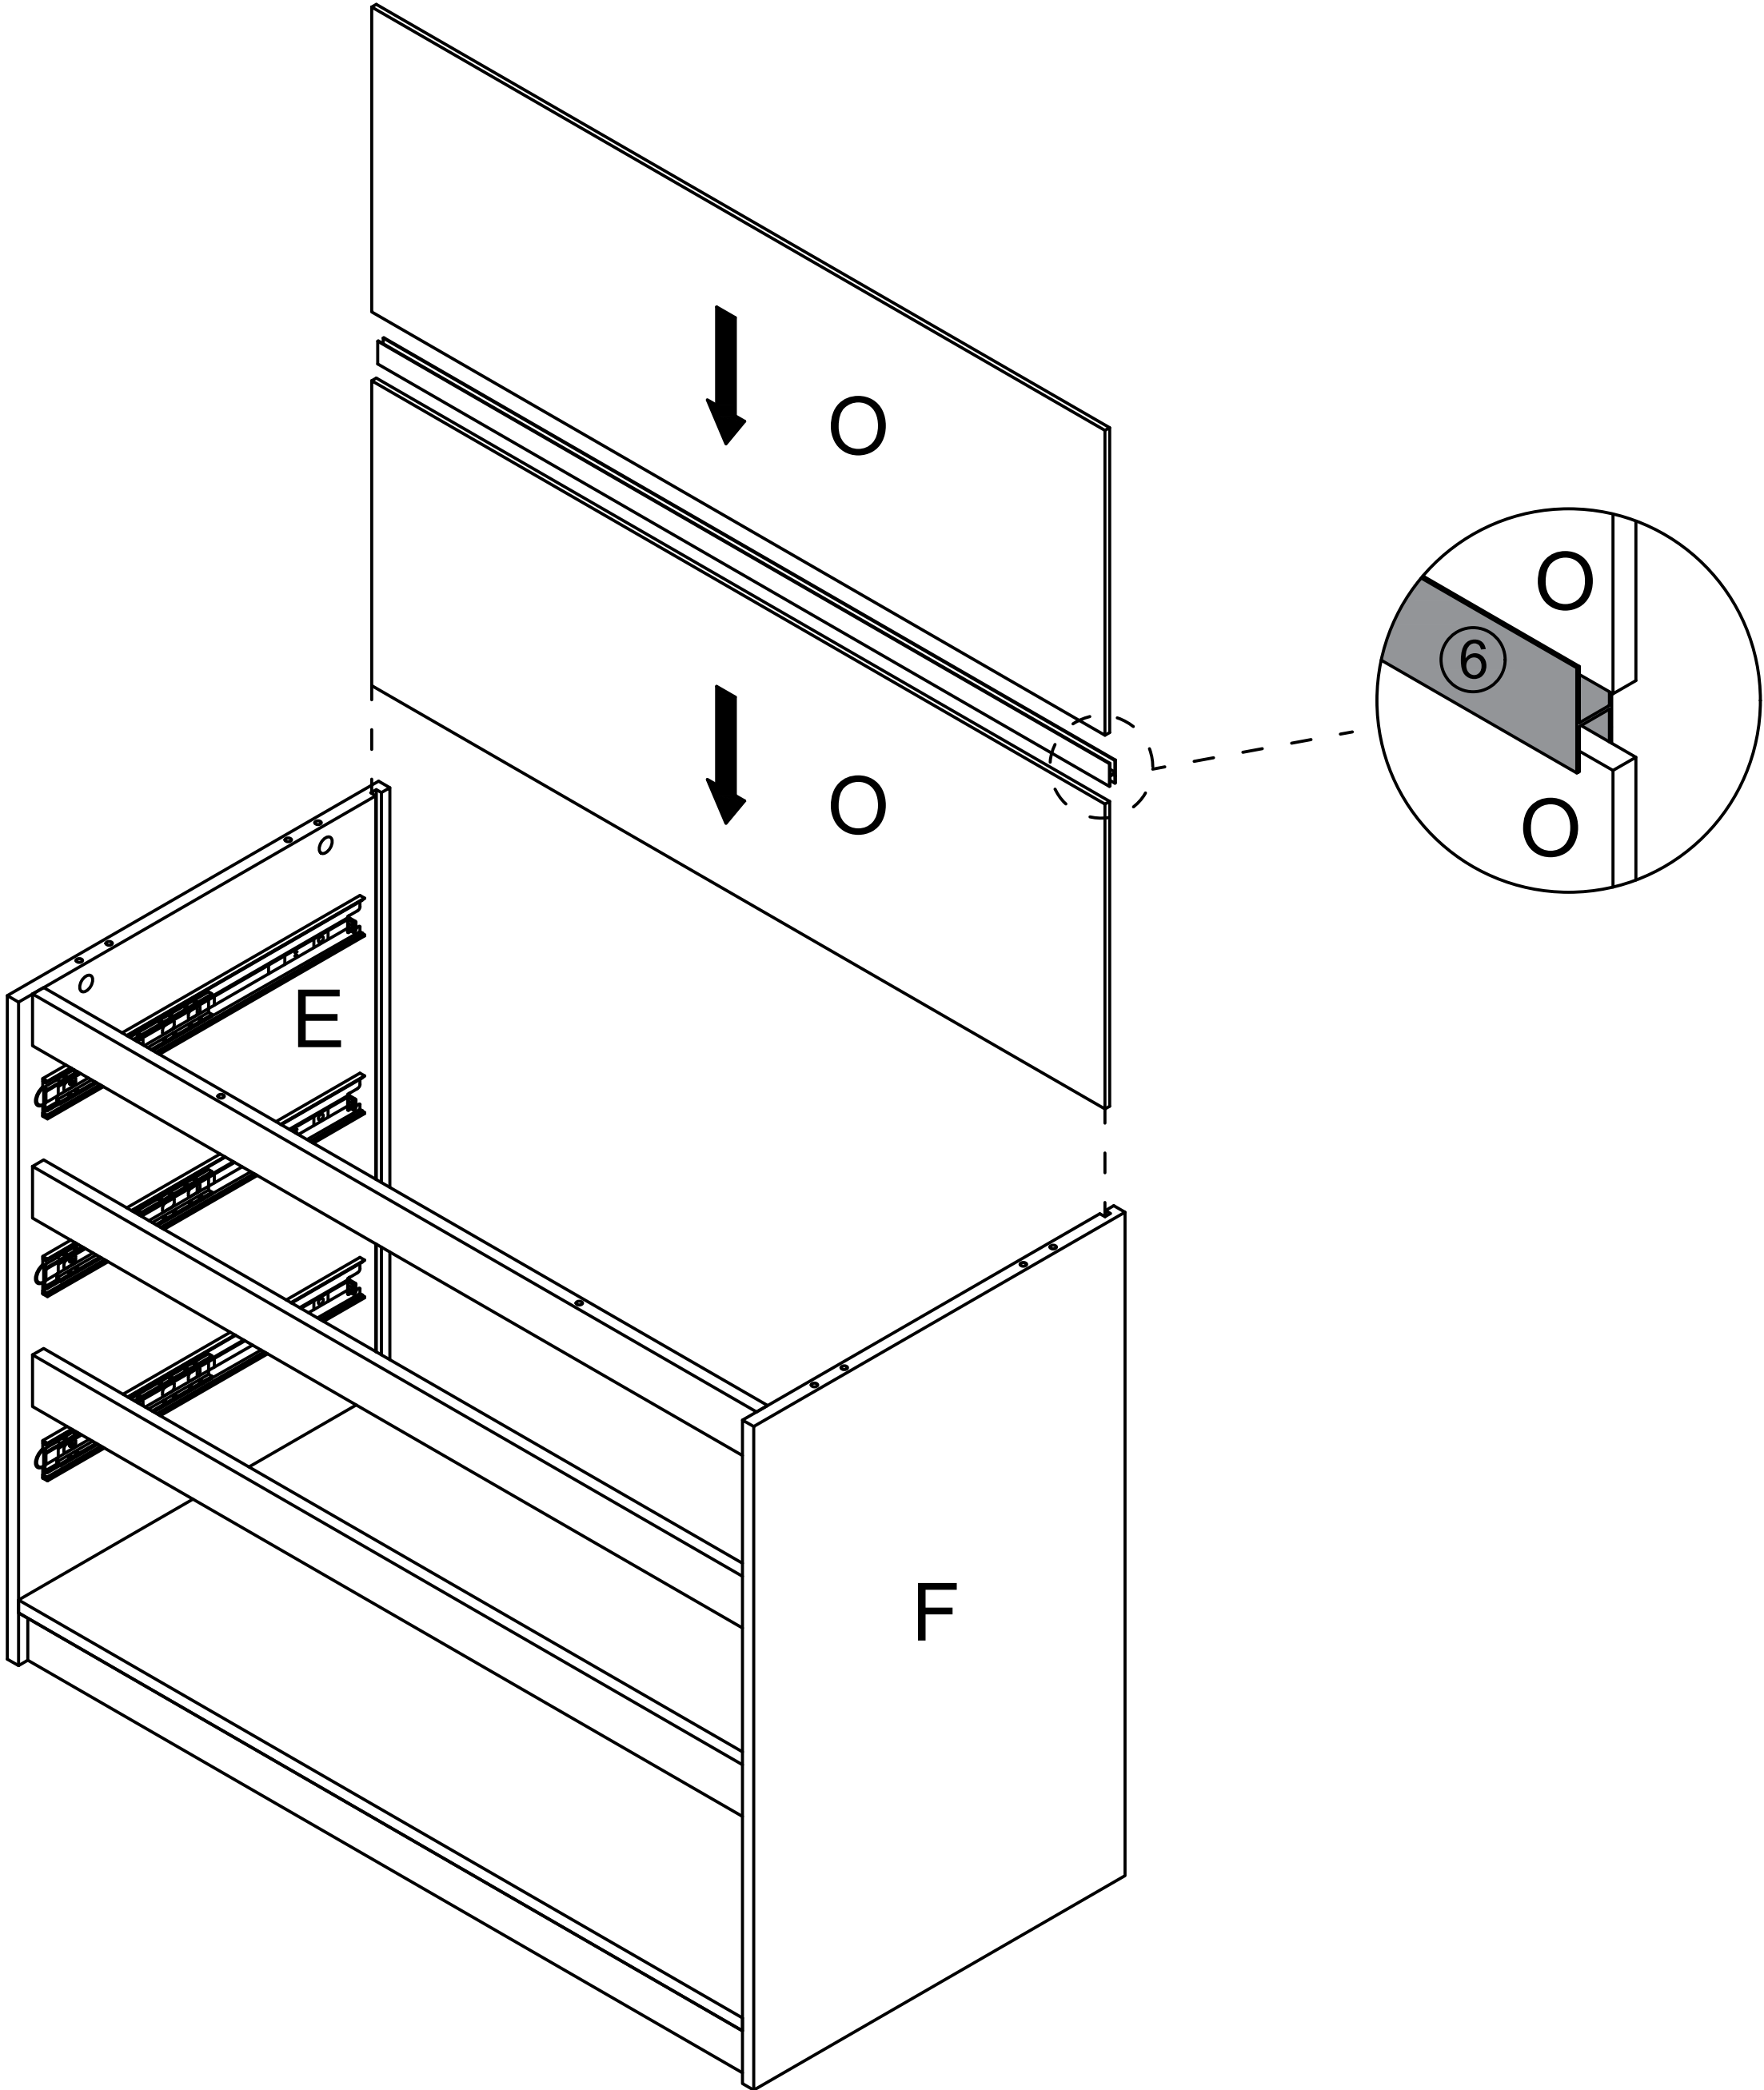


Step 27

③




x4

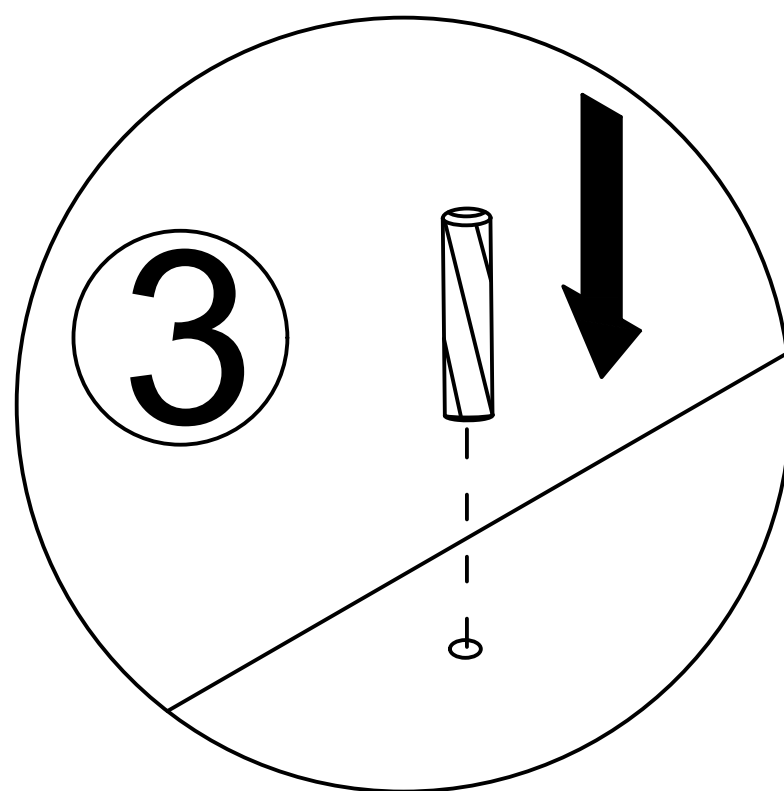
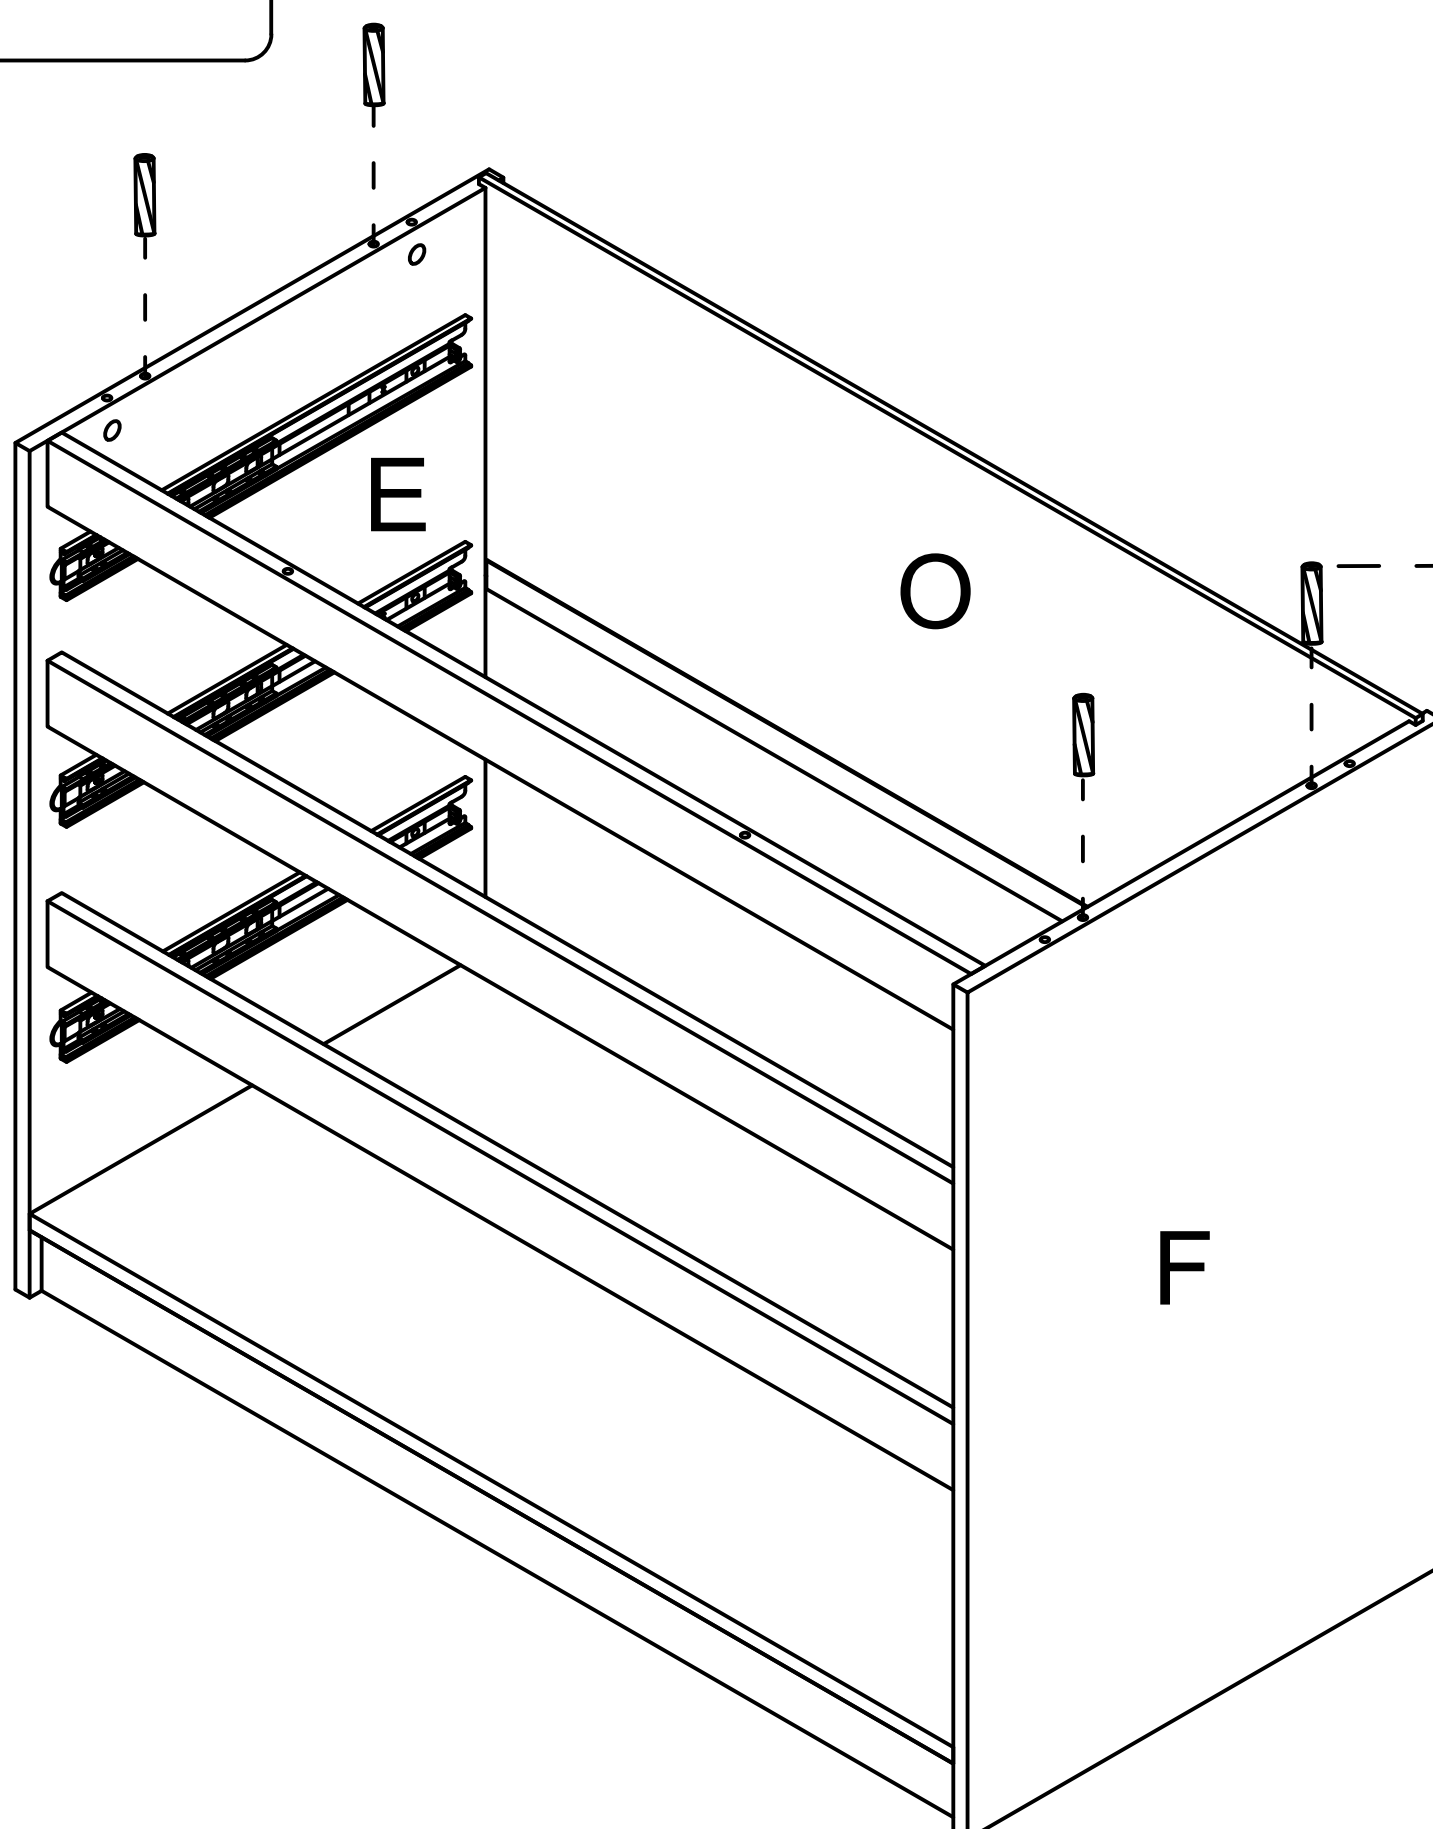


Step 28

①

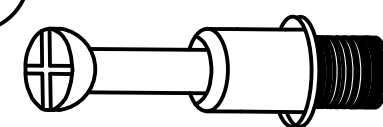


x6

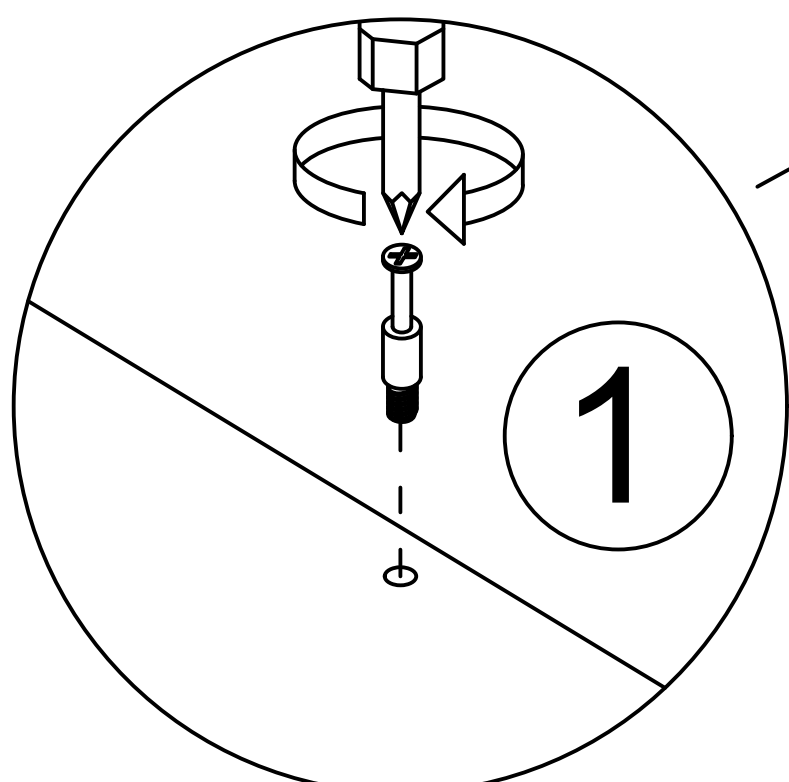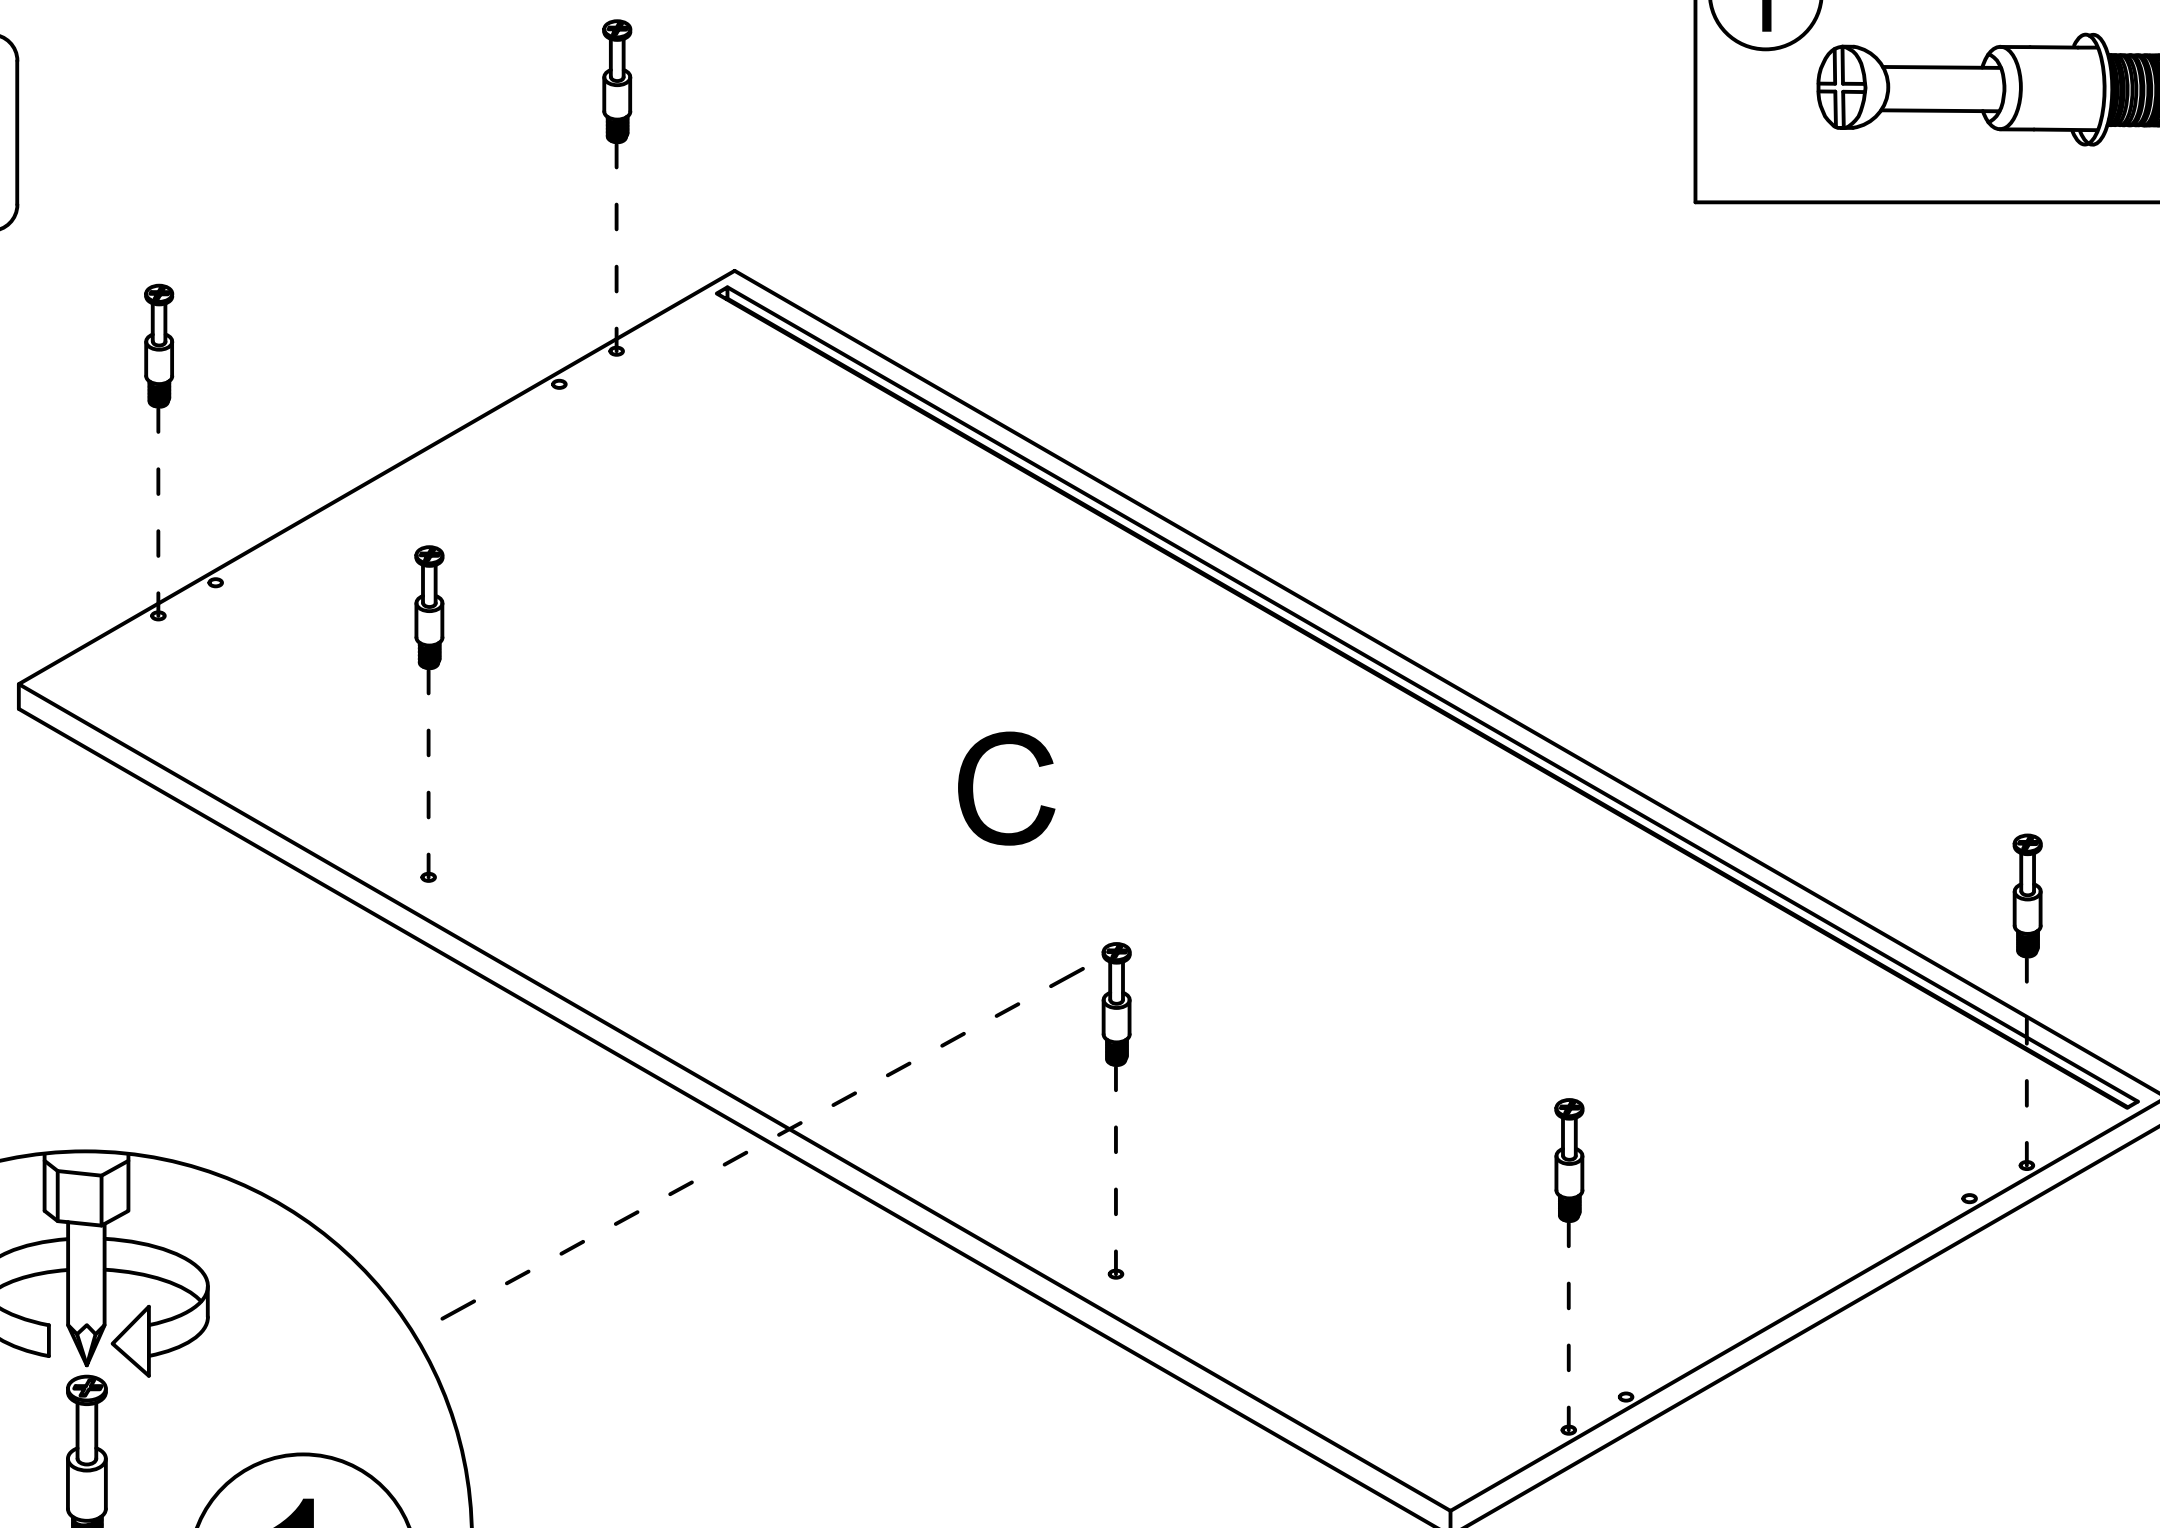


Step 29


2

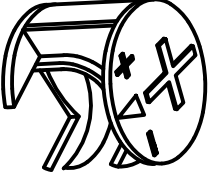

x6





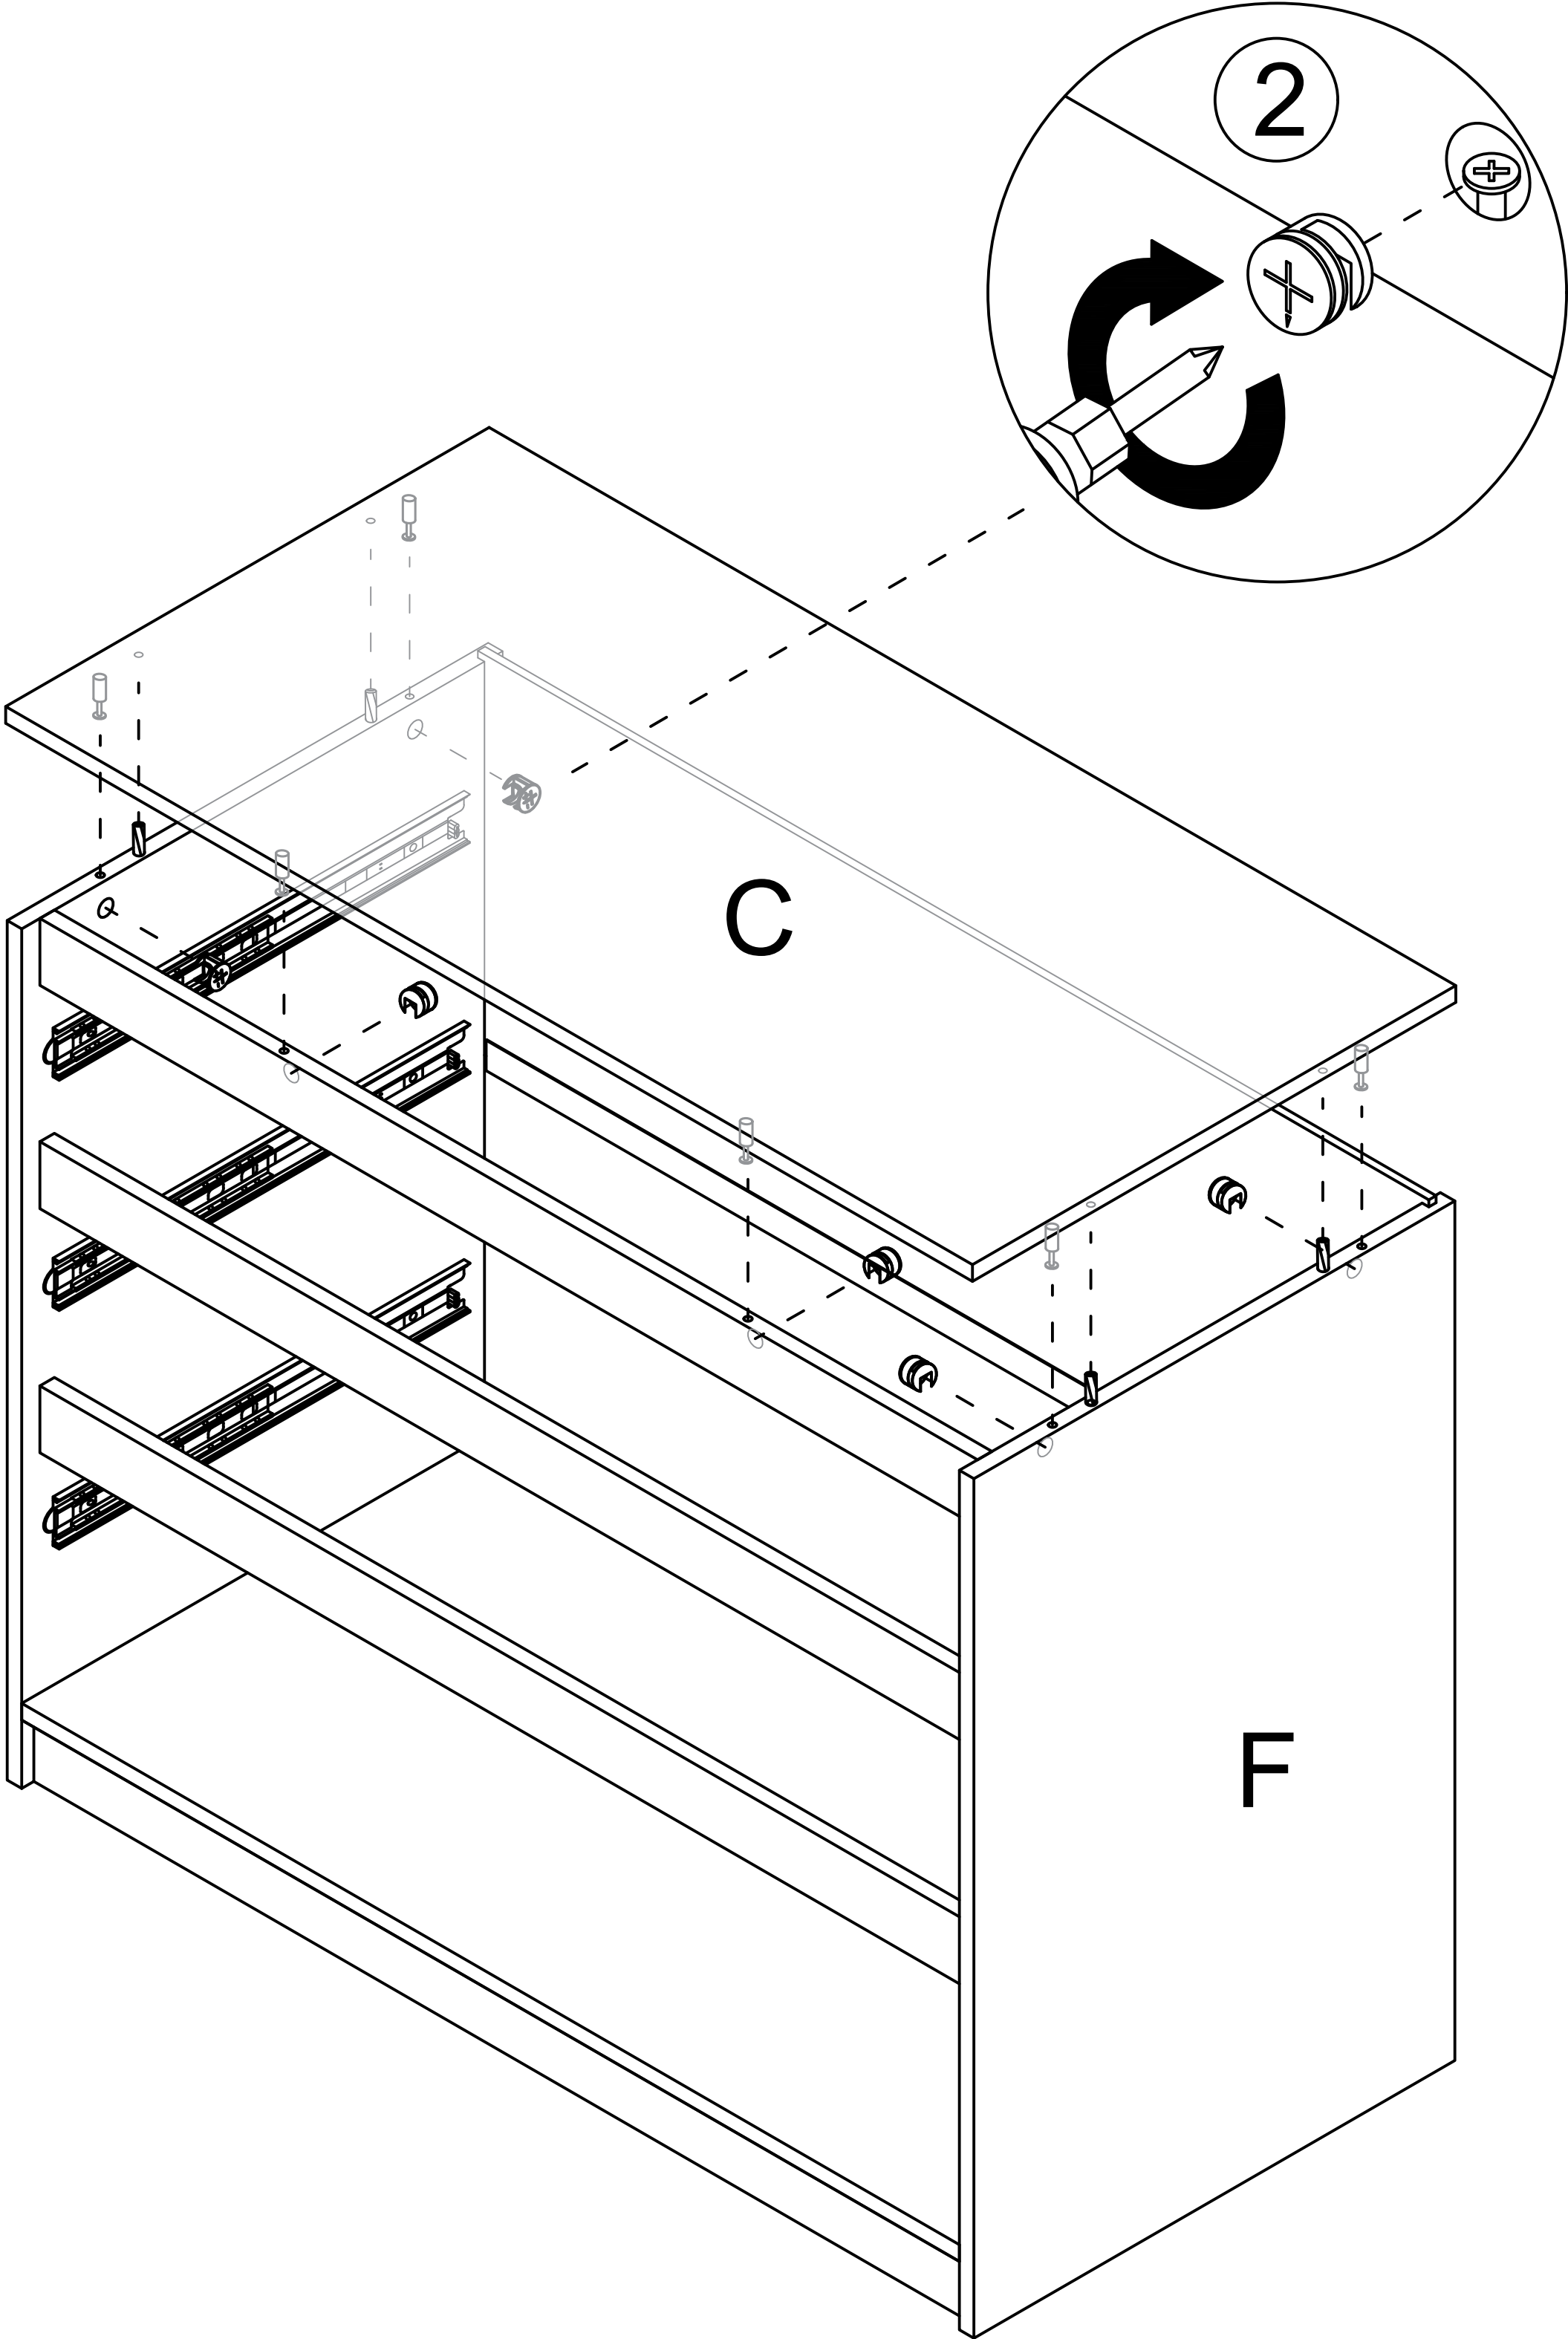


Step 30

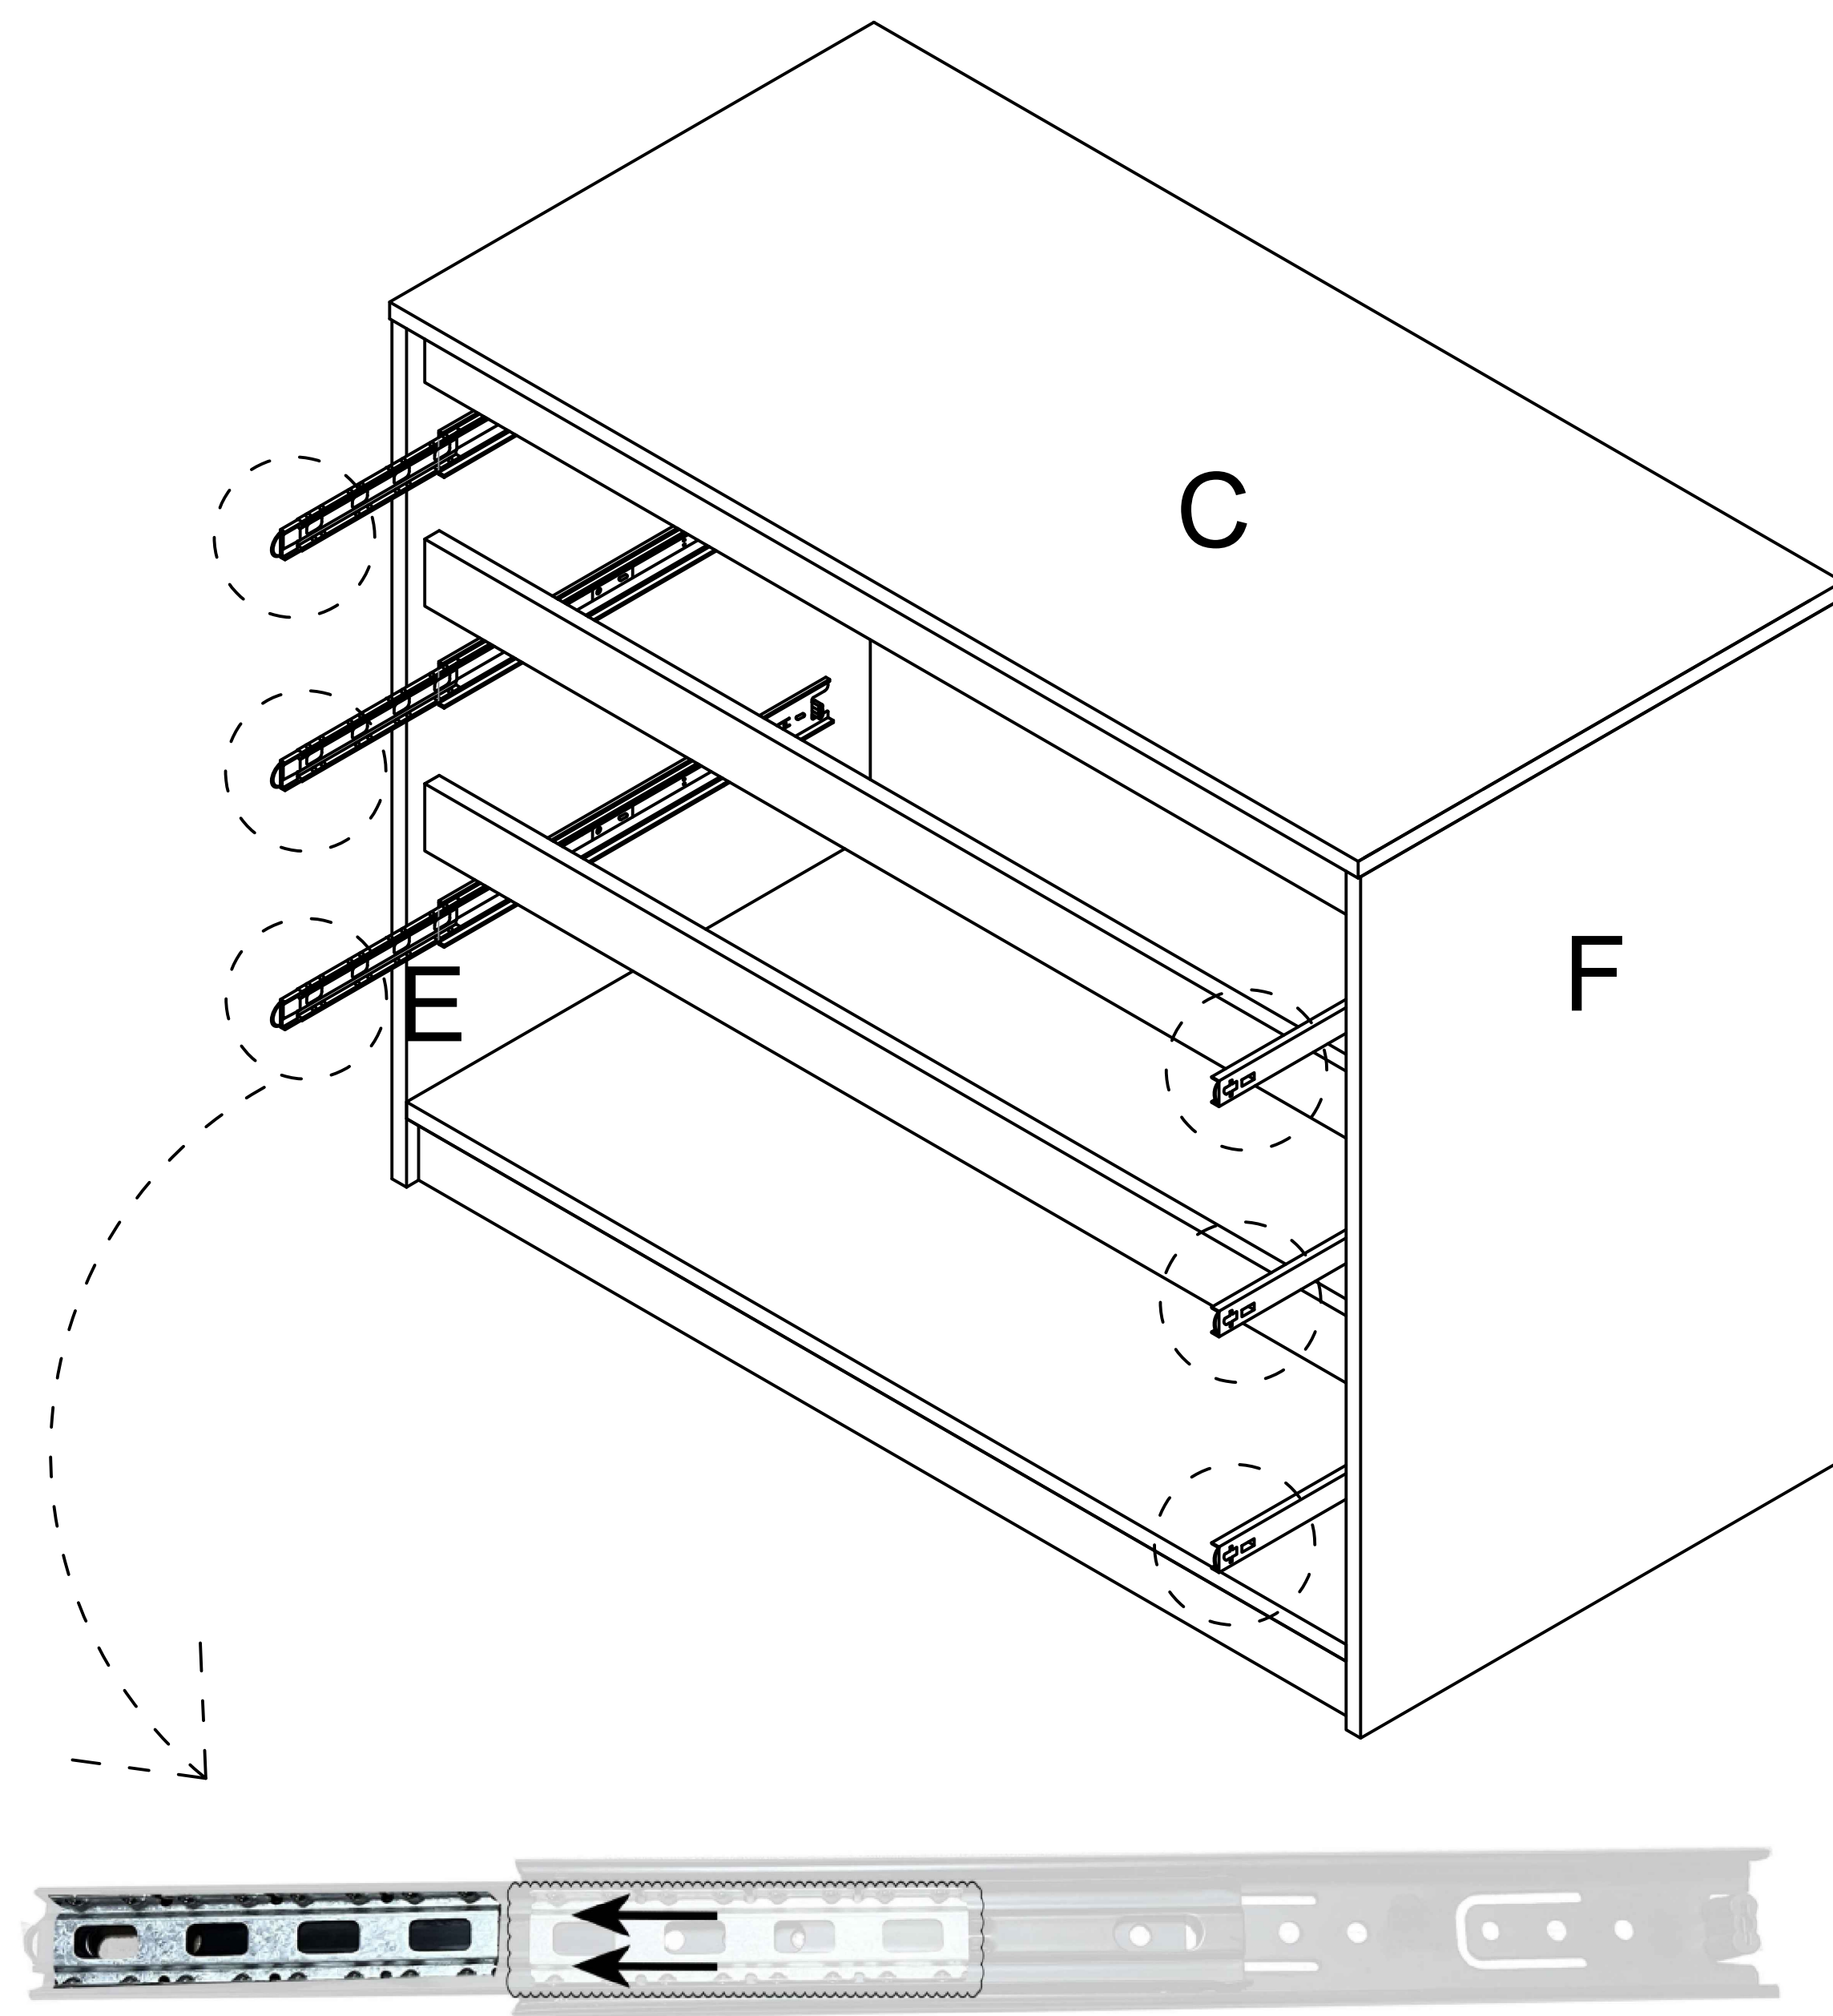

As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.


Step 31

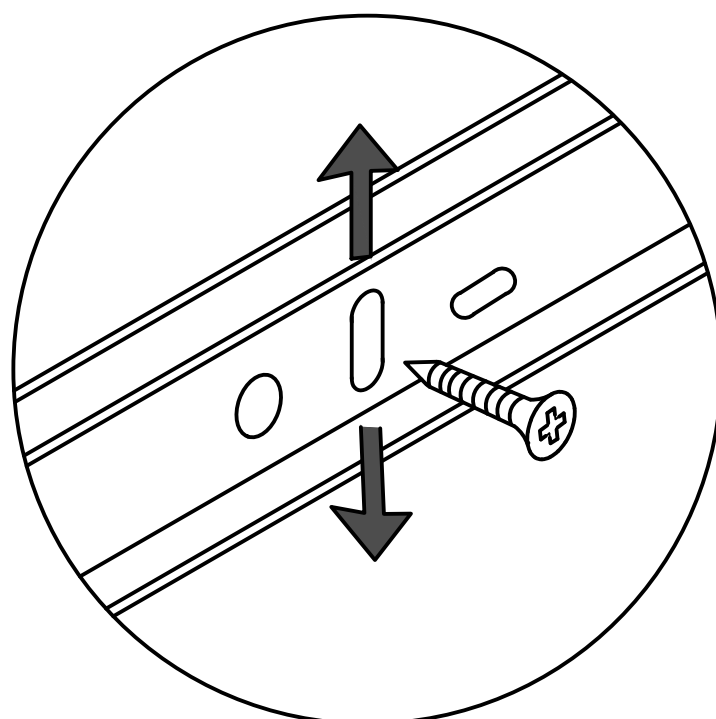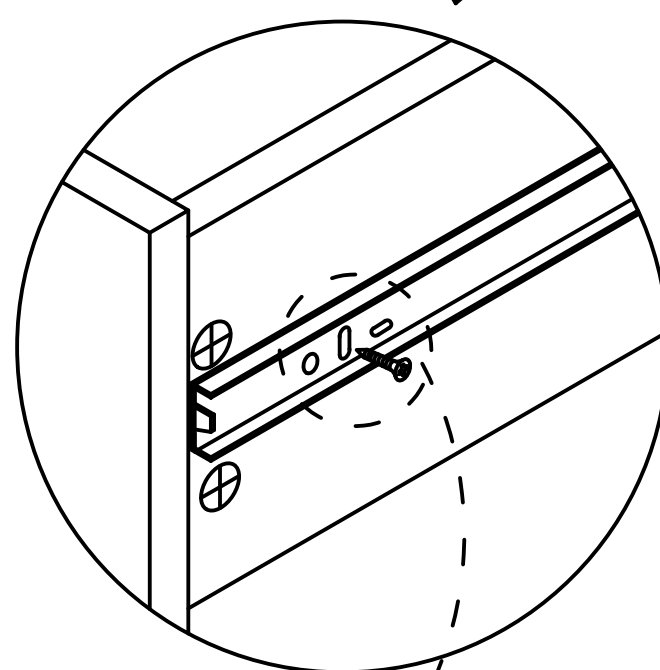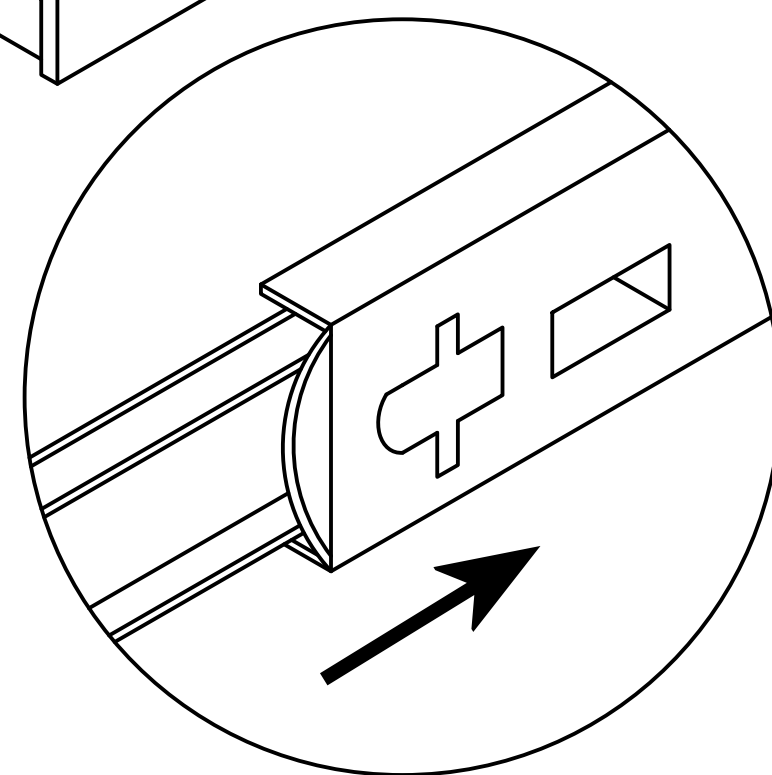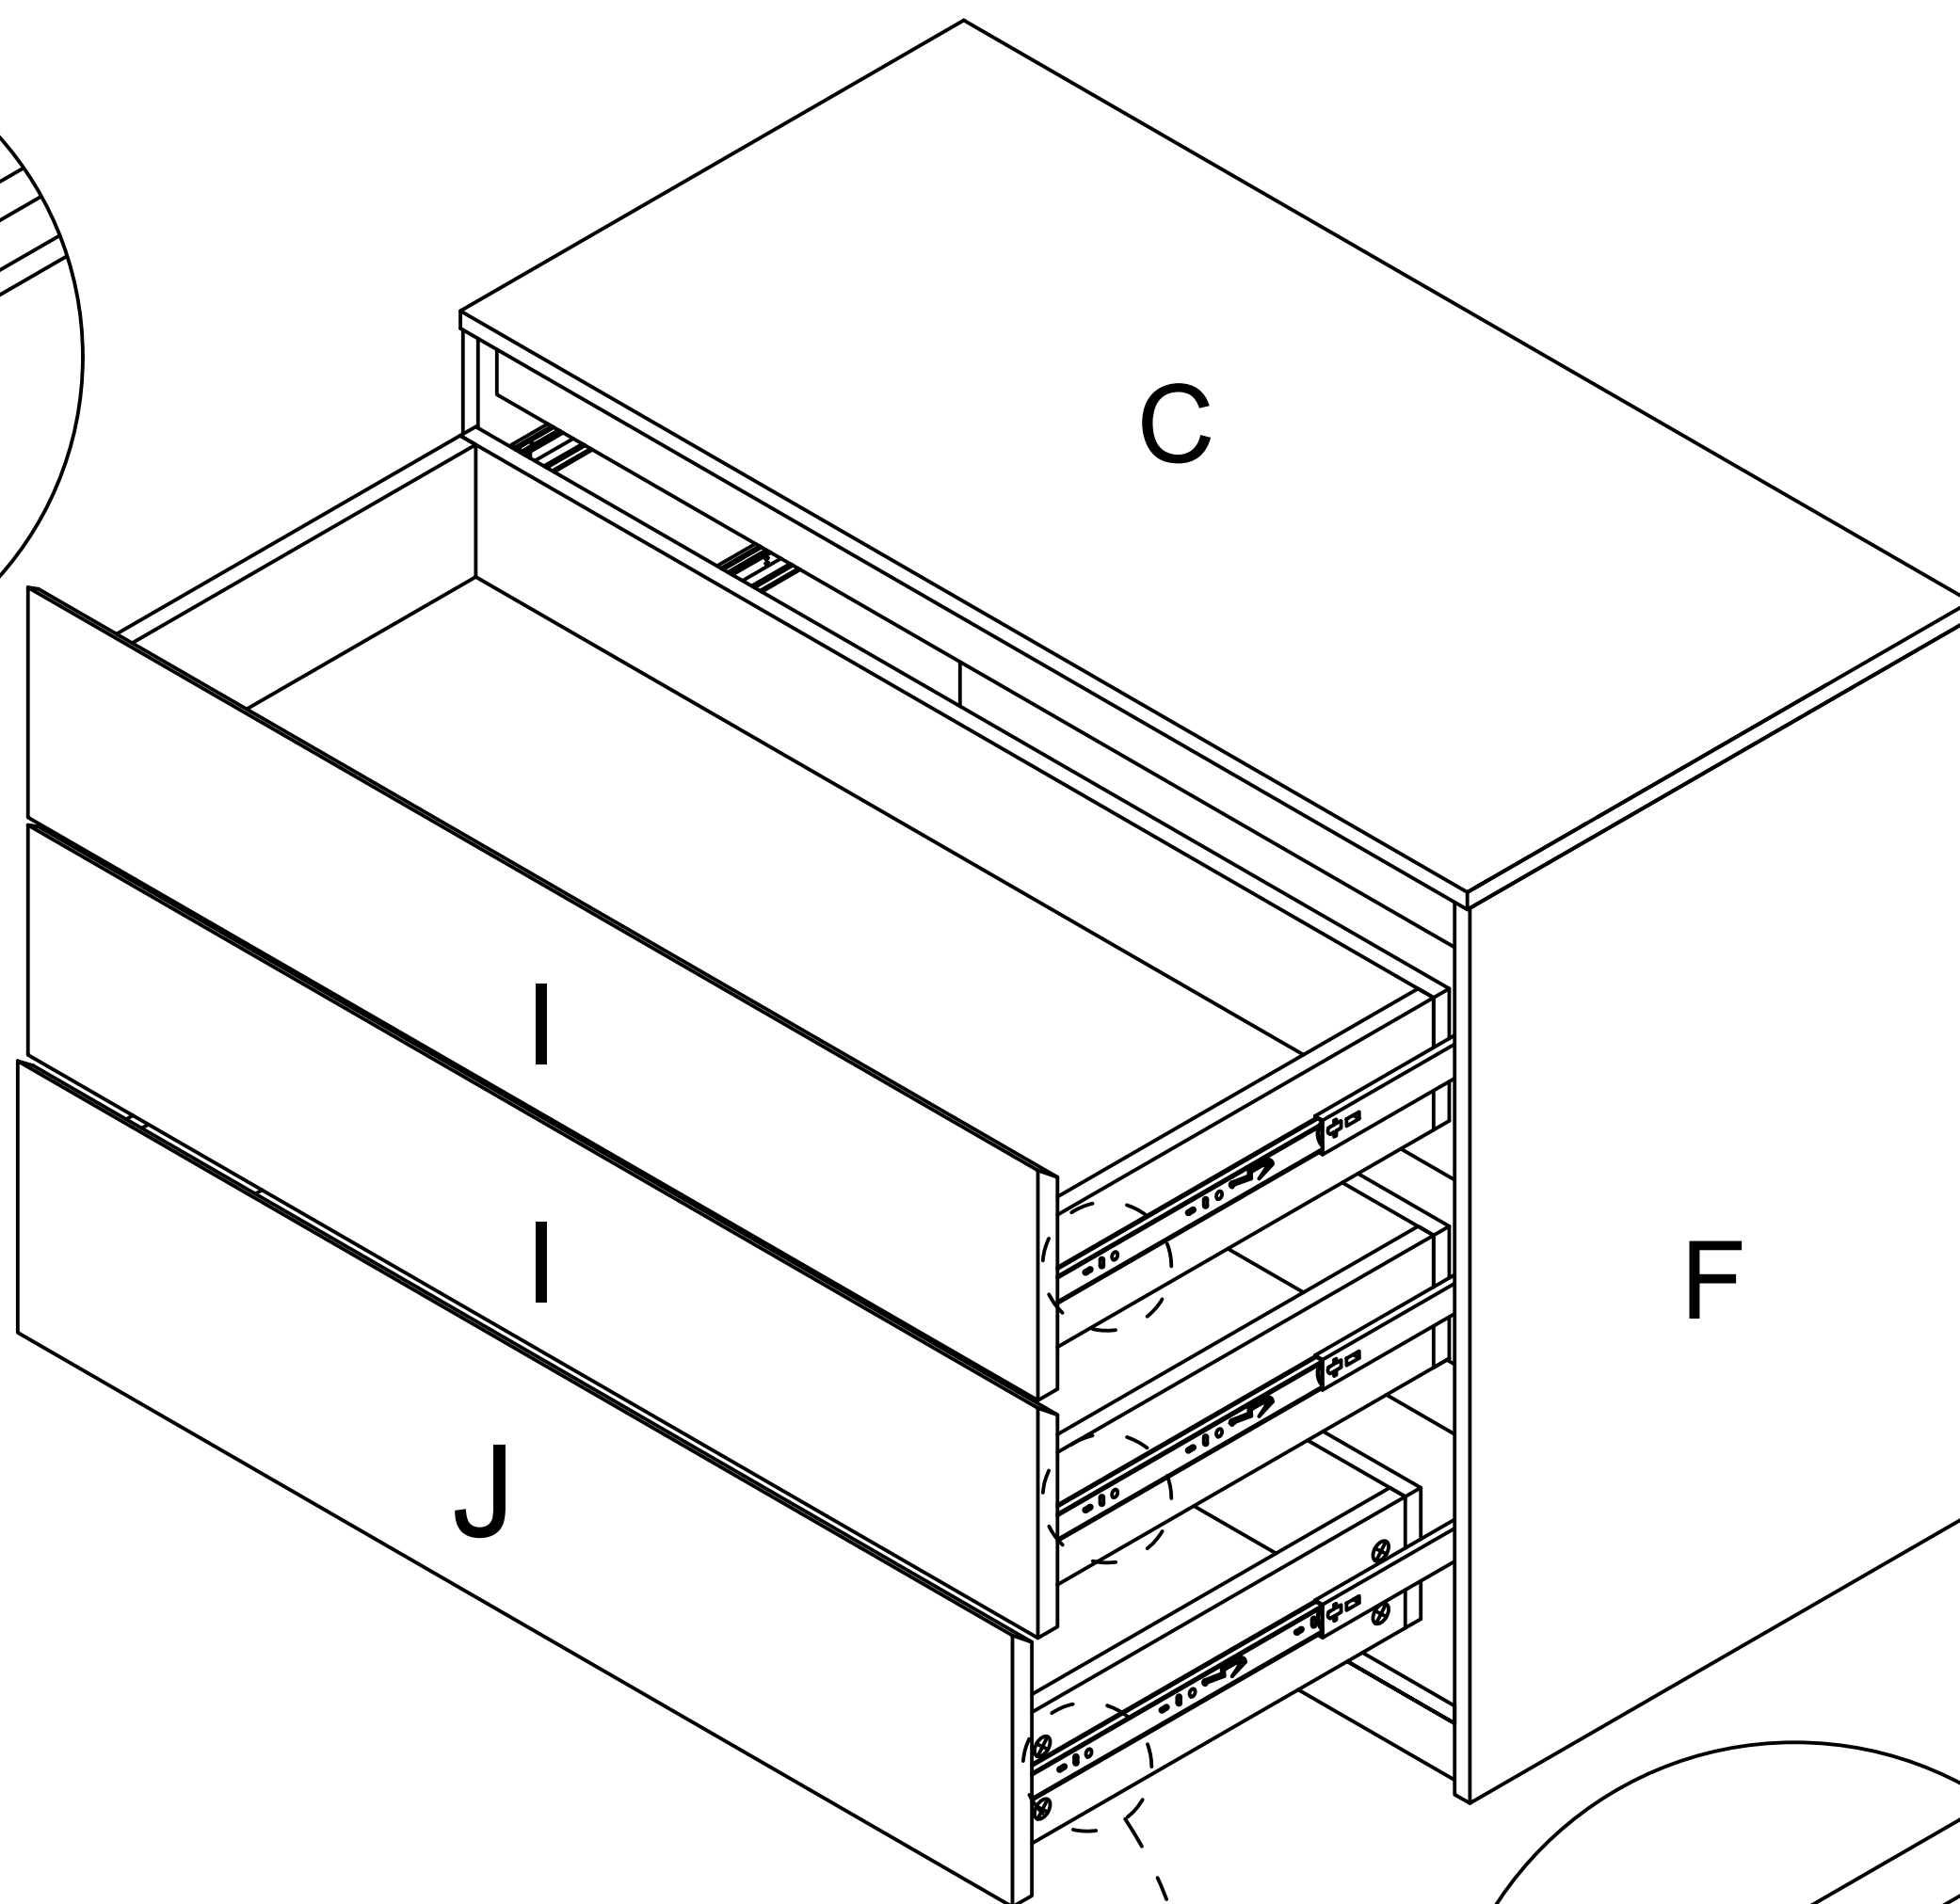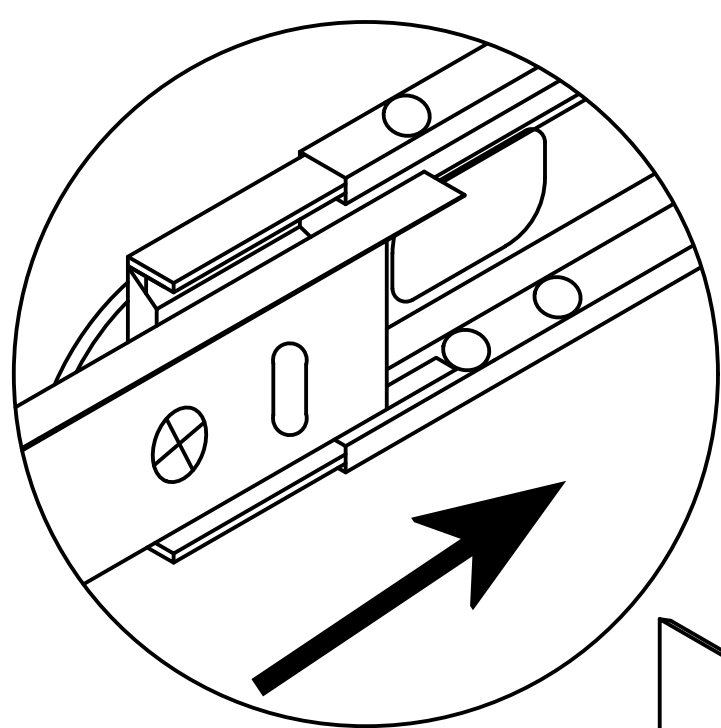



If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap











Step 32


7

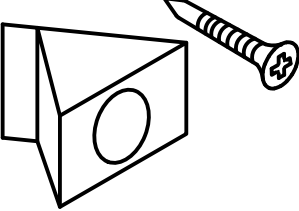

x8

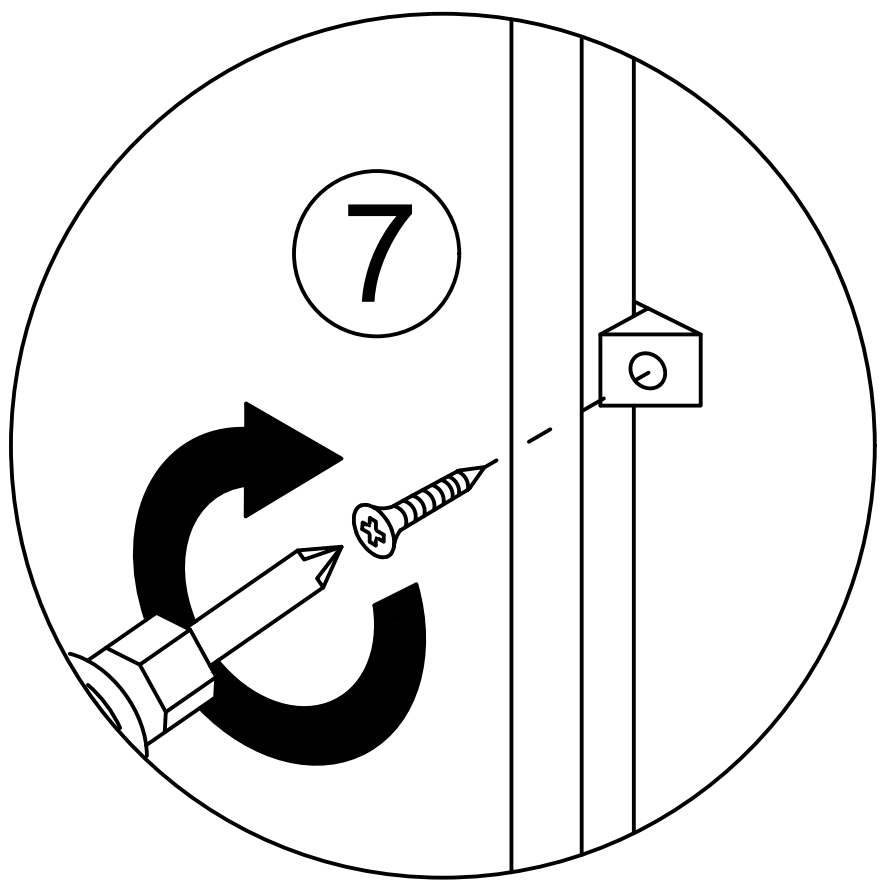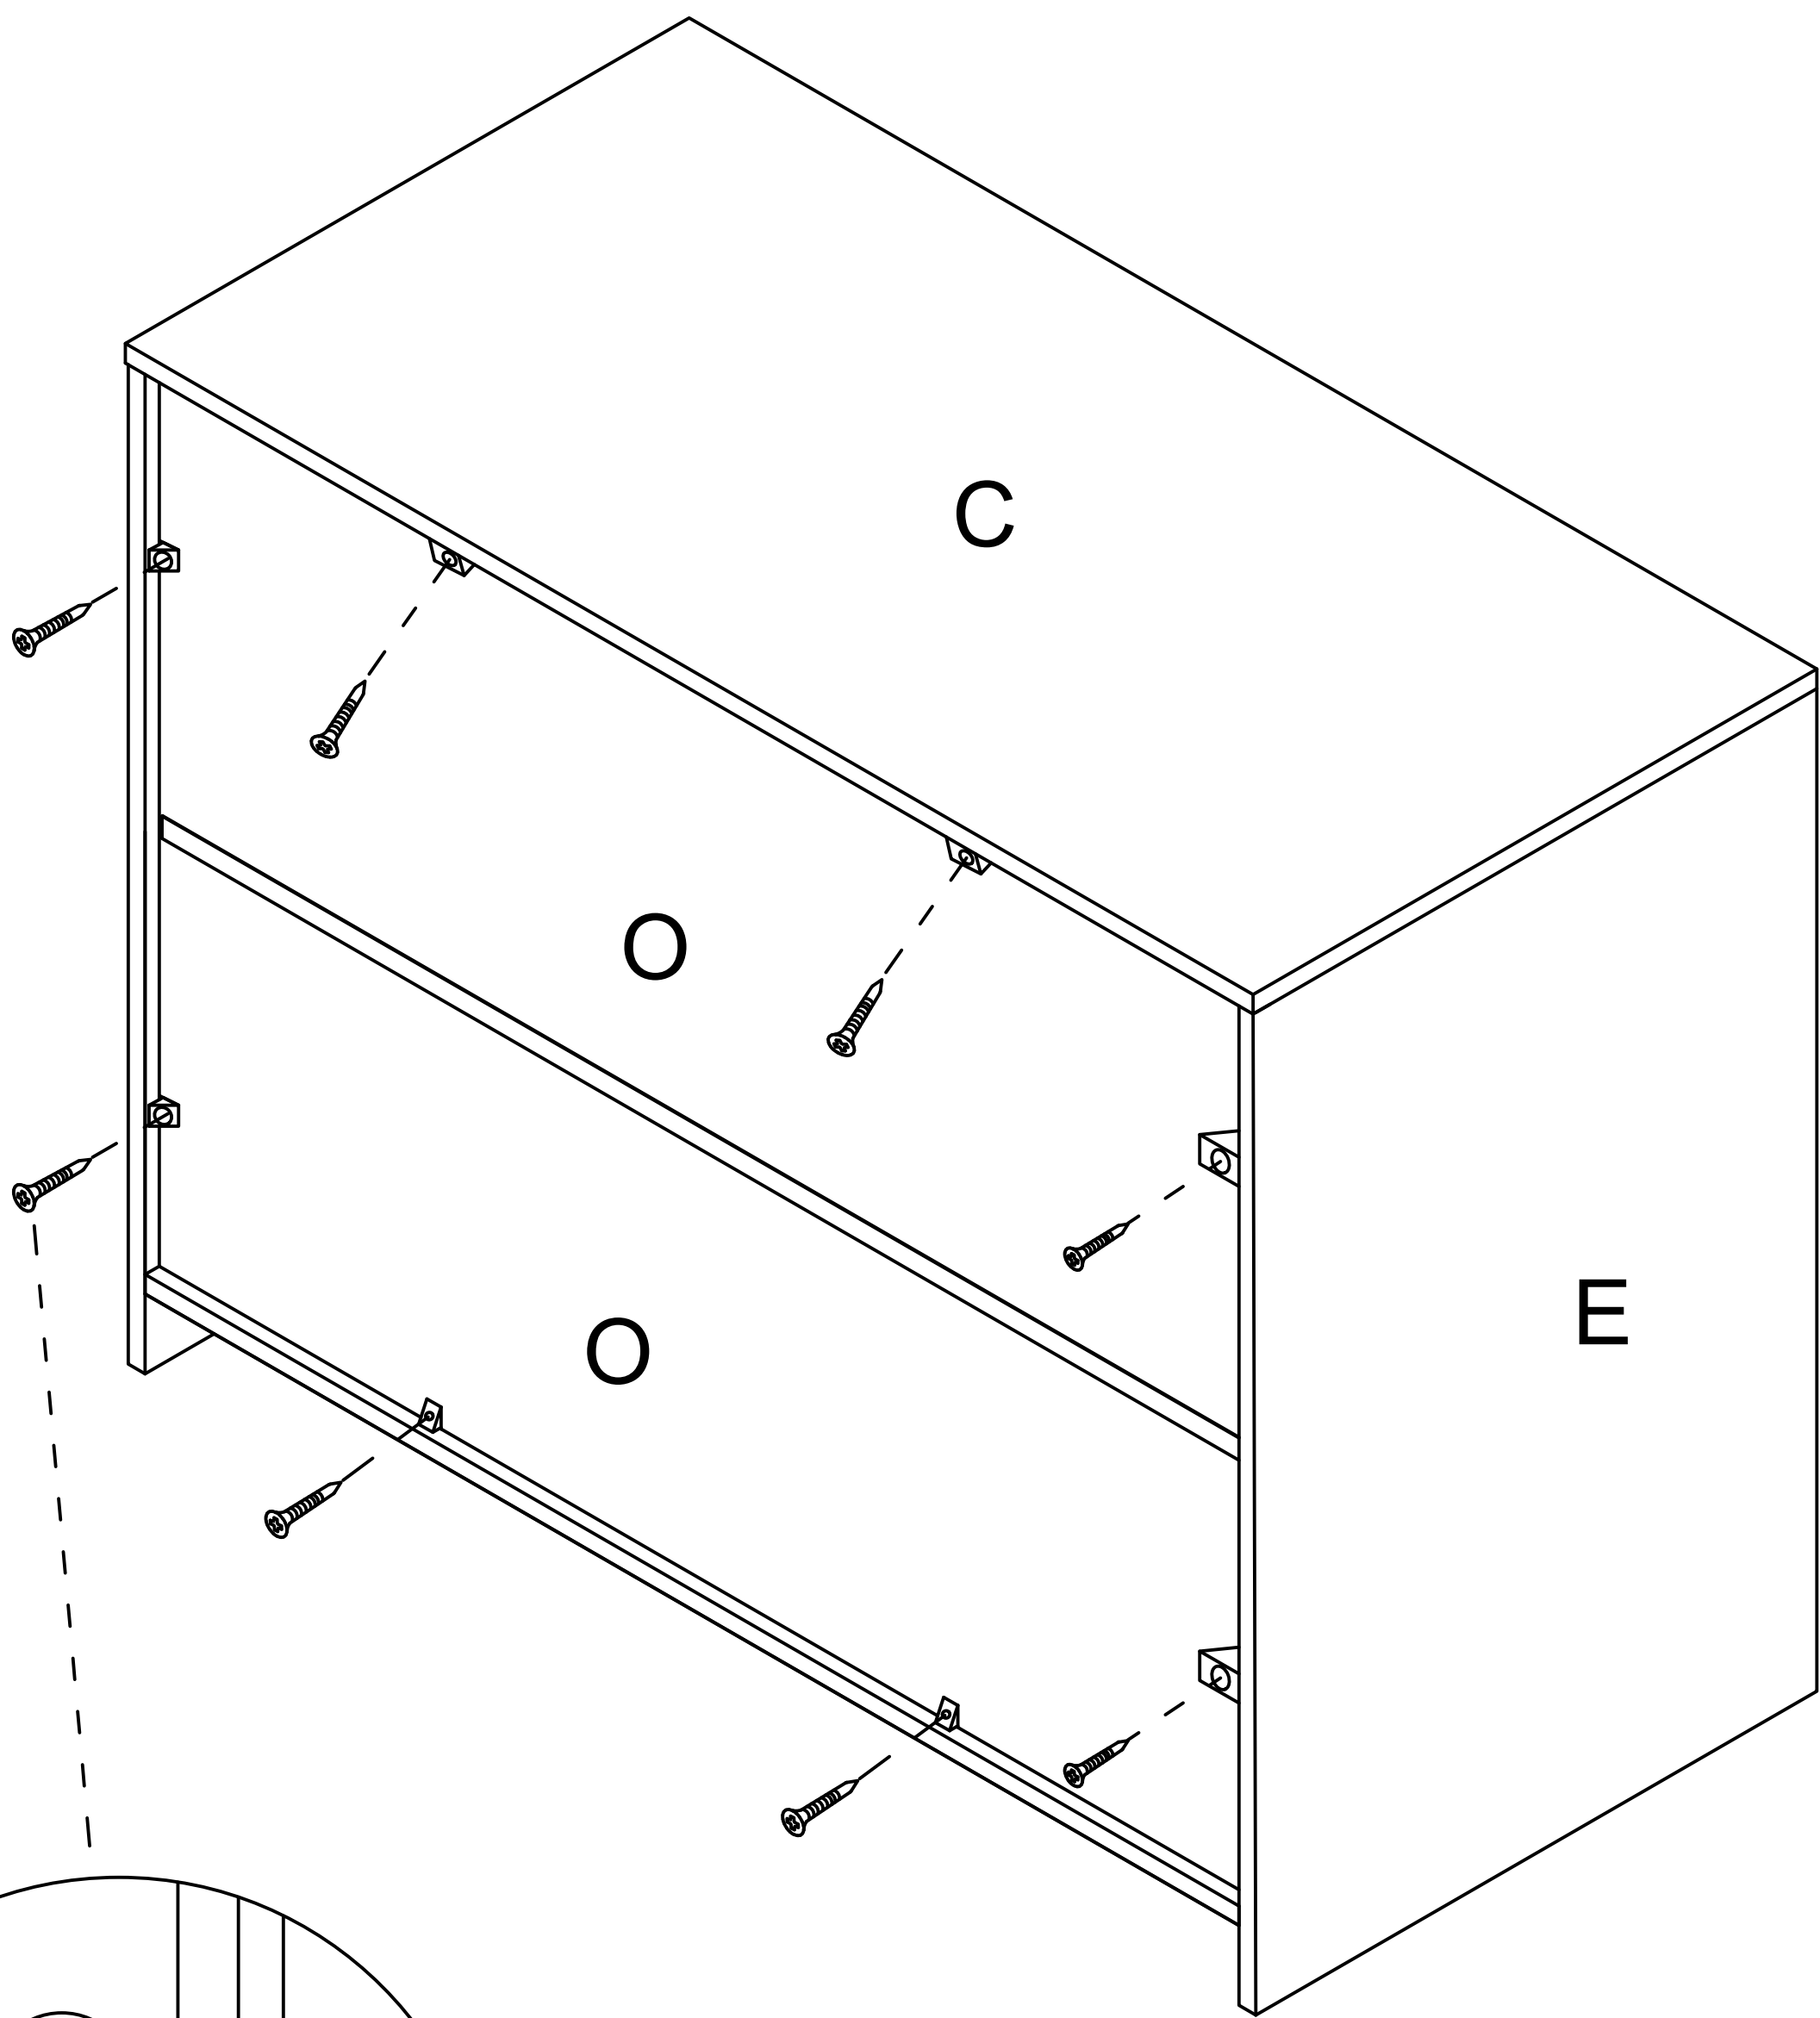

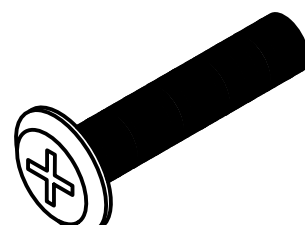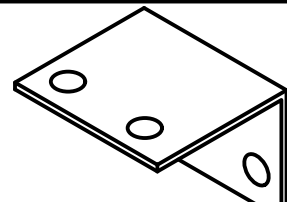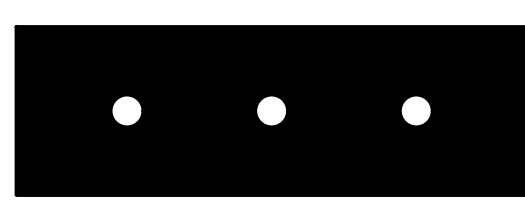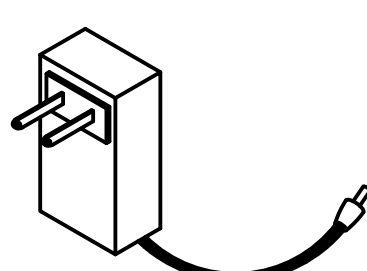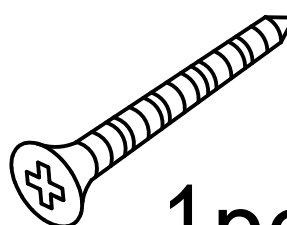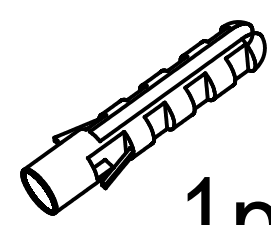
8		7pcs	9	 	2pcs 8pcs
10		1pcs	11	 1pcs  1pcs	
	1pcs	 2pcs  1pcs  1pcs			

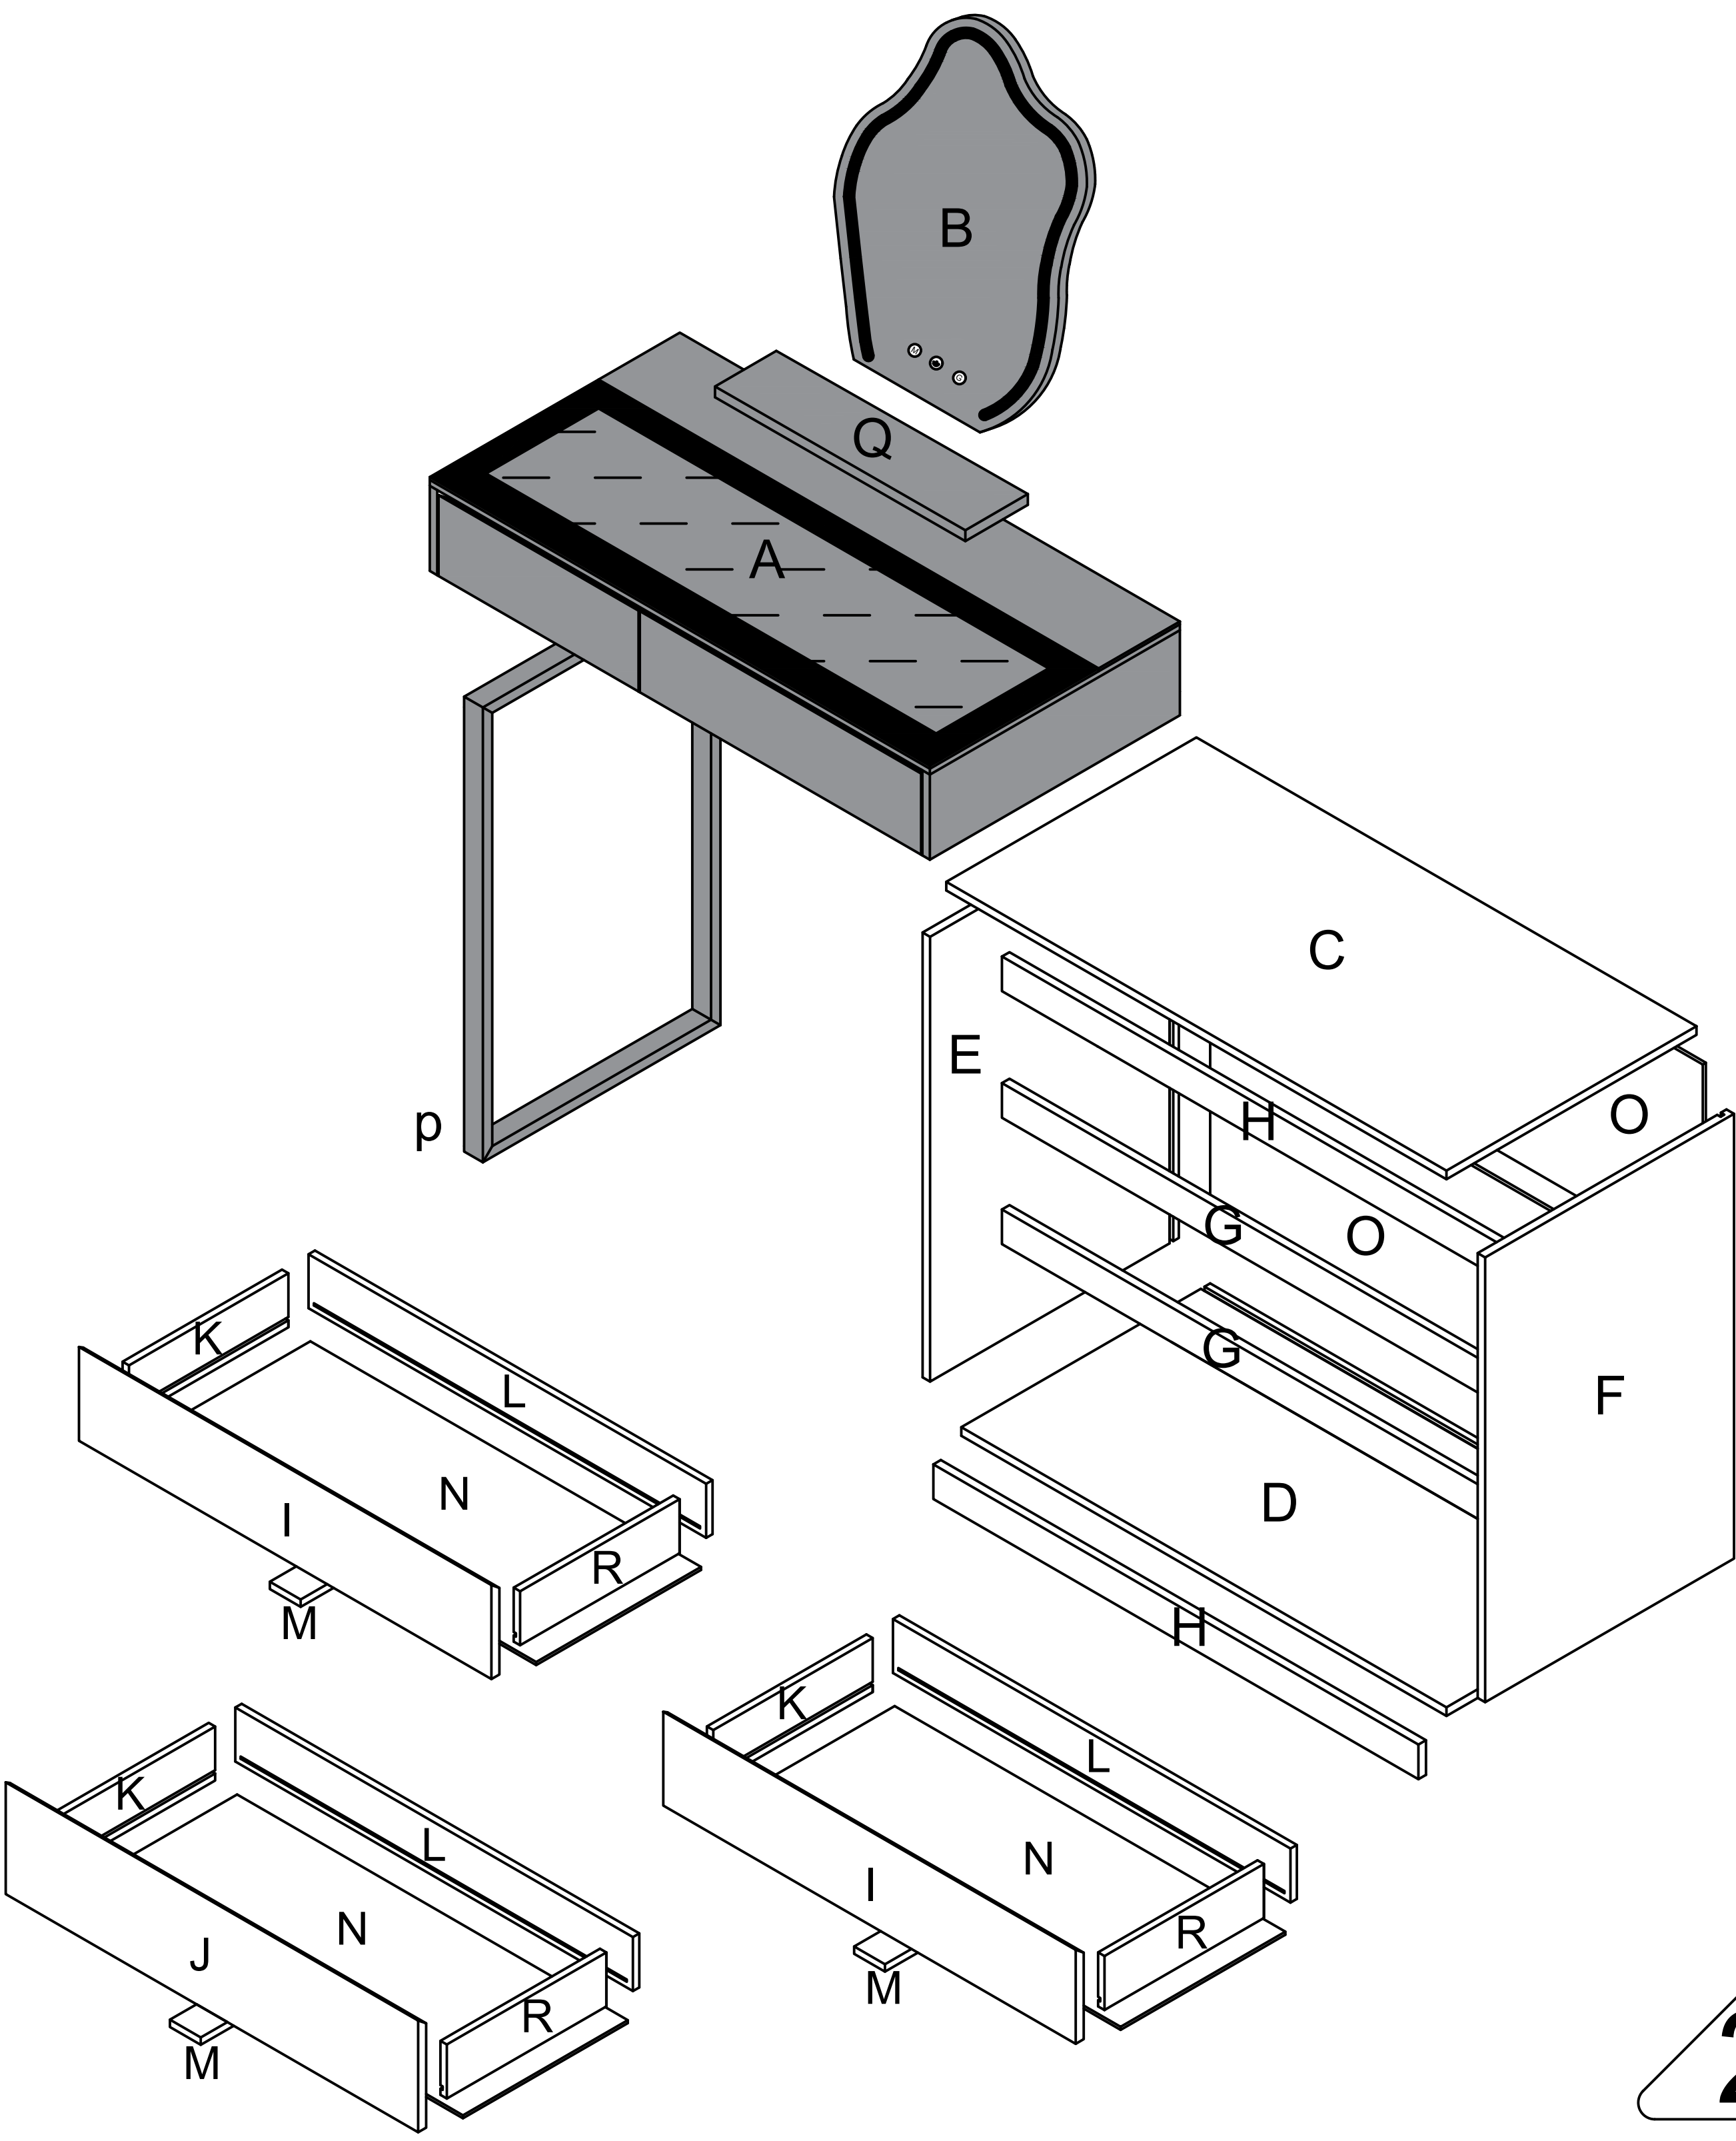

Step 33



Choose Plan"A"or Plan"B"as needed

8


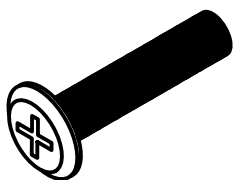


x4


Plan"A"

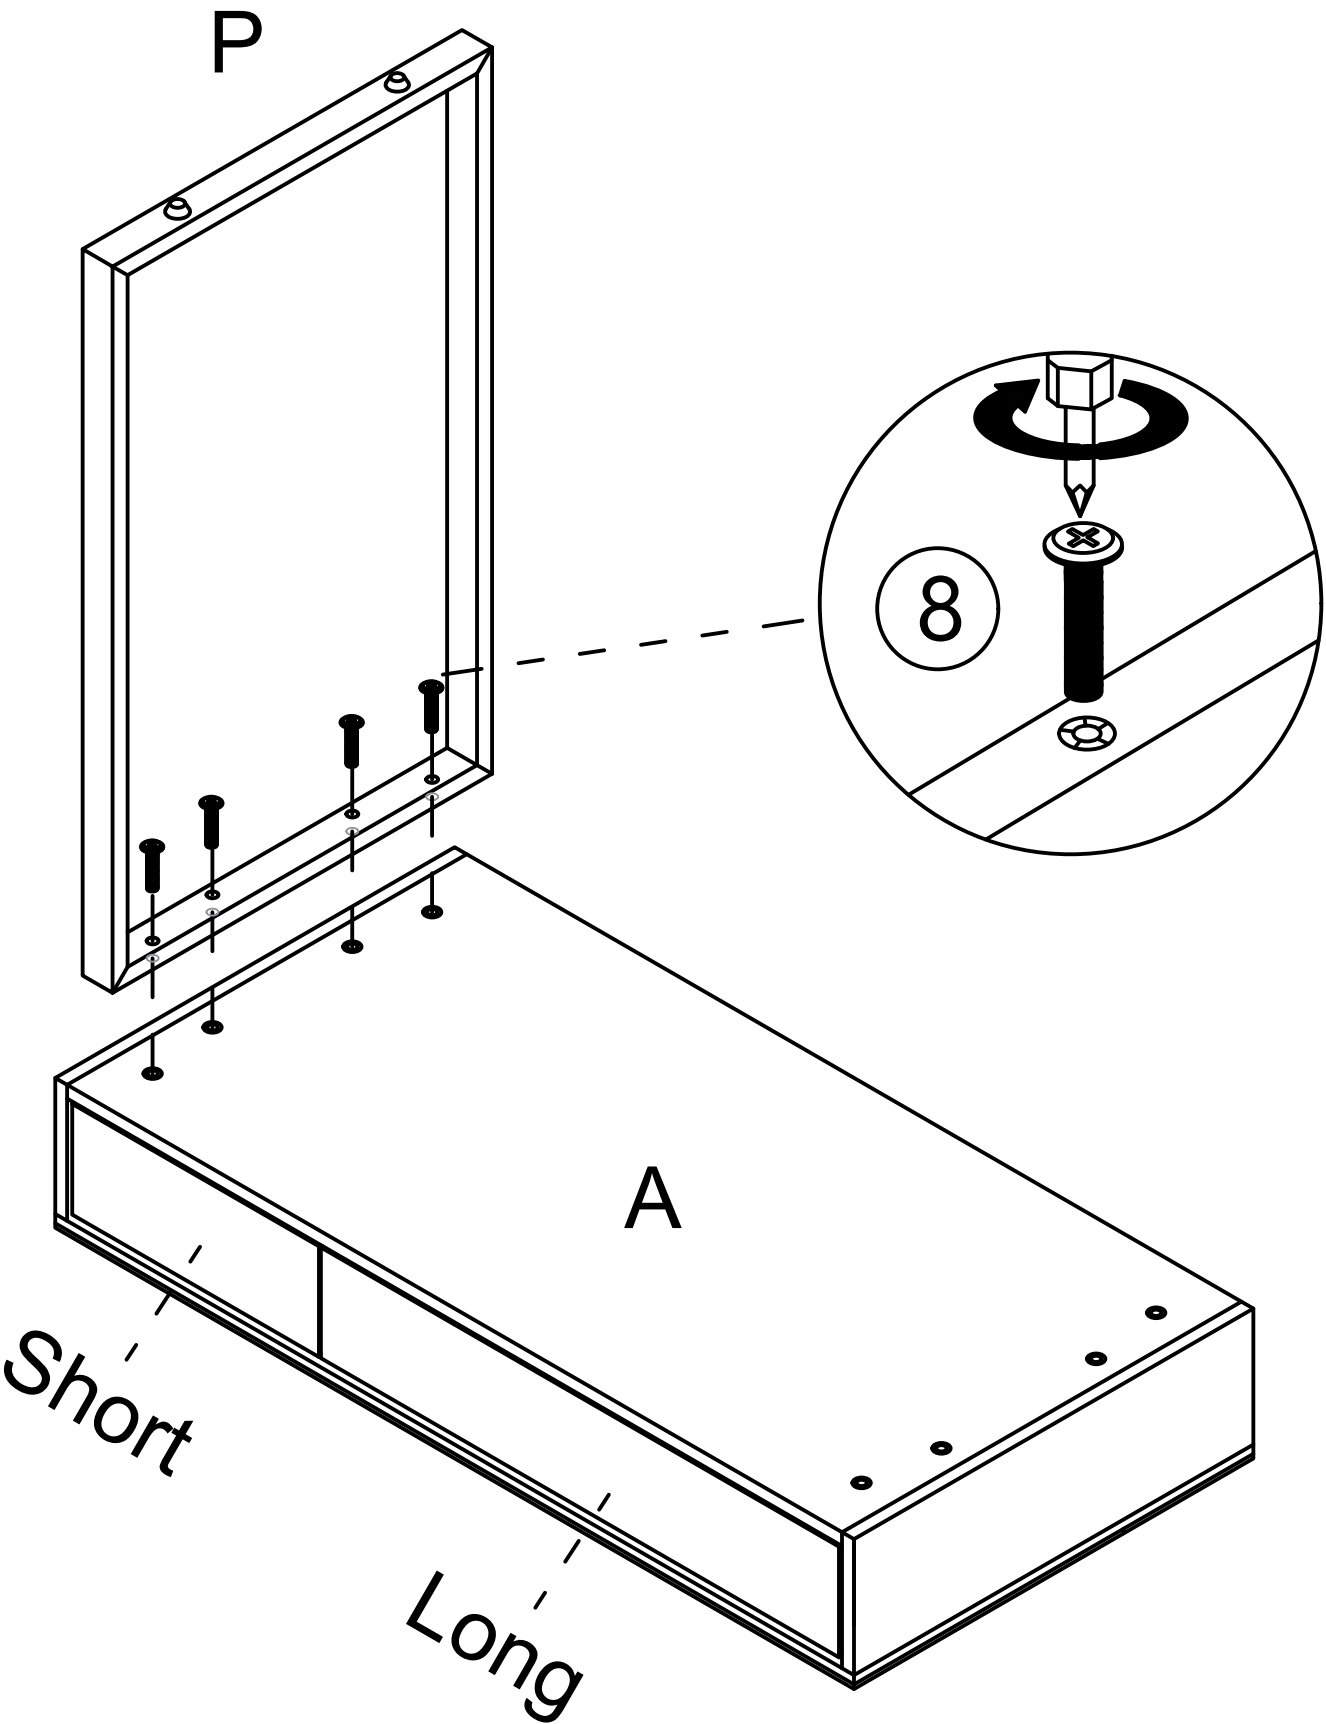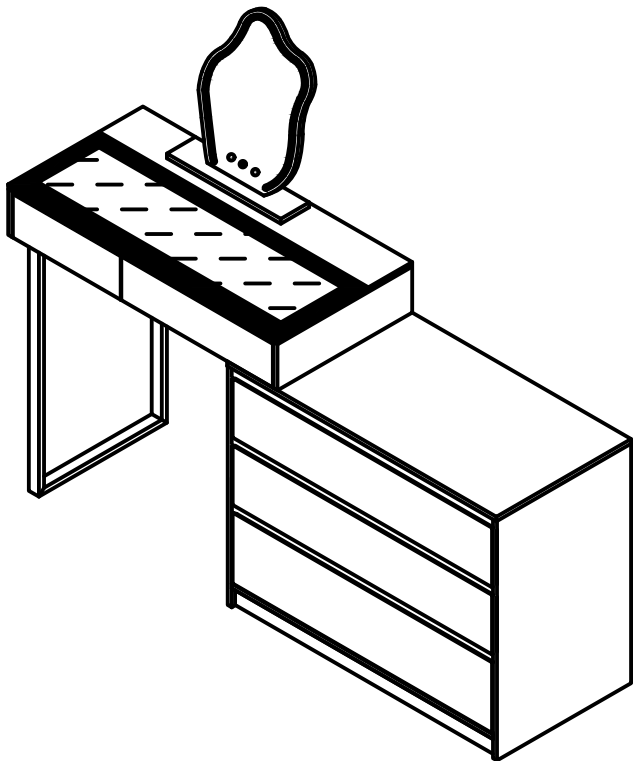

Plan"B"

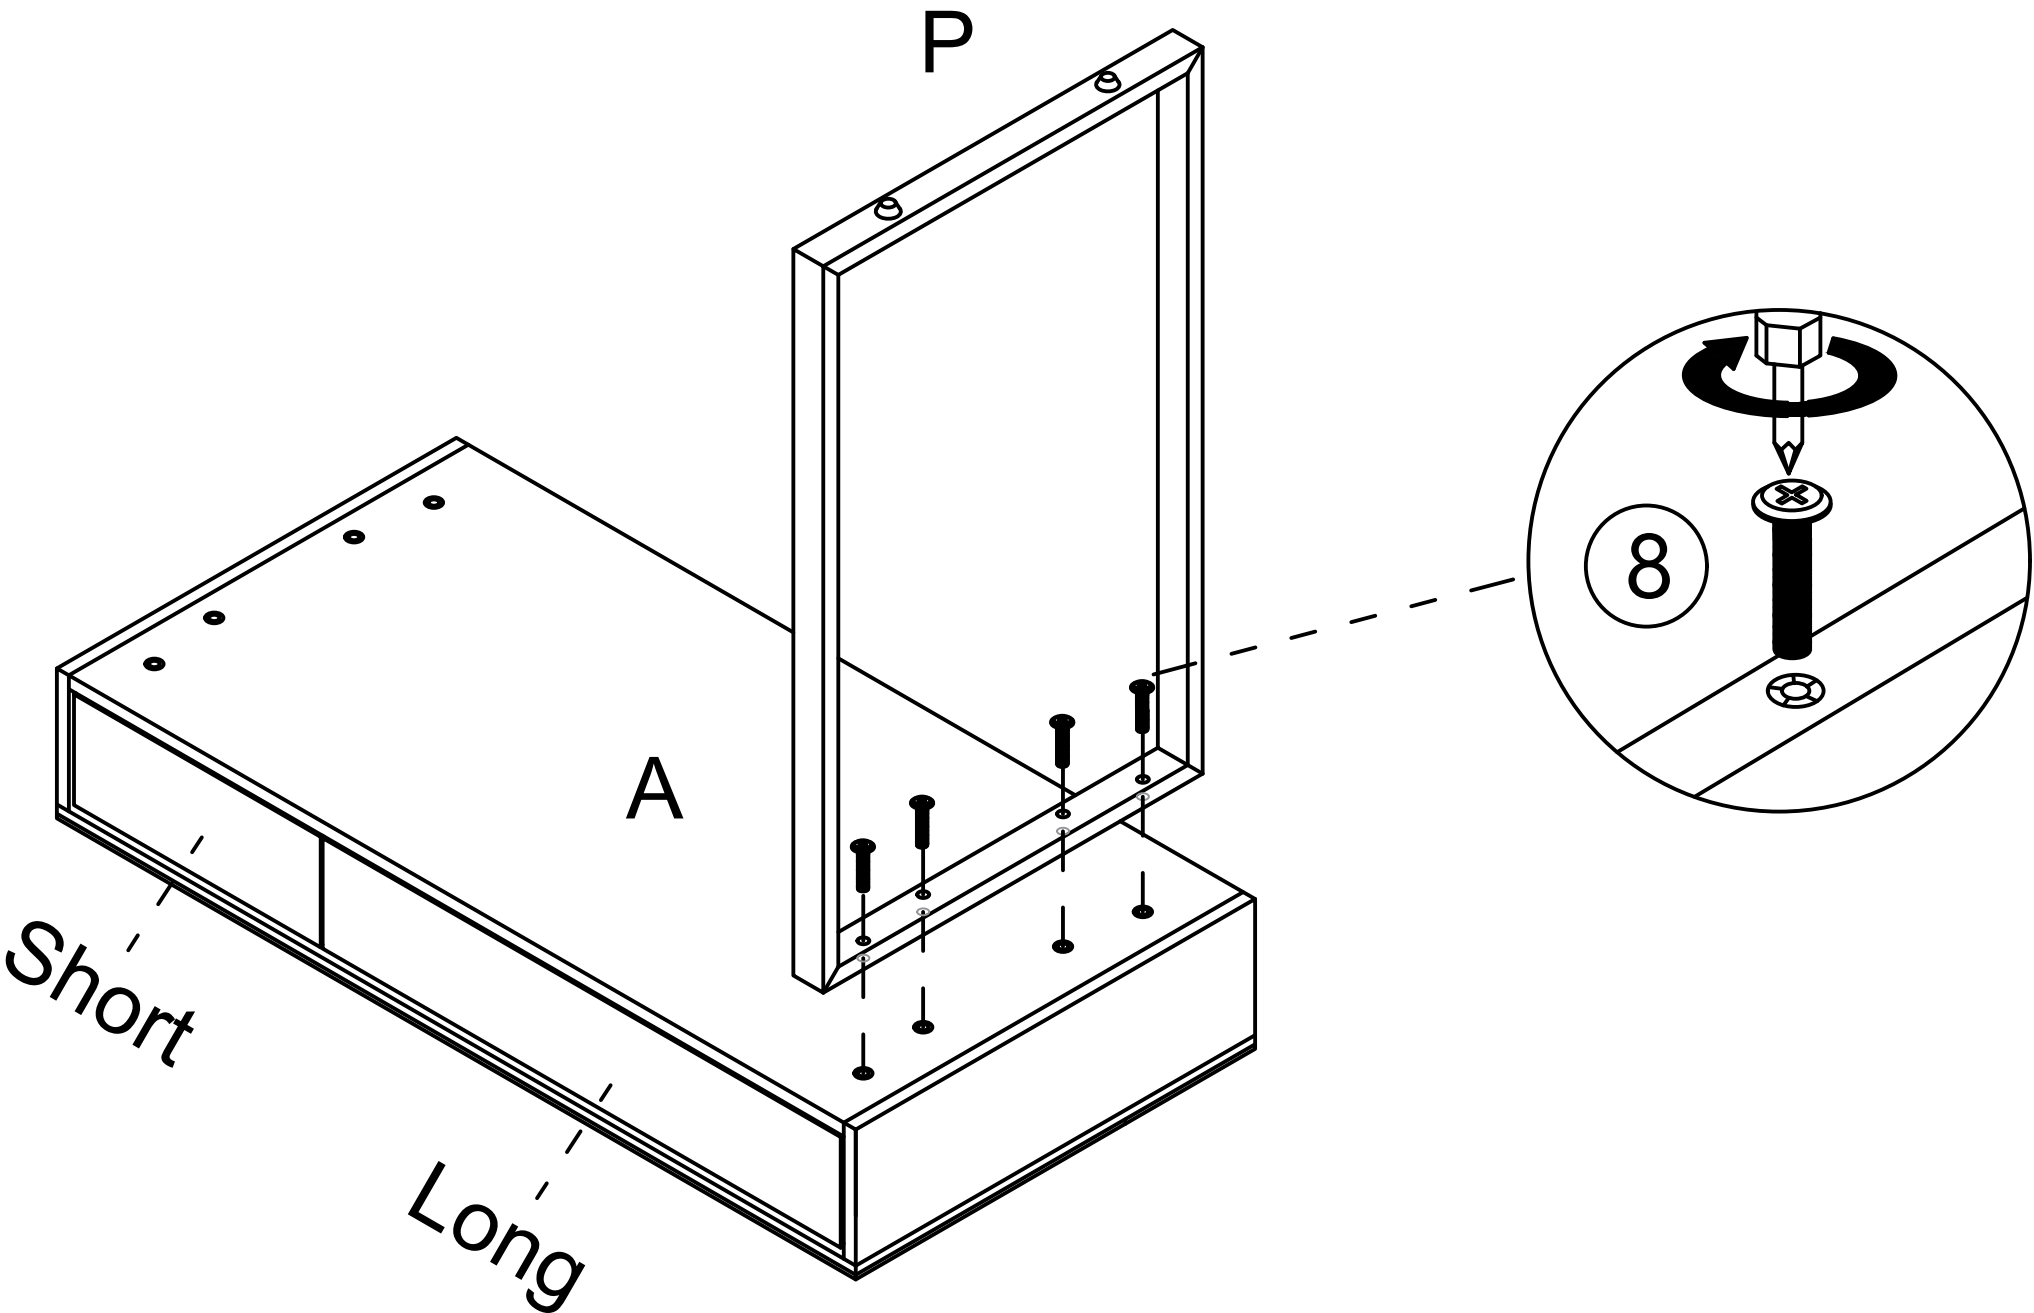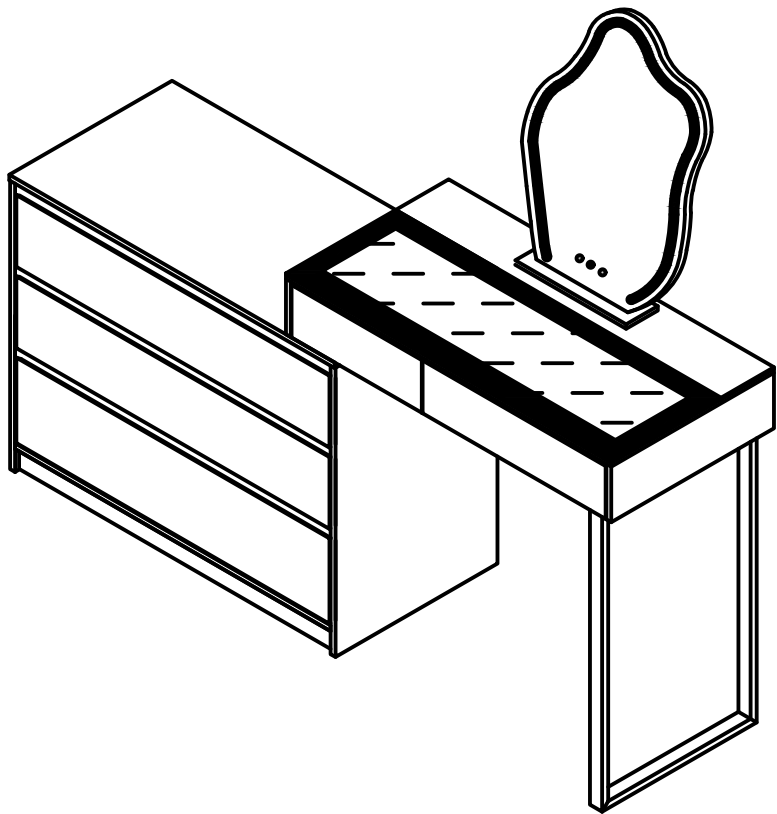

Step 34

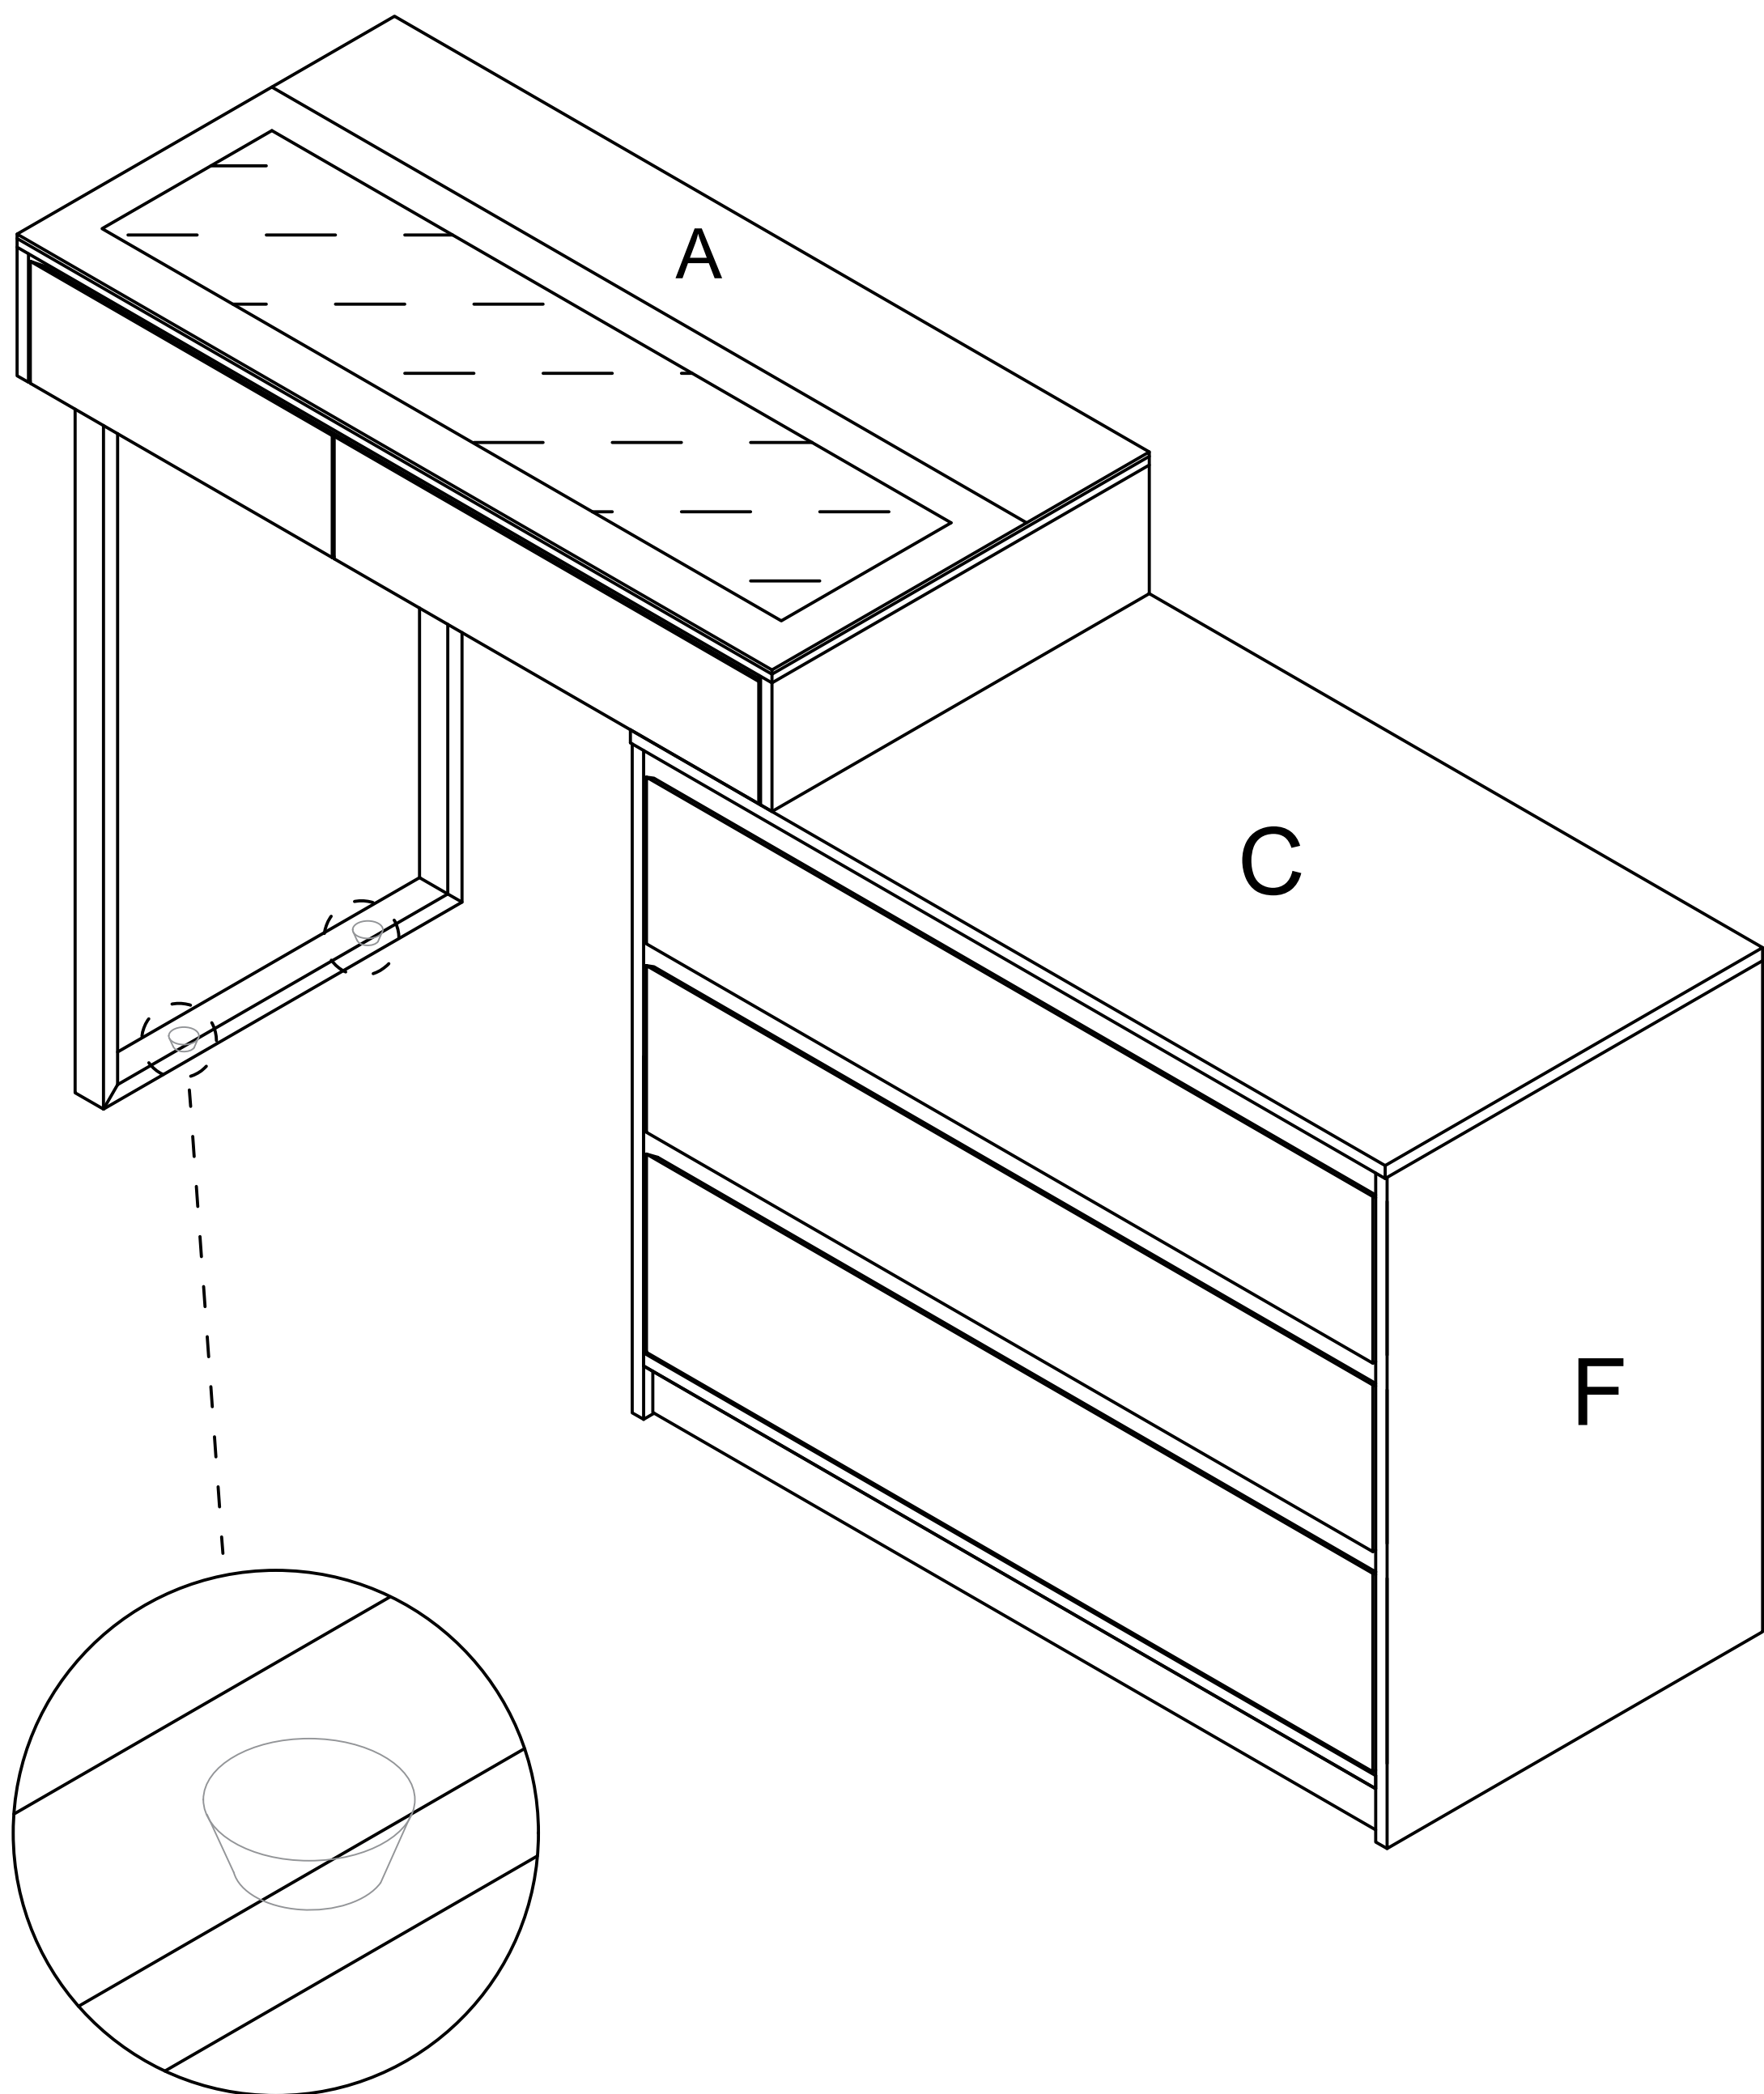


Height can be adjusted under the hardware foot to avoid imbalance


Step 35

The placement effect of Effect 1




9

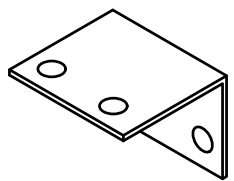

x2




x8

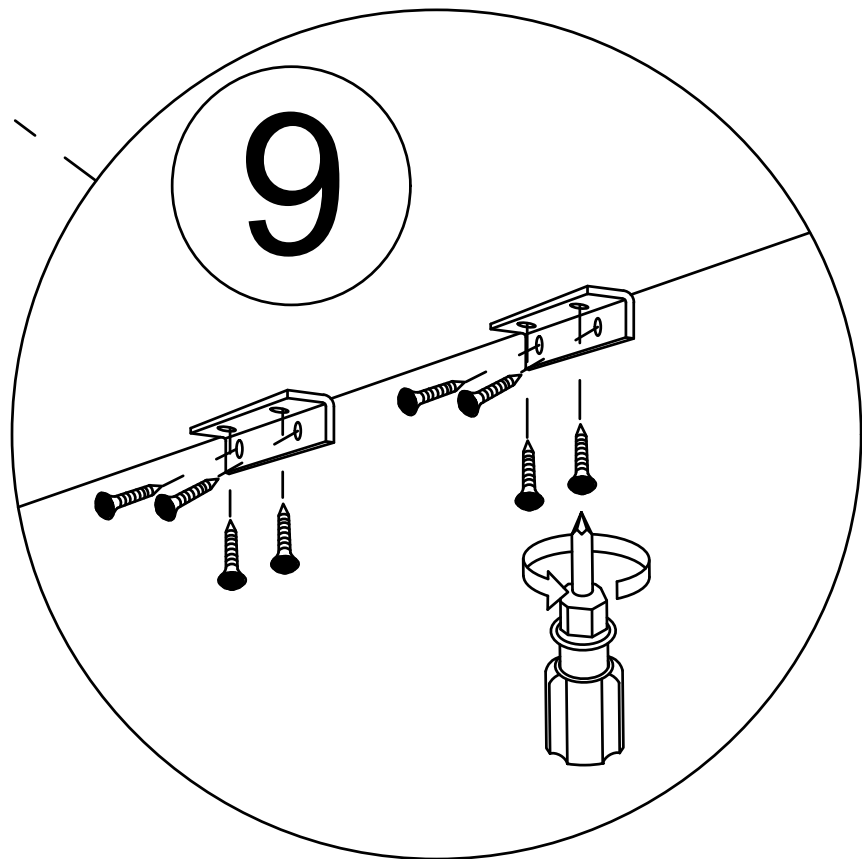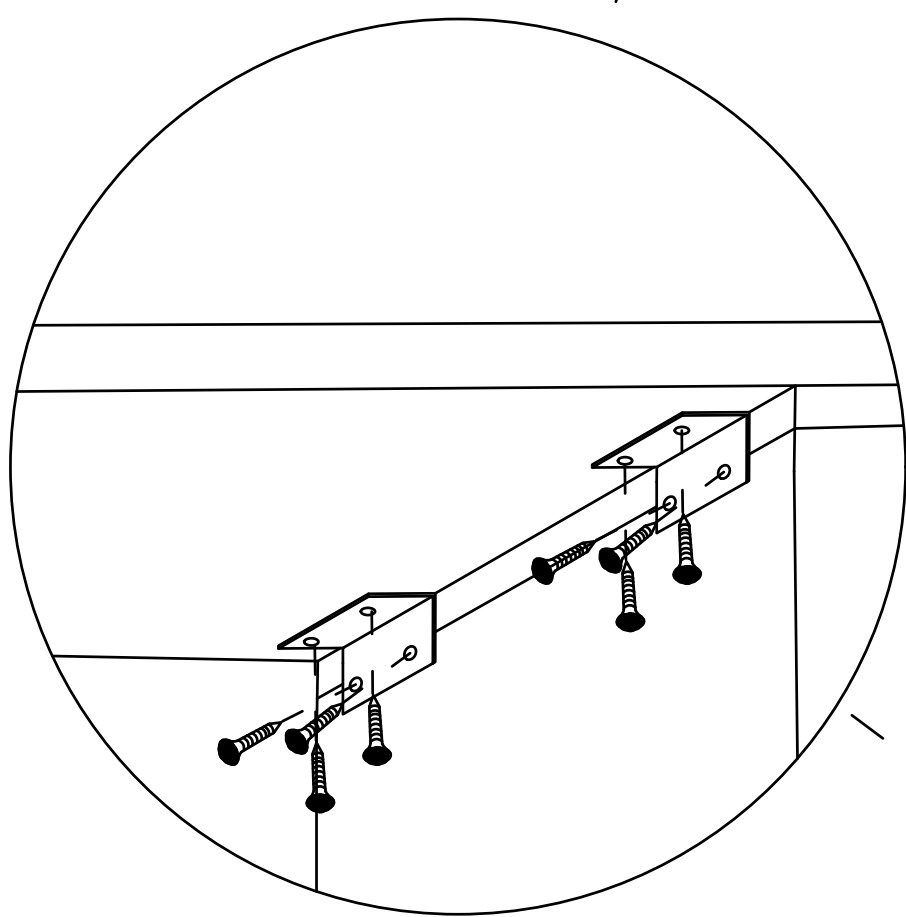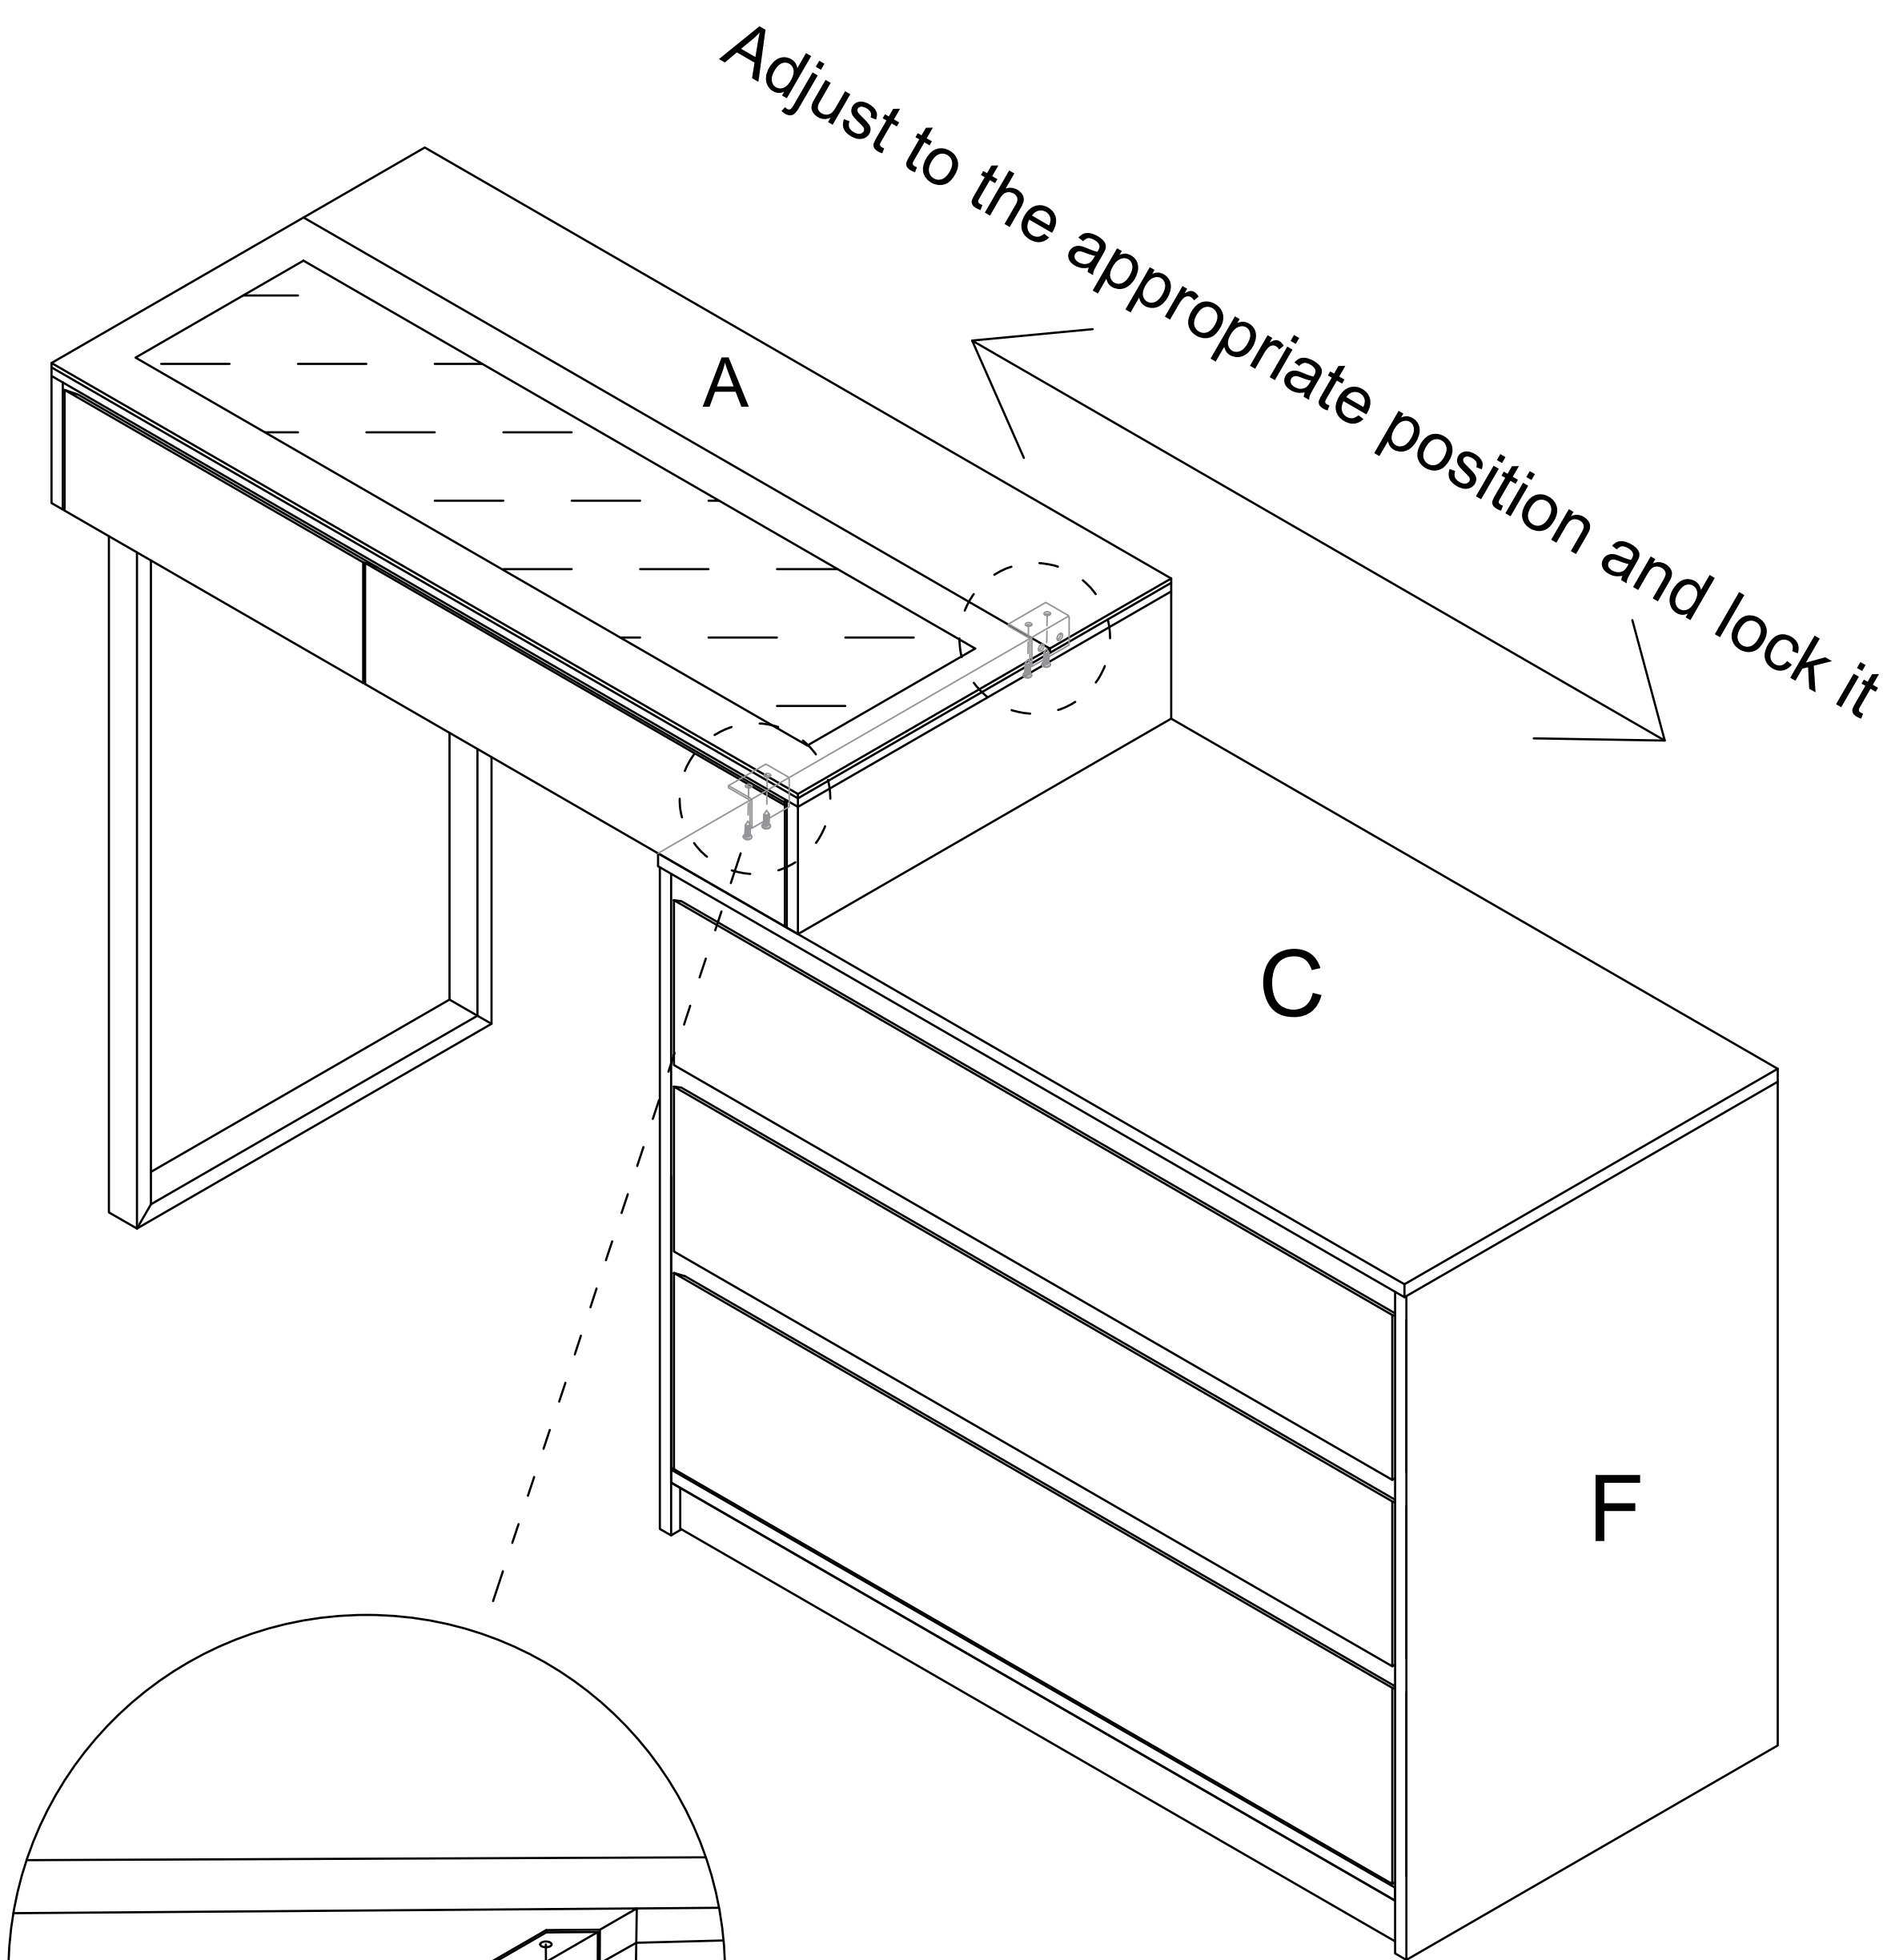

Step 36

The placement effect of Effect 2

9



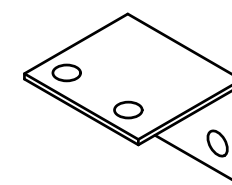


x2



x8


Adjust to the appropriate position and lock it

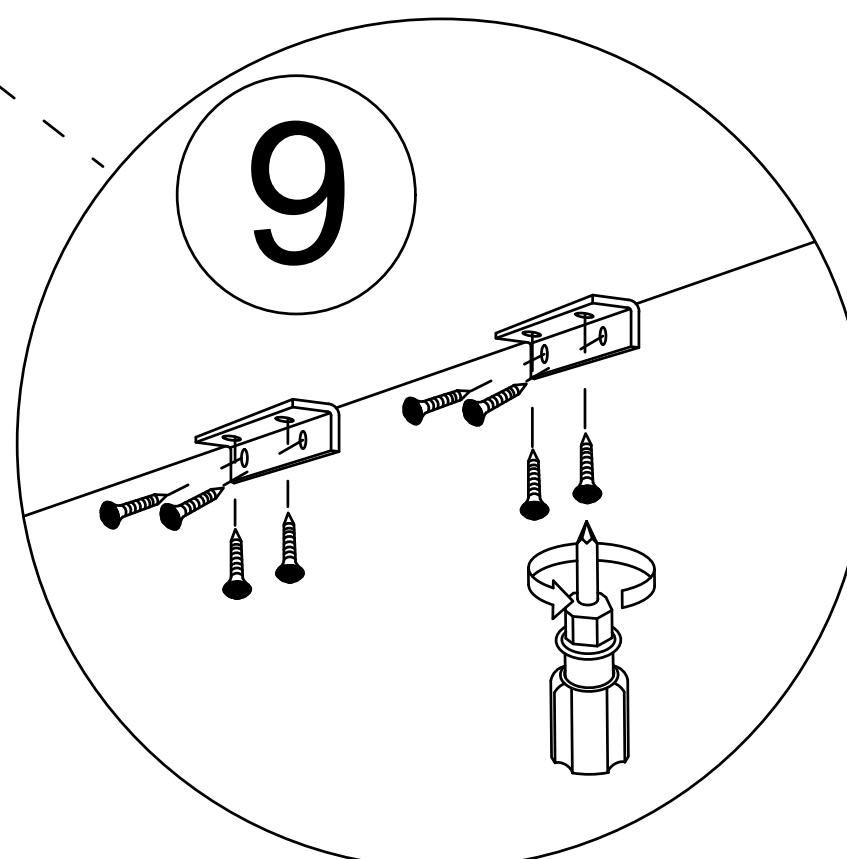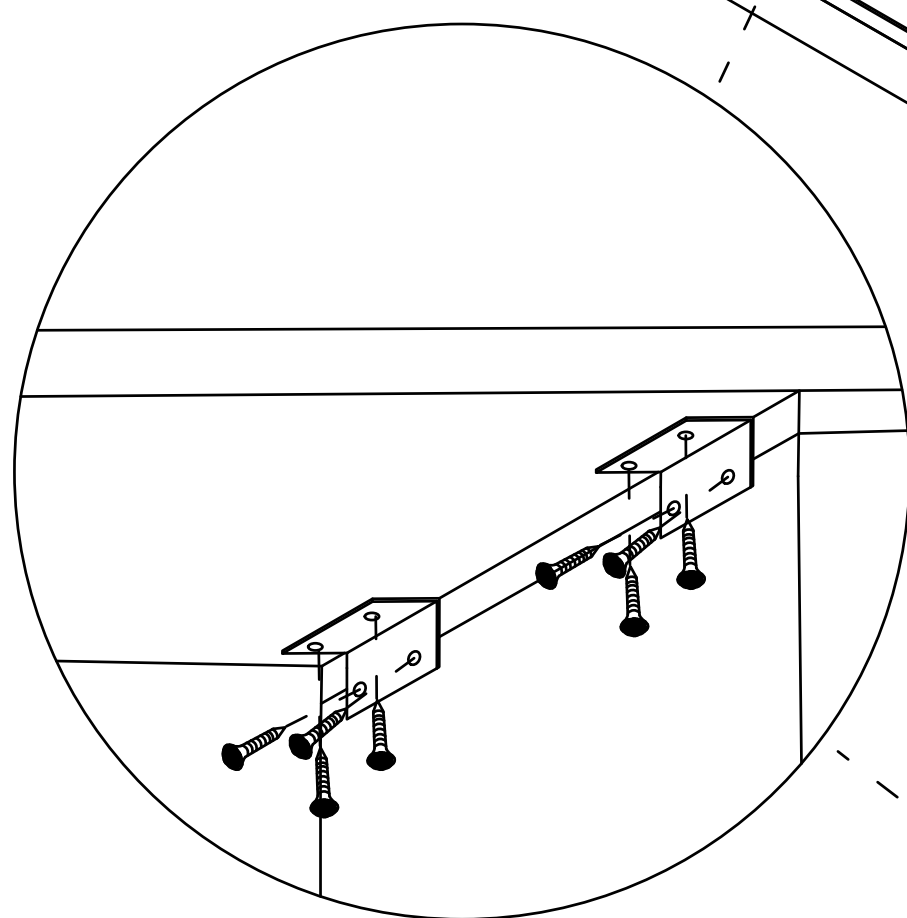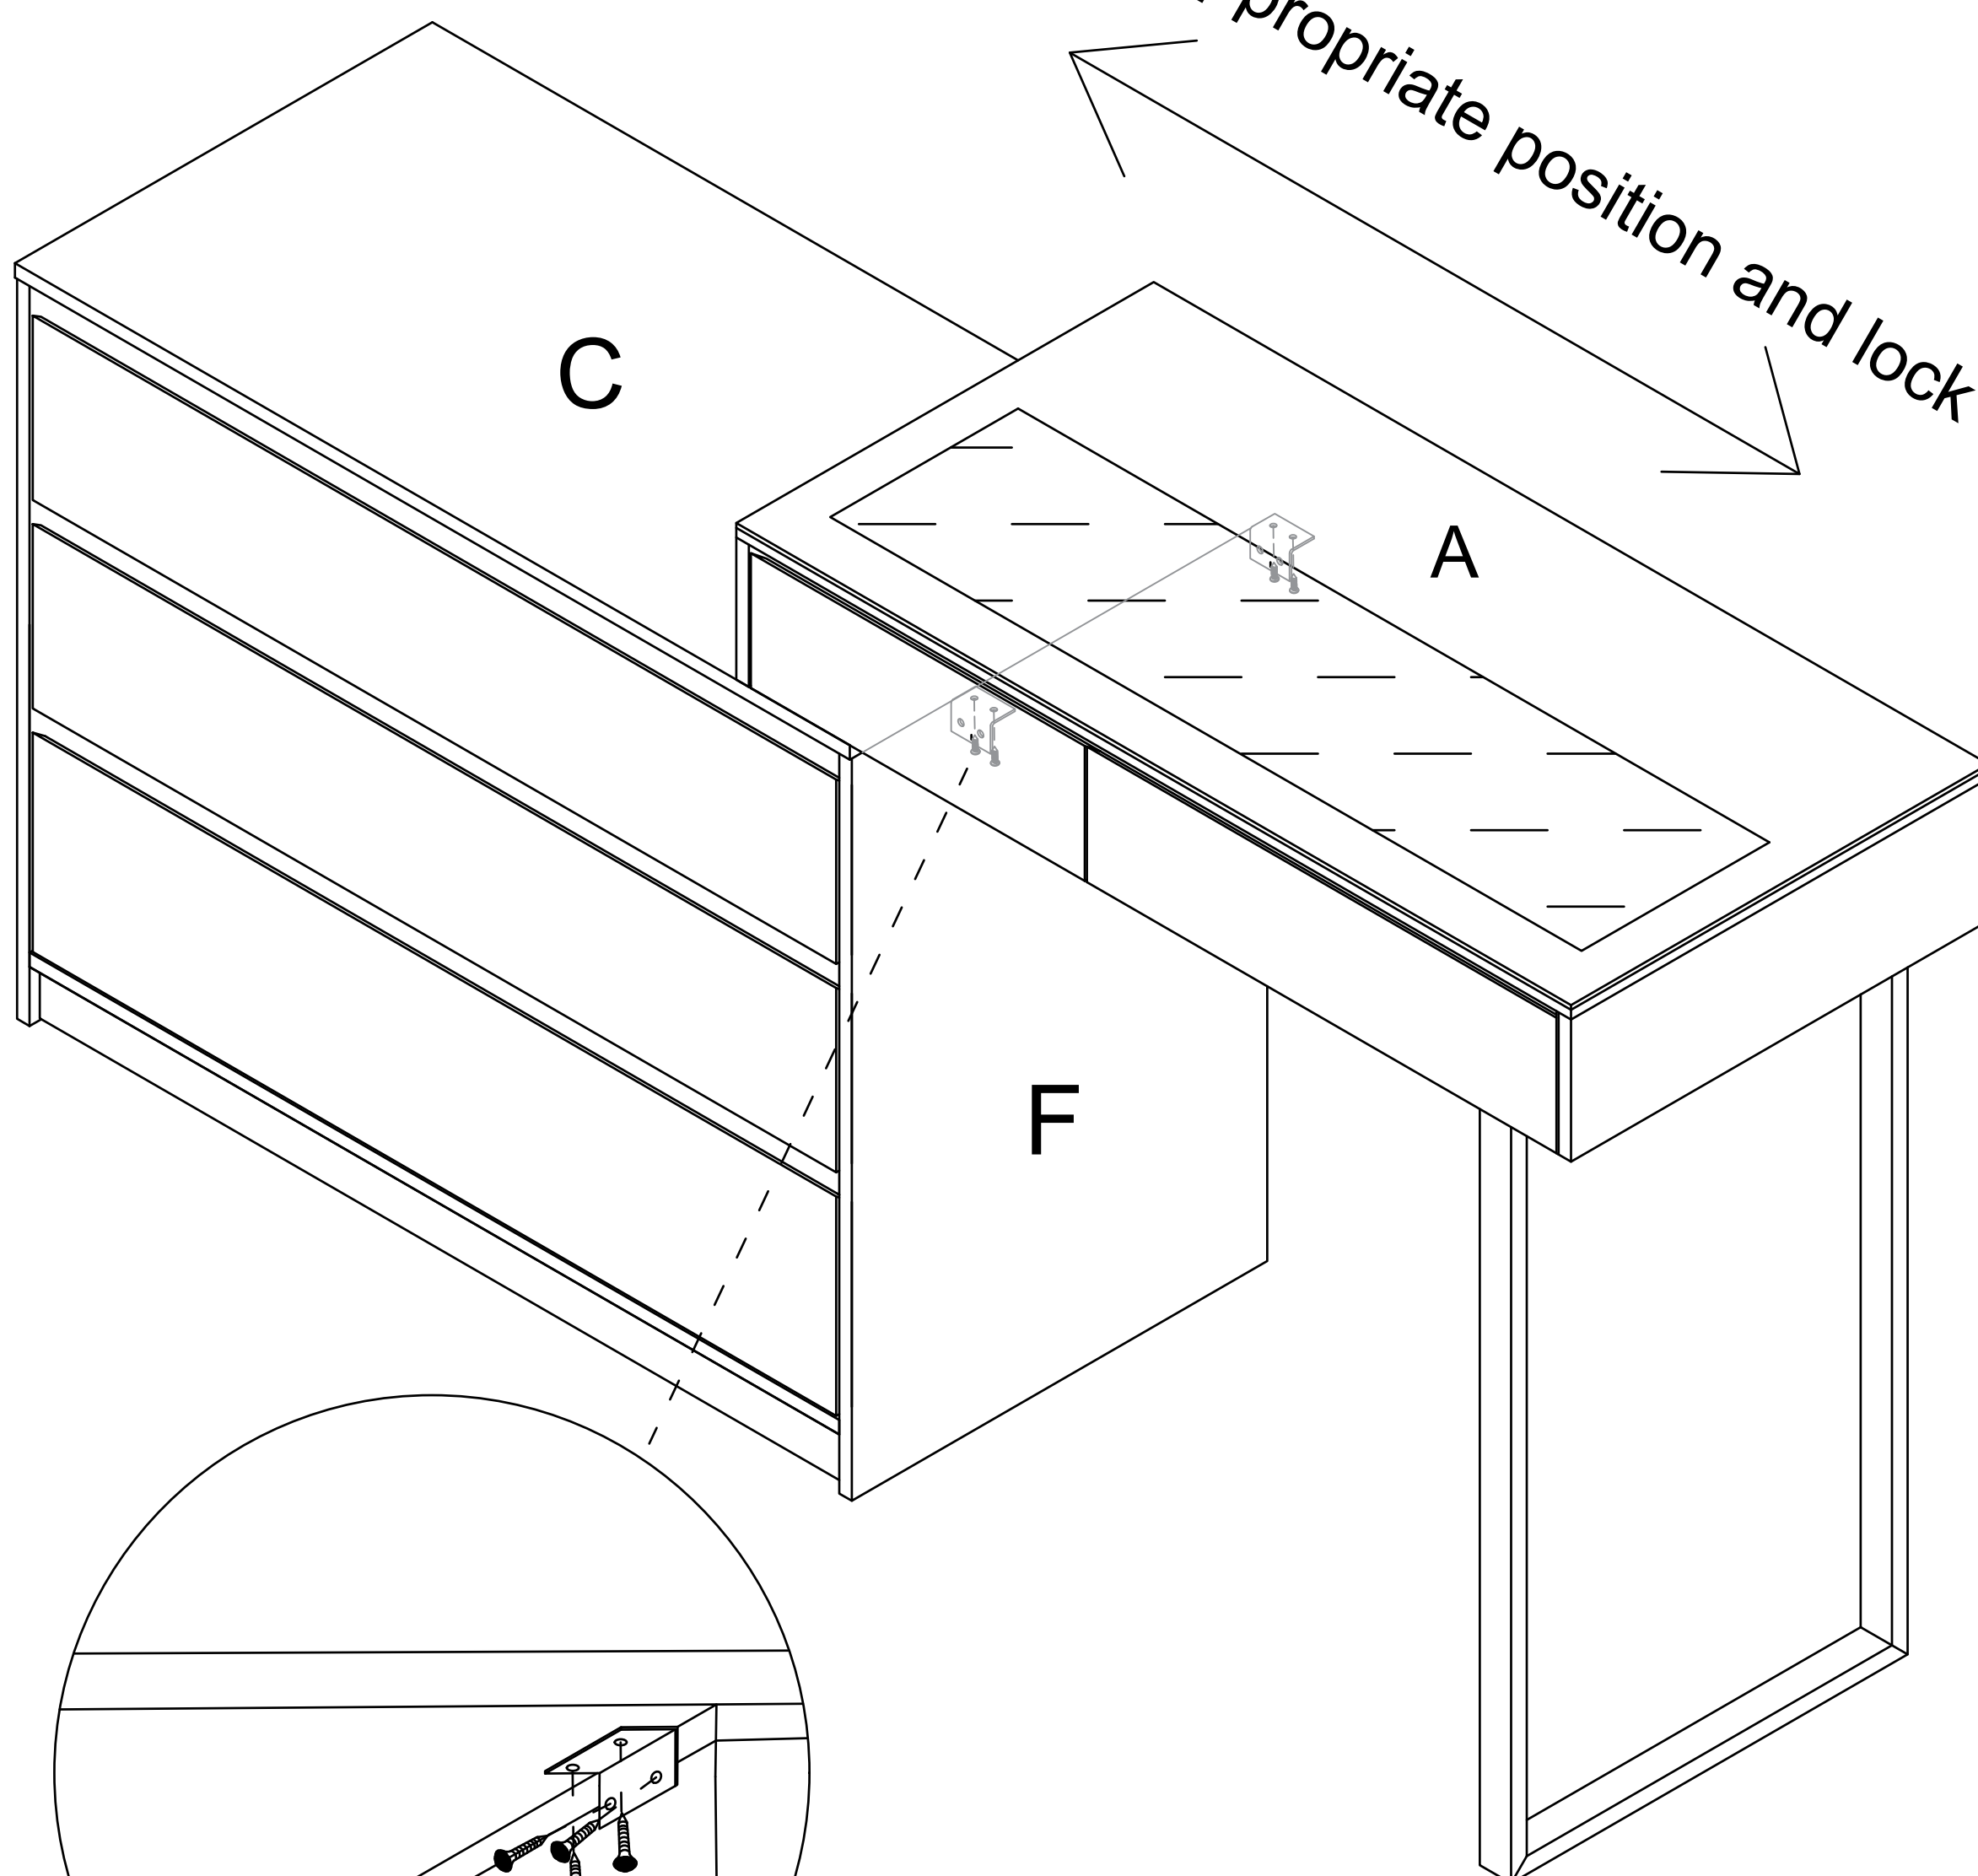

Step 37

The placement effect of Effect 3

9


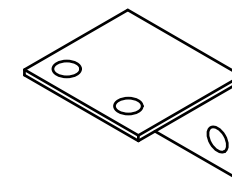


x2



x8


Effect 3: The minimum width here cannot be less than 10 cm

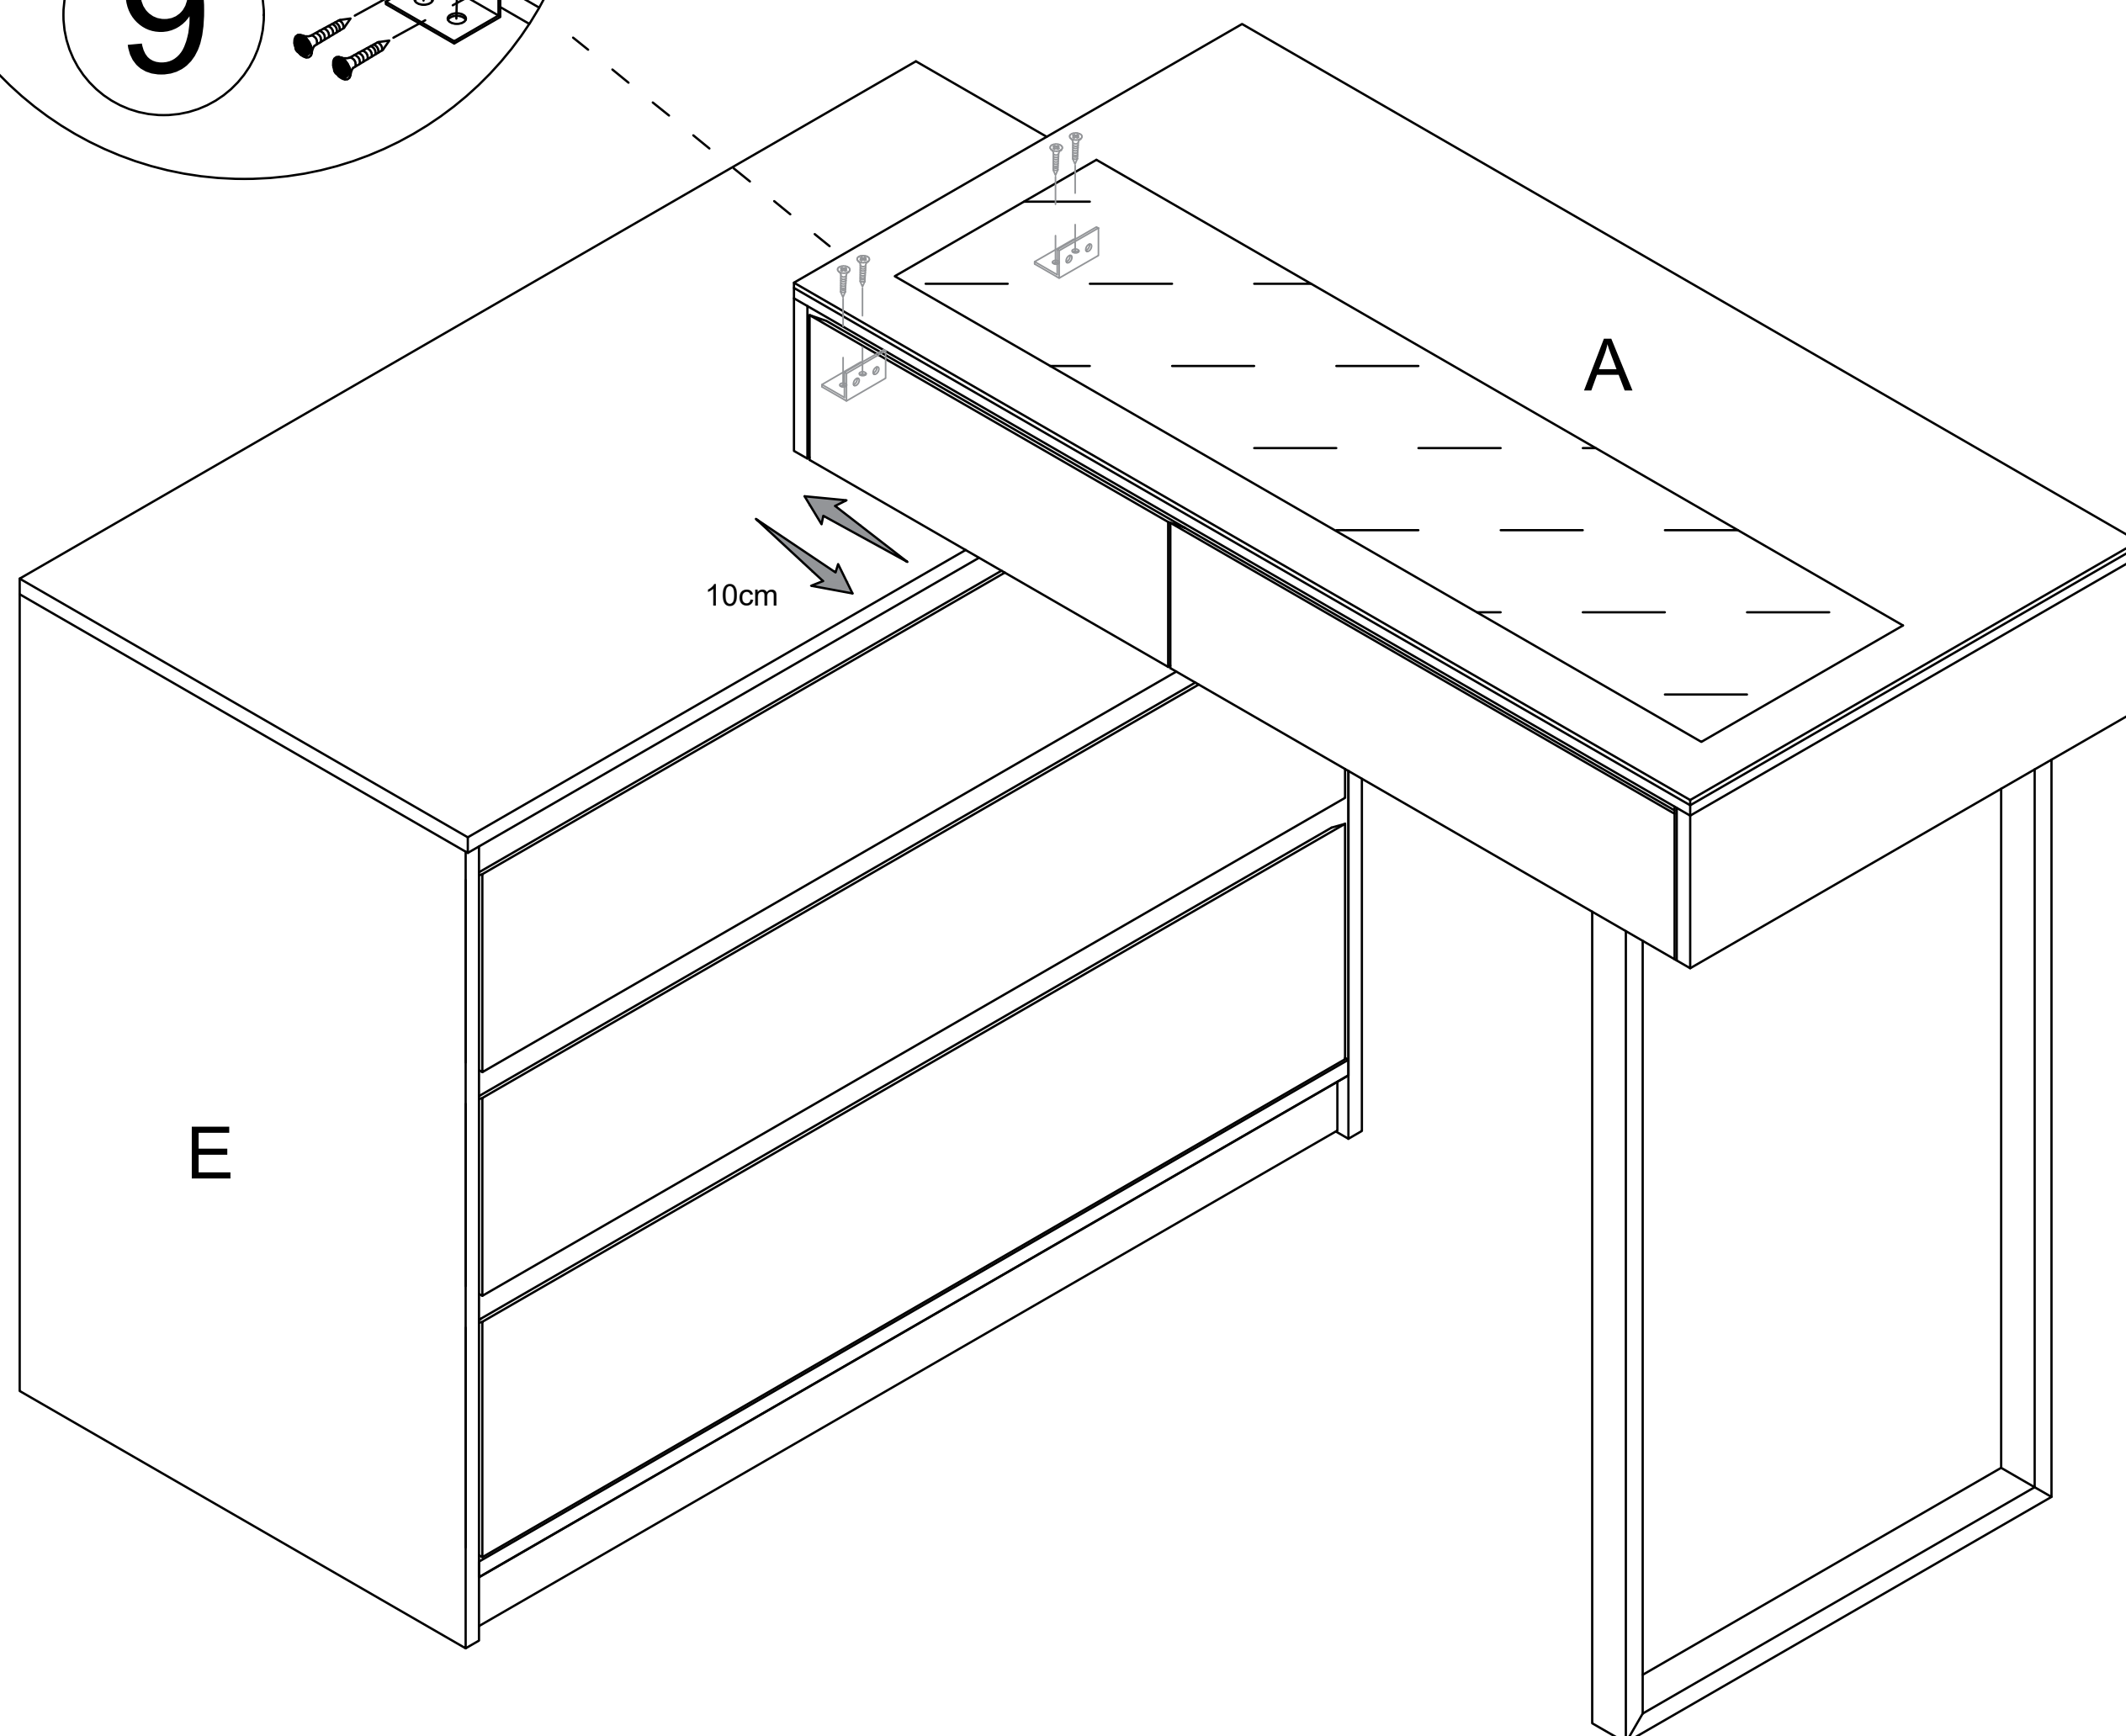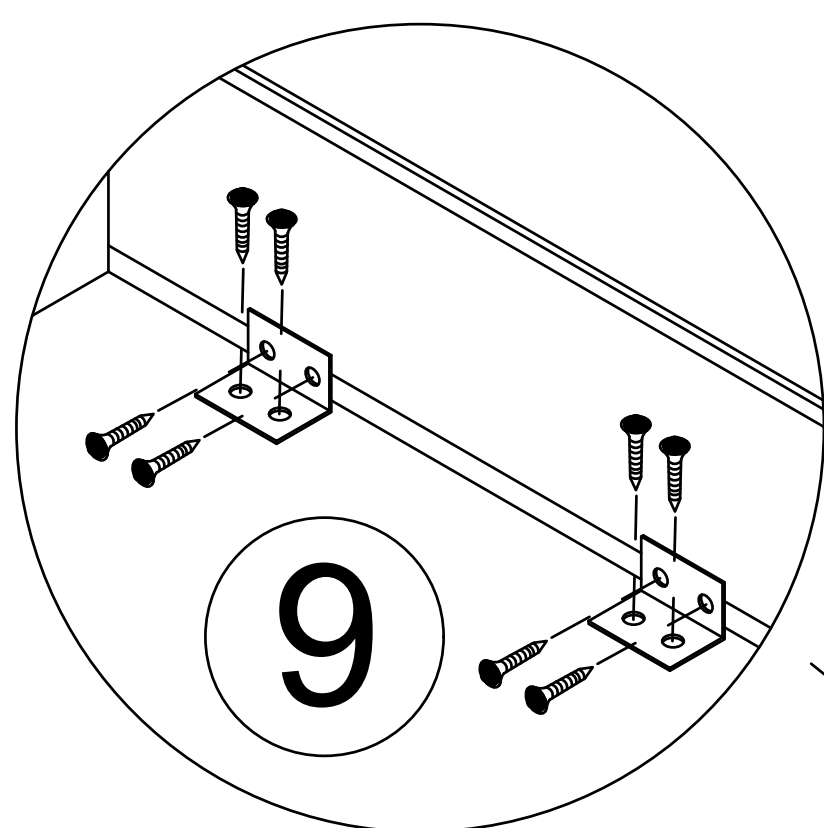

Step 38



The placement effect of Effect 4

9

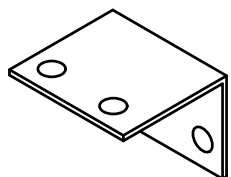

x2


x8


Effect 4: The minimum width here cannot be less than 10 cm

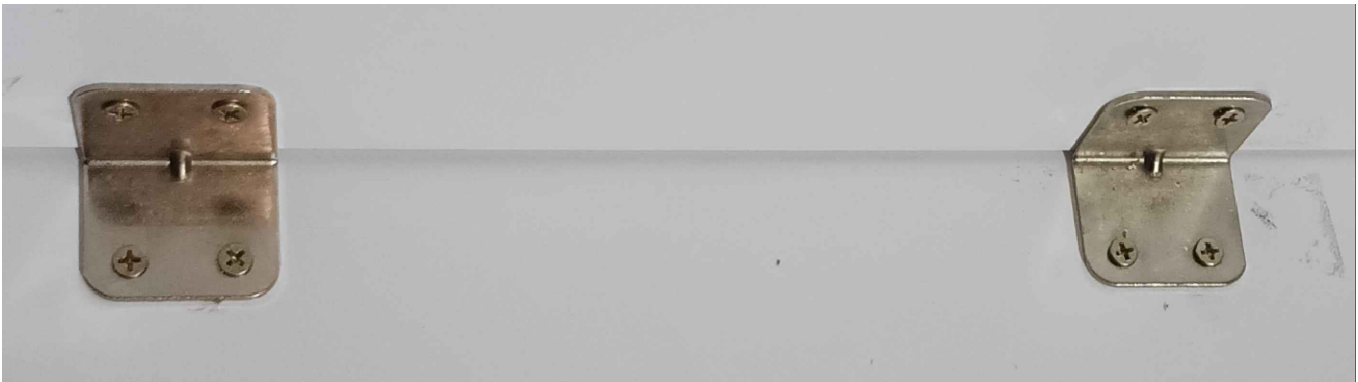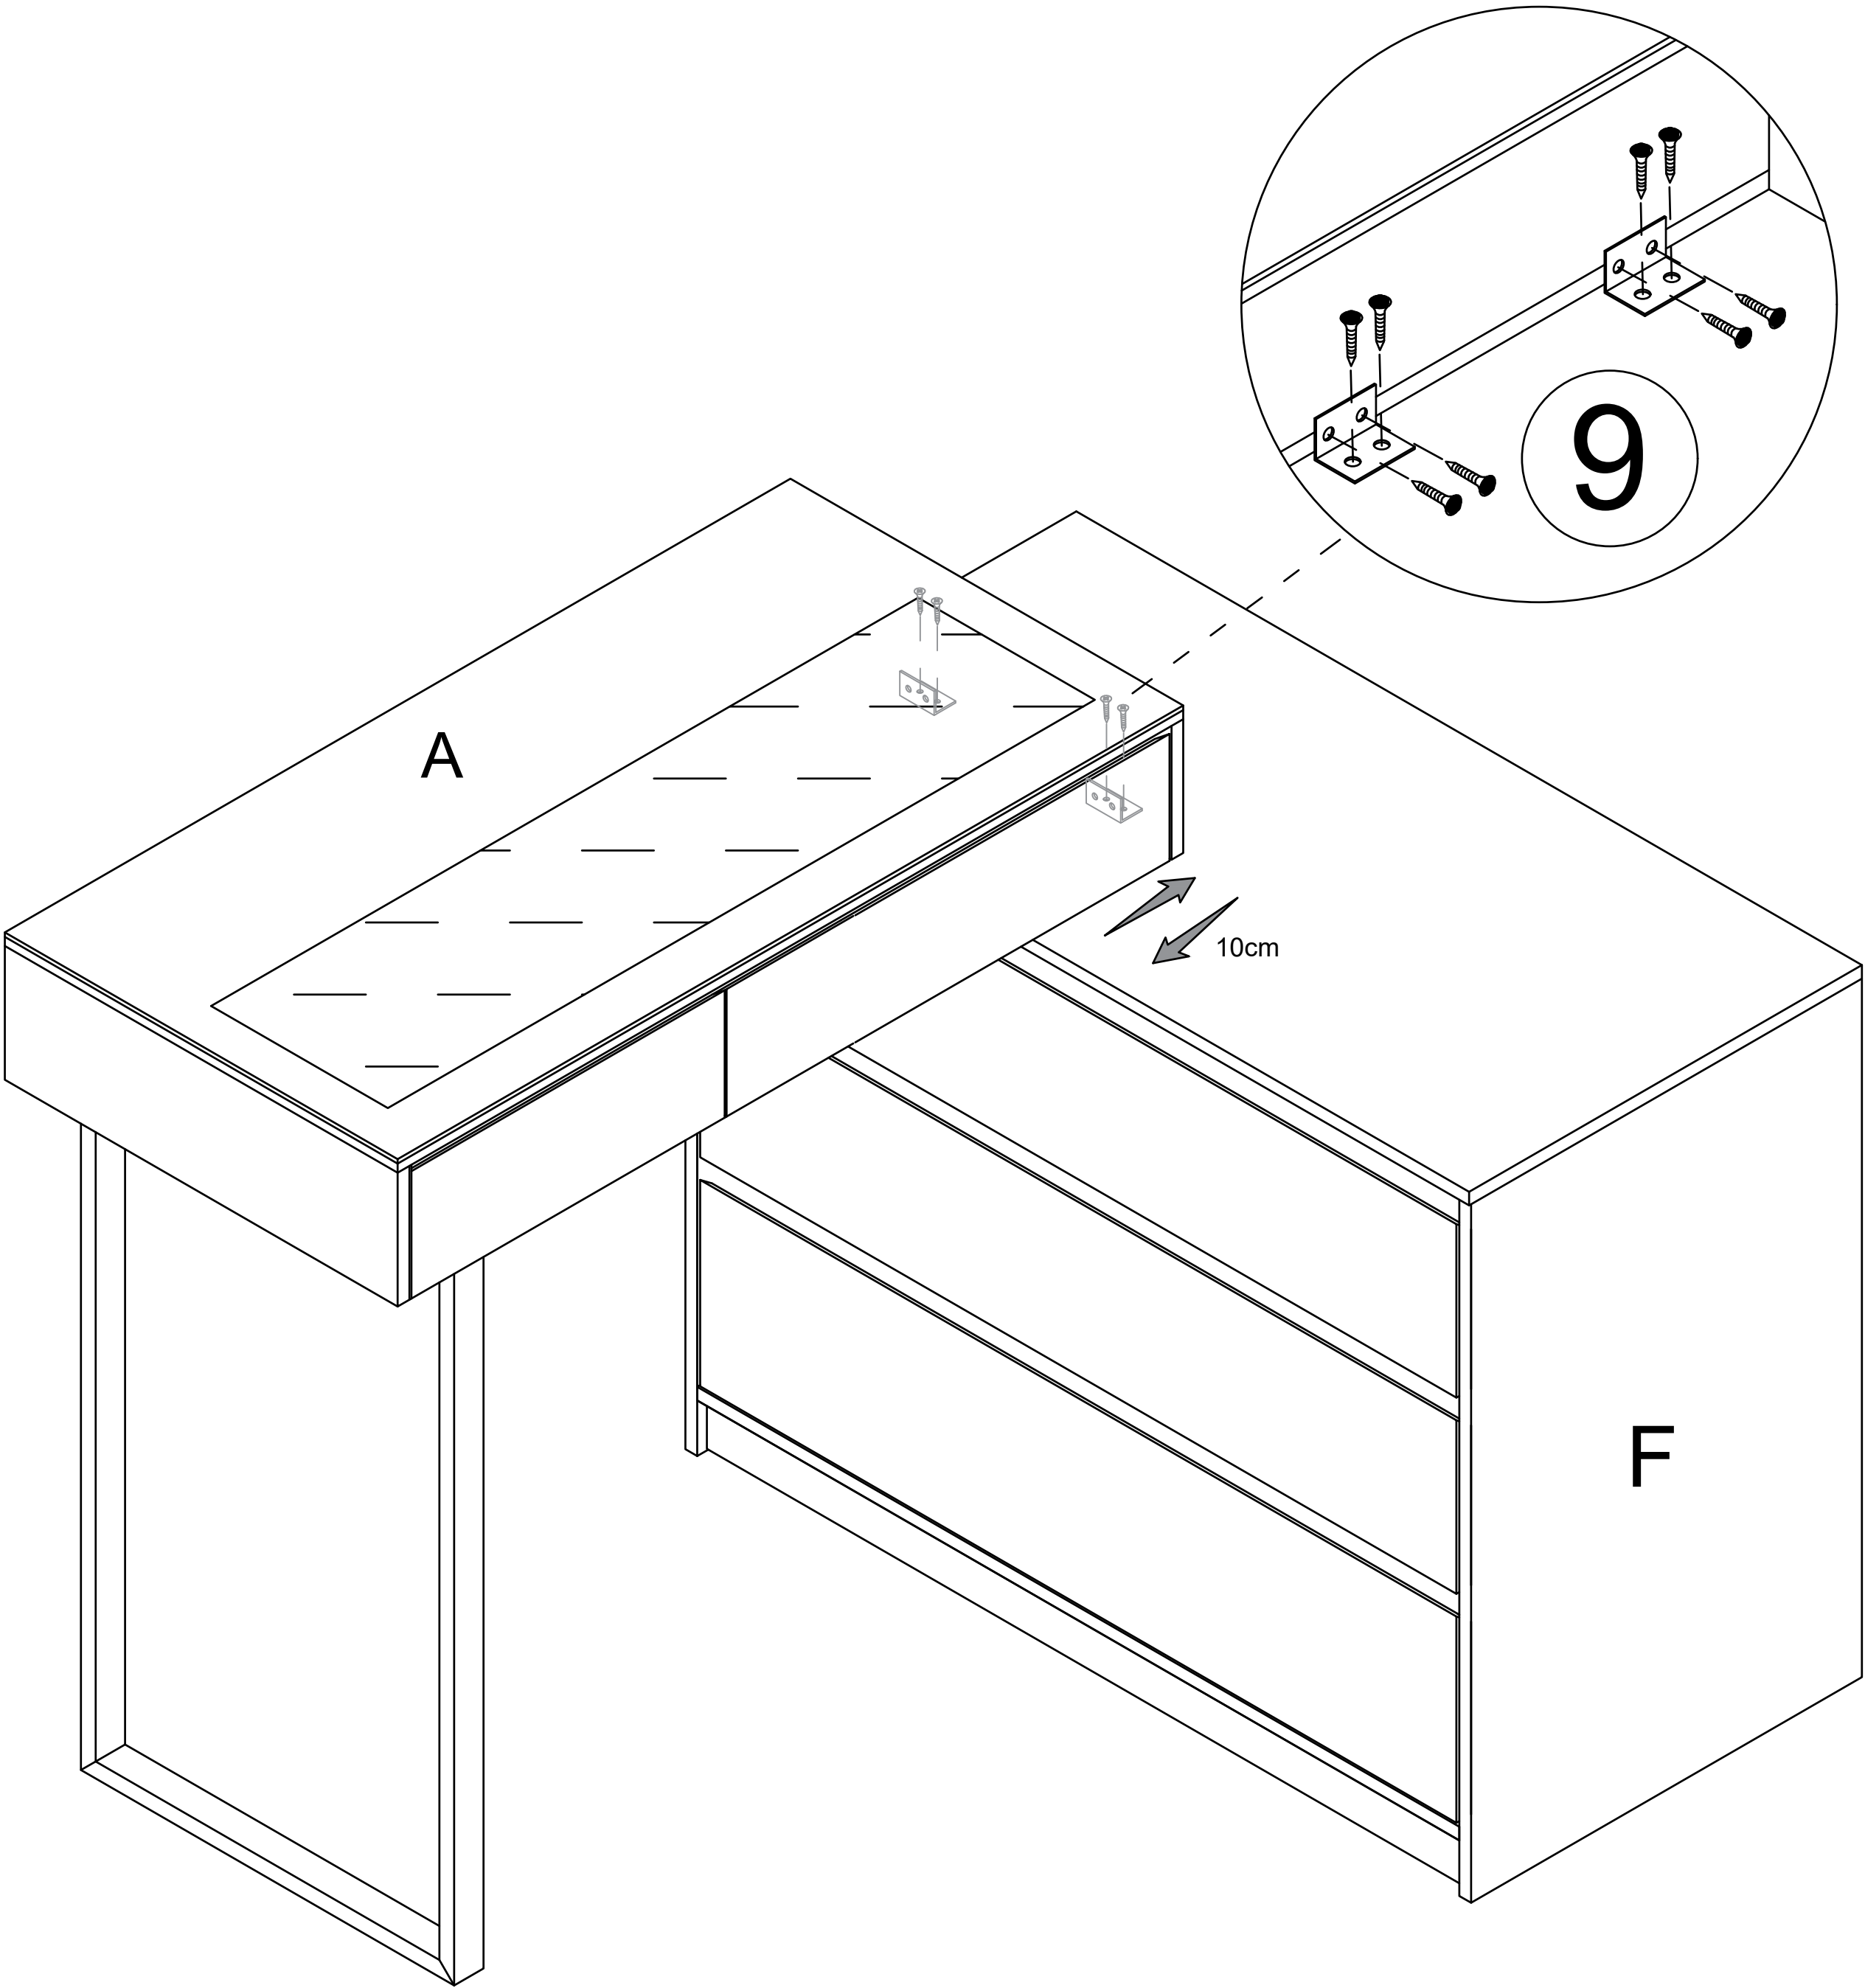

Step 39

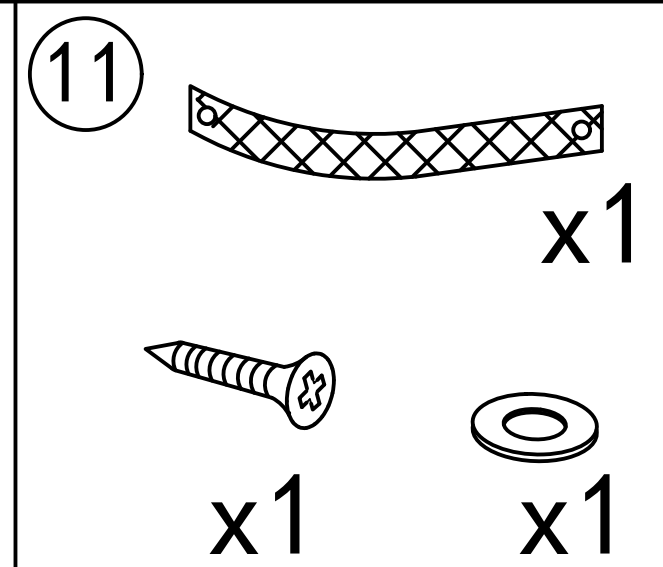



Choose installation as needed

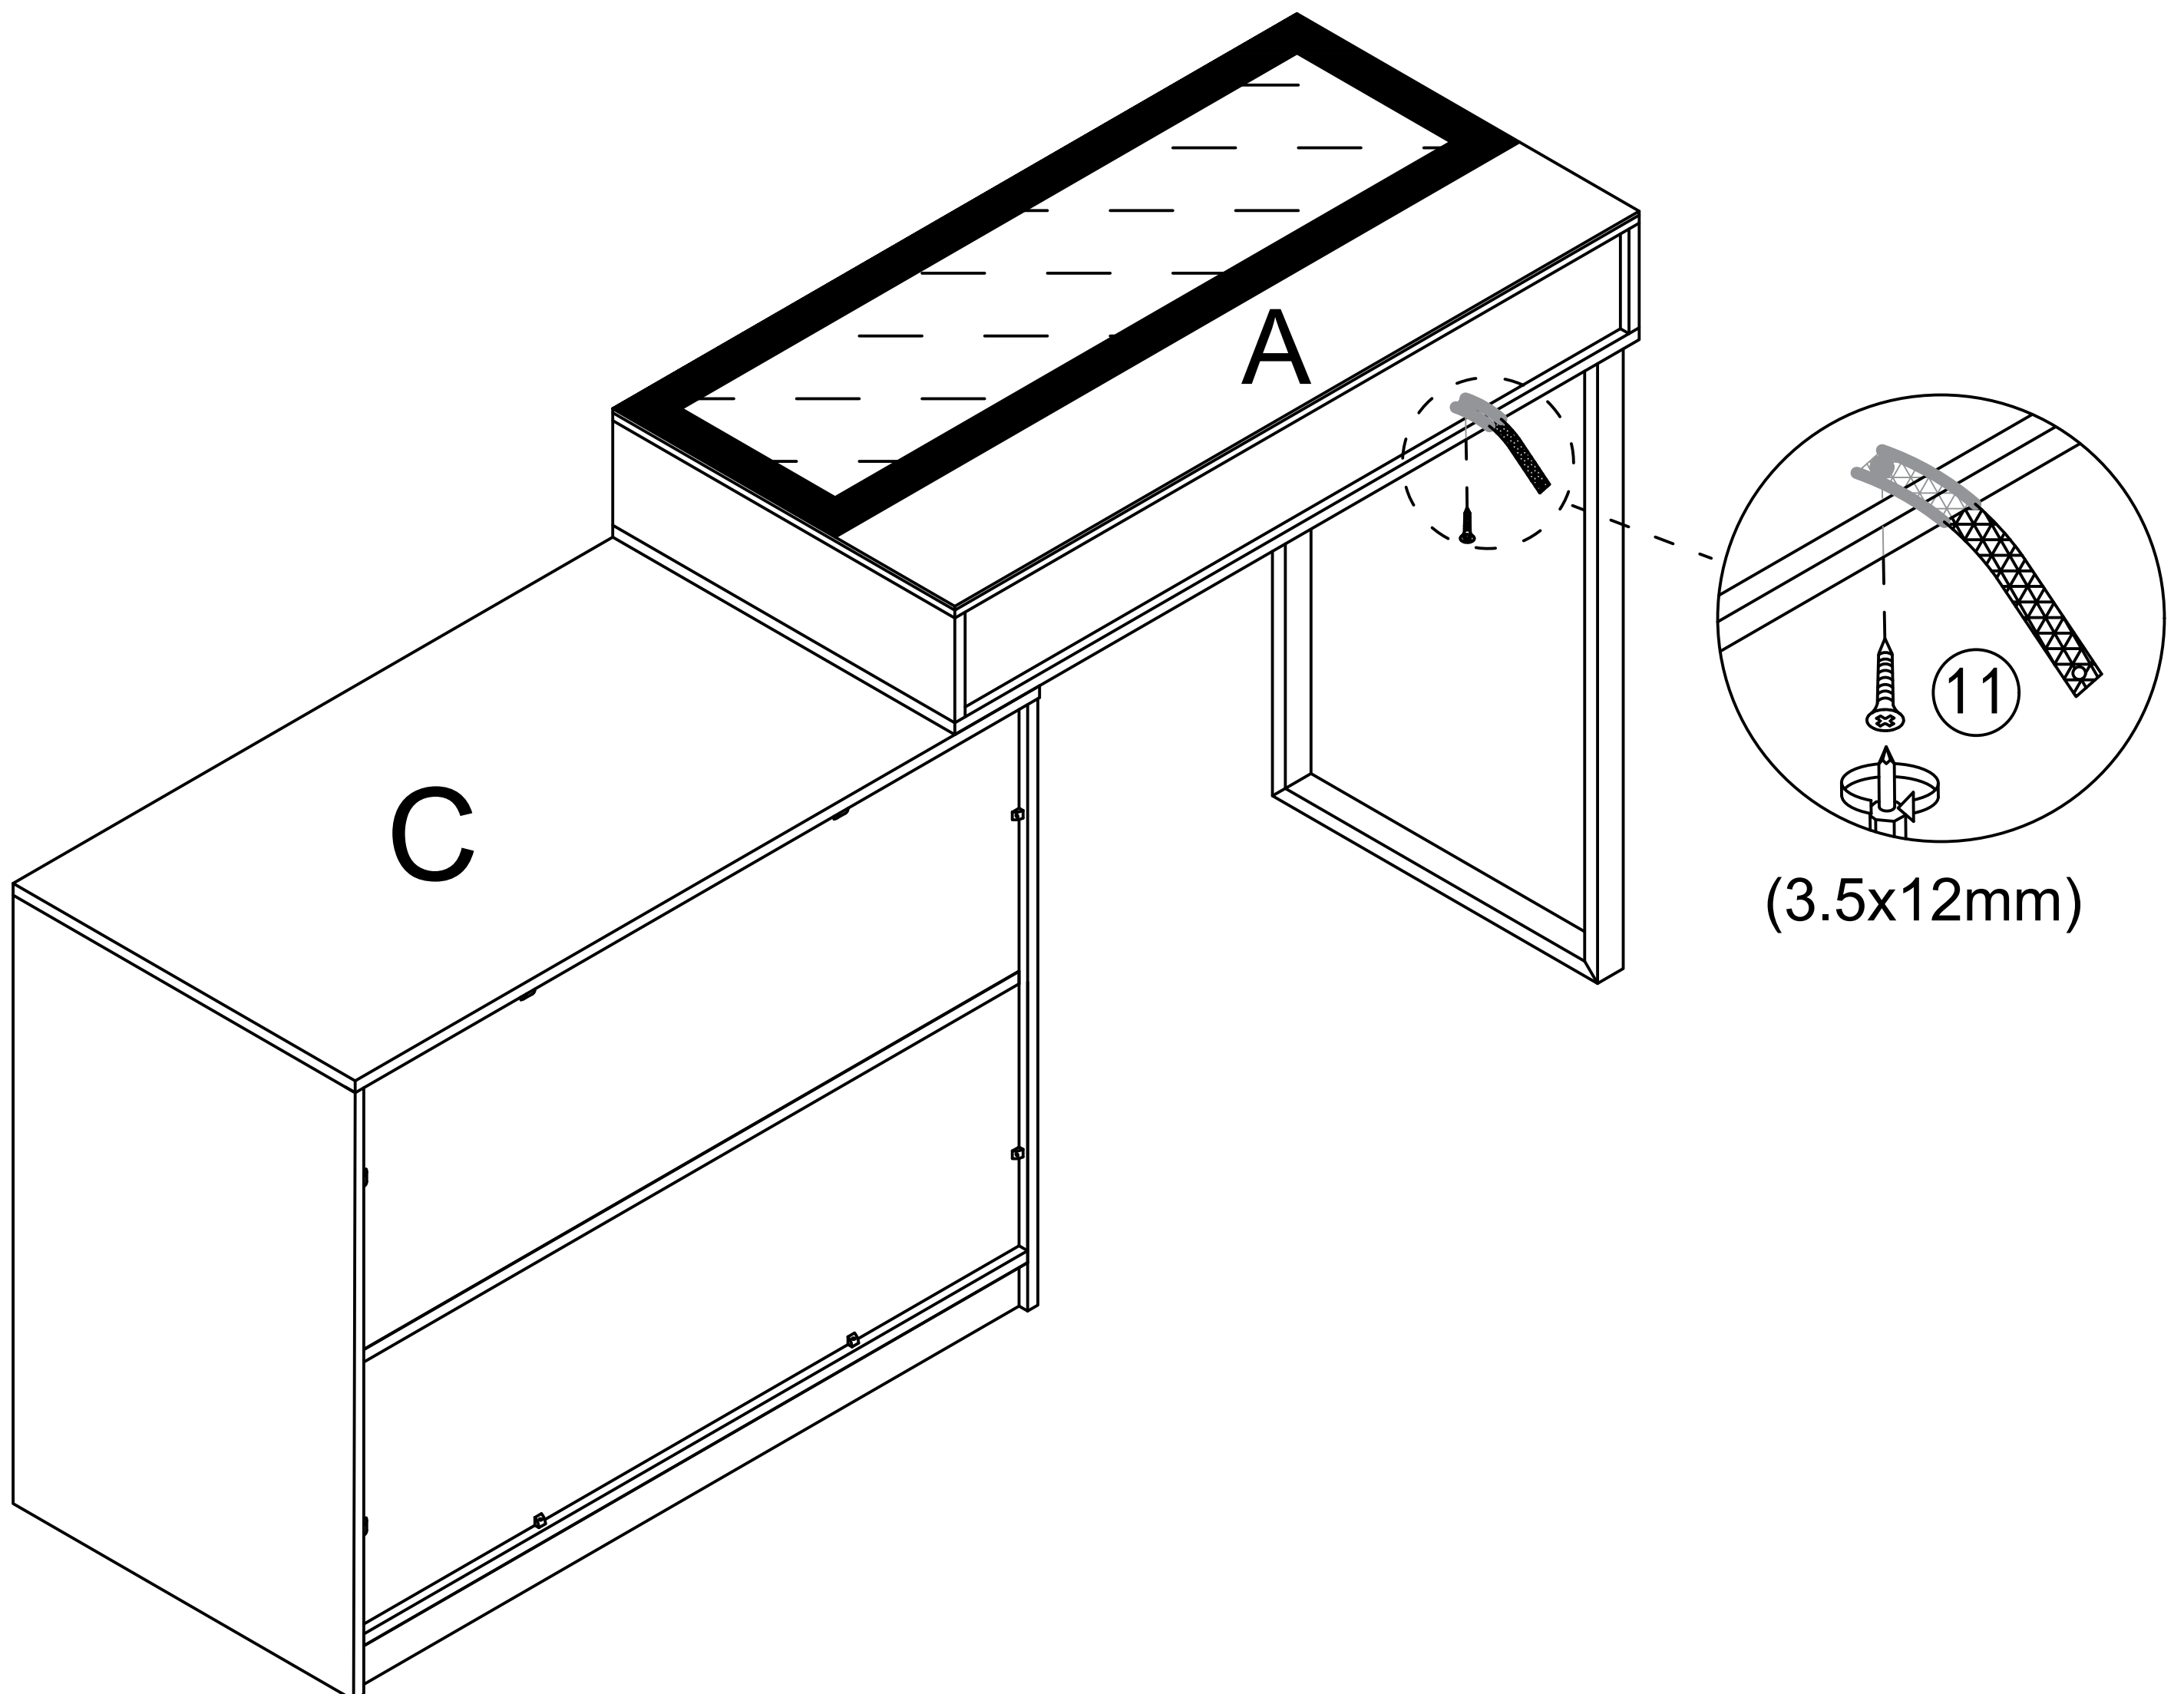



Install anti rewind tape at the edge of the board to prevent insufficient length when connecting to the wall

Step 40

Choose installation as needed

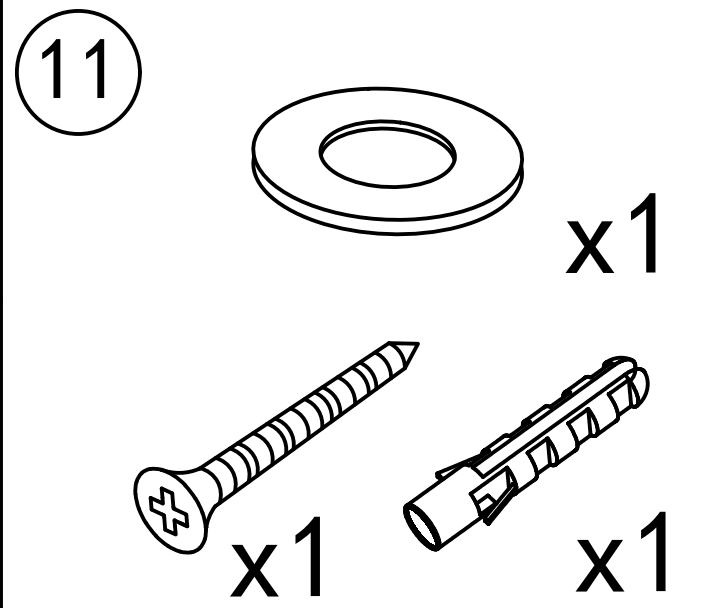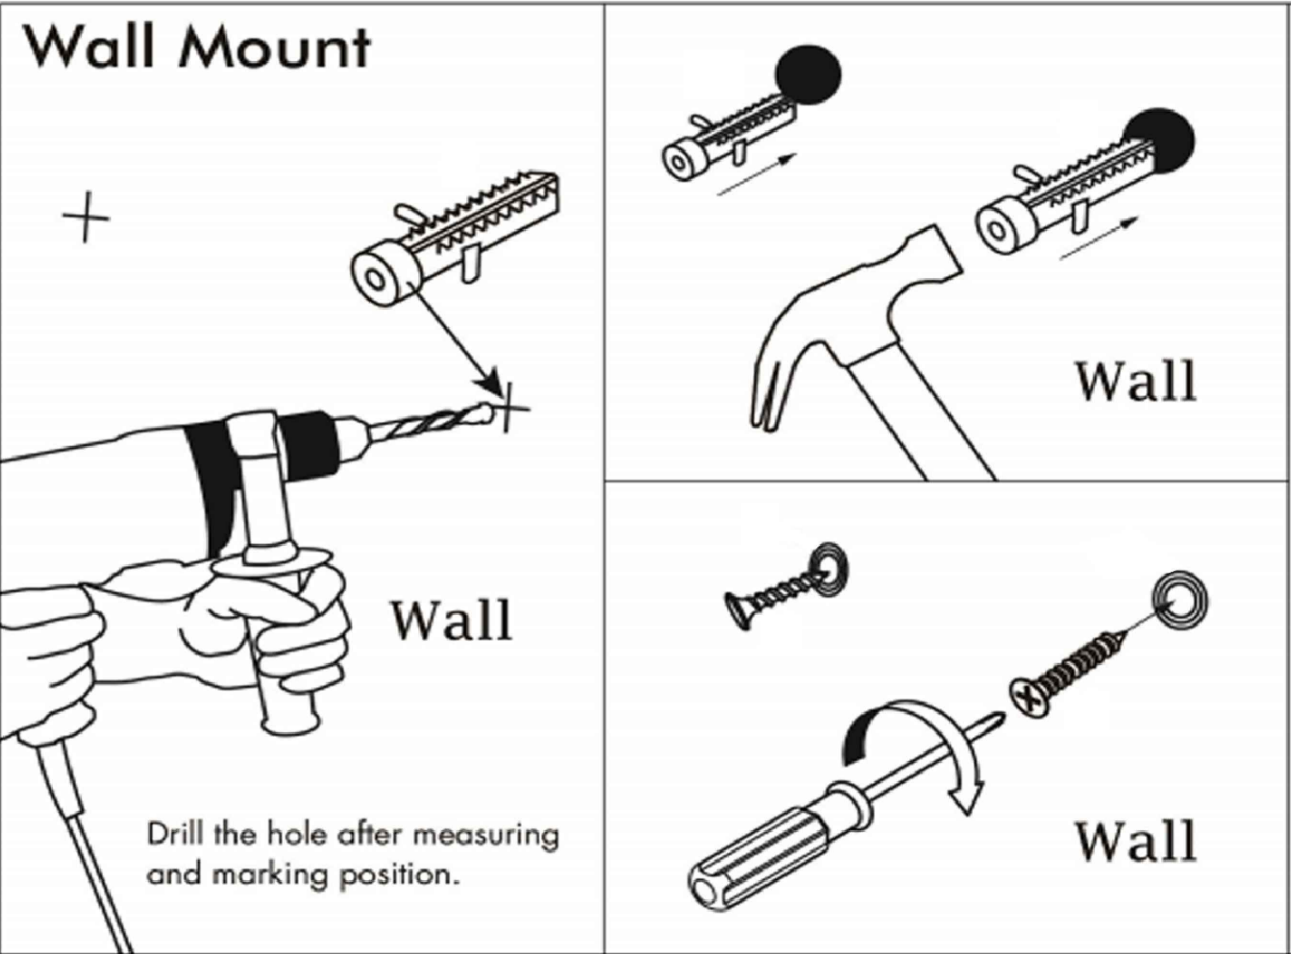


wall

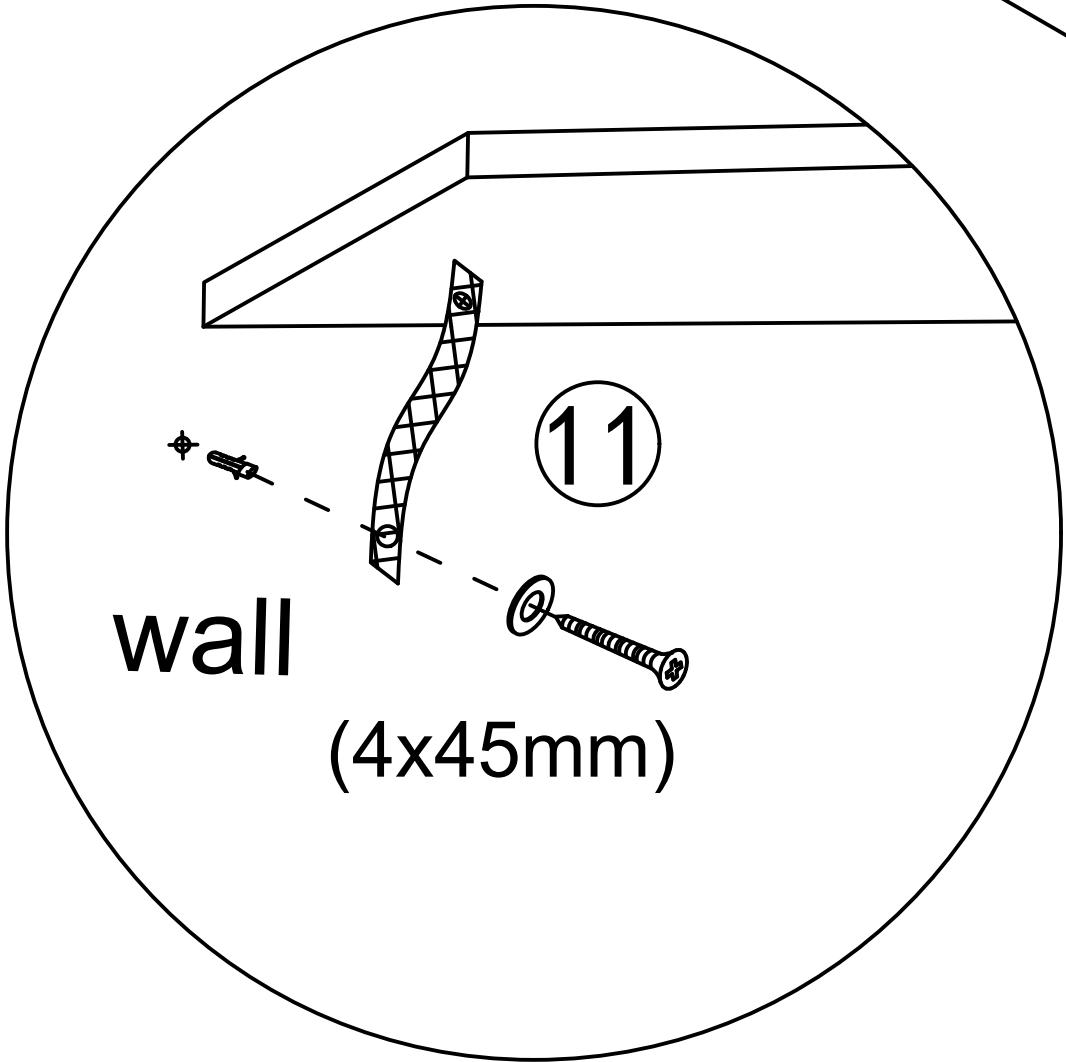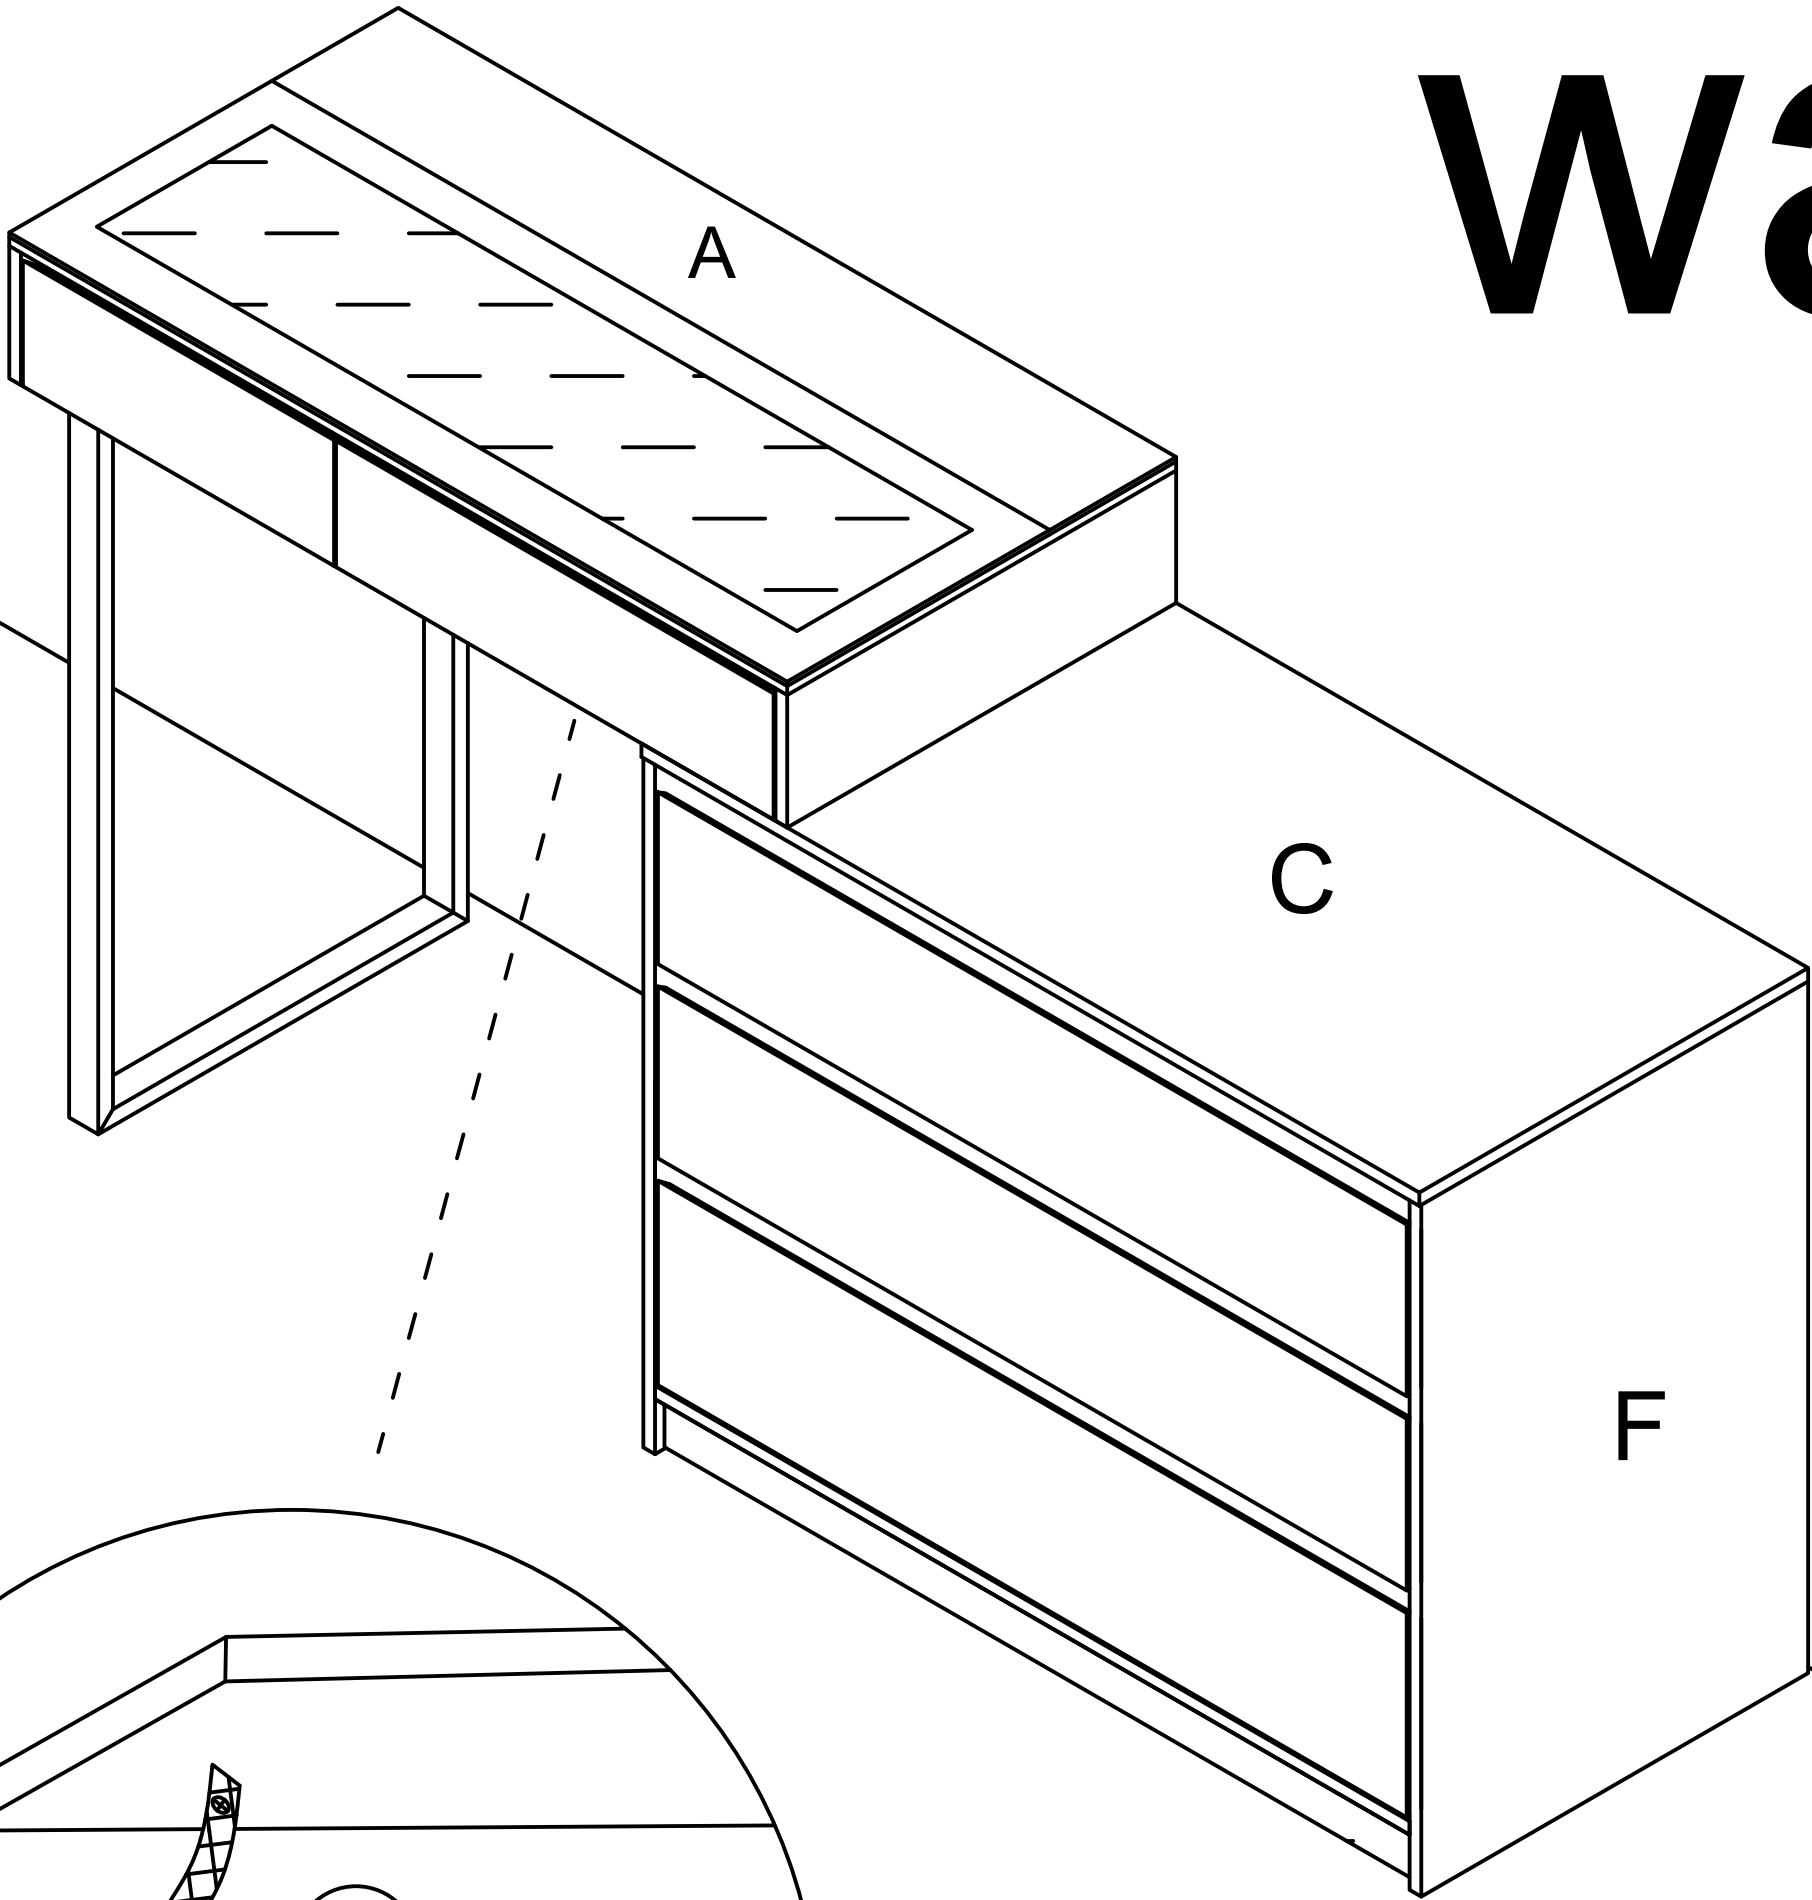


Step 41


8

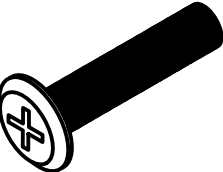



x3

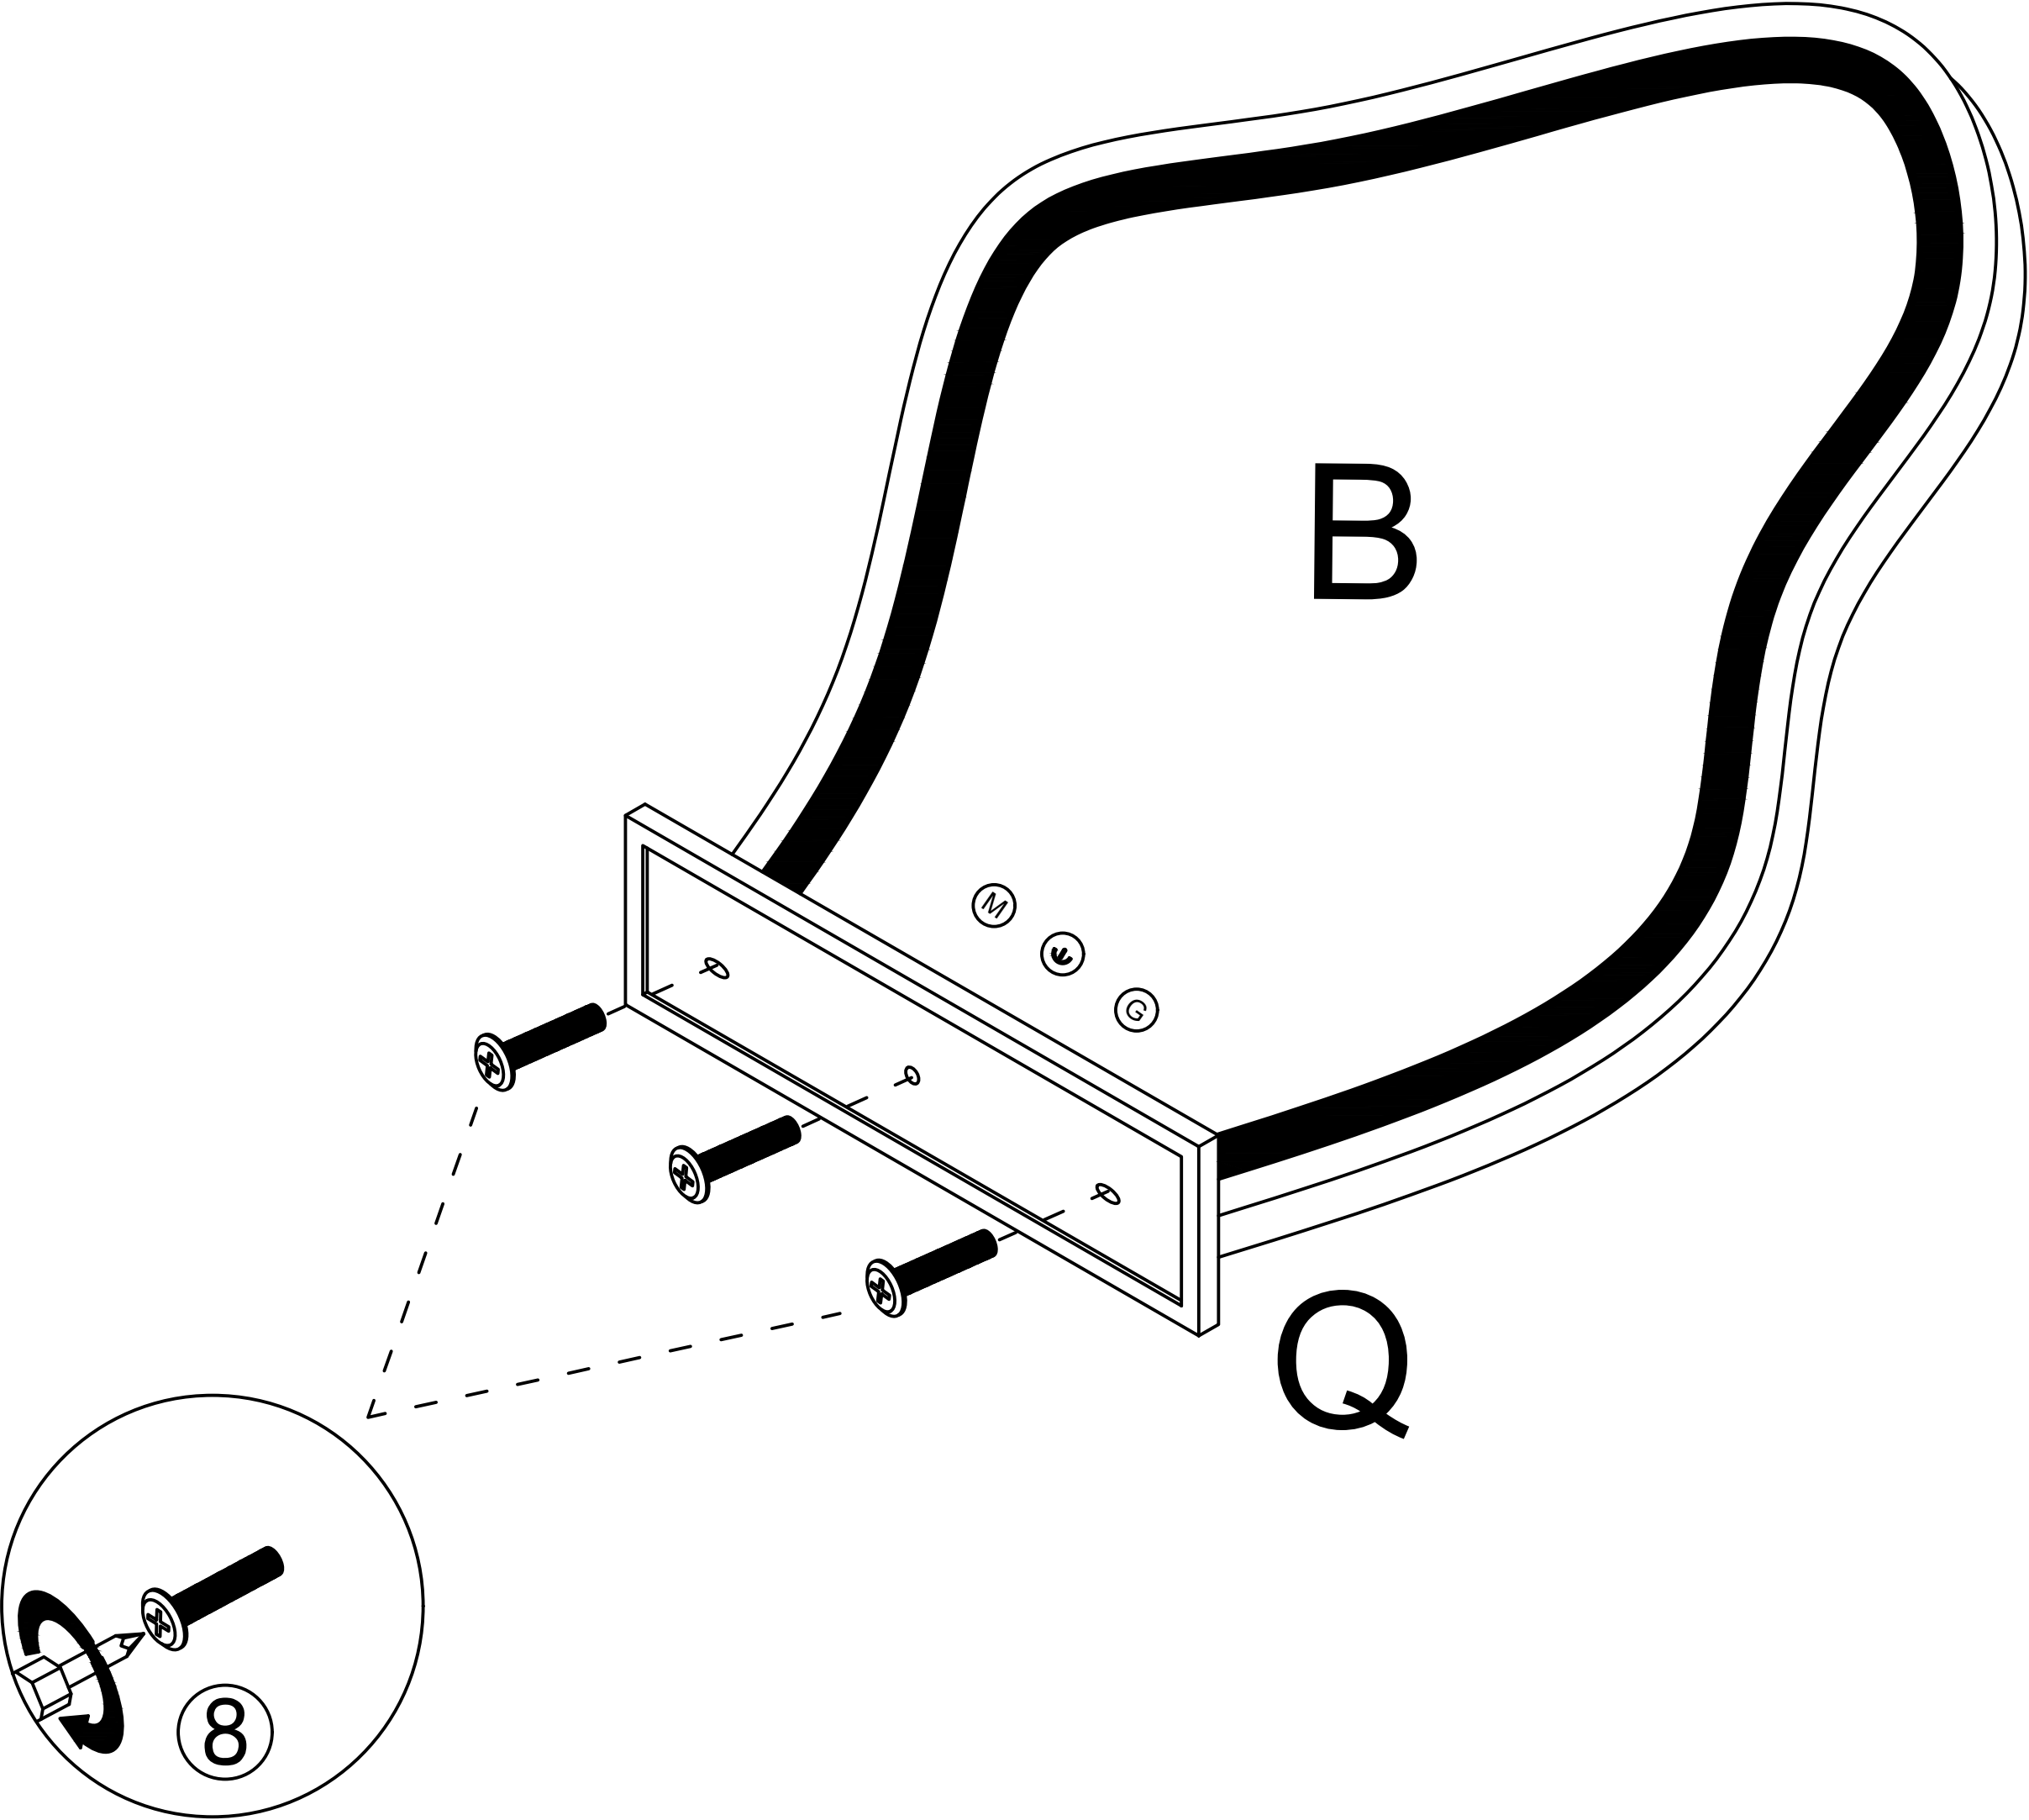

Step 42

10  x1

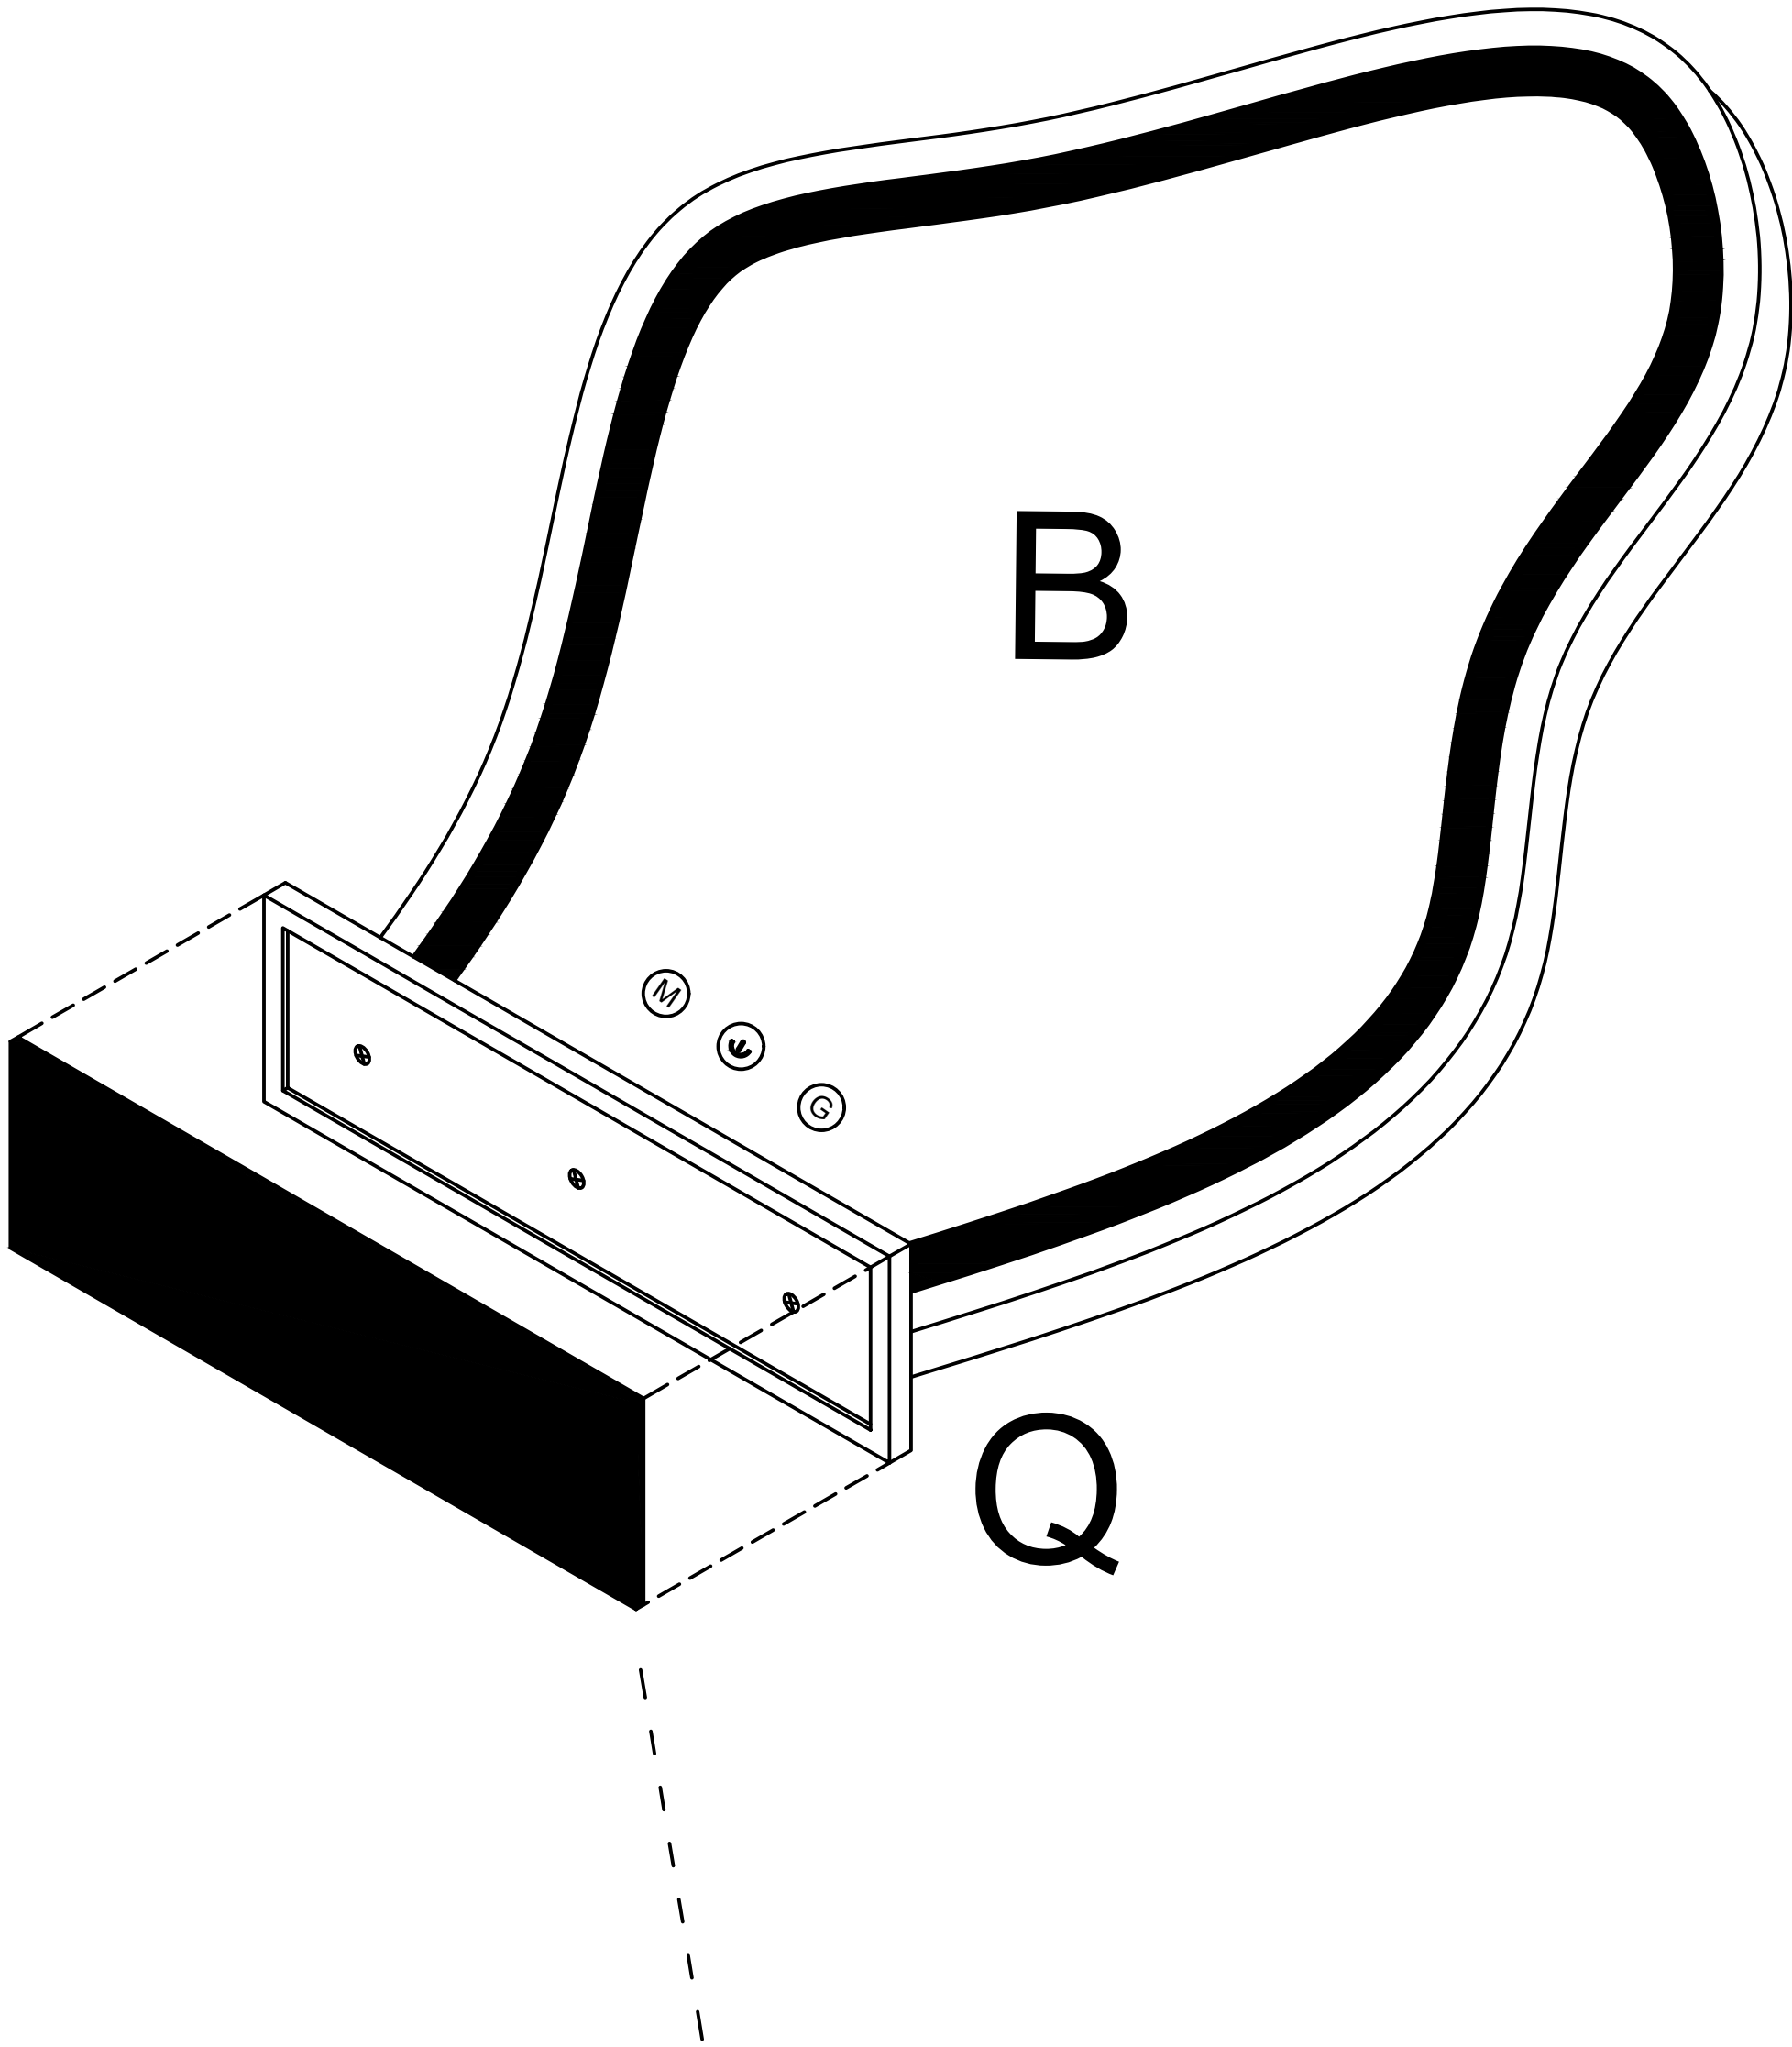


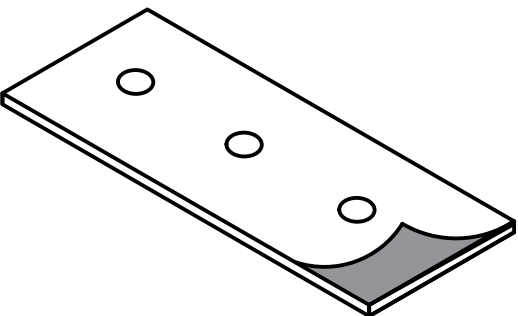

10

Tear off release paper and stick the black foot pad on the board

Step 43

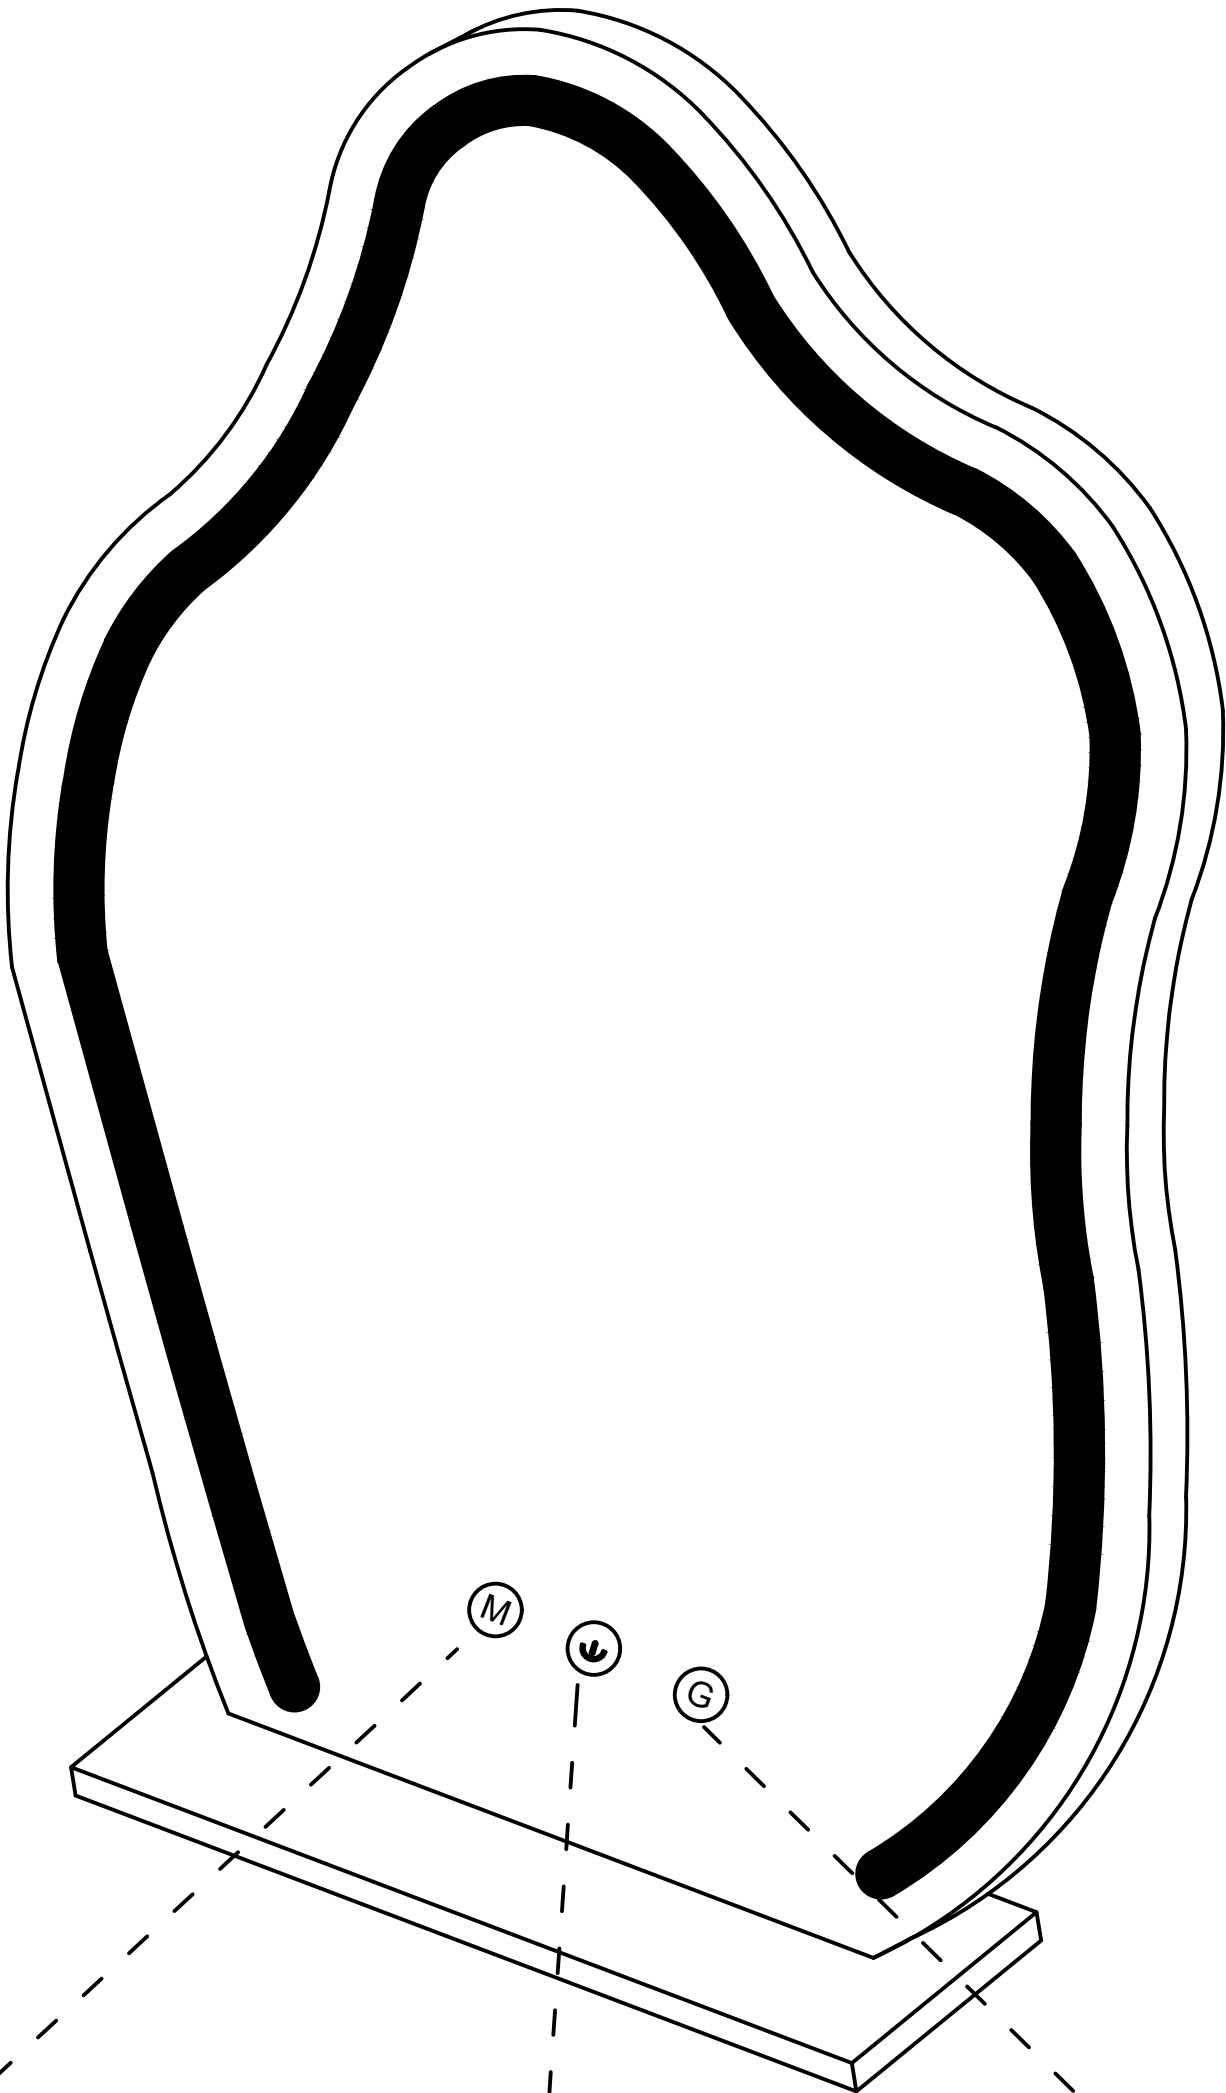

M

Discoloration

ON/OFF

ON/OFF

G

Brightness adjustment

Step 44

