

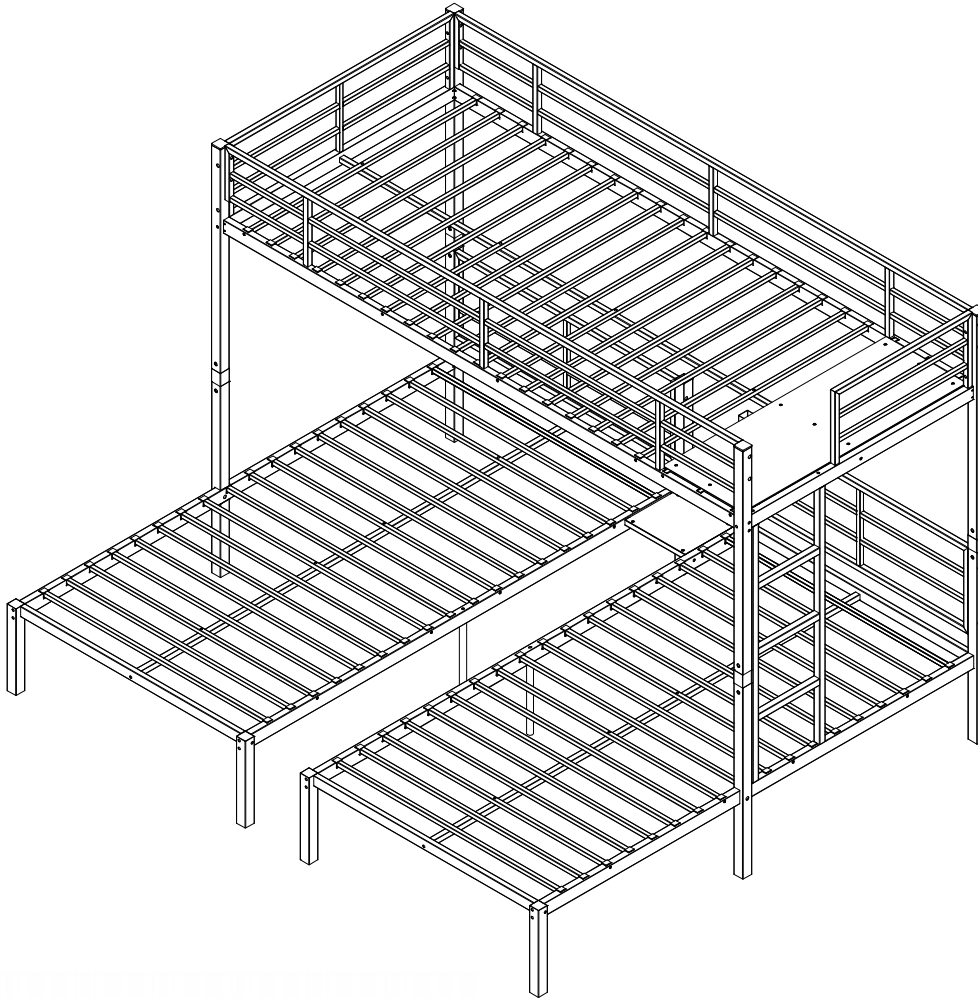


ASSEMBLY INSTRUCTION

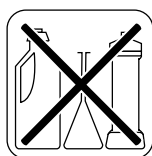

IMPORTANT NOTE

1. Please check that all parts are complete before installation.
2. Please strictly follow the installation steps to install.
3. Please install the bed on a clean and smooth surface to prevent any damage
4. Please do not use the power tools to assemble the bed.
5. Please periodically check all the fittings and re-tighten as necessary.
6. Please do not use the bed unless all bolts and screw are firmly secured

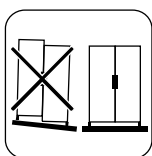

1. Repérez les pièces constituant votre meuble.
2. Regroupez et comptez la quincaillerie.
3. Munissez-vous de l'outillage nécessaire.
4. Aménagez-vous une zone de montage, la moquette ou une couverture protégera des rayures.
5. Procédez au montage, ne jamais forcer sur les assemblages, resserrez les vis après quelques temps d'usage.



FR

Gardez votre notice de montage.
Si une pièce venait à manquer elle sera le moyen le plus clair pour communiquer avec votre magasin.
Nous conseillons d'aérer la pièce lors du montage et quelques heures après.

1. Identify the parts which make up your piece of furniture.
2. Gather the hardware parts and count them.
3. Have the necessary tools ready.
4. Organize a space for assembly, wall carpeting or a blanket will protect the furniture against scratches.
5. Mount the furniture, never force the parts to be assembled.



EN

Tighten the screws after it has been used for some time.
Keep the assembly instruction since it will help you when you get in touch with the store if a part should be missing.
We advise ventilating the room during installation and during few hours after.

1. Localice las piezas que componen su mueble.
2. Reagrupe y cuente la tornilleria.
3. Prepare las herramientas necesarias.
4. Prepare una zona de montaje, la moqueta o una manta protegerá de arranazo.
5. Proceda al montaje, no forzar sobre los embalages, apretar los tornillos después de algún tiempo de uso.



ES

Guardar las instrucciones de montaje.
Si una pieza le faltase, sera la manera mas facil de comunicarse con su proveedor.
Aconsejamos ventilar la zona durante la instalación y algunas horas después.

1. Bitte überprüfen Sie, ob alle Einzelteile Ihres Möbelstücks vorhanden sind.
2. Bitte überprüfen Sie, ob alle Schrauben und Verbindungsteile für die Montage vorhanden sind.
3. Halten sie alle notwendigen Montage-Werkzeuge für ihren Einsatz gebrauchsbereit.
4. Bereiten Sie einen passenden Ort für die Montage vor. Ein Teppichboden oder ähnliches schützt vor Kratzern.
5. Beginnen Sie mit der Montage. Lassen Sie sich Zeit und fügen Sie die Einzelteile nie mit Gewalt zusammen.



DE

Um einen langfristigen und einwandfreien Gebrauch zu gewährleisten, ziehen Sie die einzelnen Schrauben regelmäßig nach längerer Nutzung des Möbelstücks fest.

Bitte bewahren Sie diese Montageanleitung auf. Diese gewährleistet im Problemfall einen reibungslosen und schnellen Kommunikationsaustausch mit dem Kundenservice Ihres Geschäfts.

Wir beraten, lüften Sie den Raum während der Installation und ein paar Stunden später.

1. Identificare le parti che compongono il mobile.
2. Raccogliere le parti e contarle.
3. Tenere pronti gli attrezzi necessari.
4. Organizzare uno spazio per il montaggio, un telo da parete o una coperta proteggerà i mobili contro i graffi.
5. Montare il mobile, non forzare mai le parti da assemblare.



IT Serrare le viti dopo che sono state usate per un certo periodo di tempo.
Conservare le istruzioni di montaggio poiché vi torneranno utili quando ricontatterete il negozio se una parte dovesse mancare.
Si consiglia di ventilare la stanza durante l'installazione e durante le ore successive.

1. Identificeer de onderdelen waar uw stuk meubilair uit bestaat.
2. Verzamel de hardwareonderdelen en tel deze.
3. Heb het vereiste gereedschap bijdehand.
4. Organiseer een ruimte voor assemblage; muurtapijt of een deken zal het meubilair beschermen tegen krassen.
5. Monteer het meubilair en forceer hierbij nooit de te monteren onderdelen.




NL Draai de schroeven vast nadat het een tijdje in gebruik is geweest.
Bewaar de assemblage-instructies in het geval dat u contact op moet nemen met de winkel indien er een onderdeel ontbreekt.
Wij raden u aan de kamer te ventileren tijdens en voor enkele uren na de installatie.

1. Identifique as peças que constituem a sua mobília.
2. Junte as ferragens e conte.
3. Tenha prontas as ferramentas necessárias.
4. Organize e arranje espaço para a montagem, colocando um tapete ou manta para proteger a mobília contra riscos.
5. Monte a mobília, nunca force as peças a montar.




PT Aperte os parafusos após a peça de mobília ter sido utilizada durante algum tempo.
Guarde as instruções de montagem, pois serão úteis quando quiser contactar a loja, caso perca alguma peça.
Aconselhamos a ventilar a divisão durante a instalação e algumas horas depois.

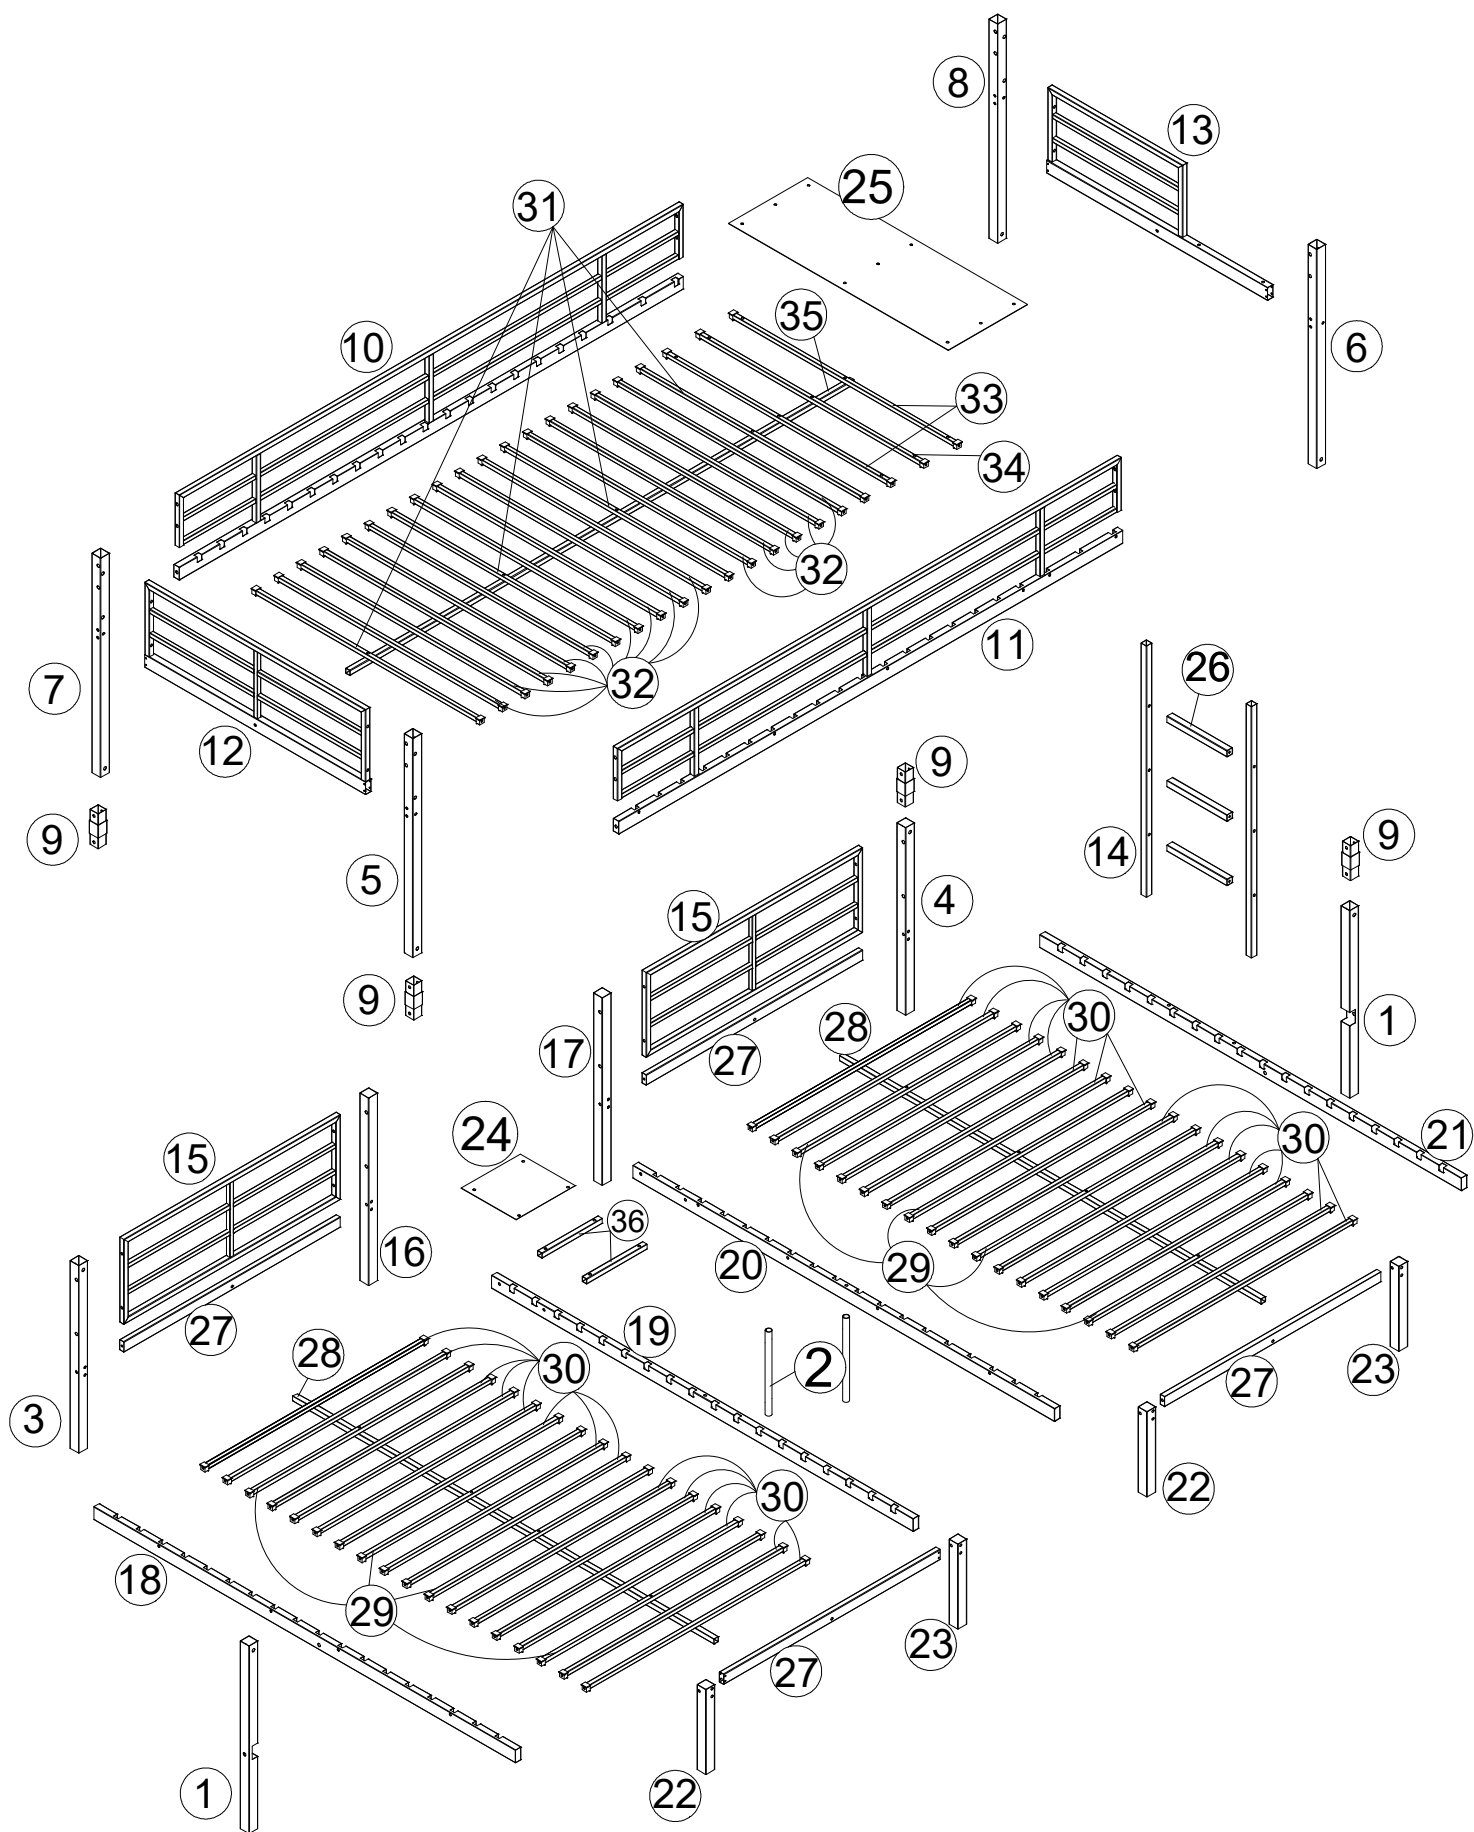

Components List


① x2



② x2



③ x1 The Lower Left Back Leg#1x1



Front

④ x1 The Lower Right Back Leg#1x1




Front

⑤ x1 The Upper Left Front Leg#1x1



Front

⑥ x1 The Upper Right Front Leg#1x1



Front

⑦ x1 The Upper Left Back Leg#1x1



Front

⑧ x1 The Upper Right Back Leg#1x1




Front


⑨ Connecting rod#1x4




⑩ Guard Rail#1x1

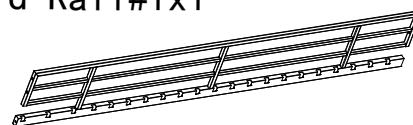


⑪ Guard Rail#2x1

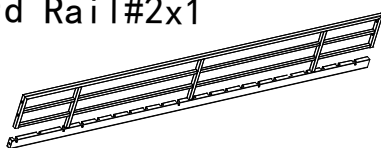

⑫ Guard Rail#3x1

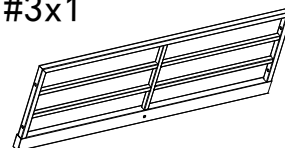


⑬ Guard Rail#2x1

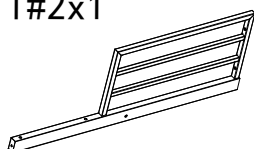

⑭ x2



⑮ Guard Rail#4x2

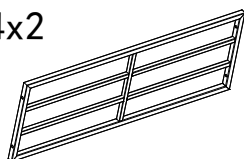


⑯ x1




Front

⑰ x1




Front


⑱ x1




⑲ x1



⑳ x1



㉑ x1



㉒ x2




Components List

23 x2




24 x1



265x245

25 x1

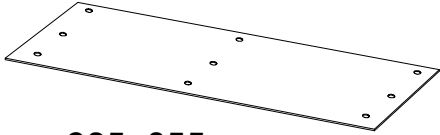


985x355

26 x3



27 x4




28 x2




29 x8

One through holes

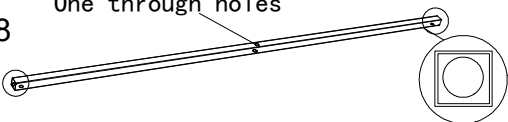


30 x28

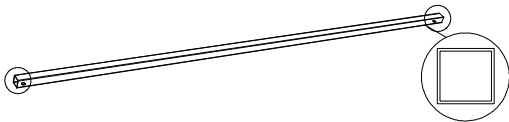

31 x4


One through holes

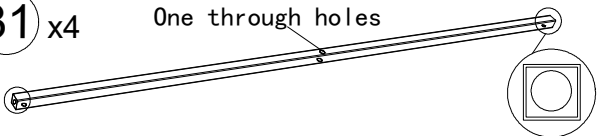


32 x14



33 x2



34 x1



35 x1




36 x2




37 x3

Bubble Pads

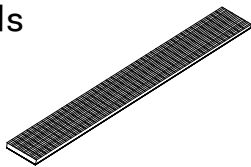




38

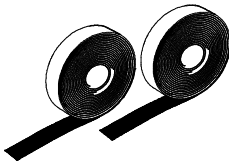





Sound Insulation Cotton

Hardwares List

Item	Description	Qty
(A)	 M8x60	36
(B)	 M8x70	4
(C)	 M8x40	16
(D)	 M8x30	10
(E)	 M6x30	3
(F)	 M6x40	40
(G)	 M6x12	13


Item	Description	Qty
(H)	 M8x25	32
(J)	 M6 Allen key	2
(K)	 M8 Allen key	2
(L)	 M8x16	2
(M)		1
(N)		114
(P)	 M6x12	10
(Q)	 M8x50	22
(R)	 M6 Nuts	12
(S)		1
(T)	 M6x35 Screw	4
(U)		4
(V)		2

	M8x60	12
	M8x25	14
	M8 Allen key	2
	M8x50	14

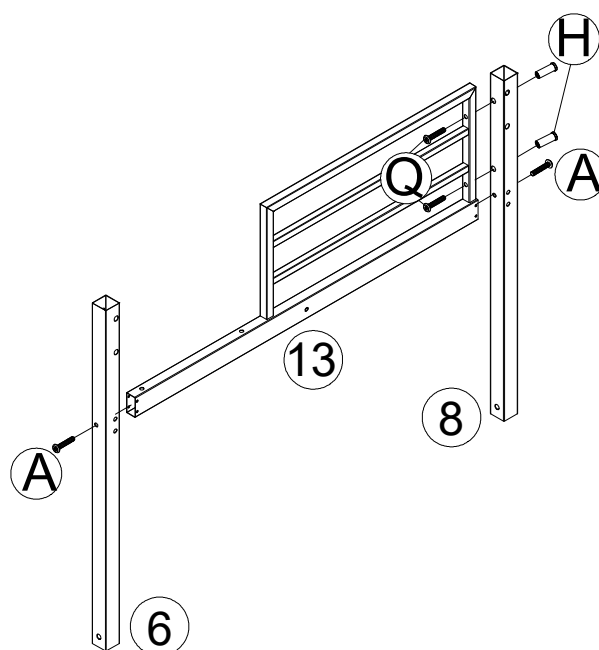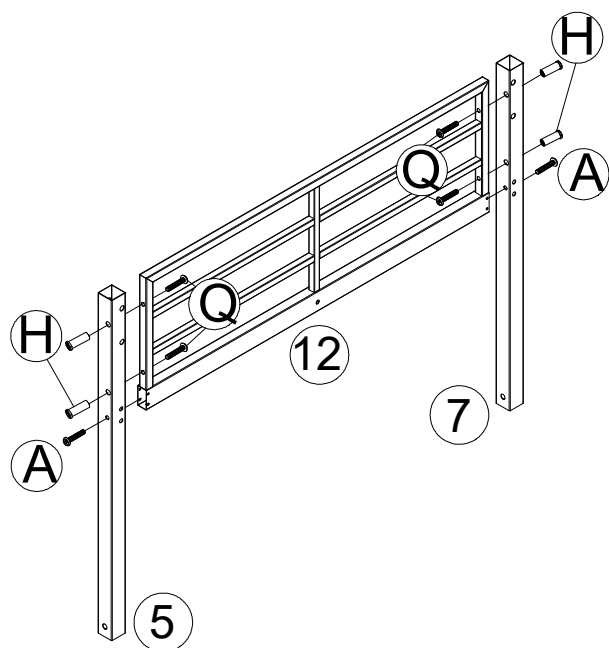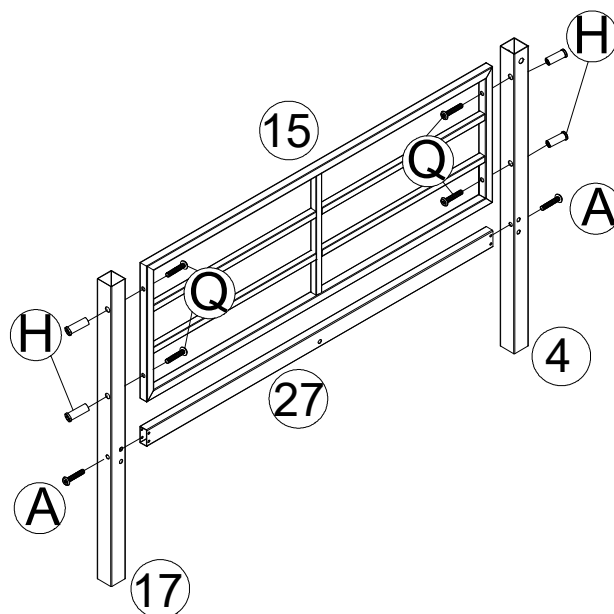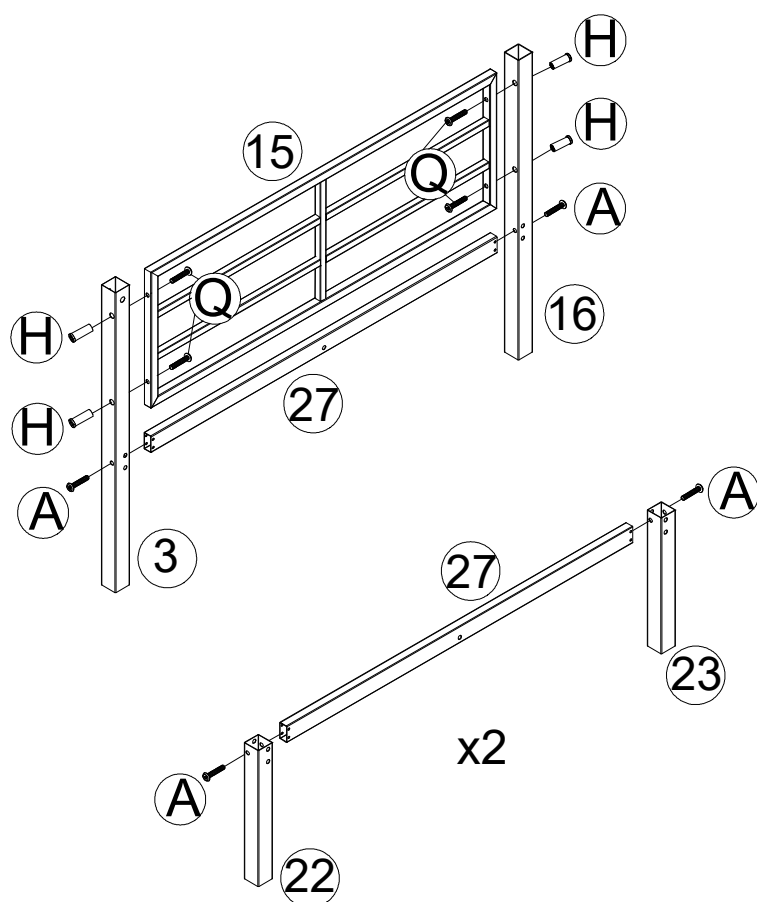


Please install the bed on a clean and smooth surface to prevent any damage!

		M8 Allen key	1
---	---	--------------	---




N		72
---	---	----

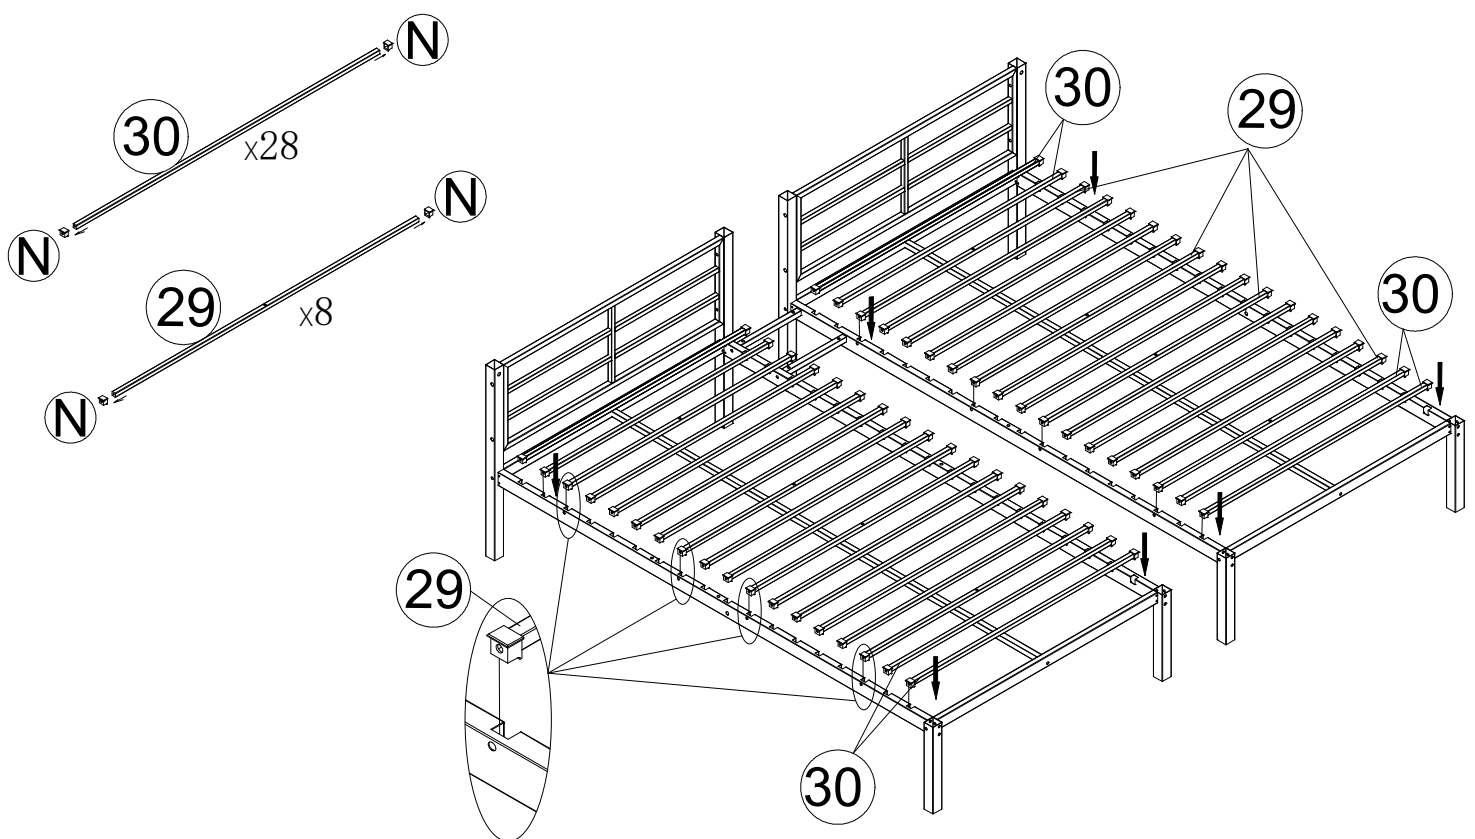


STEP4

(F)		M6x40	24
(L)		M8x16	2
(R)		M6 Nuts	8
(G)		M6x12	4

(J)		M6 Allen key	2
(P)		M6x12	4
(M)			1


(K)		M8 Allen key	1
-----	---	--------------	---

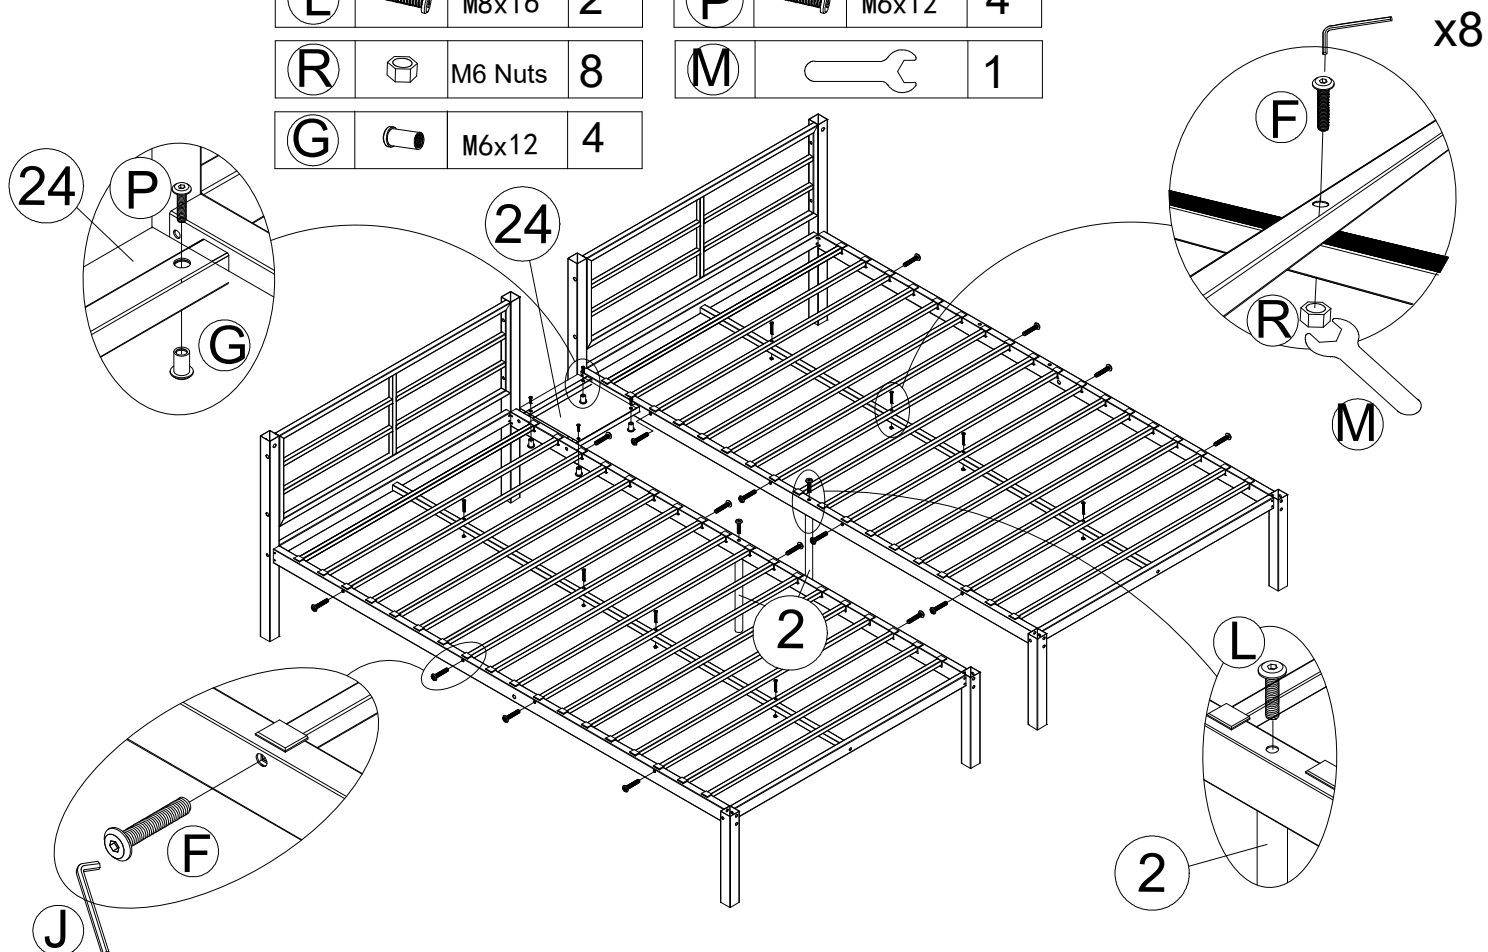

STEP5

(A)		M8x60	8
(C)		M8x40	2
(H)		M8x25	8
(Q)		M8x50	8

(K)		M8 Allen key	2
-----	---	--------------	---

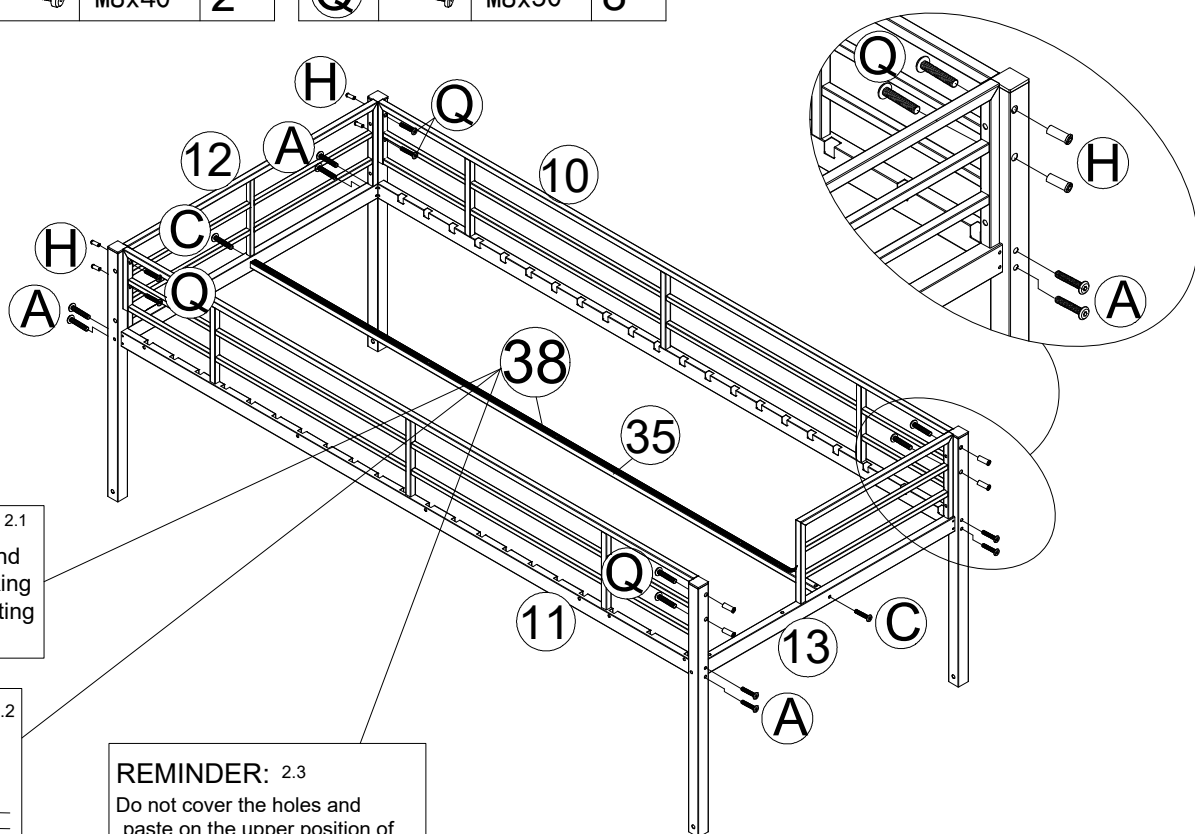

REMARK: 2.1
Clean the sticking part and keep it clean before sticking the velcro, to avoid affecting the stickiness.

REMARK: 2.2
Tear off the white isolation paper on the back of Sound Insulation Cotton




REMARK: 2.3
Do not cover the holes and paste on the upper position of the view of the rail as shown.

STEP6

N

42

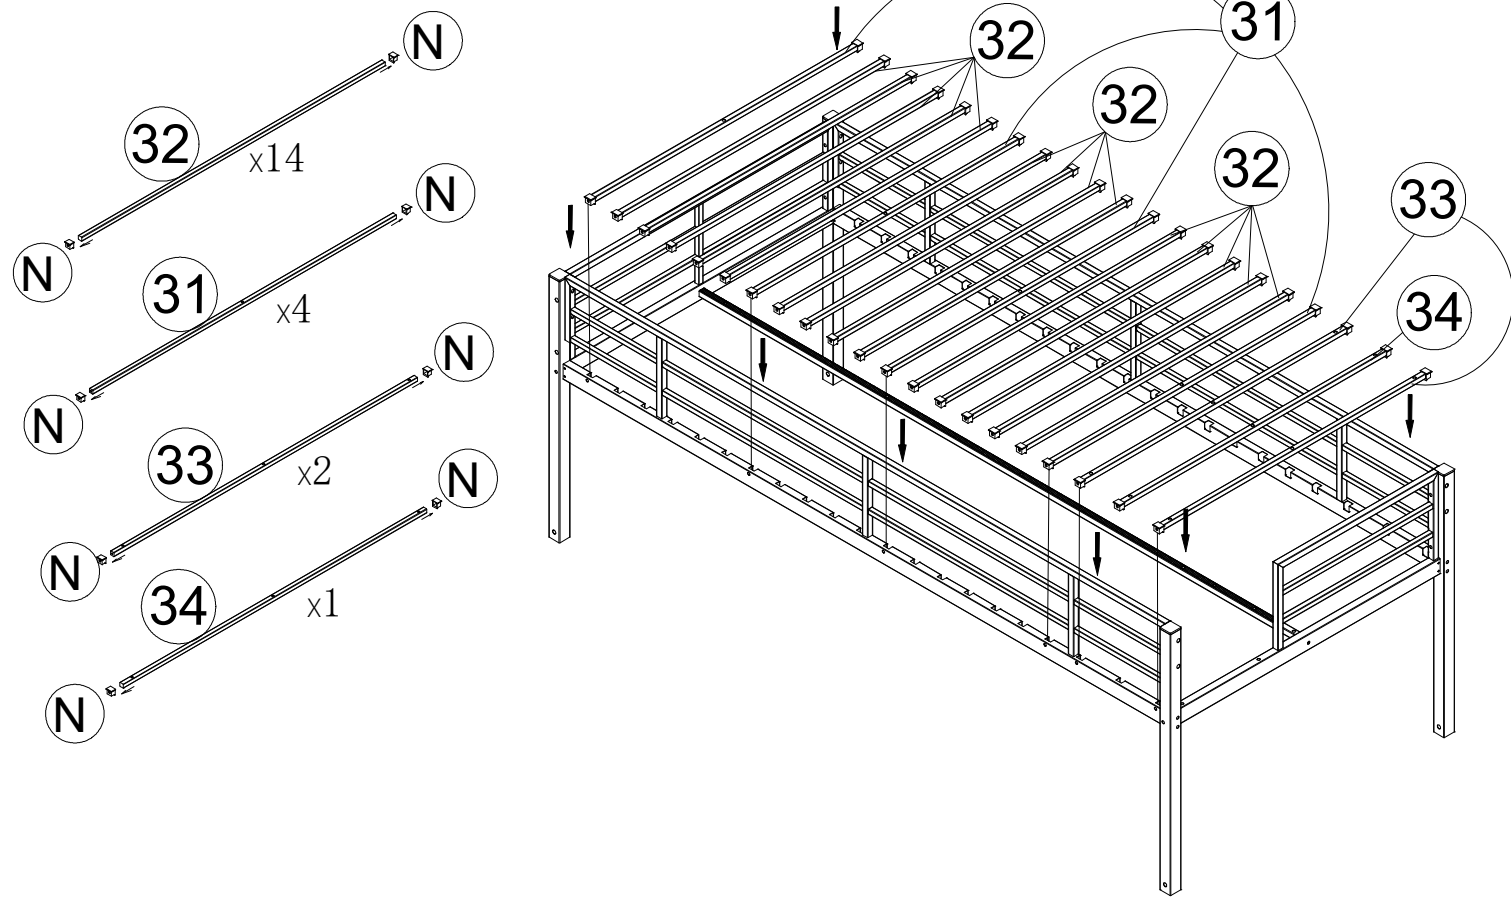

STEP7

F

M6x40

16

R

M6 Nuts

4


J

M6 Allen key

1


M

1

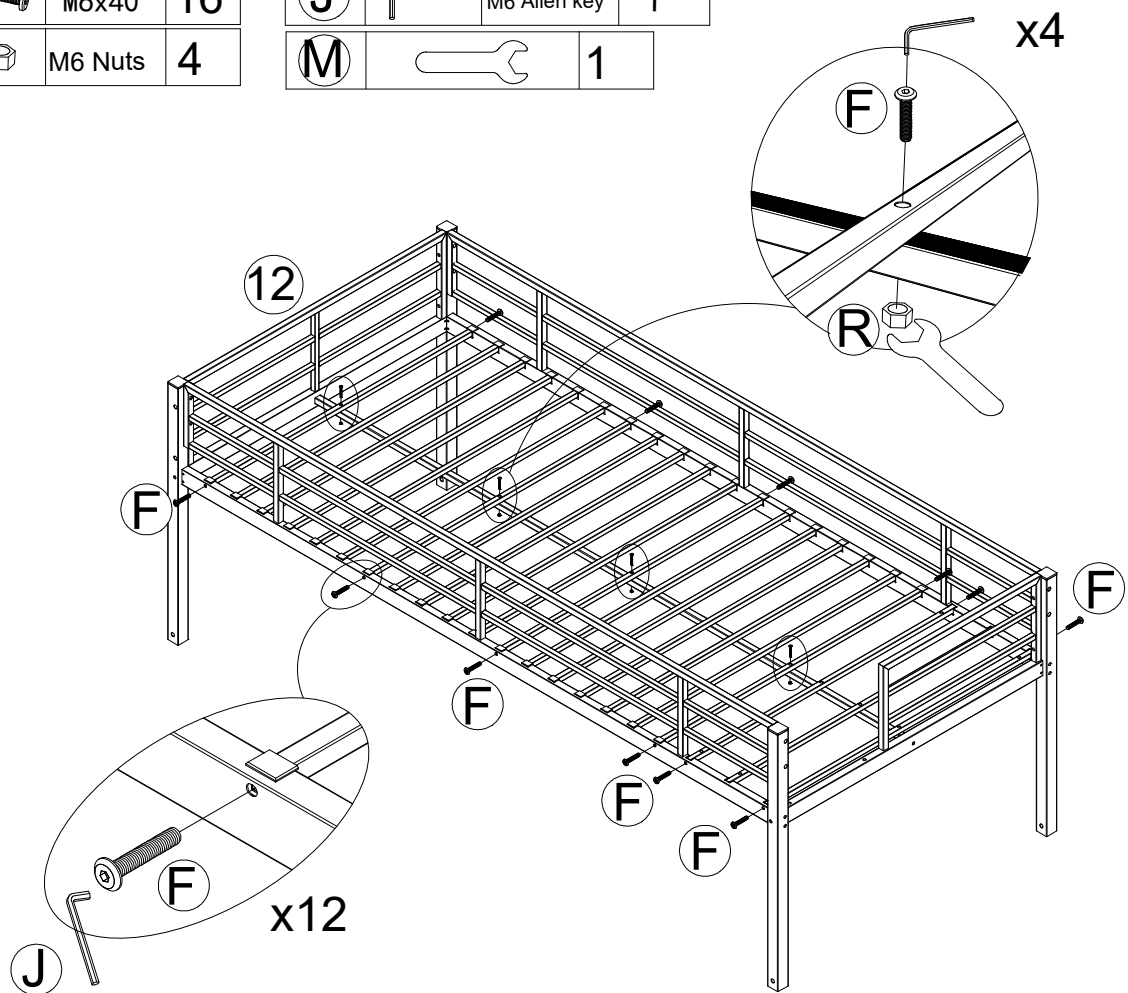

STEP8


G		M6x12	9	K		M6 Allen key	2
P		M6x12	6				
E		M6x30	3				

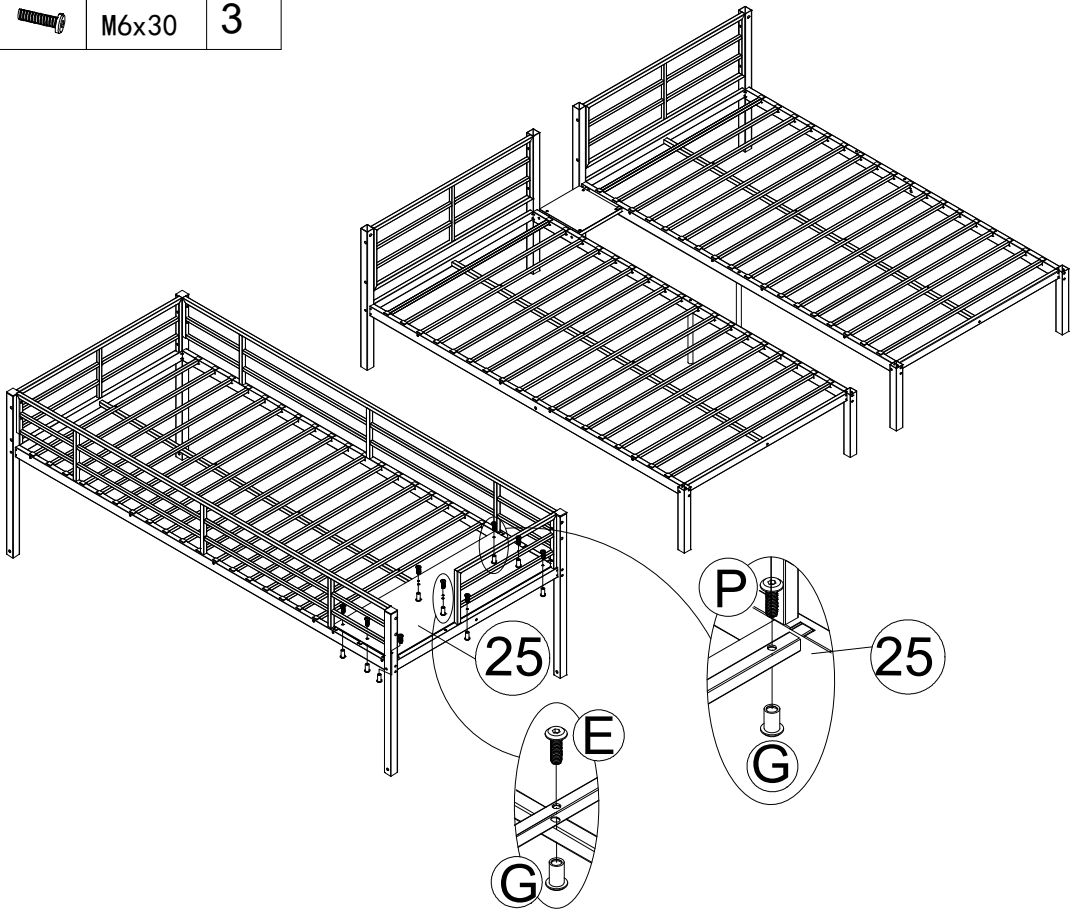

if you plan to become 3 dividual metal bed,please follow below step1 to 8 above . Otherwise please jump to step 9


STEP9

D		M8x30	2	H		M8x25	2	K		M8 Allen key	2
---	---	-------	---	---	---	-------	---	---	---	--------------	---

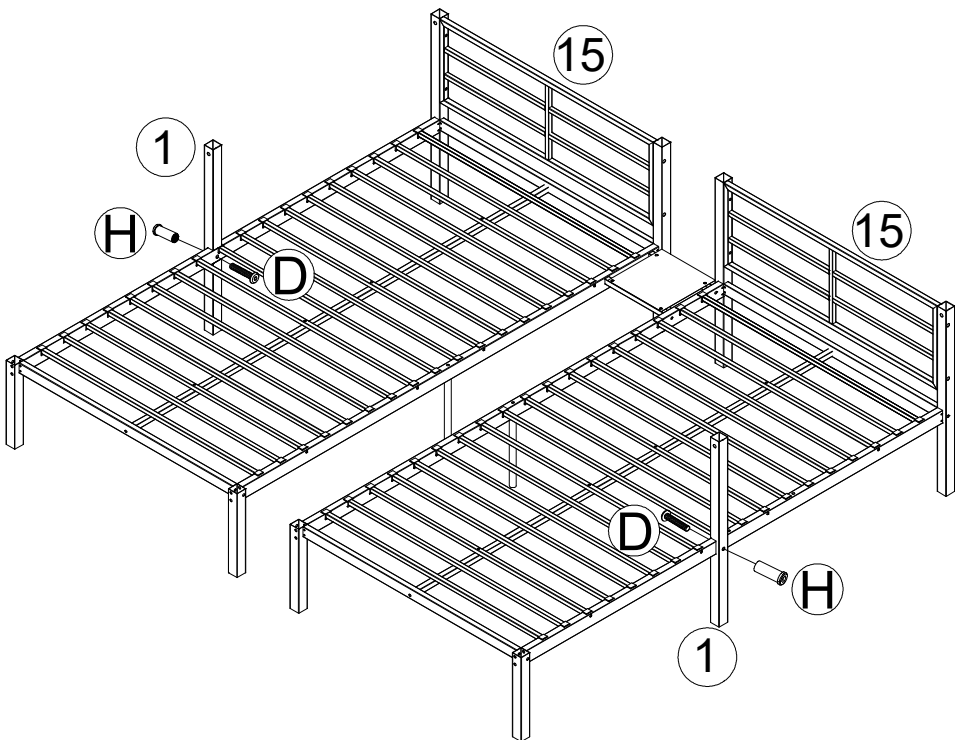

STEP10

	M8x30	8		M8x25	8		M8 Allen key	2
--	-------	---	--	-------	---	--	--------------	---

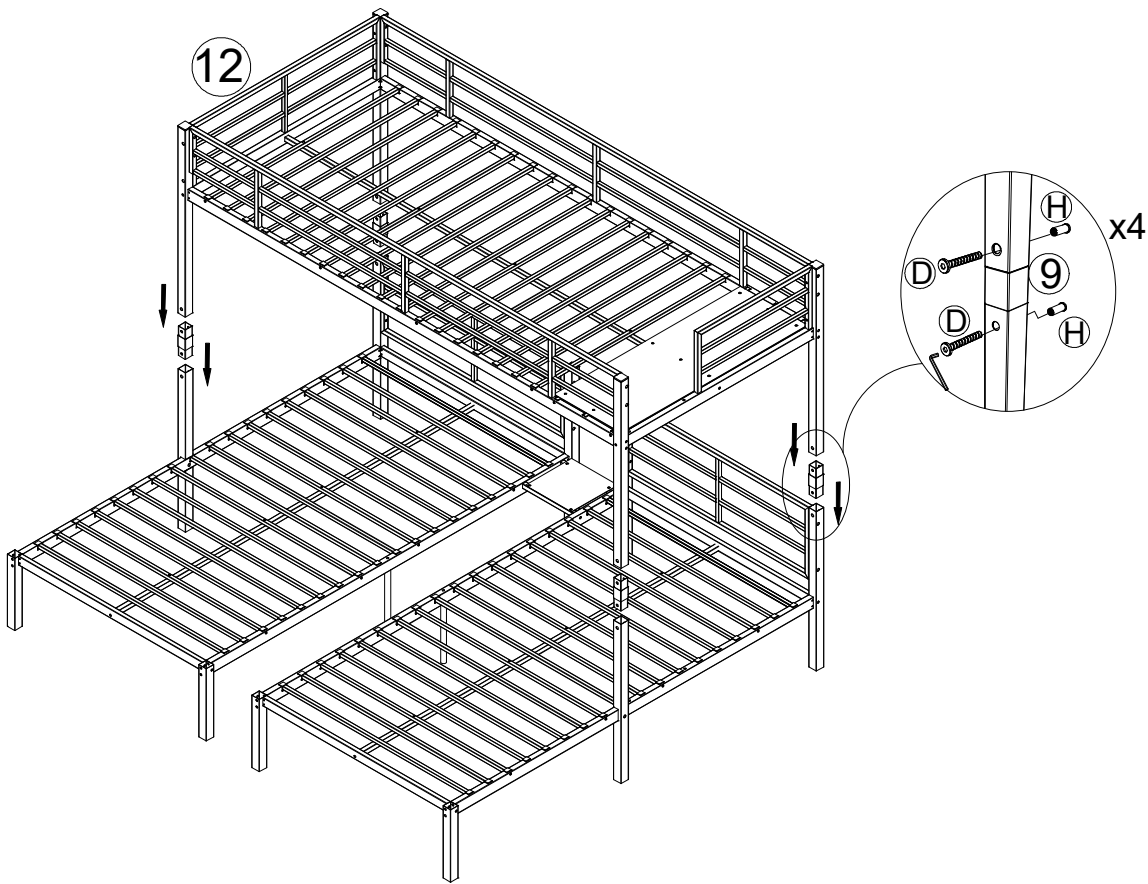



STEP11

	M8x40	6		M8x70	4		M8 Allen key	1
---	-------	---	---	-------	---	---	--------------	---

		2			Anchor	4
		M6x35 Screw	4			

REMARK: 11.1
Clean the sticking part and keep it clean before sticking the velcro, to avoid affecting the stickiness.

REMARK: 11.2
Tear off the white isolation paper on the back of Bubble Pads

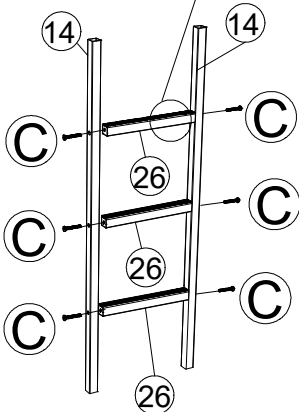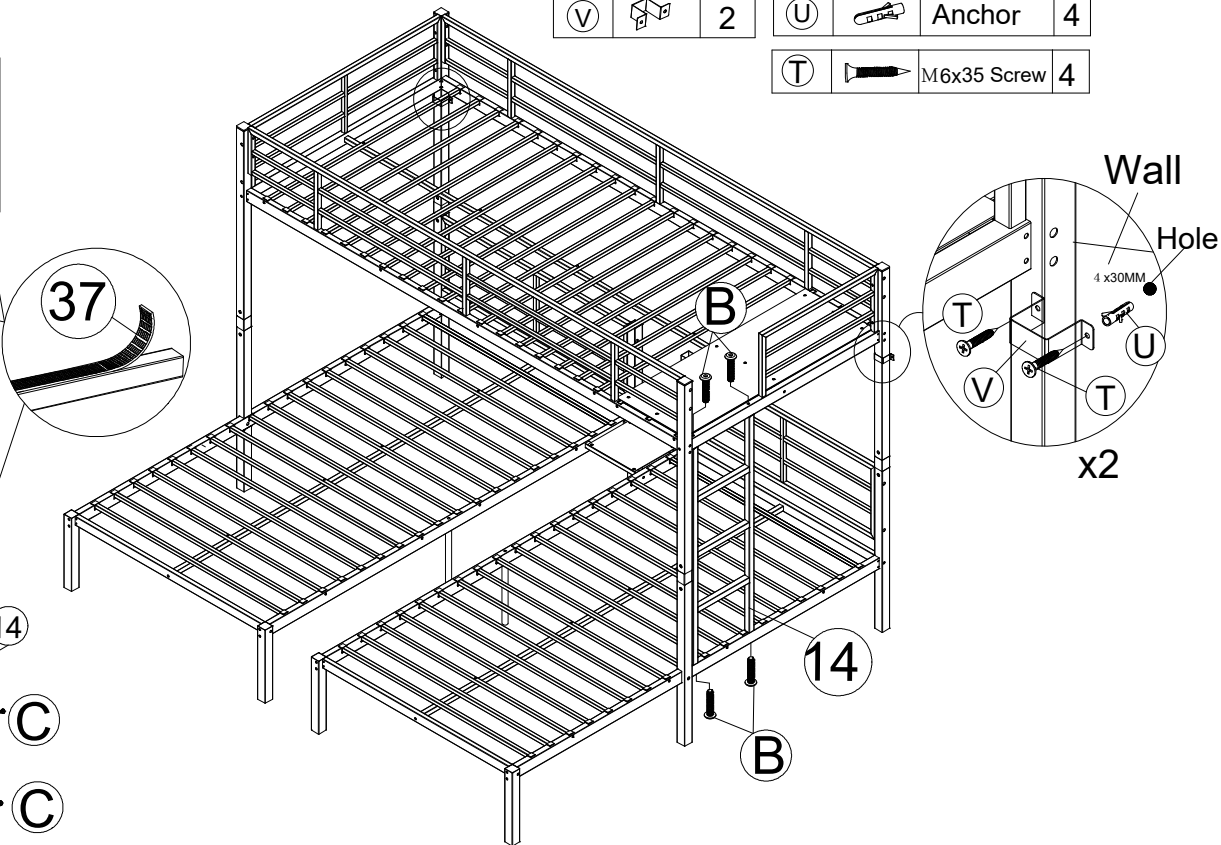

- <1> Place the hook to your desired location
- <2> Mark the hole location
- <3> Drill the holes with Diameter 4 x 30 mm in depth.
- <4> Inset the Anchor to the holes
- <5> Fasten the screws together with washers as illustration shown

BUNK-BED ASSEMBLY INSTRUCTIONS

SAFETY WARNINGS AND GENERAL NOTES:

- 1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
 - 2. Always use the recommended size mattress support, or both, to help prevent the likelihood of entrapment or falls.
 - 3. Do not allow children under 6 years of age to use the upper bunk.
 - 4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
 - 5. Do not allow horseplay on or under beds.
 - 6. Always prohibit jumping on the upper bunk.
 - 7. Prohibit more than one person on the upper bunk.
 - 8. Always use the ladder for entering and leaving the upper bunk.
 - 9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
 - 10. Use of a night-tight may provide added safely precaution for a child using the upper bunk.
 - 11. Always use guardrails on both long sides of the upper bunk.
 - 12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
 - 13. The use of water or flotation mattresses is prohibited.
- STRANGULATION HAZARD–Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.
- 14. Keep these instructions for future reference.
 - 15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
 - 16. Be certain all staples are out of the box before beginning assembly on the shipping carton.
 - 17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.

Bed type	Length	Width	Thickness
Twin Standard	74" - 75"	38 ½"	6"

18. SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAIL