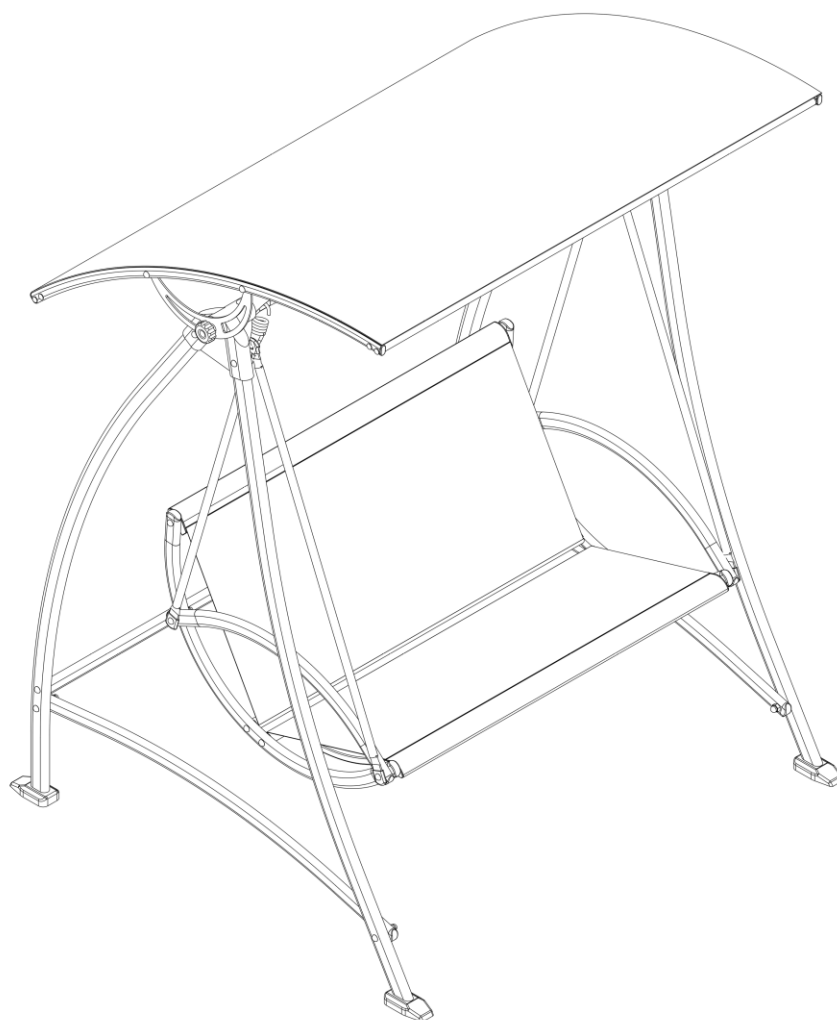



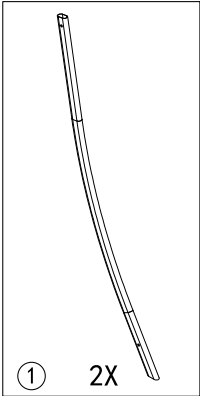
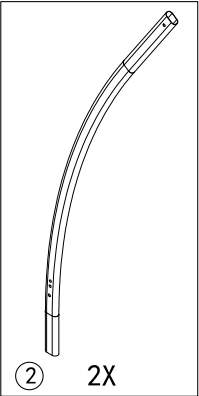
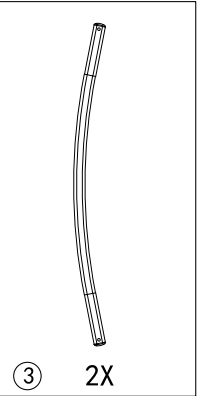
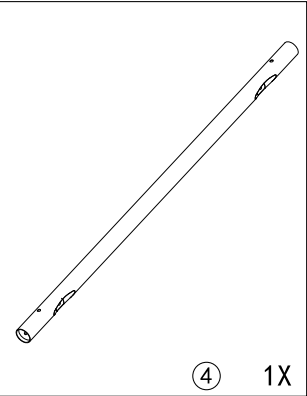
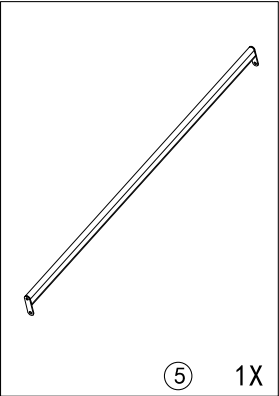
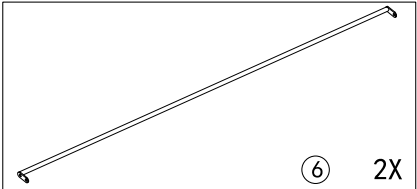
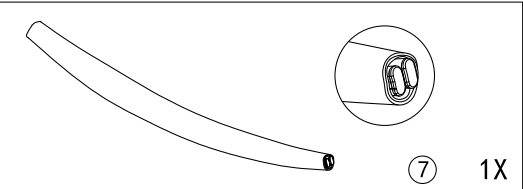
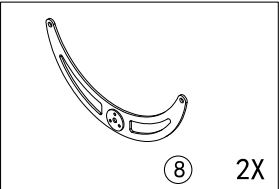
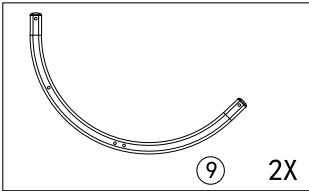
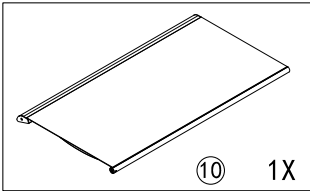
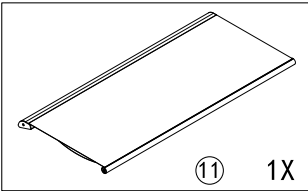
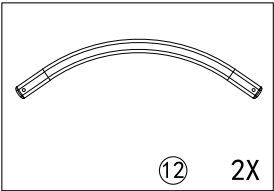
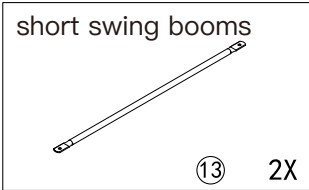
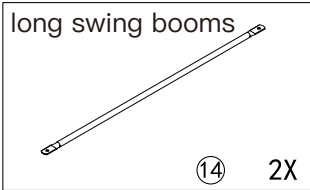
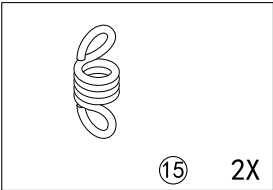
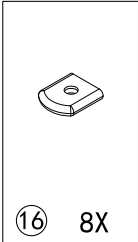
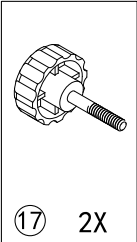
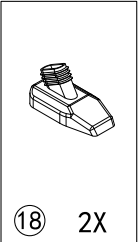
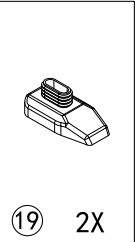
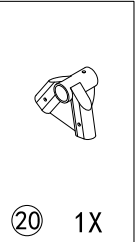
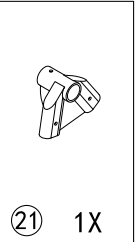
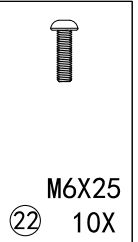
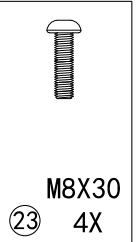
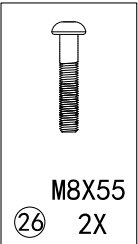
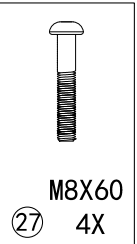
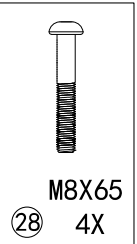
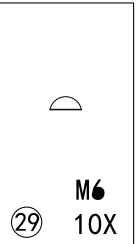
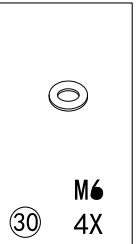
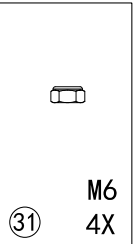
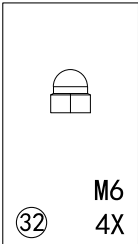
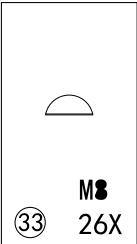
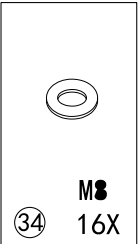
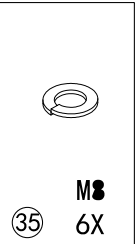
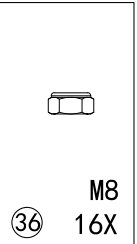
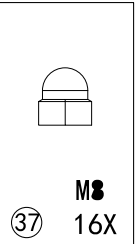
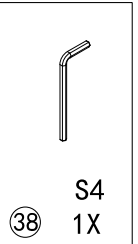
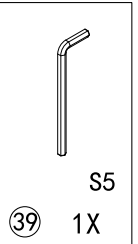
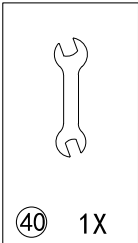
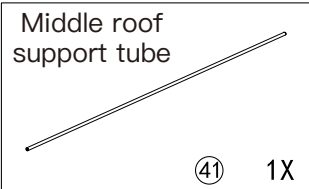
2-Person Porch Swing

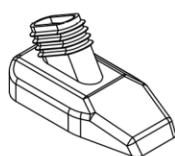
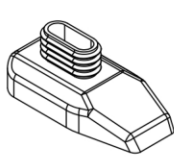
ASSEMBLY Instructions

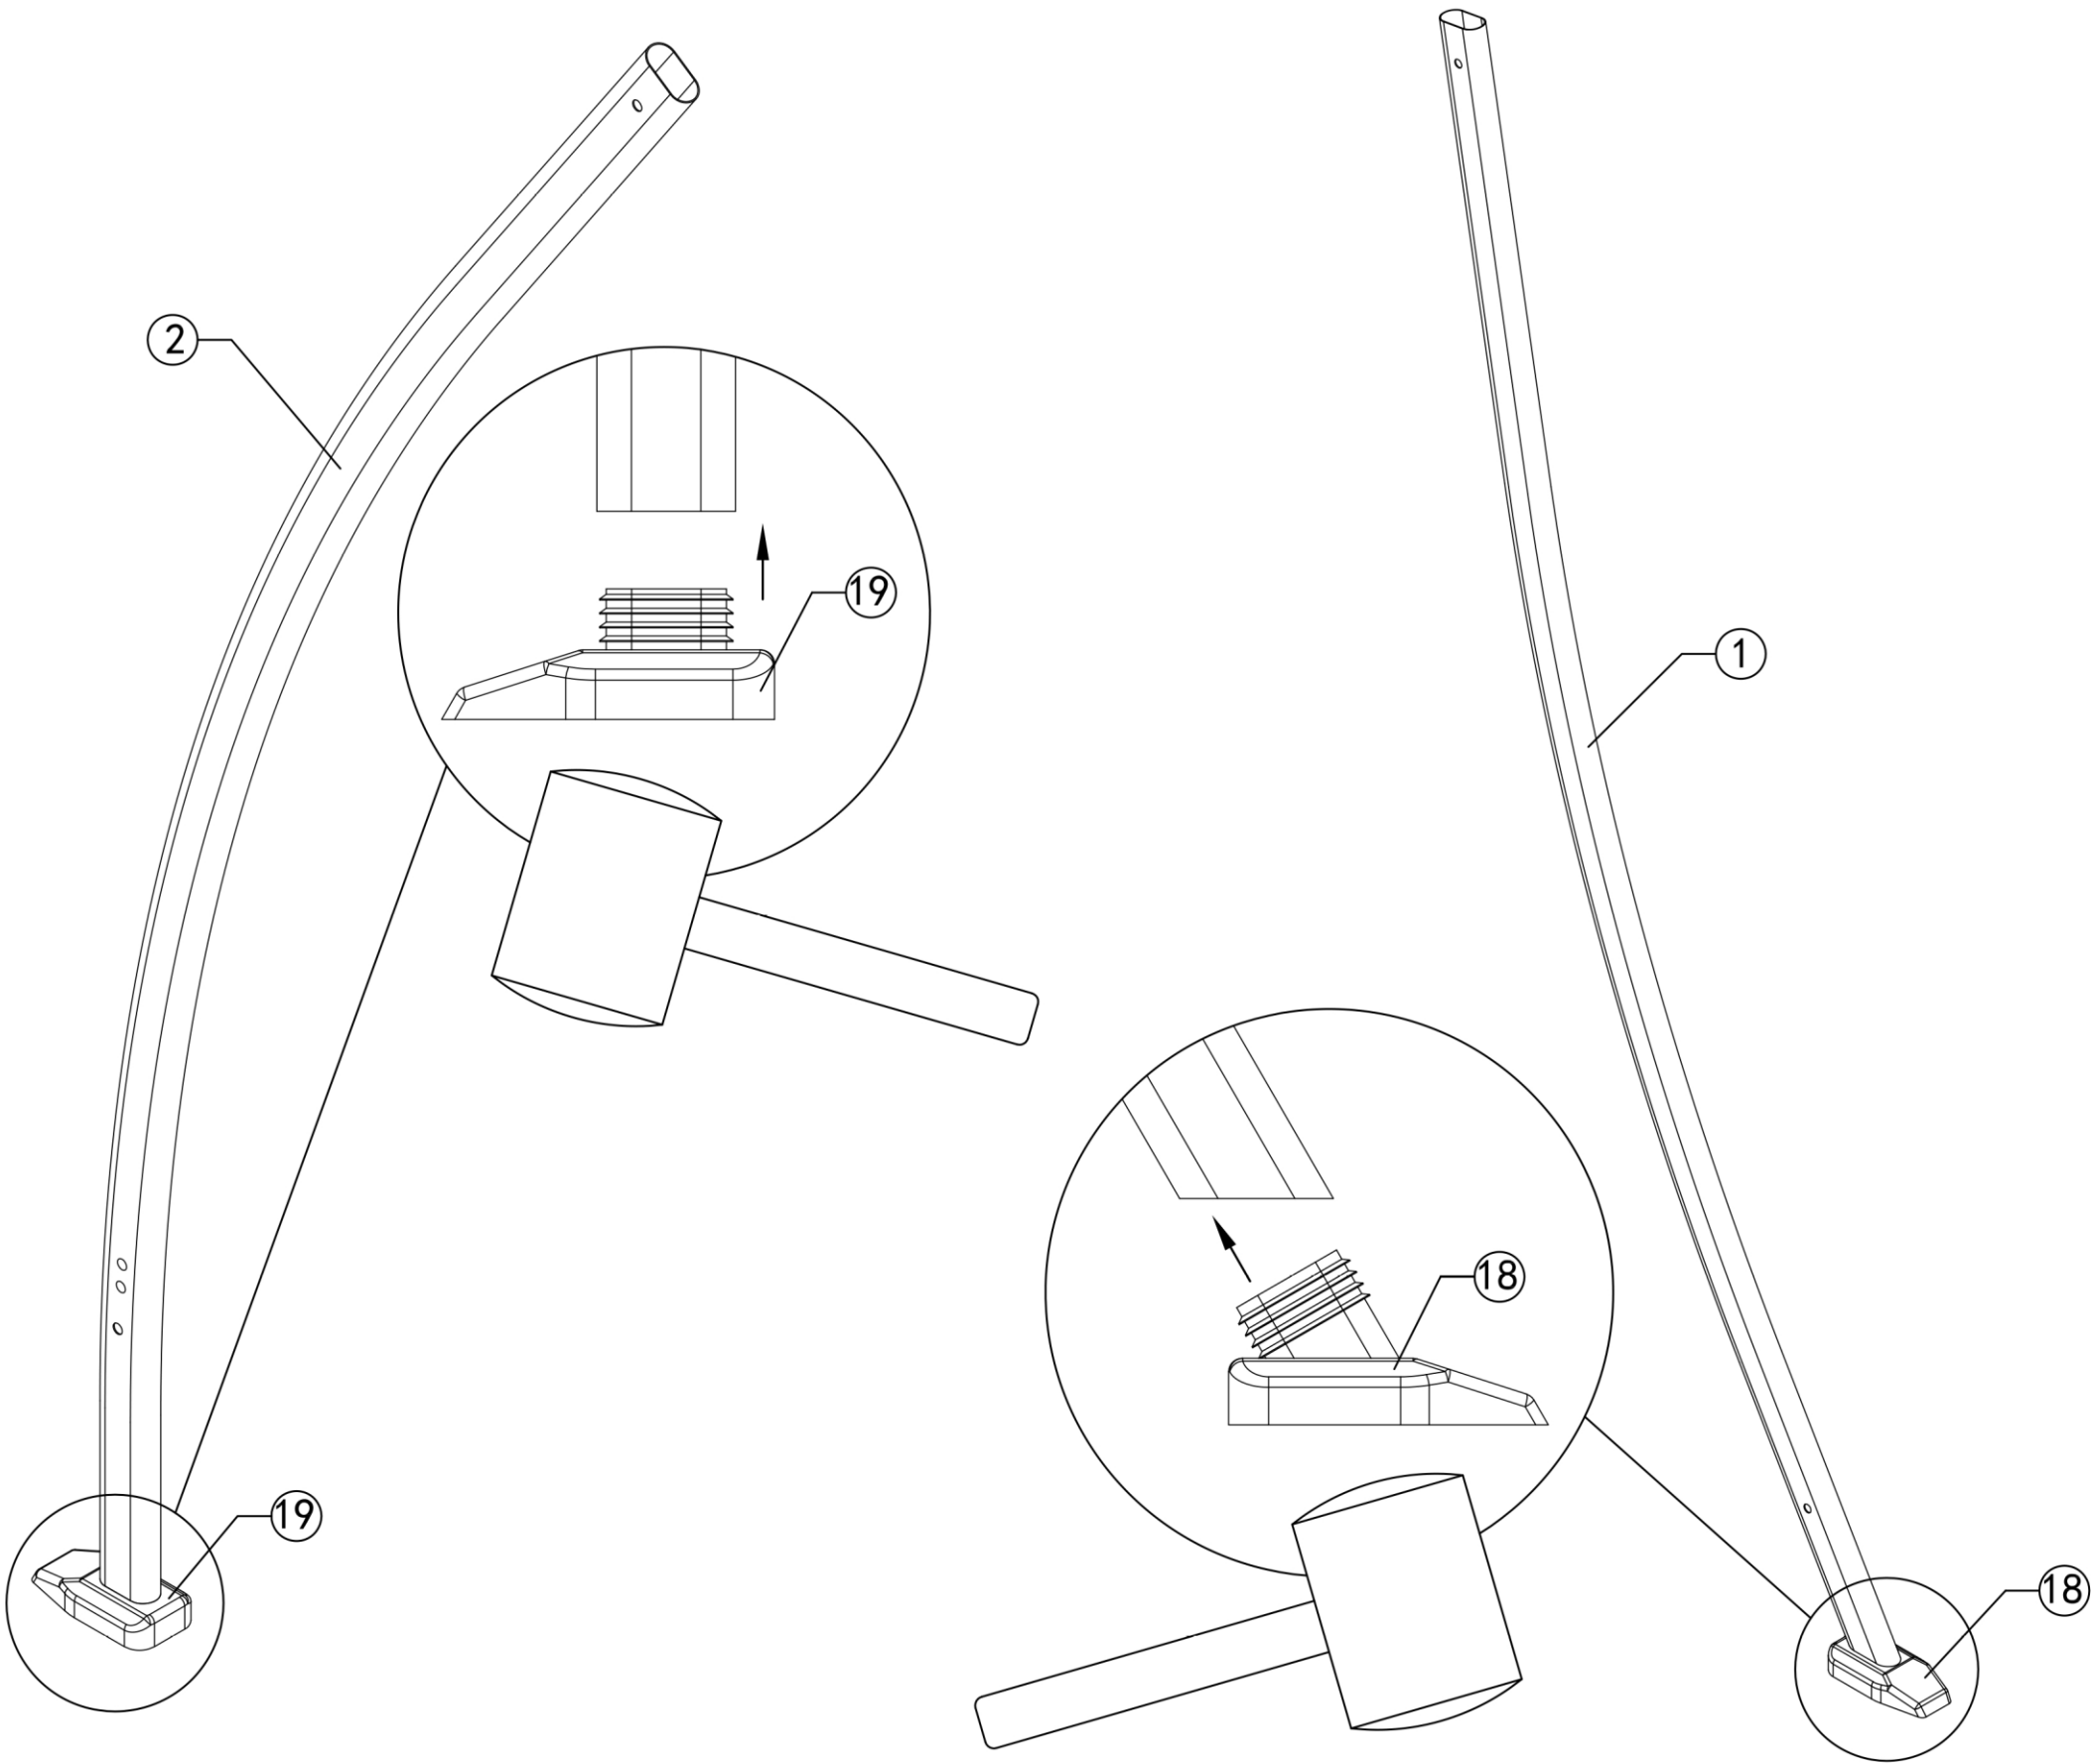


Please ensure all parts included before assembly and feel free to contact us if there are any problems.

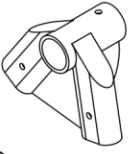
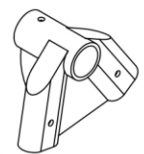




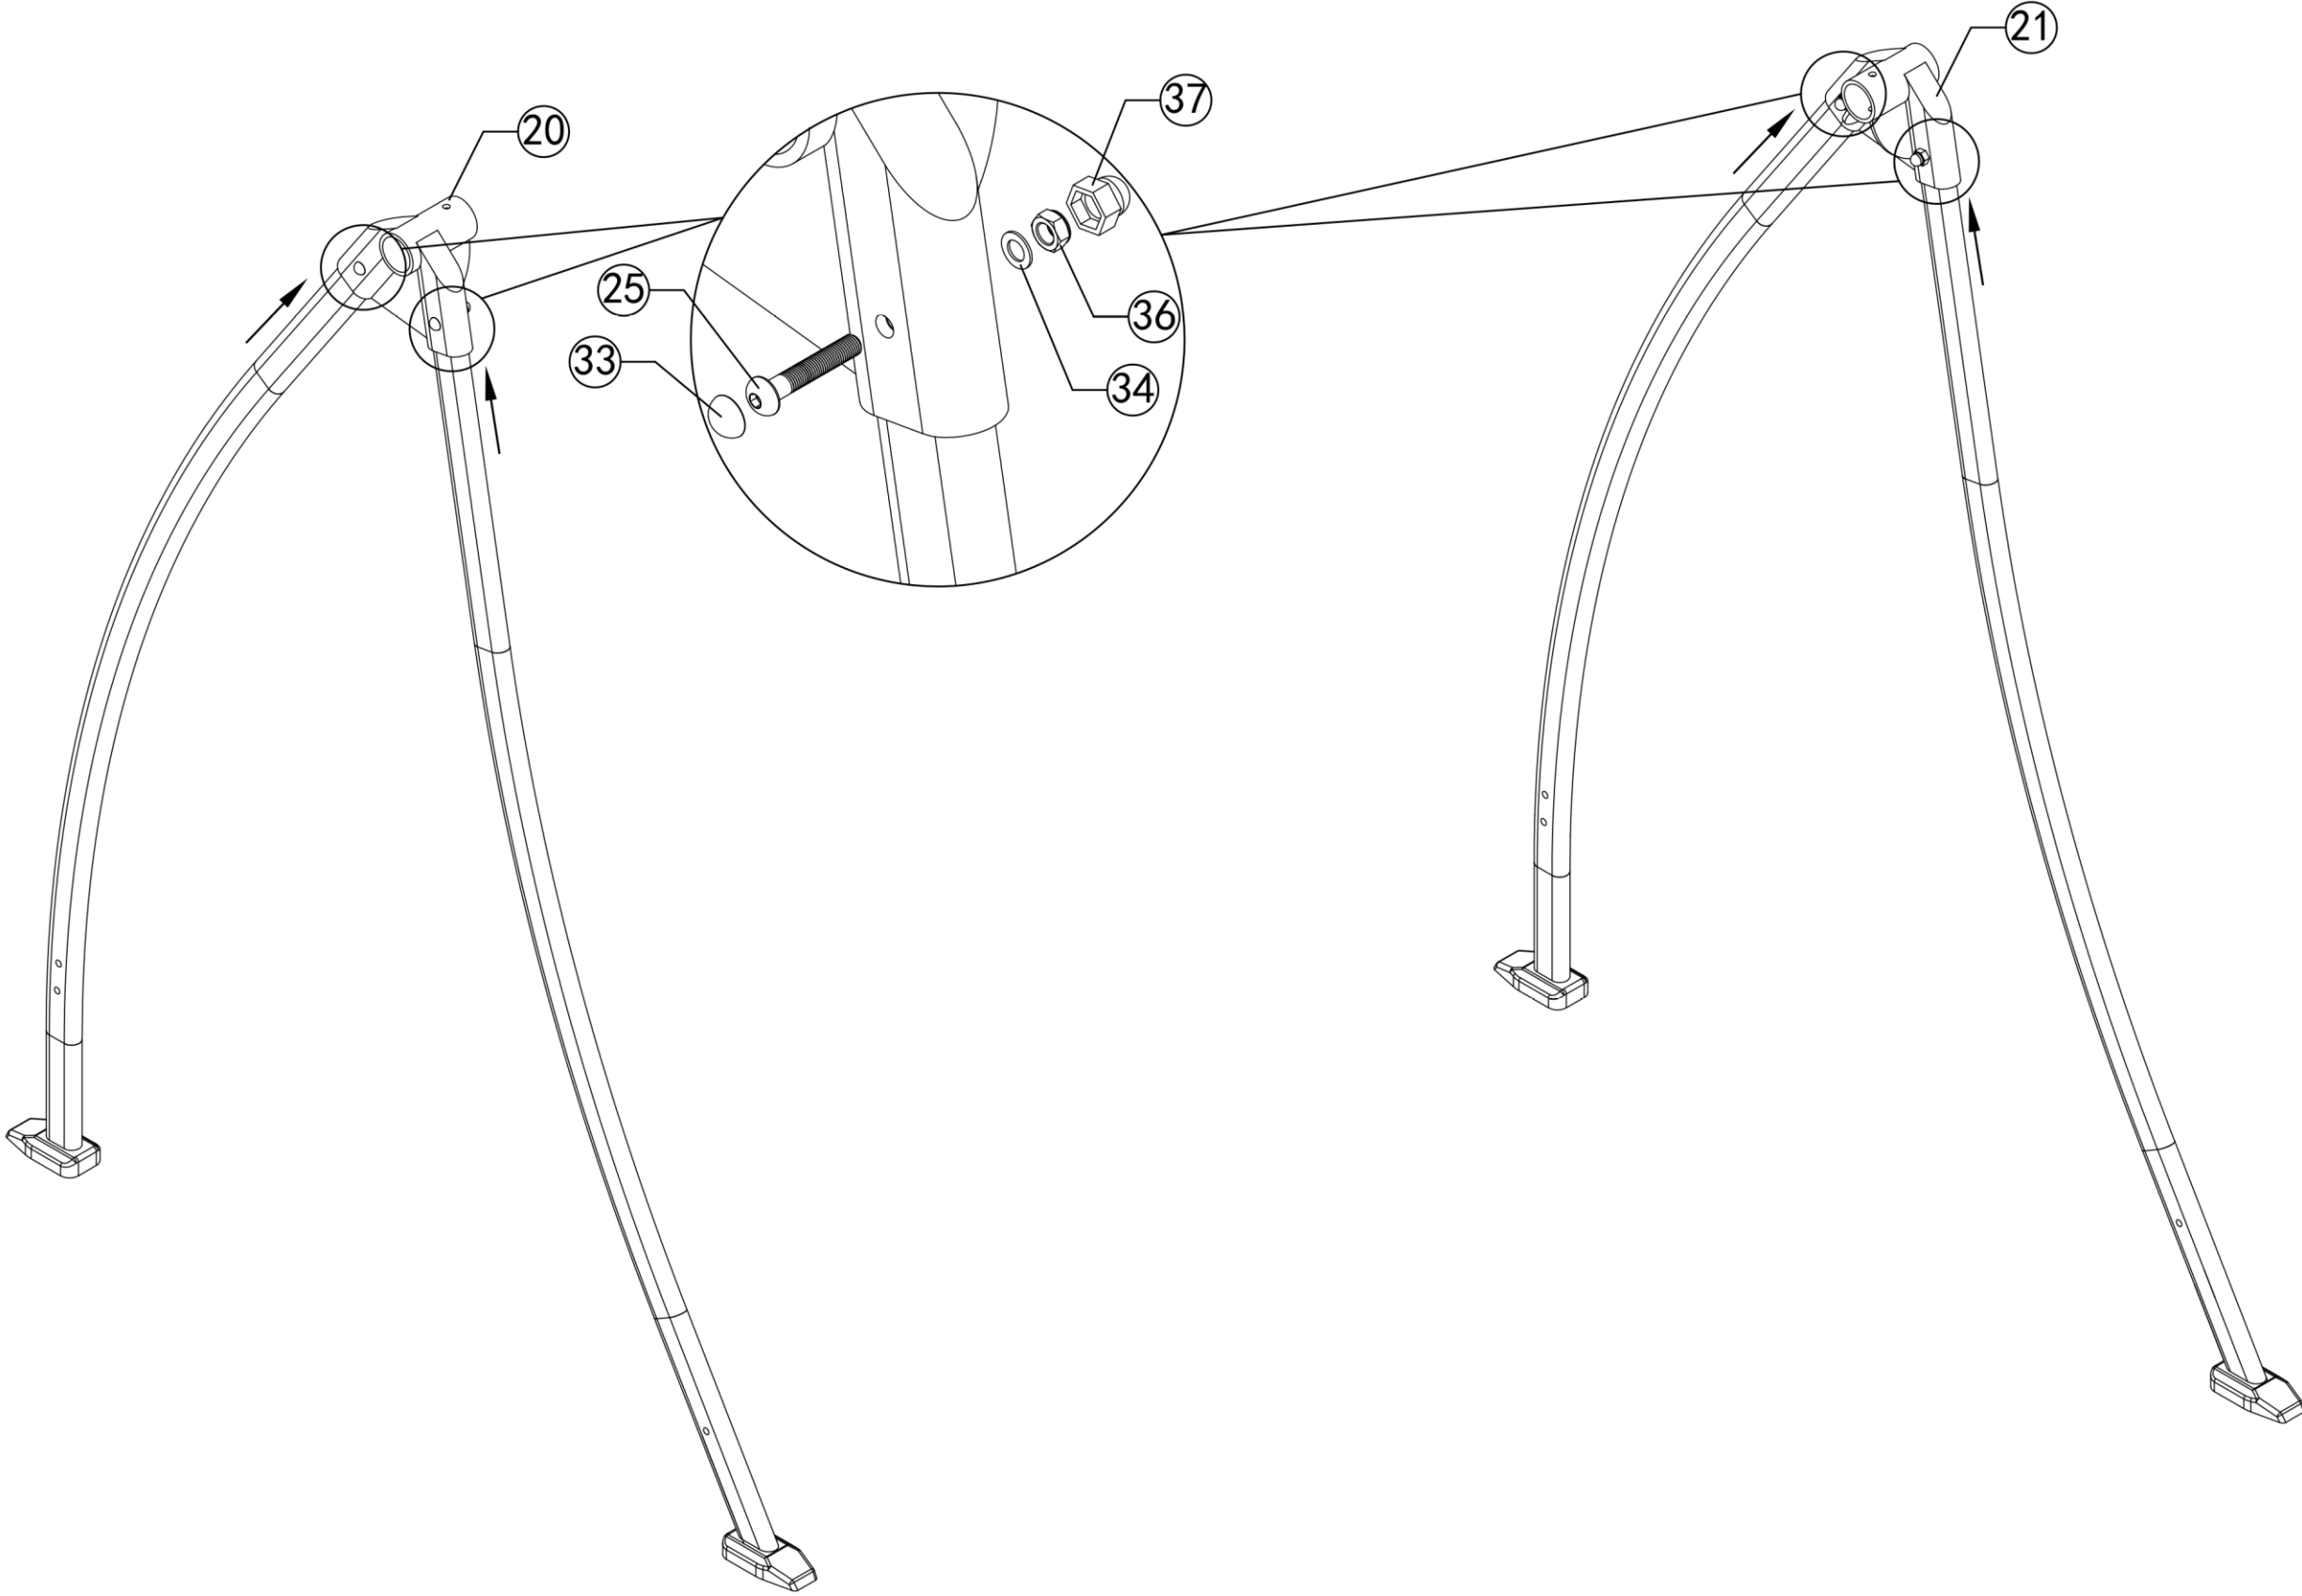
 ① 2X	 ② 2X	 ③ 2X	 ④ 1X	 ⑤ 1X
 ⑥ 2X	 ⑦ 1X		 ⑧ 2X	
 ⑨ 2X	 ⑩ 1X	 ⑪ 1X	 ⑫ 2X	
short swing booms  ⑬ 2X		long swing booms  ⑭ 2X		 ⑮ 2X
 ⑯ 8X	 ⑰ 2X	 ⑱ 2X	 ⑲ 2X	 ⑳ 1X
 ㉑ 1X	 M6X25 ㉒ 10X		 M8X30 ㉓ 4X	
 M8X35 ㉔ 8X	 M8X45 ㉕ 4X	 M8X55 ㉖ 2X	 M8X60 ㉗ 4X	 M8X65 ㉘ 4X
 M6 ㉙ 10X	 M6 ㉚ 4X	 M6 ㉛ 4X		
 M6 ㉜ 4X	 M8 ㉝ 26X	 M8 ㉞ 16X	 M8 ㉟ 6X	 M8 ㊱ 16X
 M8 ㊲ 16X	 S4 ㊳ 1X	 S5 ㊴ 1X		
 ㊵ 1X	Middle roof support tube  ④① 1X			

 ① 2X	 ② 2X
 ⑱ 2X	 ⑲ 2X



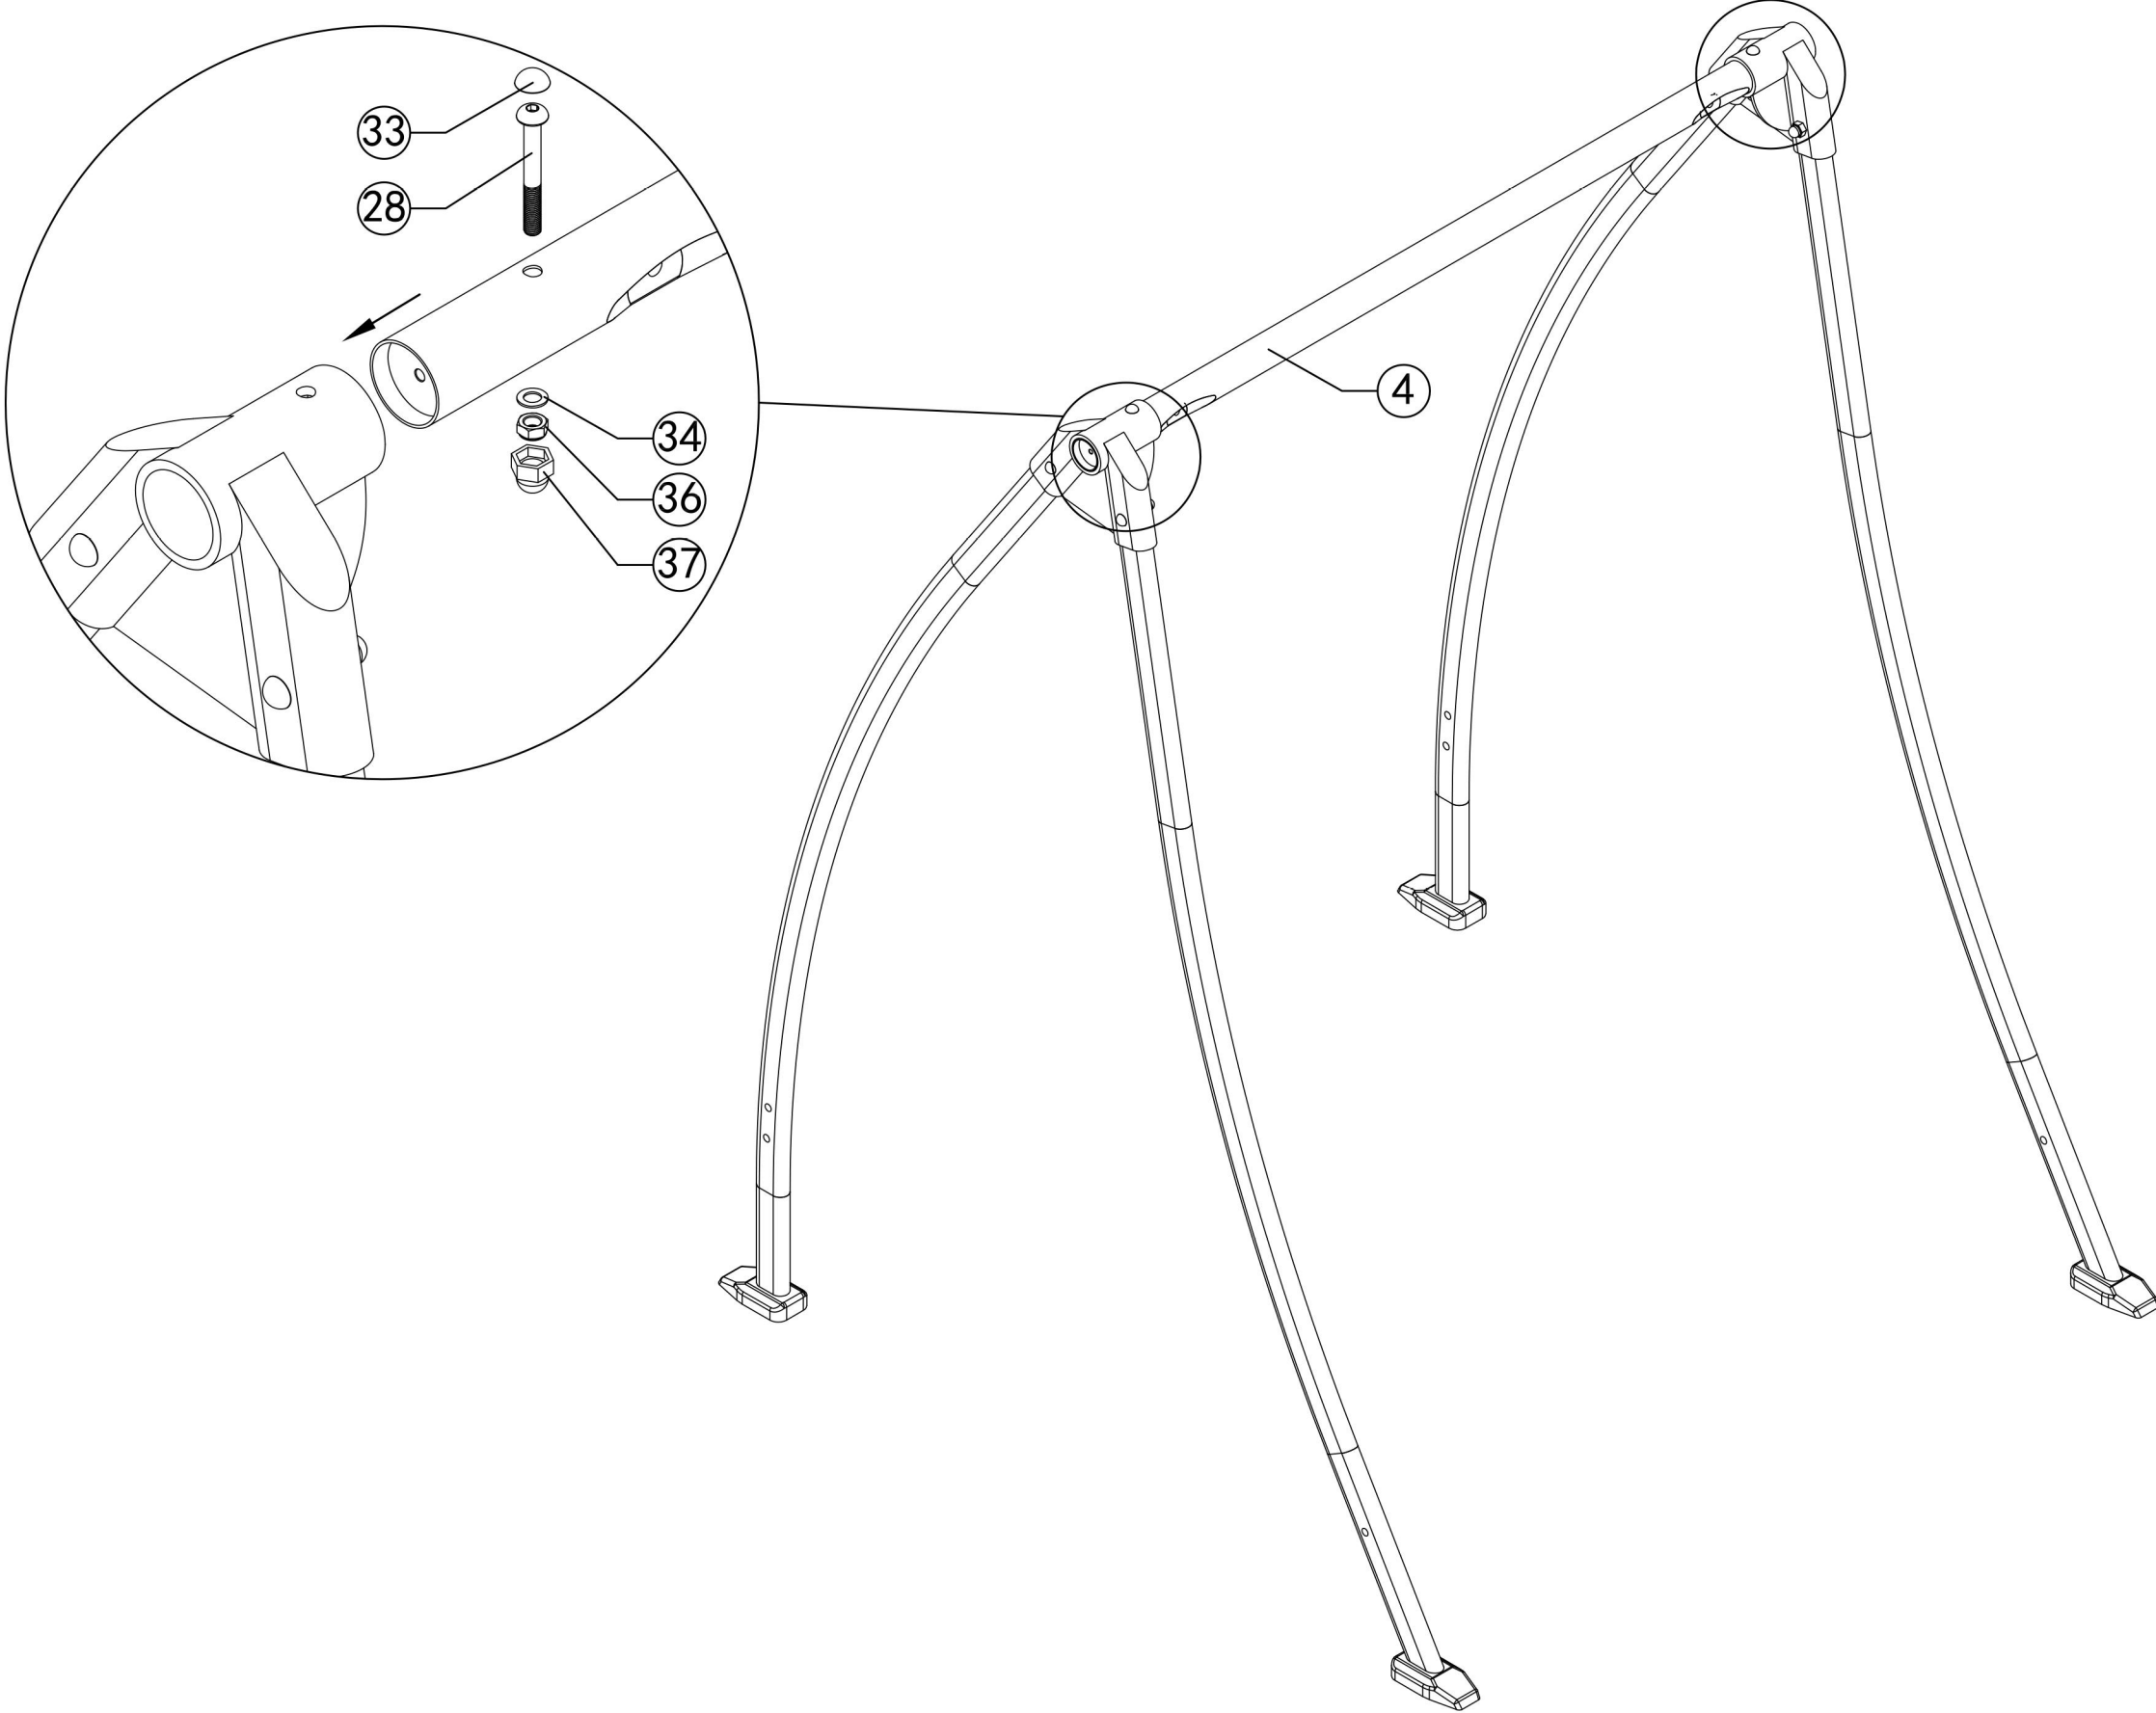

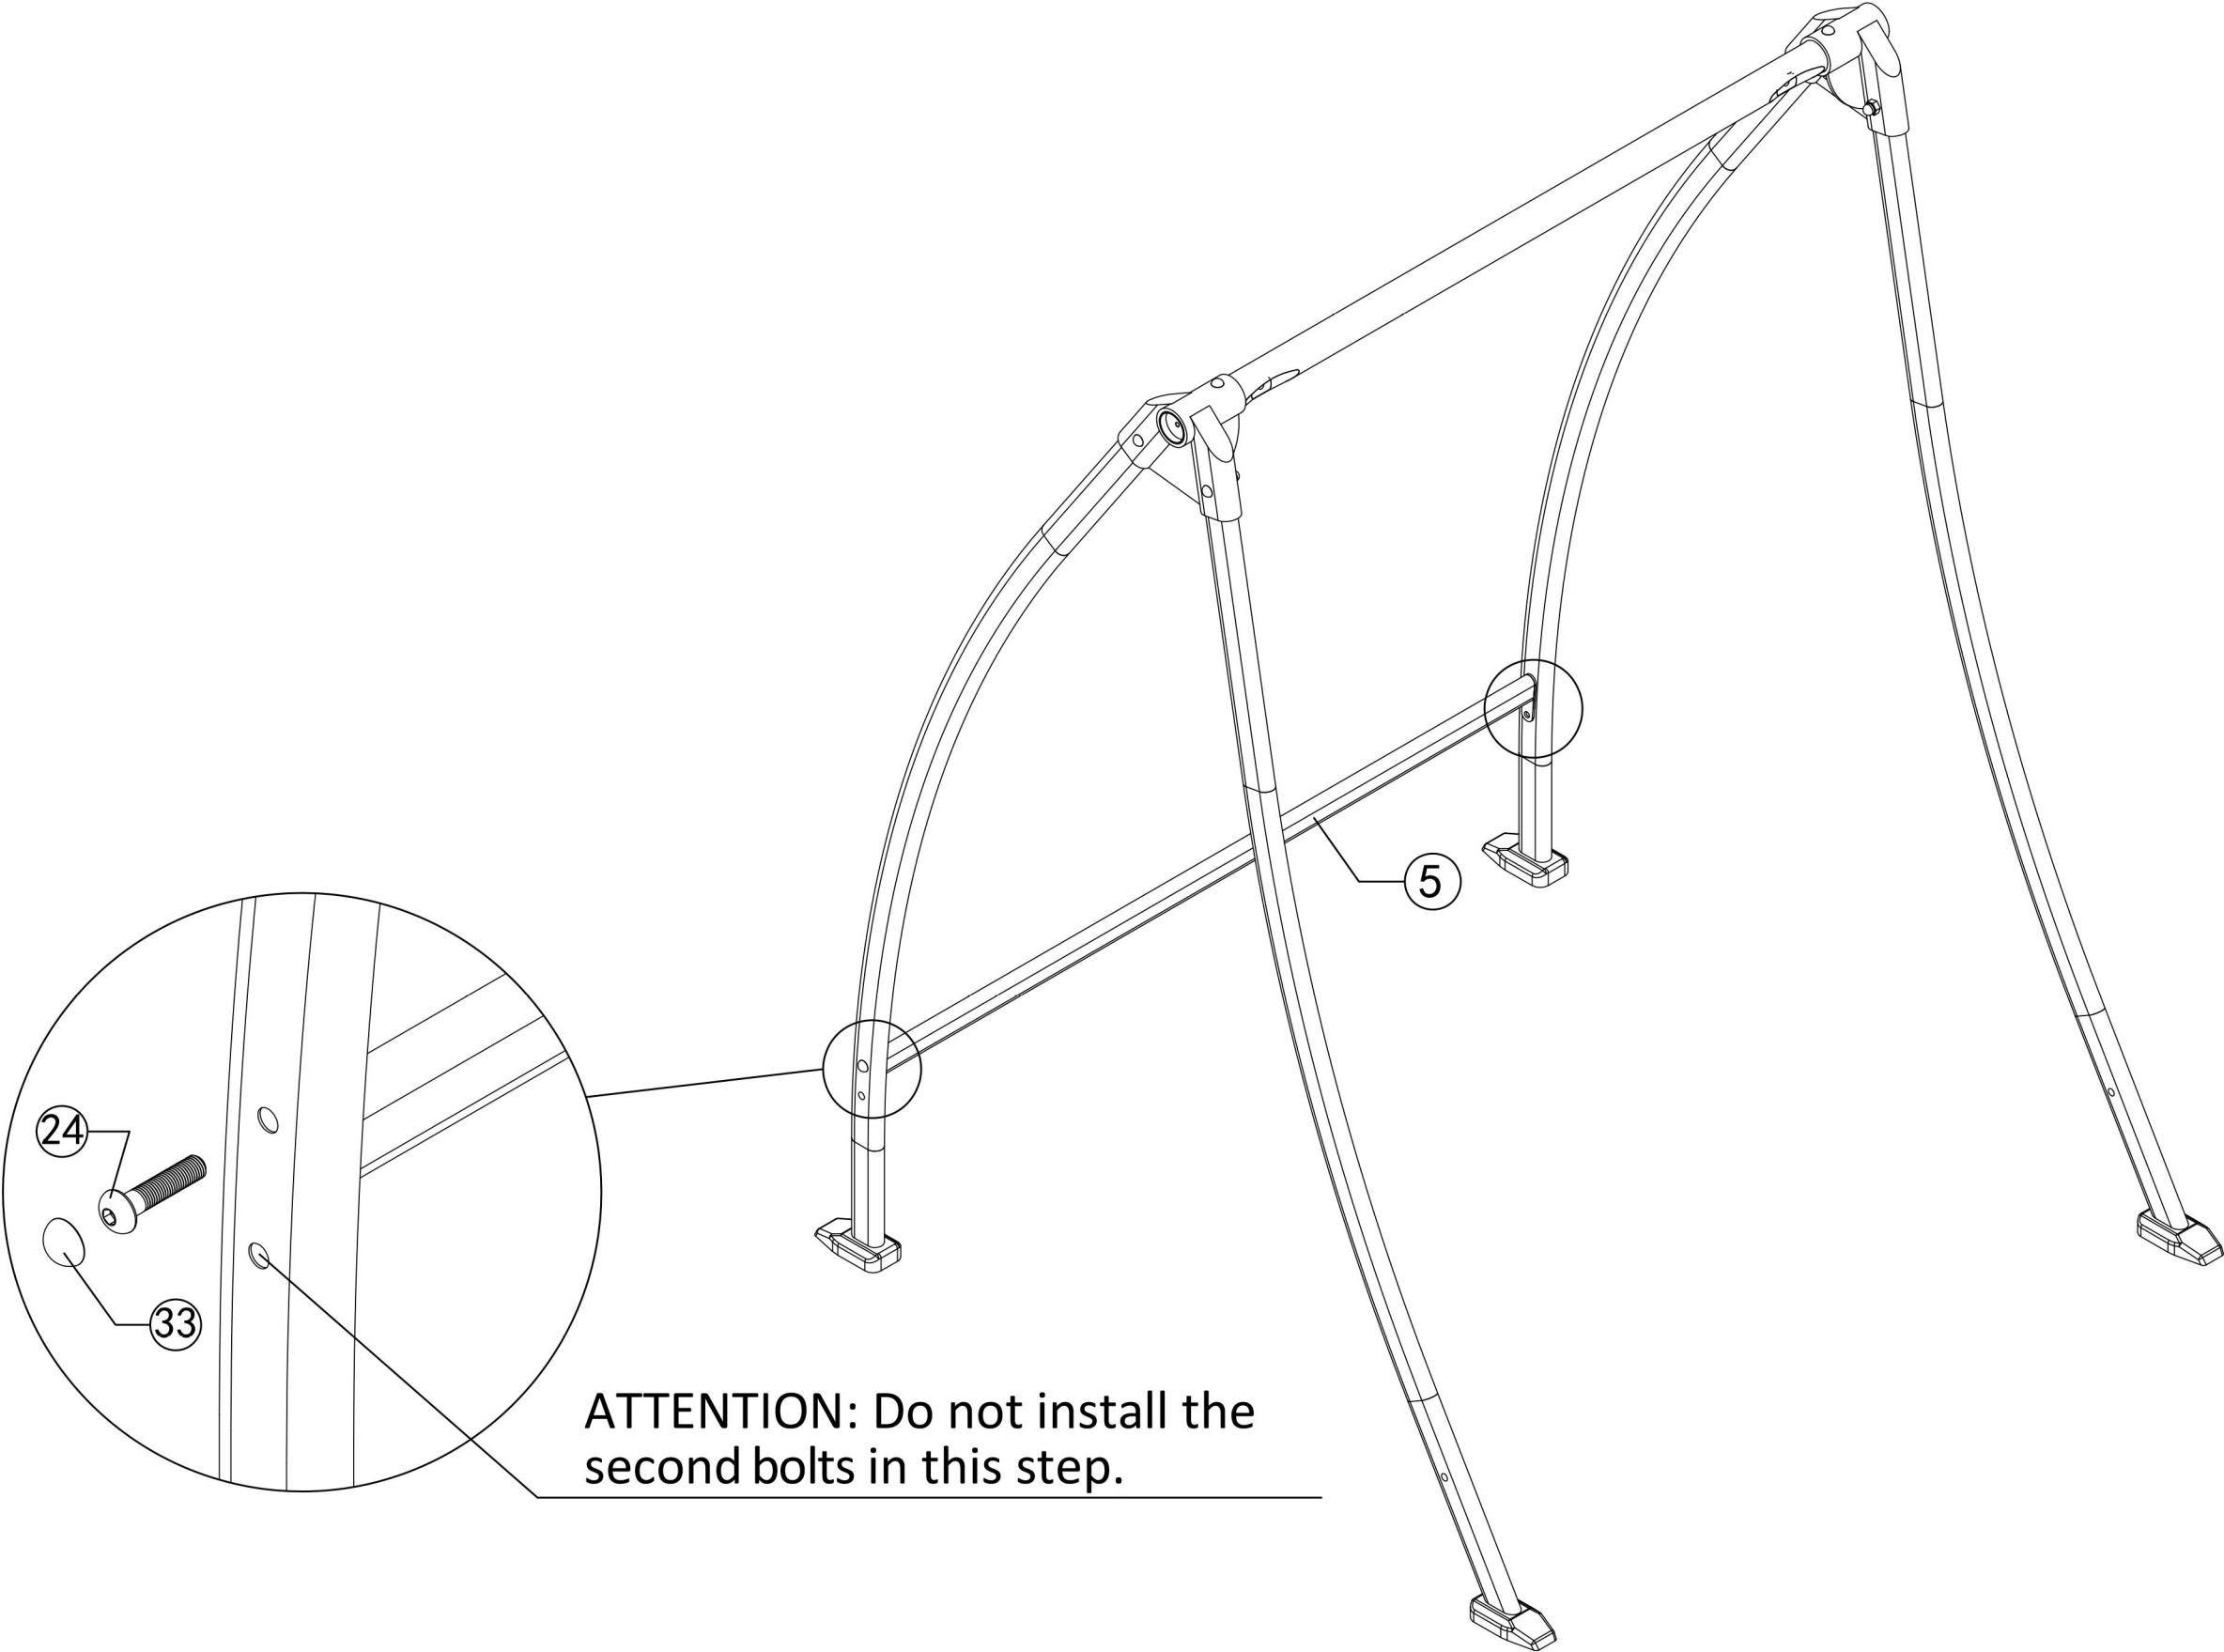




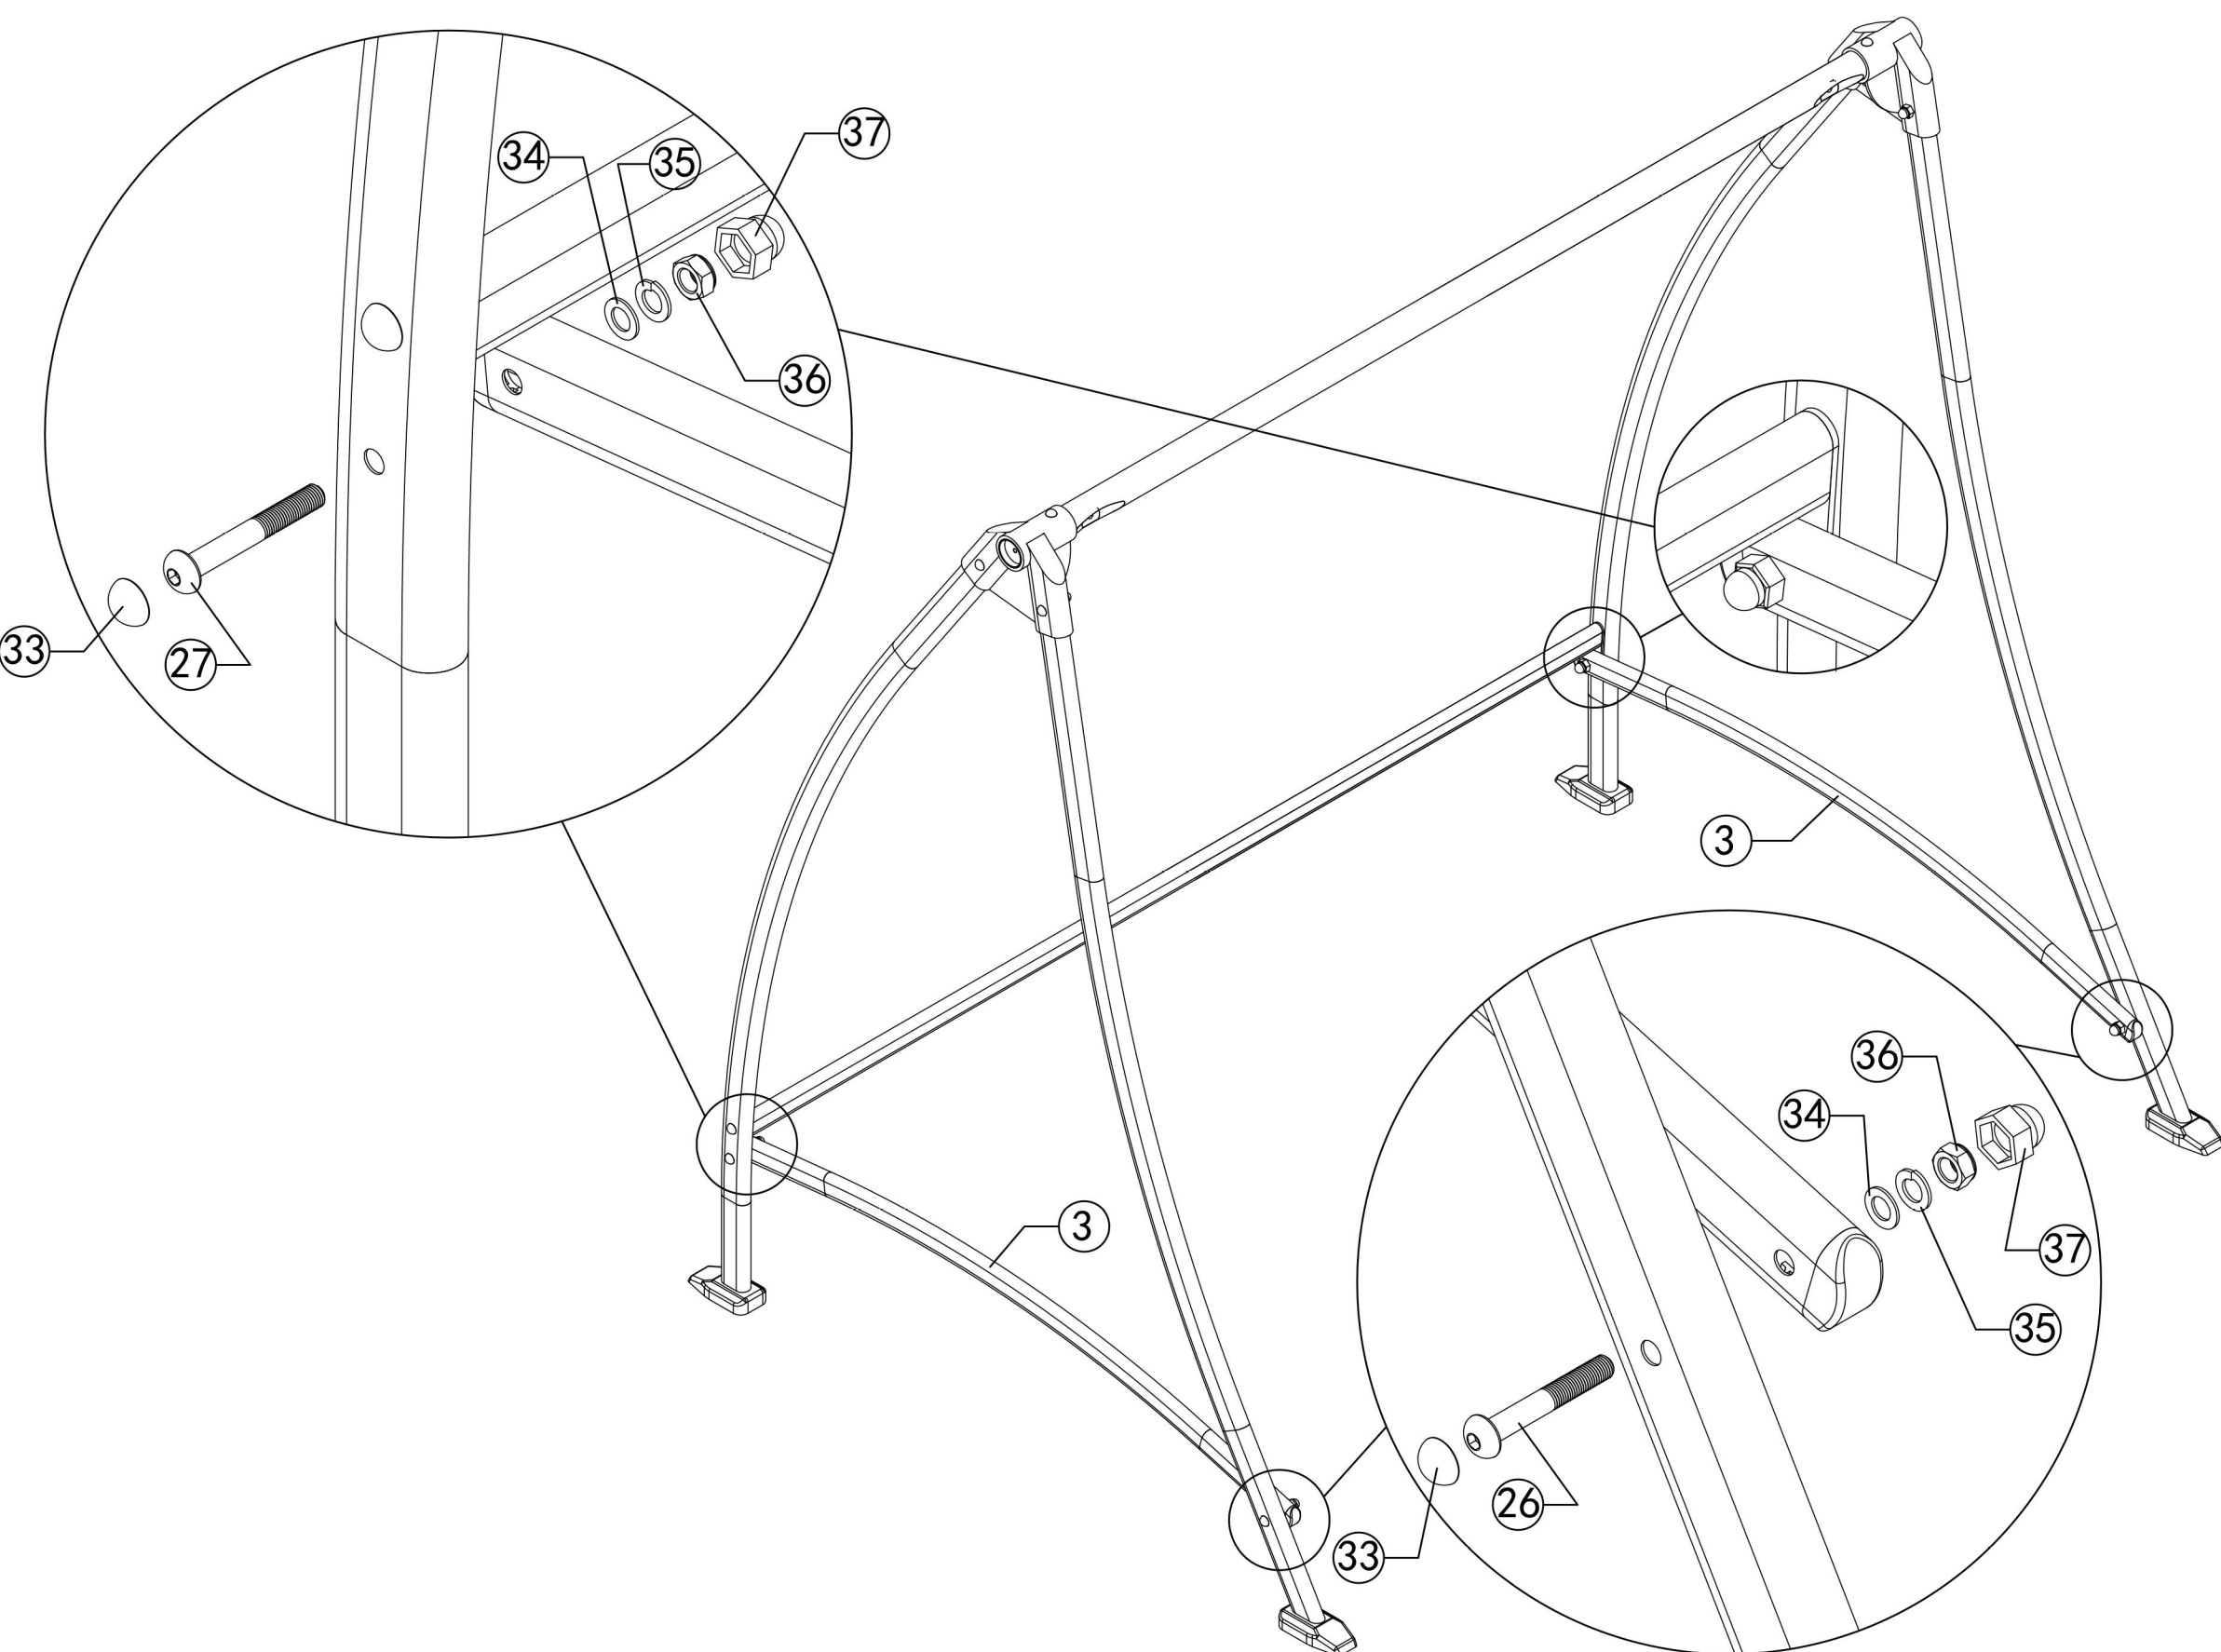
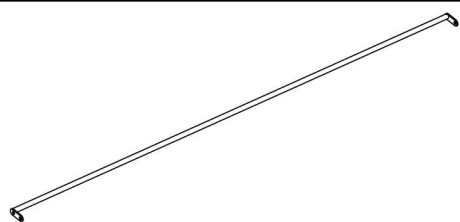
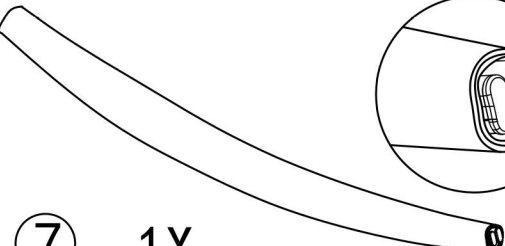
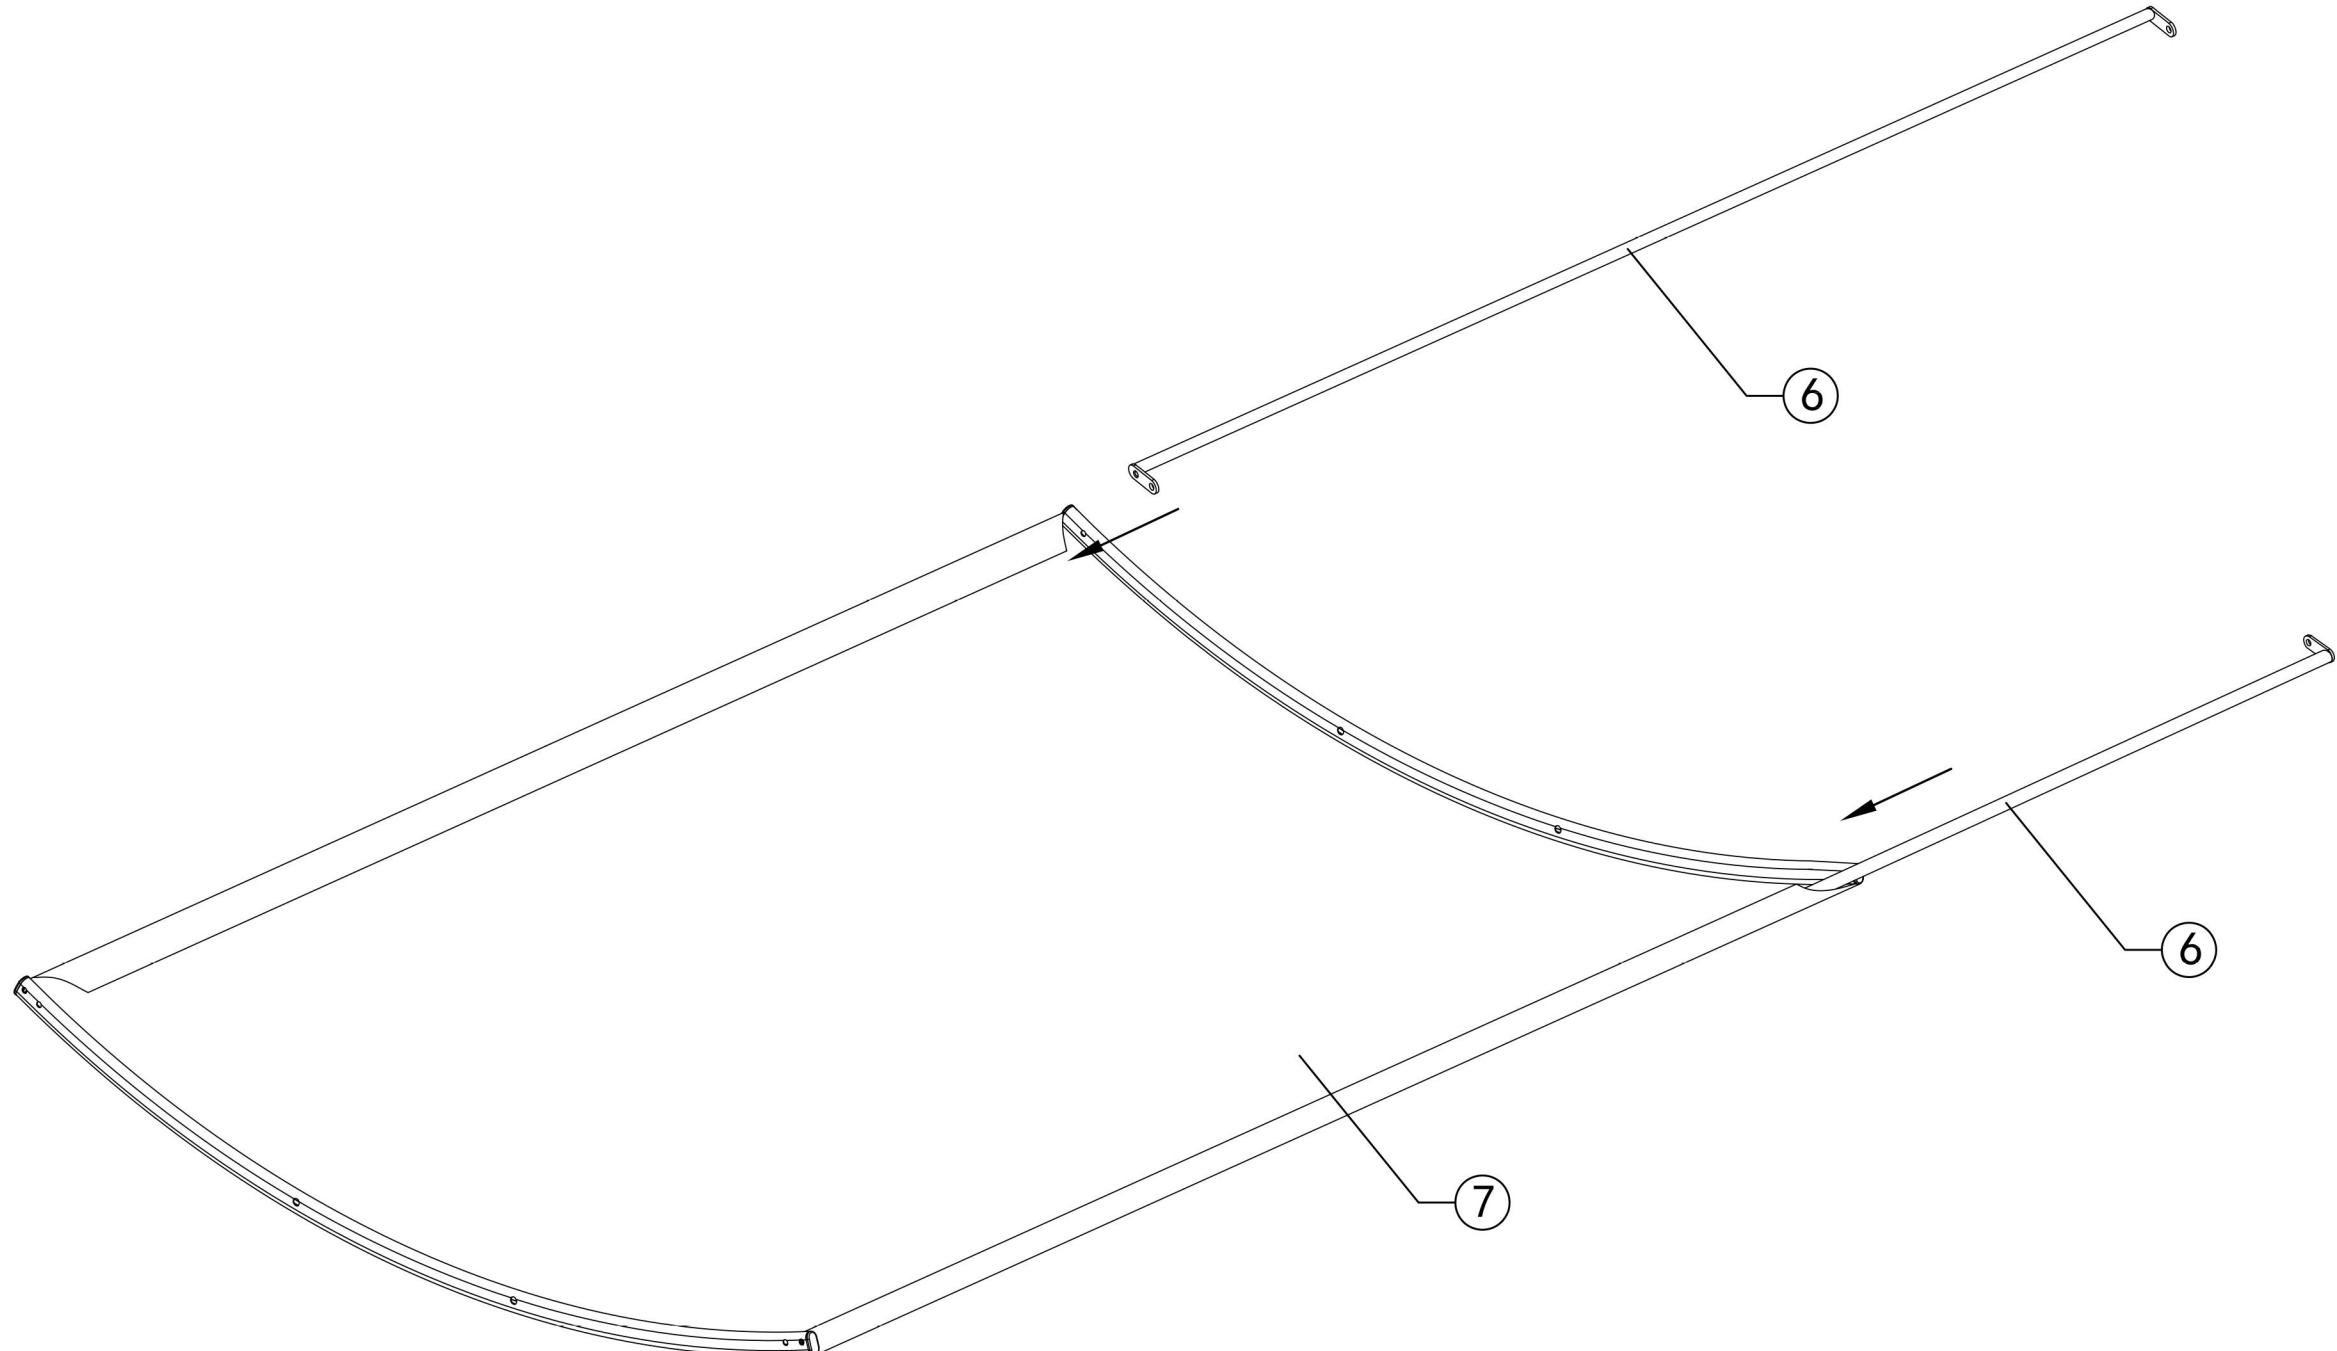
Step 1: Please find the required parts according to the instructions in the left frame, prepare a wooden hammer, and knock the plastic foot pad (Part 18) into the leg tube(Part 1) , knock Part 19 into the Part 2 as shown.

 ⑳ 1X	 ㉑ 1X
 ㉔ 4X	M8X45
 ㉓ 4X	M8
 ㉒ 4X	M8
 ㉖ 4X	M8
 ㉗ 4X	M8
 ㉙ 1X	S5
 ㉚ 1X	

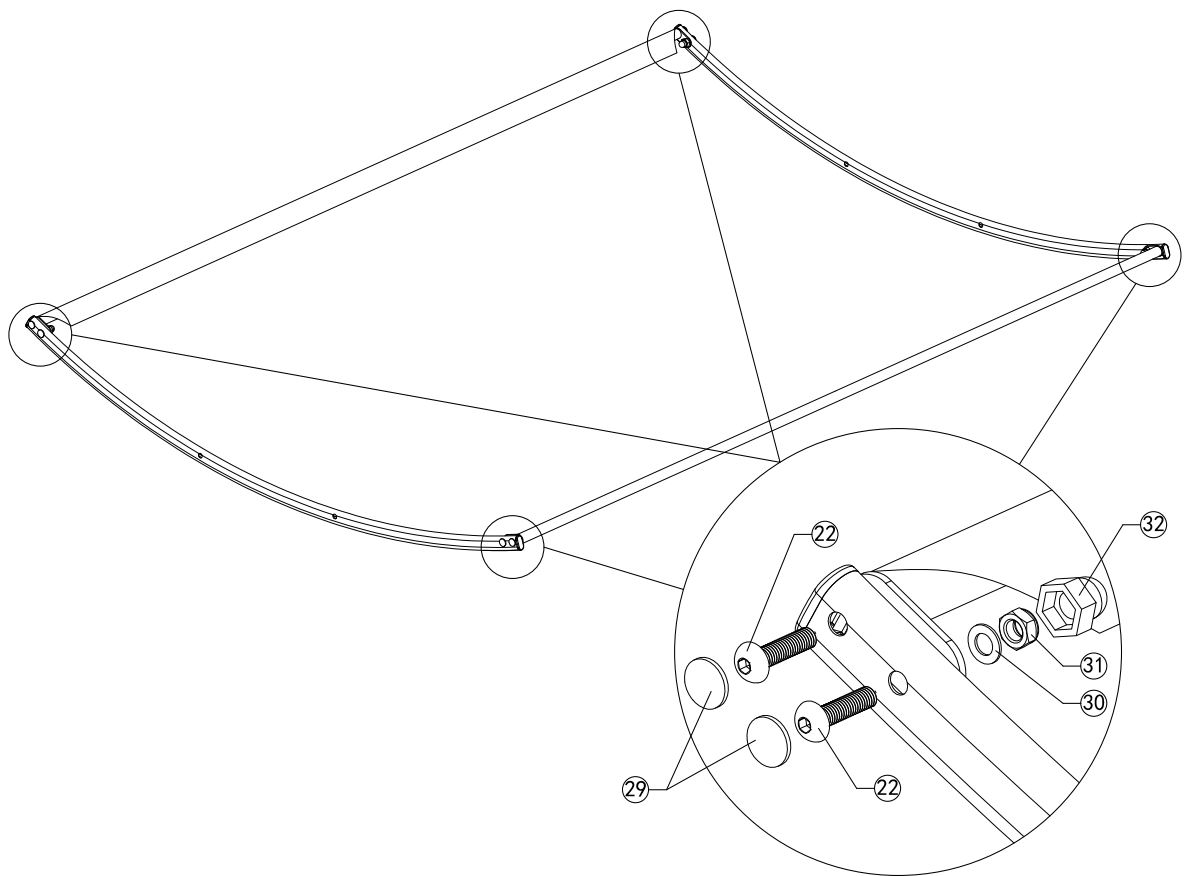


Step 2: Put the front and rear leg tubes (Part 1 is front leg tube, Part 2 is rear leg tube) into the fixator (Part 20 and Part 21) as shown, and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).

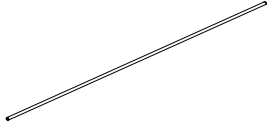
 ④ 1X  ②⑧ 2X M8X65  ③③ 2X M8  ③④ 2X M8  ③⑥ 2X M8  ③⑦ 2X M8  ③⑨ 1X S5  ④① 1X	
	Step 3: Put the beam(Part 4) assembly into the fixator according as shown, and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).
 ⑤ 1X  ②④ 2X M8X35  ③③ 2X M8  ③⑨ 1X S5	 ATTENTION: Do not install the second bolts in this step.
	Step 4: Connect the bar (part 5) to the rear leg tubes (Align the first holes and fix the bolts) as shown. After all the bolts are assembled in place, tighten them together, finally cover the caps.
3	

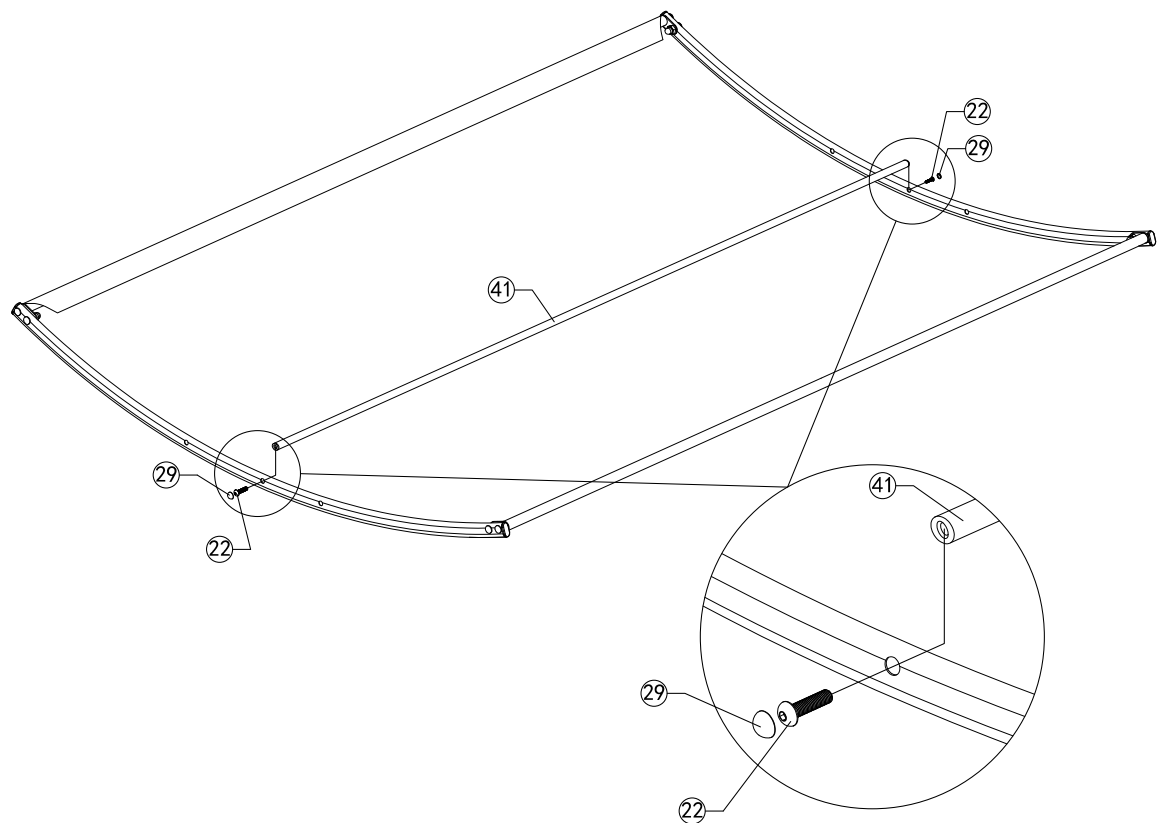
 ③ 2X  ②6 2X M8X55  ②7 2X M8X60  ③3 4X M8  ③4 4X M8  ③5 4X M8  ③6 4X M8  ③7 4X M8  ③9 1X S5  ④0 1X	 Step 5: Assemble the Part 3 to the front and rear leg tubes (Align the second holes and secure the bolts). Secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).
 ⑥ 2X  ⑦ 1X	 Step 6: Gently Insert the roof tubes (Part 6) into the canopy (Part 7).
4	

		
22	8X	M6X25
		
29	8X	M6
		
30	4X	M6
		
31	4X	M6
		
32	4X	M6
		
38	1X	S4
		
40	1X	



Step 7: Secure the four corners of the canopy with bolts and nuts as required
(After all the bolts are assembled in place, tighten them together, finally cover the caps).

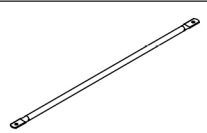
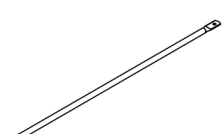
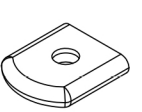
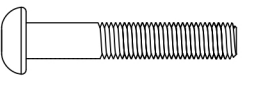
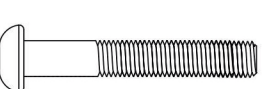
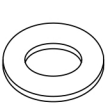
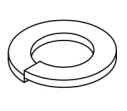
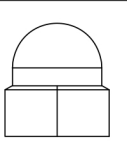
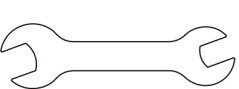
		
41	1X	
		
22	2X	M6X25
		
29	2X	M6
		
38	1X	S4

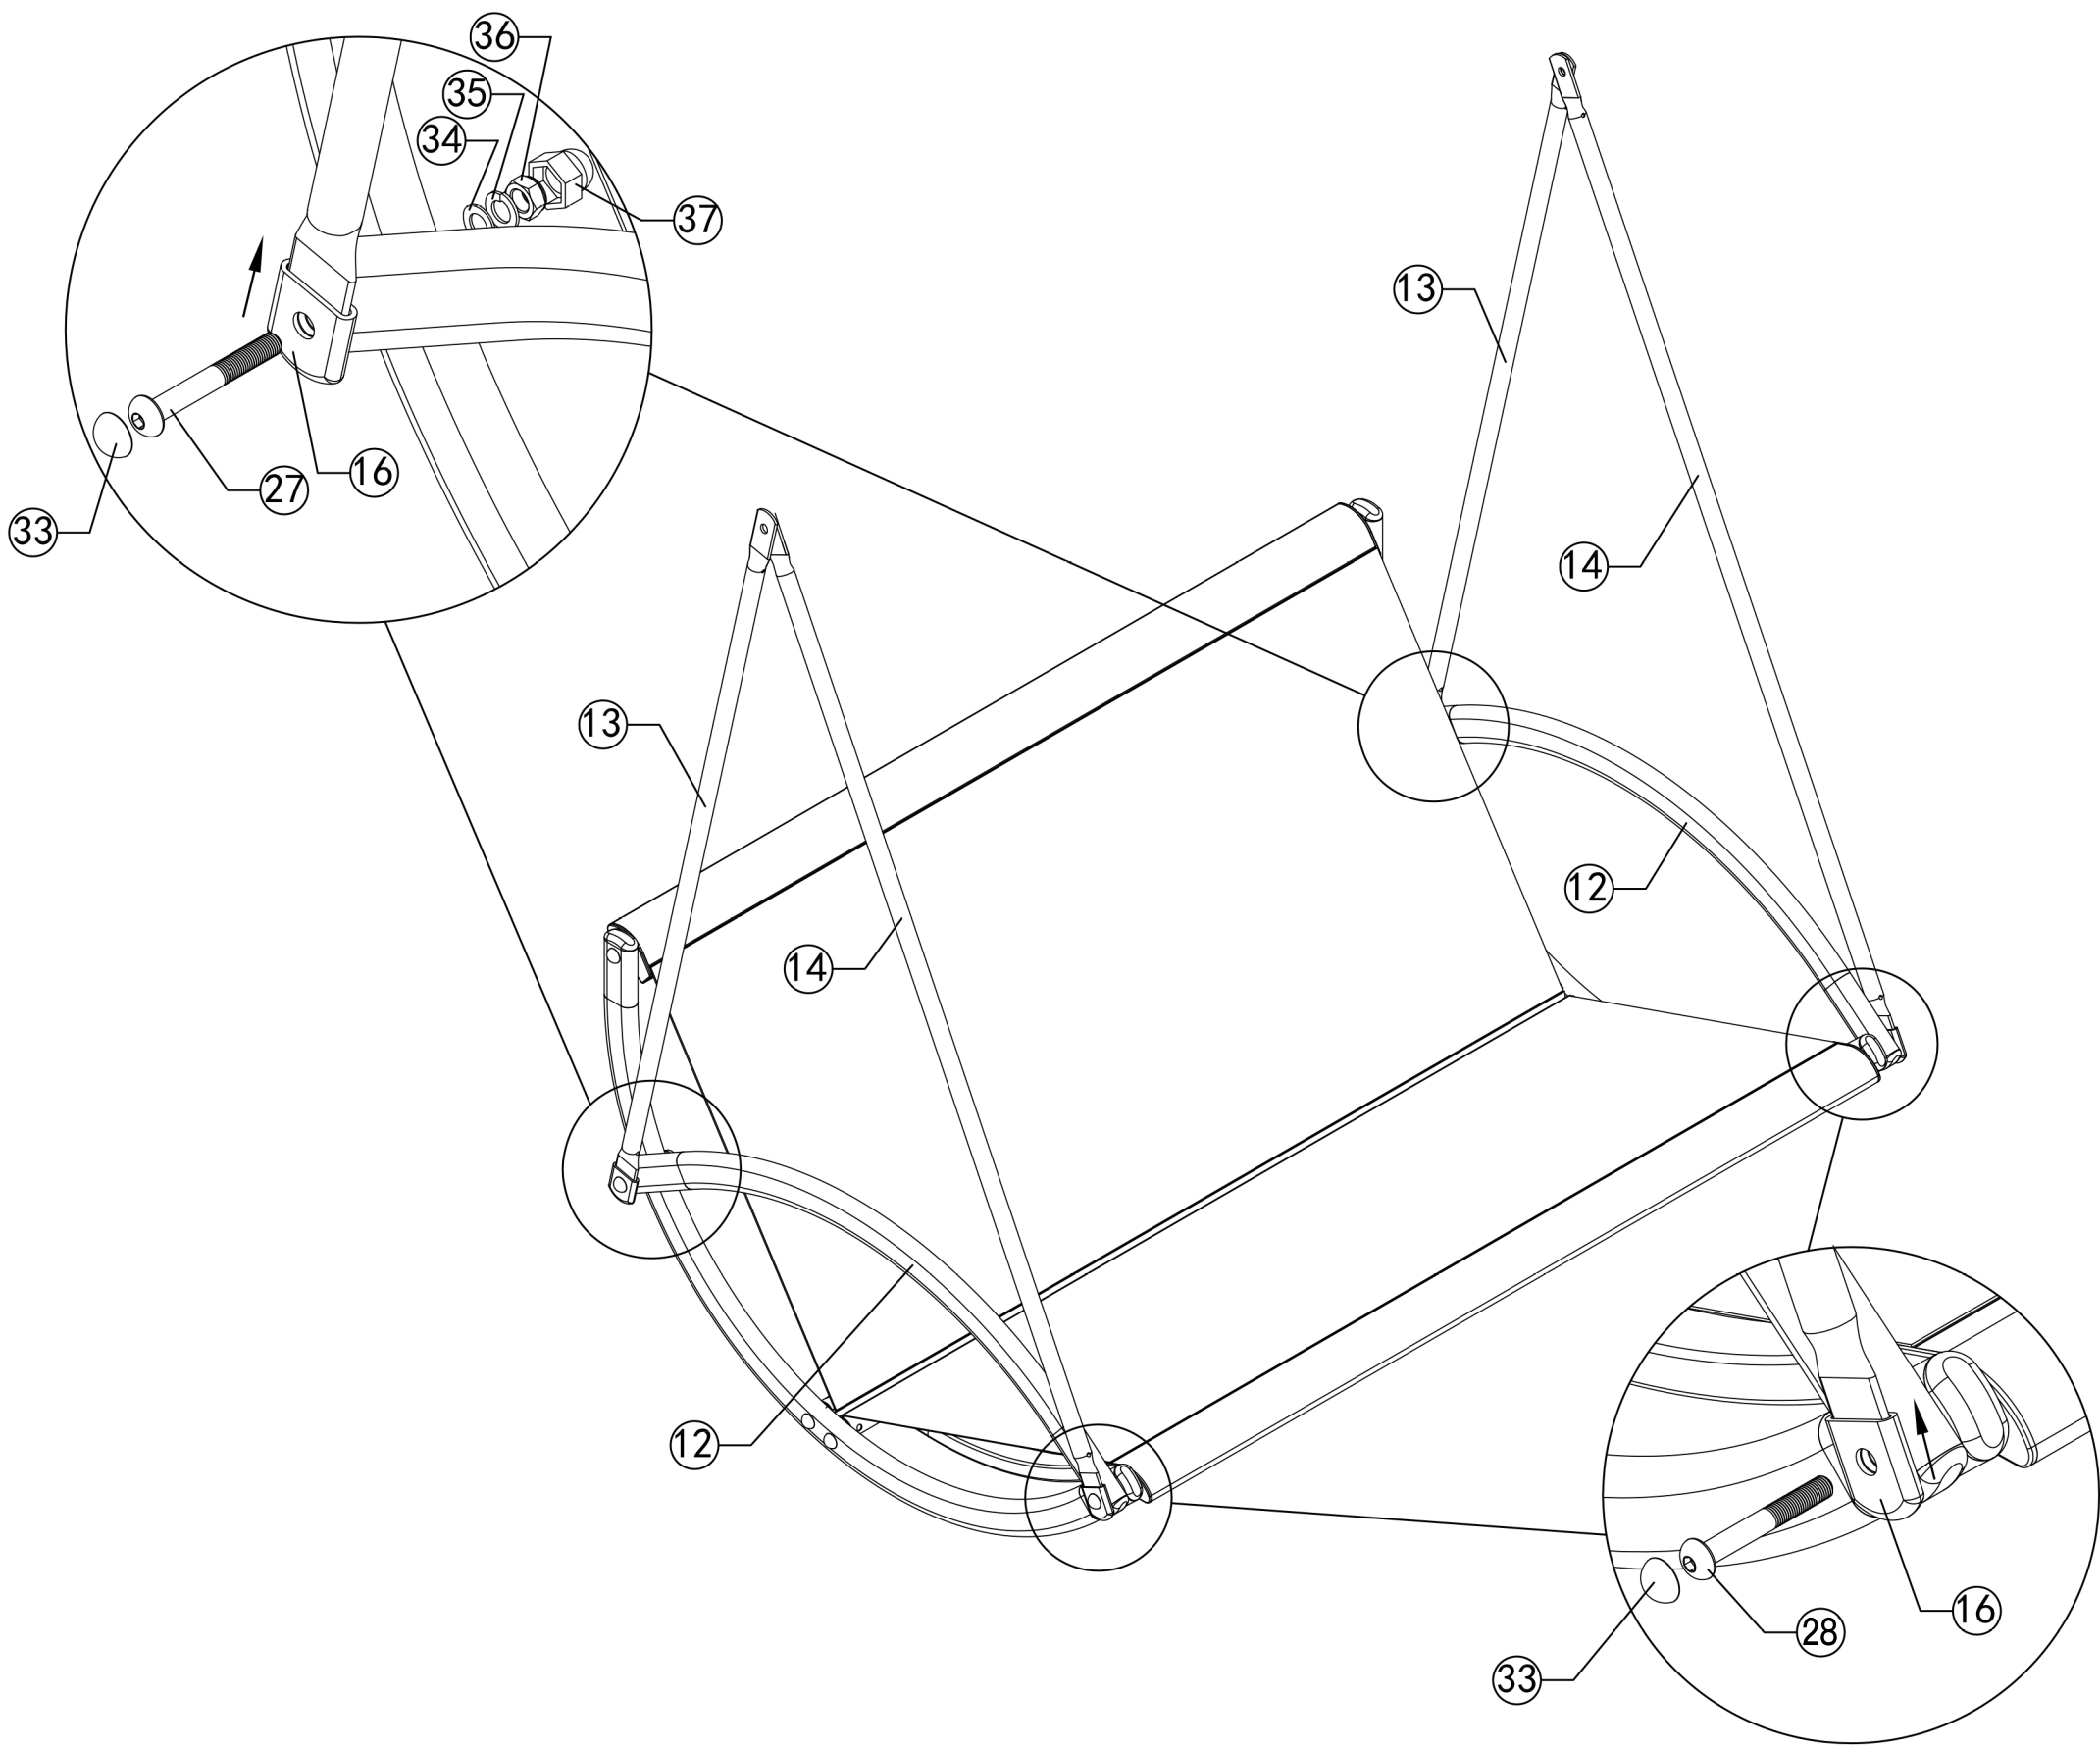


Use 2 bolts #22 to secure the middle roof support tube #41 to form the canopy frame.

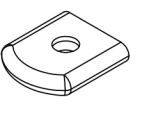
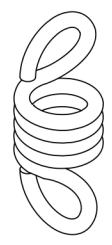
⑧ 2X ②③ 4X M8X30 ③③ 4X M8 ③④ 4X M8 ③⑥ 4X M8 ③⑦ 4X M8 ③⑨ 1X S5 ④① 1X	
	Step 8: Install Part 8 to top canopy. Align the holes and secure with bolts and nuts as required as required(After all the bolts are assembled in place, tighten them together, finally cover the caps).
5-2	

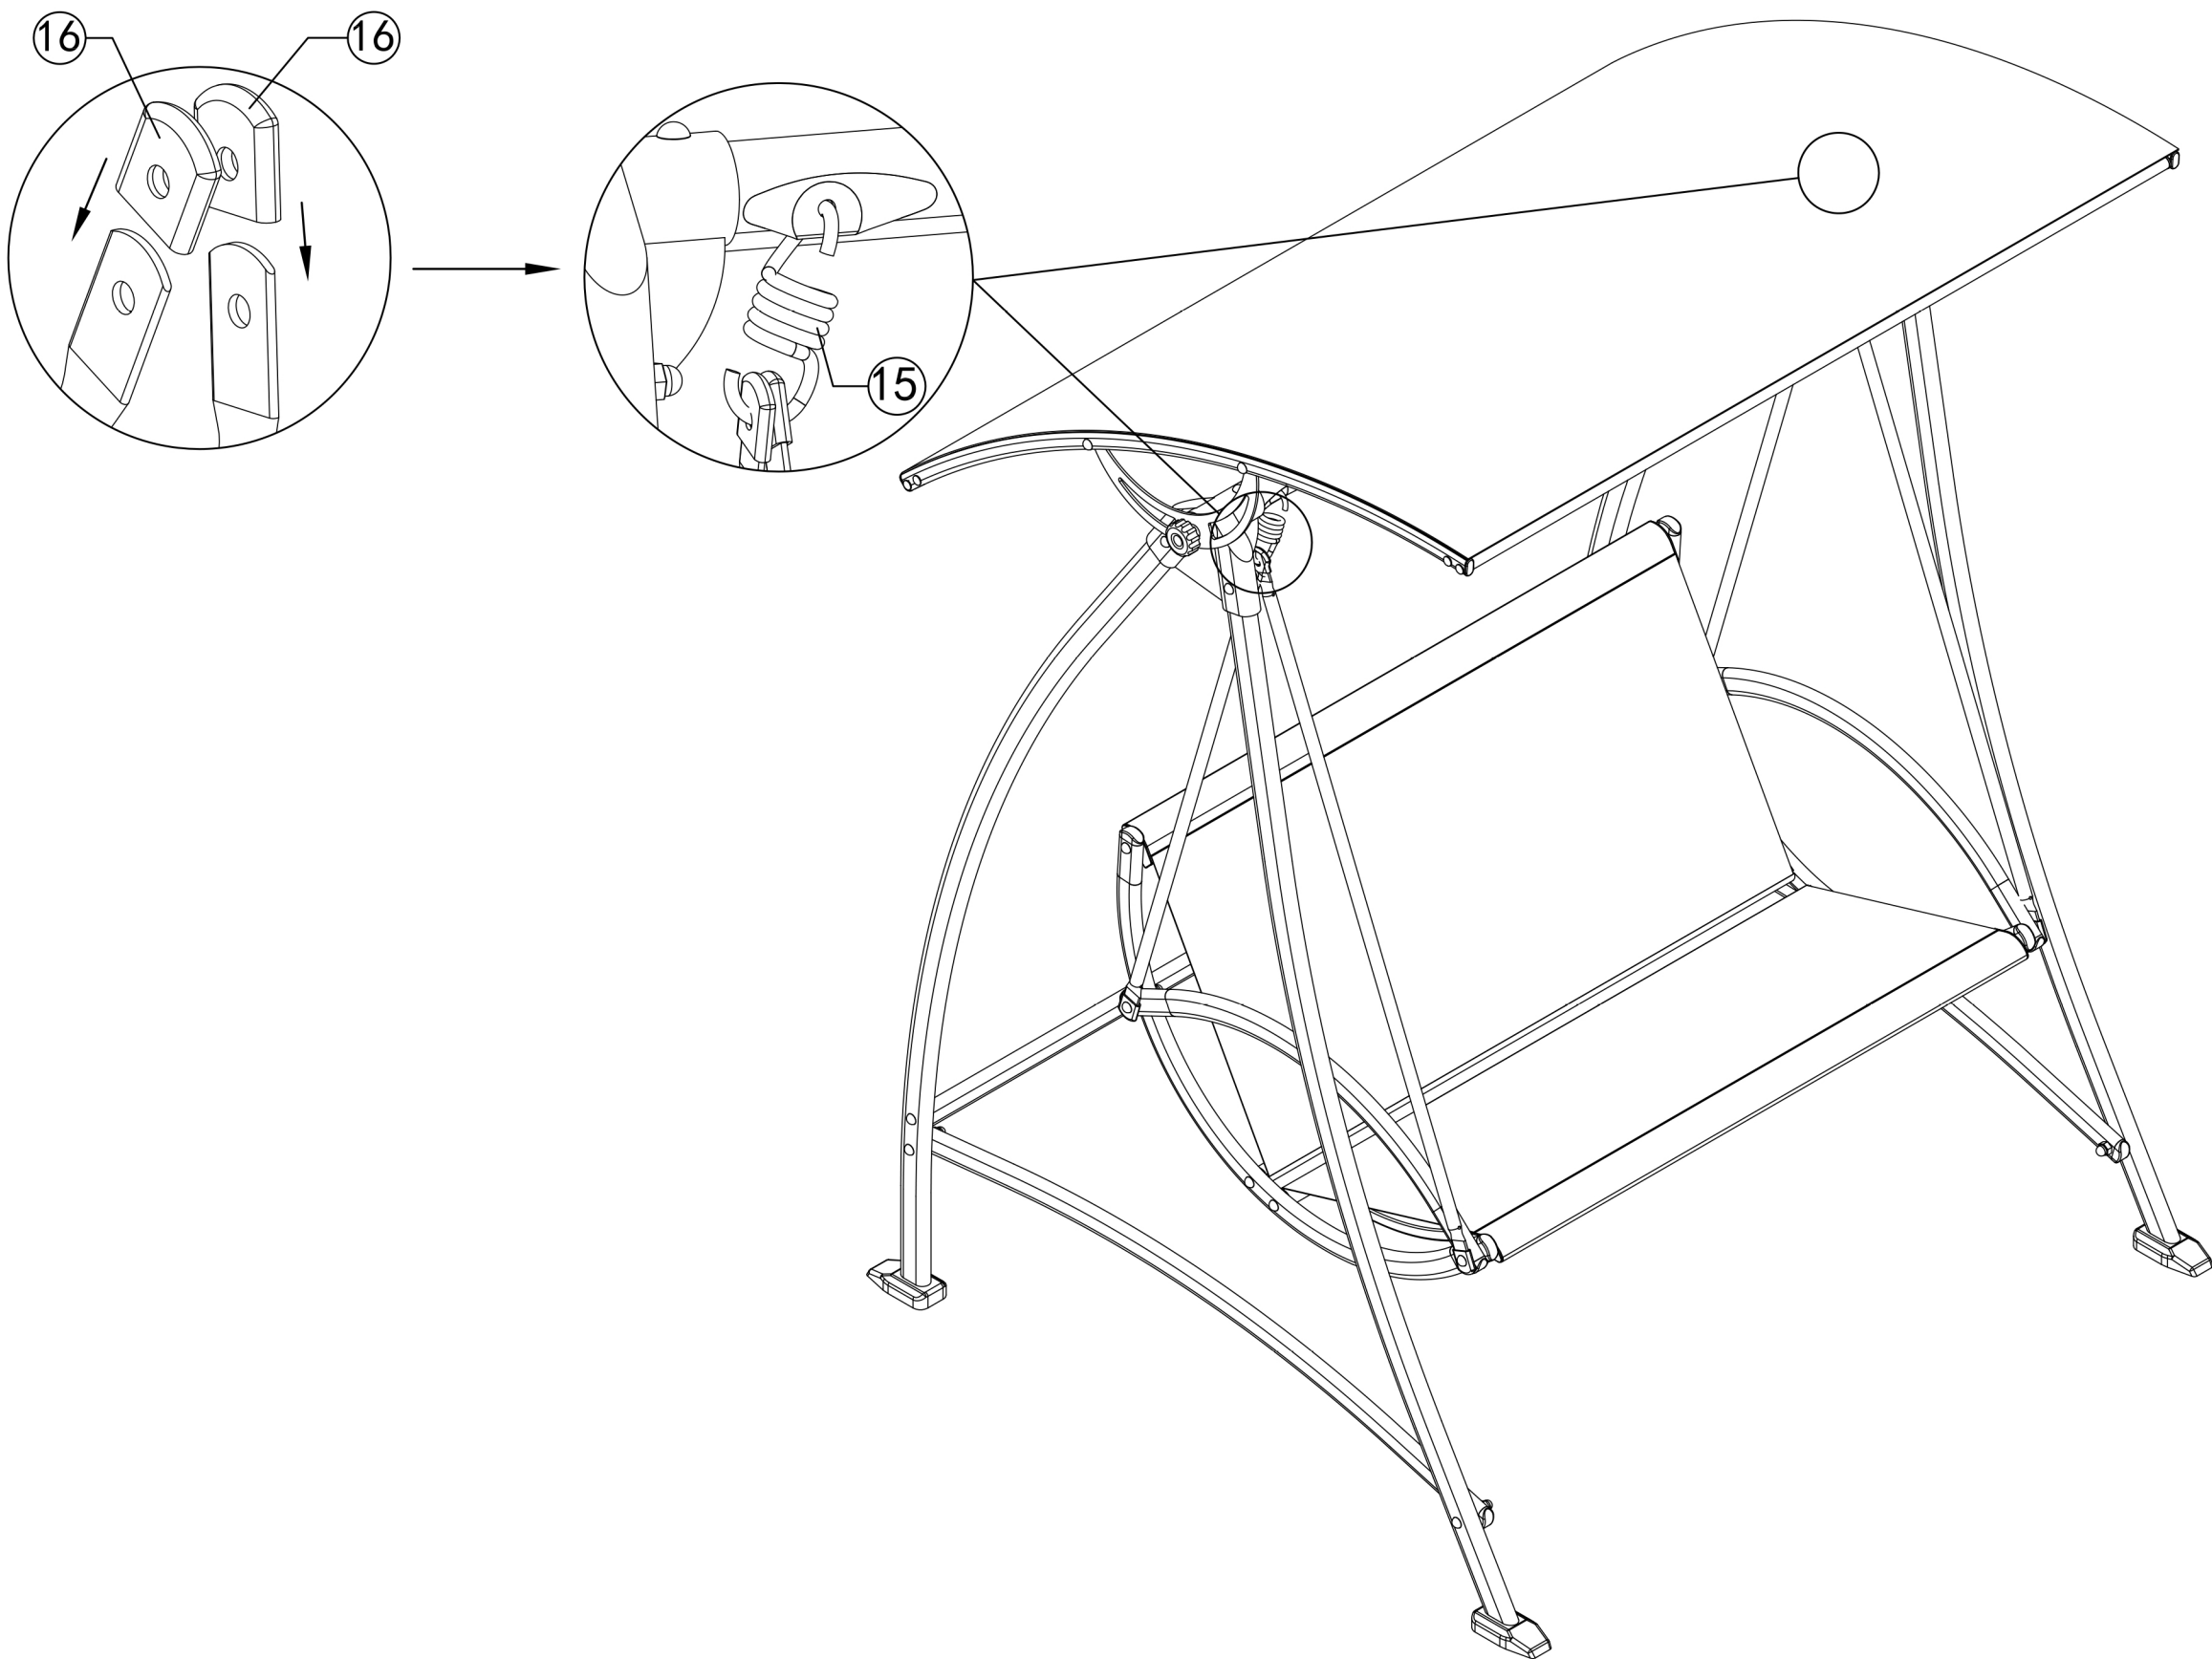
17 2X	Step 9: Fix the canopy on the assembled leg frame with the adjusting knob (Part 17) as shown. Attention: According to your own requirements to adjust canopy roof, then tighten the knob.
9 2X 10 1X 11 1X 33 6X M8 24 6X M8X35 39 1X S5	ATTENTION: Do not install the bolts in this step. Step 10: Use bolt #24 to secure fixing tube (Part 9) on back (part 10) and seat (Part 11)as shown, secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).
6	

12	2X	
13	2X	
14	2X	
16	4X	
27	2X	M8X60 
28	2X	M8x65 
33	4X	M8 
34	2X	M8 
35	2X	M8 
36	2X	M8 
37	2X	M8 
39	1X	S5 
40	1X	



Step 11: Install swing booms and armrests. First fit part 16 on short swing booms (Part 13) and long swing booms (Part 14). Then align the holes and secure with bolts and nuts as required (After all the bolts are assembled in place, tighten them together, finally cover the caps).

16	4X	
15	2X	



Step 12: Insert Part 16 into the swing booms as shown, and hang it on the swing beam with hanging spring (Part 15).

