
METAL OUTDOOR STORAG

Product ID. 7EY4Y

Scan for Support
support@garvee.com

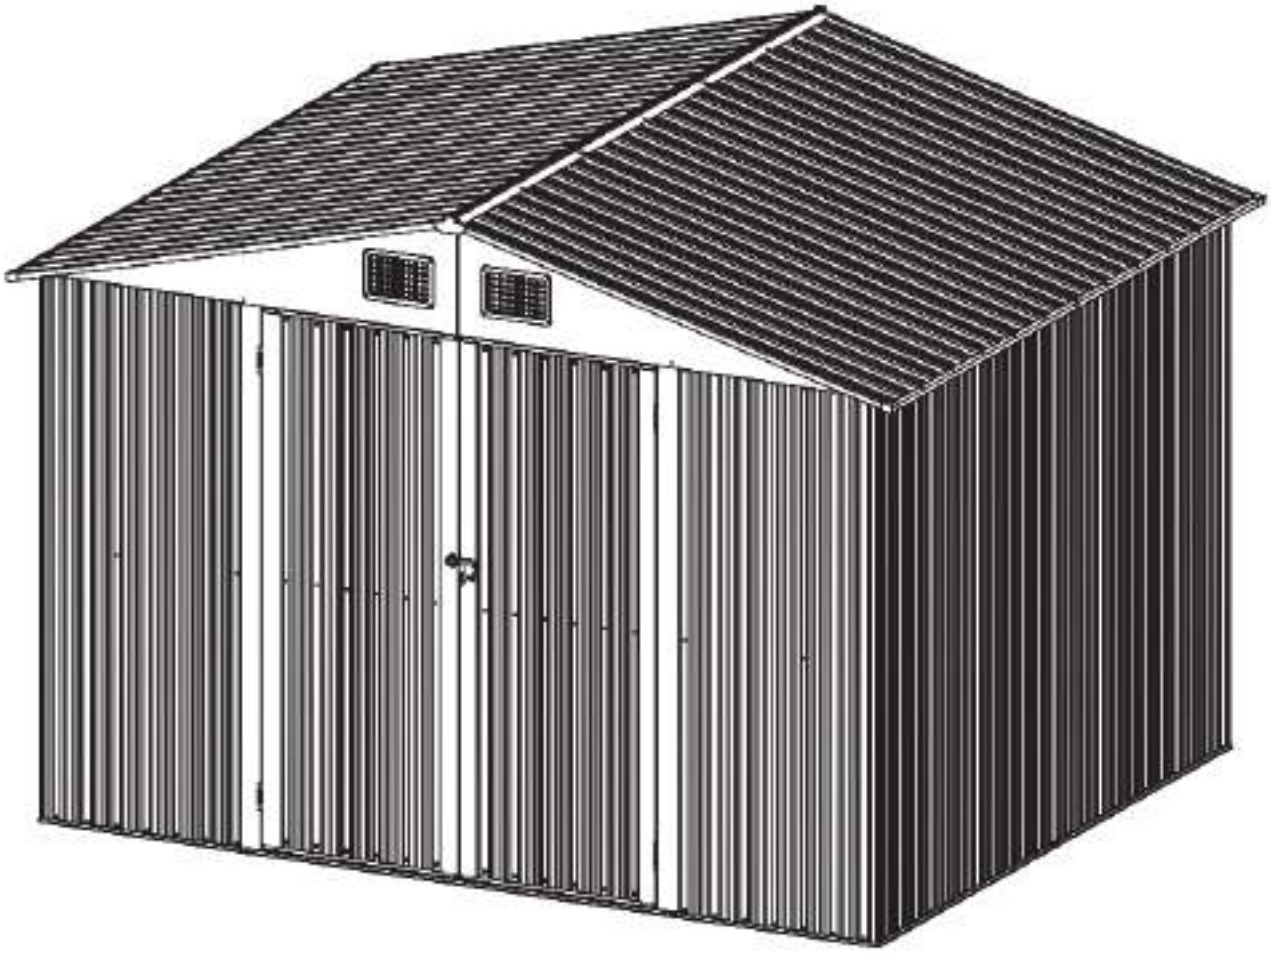


Distributed by

GARVEE.com

METAL BIN STORE

Instruction Manual

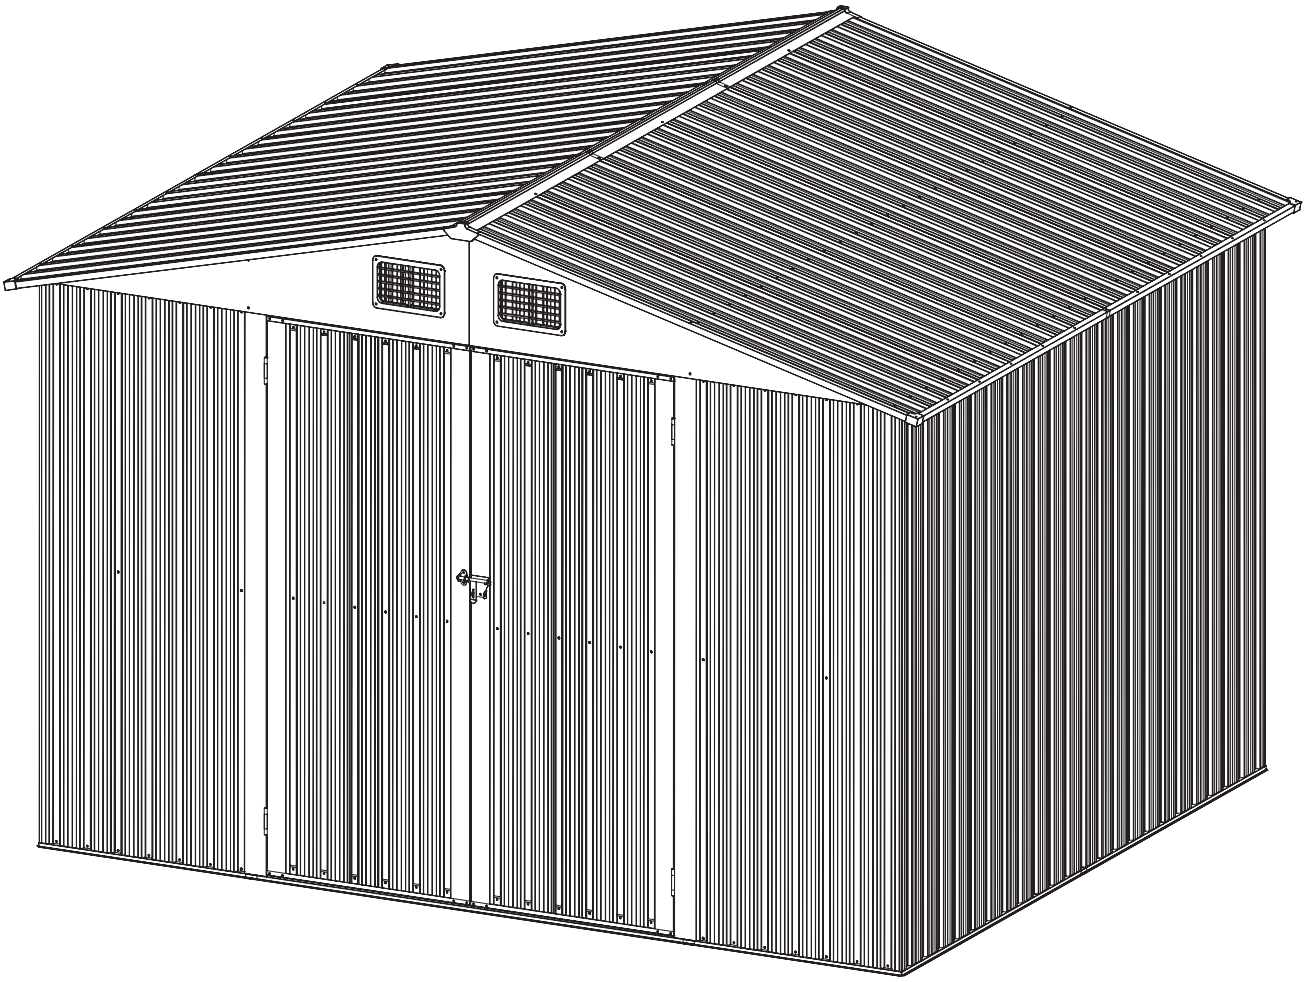

Requires two people and takes 2-3 hours for Installation.

Quick & Easy Assembly

Ridge Reinforced Walls

BEFORE YOU START

Owner's Manual

Prior to installation, it is important that you contact your local government authority to determine if building approval is required. Study and understand this owner's manual. Important information and helpful tips will make your construction easier and more enjoyable.


Assembly instructions

Instructions are supplied in this manual and contain all appropriate information for your building model. Review all instructions before you begin. During assembly, follow the step sequence carefully for correct results. Please be aware: **this unit takes two people about one full day to complete**

Parts


Check to be sure that you have all the necessary parts for the building.
Separate contents of the carton by the part number while reviewing parts list.
Familiarize yourself with the hardware and fasteners for easier use during construction. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.

TOOLS MAY REQUIRED

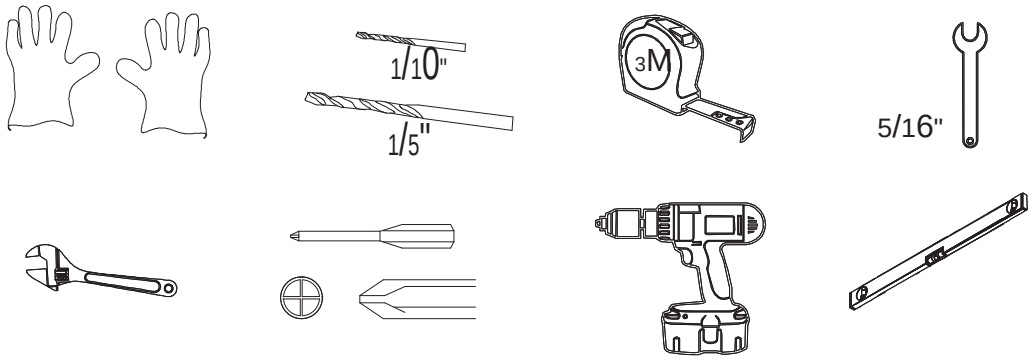

Use heavy duty gloves when handling steel sheets and flashing

PLAN AHEAD

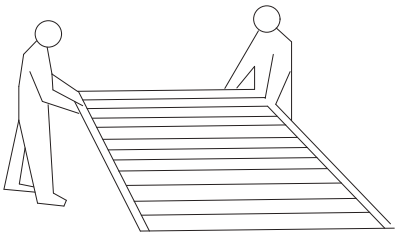

Watch the weather:
Please be sure the day you select for installation is dry and calm.

DO NOT attempt to assemble your shed in windy weather because of risk of damage to panels, or personal injury. Be careful of wet or muddy ground.

Teamwork:
Whenever possible, two or more people should work together to assemble the building. One person can position parts or panels while the other is able to handle the fasteners and the tools.

PLAN AHEAD

Site Selection

- Avoid overhanging trees as much as possible as leaves will make regular cleaning necessary and broken branches are a potential hazard.
- Small trees,bushes or fences nearby can be helpful,acting as a wind break.

Site Preparation


The site must be prepared so that the base of the shed is level all round and checking with a spirit level is required.

The base can be constructed by treated timber or concrete,in order to stop the moisture getting into the shed.**The shed is not designed to be built onto lawn directly.**Also the ground will get muddy during rainy days.

If a concrete pad is made,it is important that this slopes towards the edges to prevent water ingress.
Time must be allowed for any concrete or cement to dry before building the shed on top.

Bases can also be constructed from bricks,blocks,or mounted on a concrete pad.
The bricks or blocks should be cemented onto firm and level concrete footings and the greenhouse frame drilled and screwed to the base.

sharp edges




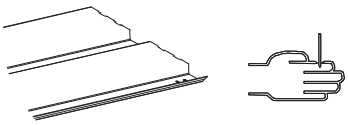





Pay attention to the sharp edges. Please wear work gloves, long sleeves and eye glasses, when assembling or performing.

IMPORTANT NOTES:




- Find someone to help you:it is much easier with someone to hold parts,pass tools ect.Also some steps require two people to lift structures together.This is not very heavy work so would suit most able-bodied people.
- Allow plenty of time:rushing often causes errors and the re-doing of incorrect assemblies.If you have never built a shed before,it can take most of a day to carefully complete the construction.
- Have the right tools to hand.
- Safety clothing as recommended in the 'Tools' section.
- Ideally lat out the parts and check that all are present before commencing construction.Lay on cloths or plastic sheets if there is any risk of scratching the parts.
- Tighten all nuts carefully,being sure not to miss any.Check the frame is square and using a spirit level to check that it is upright.

Profile Bar

NO.	PART	Qty.
1A		1
1B		1
2		2
3		2
4		2
4A		1
4B		1
5		1
6		2
6A		2
7		2
8A		1
8B		1
9		4
10		2
11		1
12		1
13		4
14		2
15A		1
15B		1
16		1
17		4
17A		4
18		4
18A		1
18B		1
19		4


NO.	PART	Qty.
20A		1
20B		1
21A		2
21B		2
22A		1
22B		1
23		4
24		2
25		2
26		2
27		2
28		2
29		2
30		1
31		2
32		1

Profile Bar

NO.	PART	Qty.
F1		510
F2		235
F3		12
S1		4
S2		530
GA		2
GB		2
GC		1
GD		4
GE		2
GF		2
GG		2
		2


NO.	PART	Qty.
P1		4
P2		5
P3		2
P4		2
P5		14
P6		20
D1		4

Explode View Explode

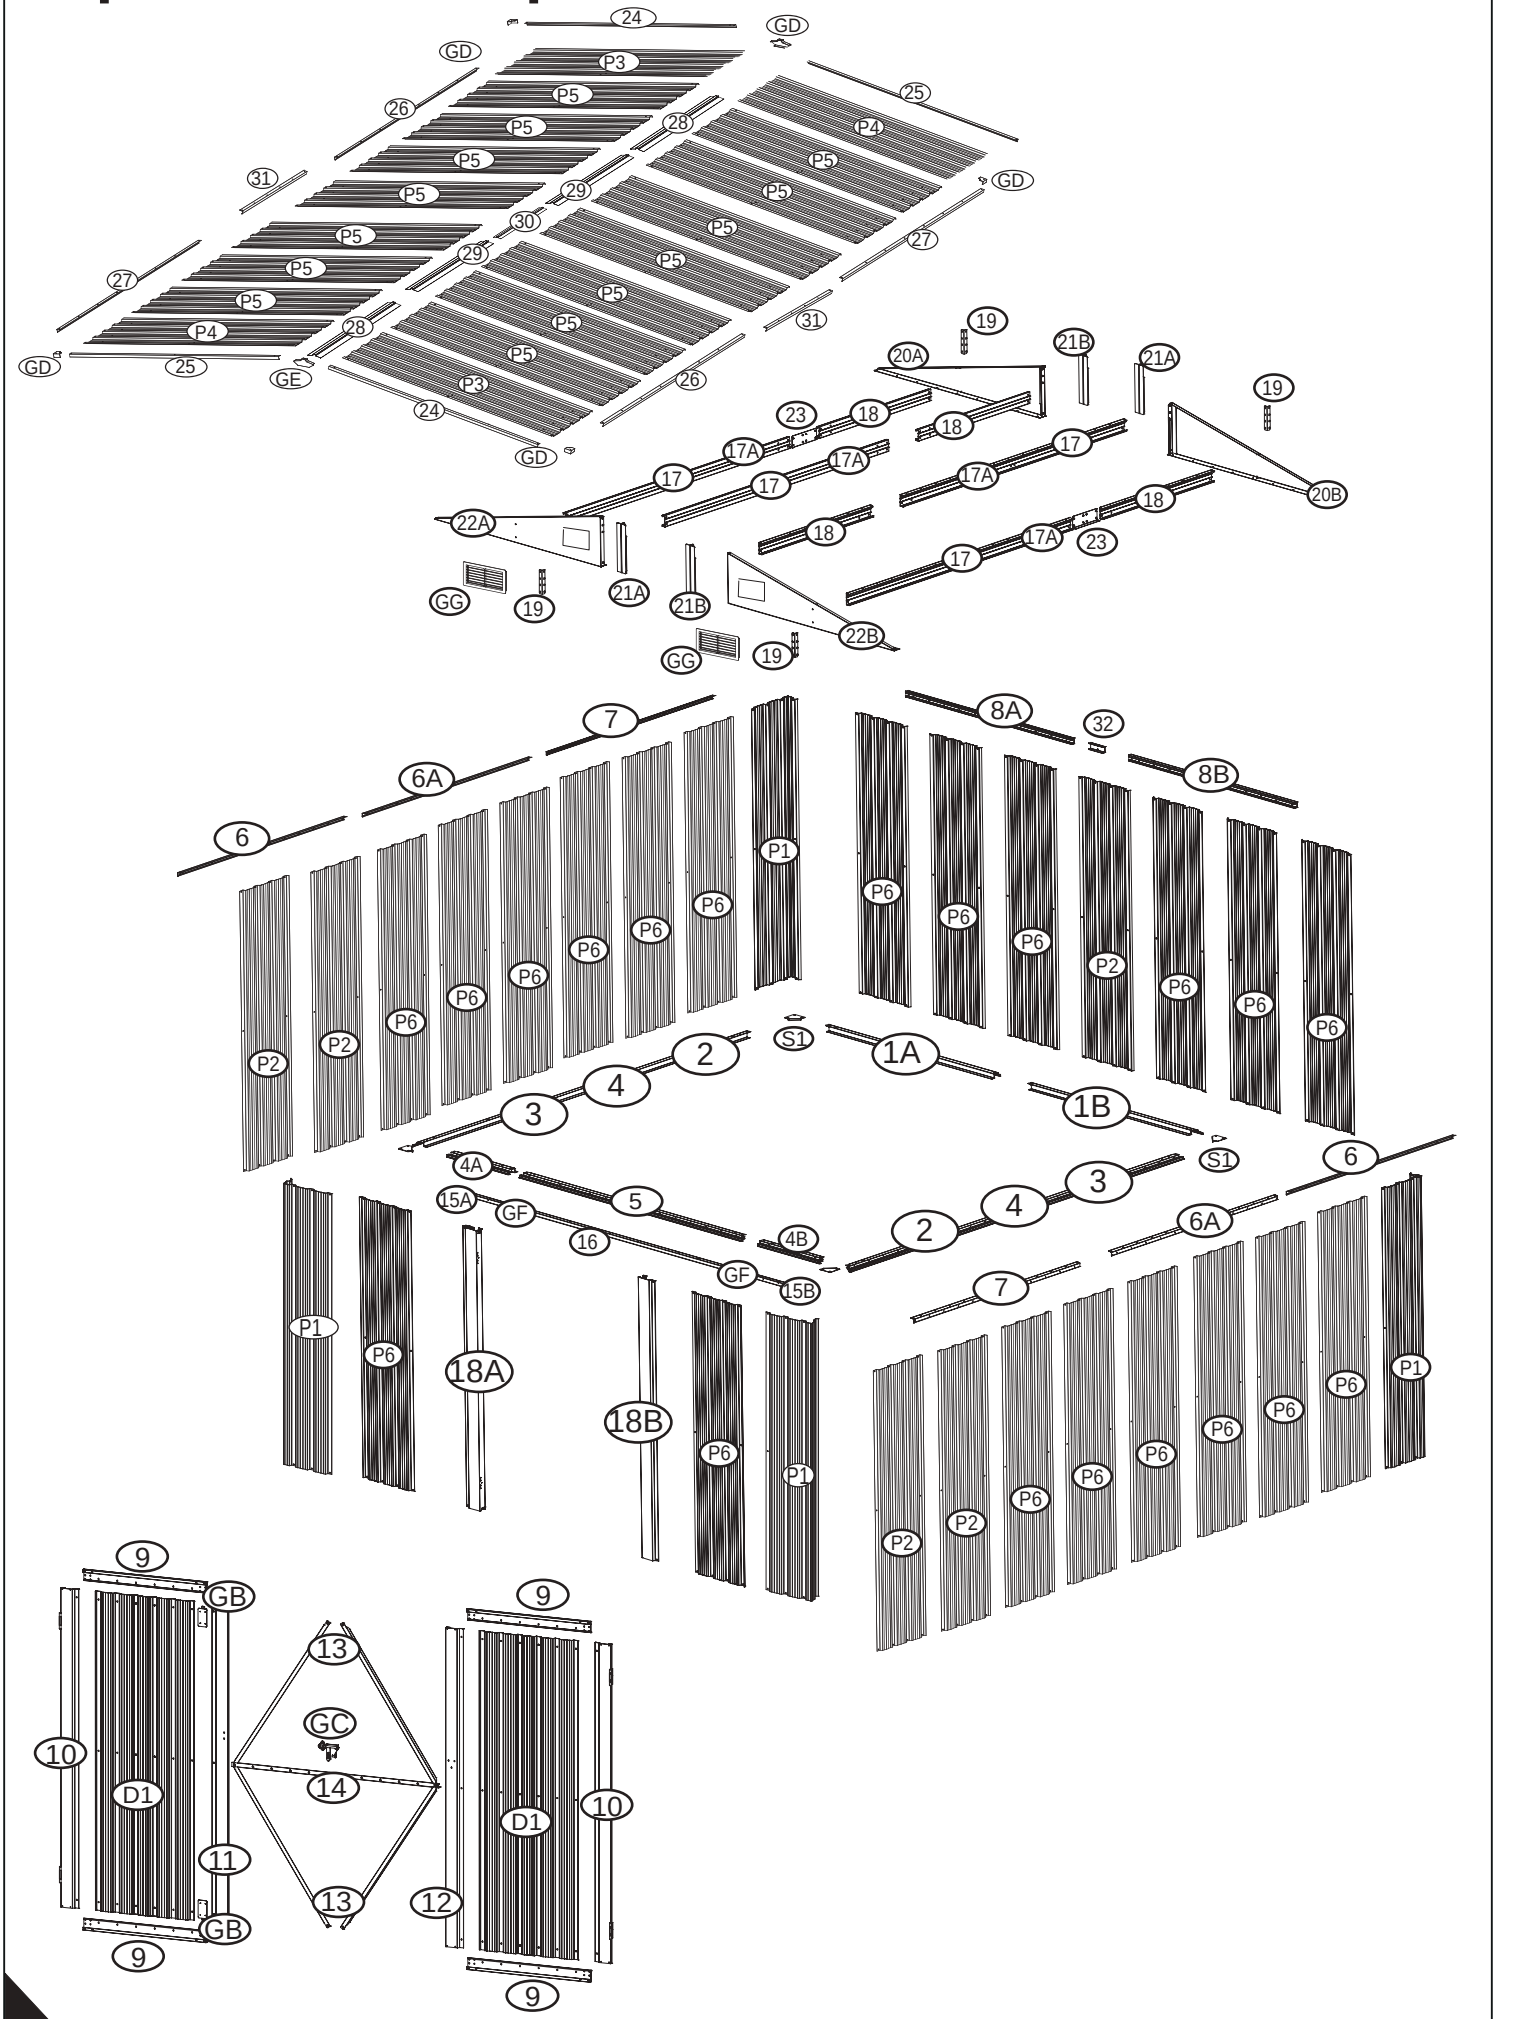


NO.	PART	Qty.
1A		1
1B		1
F1		3

Base Assembly

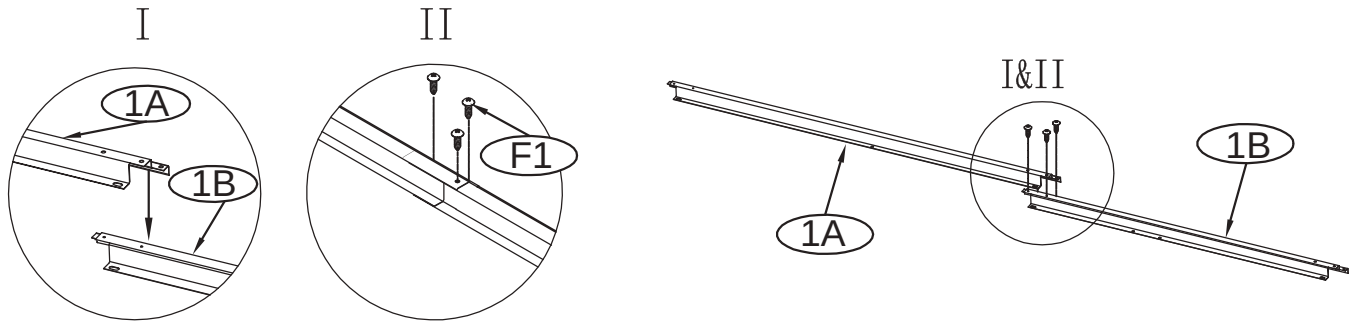

NO.	PART	Qty.
2		1
3		1
F1		6


Base Assembly

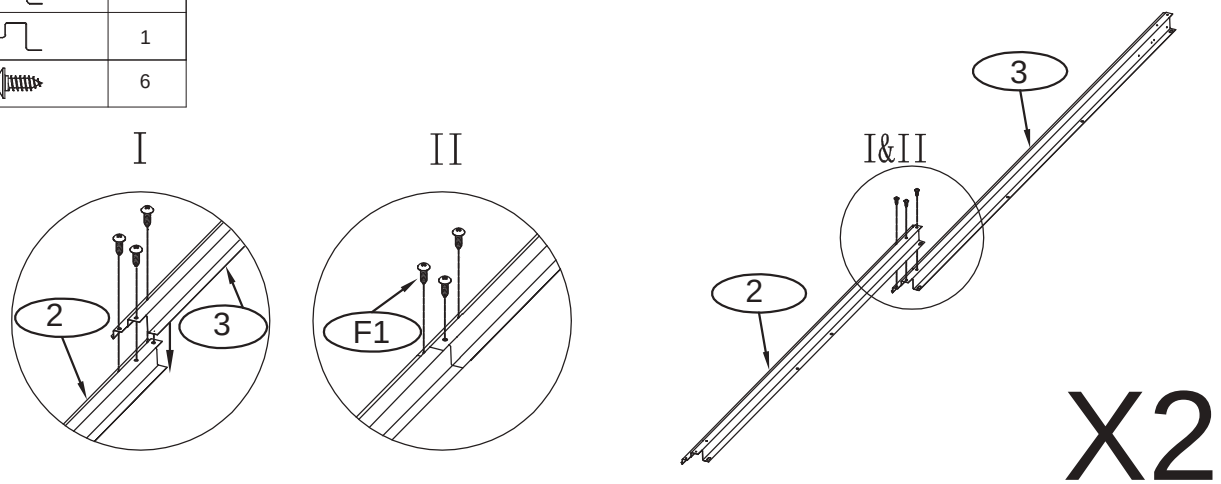

X2

NO.	PART	Qty.
4A/4B		2
5		1
F1		6


Base Assembly

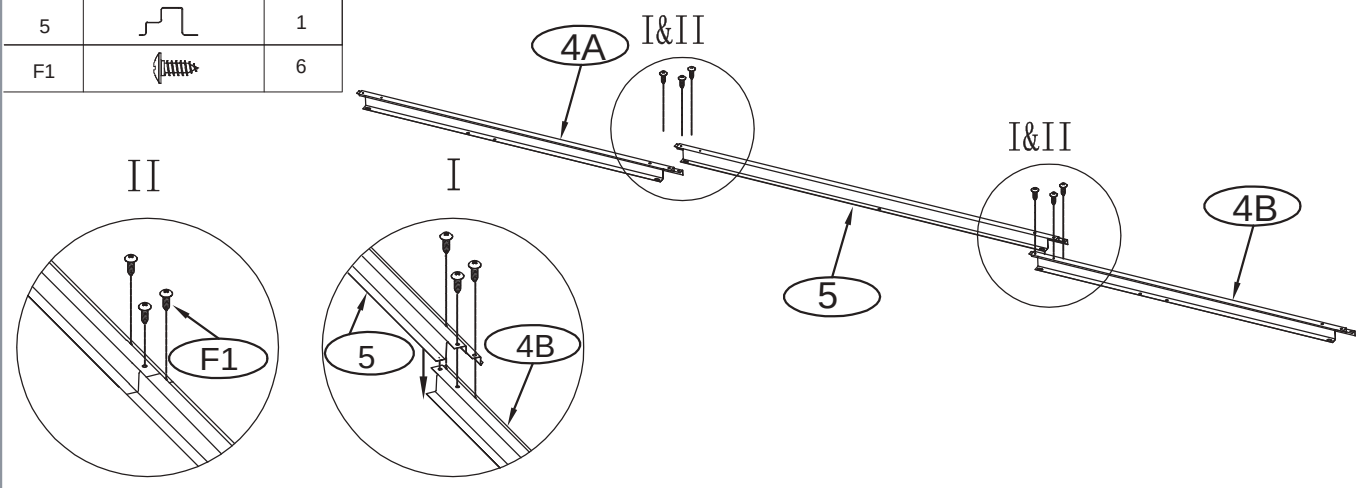

NO.	PART	Qty.
F1		2

Base Assembly


NO.	PART	Qty.
F1		2

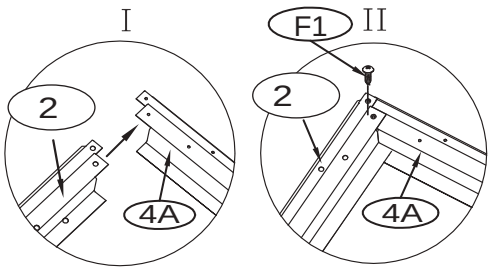


Base Assembly

NO.	PART	Qty.
14		4
F1		12


The foundation is fixed

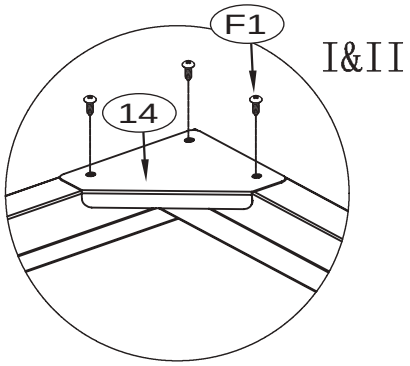

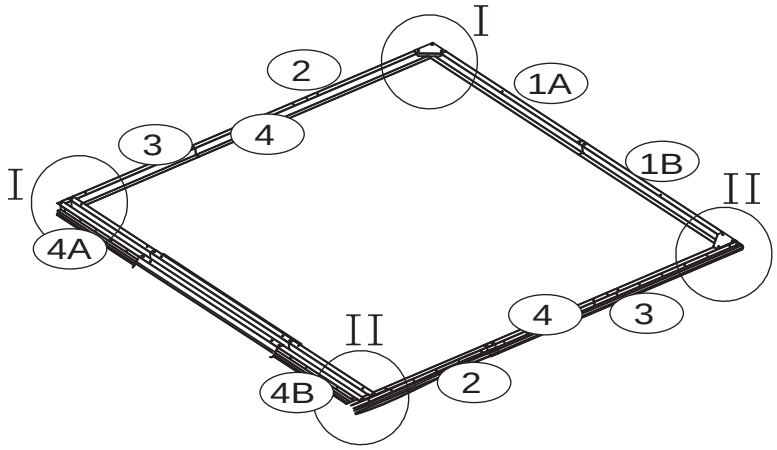

Base Inspection


1、When diagonal measurements are equal,the frame is square.

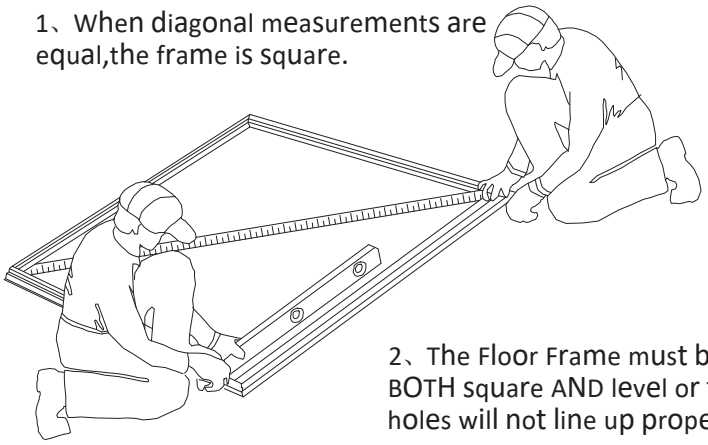


2、The Floor Frame must be BOTH square AND level or the holes will not line up properly.

NO.	PART	Qty.
P1		1
F1		2
S2		2


Wall mounting

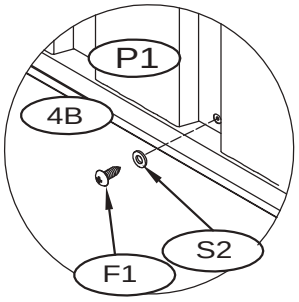


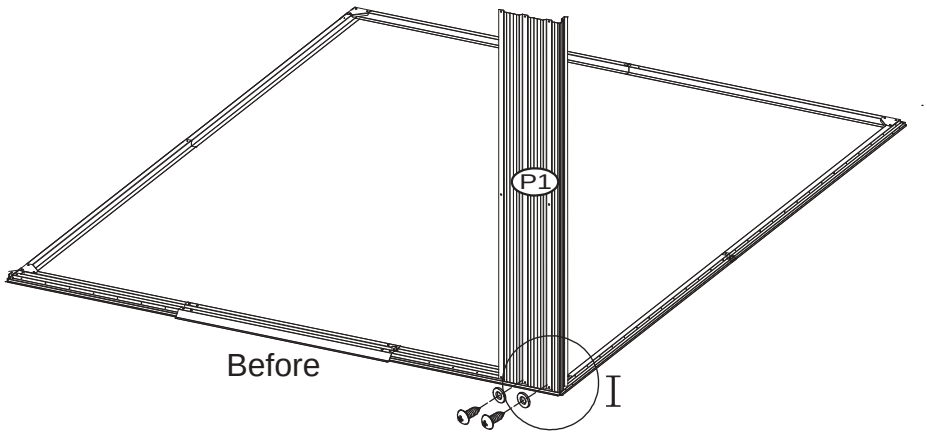


Before


NO.	PART	Qty.
P6		1
F1		3
F2		1
S2		4

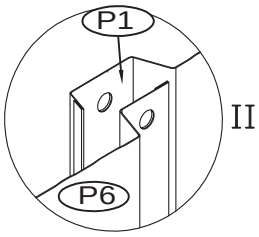

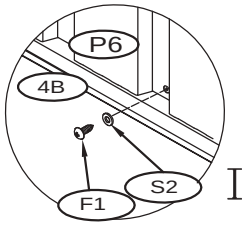


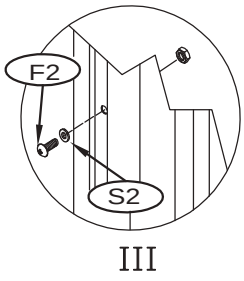



Wall mounting

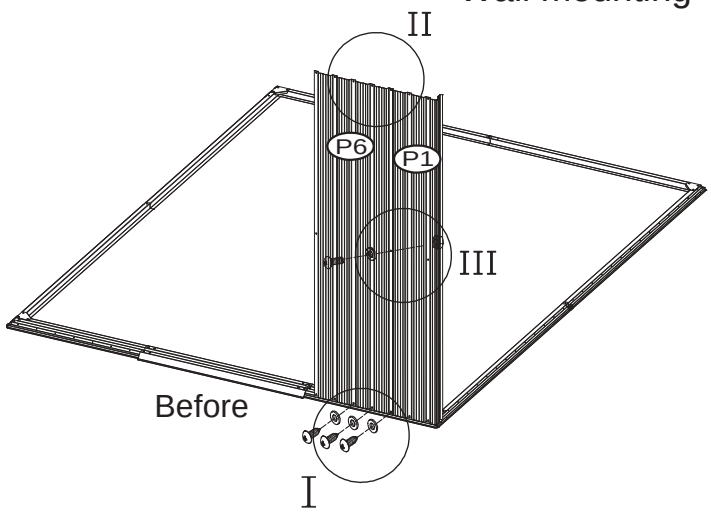


NO.	PART	Qty.
P2		2
F1		6
F2		2
S2		8

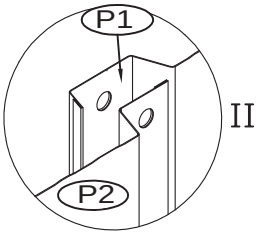

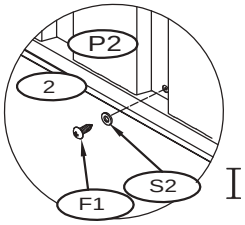


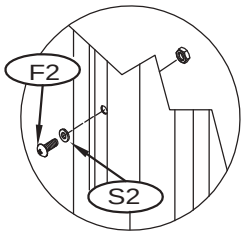


Wall mounting

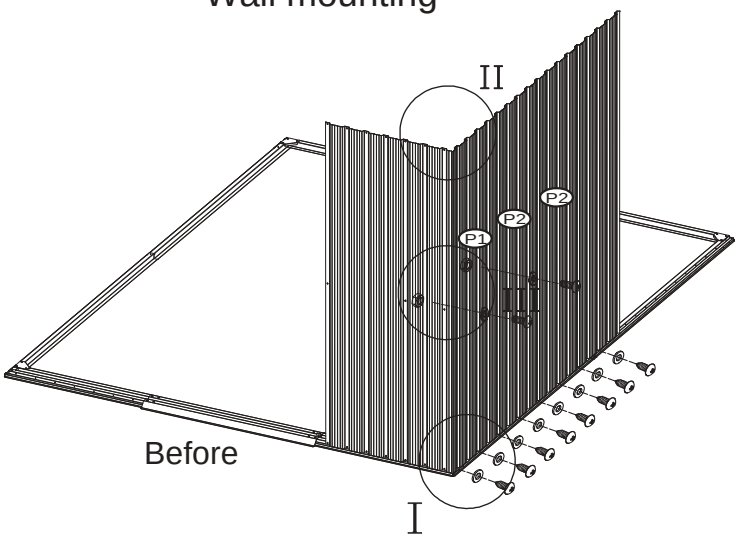


NO.	PART	Qty.
P1		1
F1		2
S2		2

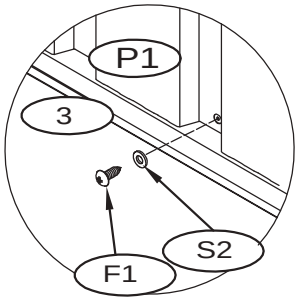



Wall mounting

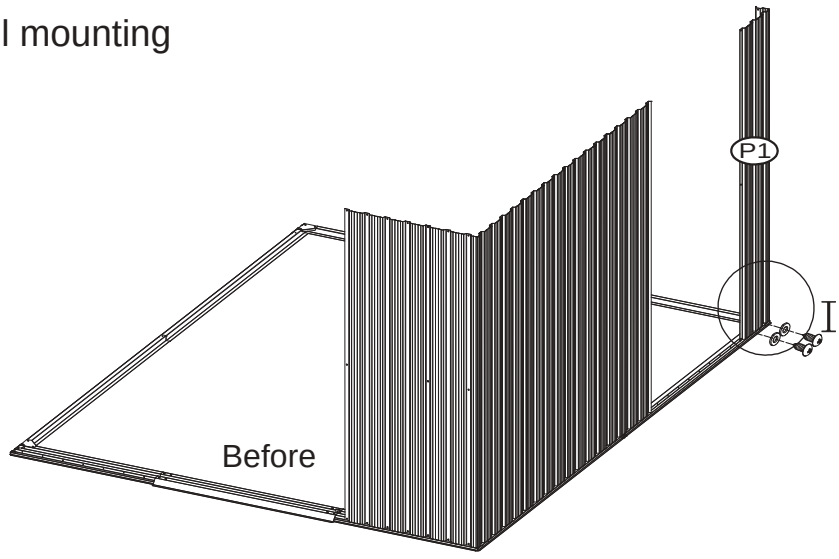


NO.	PART	Qty.
P6		6
F1		25
F2		7
S2		32

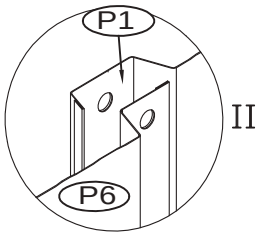

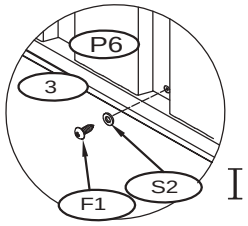

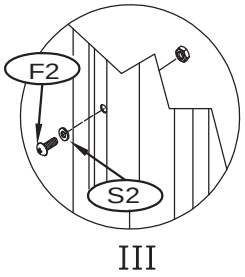



Wall mounting

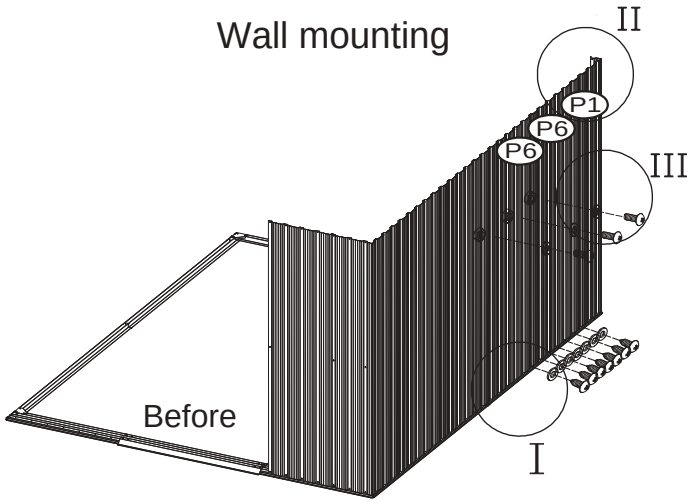


NO.	PART	Qty.
P1		1
F1		2
S2		2


Wall mounting

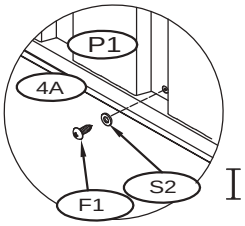


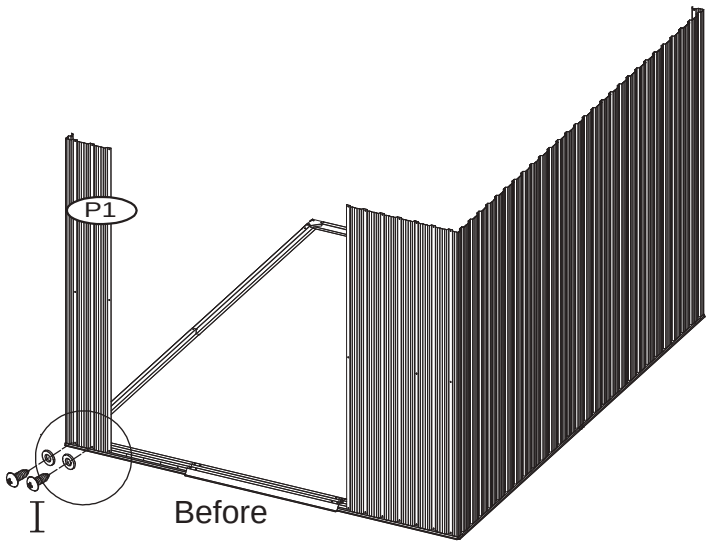


NO.	PART	Qty.
P6		1
F1		4
F2		1
S2		5

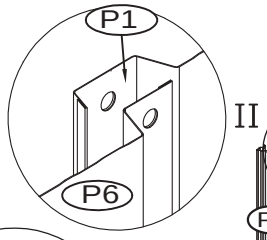

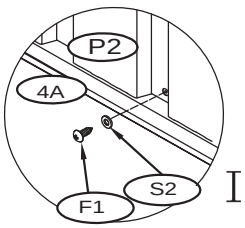


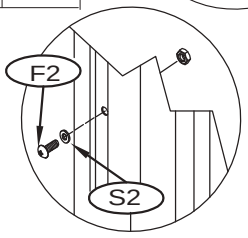



Wall mounting

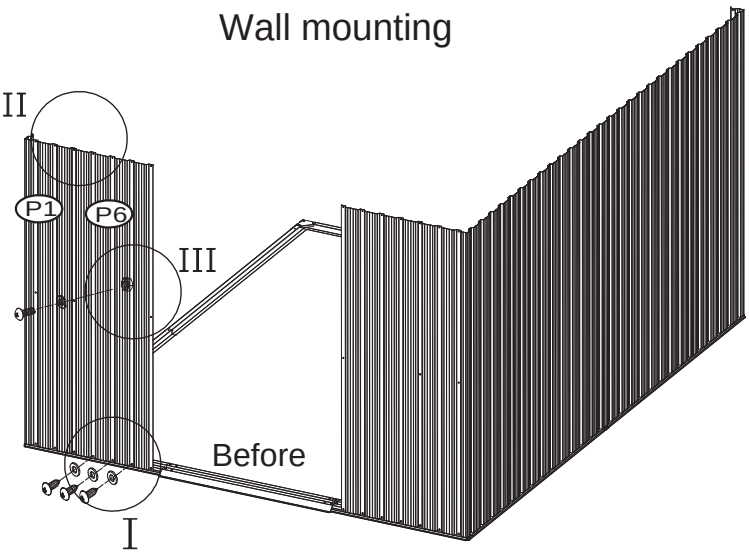

NO.	PART	Qty.
P2		3
F1		6
F2		2
S2		8

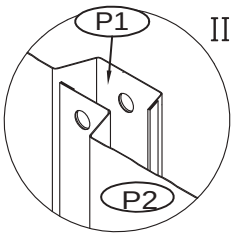


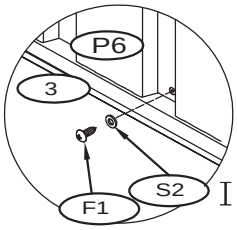

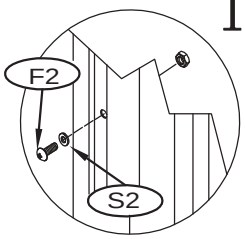


III


Wall mounting

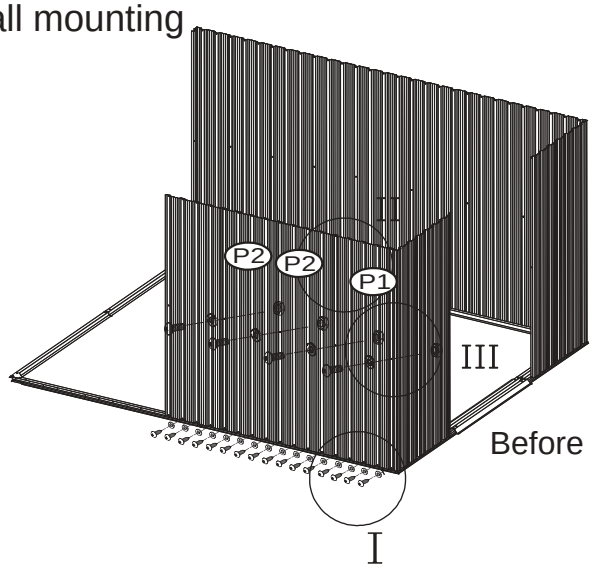


NO.	PART	Qty.
P1		1
F1		2
S2		2


Wall mounting

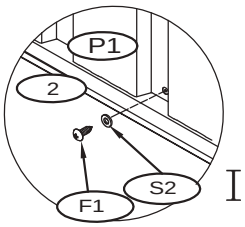


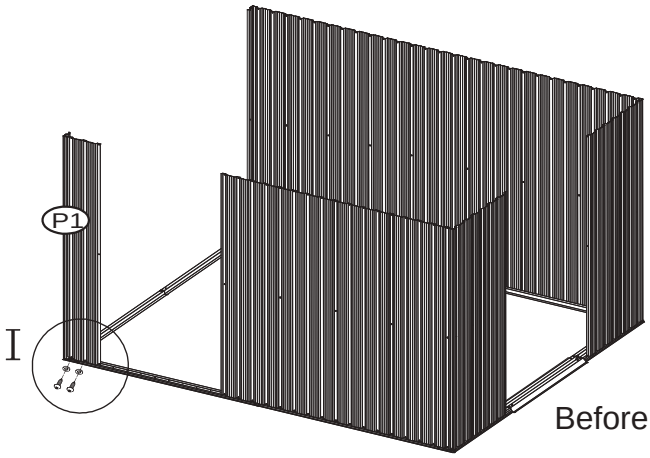


NO.	PART	Qty.
P6		6
F1		25
F2		7
S2		32

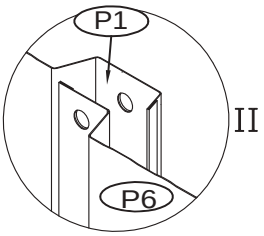

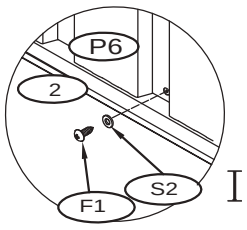


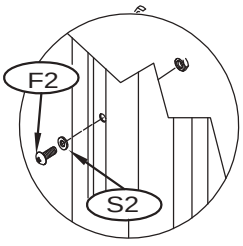



Wall mounting

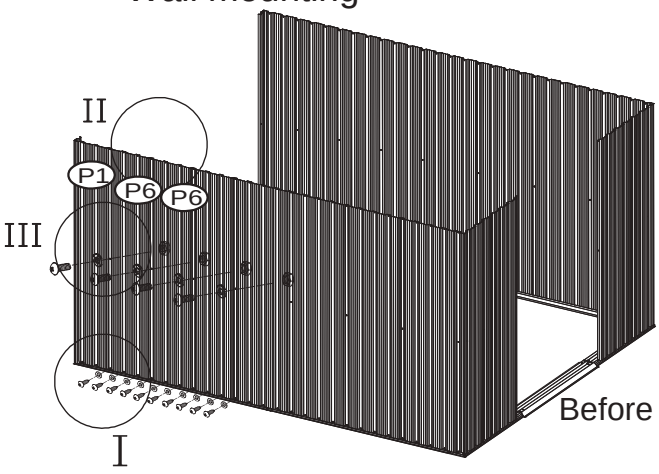

NO.	PART	Qty.
P6		4
F1		16
F2		4
S2		20

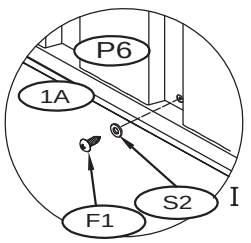


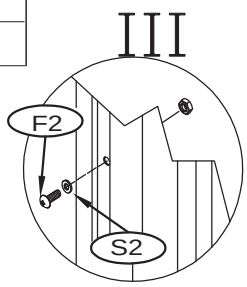

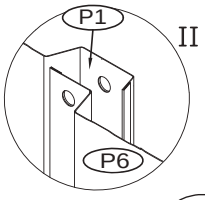


Wall mounting


Before

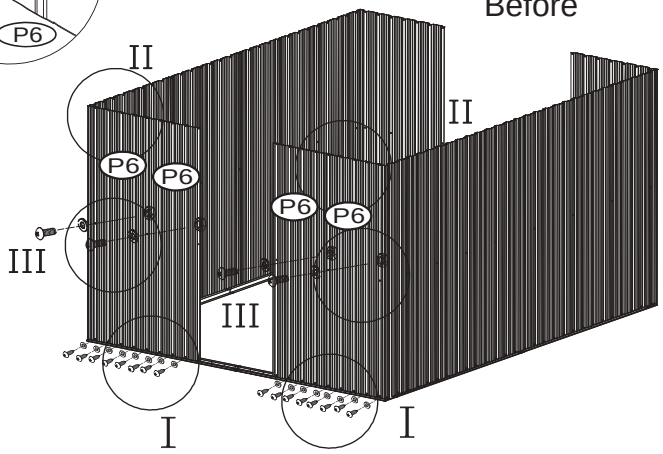


NO.	PART	Qty.
P2		1
P6		2
F1		12
F2		4
S2		16


Wall mounting

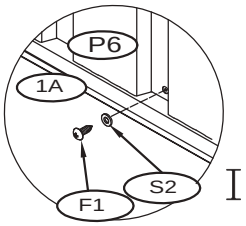

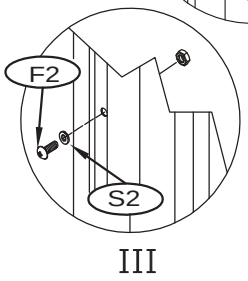


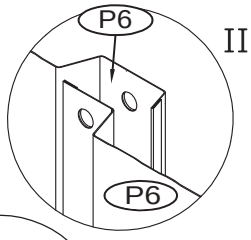



Before

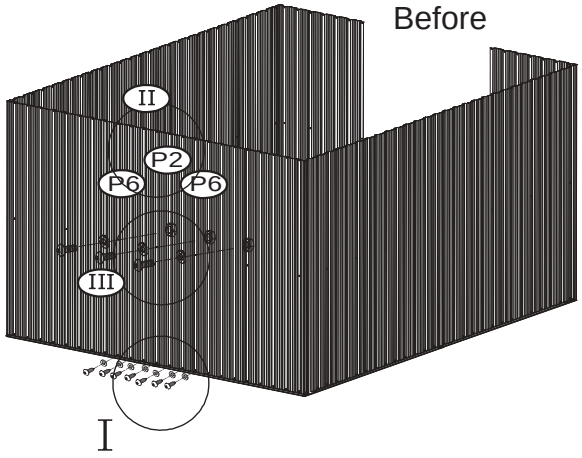


NO.	PART	Qty.
8A		1
8B		1
31		1
F1		2

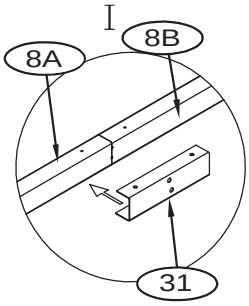

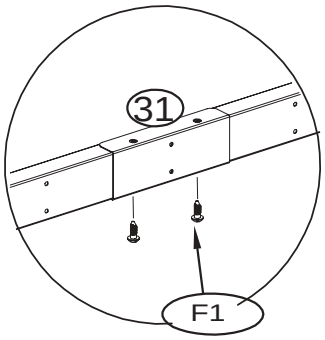


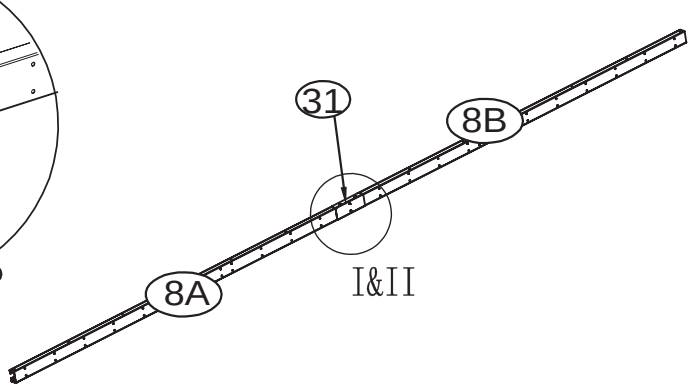


NO.	PART	Qty.
F1		22
S2		22

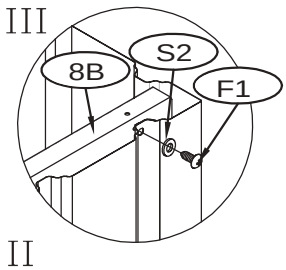


Wall mounting

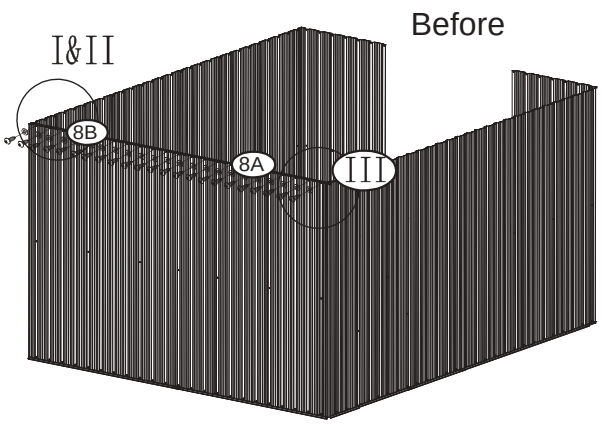


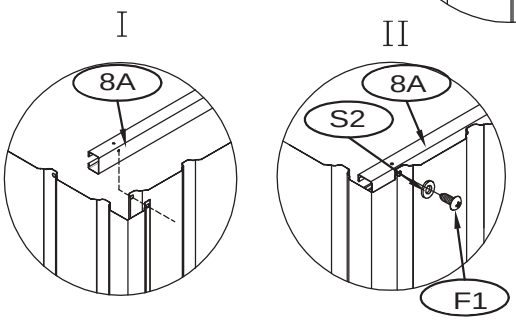



NO.	PART	Qty.
15A/15B		1
16		1
GF		2

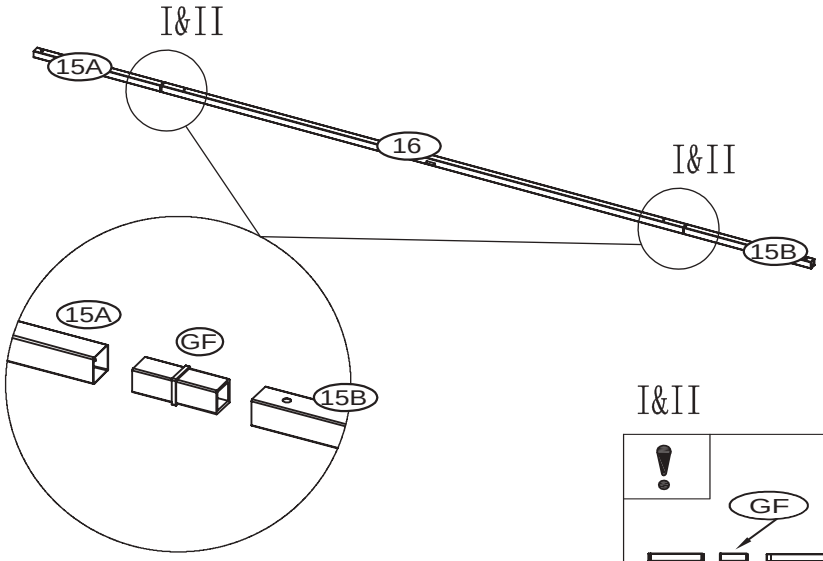


NO.	PART	Qty.
F1		6
S2		6

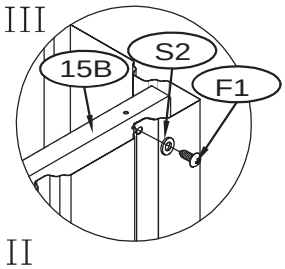

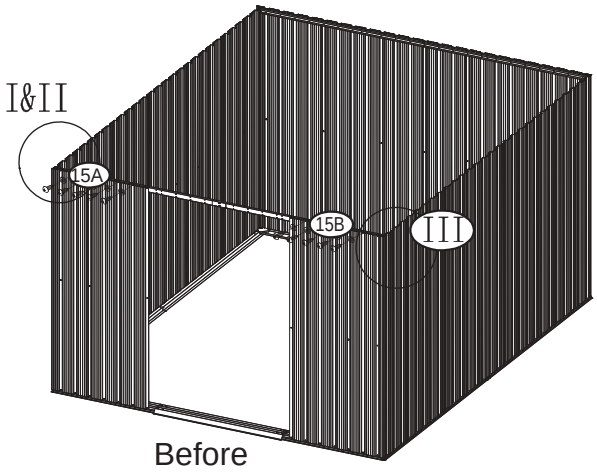


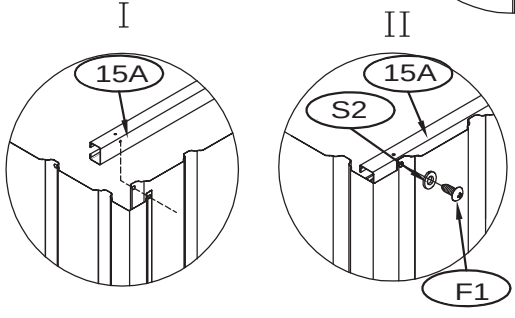


NO.	PART	Qty.
F2		2
6		2
6A		2
7		2

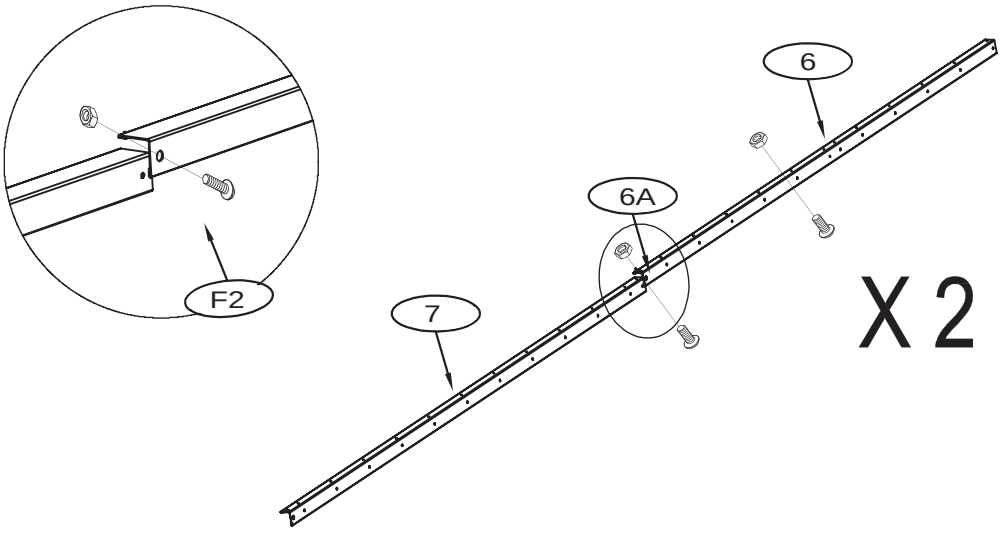


NO.	PART	Qty.
F1		33
S2		33

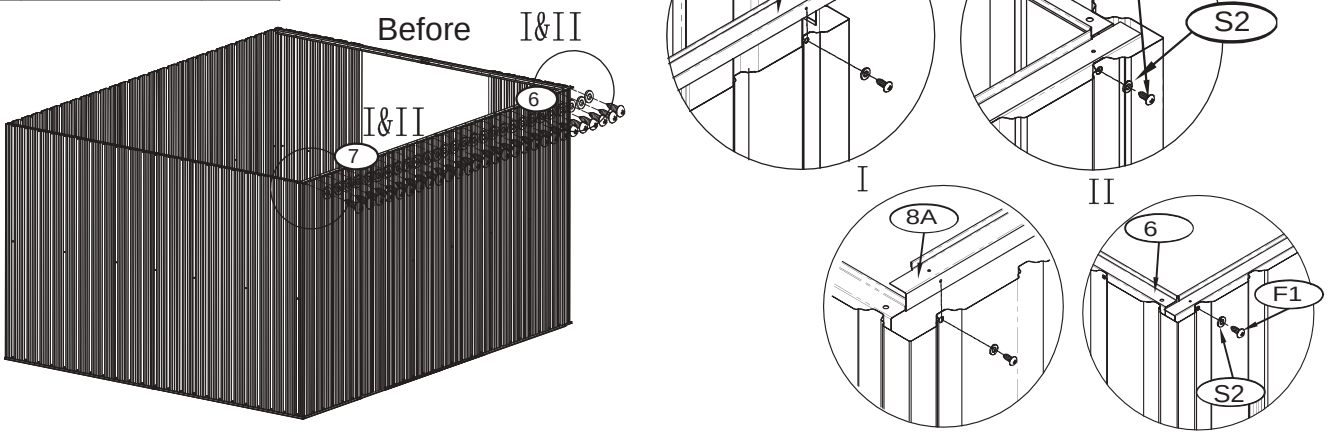



NO.	PART	Qty.
F1		33
S2		33

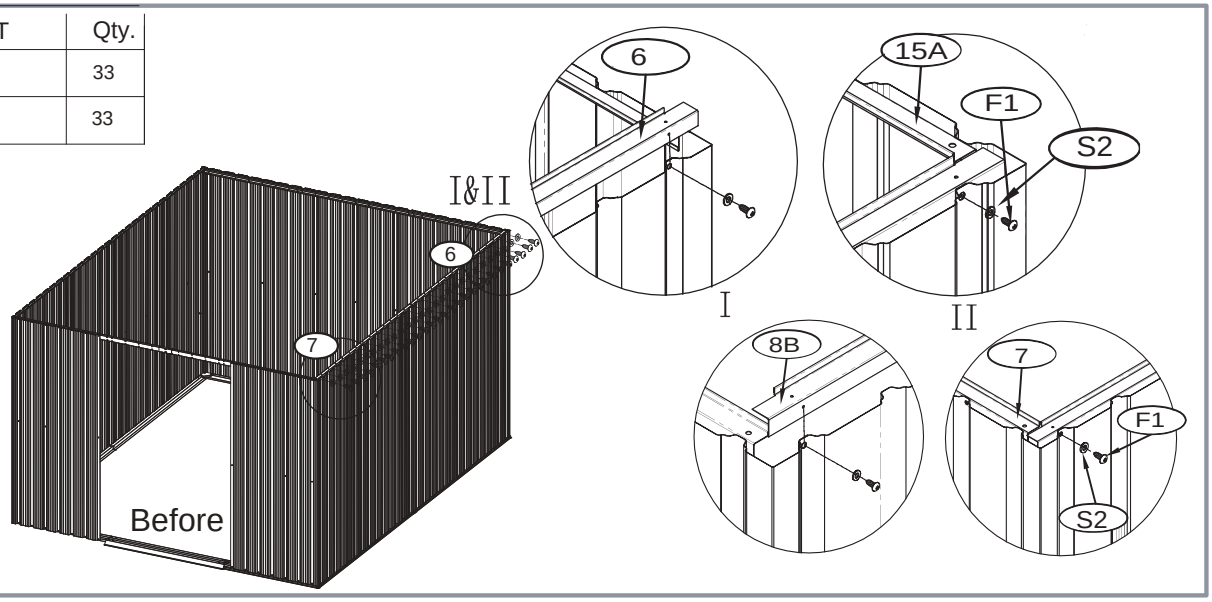


NO.	PART	Qty.
18A		1
18B		1
F1		8
F2		2
S2		6

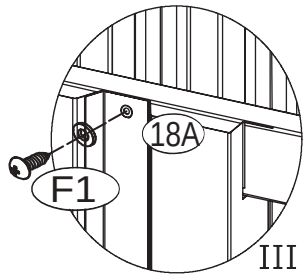

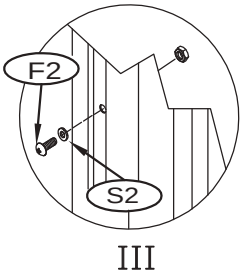

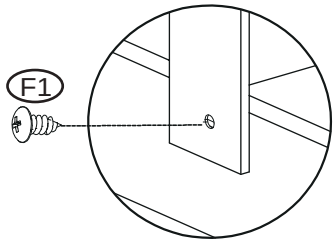


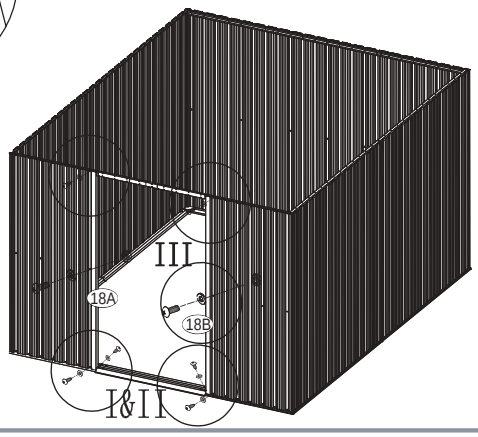

Before


NO.	PART	Qty.
20A		1
20B		1
19		2
21A		1
21B		1

NO.	PART	Qty.
F2		6
S2		4

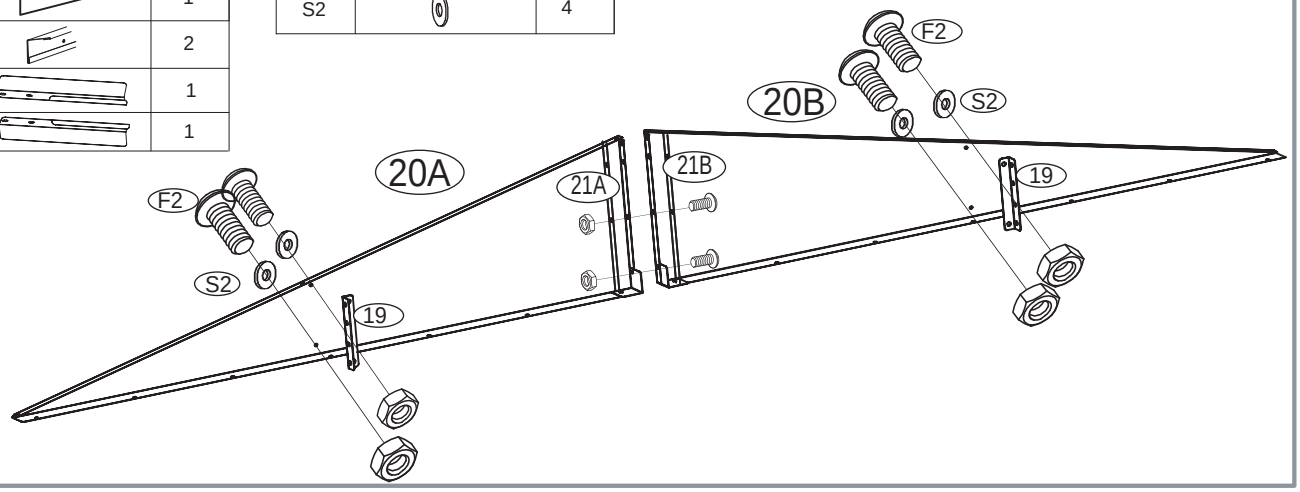


NO.	PART	Qty.
22A		1
22B		1
19		2
21A		1
21B		1


NO.	PART	Qty.
F2		6
S2		4

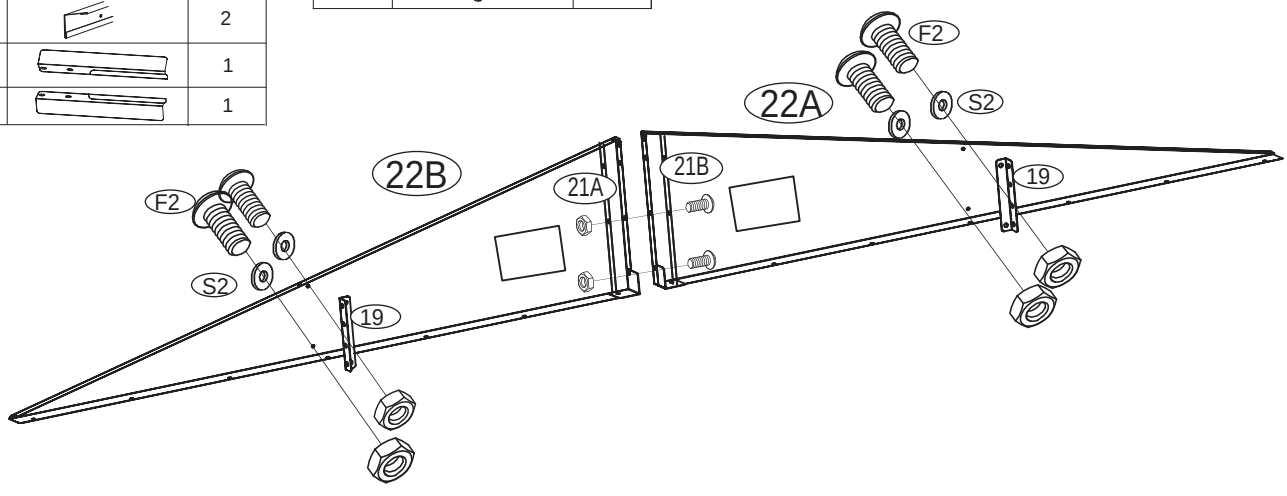


NO.	PART	Qty.
GG		2
F1		8

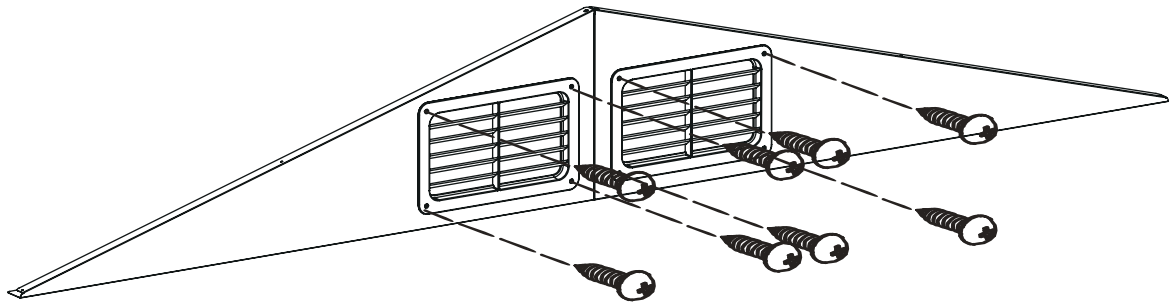


NO.	PART	Qty.
F1		36

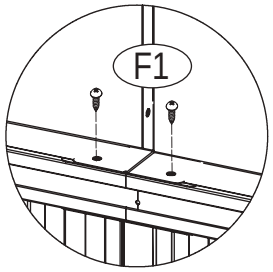

I&II

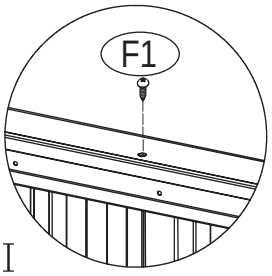



I&II

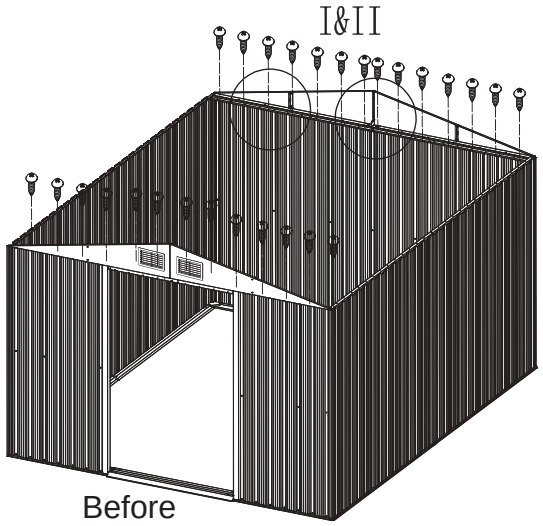


Before


NO.	PART	Qty.
17		2
17A		2
18		2
F2		12

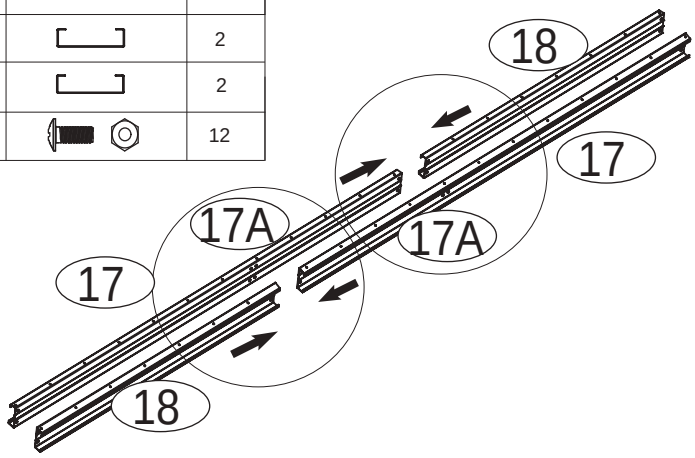

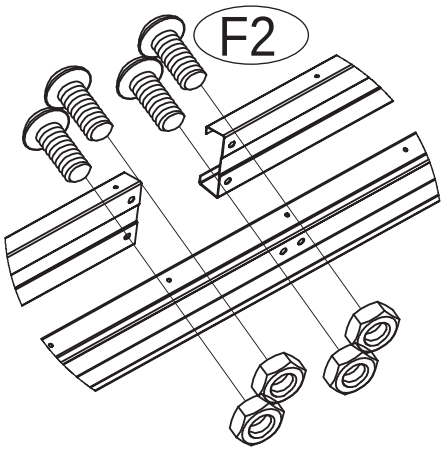


NO.	PART	Qty.
F2		4

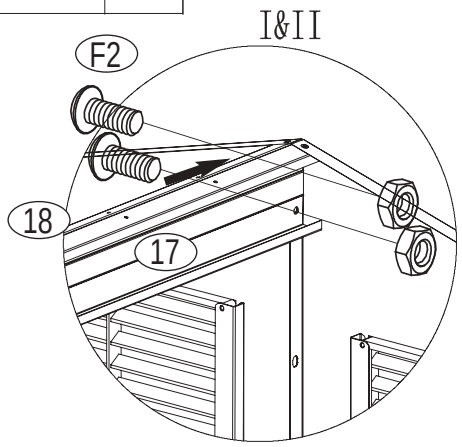


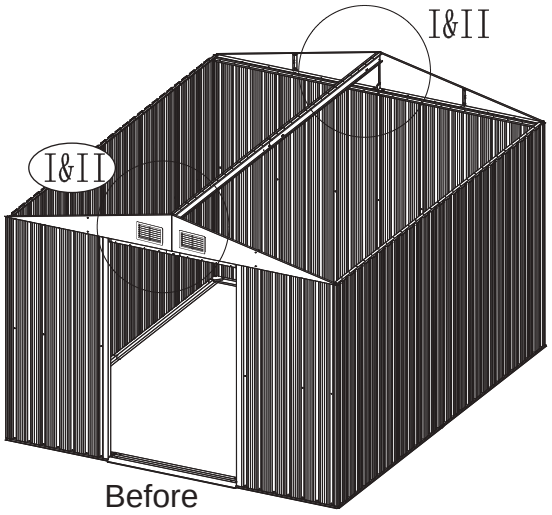


NO.	PART	Qty.
17		2
17A		2
18		2
F2		32
23		4


X2

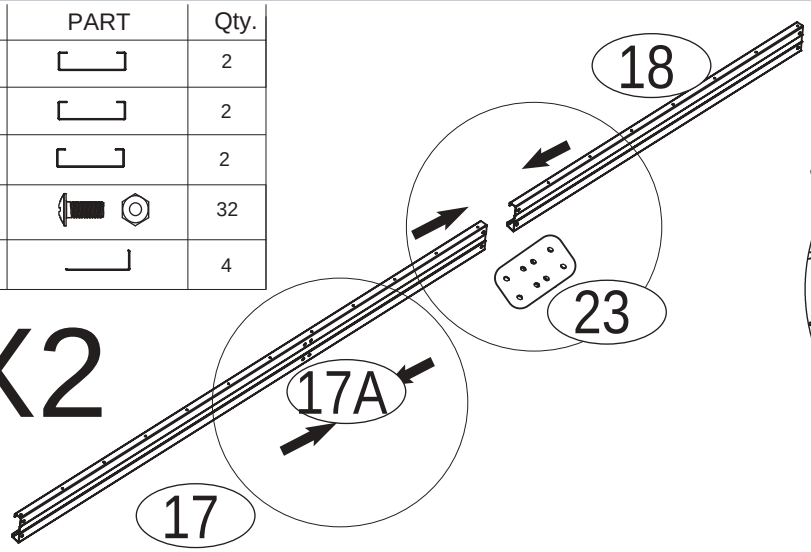

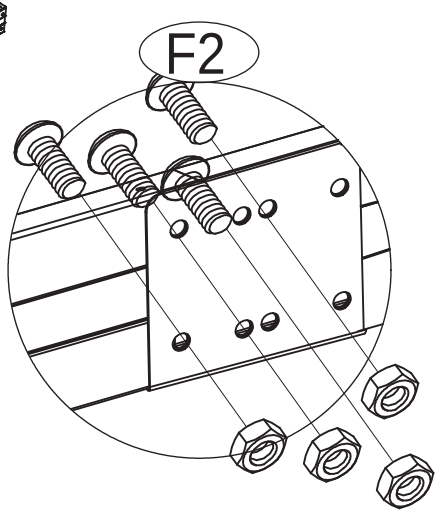


NO.	PART	Qty.
F2		8

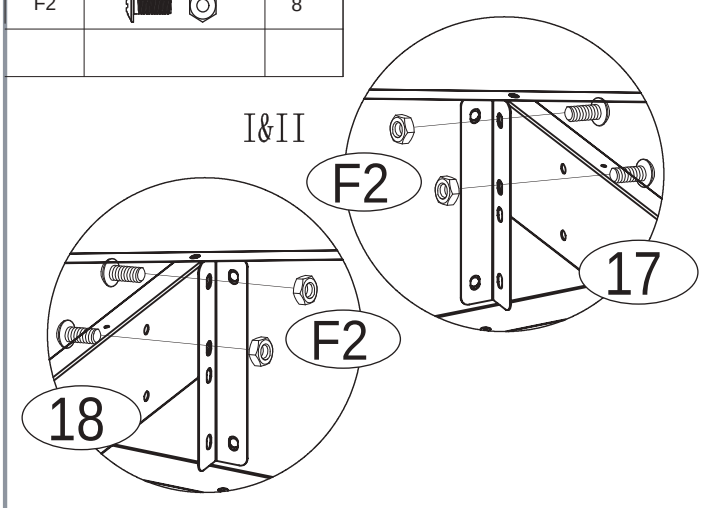


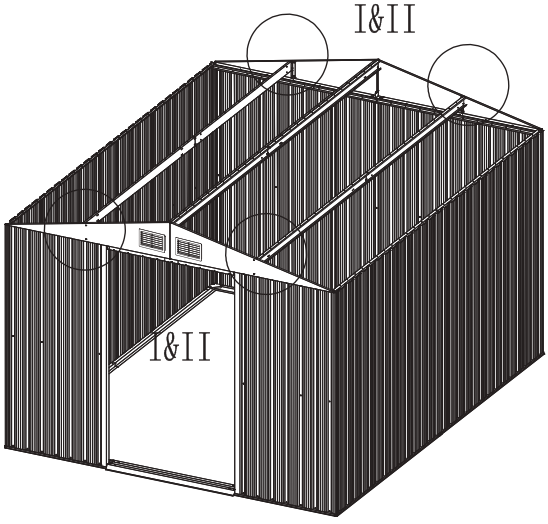


Roof explosion view

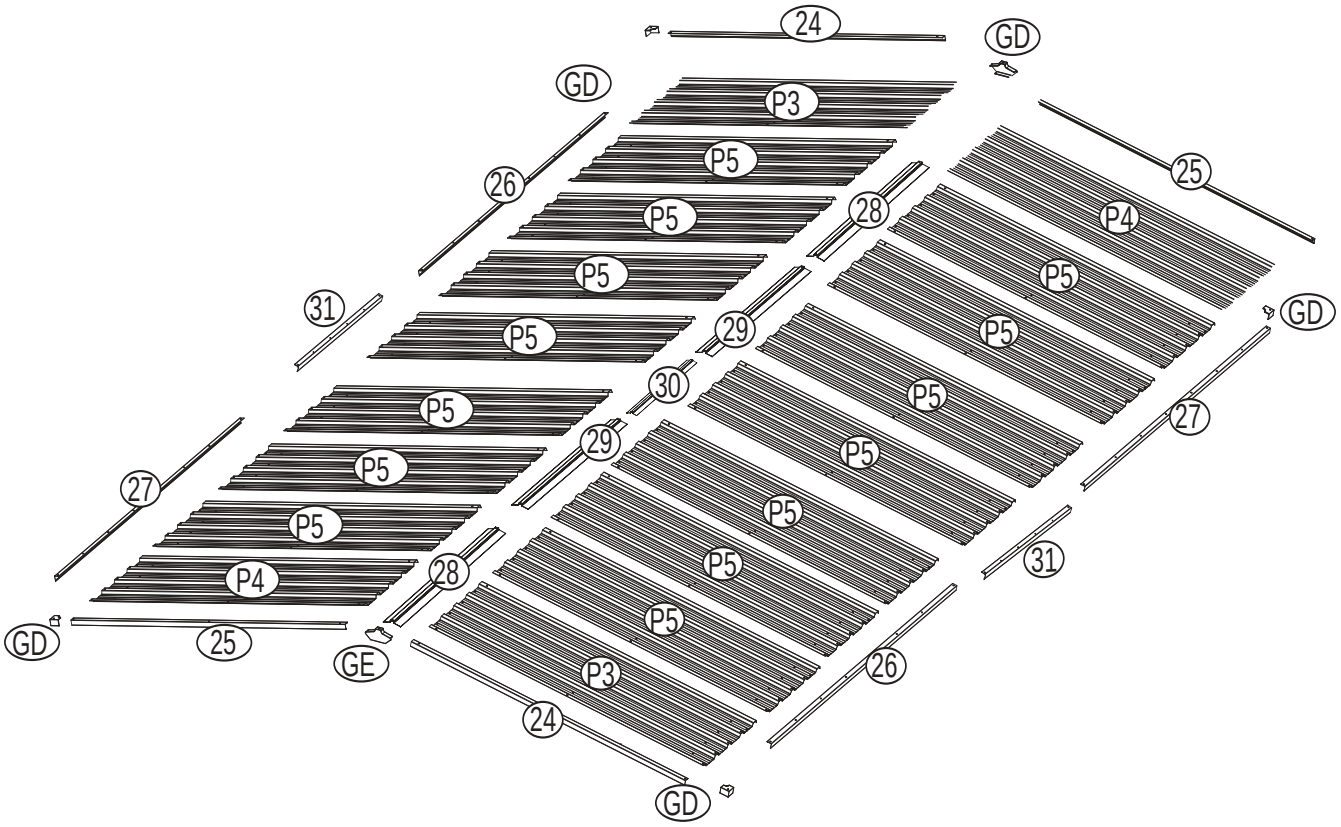


NO.	PART	Qty.
P3		1
P4		1
F1		24
S2		24

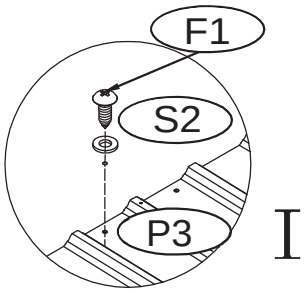


I

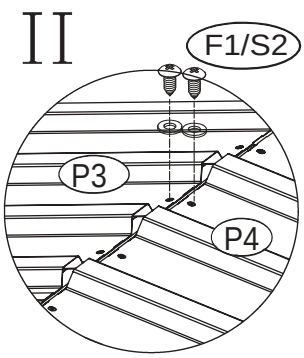

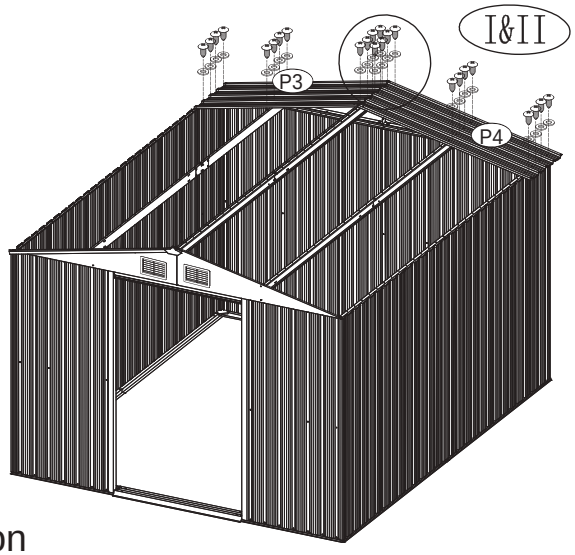



Tile Board installation

NO.	PART	Qty.
P5		2
F1		18
S2		18

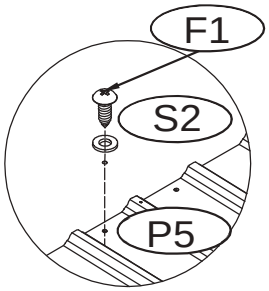


I

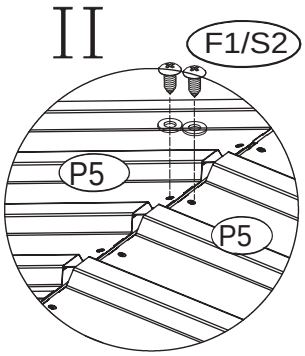

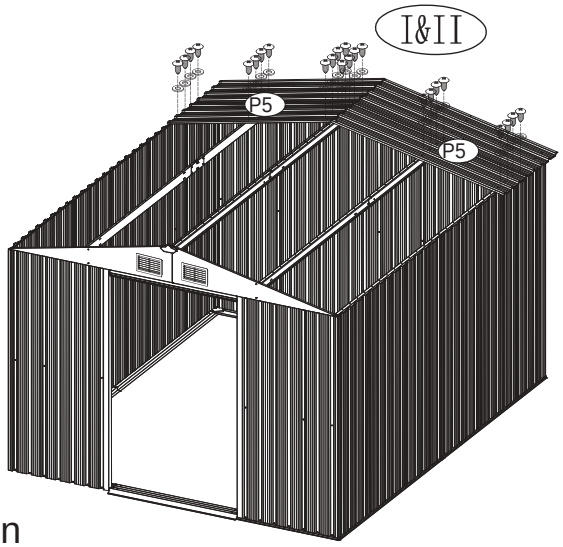



Tile Board installation

NO.	PART	Qty.
P5		4
F1		24
S2		24

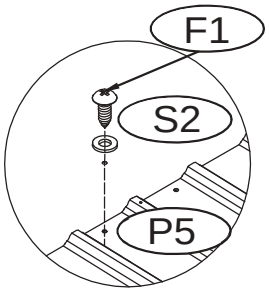


I

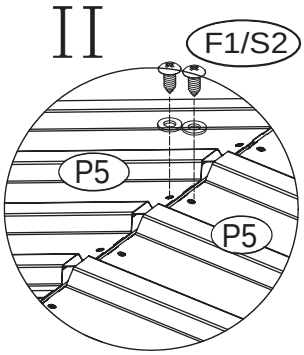


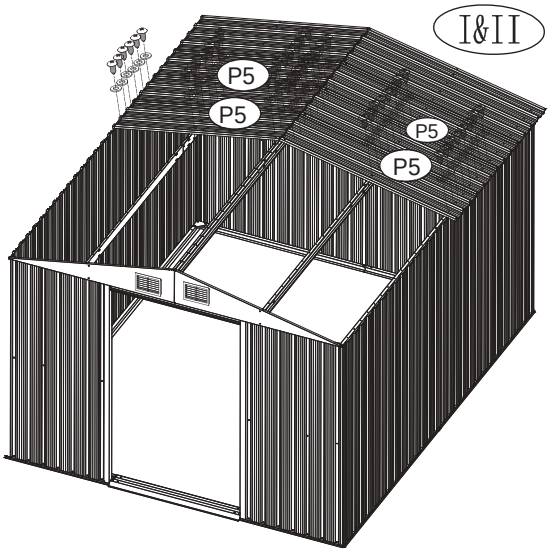


Tile Board installation


NO.	PART	Qty.
28		1
29		1
F2		4
S2		4

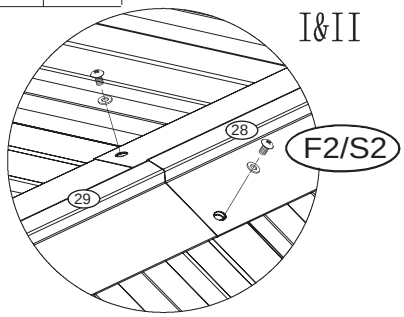


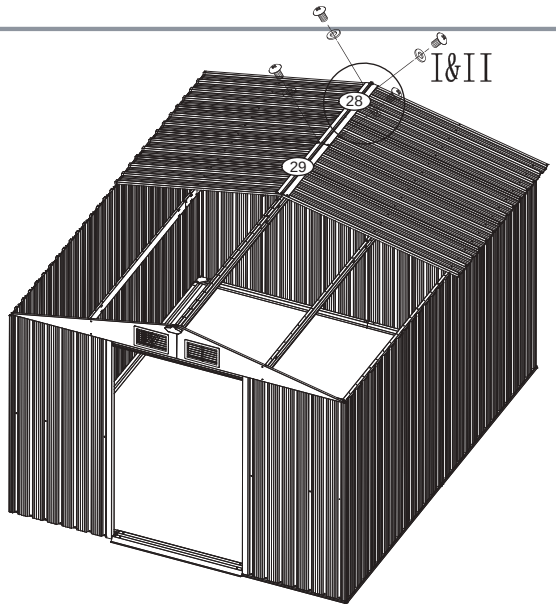

NO.	PART	Qty.
P5		4
F1		24
S2		24

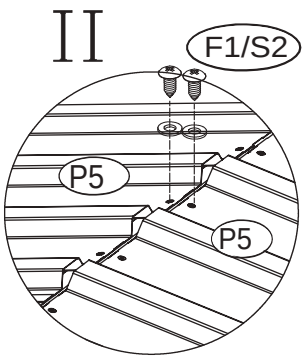


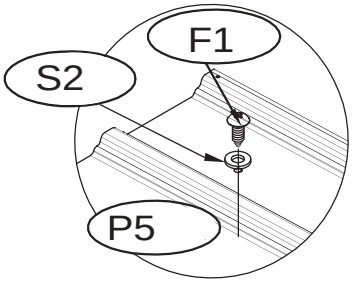


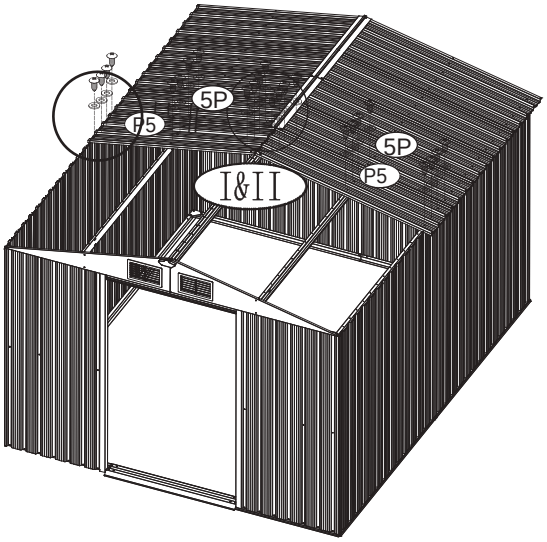


Tile Board installation

NO.	PART	Qty.
P5		4
F1		48
S2		48

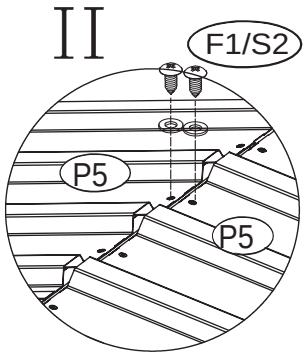


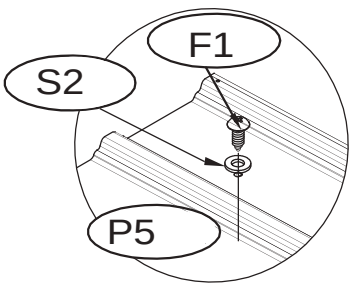


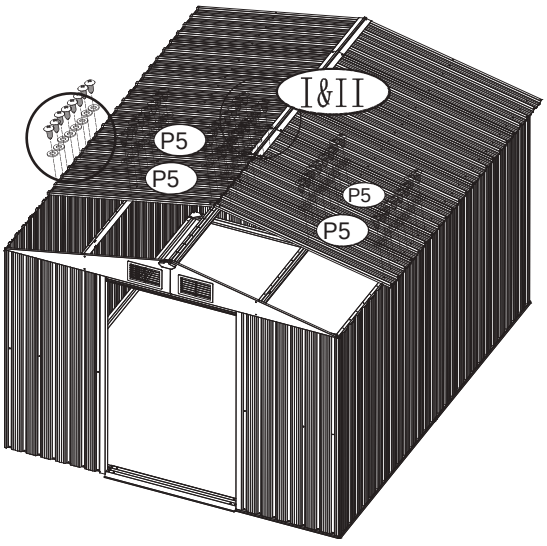


Tile Board installation


NO.	PART	Qty.
30		1
F2		8
S2		8

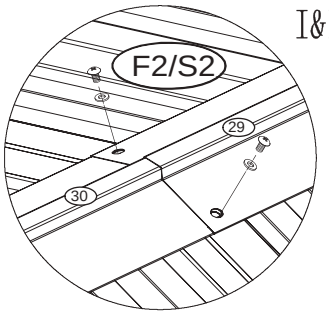

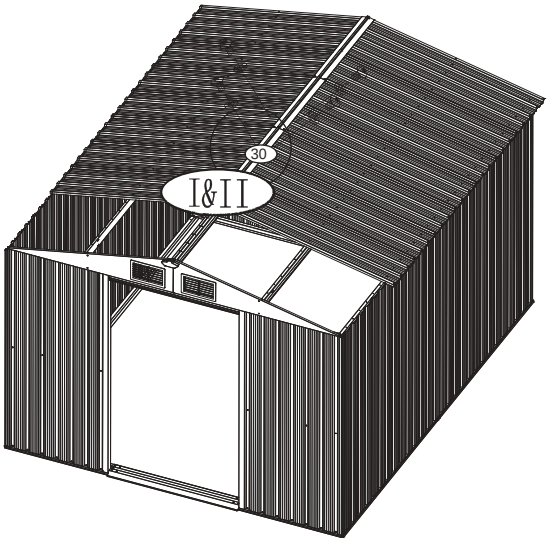


NO.	PART	Qty.
P3		1
P4		1
F1		24
S2		24

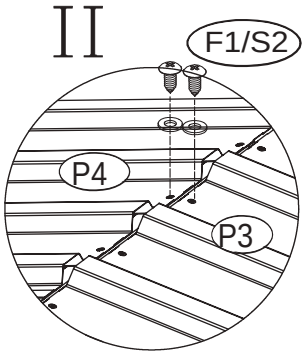


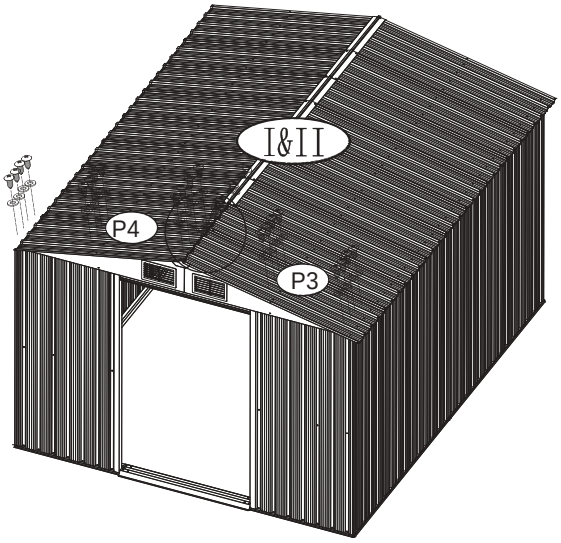


Tile Board installation

NO.	PART	Qty.
28		1
F2		6
S2		6

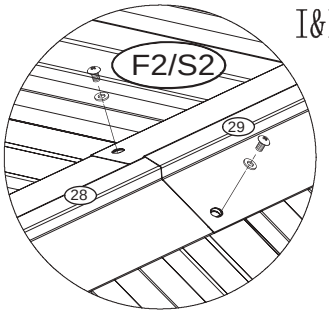


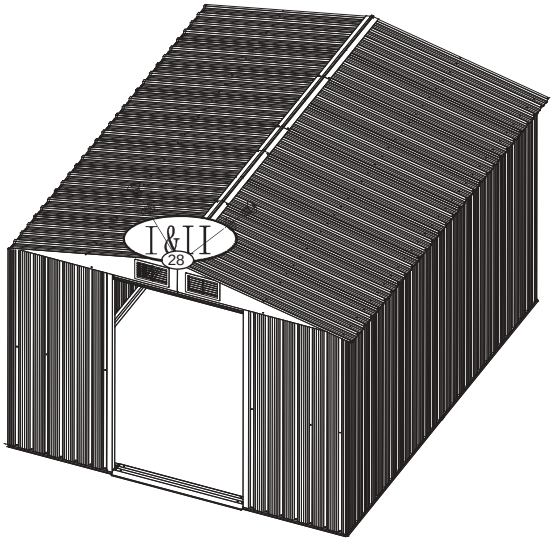

NO.	PART	Qty.
24		2
25		2
26		2
27		2
31		2
F2		26
S2		3

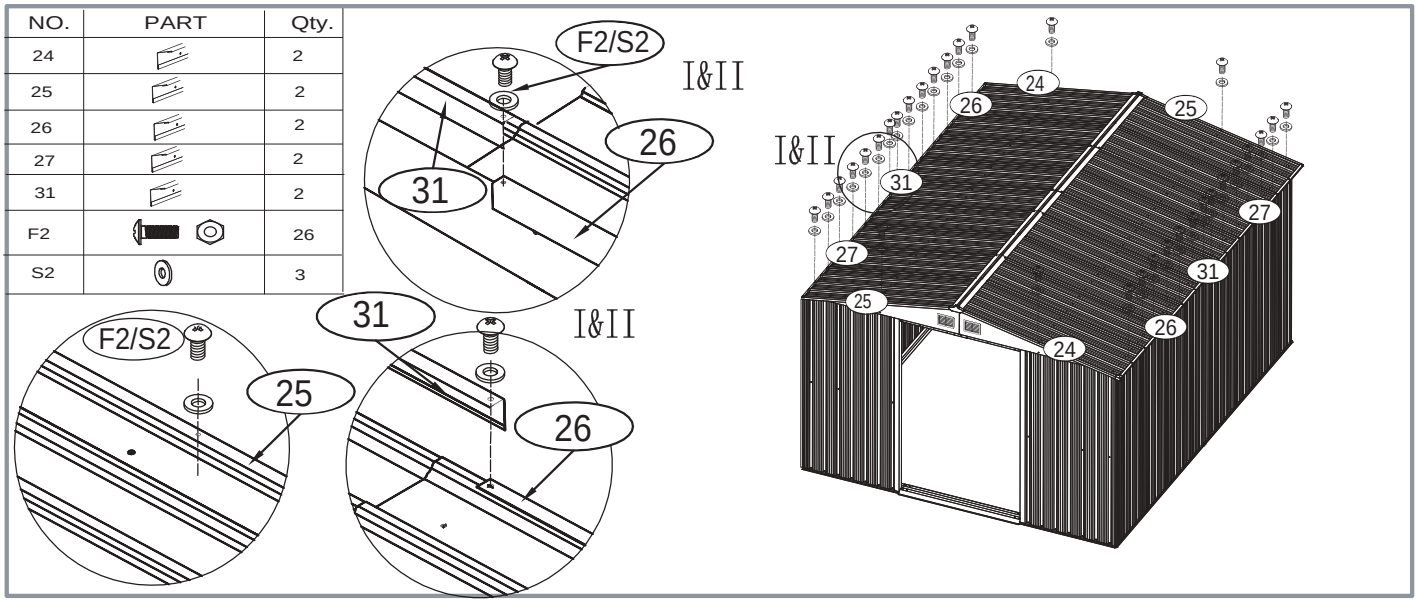


NO.	PART	Qty.
GD		4
GE		2
F1		2
F2		4
S2		2

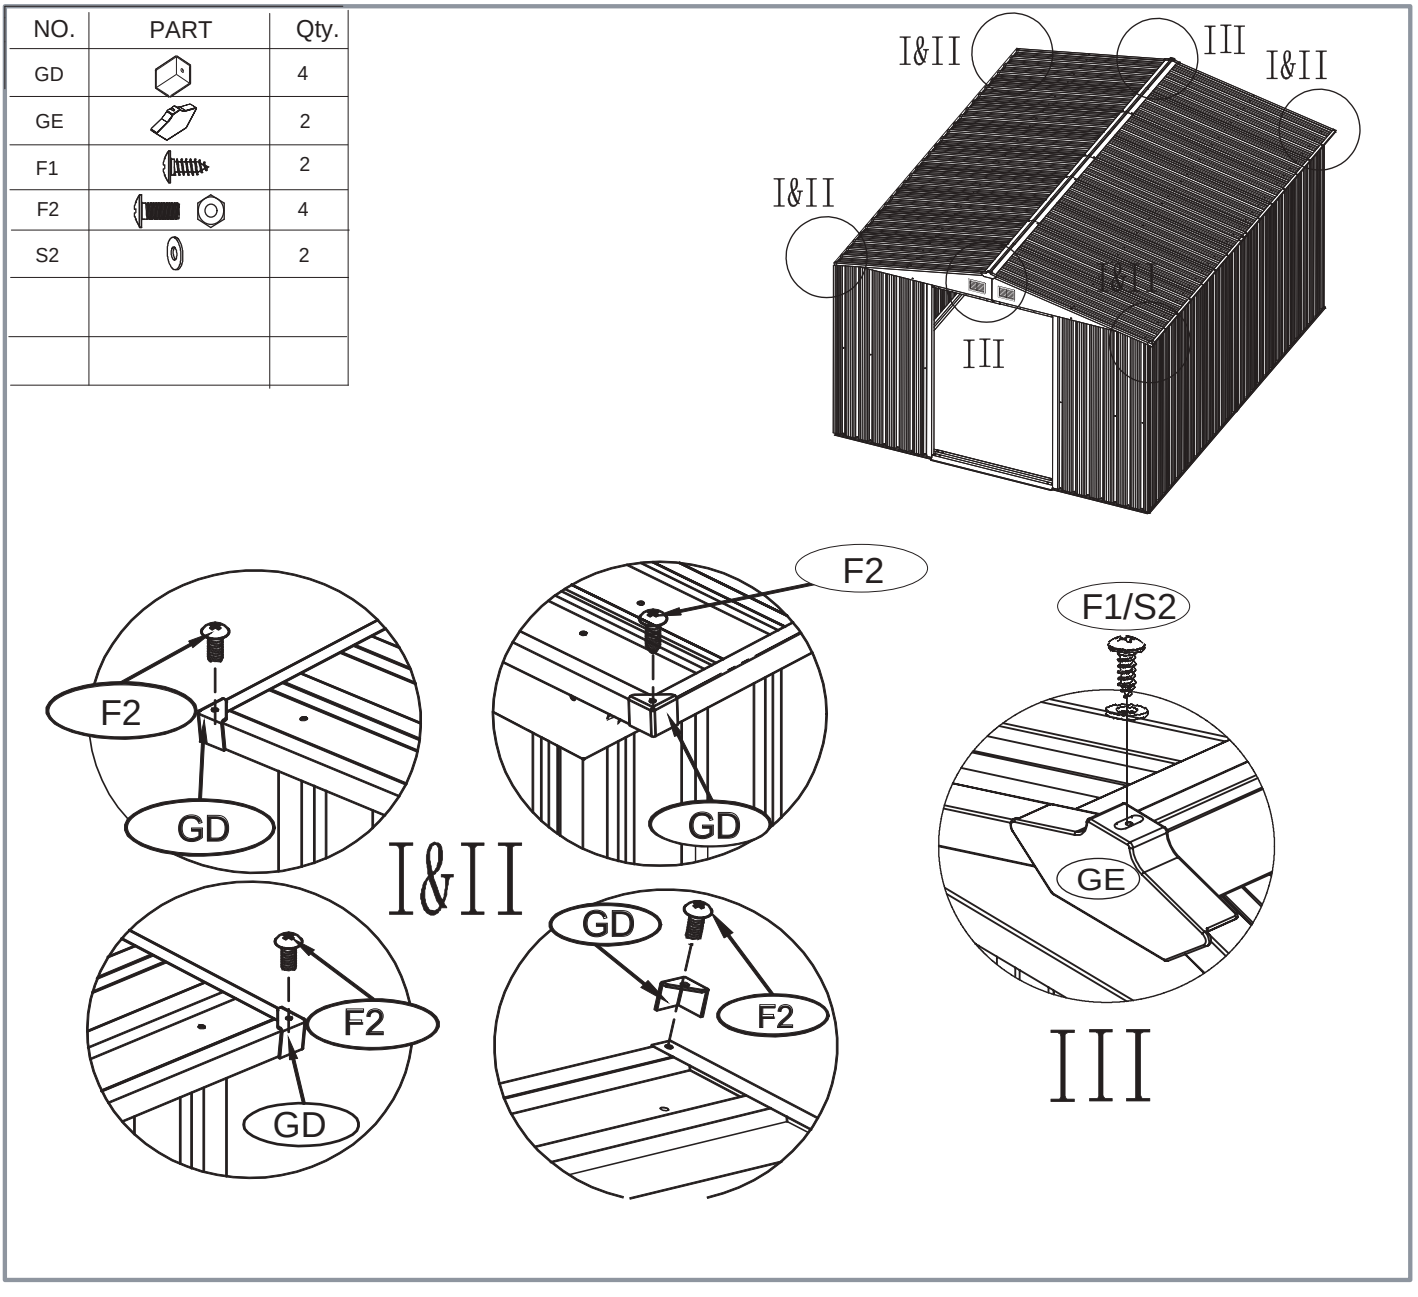


NO.	PART	Qty.
9		2
10		1
11		1
13		2
14		1
D1		2

NO.	PART	Qty.
GB		2
GA		2
GC		1
F1		18
F2		20
S2		28

Installation of left door

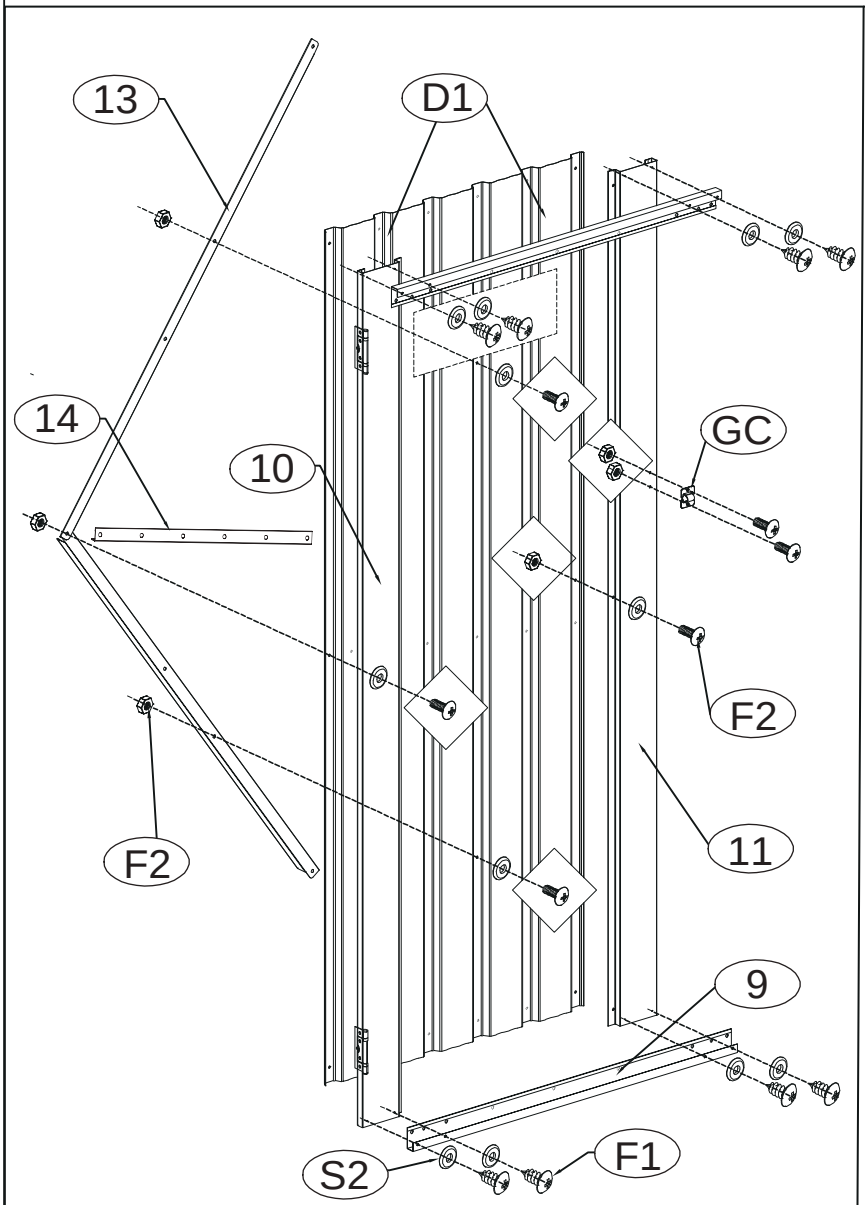


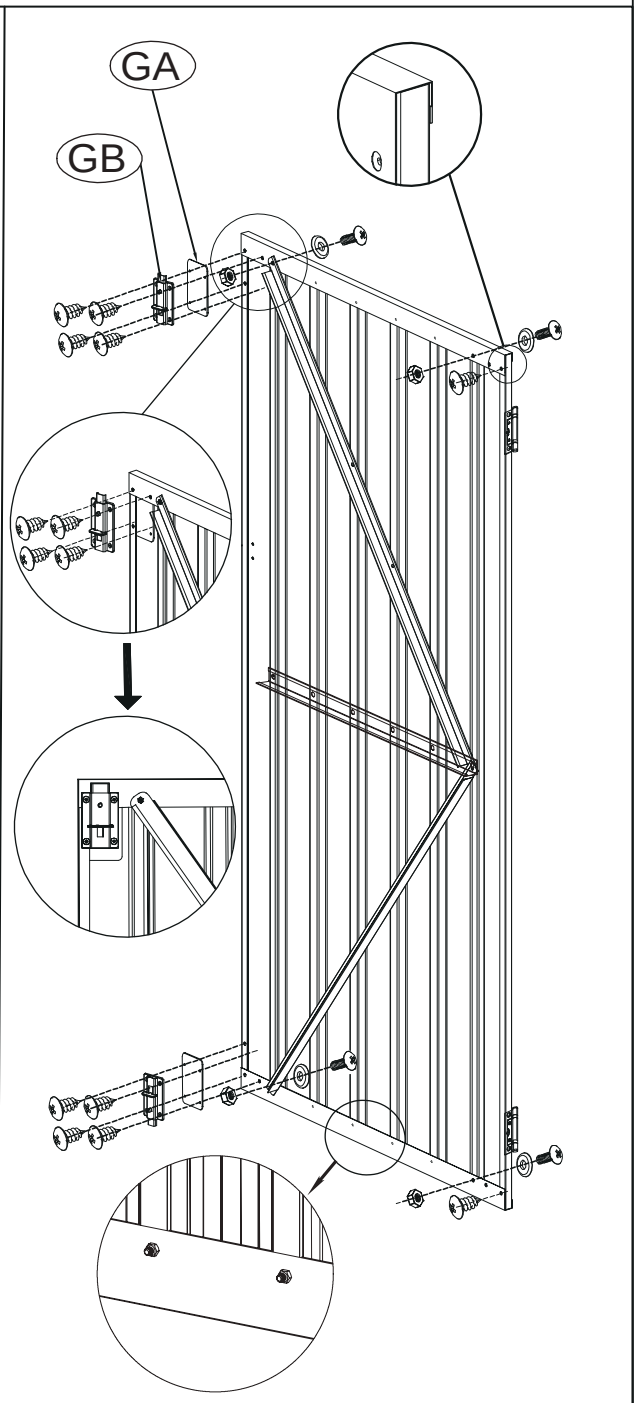


Explosion diagram, showing the front and back of the door

NO.	PART	Qty.
10		1
11		1
D1		2


Left Door Panel and Post Assembly

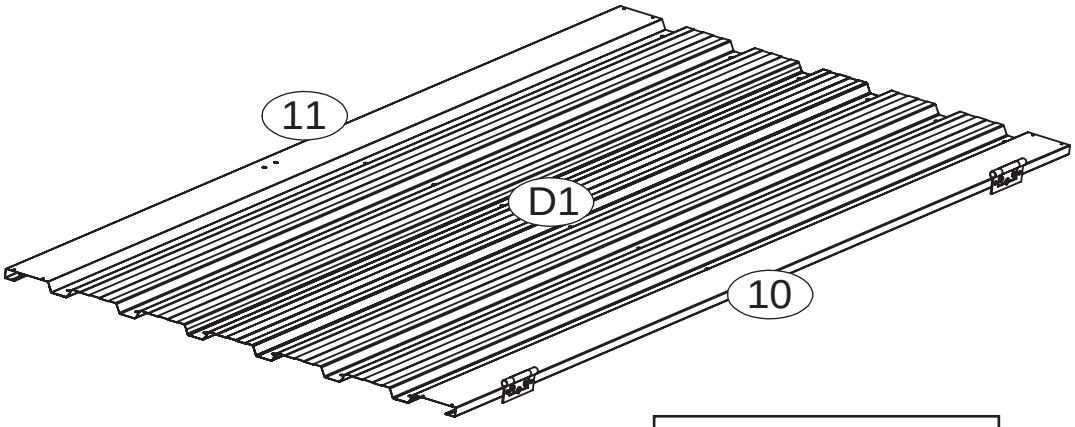


Connect D1 and D1 firstly

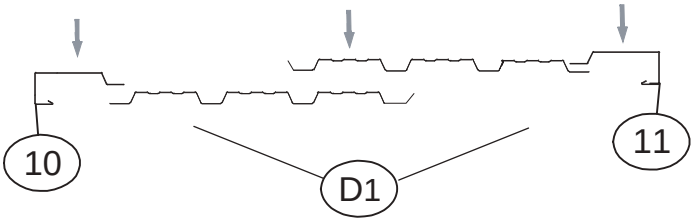


NO.	PART	Qty.
9		2
F1		8
S2		8

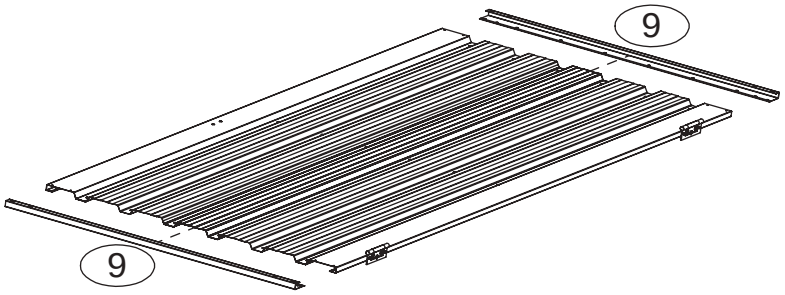

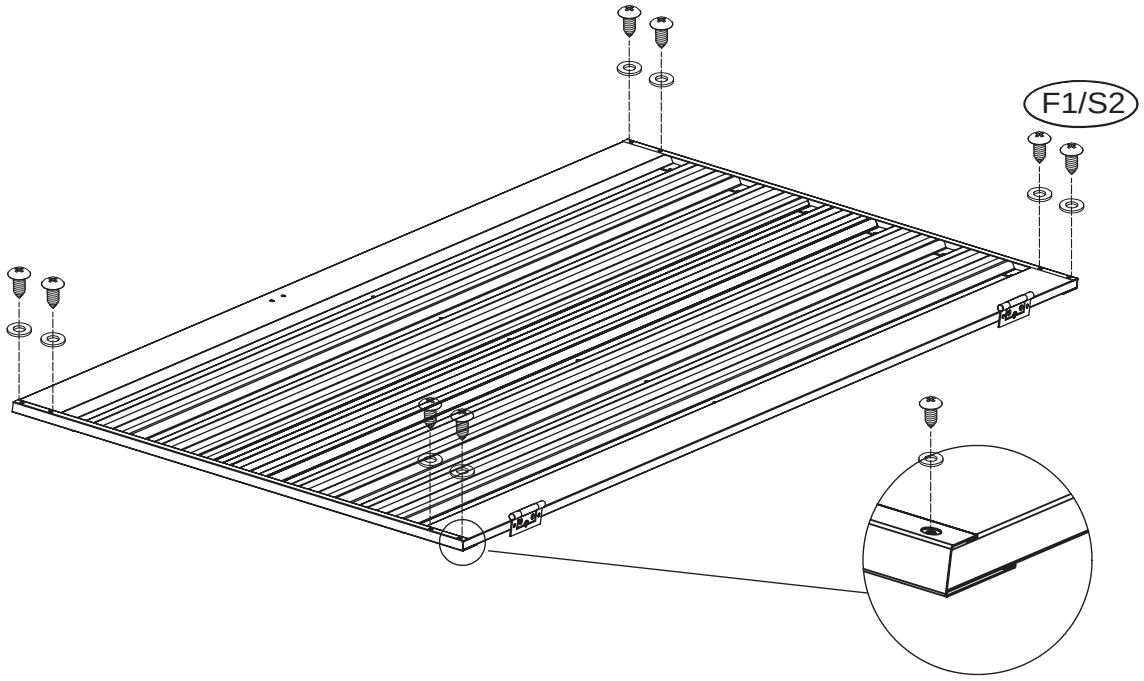


NO.	PART	Qty.
F2		18
S2		18

Left Door Panel and Post Assembly

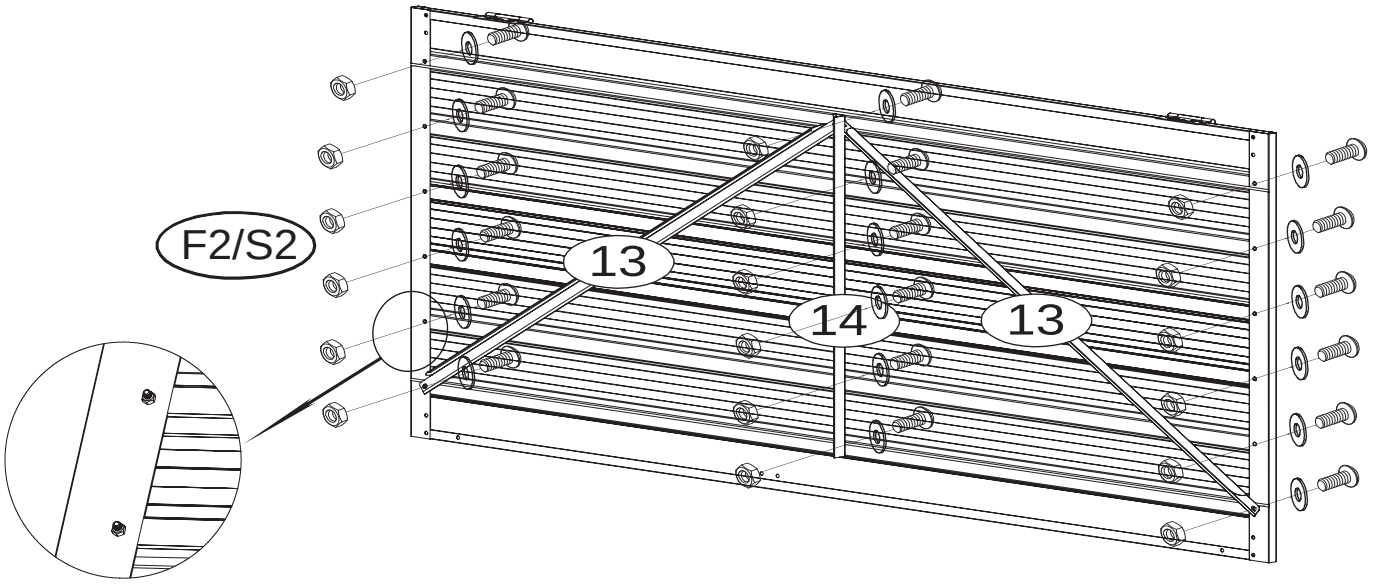


NO.	PART	Qty.
GA		2
GB		2
F1		10

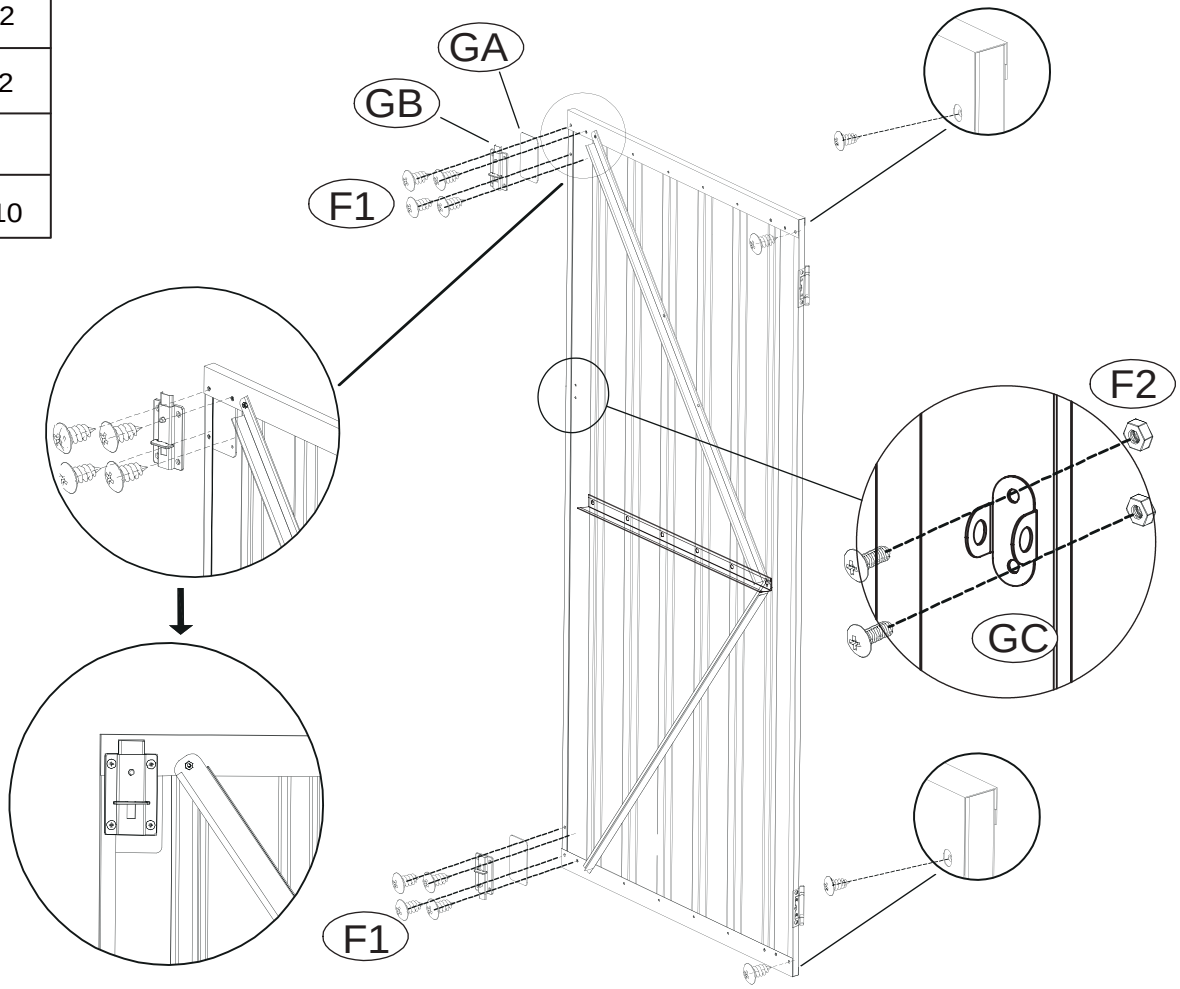

NO.	PART	Qty.
9		2
10		1
12		1
13		2
14		1
D1		2

NO.	PART	Qty.
GC		1
F1		12
F2		21
S2		29


Right door installation

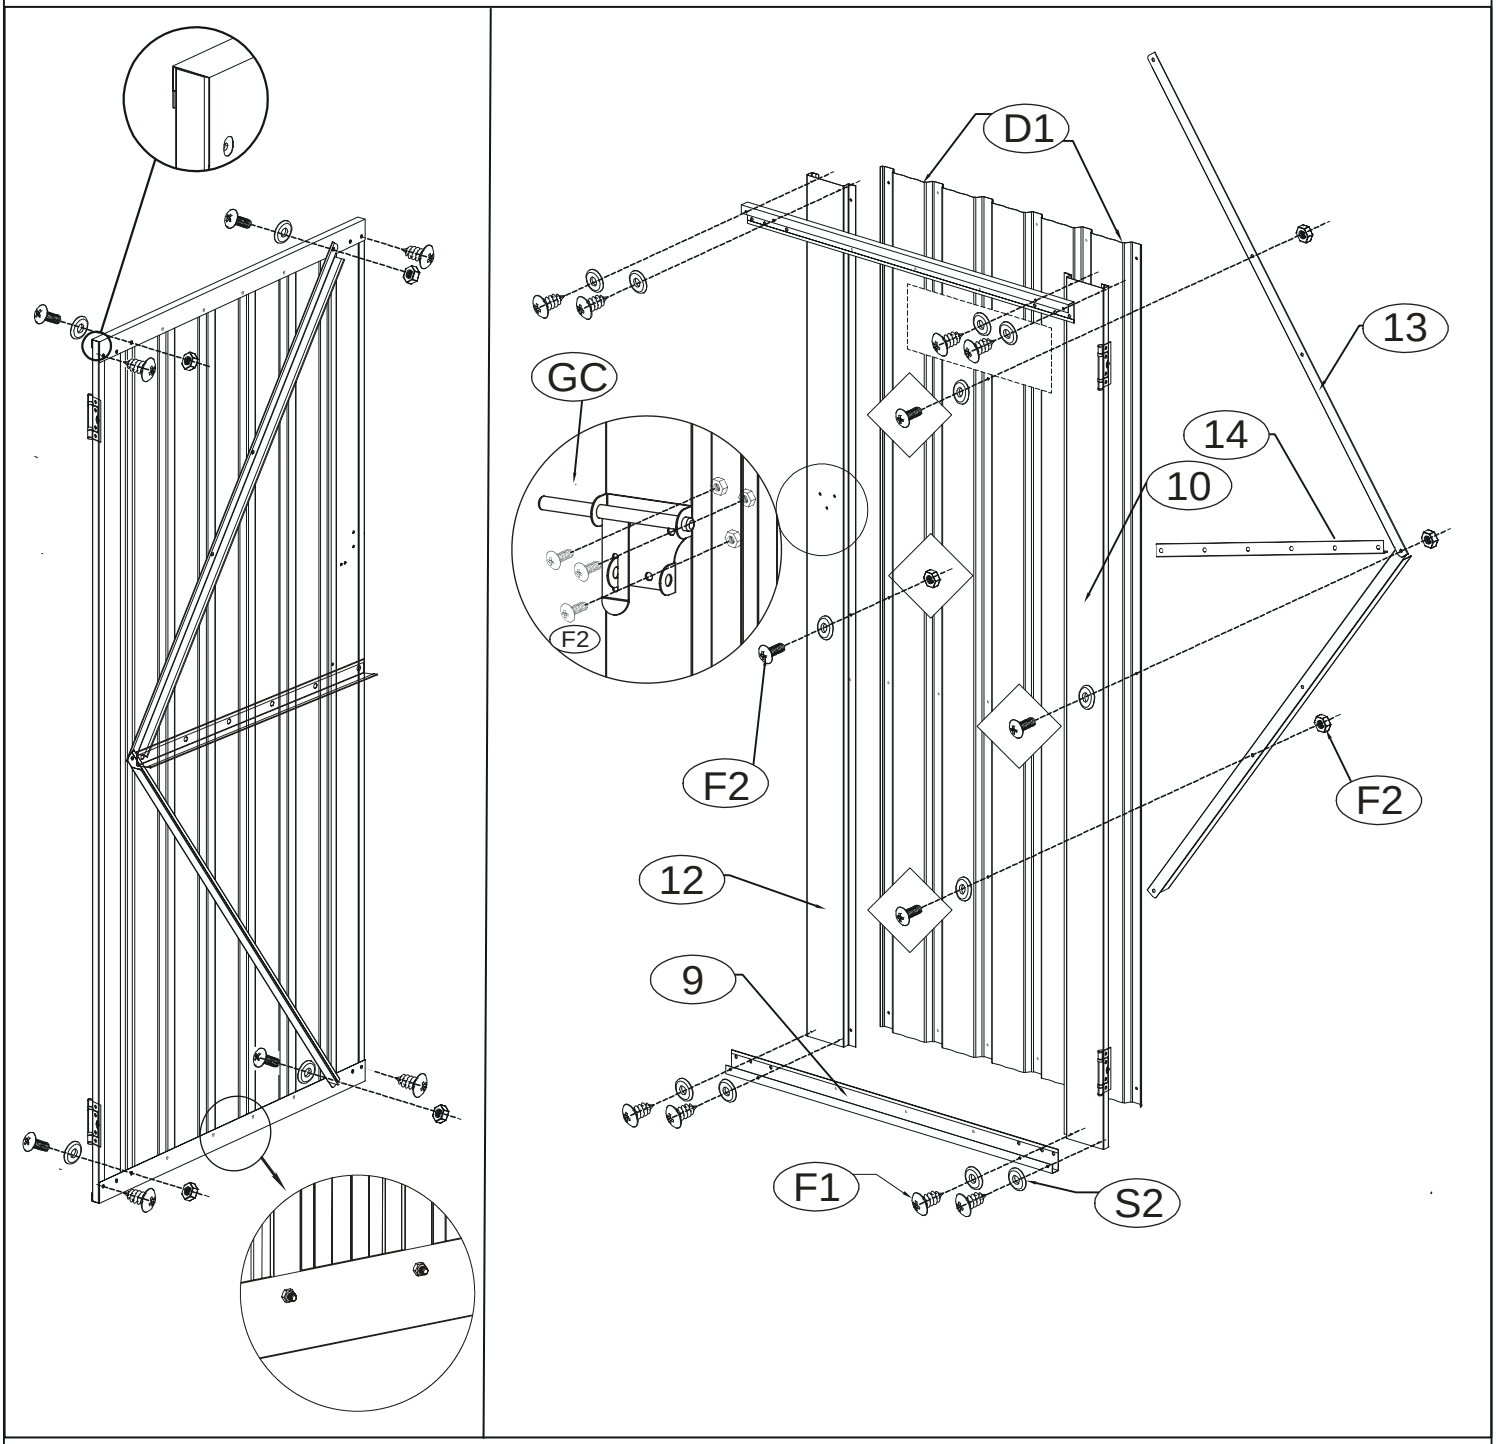


Explosion diagram, showing the front and back of the door

NO.	PART	Qty.
10		1
12		1
D1		2


Right door panel and pillar assembly

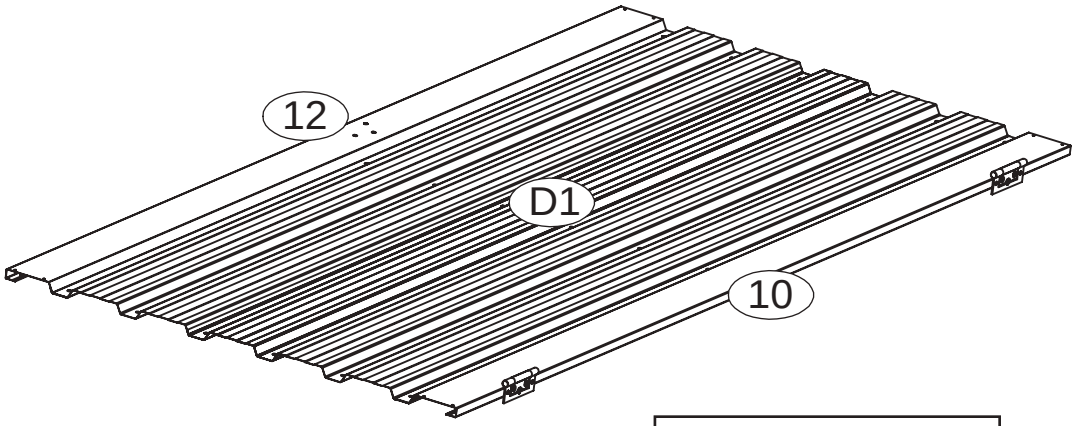


Connect D1 and D1 firstly

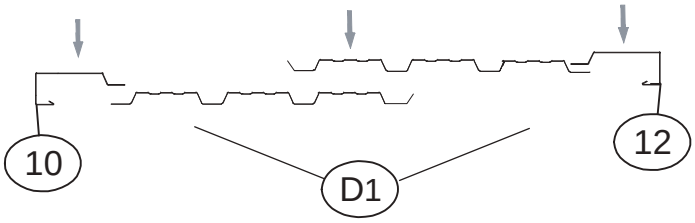


NO.	PART	Qty.
9		2
F1		8
S2		8

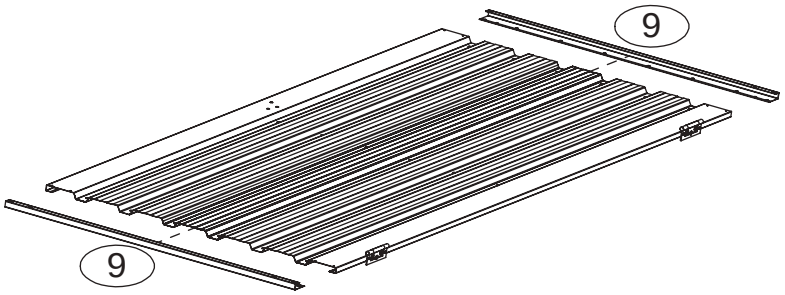

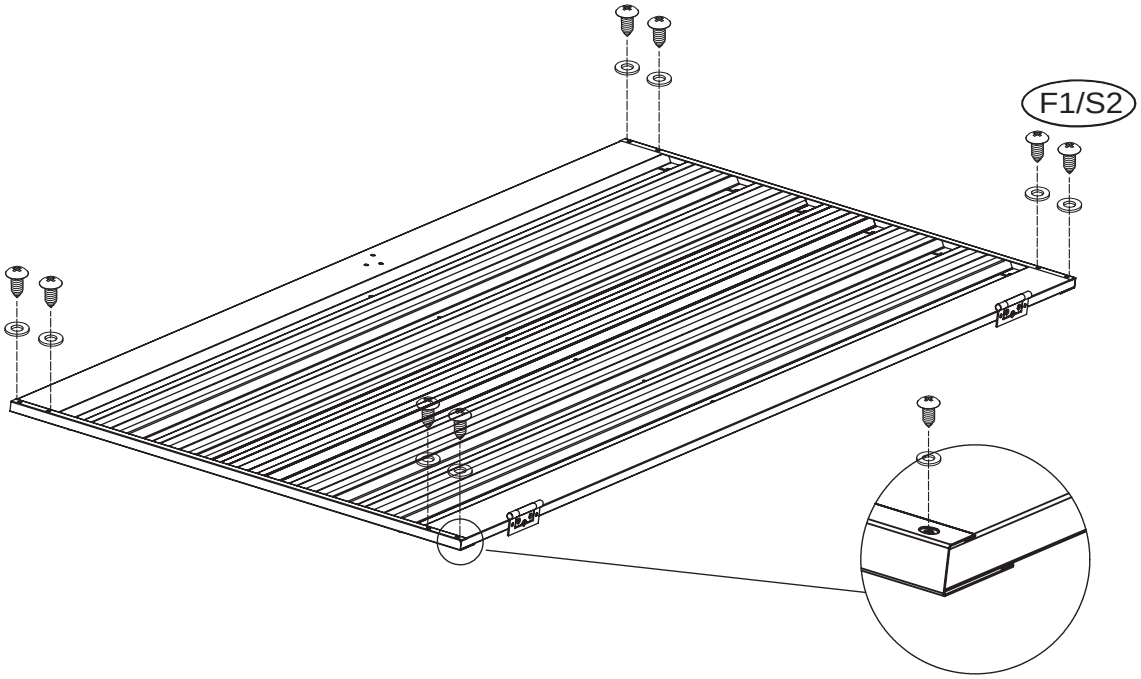


NO.	PART	Qty.
F2		18
S2		18

Right door panel and pillar assembly

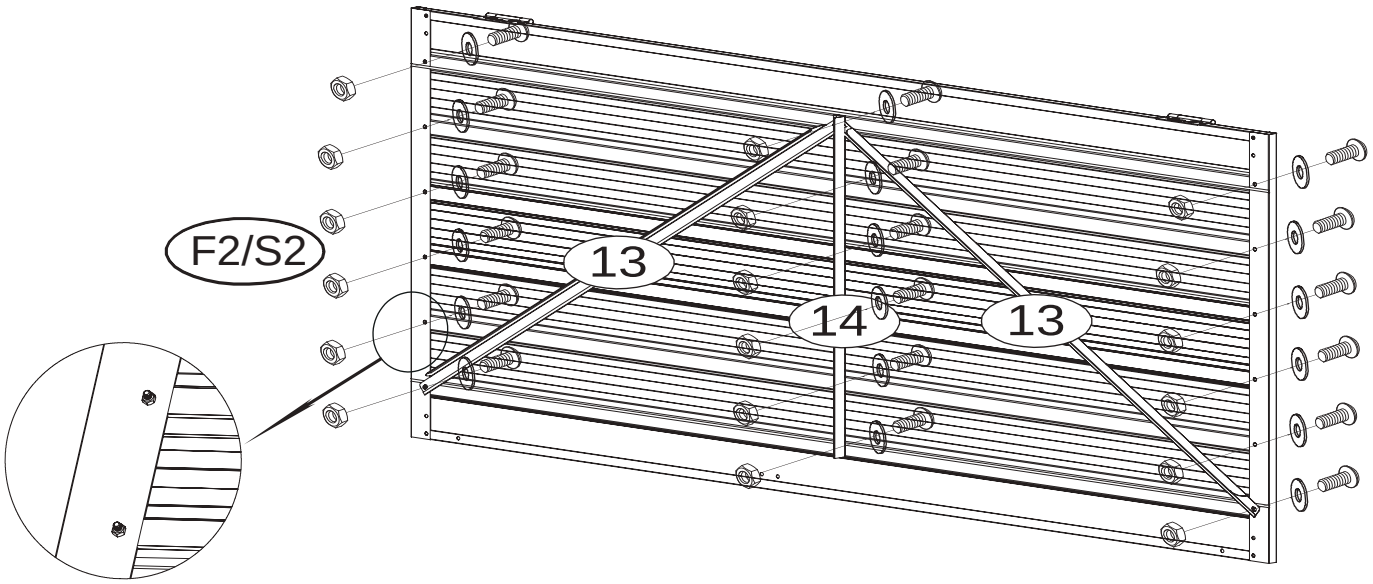

NO.	PART	Qty.
GC		1
F2		3
F1		4

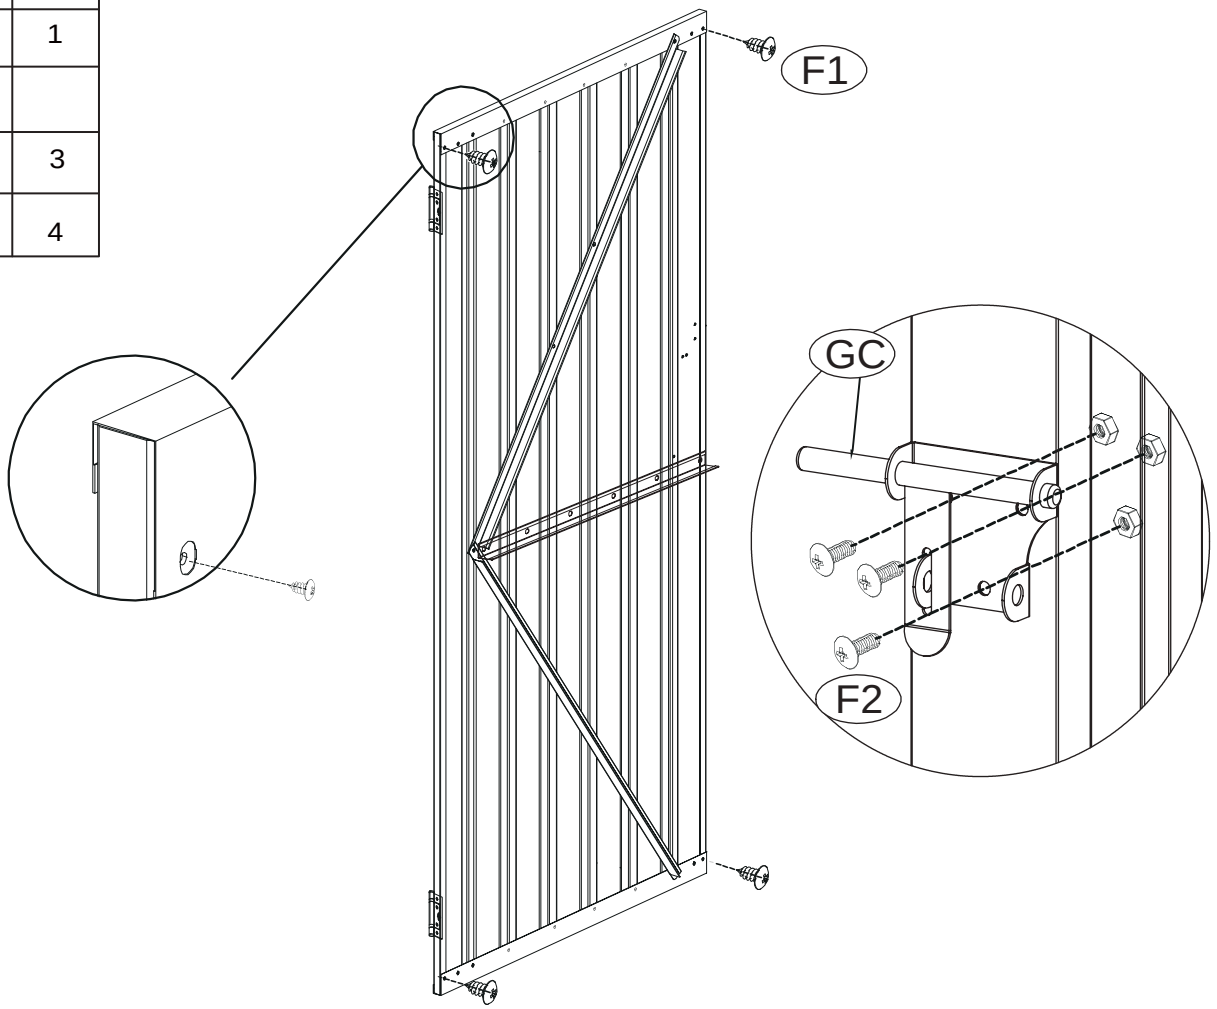

NO.	PART	Qty.
F3		12

