



ASSEMBLY INSTRUCTIONS

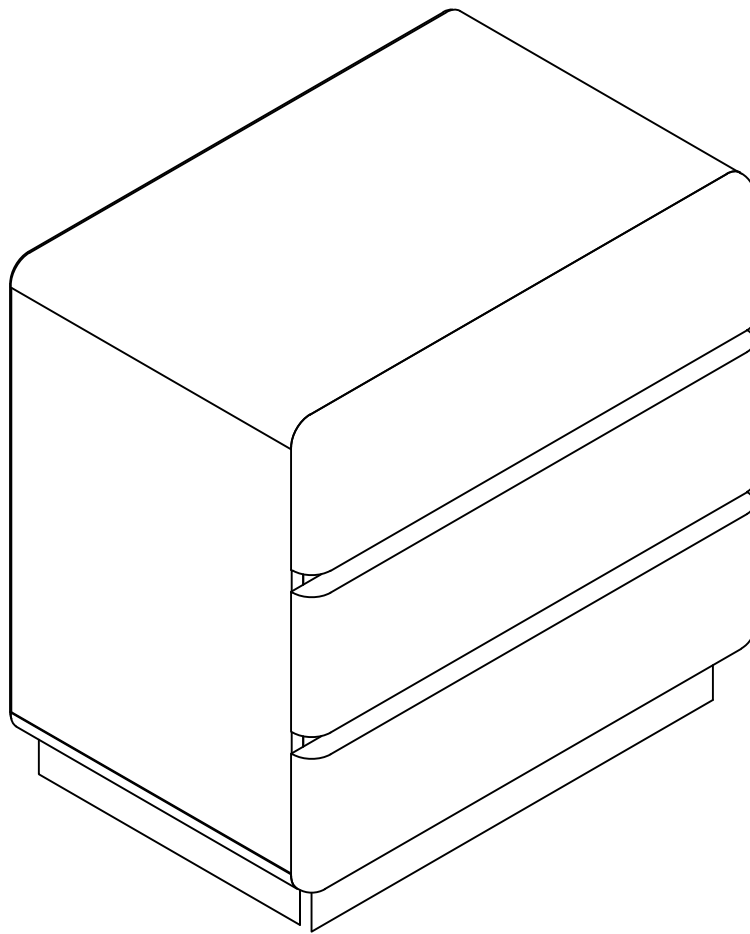






PACKAGE INCLUDE

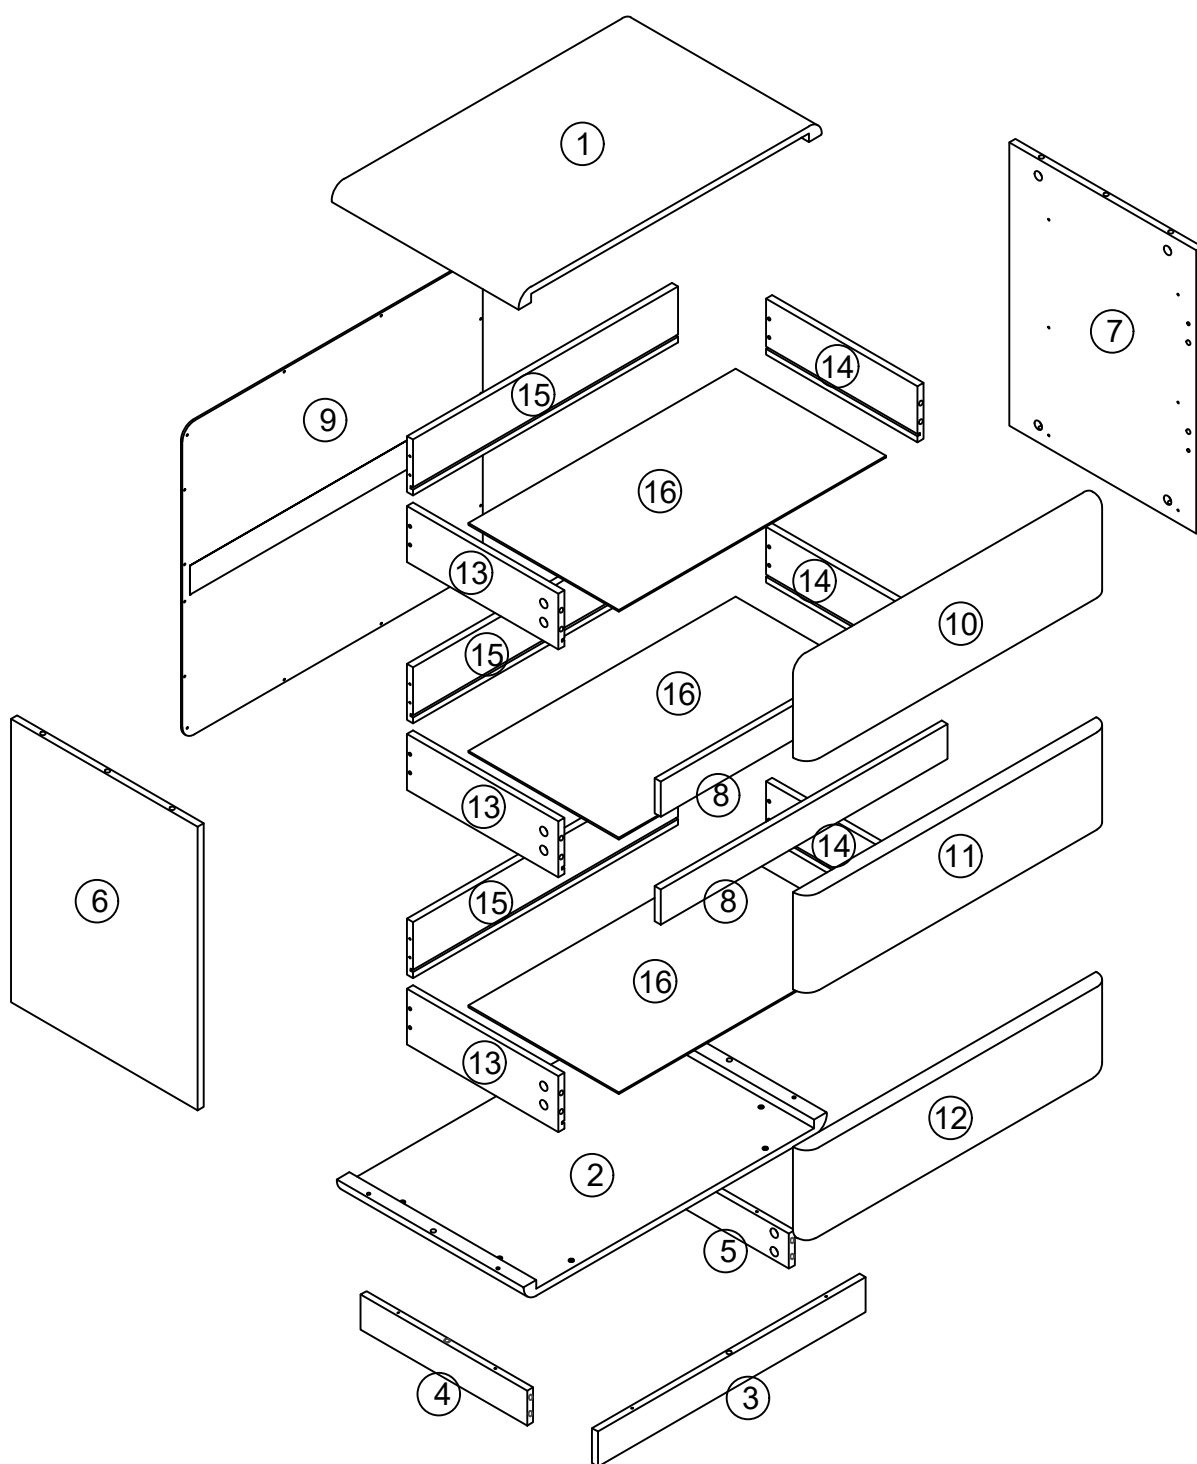


PACKAGE INCLUDE

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom	1
3	Fore foot Plate	1
4	Rear foot Plate	1
5	Left foot Plate	1
6	Right Side Panel	1
7	Left Side Panel	1
8	Front connecting rod	2
9	Backplate	1
10	Upper Padded Panels	1
11	Middle Padded Panels	1
12	Lower Padded Panels	1
13	Drawer Left Side Panel	3
14	Drawer Right Side Panel	3
15	Drawer Back Panel	3
16	Drawer Bottom Panel	3


PACKAGE CONTENT

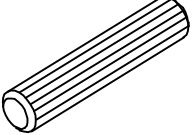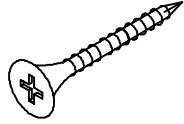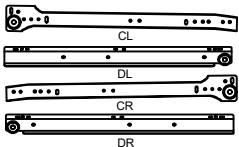Ø8*30mm  A x 11+1	M6*34mm  B x 28+1	Ø15*9.5mm  C x 28+1	Ø4*30mm  D x 18+1
12"  E x 3	Ø3.5*12mm  F x 24+1	Ø3*16mm  G x 16+1	


How to use the cam lock system

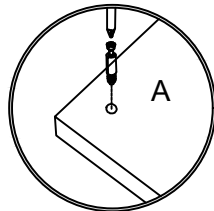


1. Screw cam bolt into panel

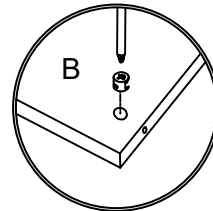


2. Push cam into panel - arrow feature on cam top points to panel edge

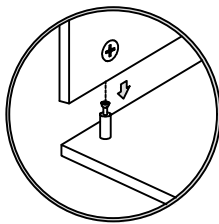


3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

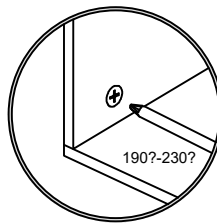



4. Rotate cam(s) clockwise 190°-230° to lock panels together

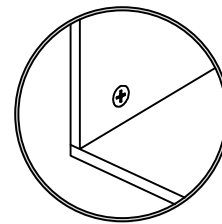





5. Panels should be tight against each other and connection should be rigid

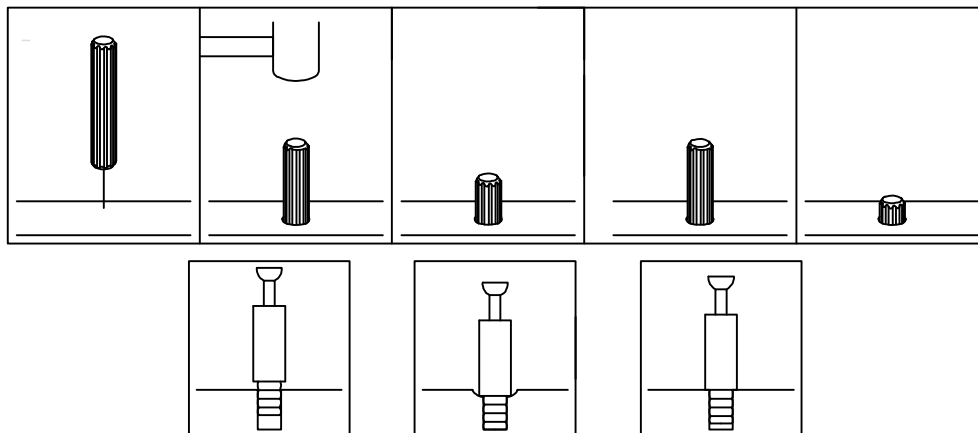



STEP 1

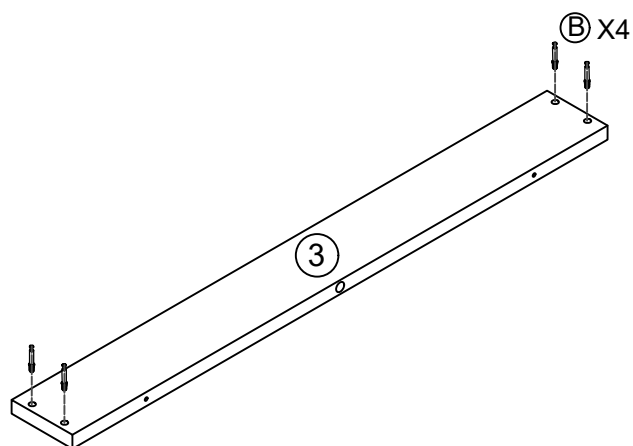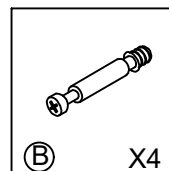



STEP 2

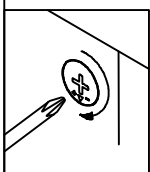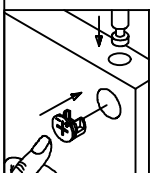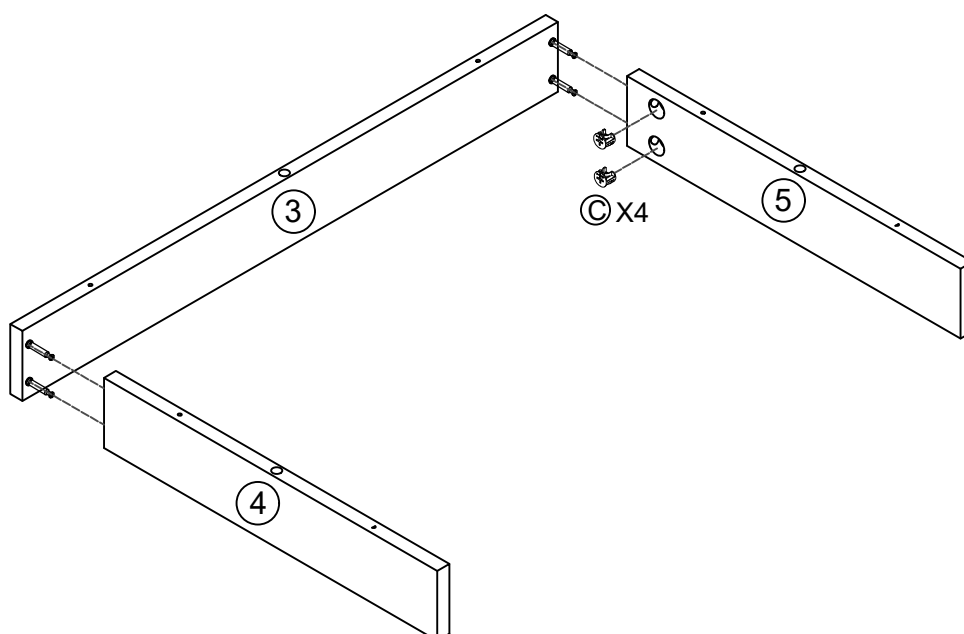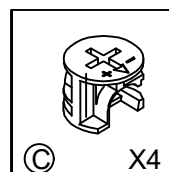


STEP 3

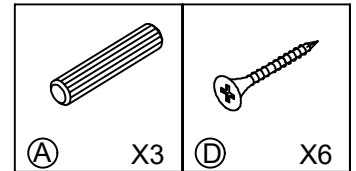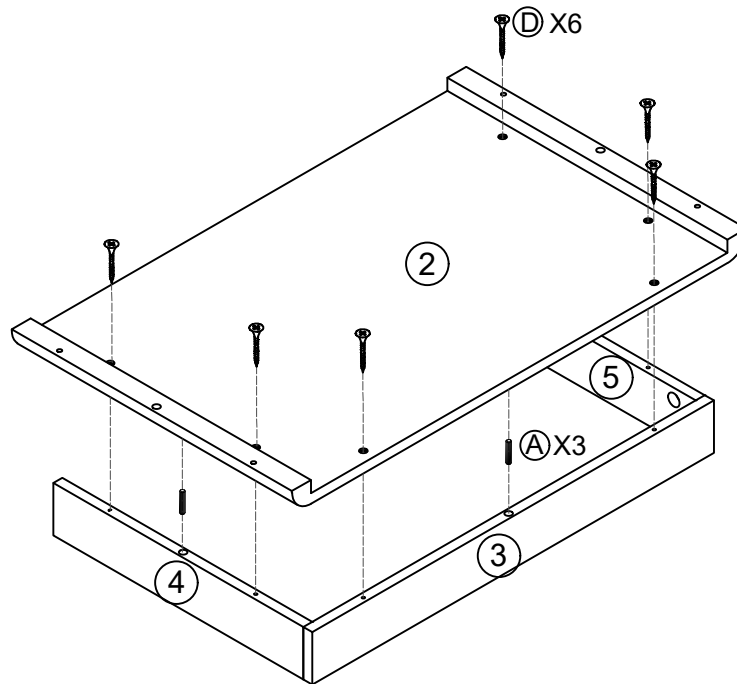


STEP 4

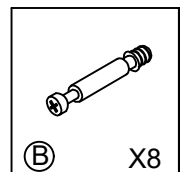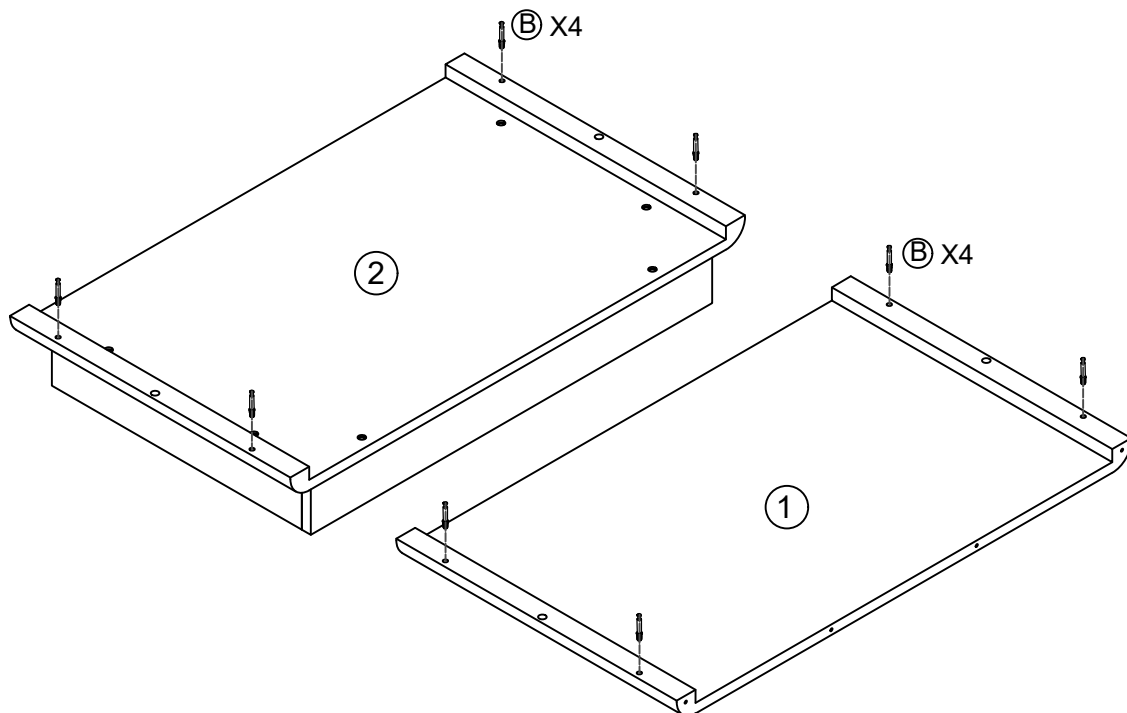




STEP 5

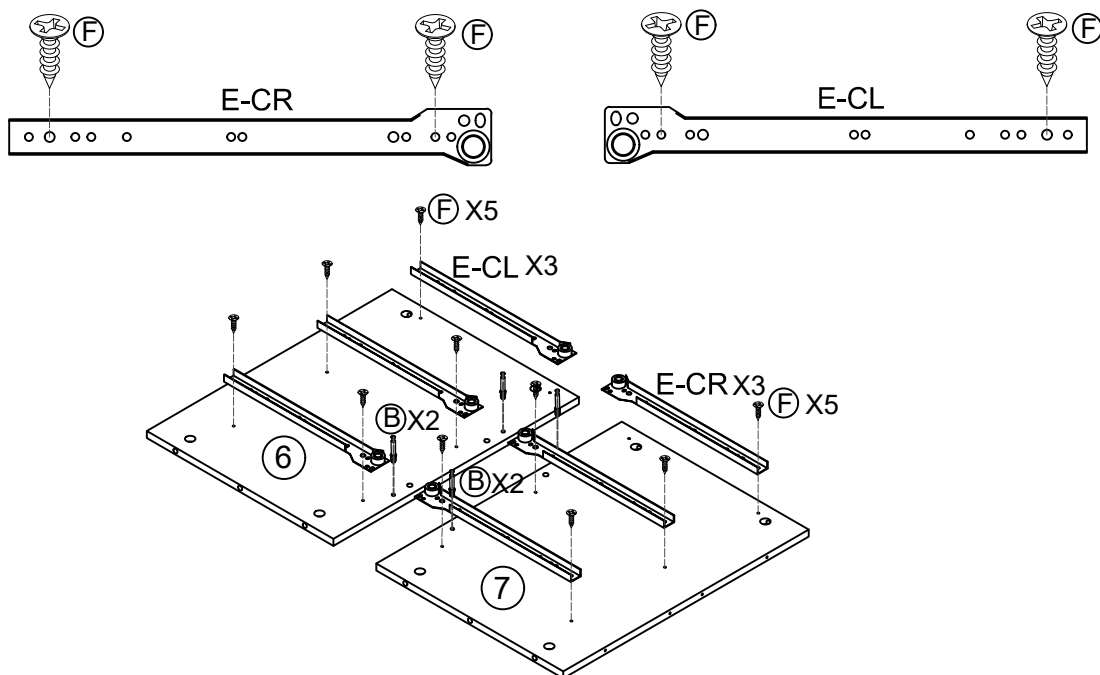




STEP 6

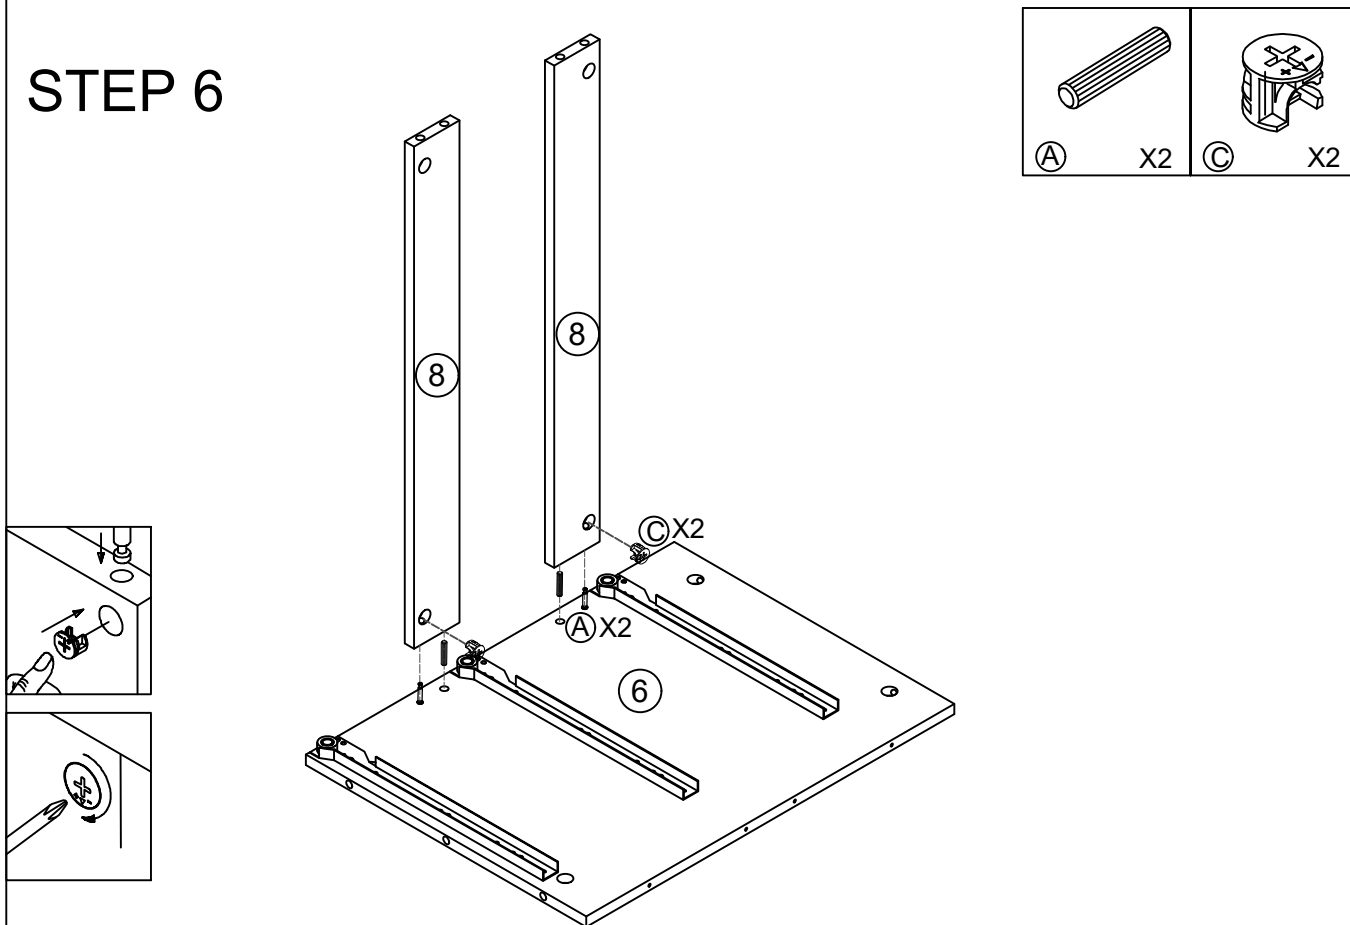



STEP 7

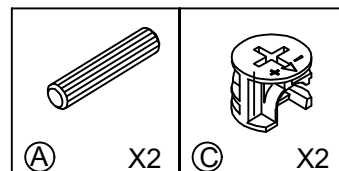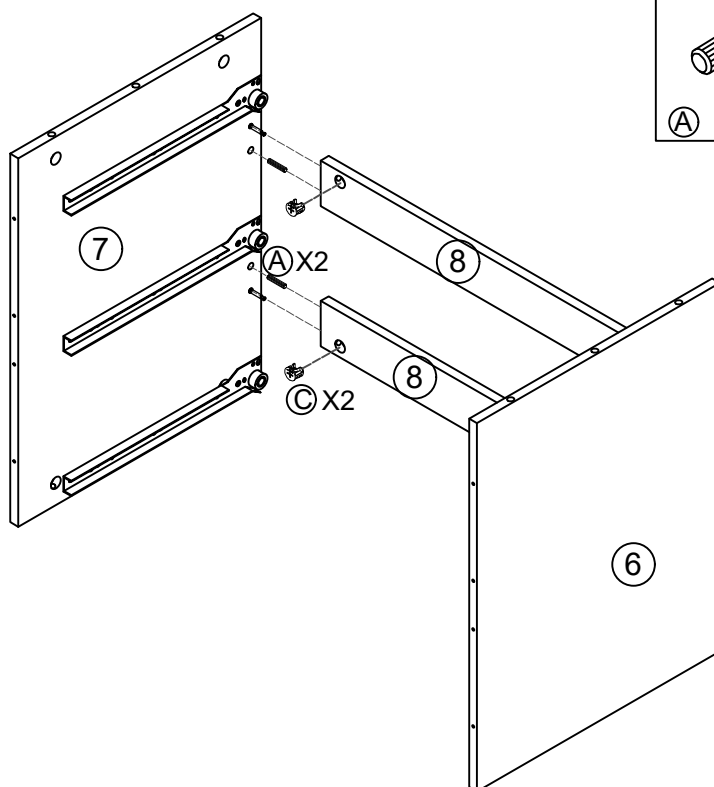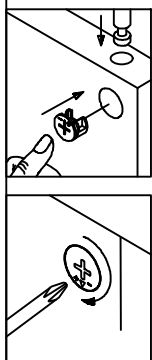



STEP 8

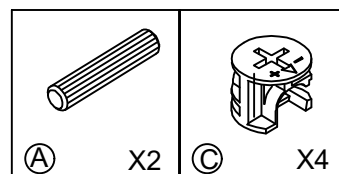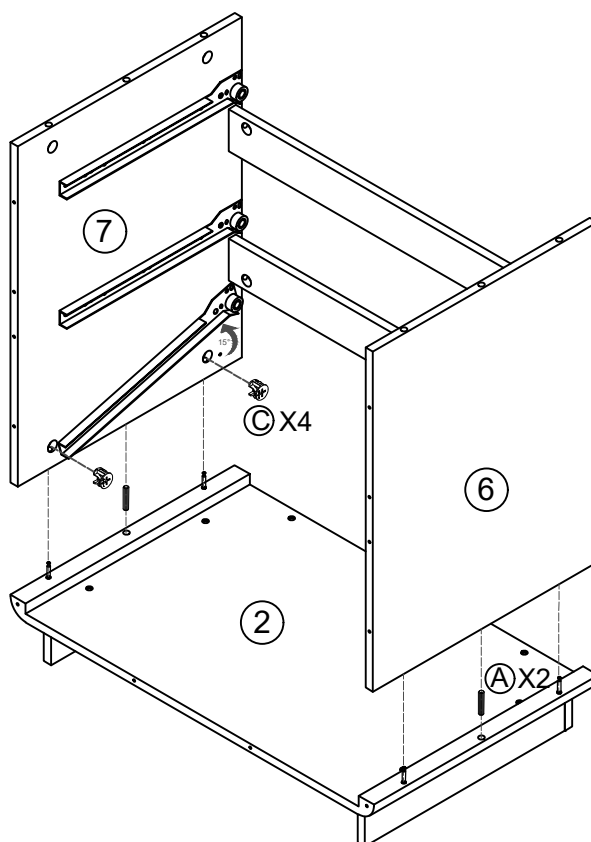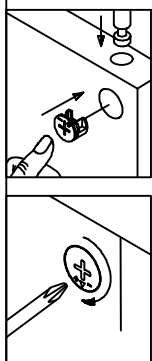



STEP 9

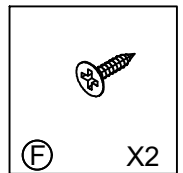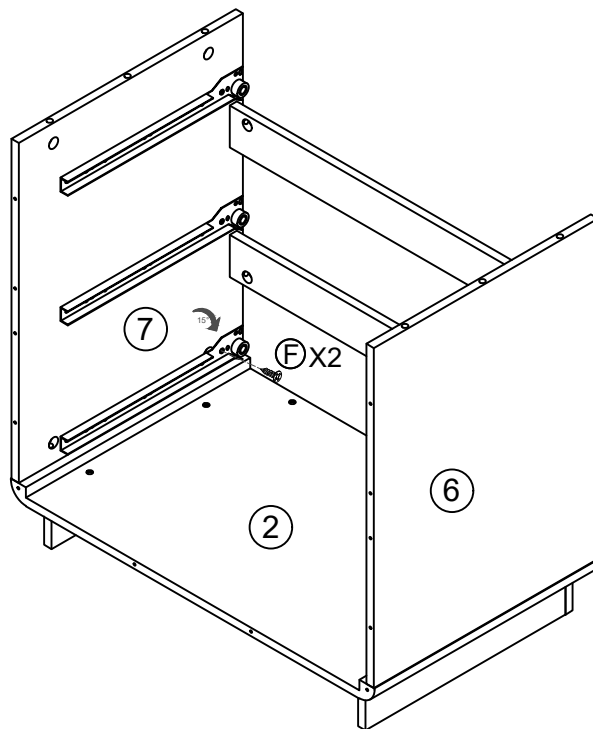



STEP 10

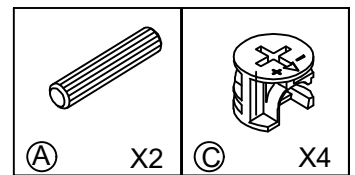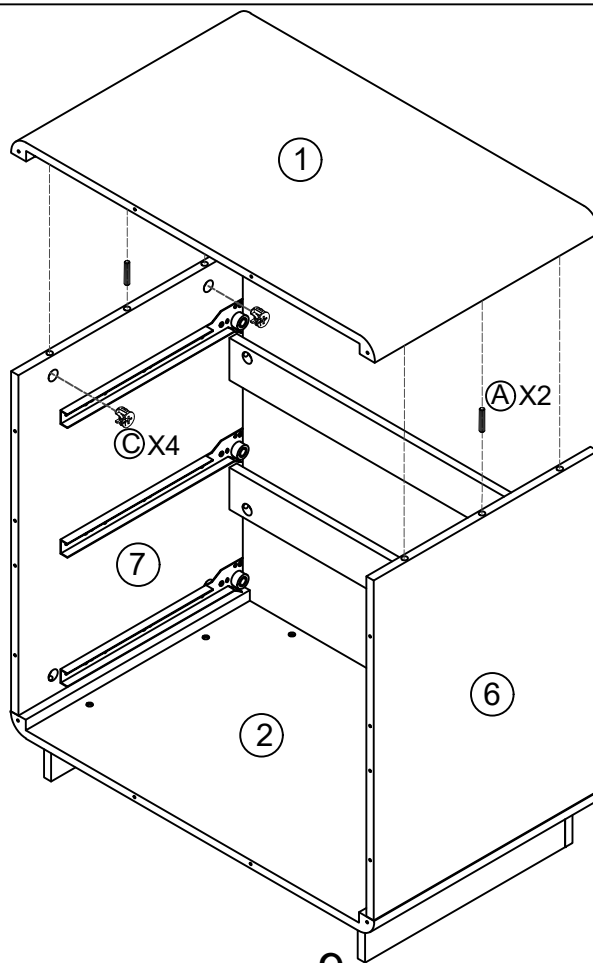



STEP 11

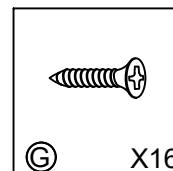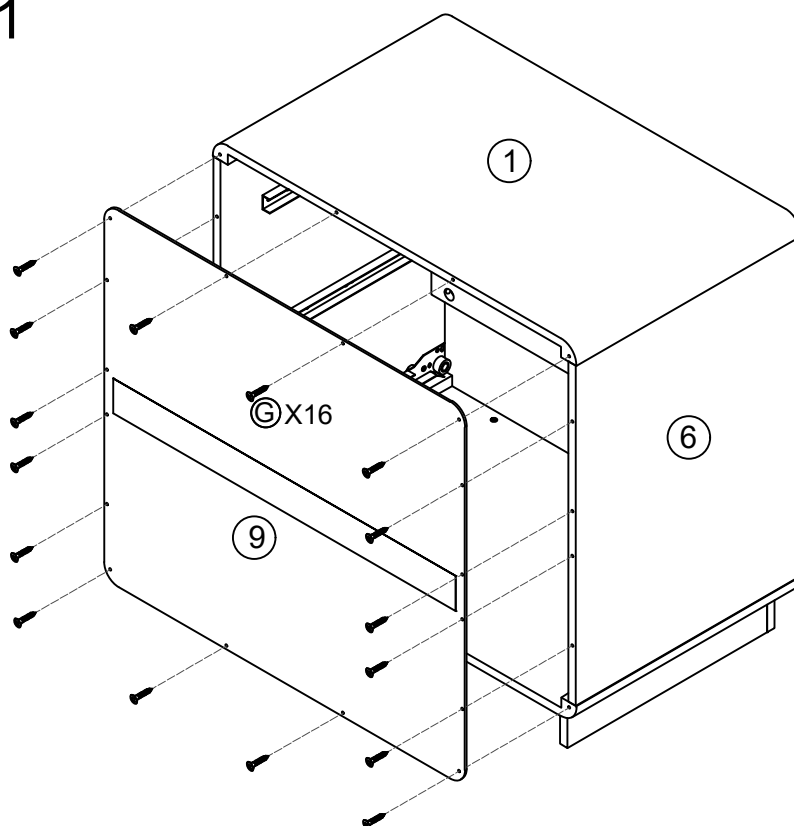

STEP 12


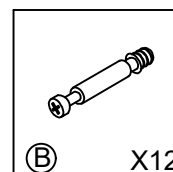
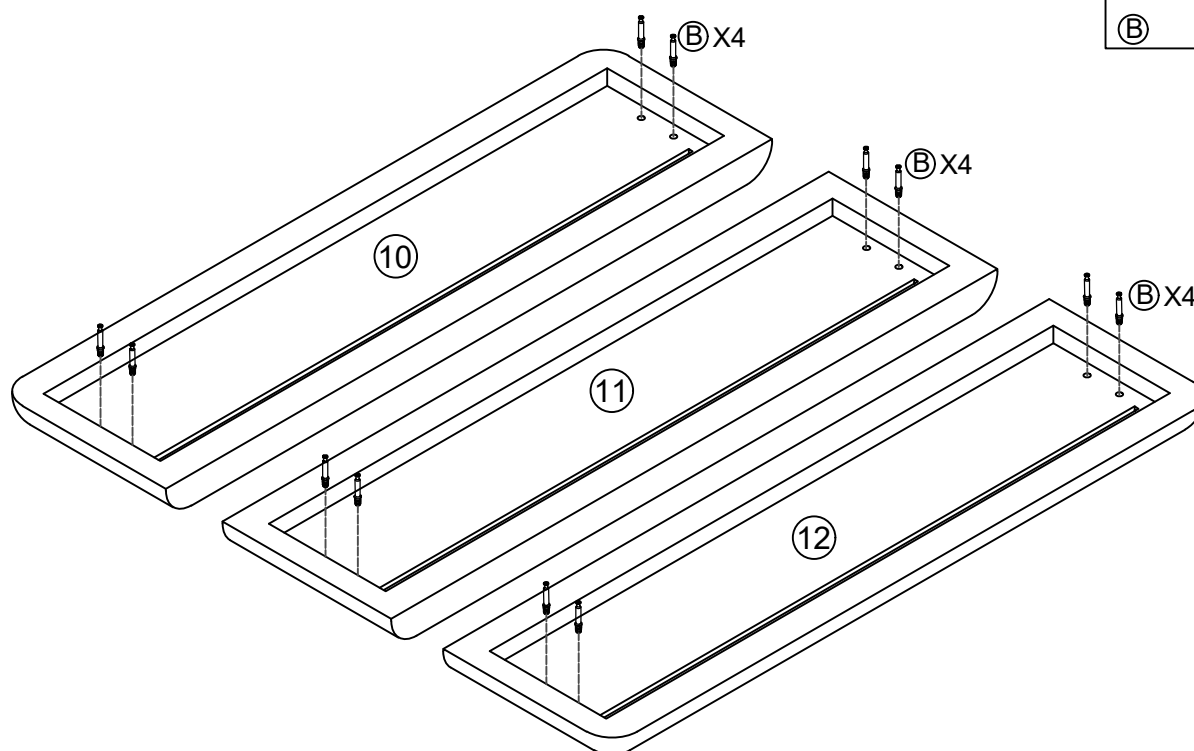


STEP 13

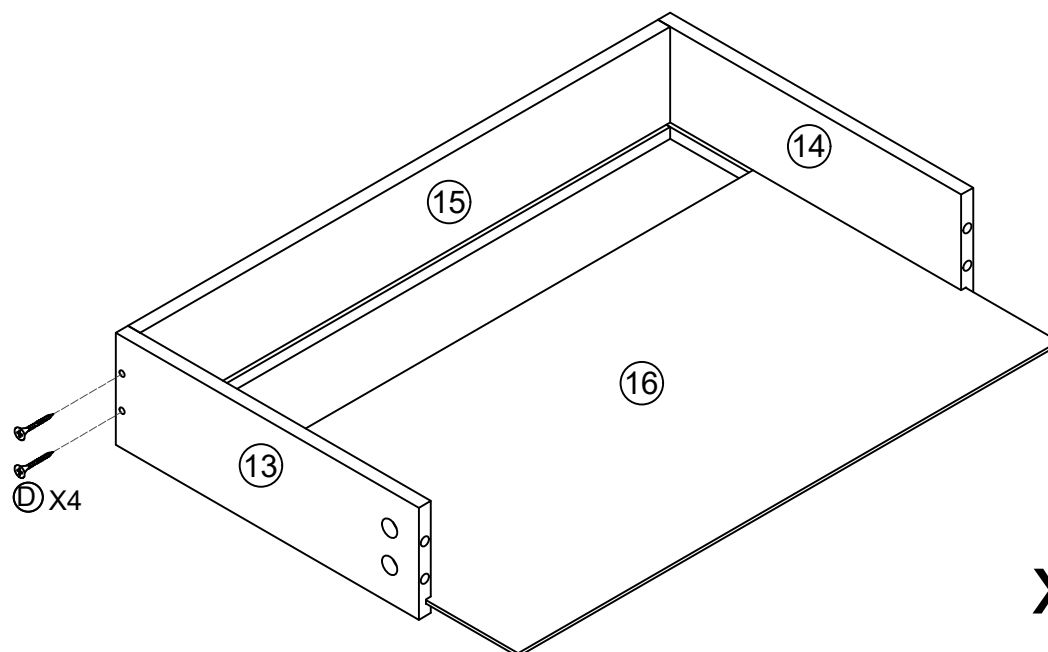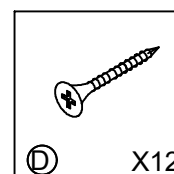


x3


STEP 14

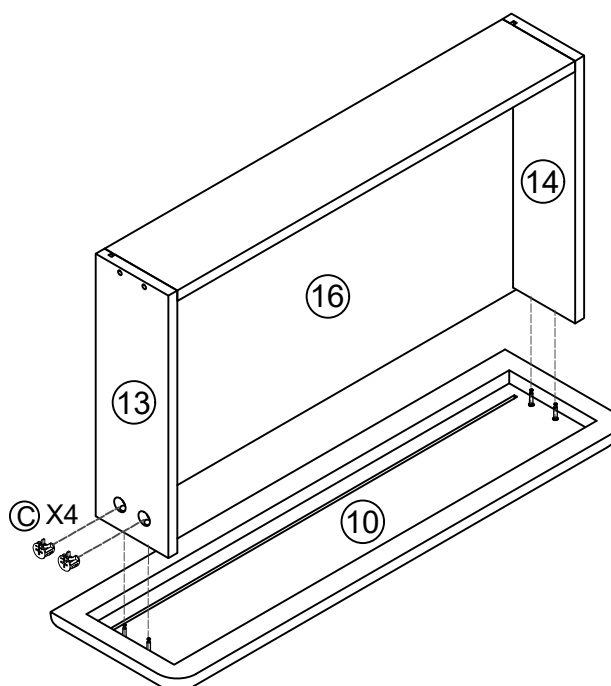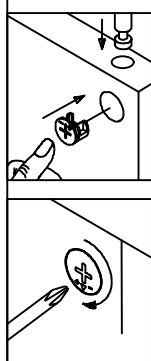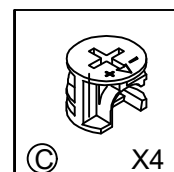


STEP 15

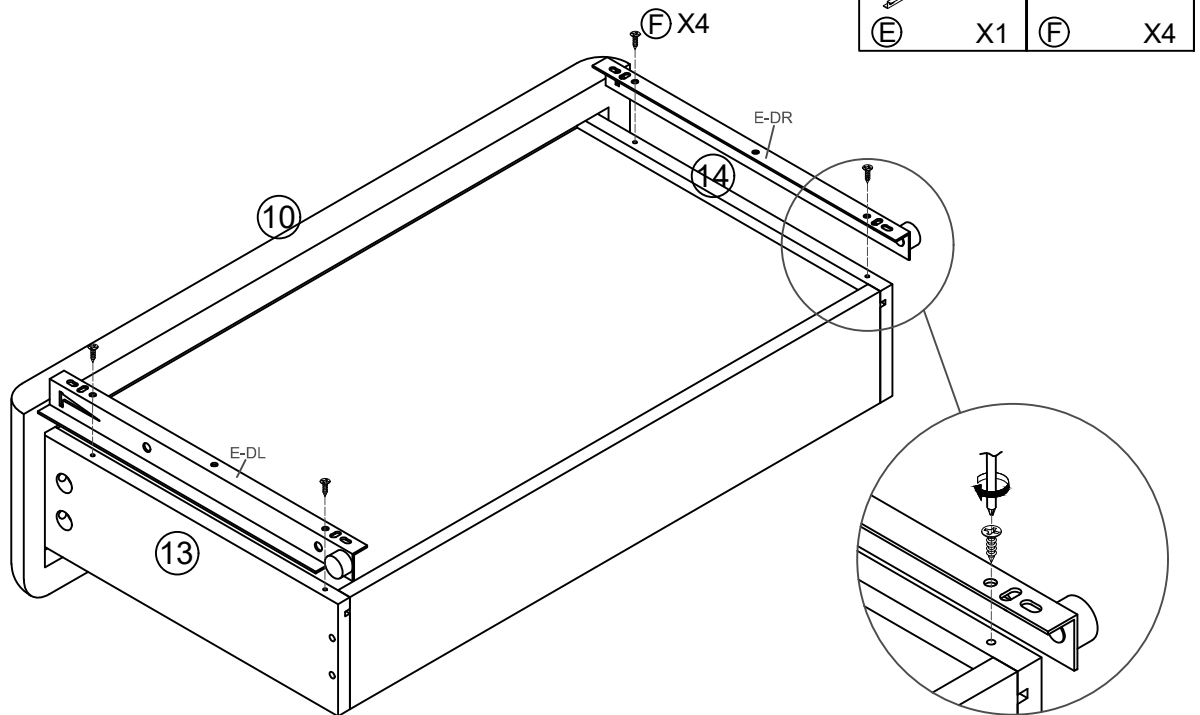


STEP 16

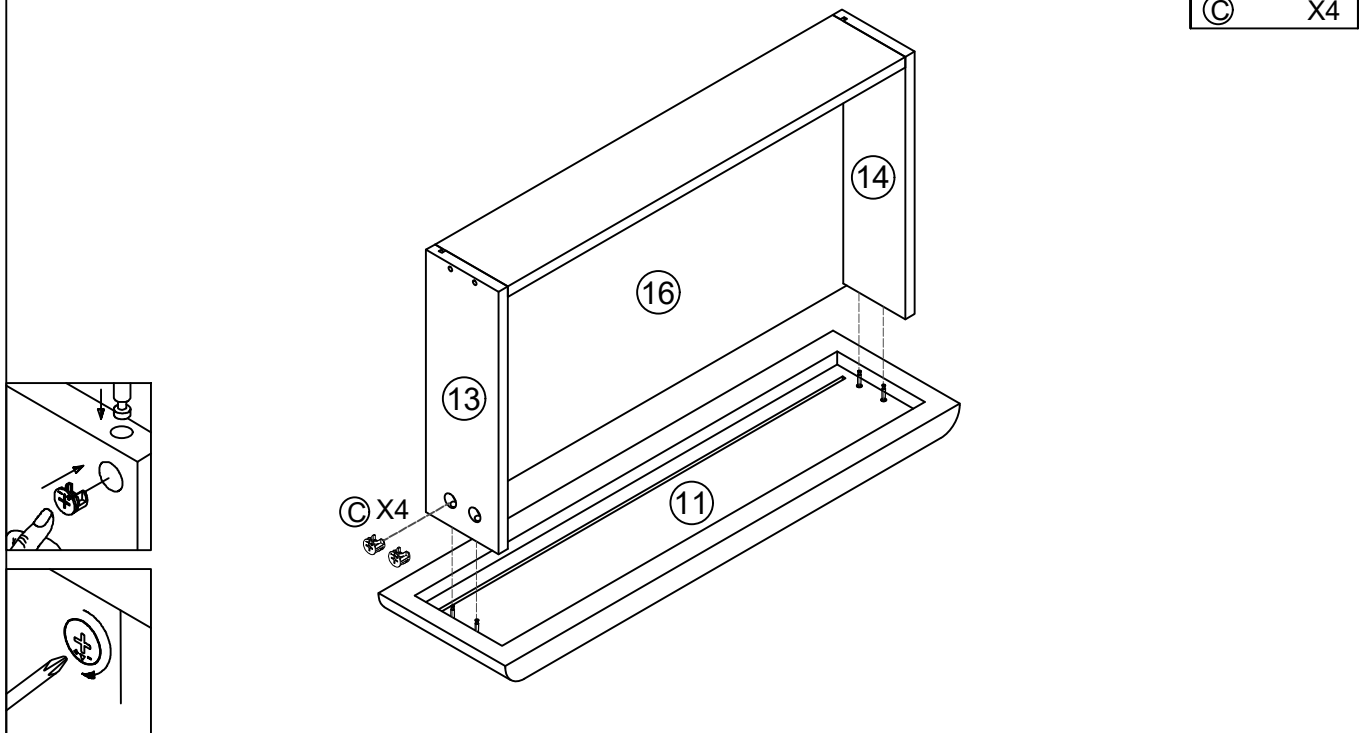


STEP 17

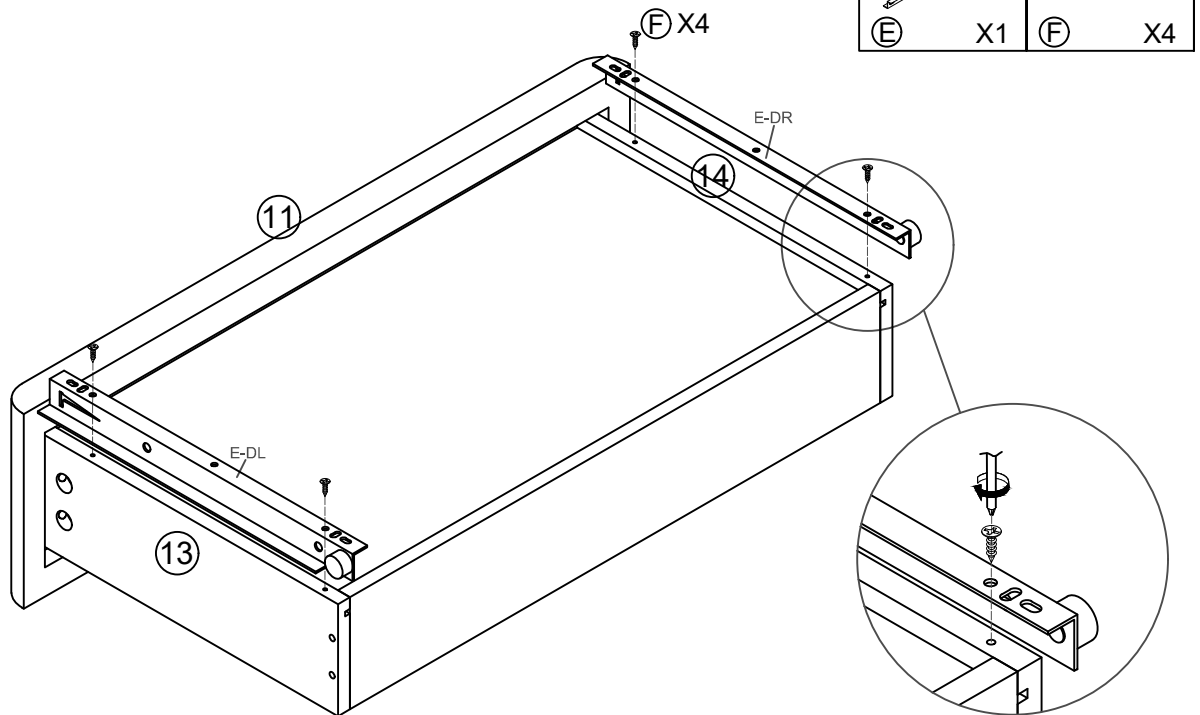

STEP 18

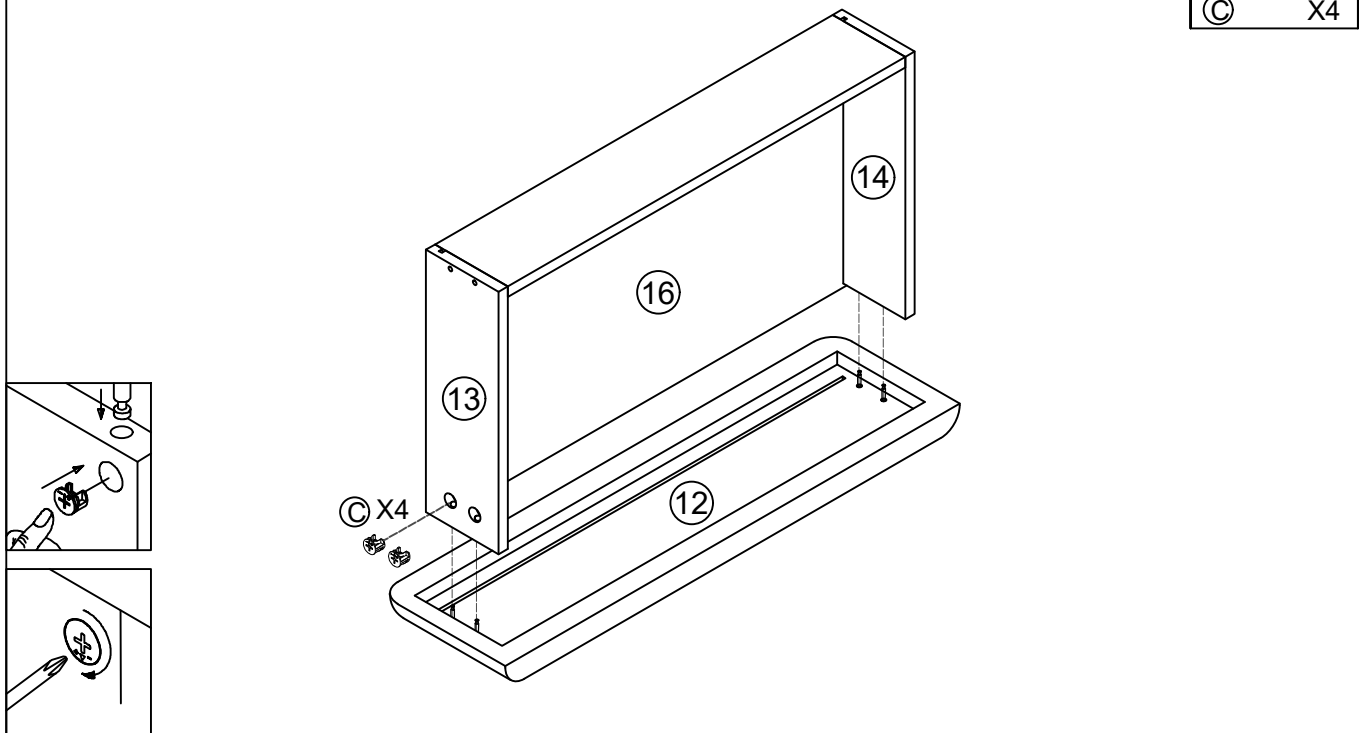

STEP 19

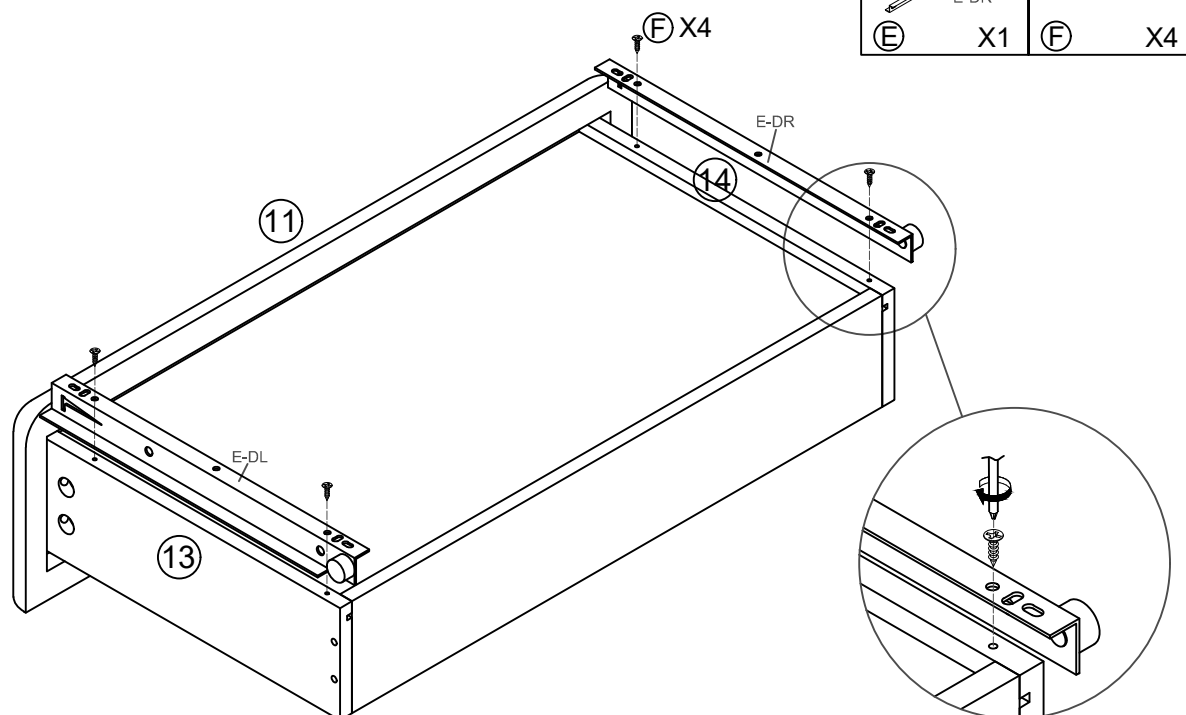

STEP 20

